





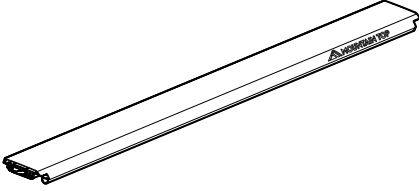

MOUNTAIN TOP[®] EVOe

Installation manual









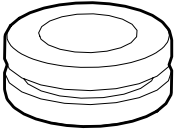
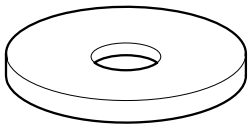


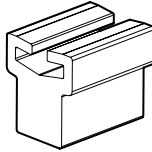
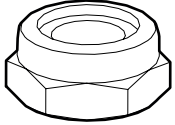

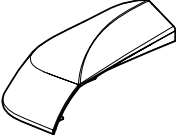
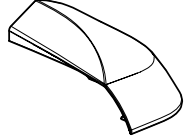









DOWNLOAD PDF

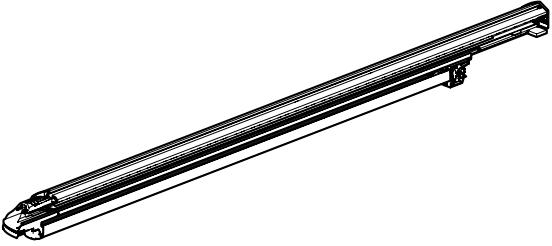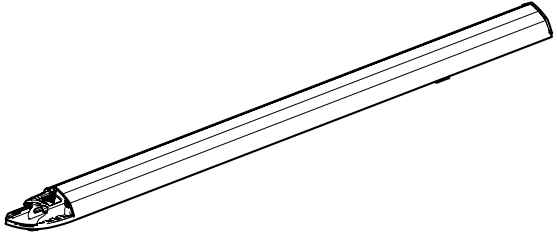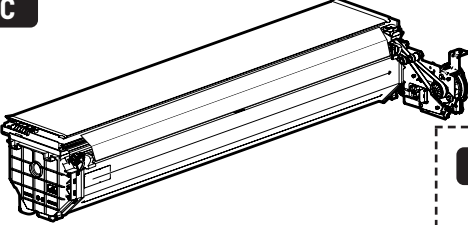Parts





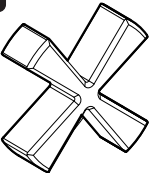


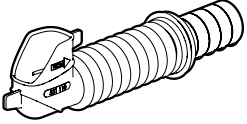
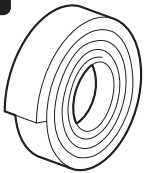
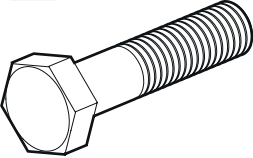
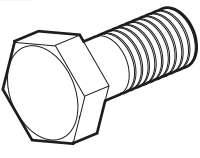


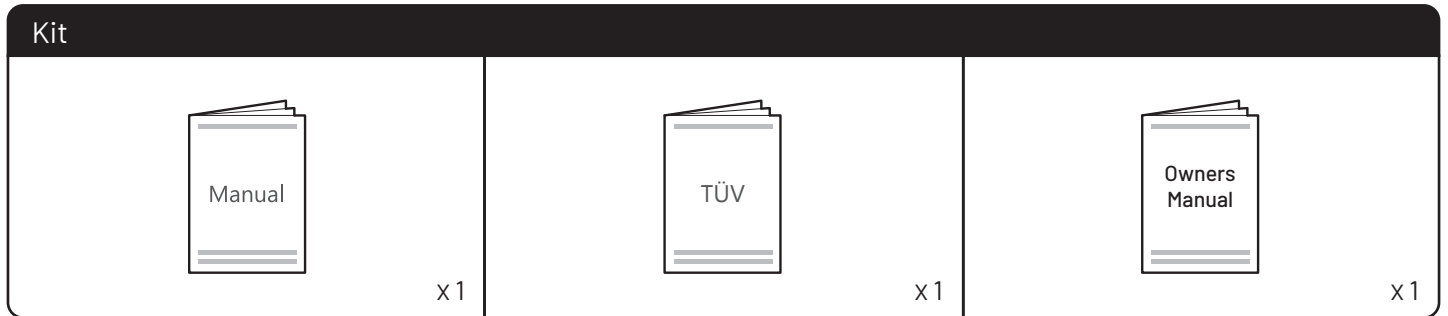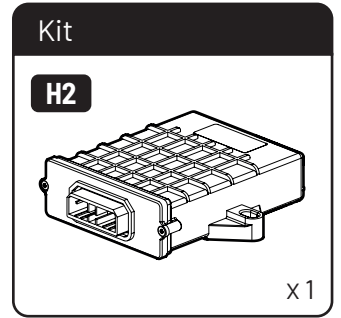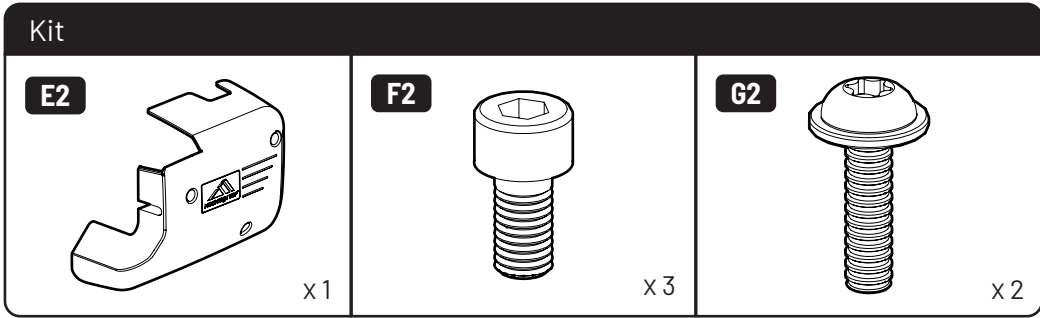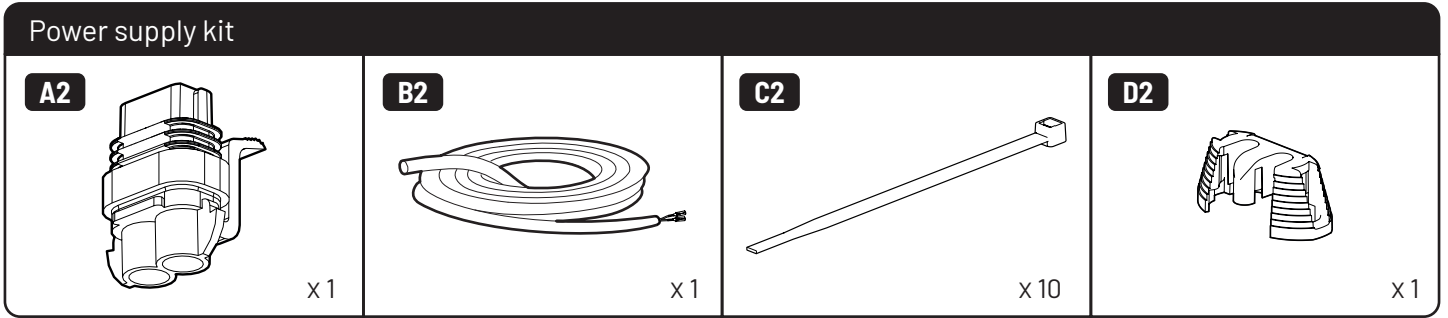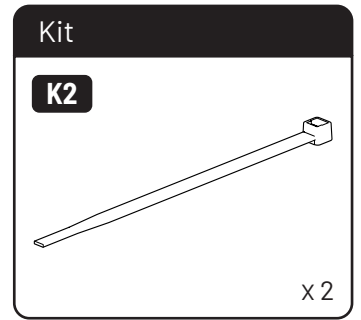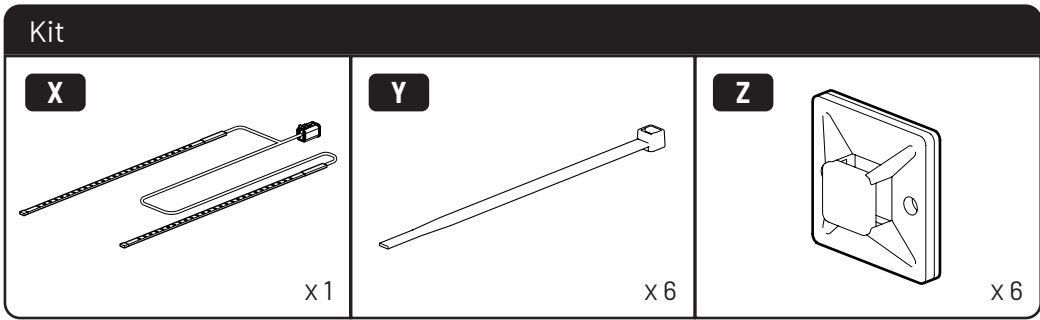
A		x1	B		x1						
C		x1	I2		x2	D		x1	J2		x1

Kit

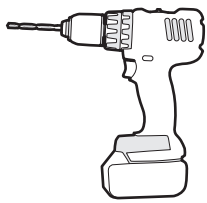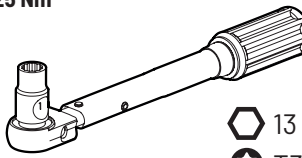
E		x2	F		x6	G		x6	H		x2	I		x1
J		x6	K		x6	L		x6	M		x1	N		x12
O		x5	P		x1	Q		x1	R		x6	S		x2
T		x1	U		x1	V		x1						

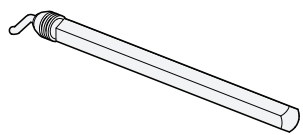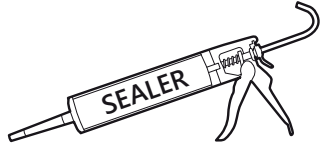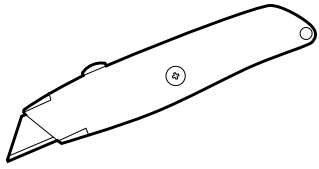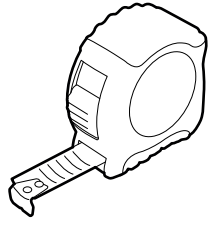

Tools needed

 <p>Ø3.5MM</p>	<p>1- 25 Nm</p>  <ul style="list-style-type: none">  13 mm  T30  4 mm 	 <p>Rust protection Rostschutzmittel Anti-rouille Anti roest</p>	
			
			


Applying rust protection

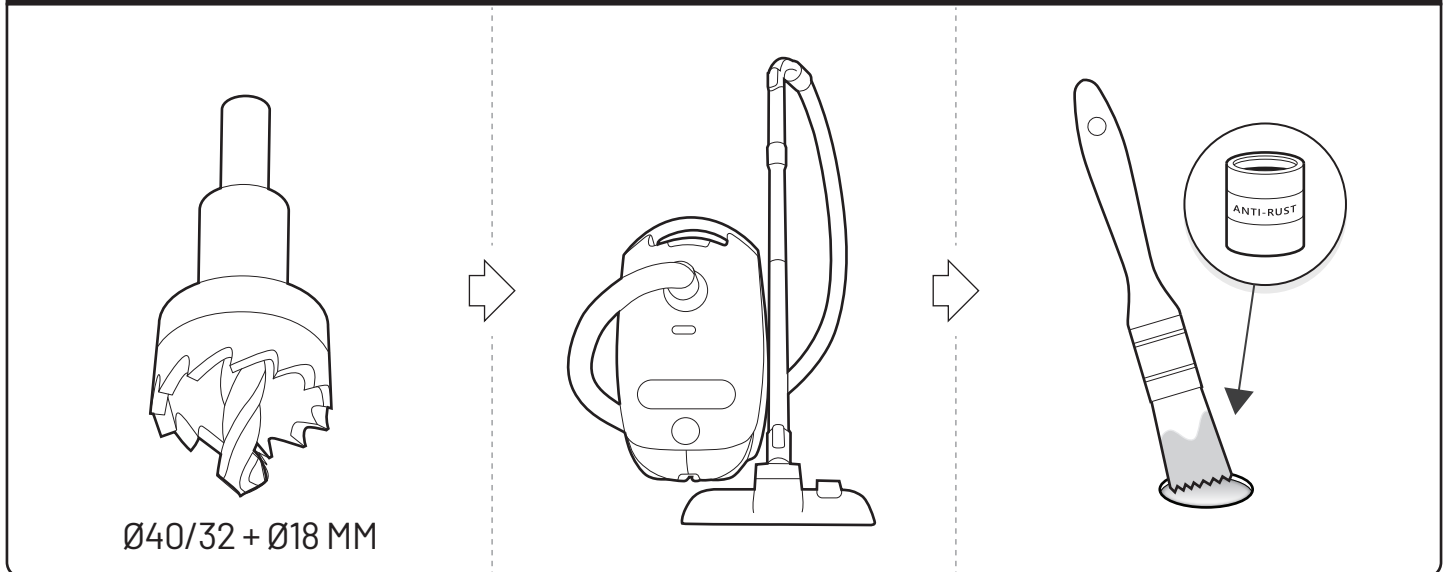

Sharp edge






1

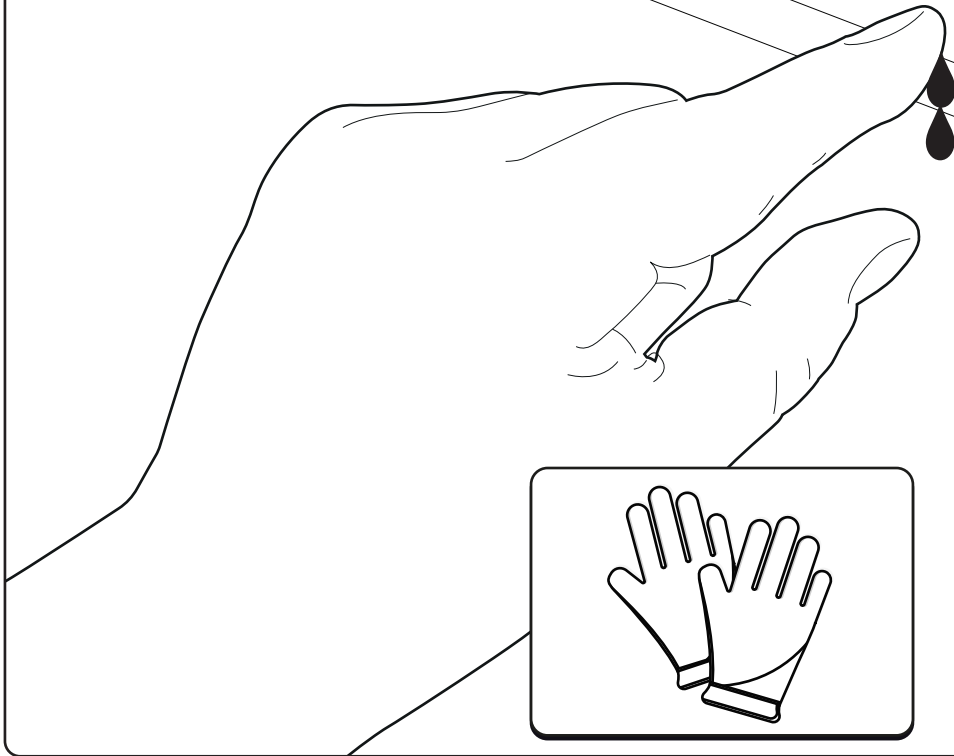


Isuzu 10+11

2

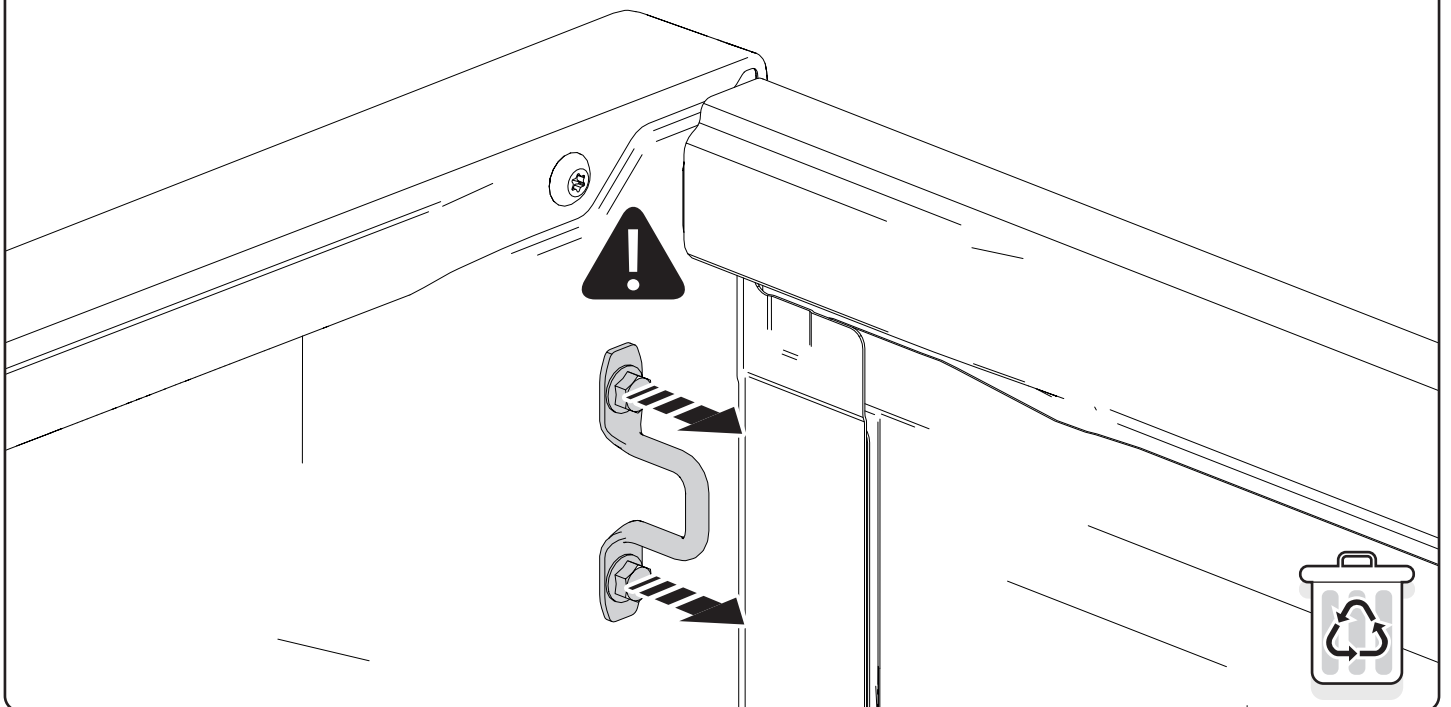


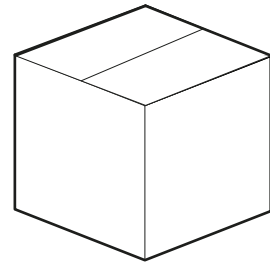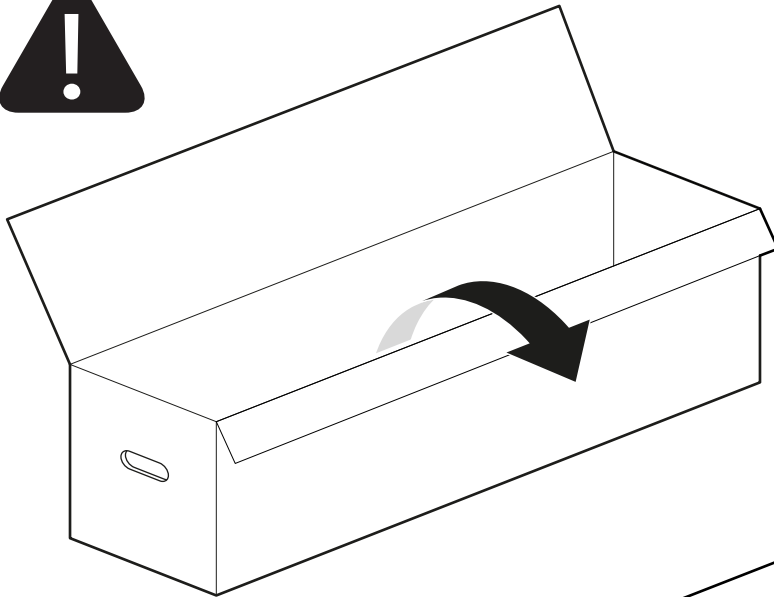


C

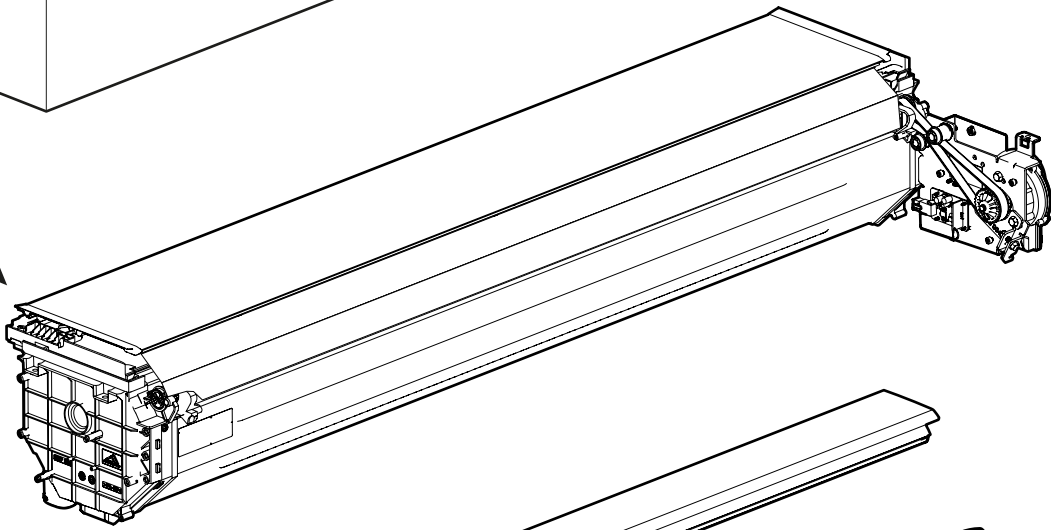


D

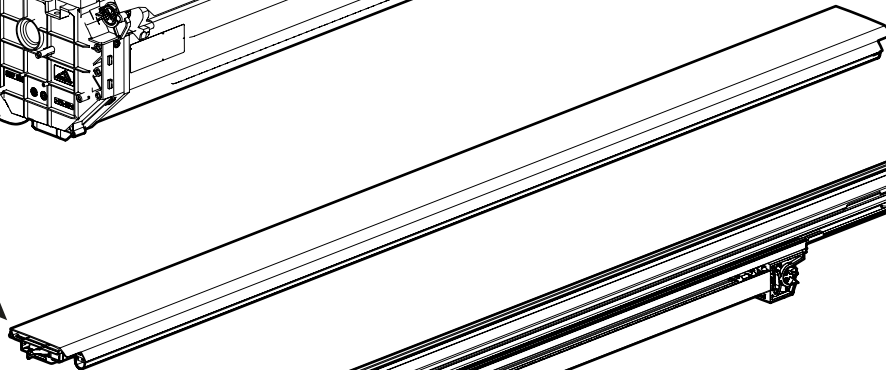

A

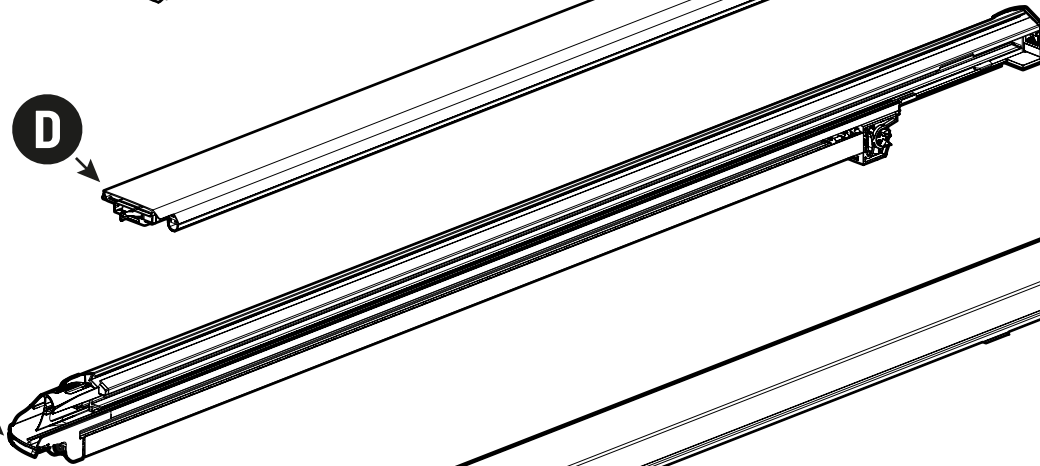


B

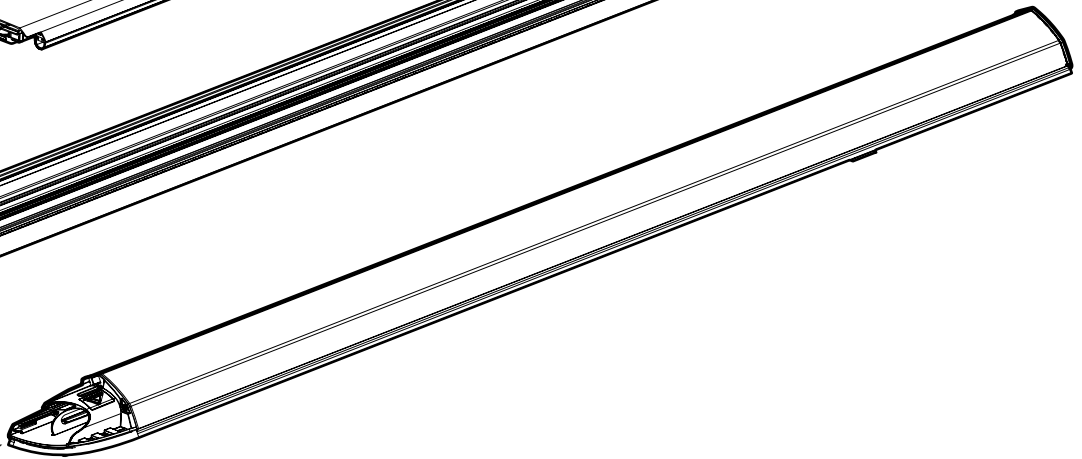





Water & sponge

4

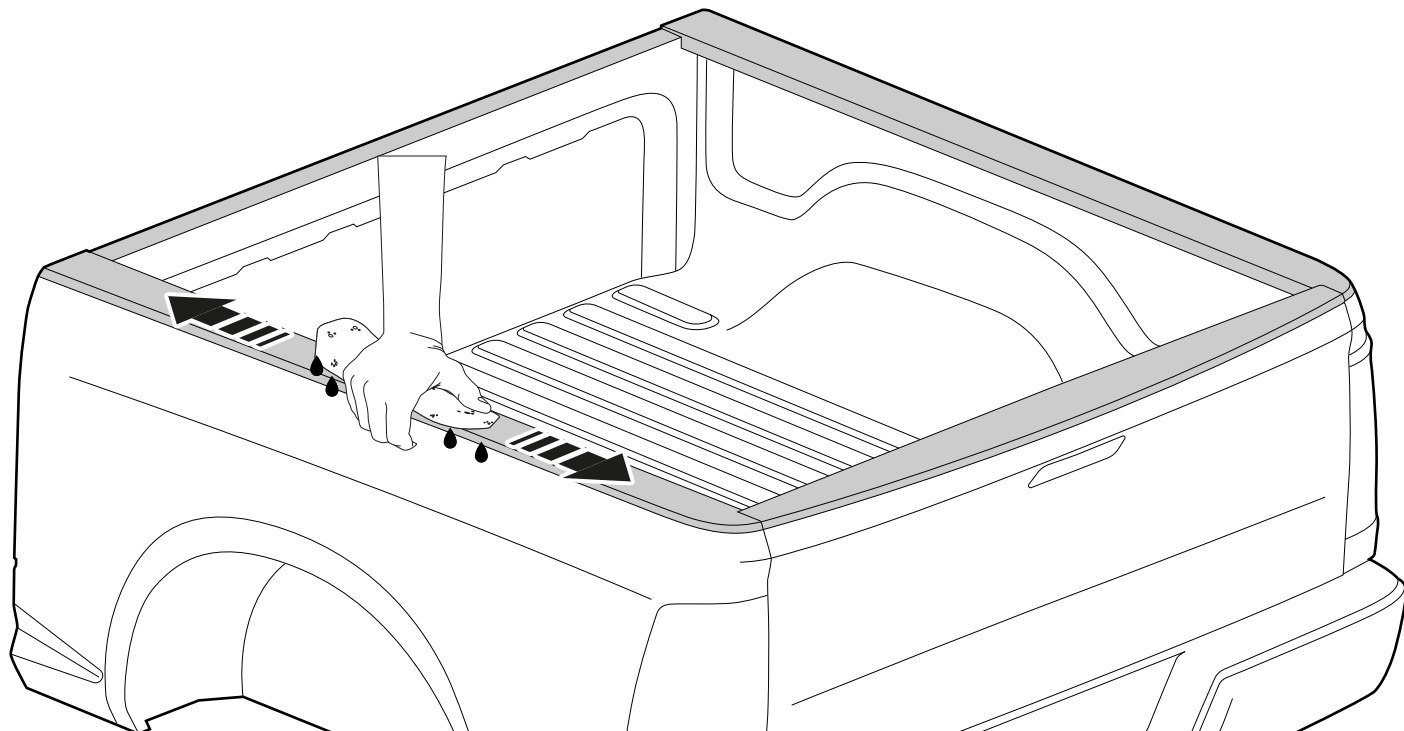


5

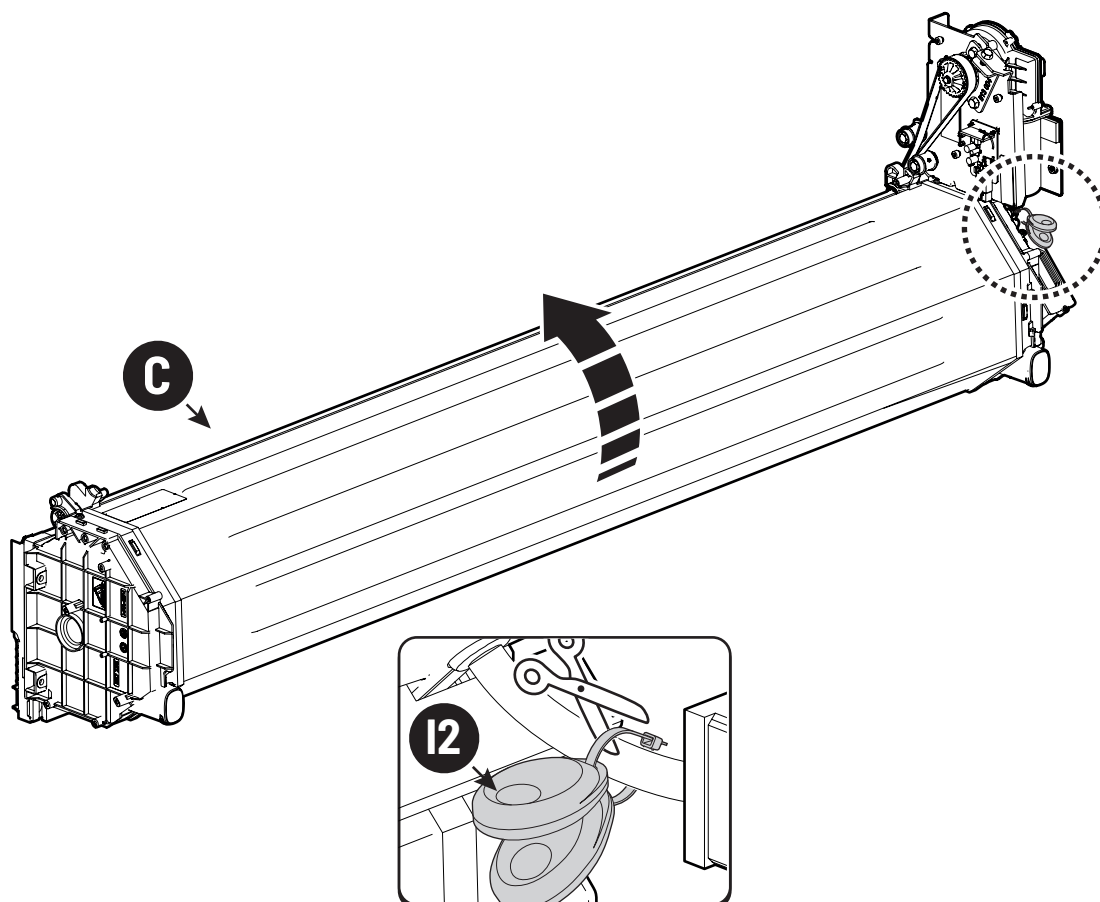

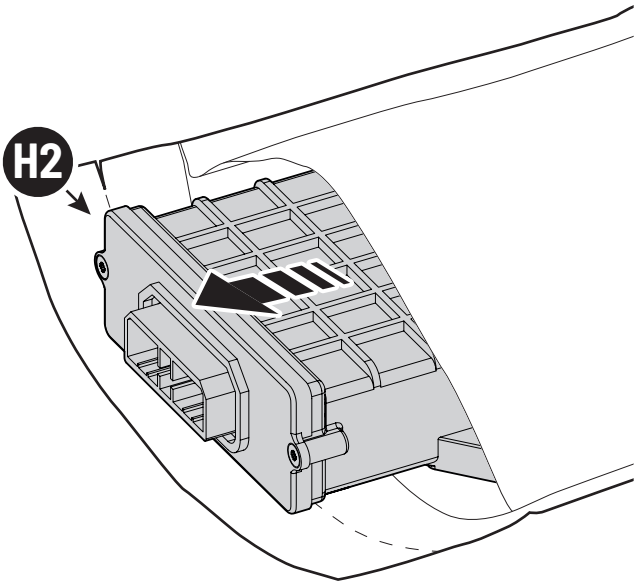


1

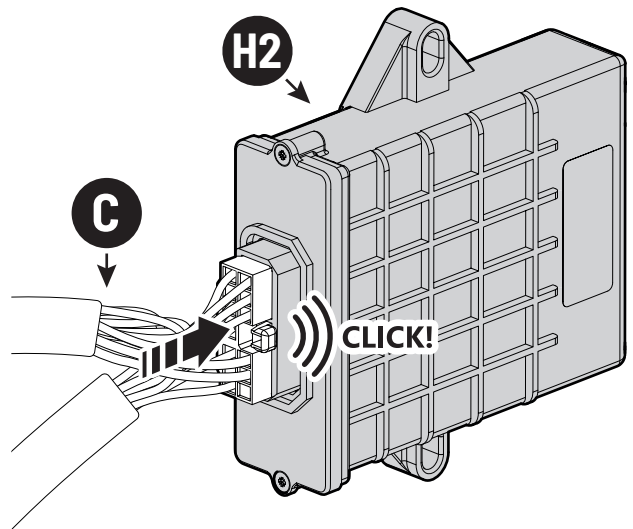


2



4mm 2,4Nm

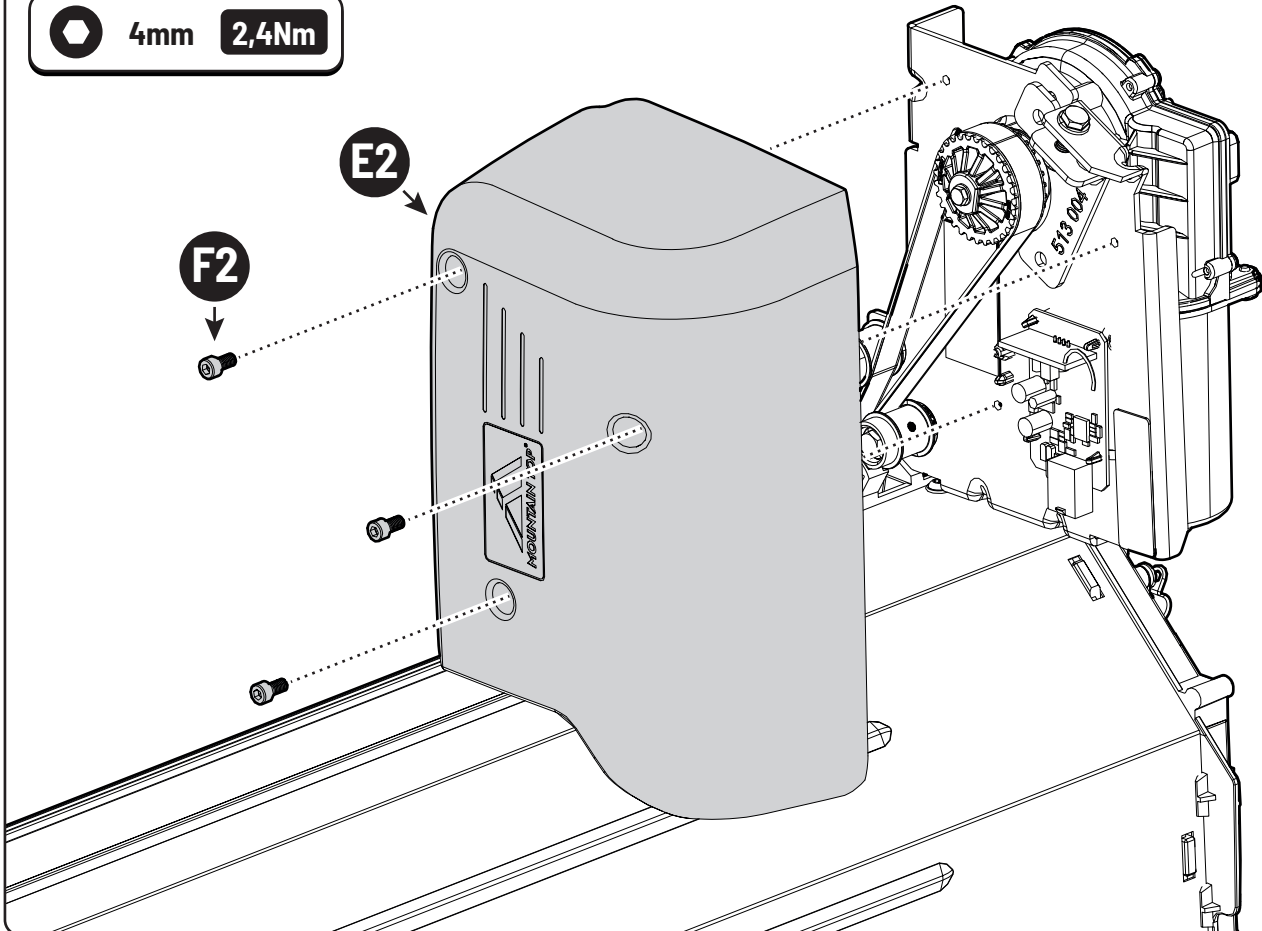



8


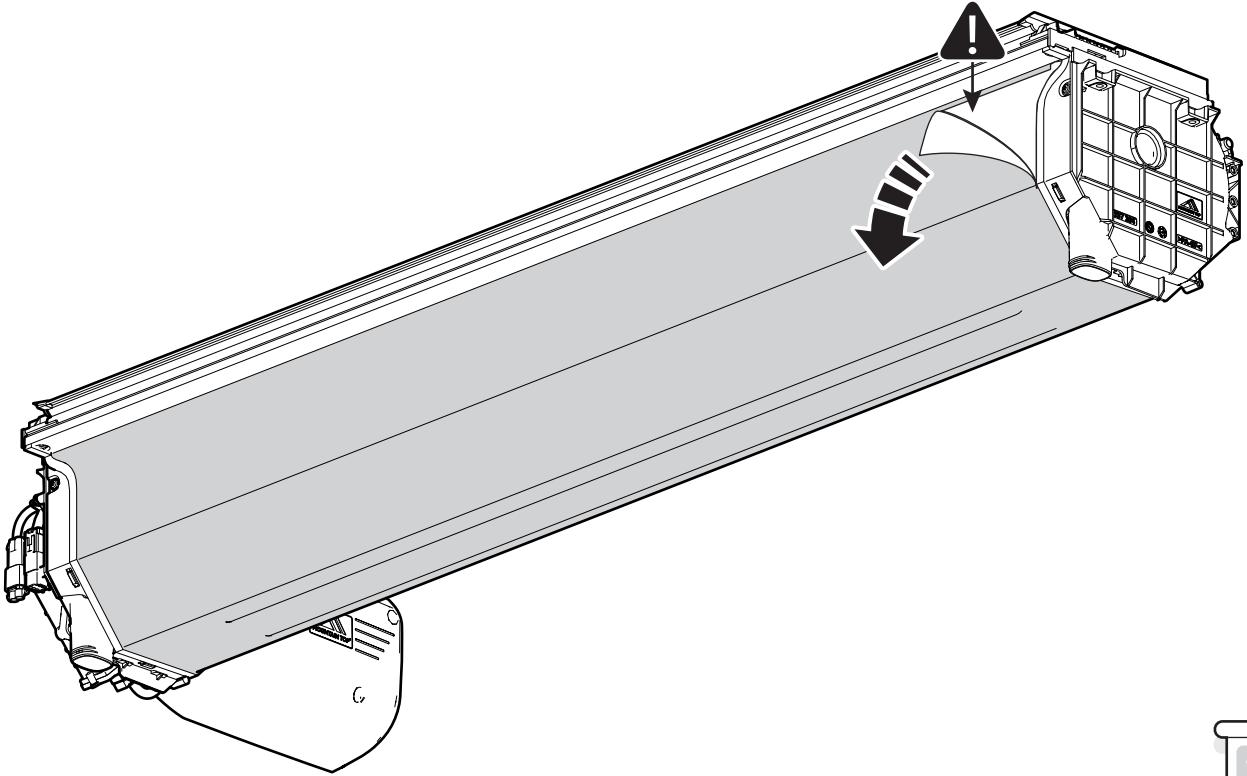




9

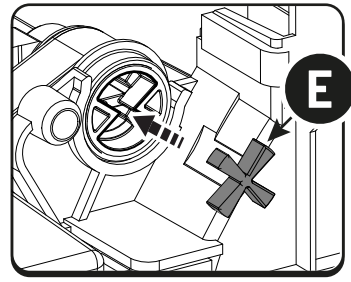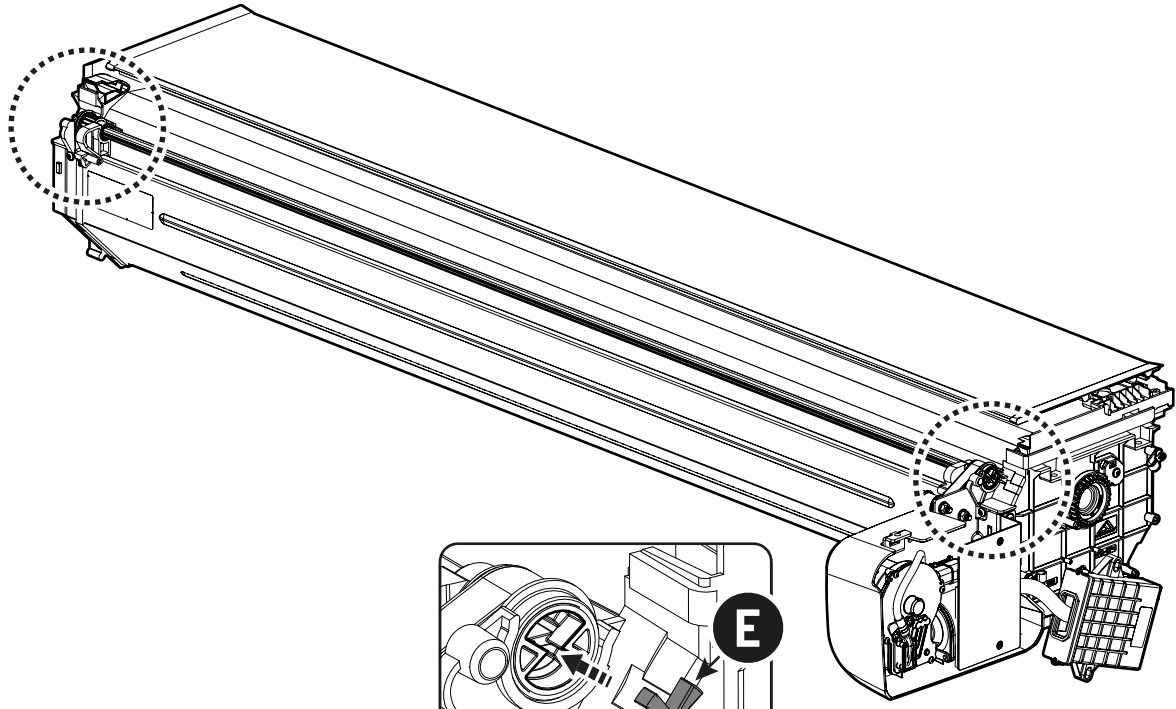

x2

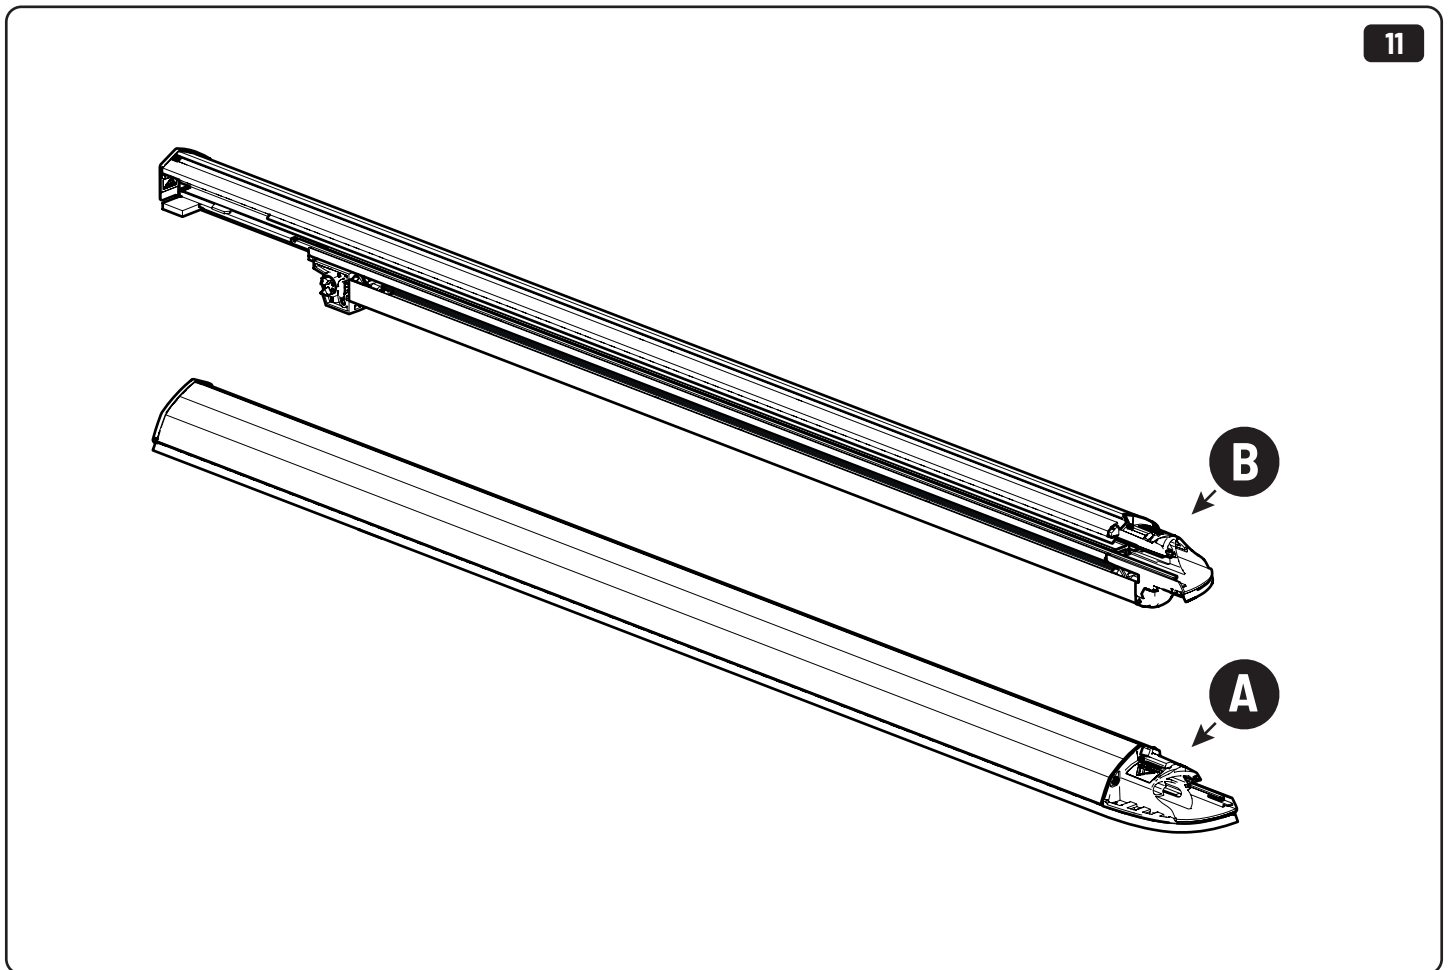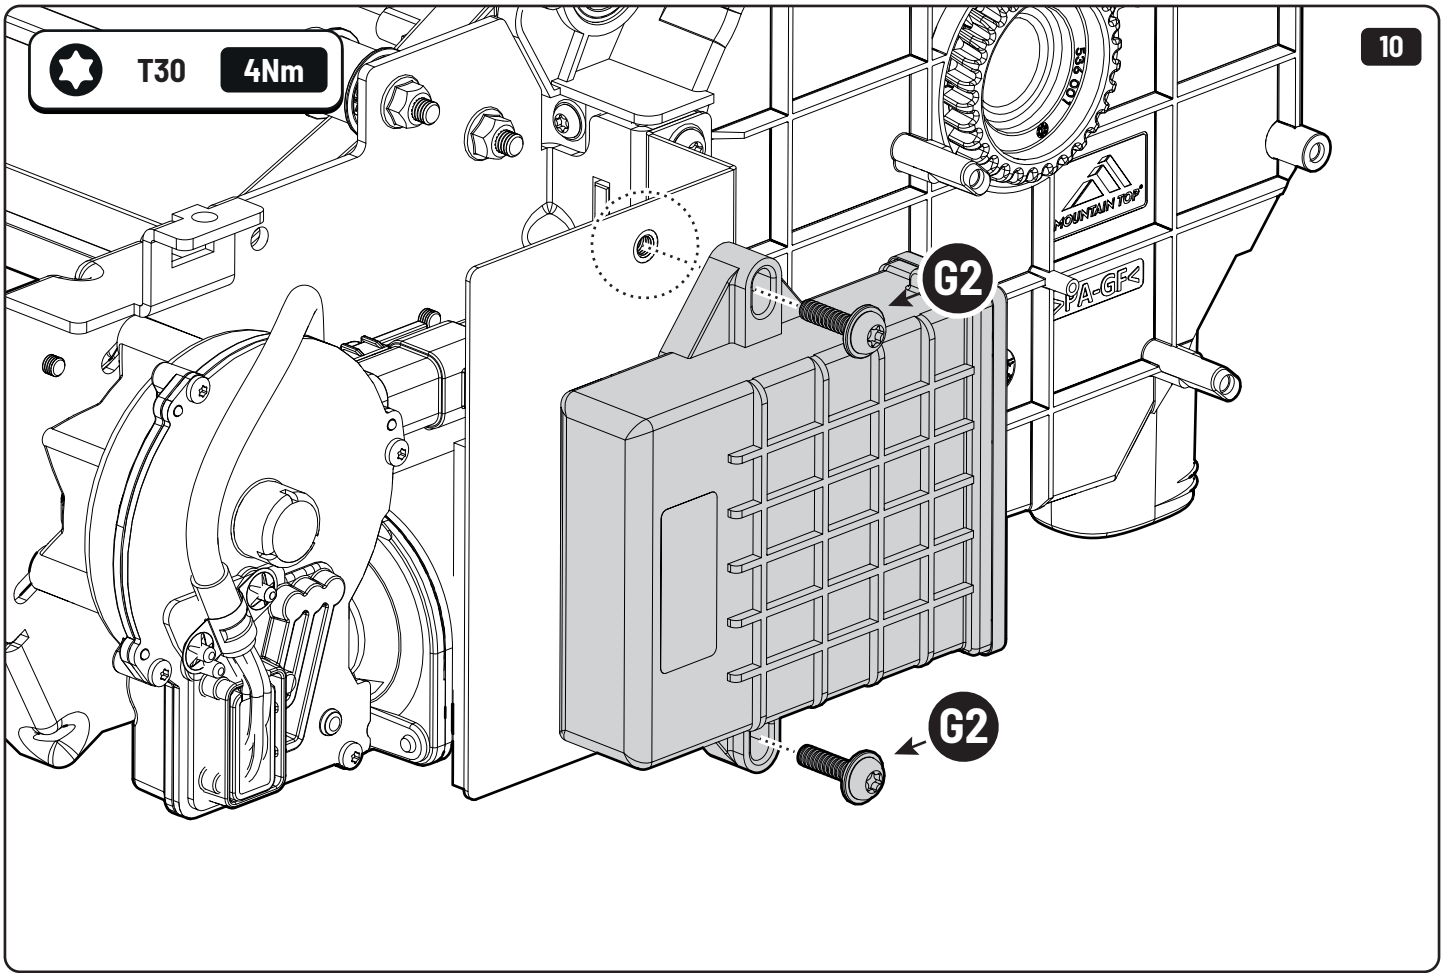

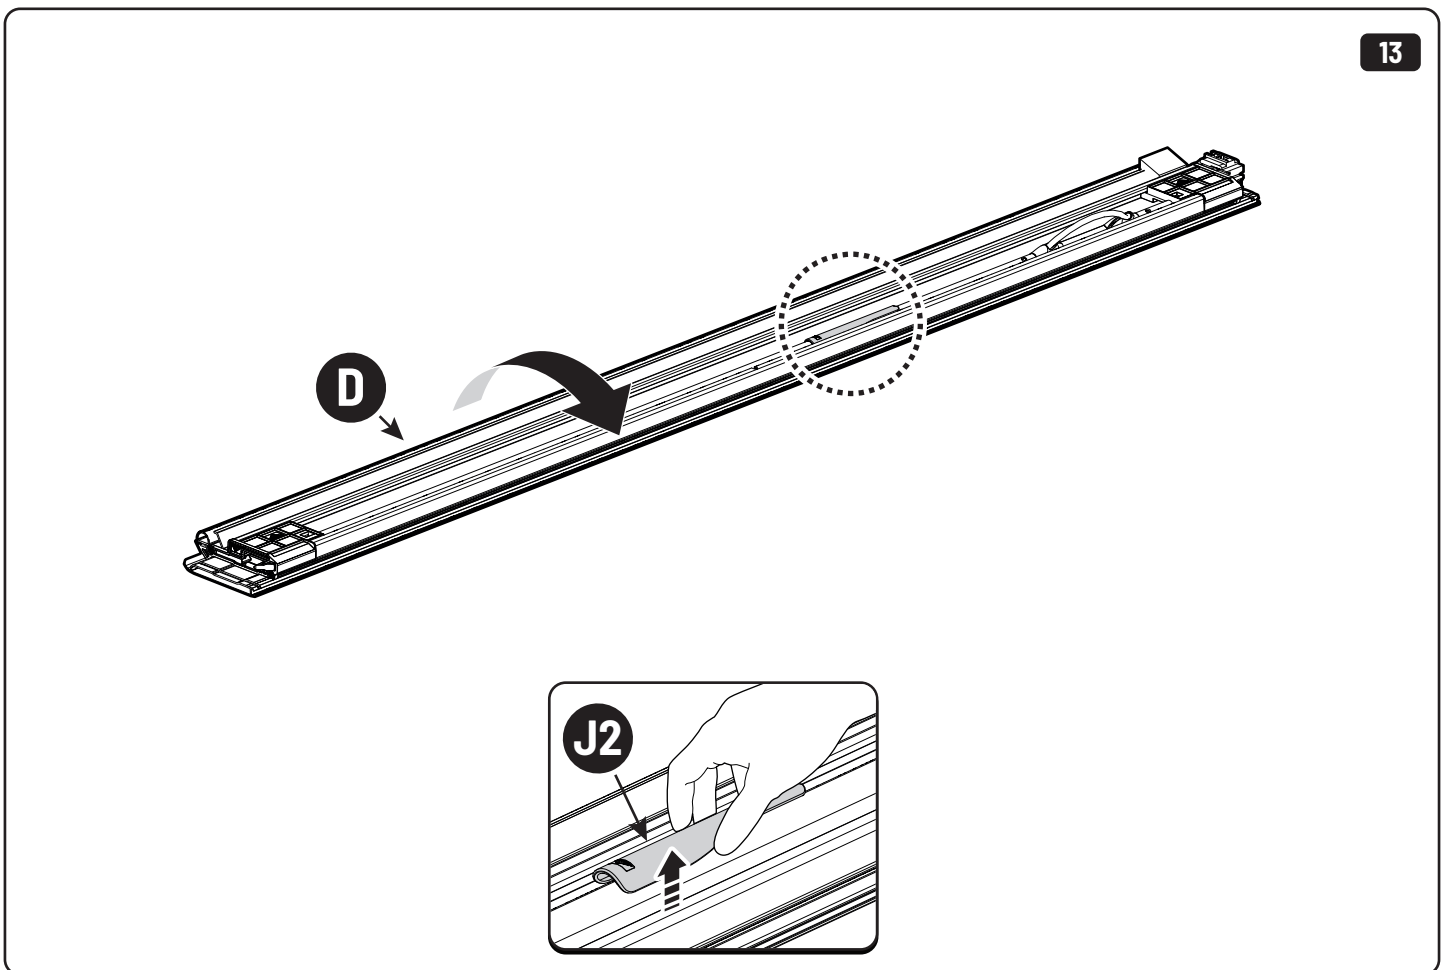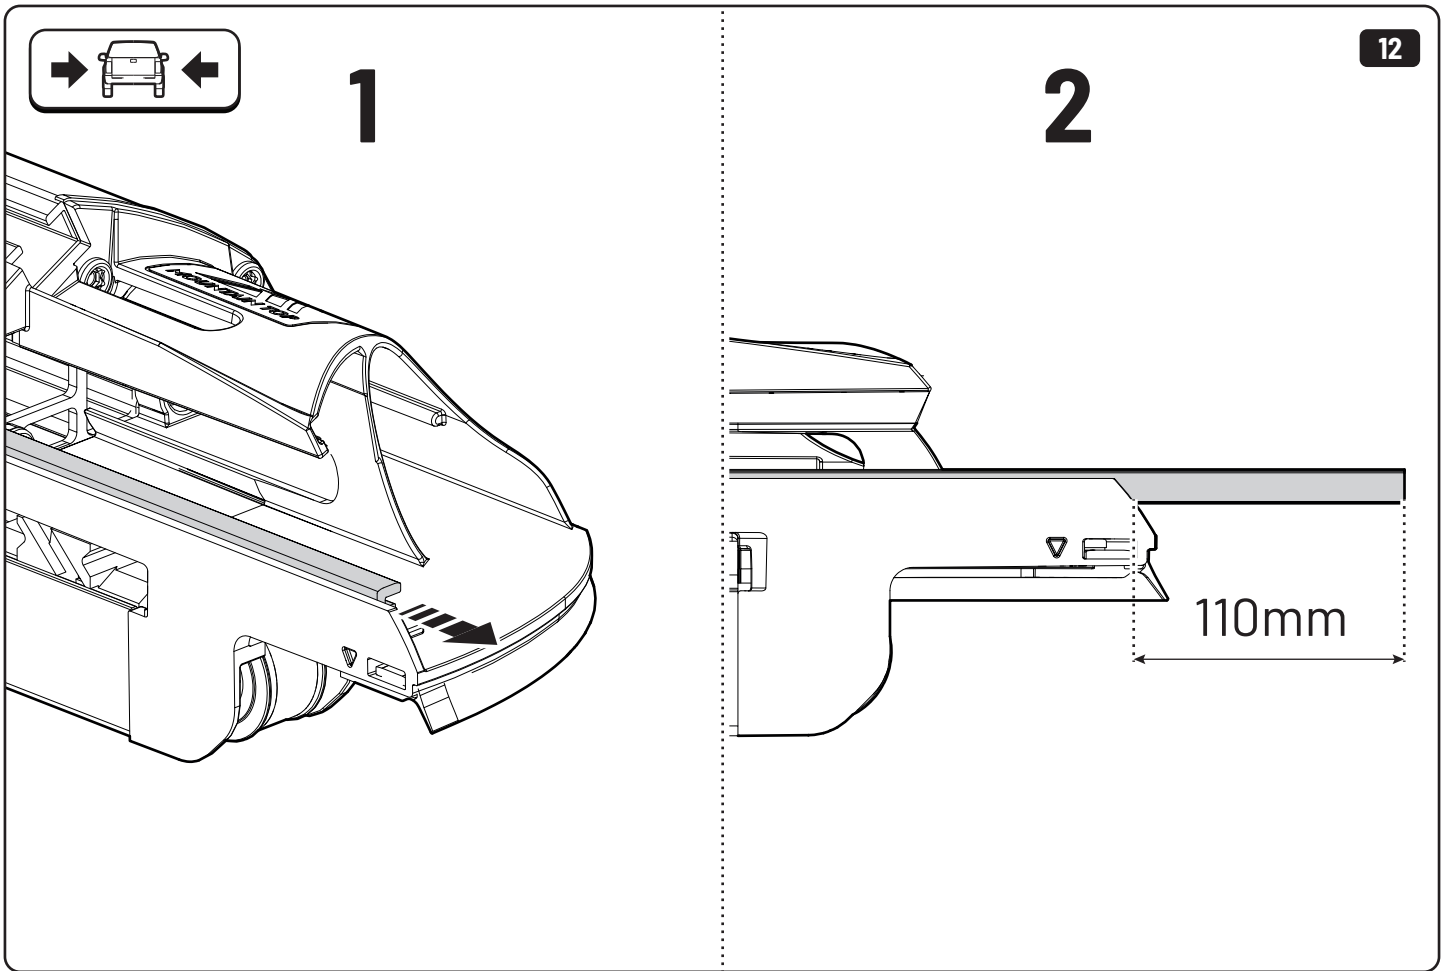

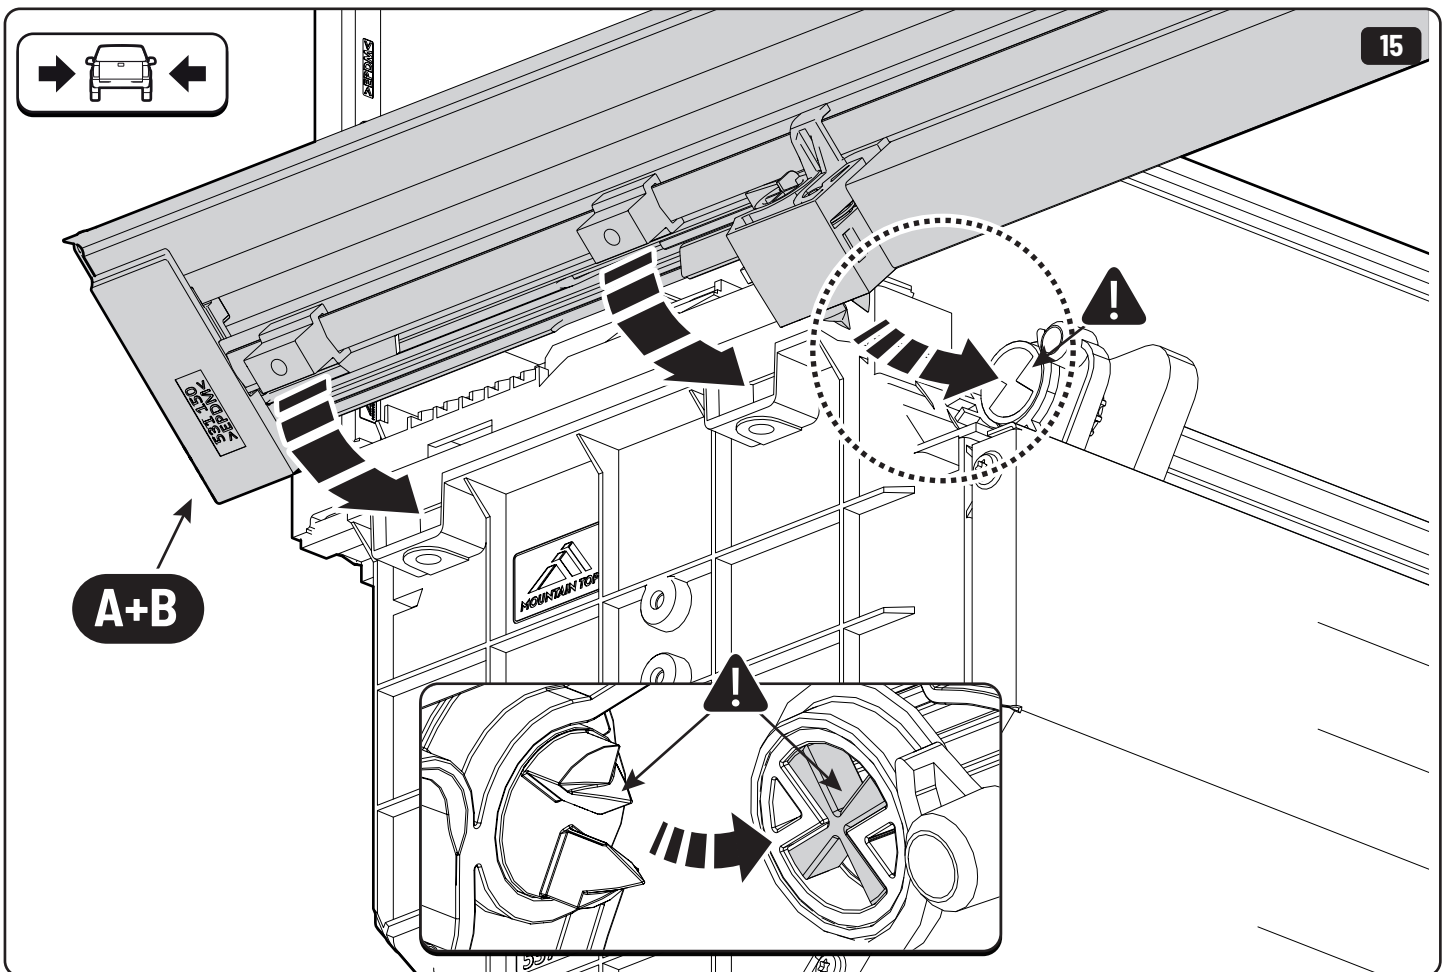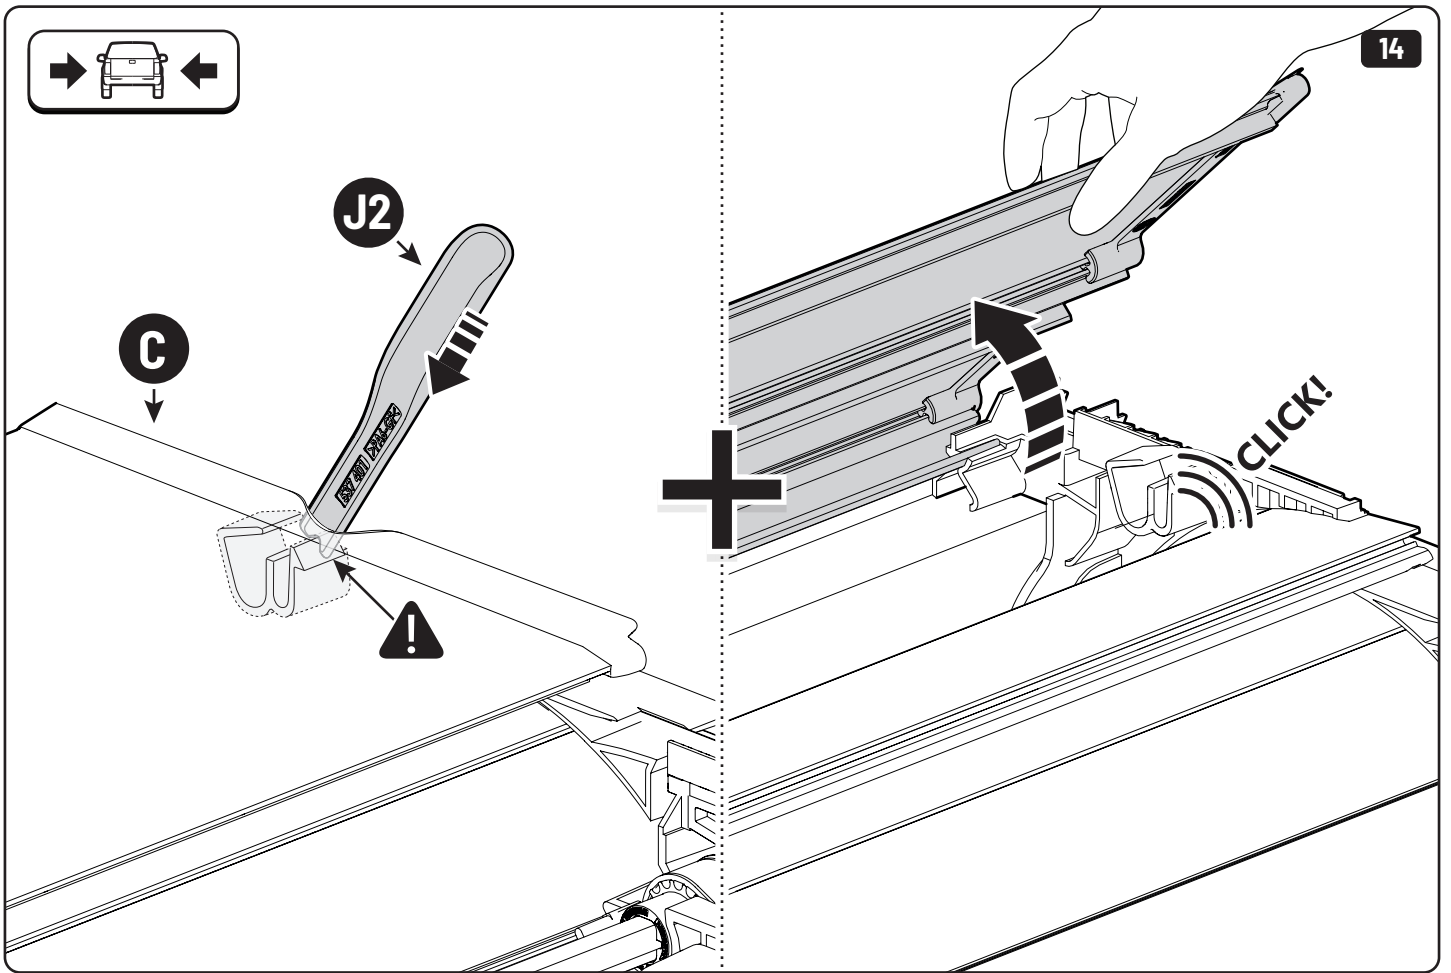




LOCTITE 243




T30

4,8Nm

16

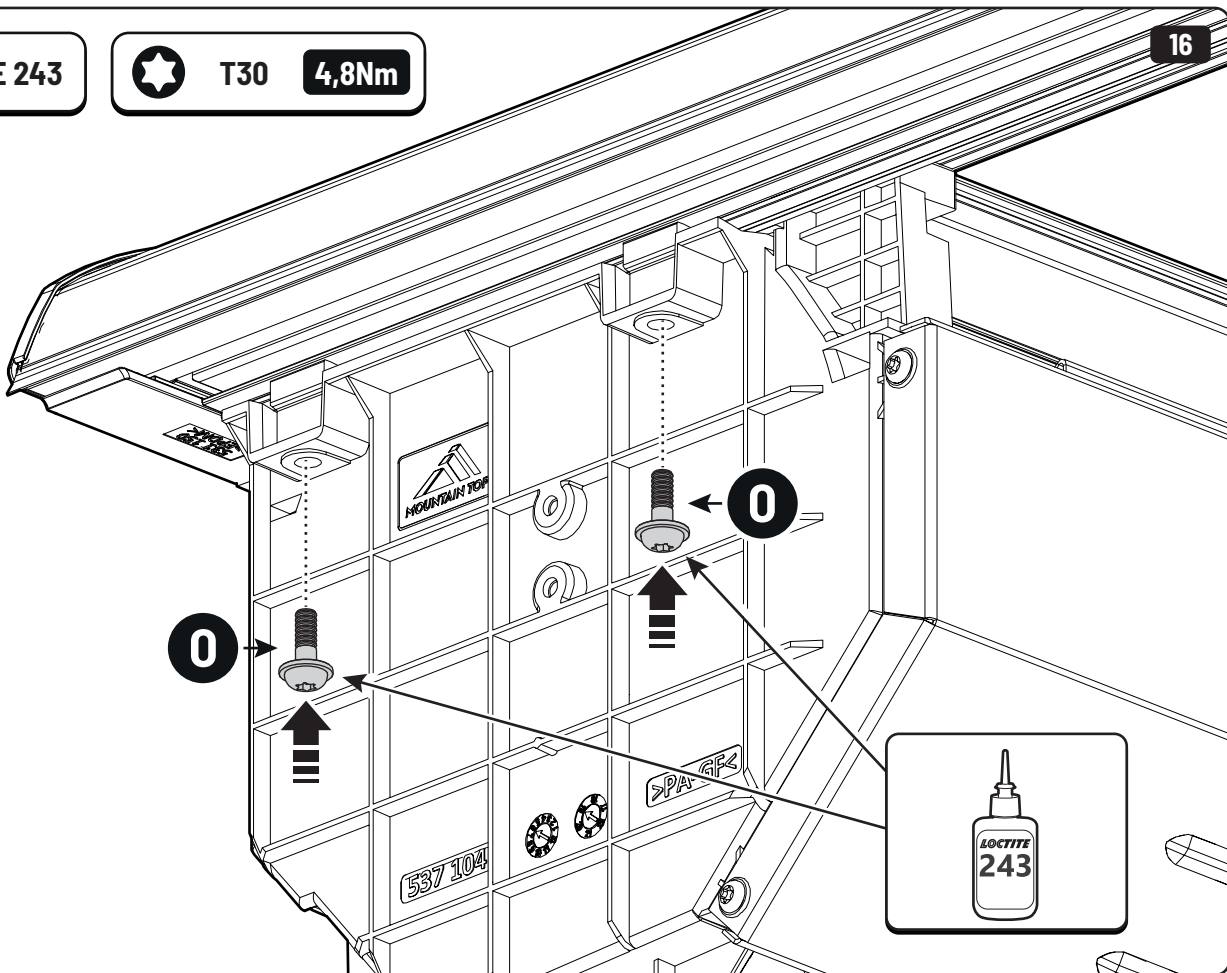


17

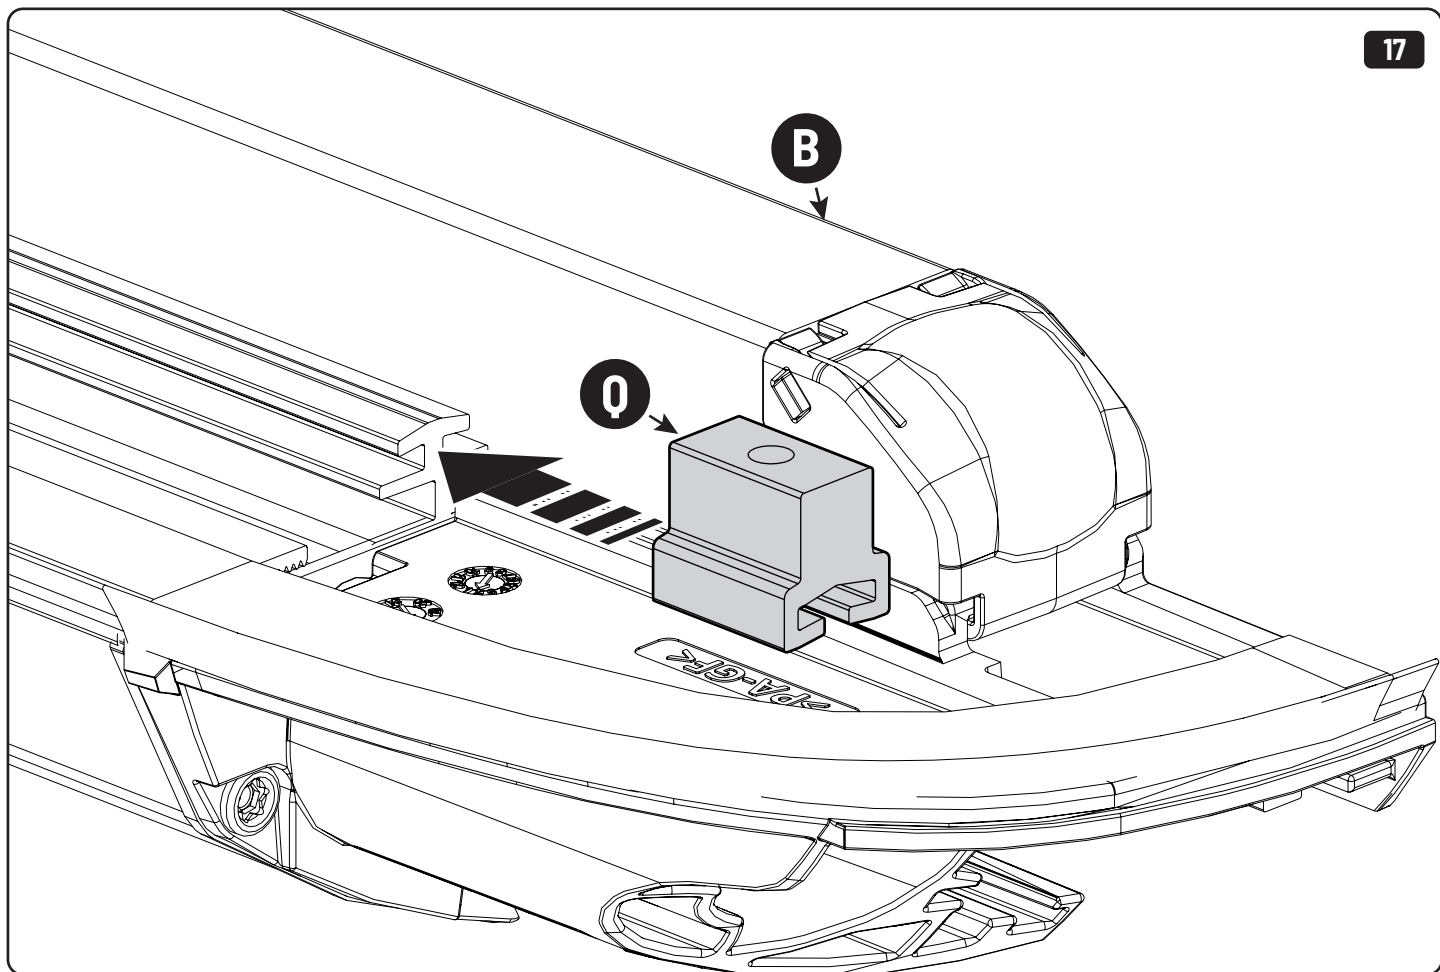


 **LOCTITE 243**



18


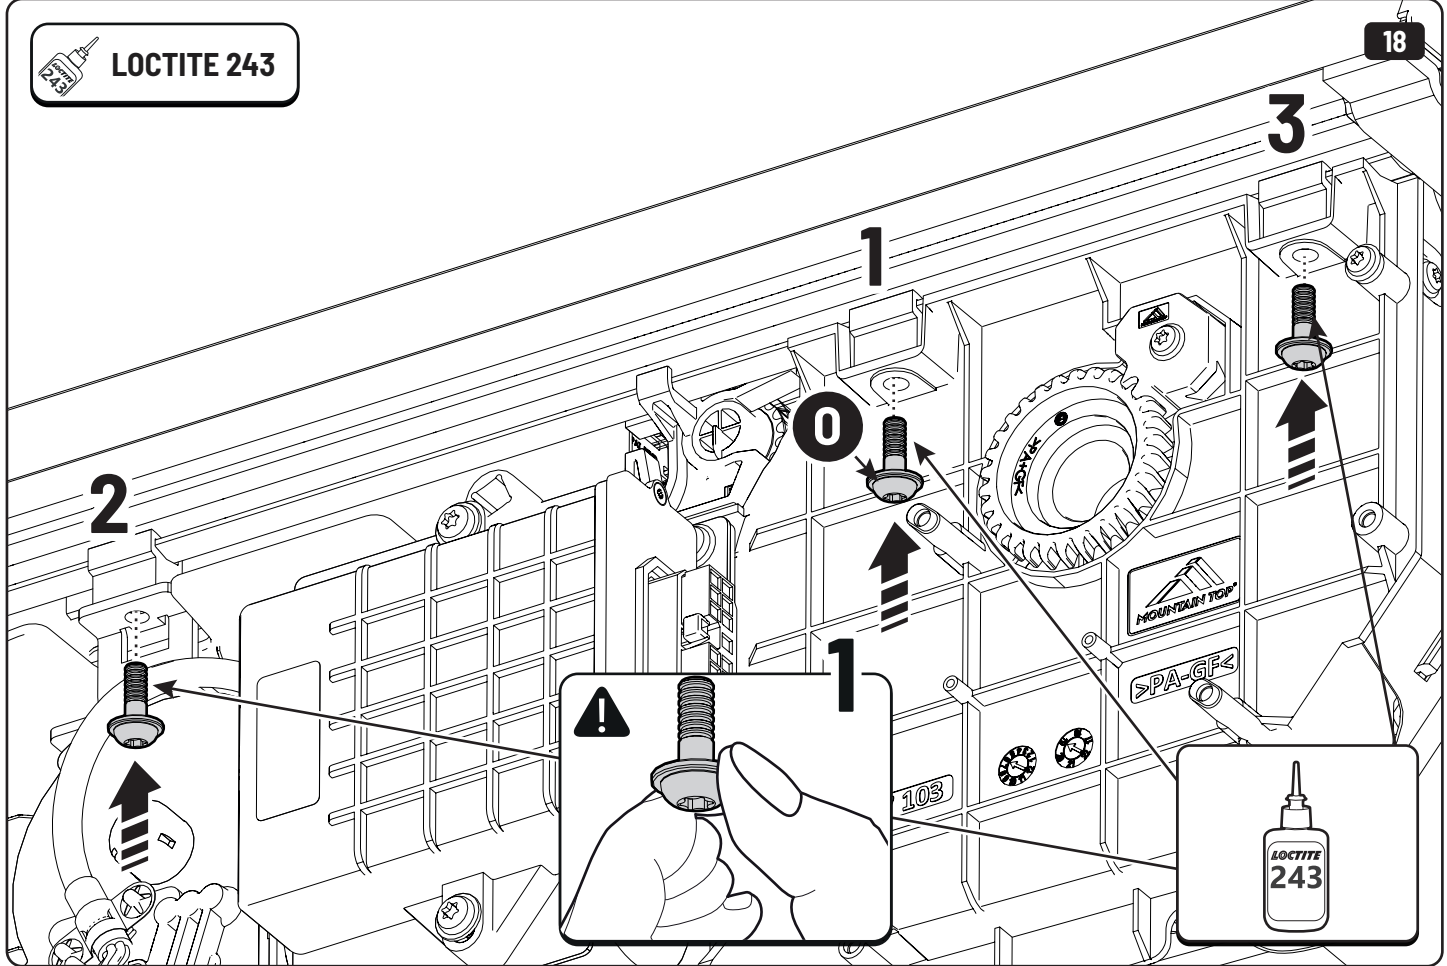




 **T30 4,8Nm**



19



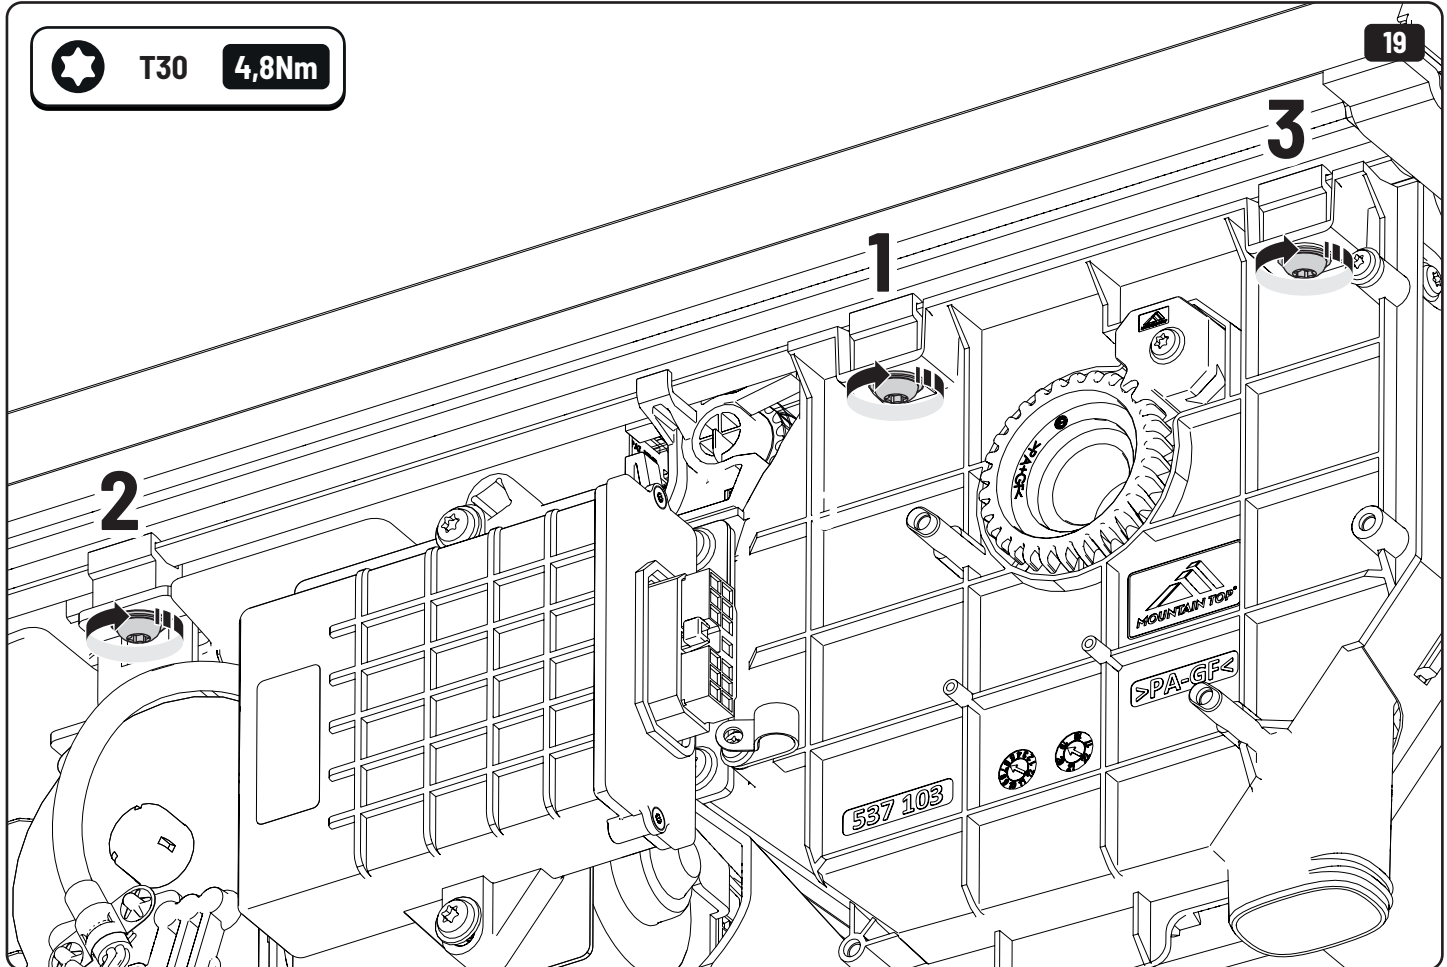


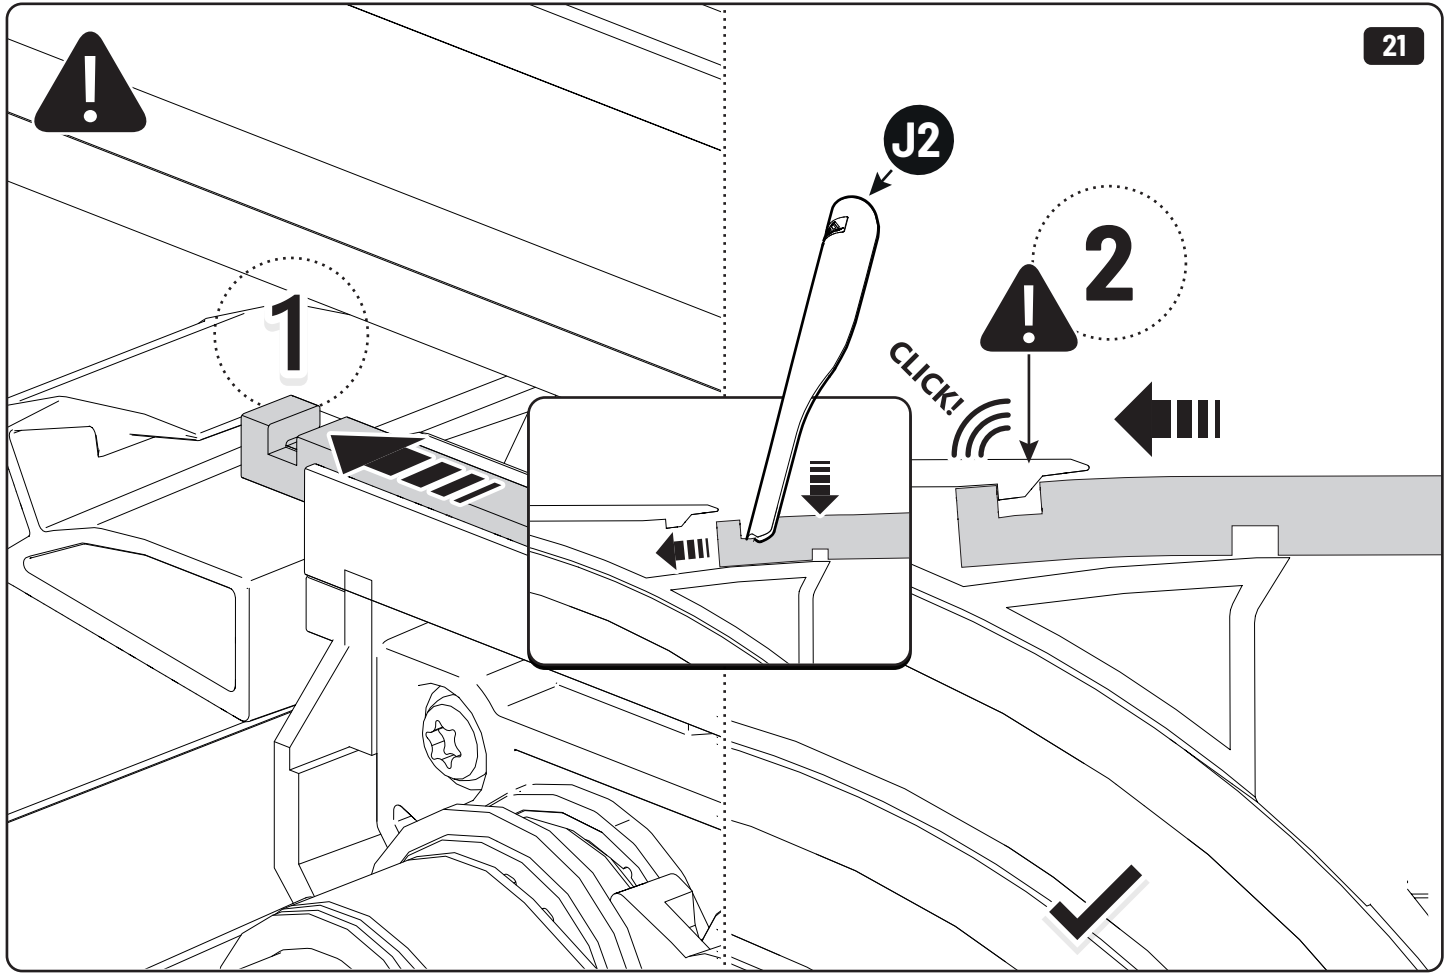
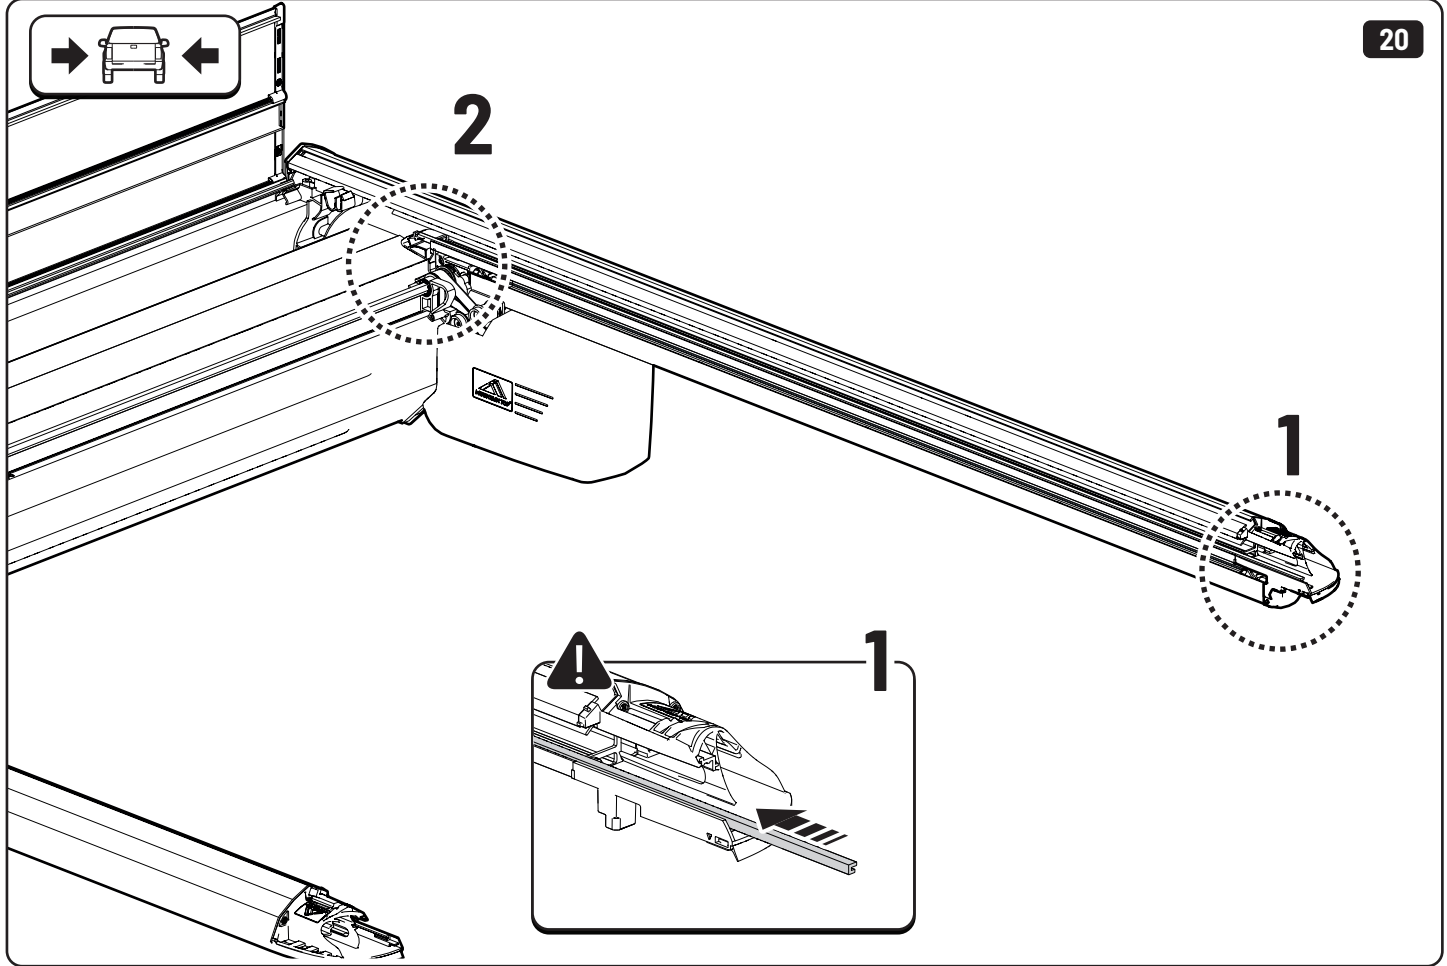


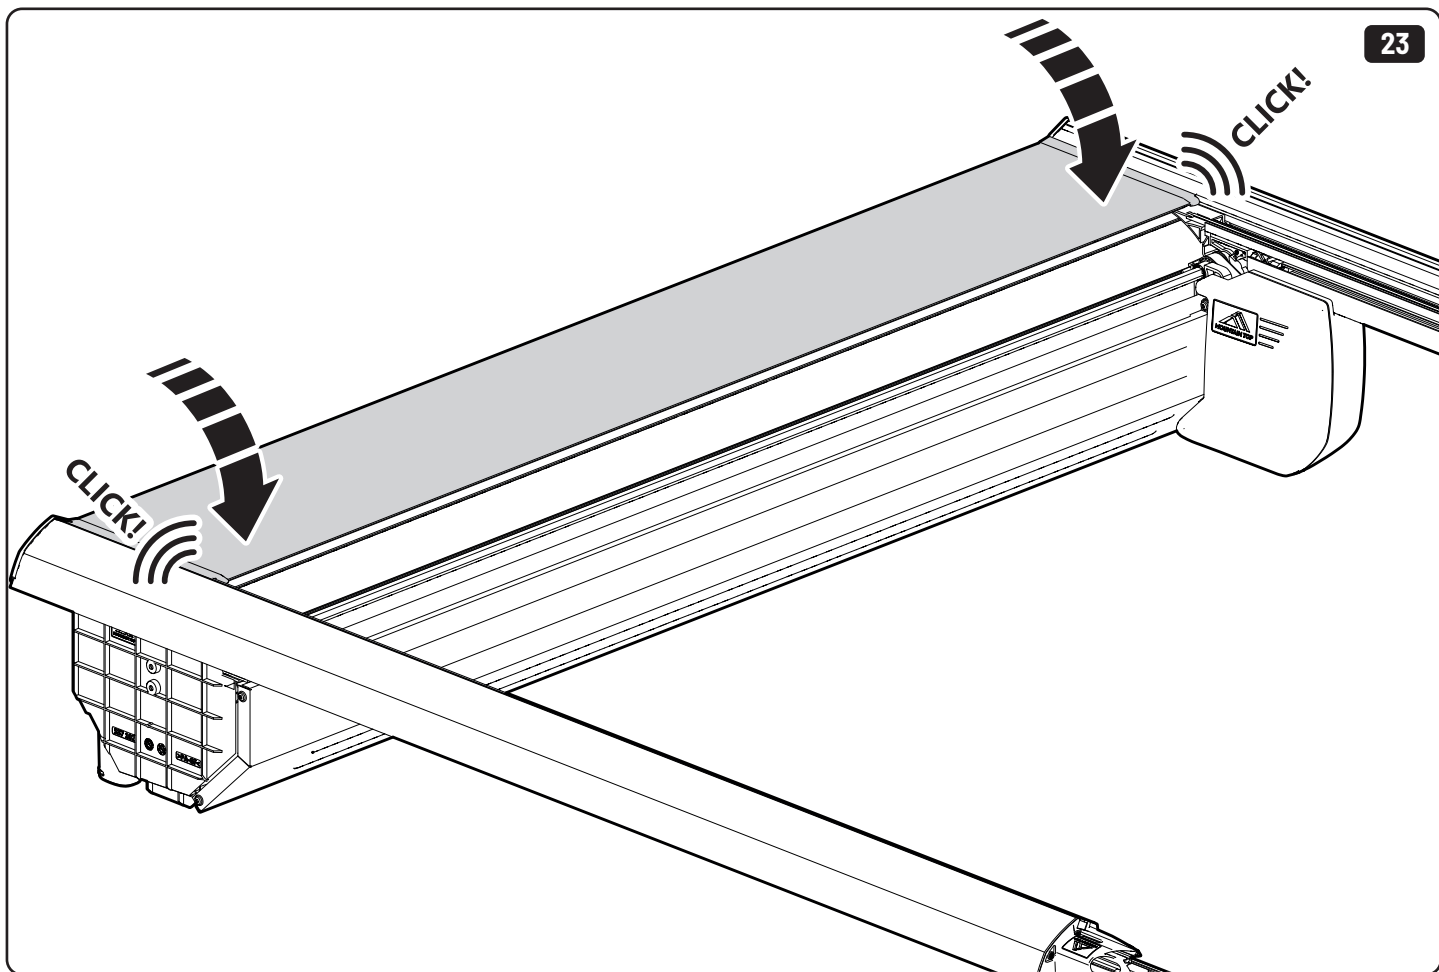
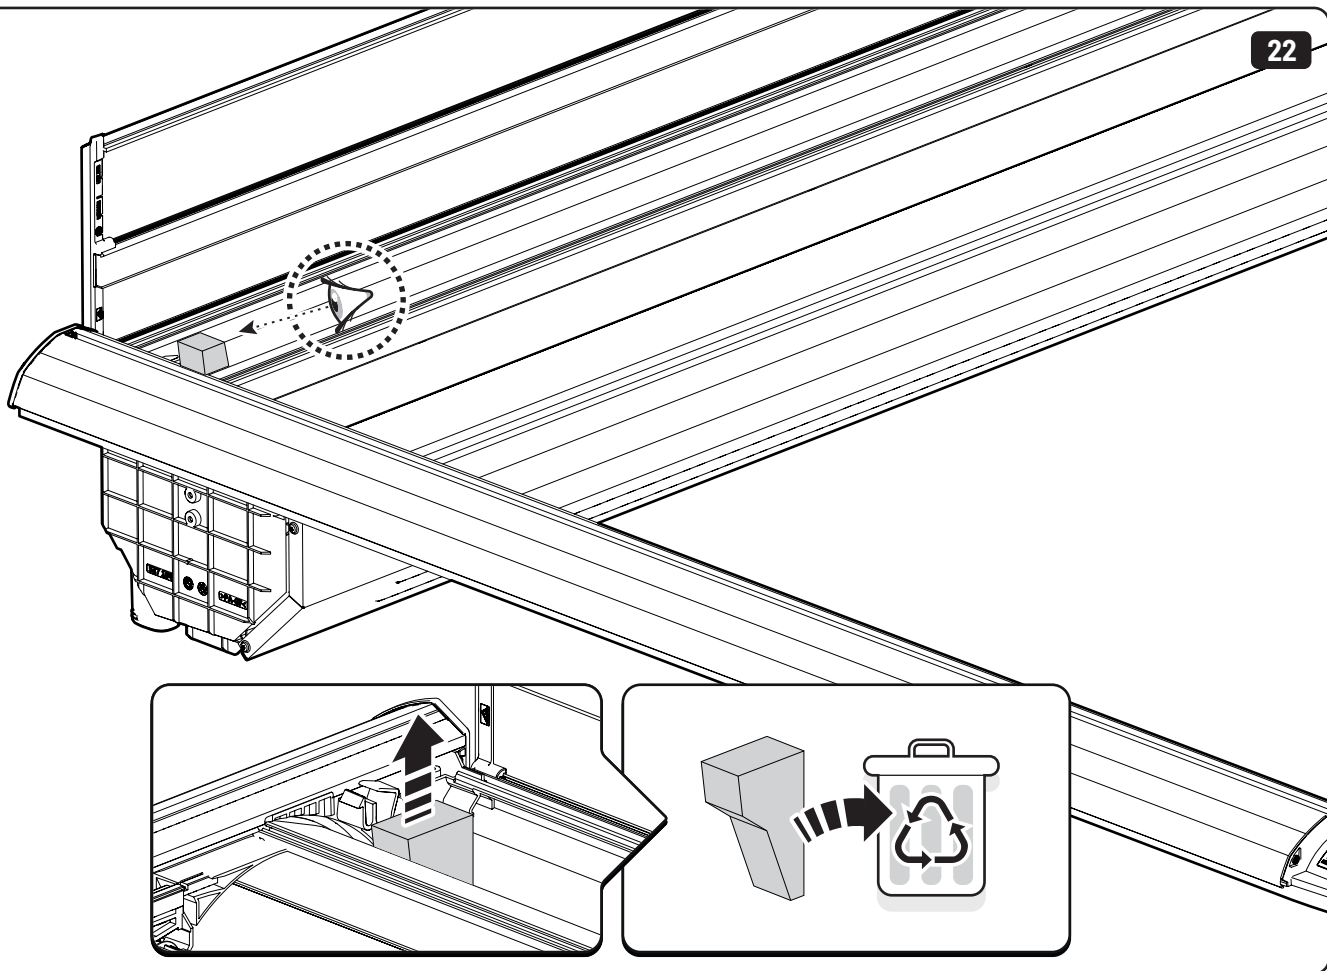


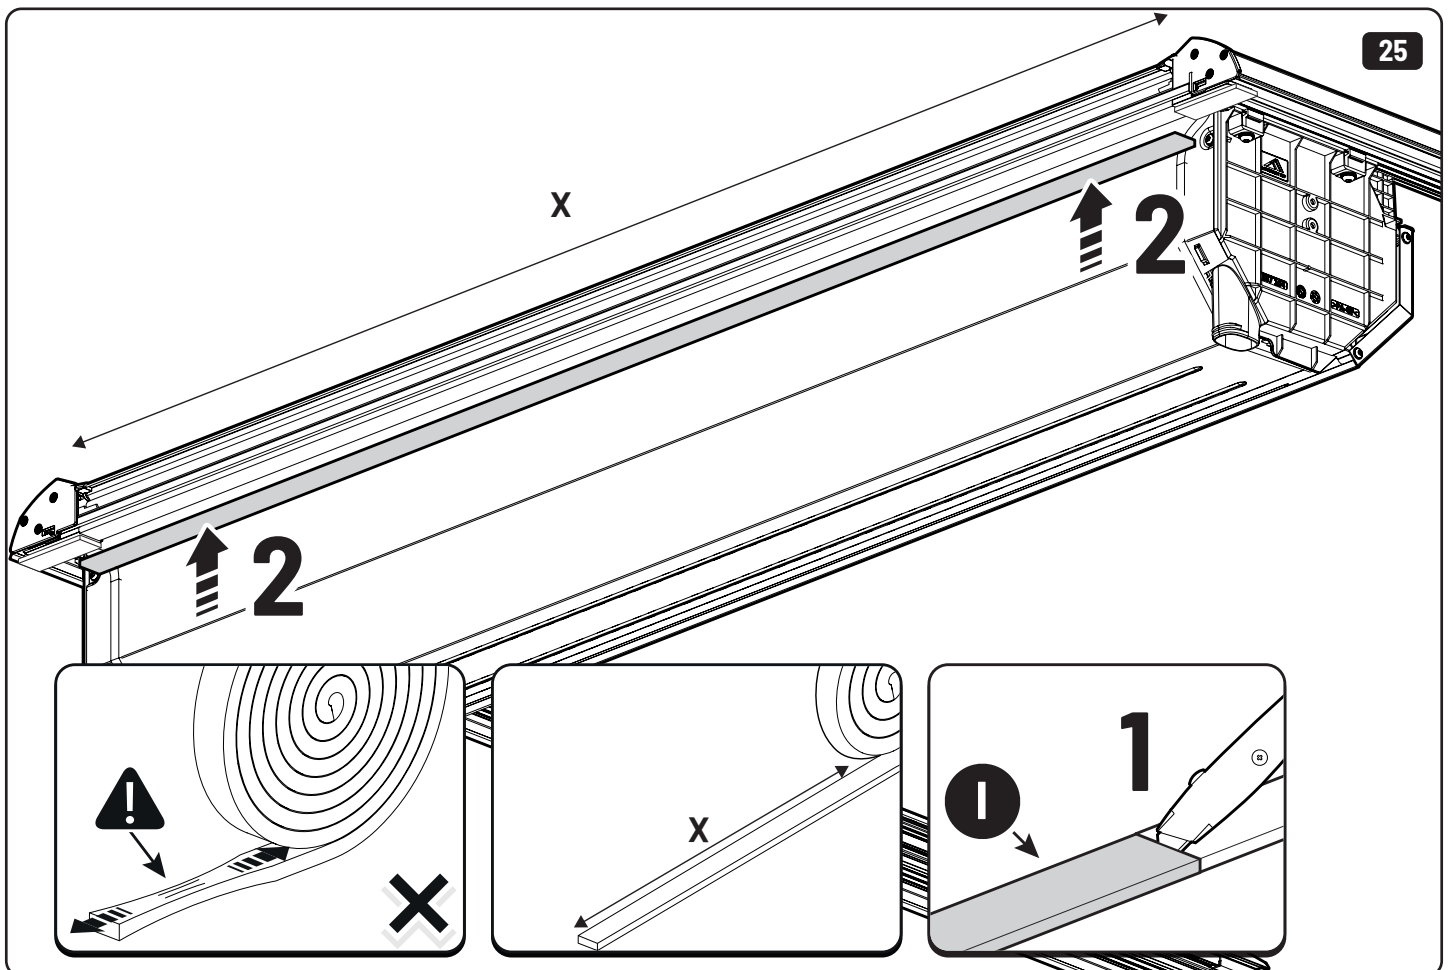
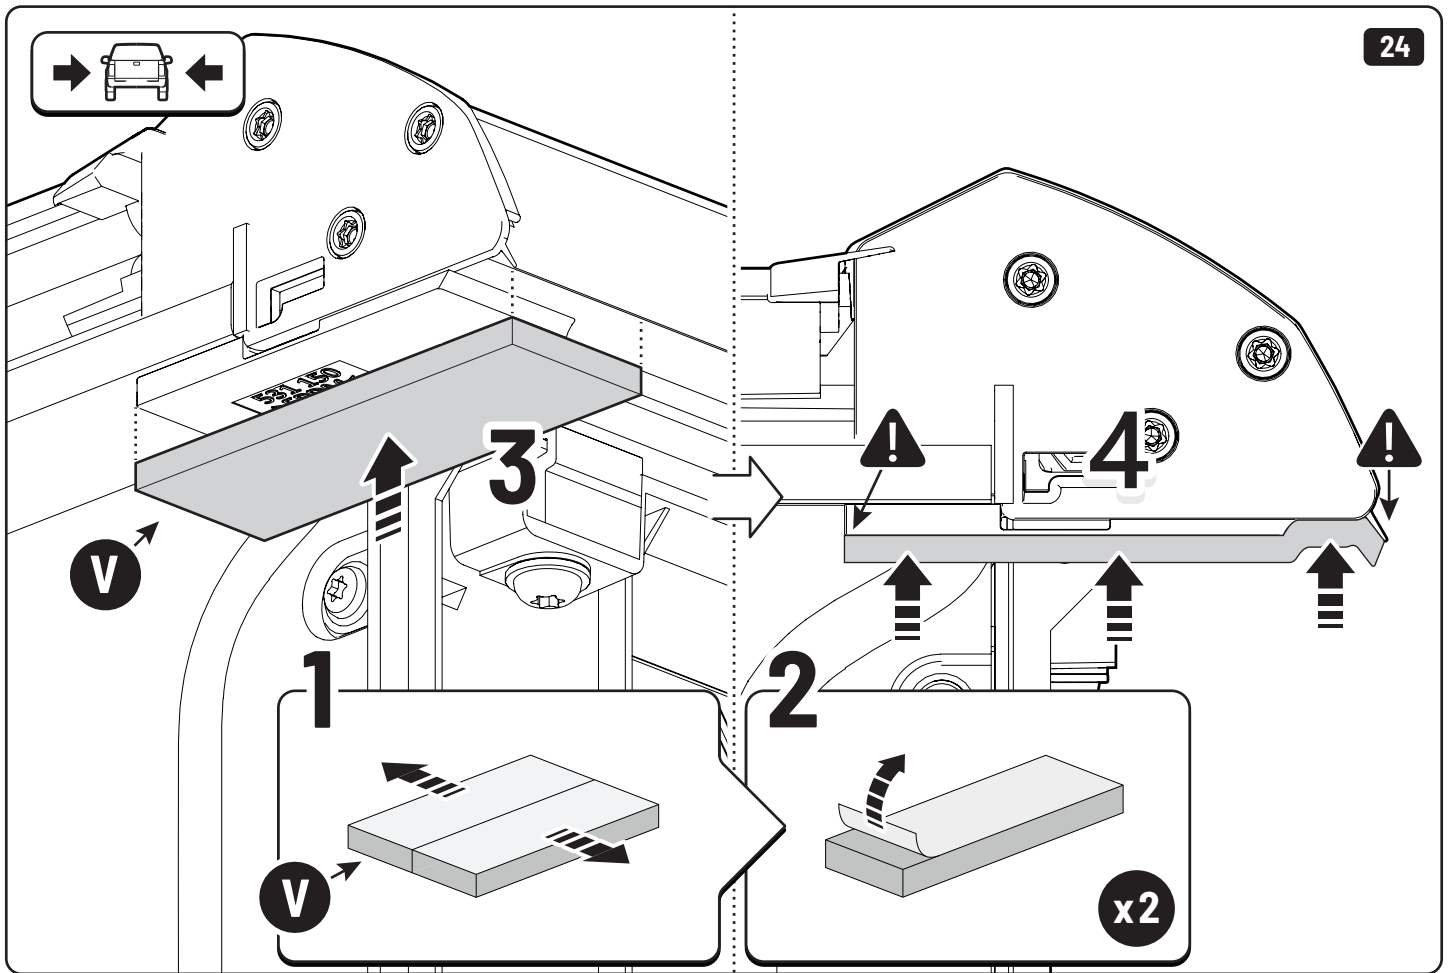


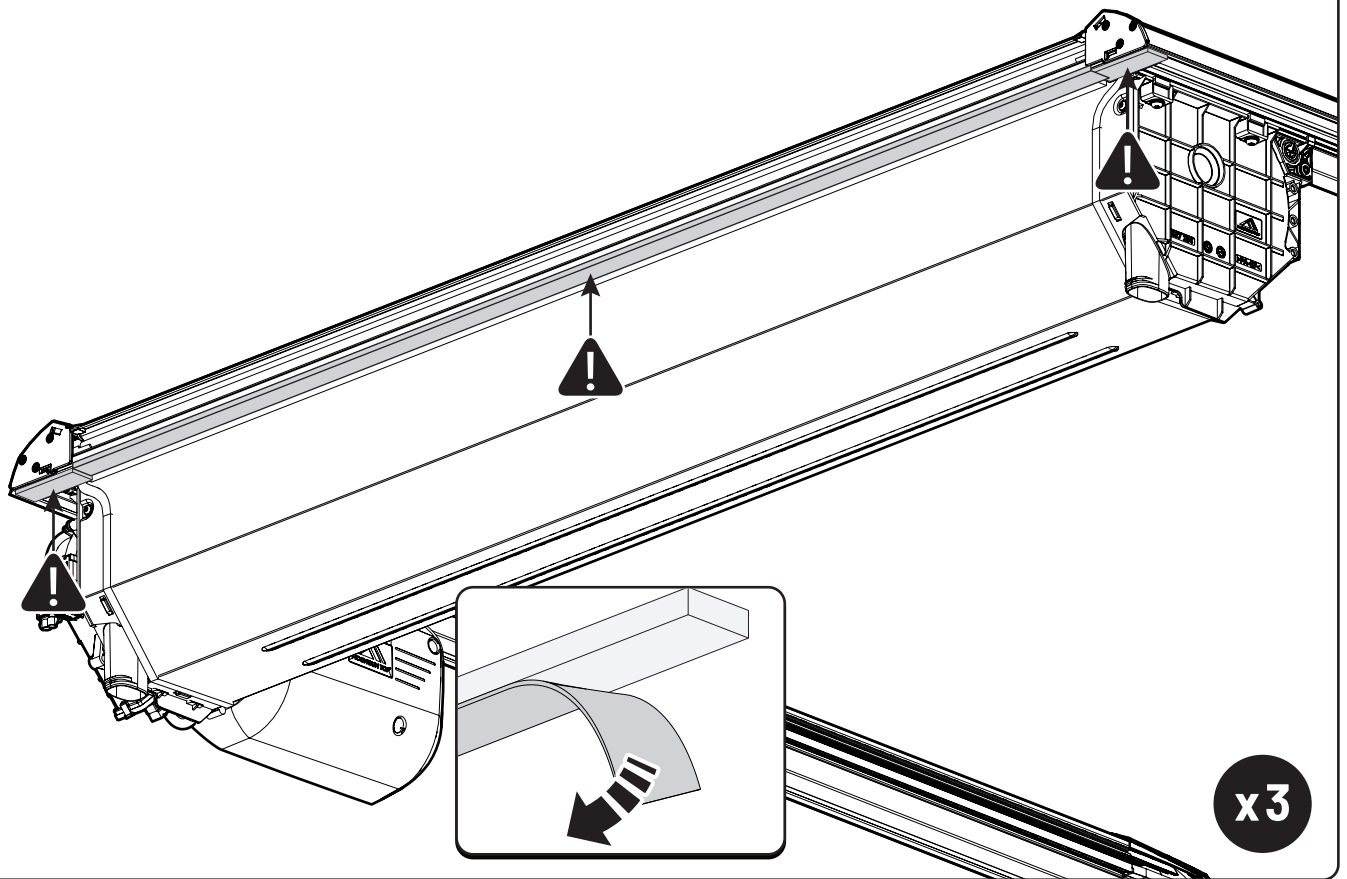
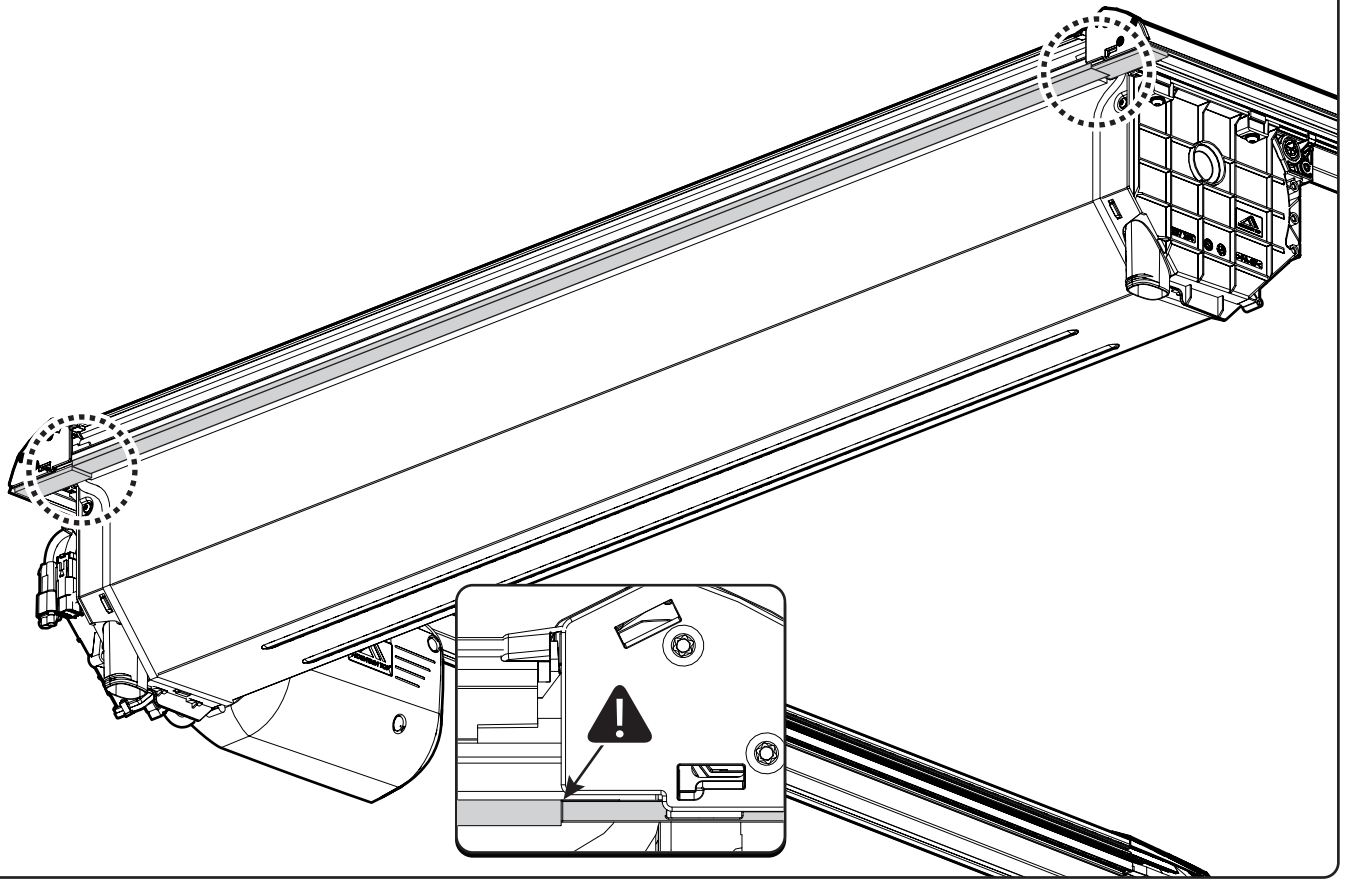


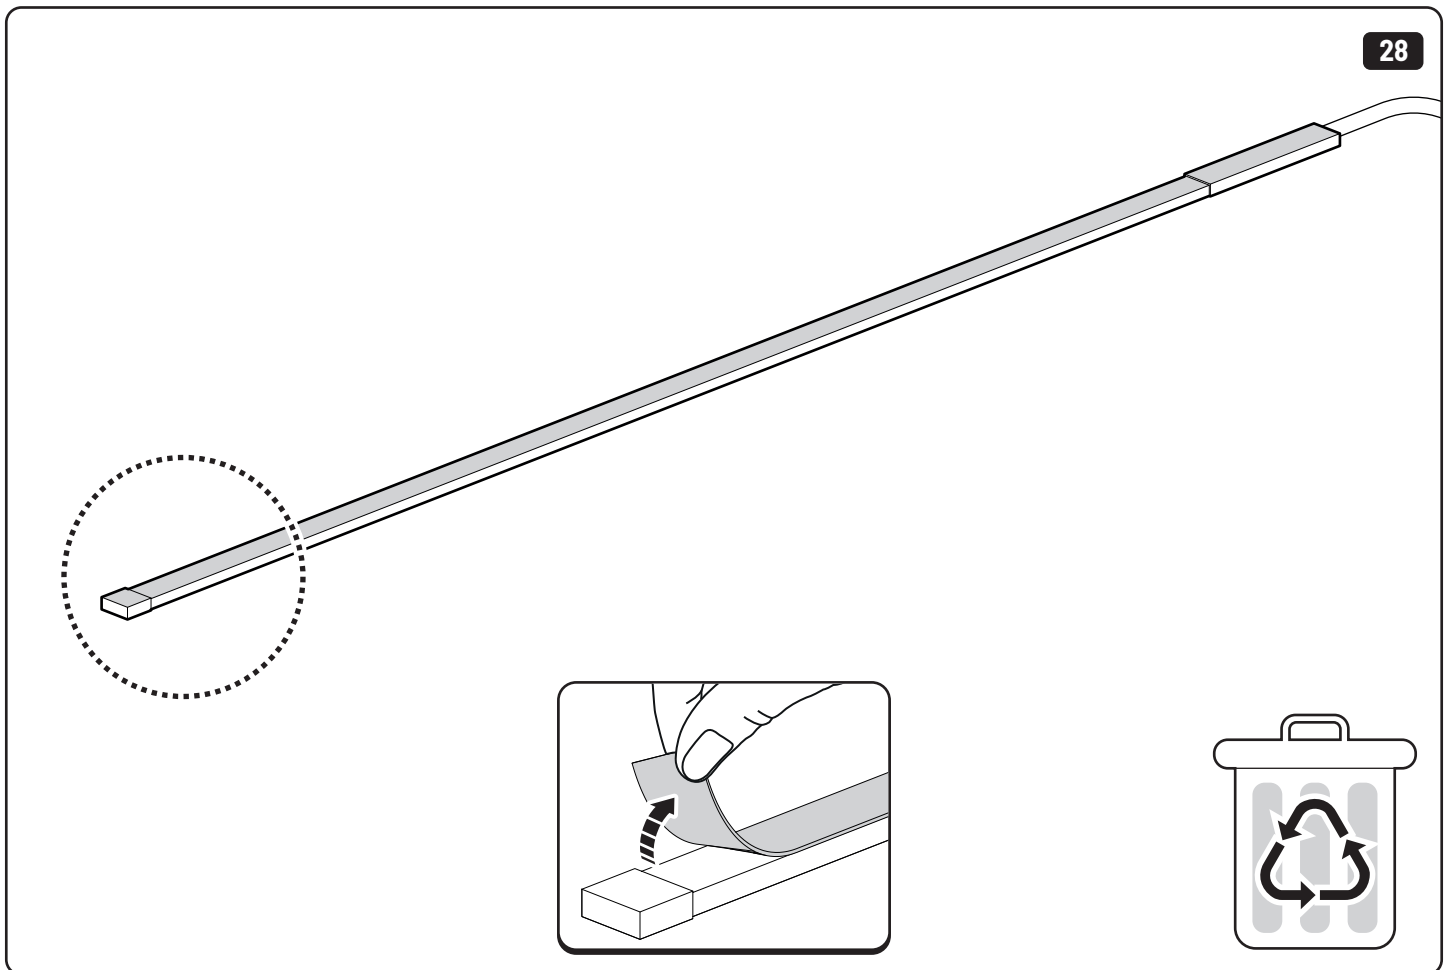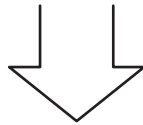
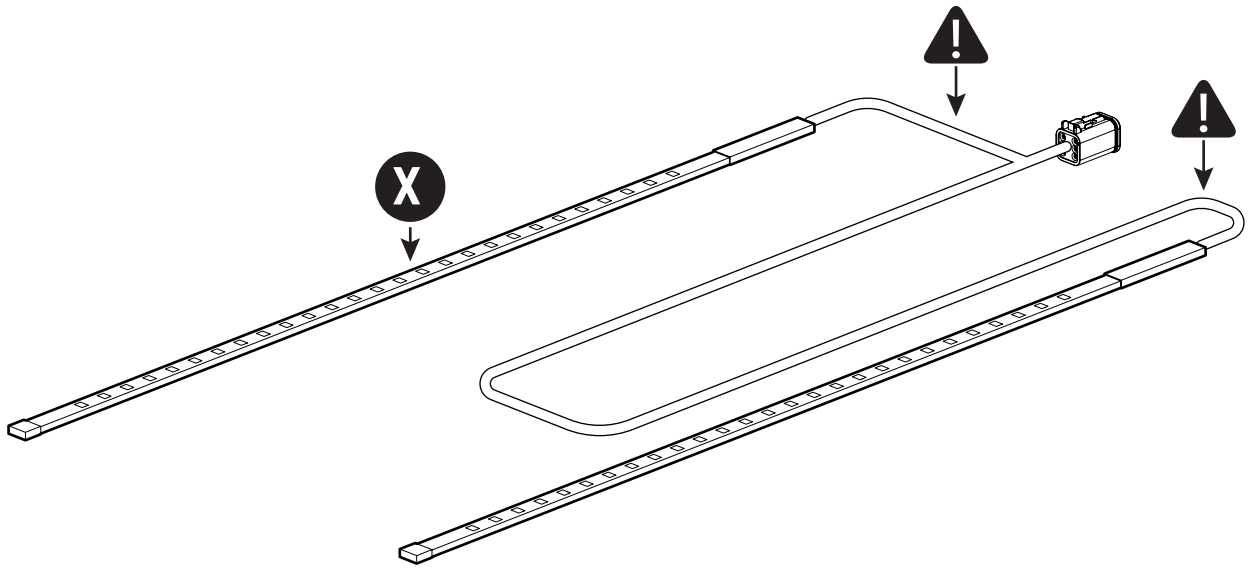


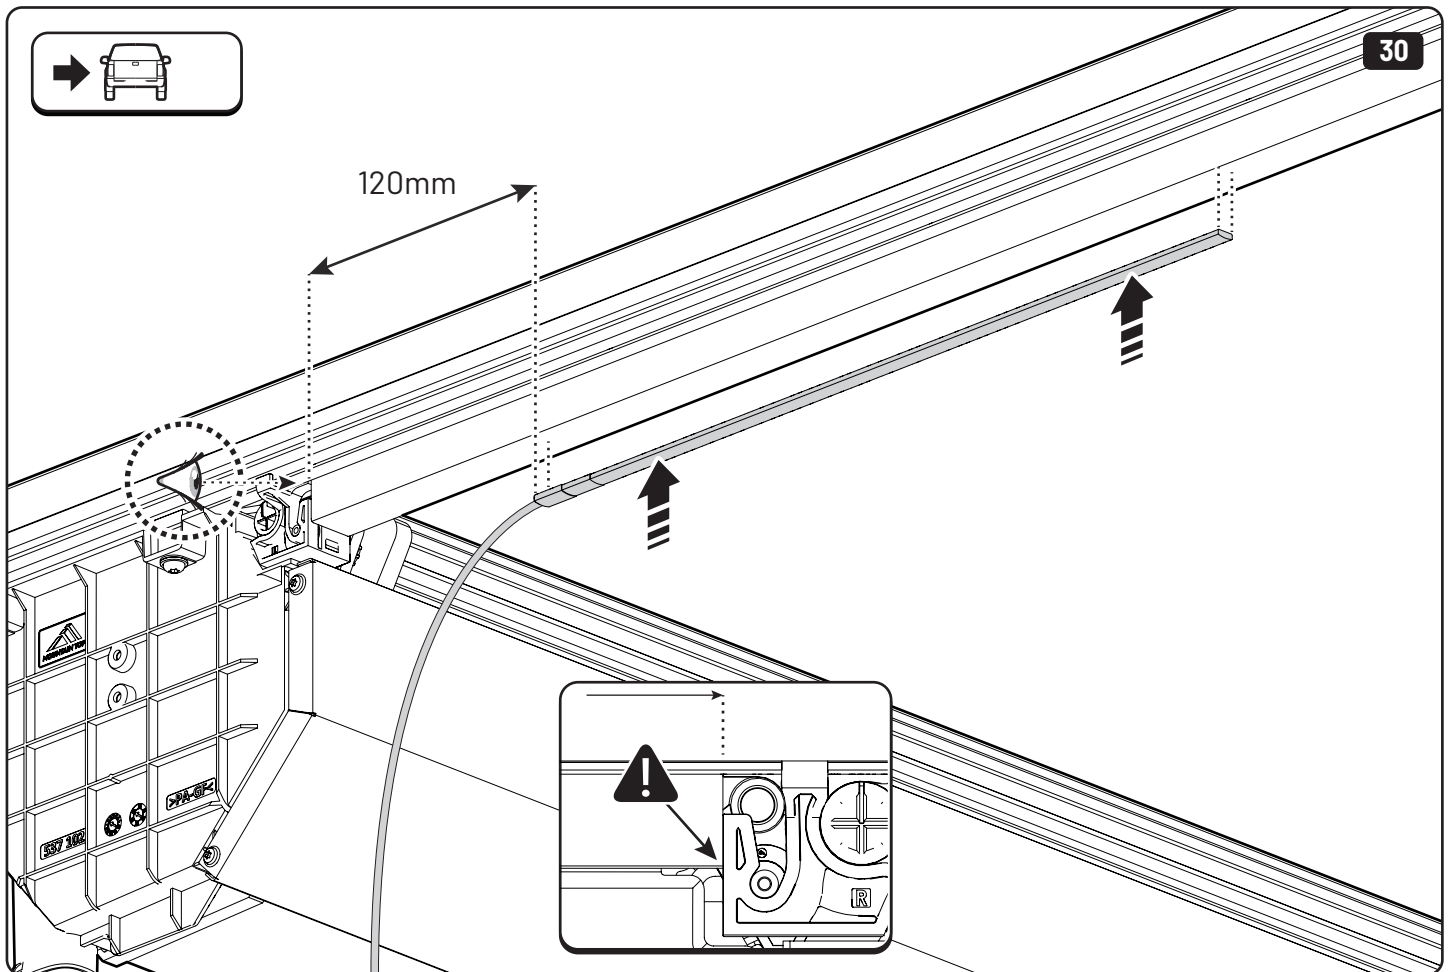
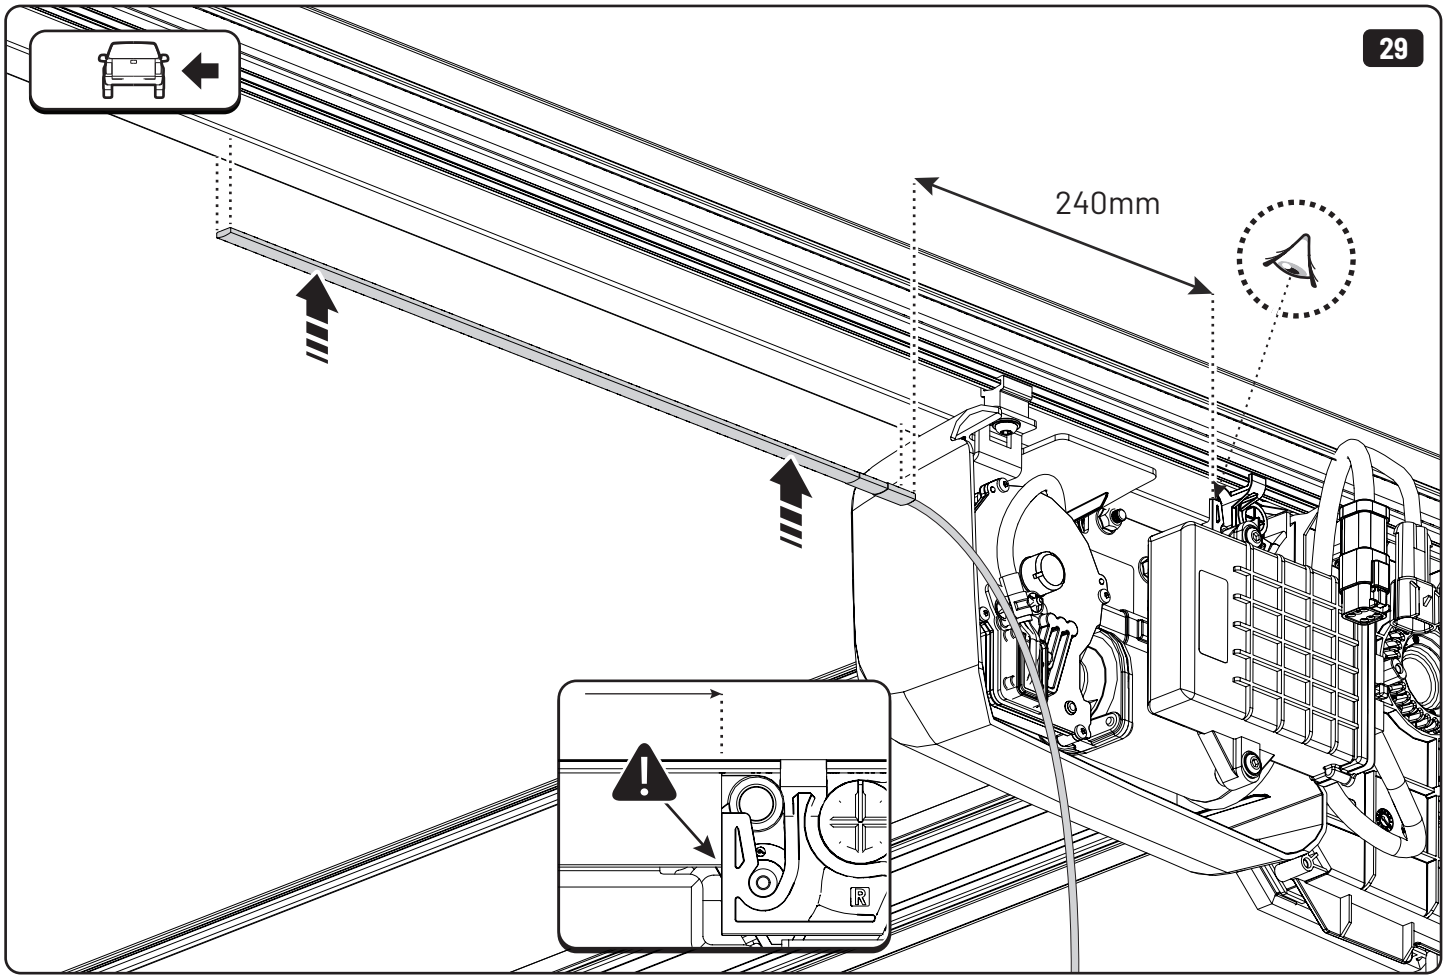


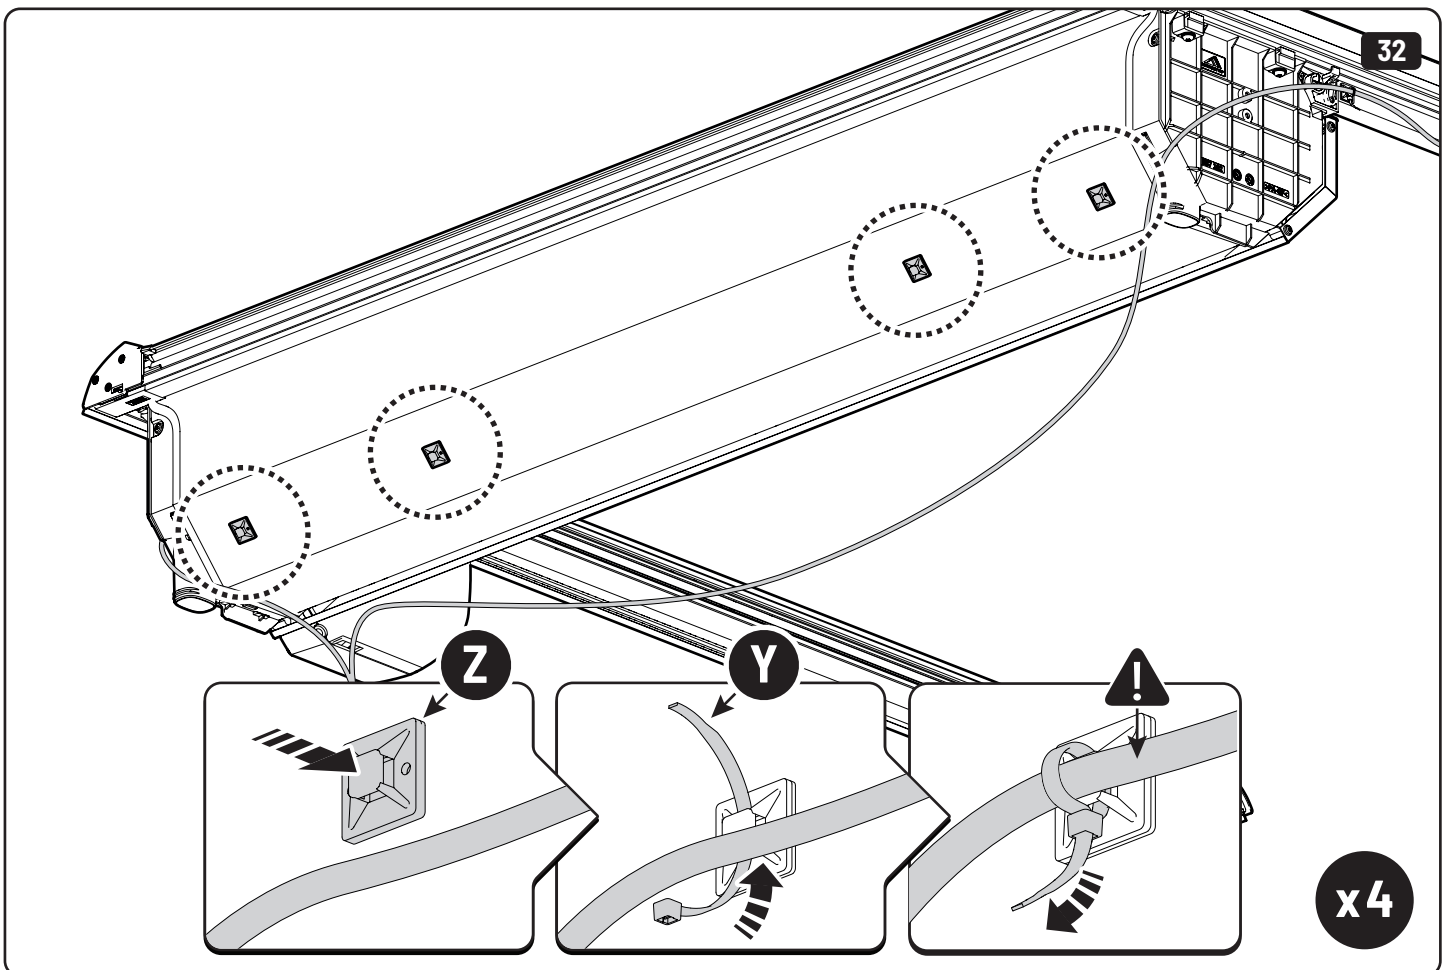
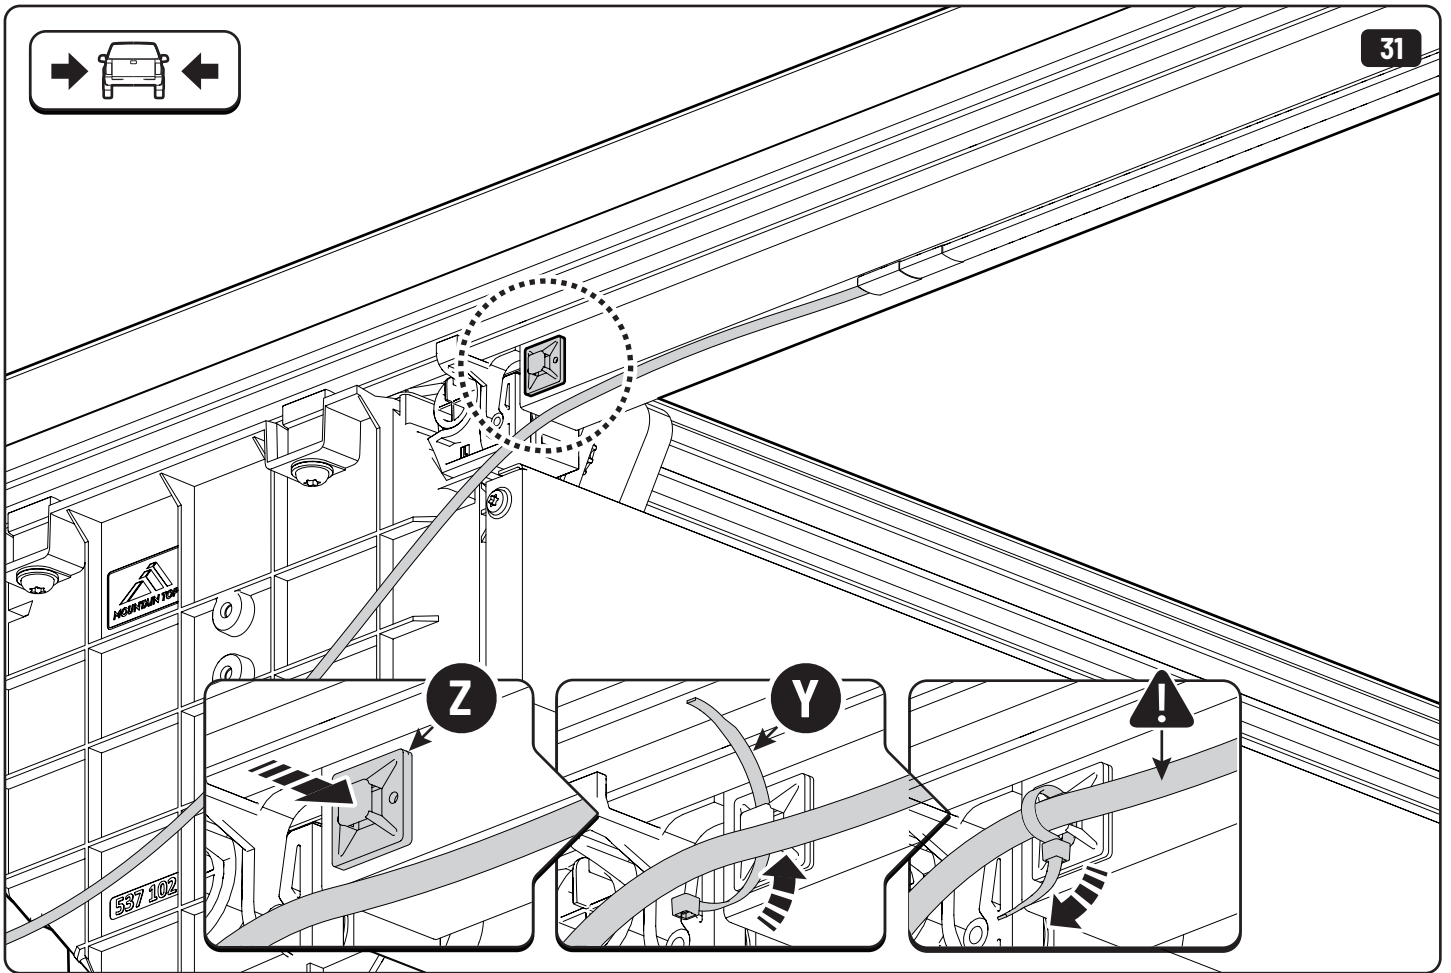


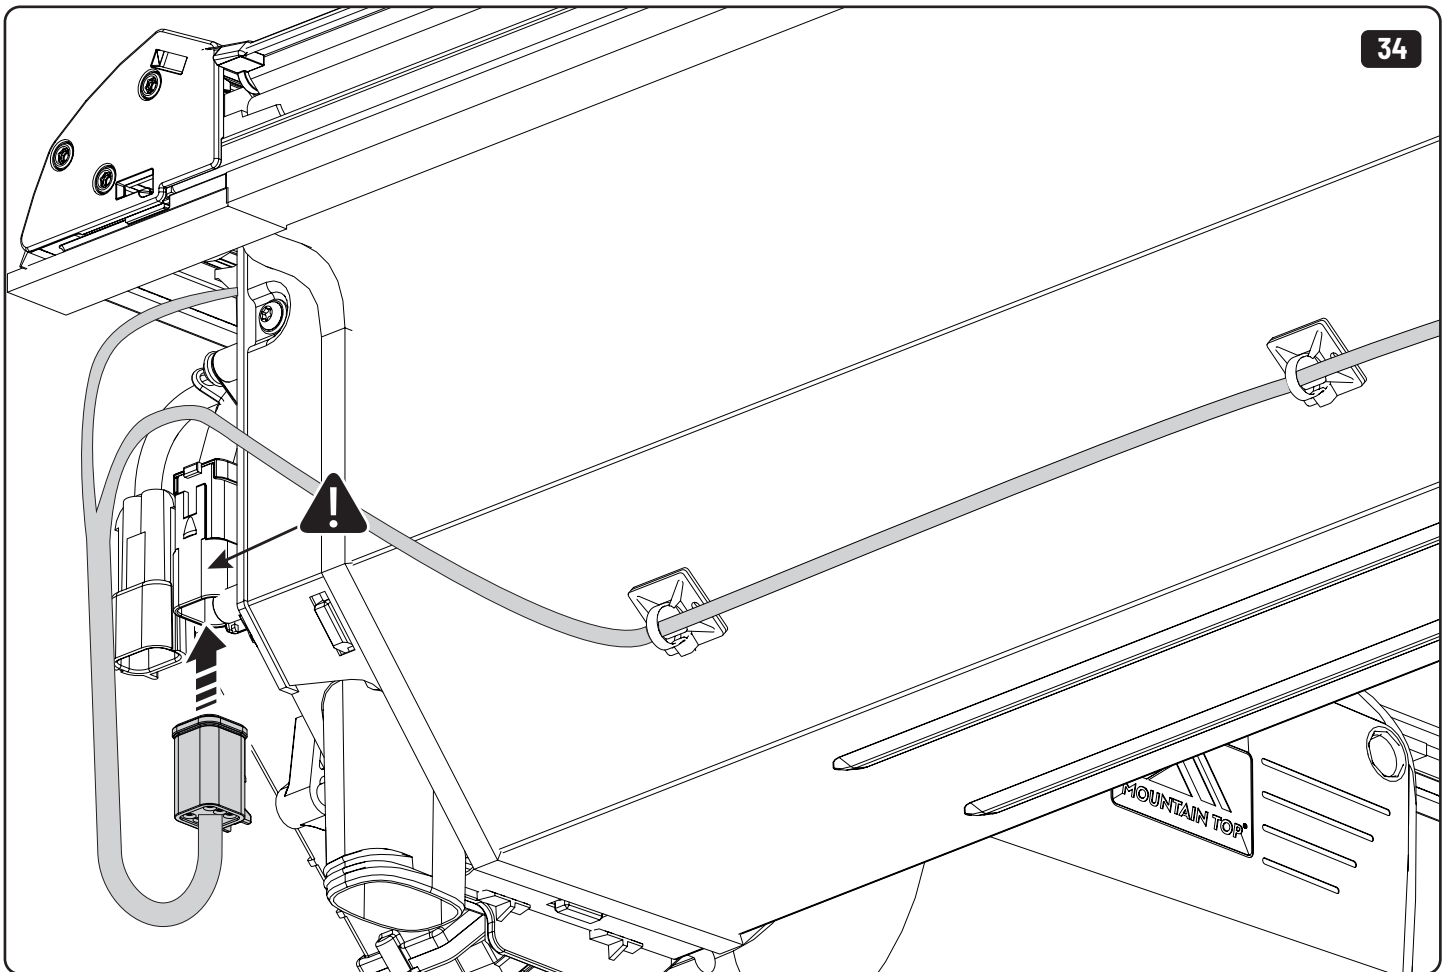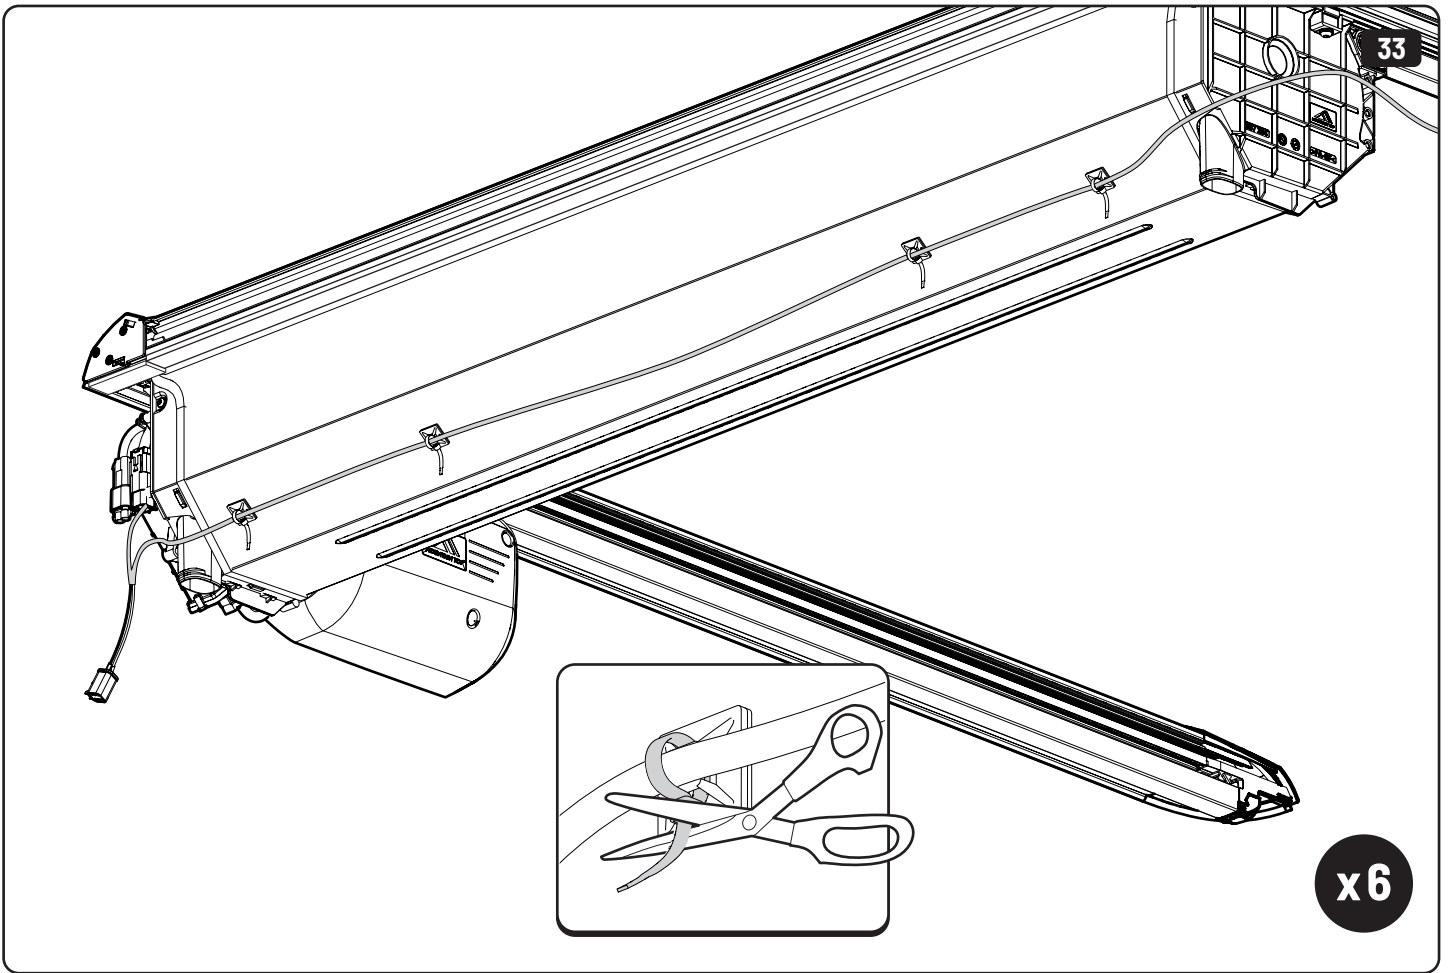


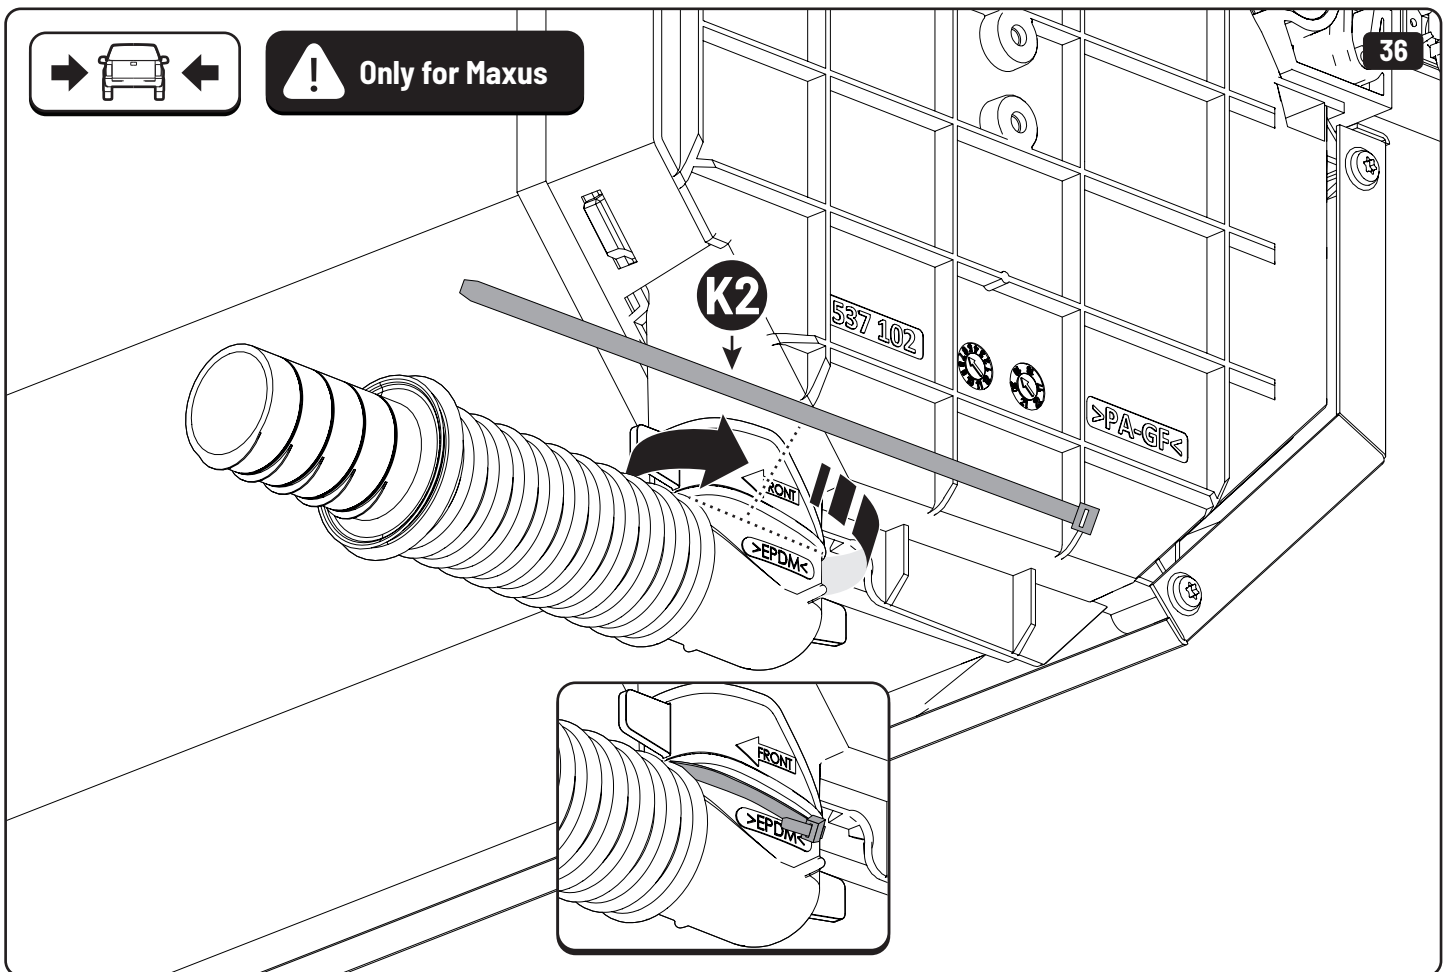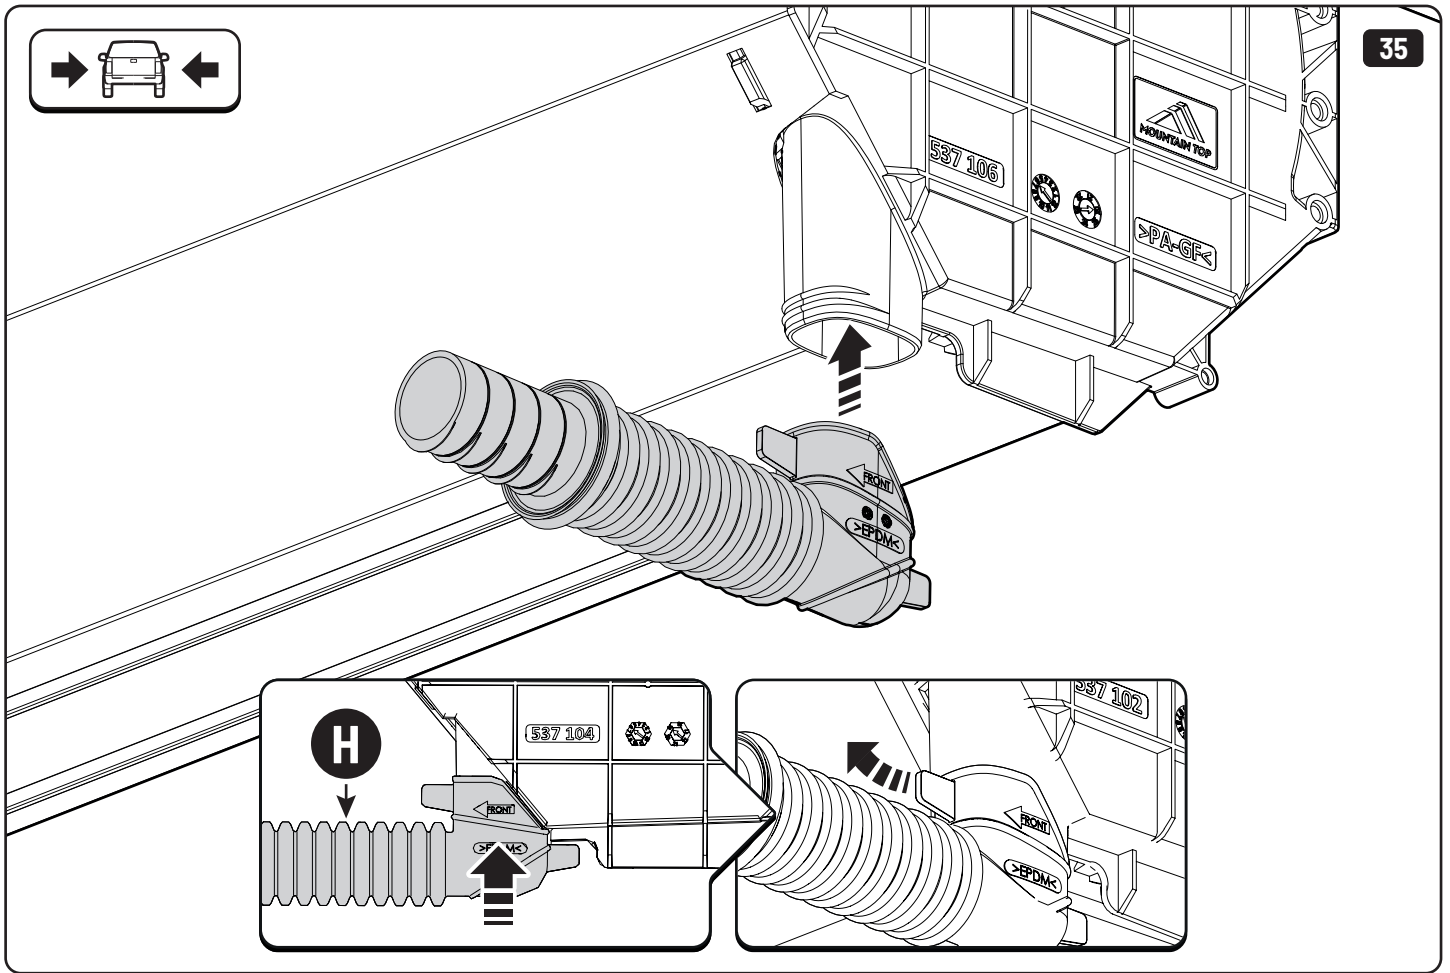


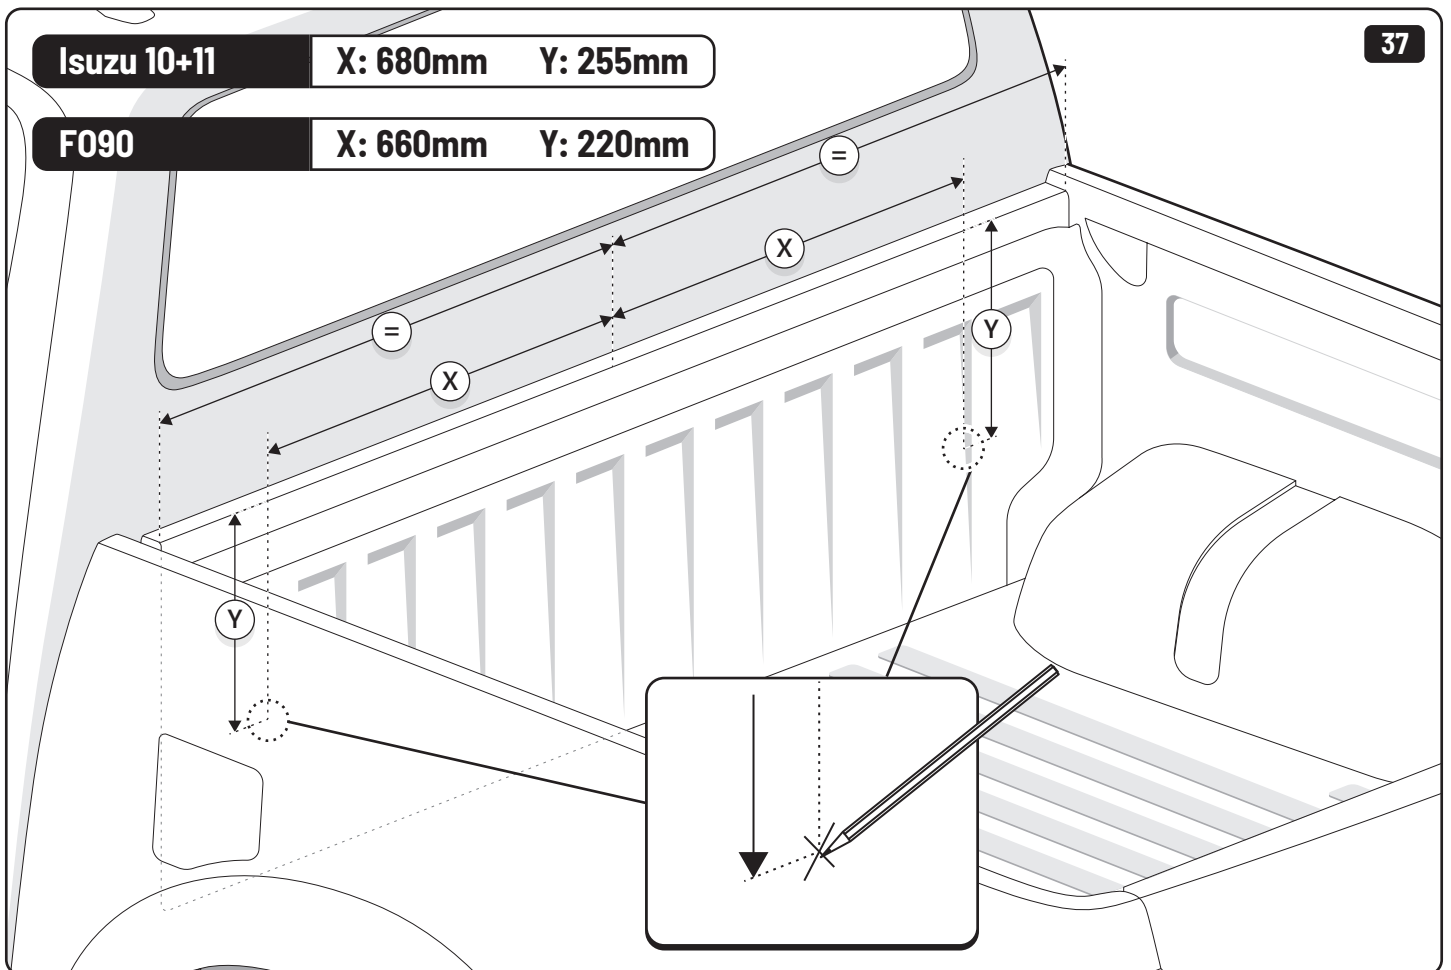
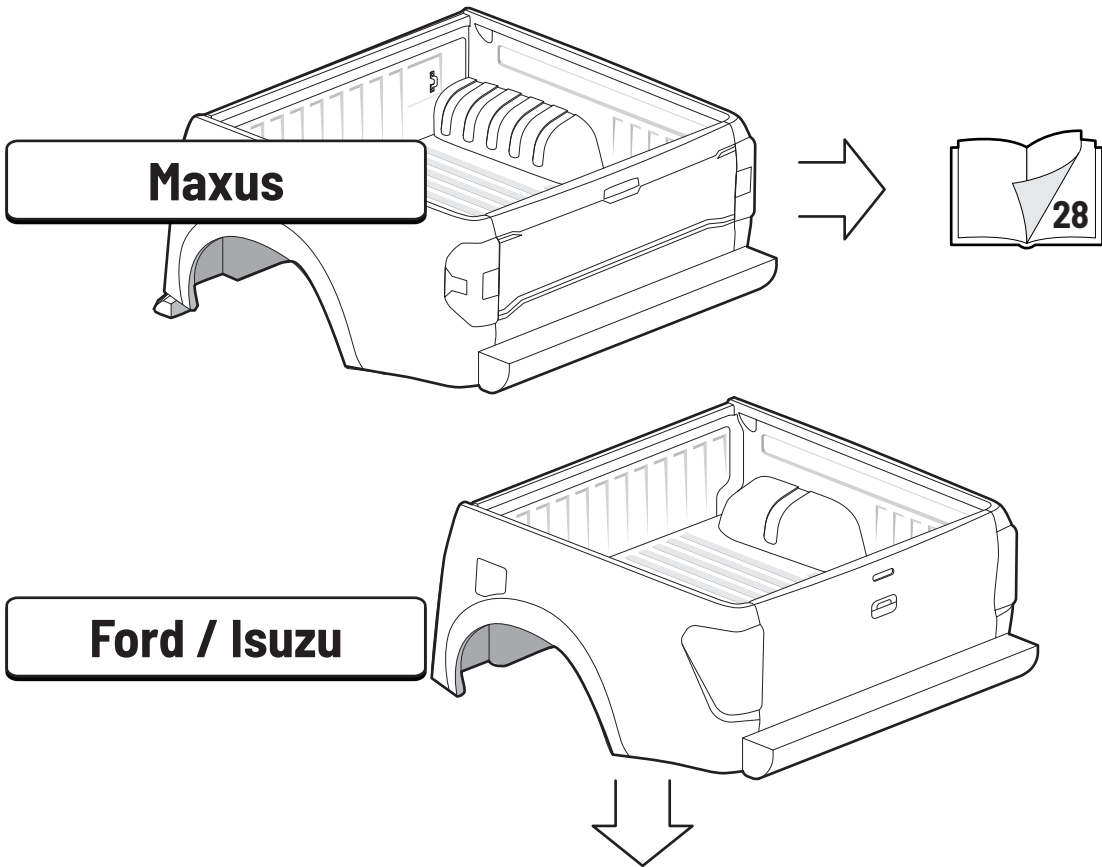






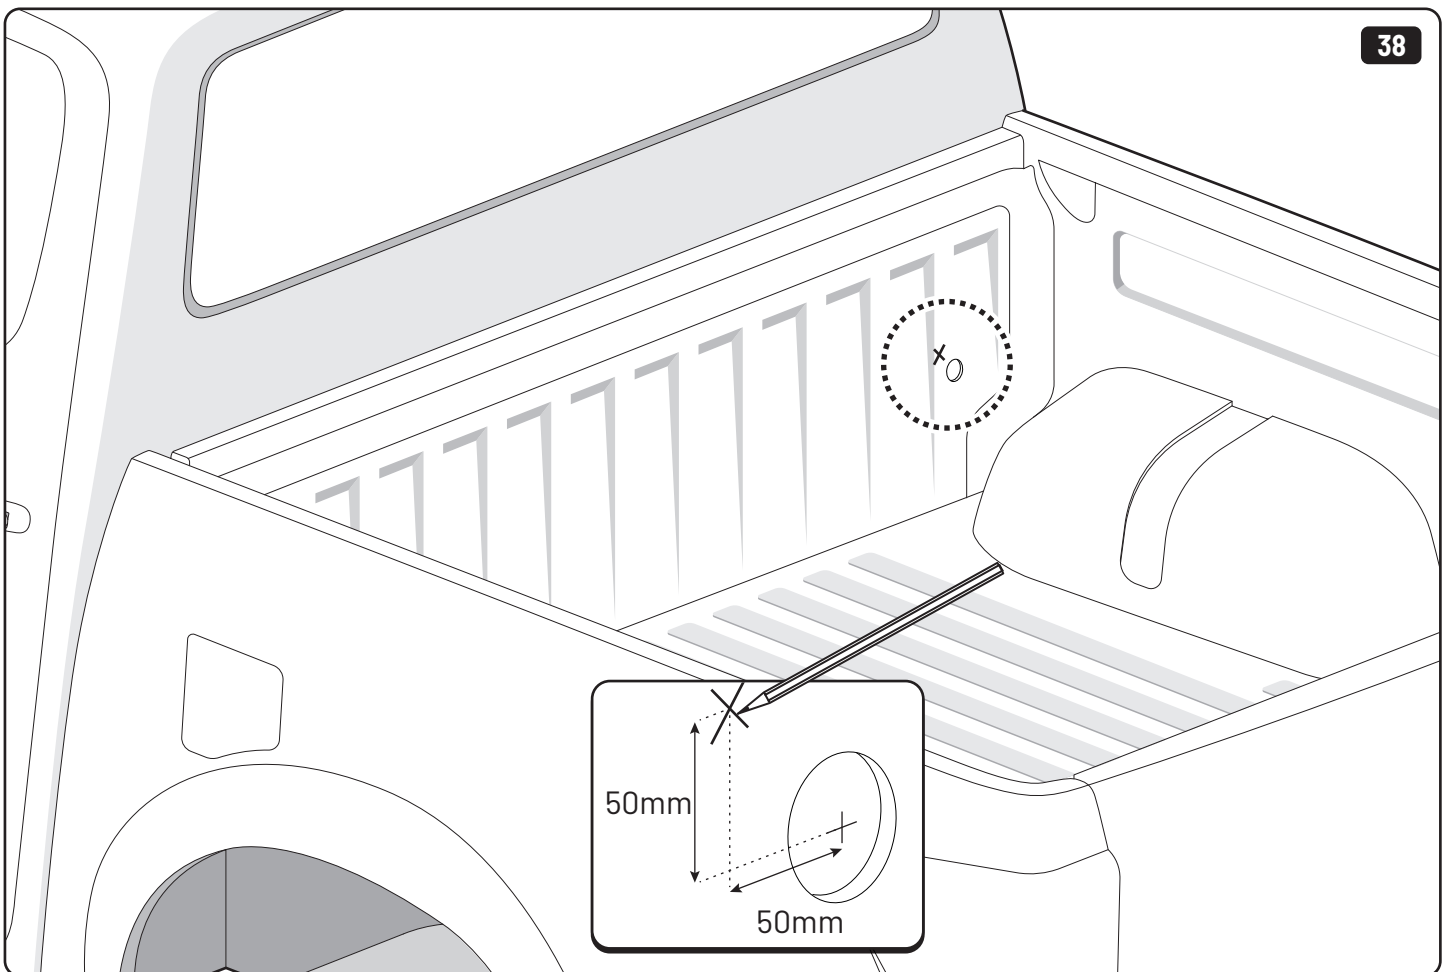
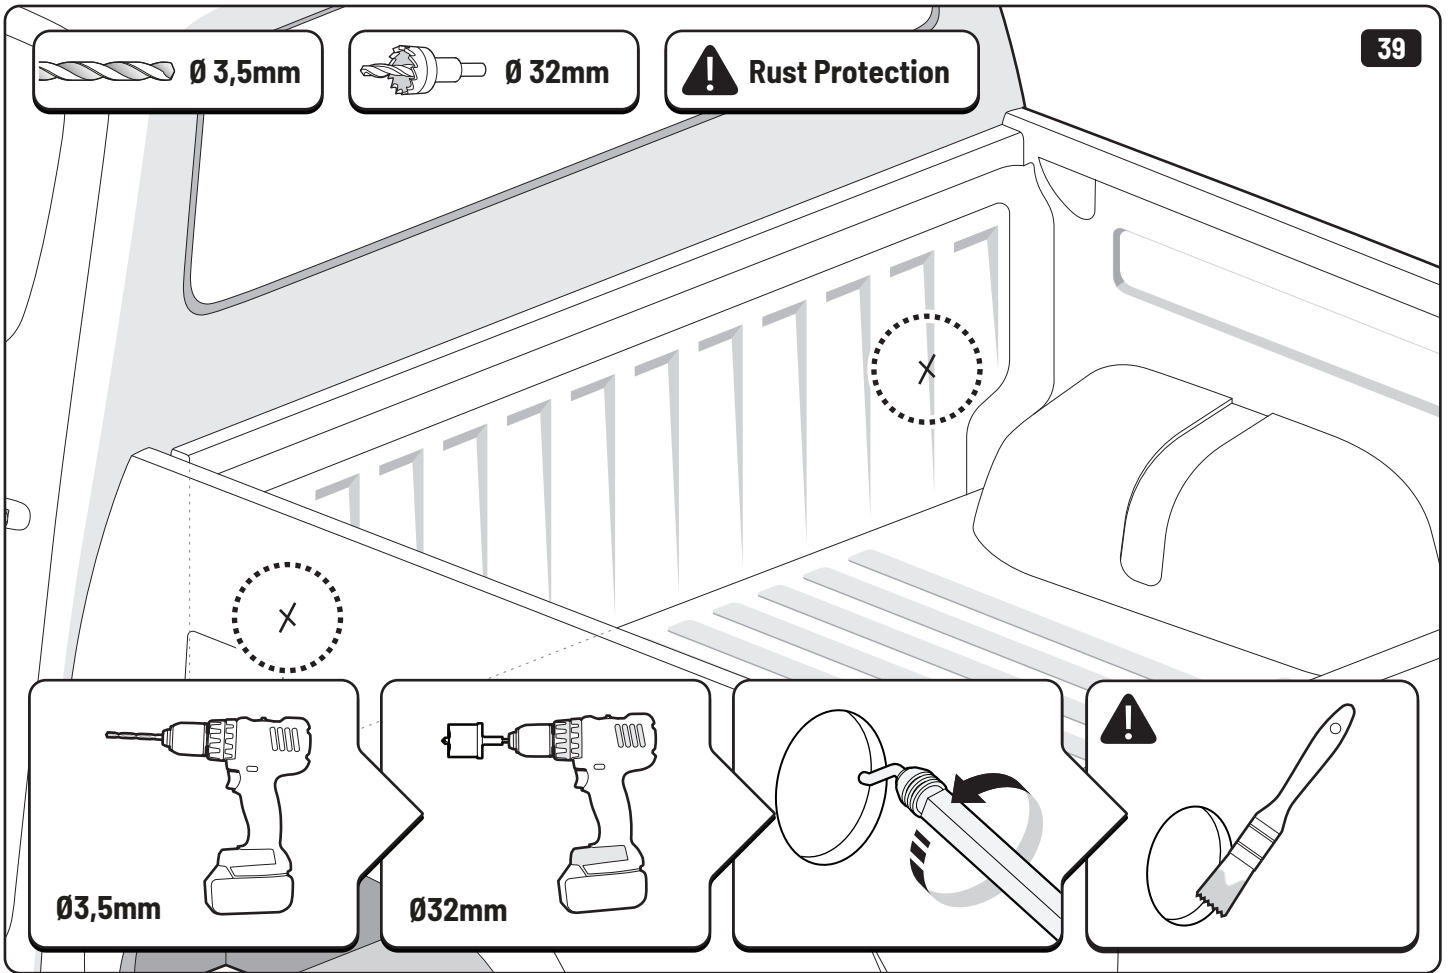


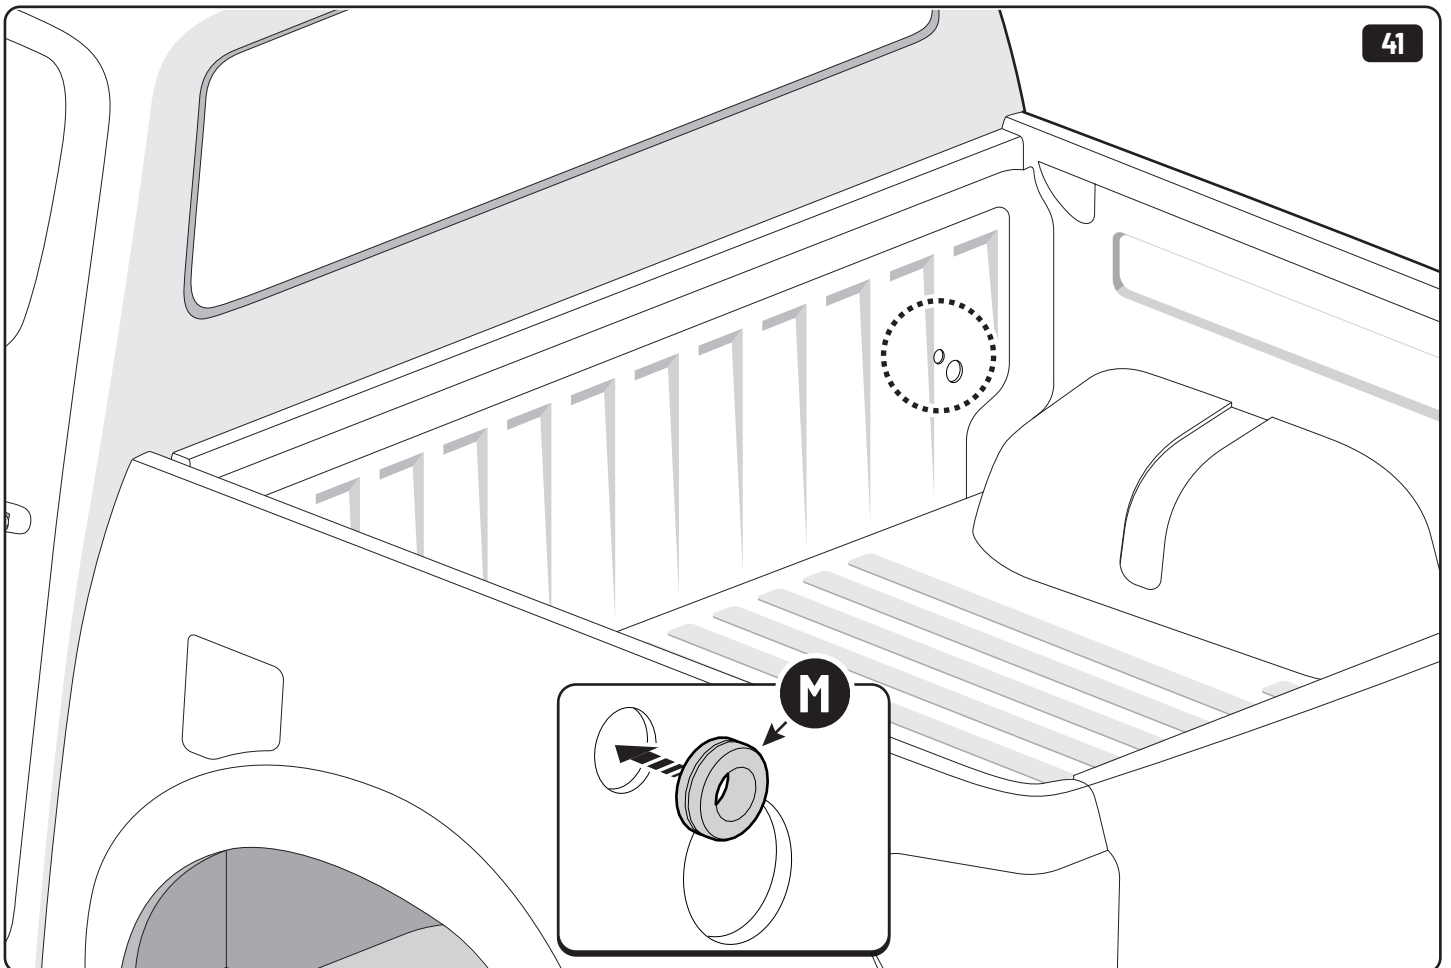
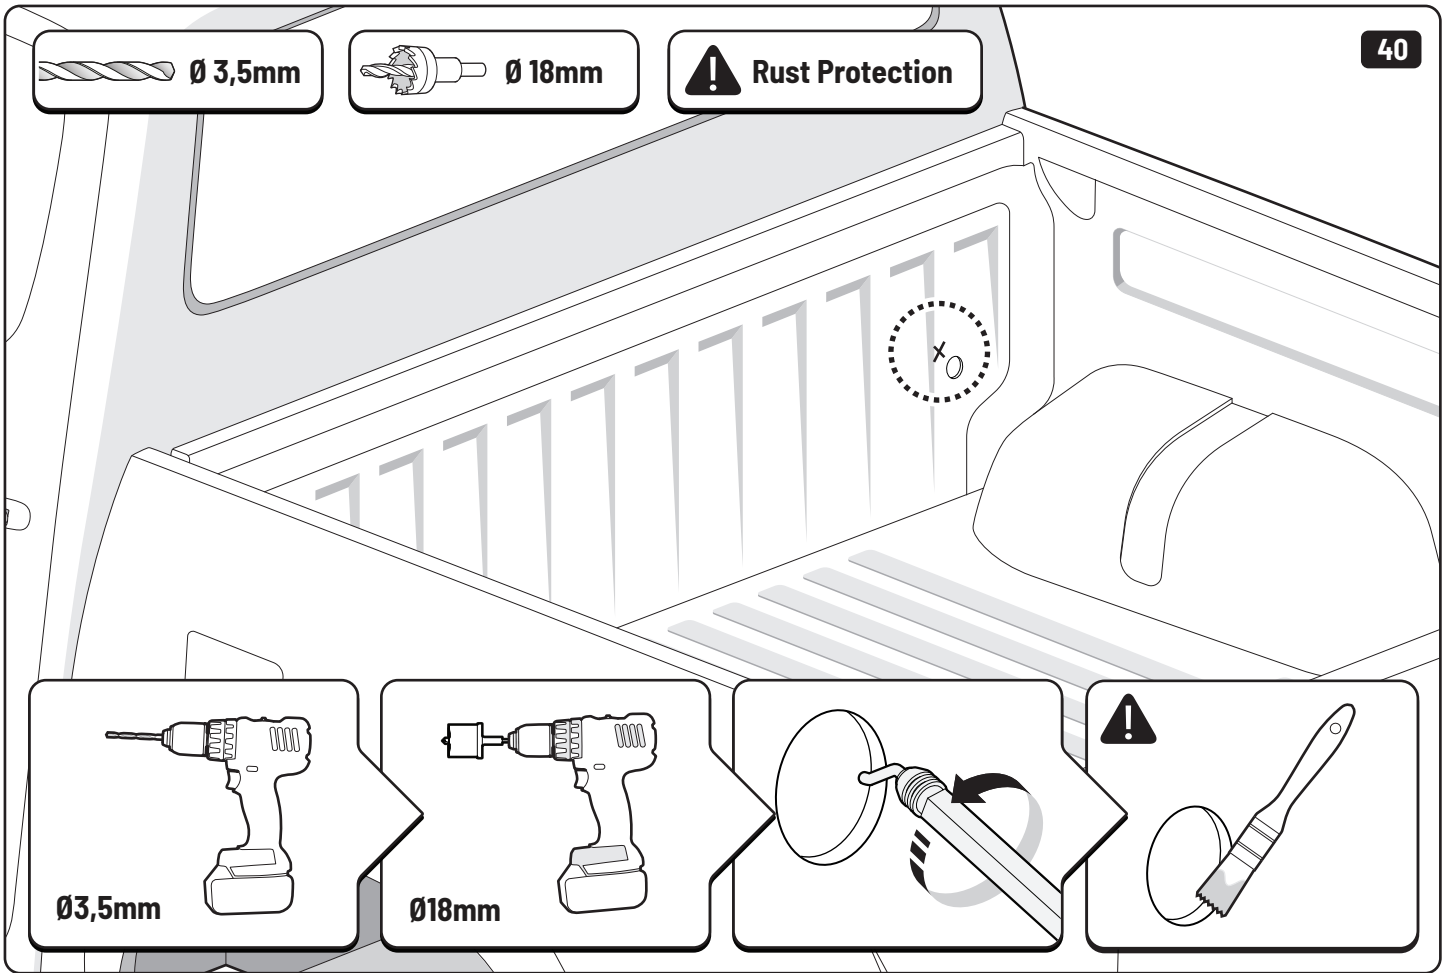


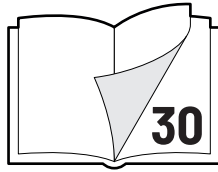



Maxus

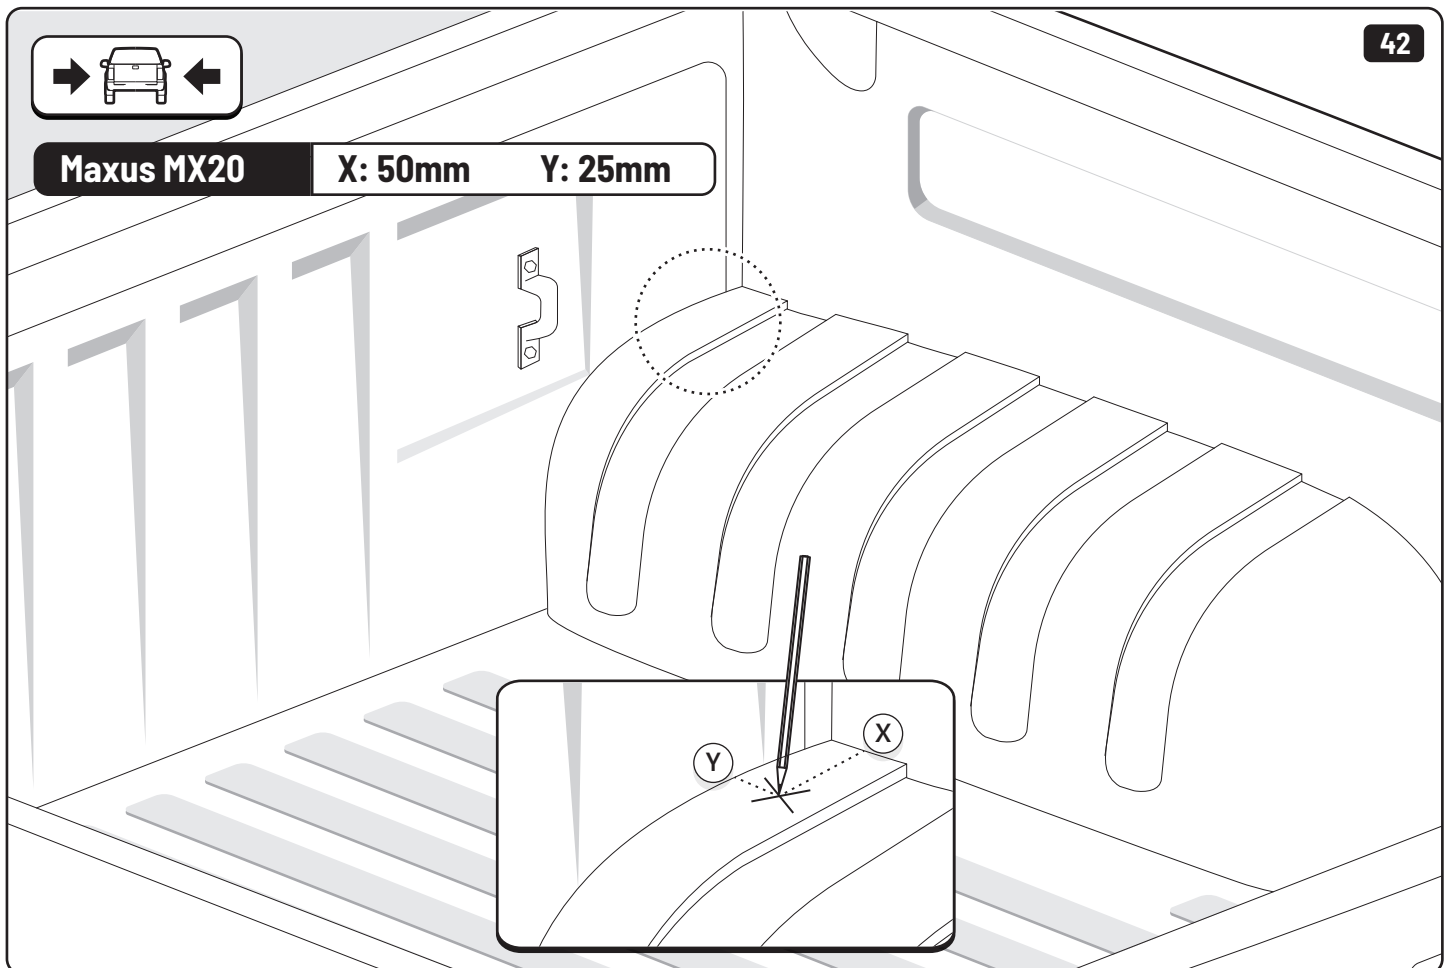
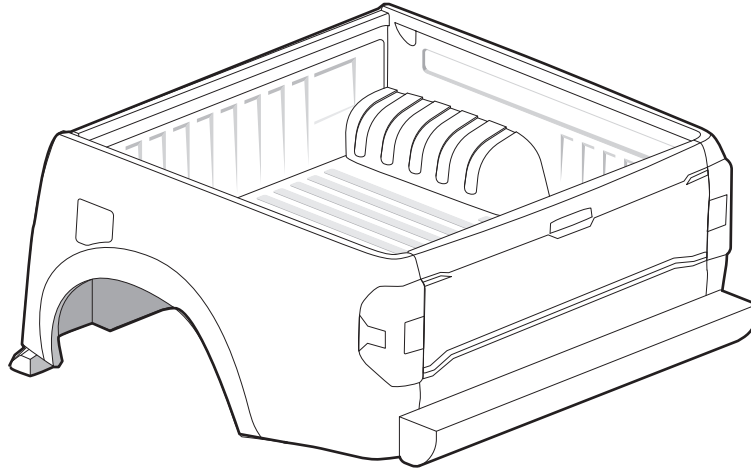


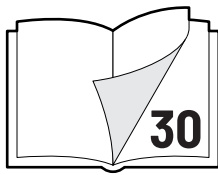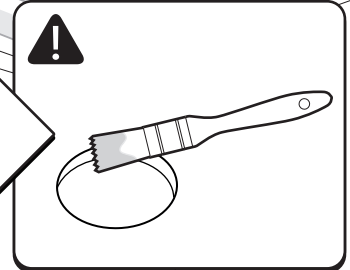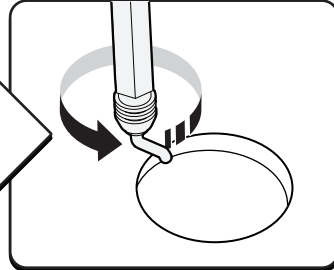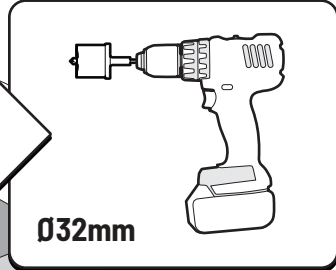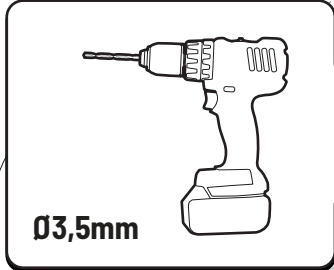
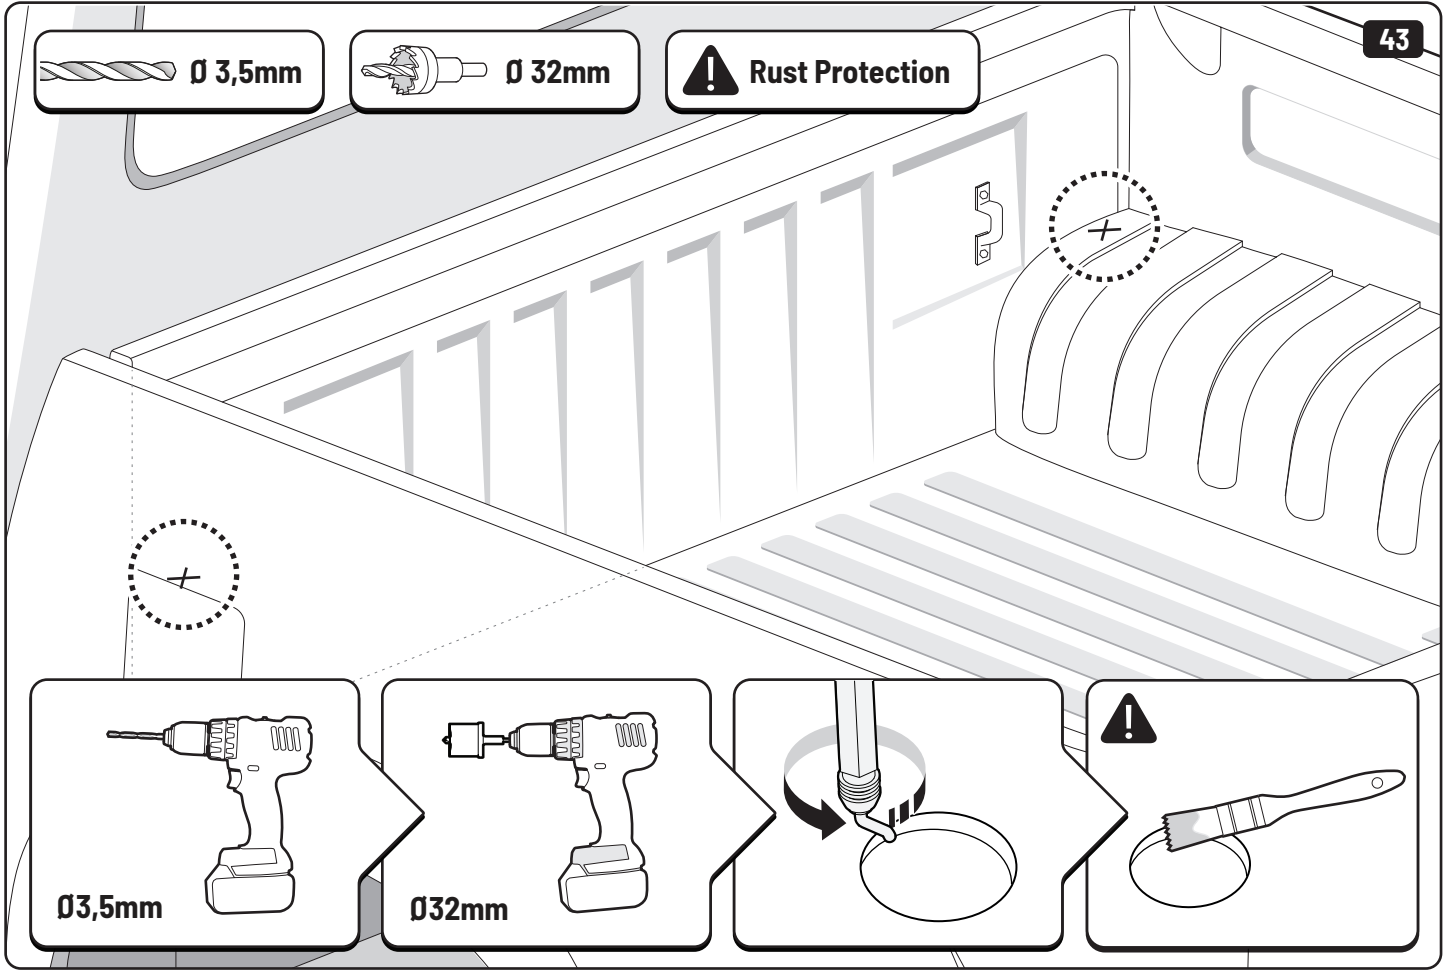



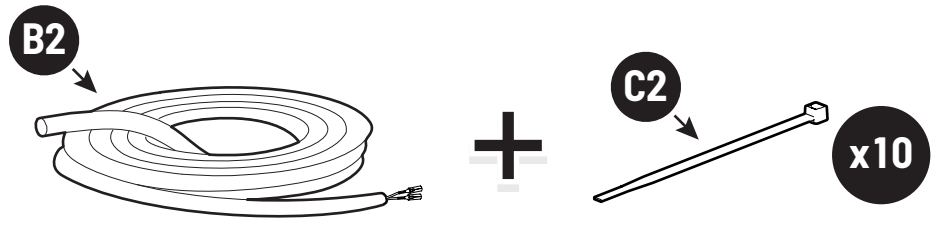
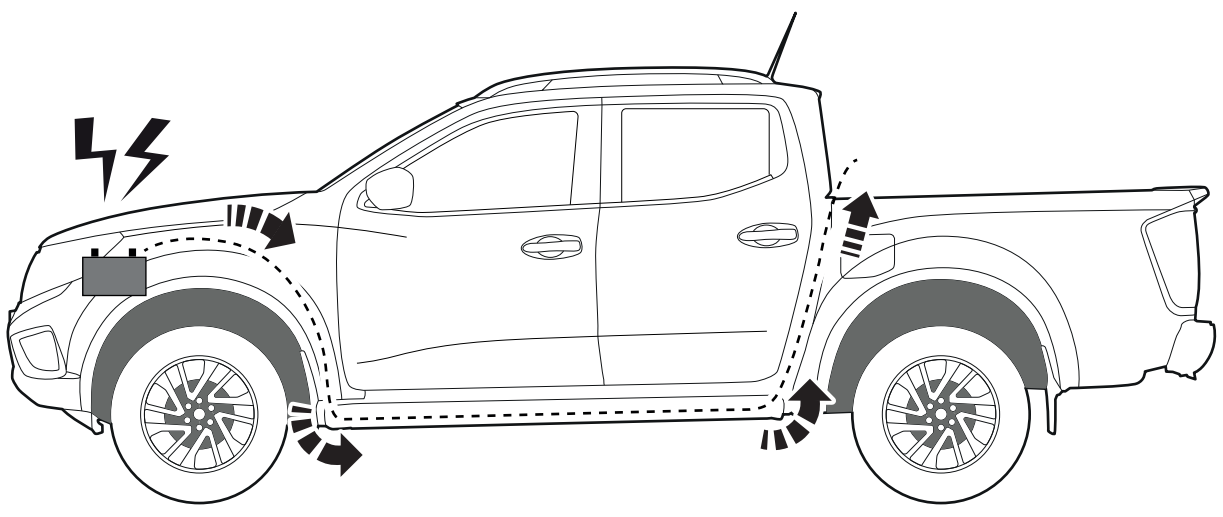




Only to be installed by authorized personnel

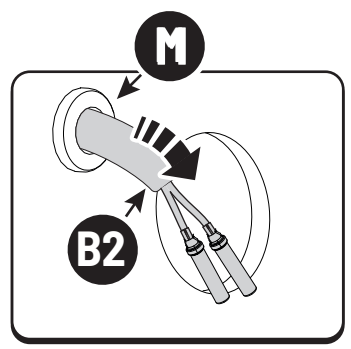
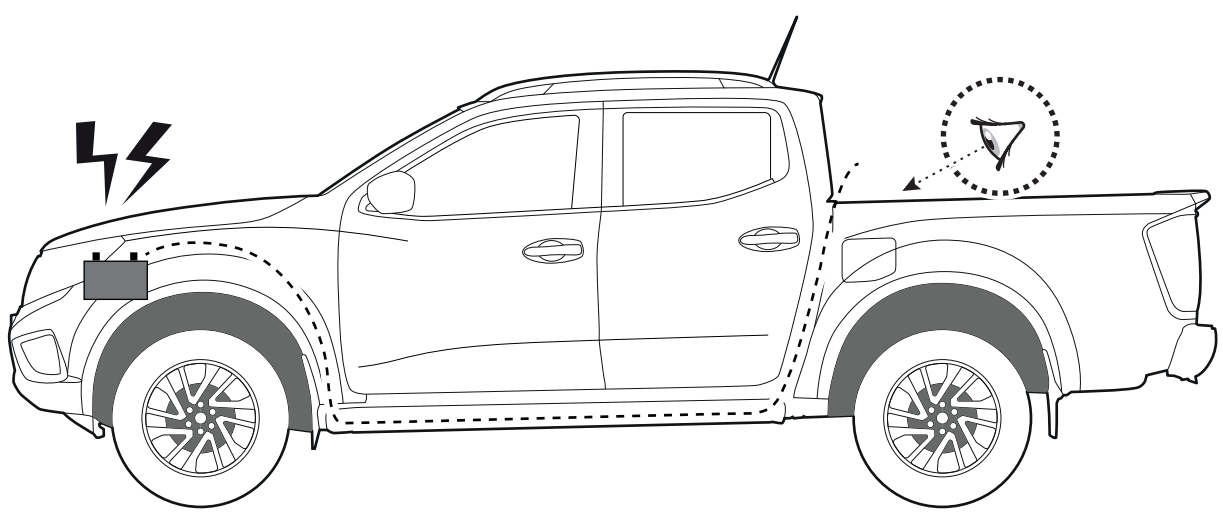


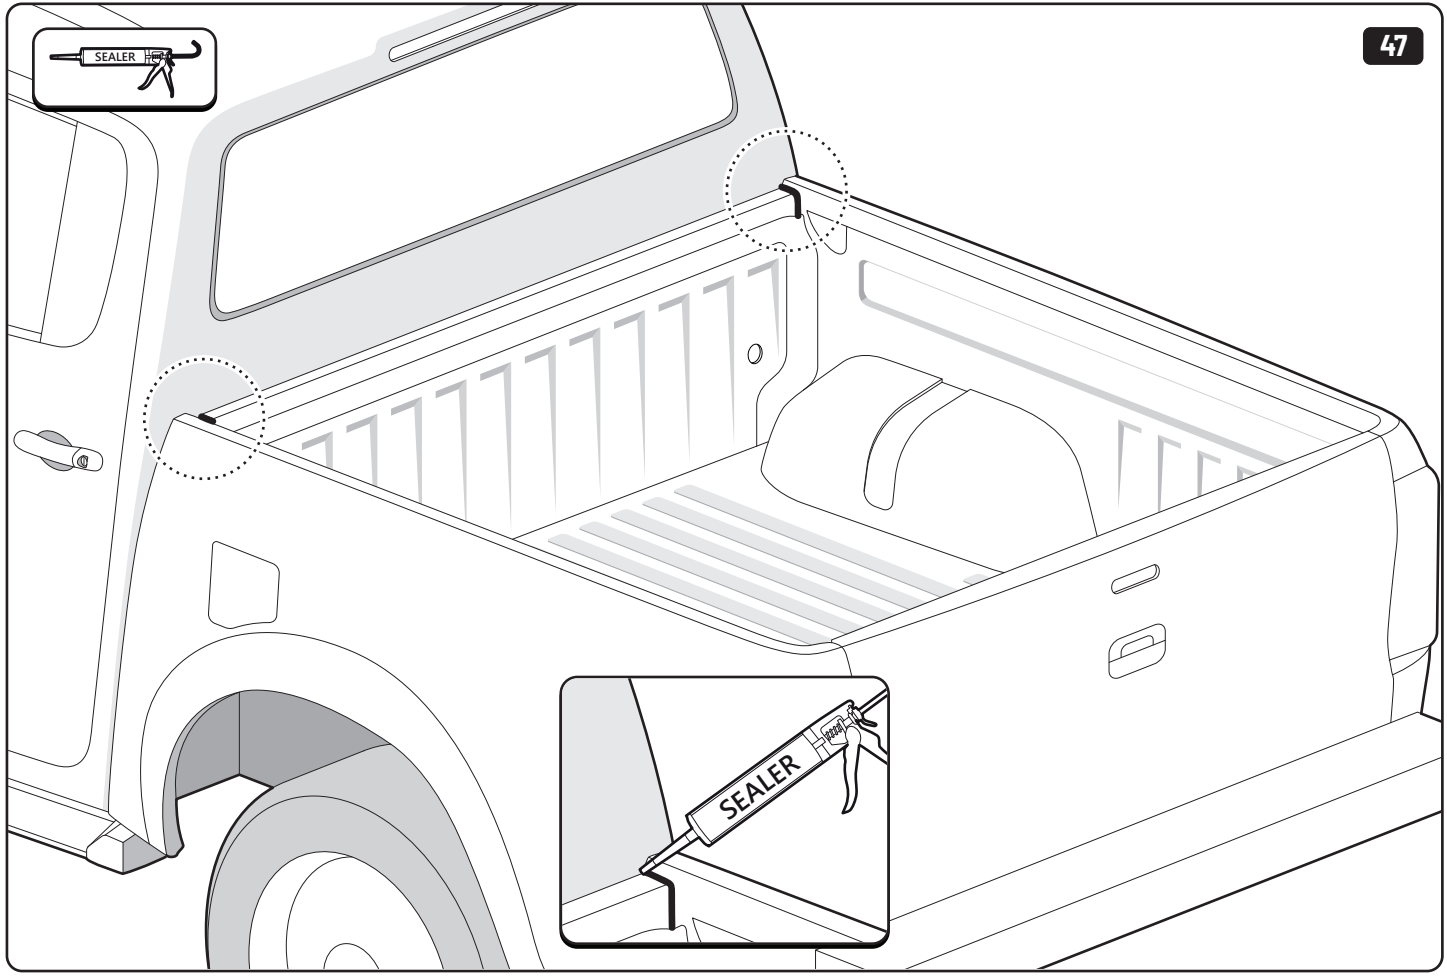
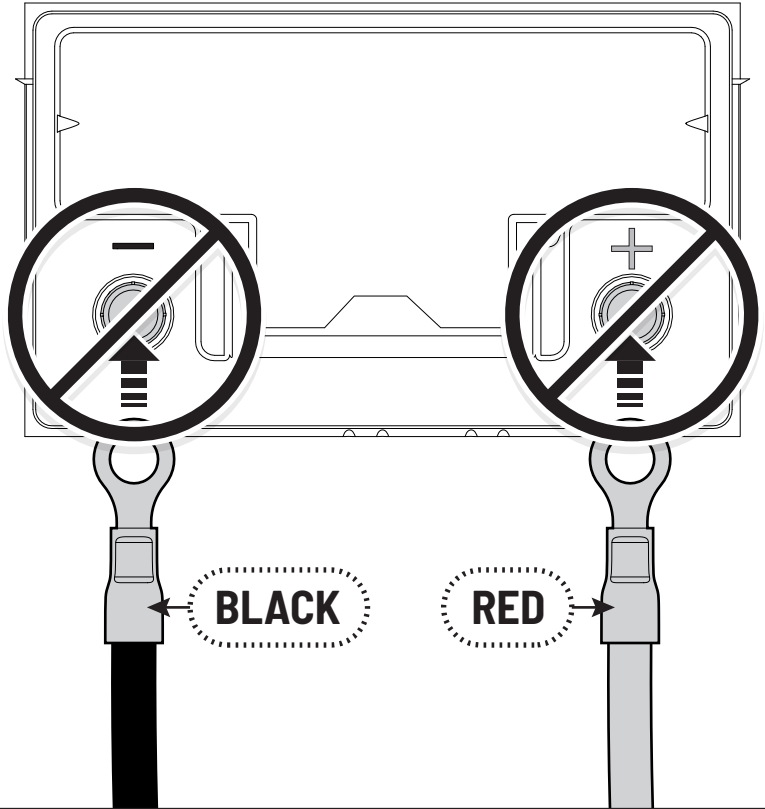


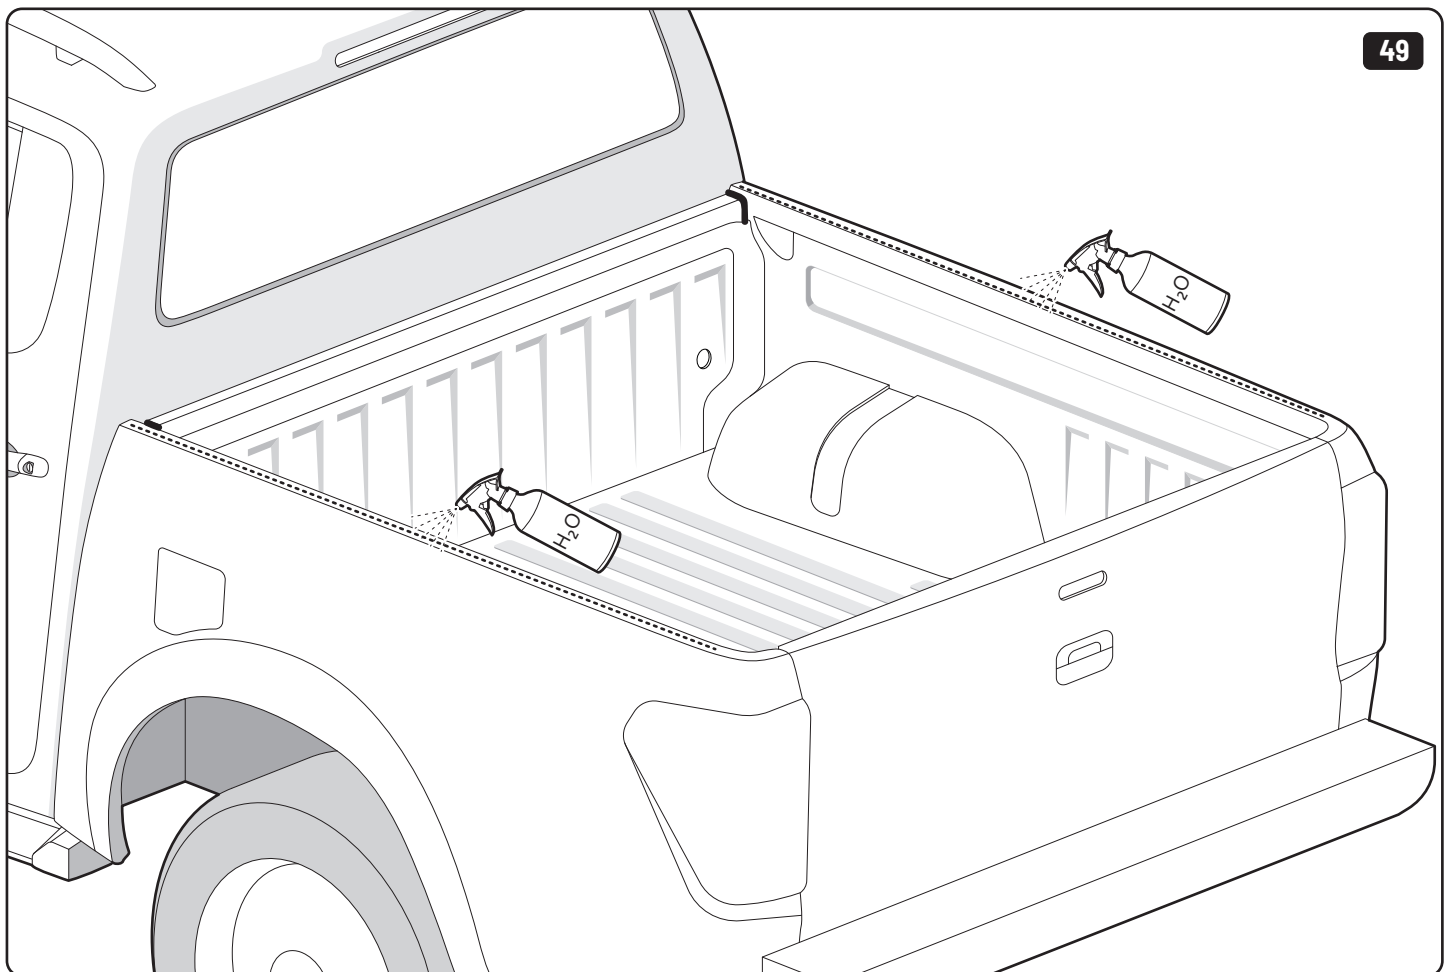
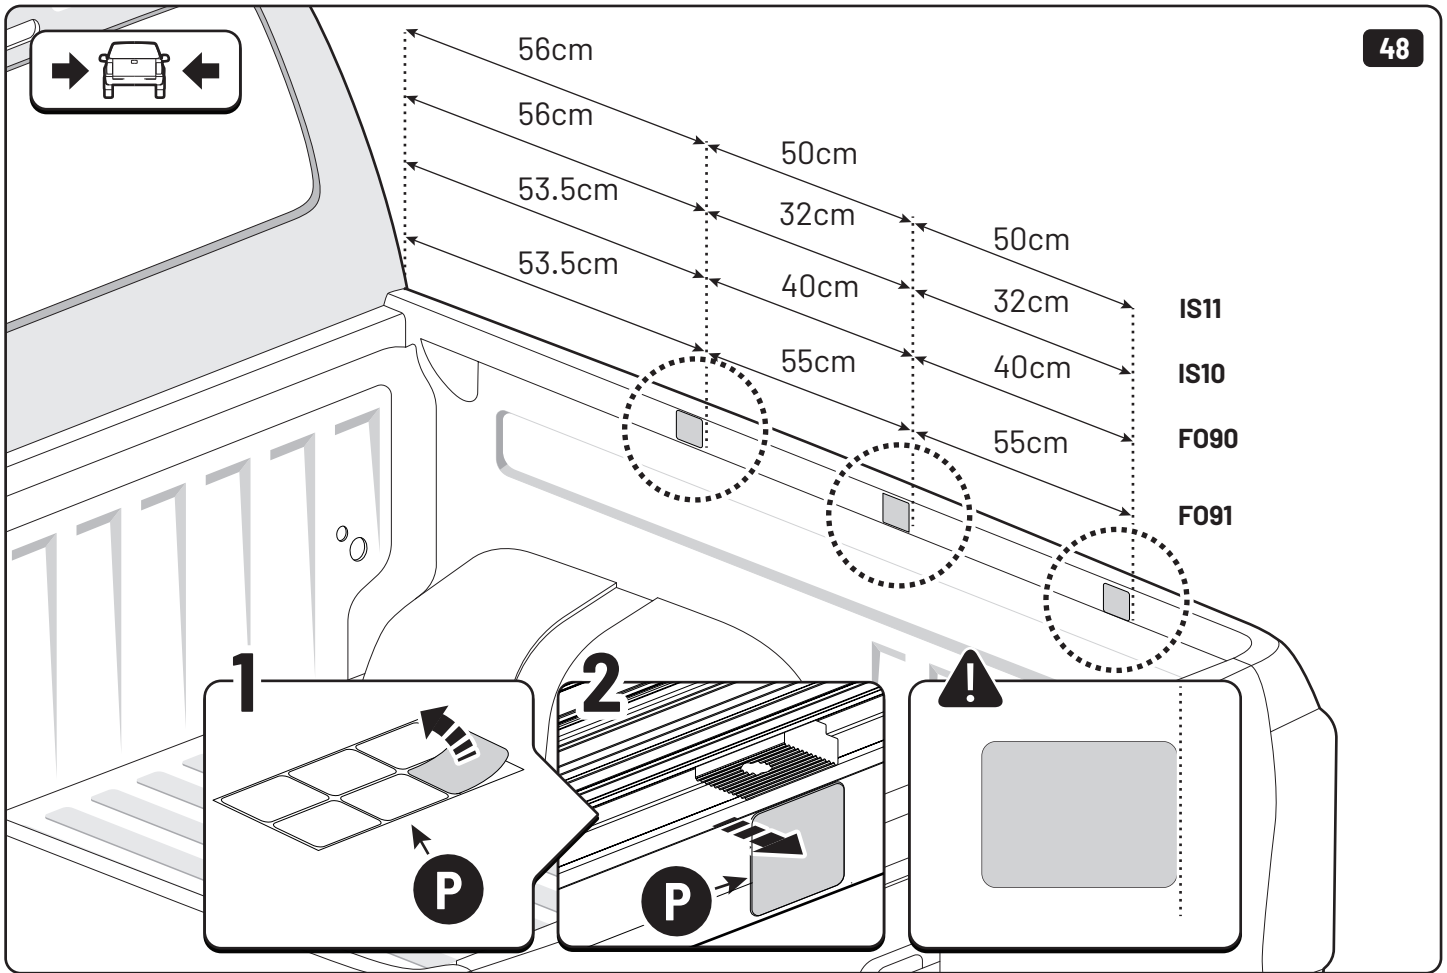


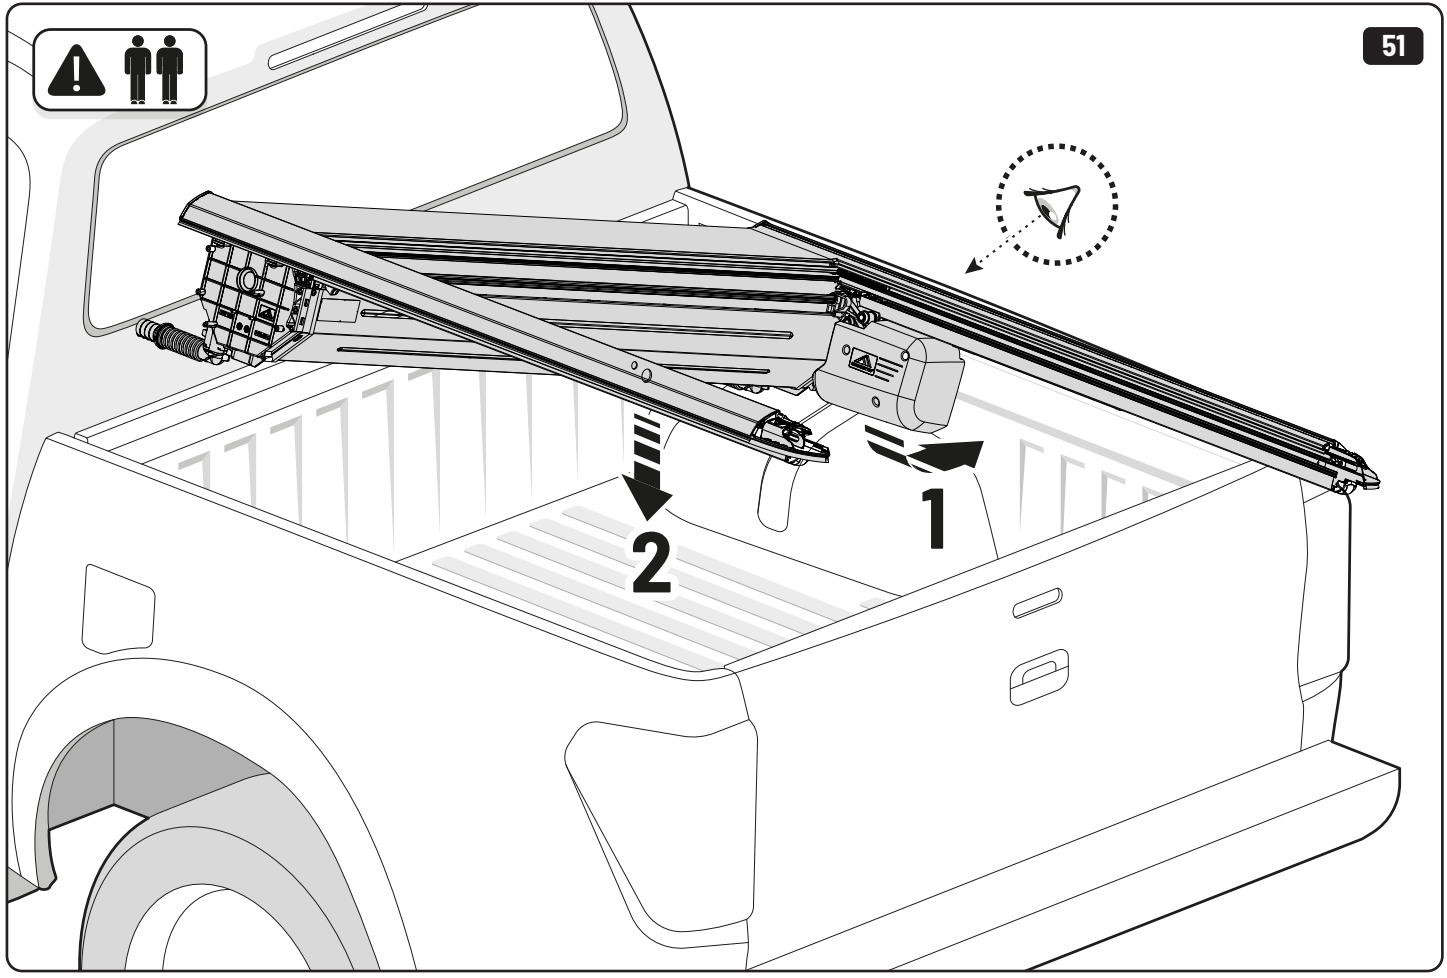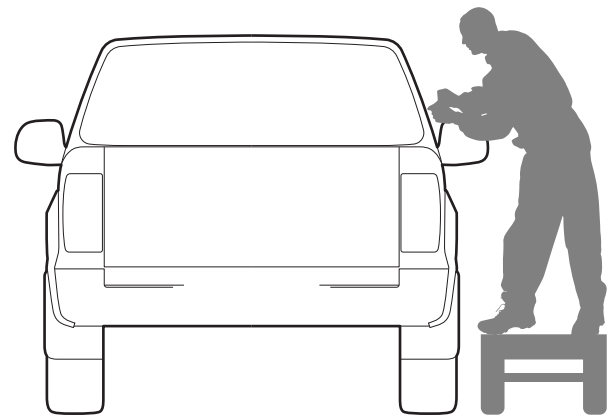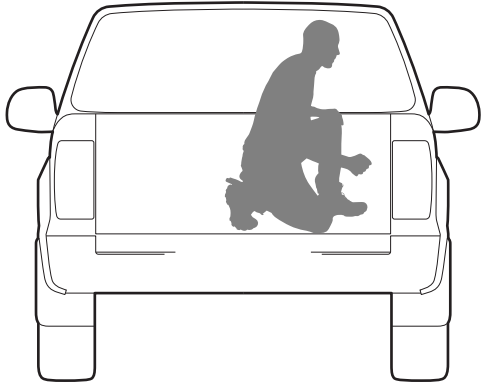


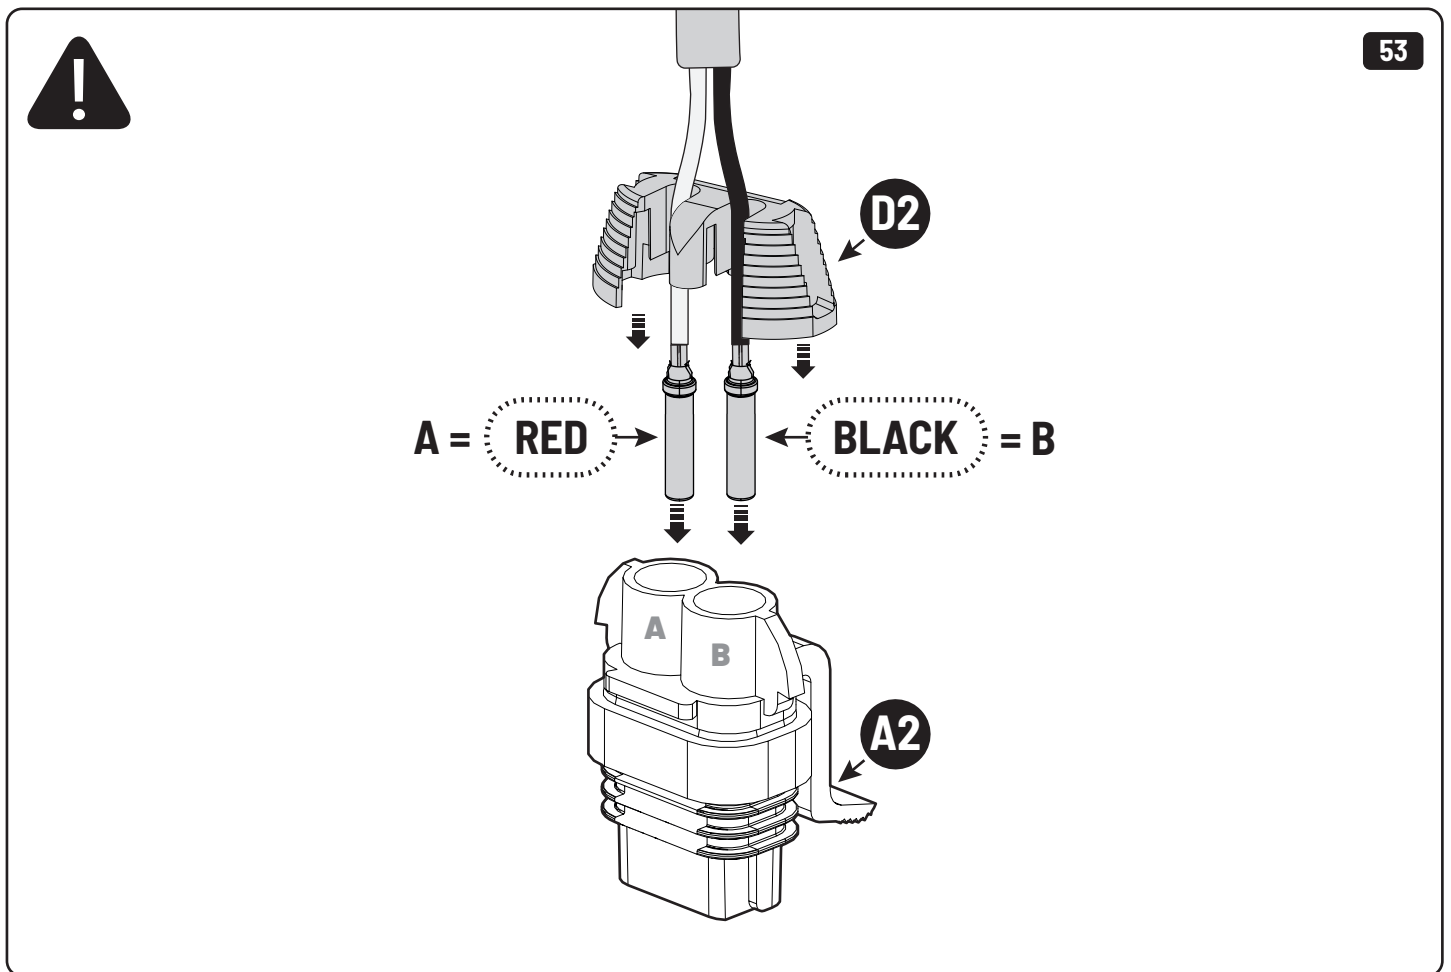
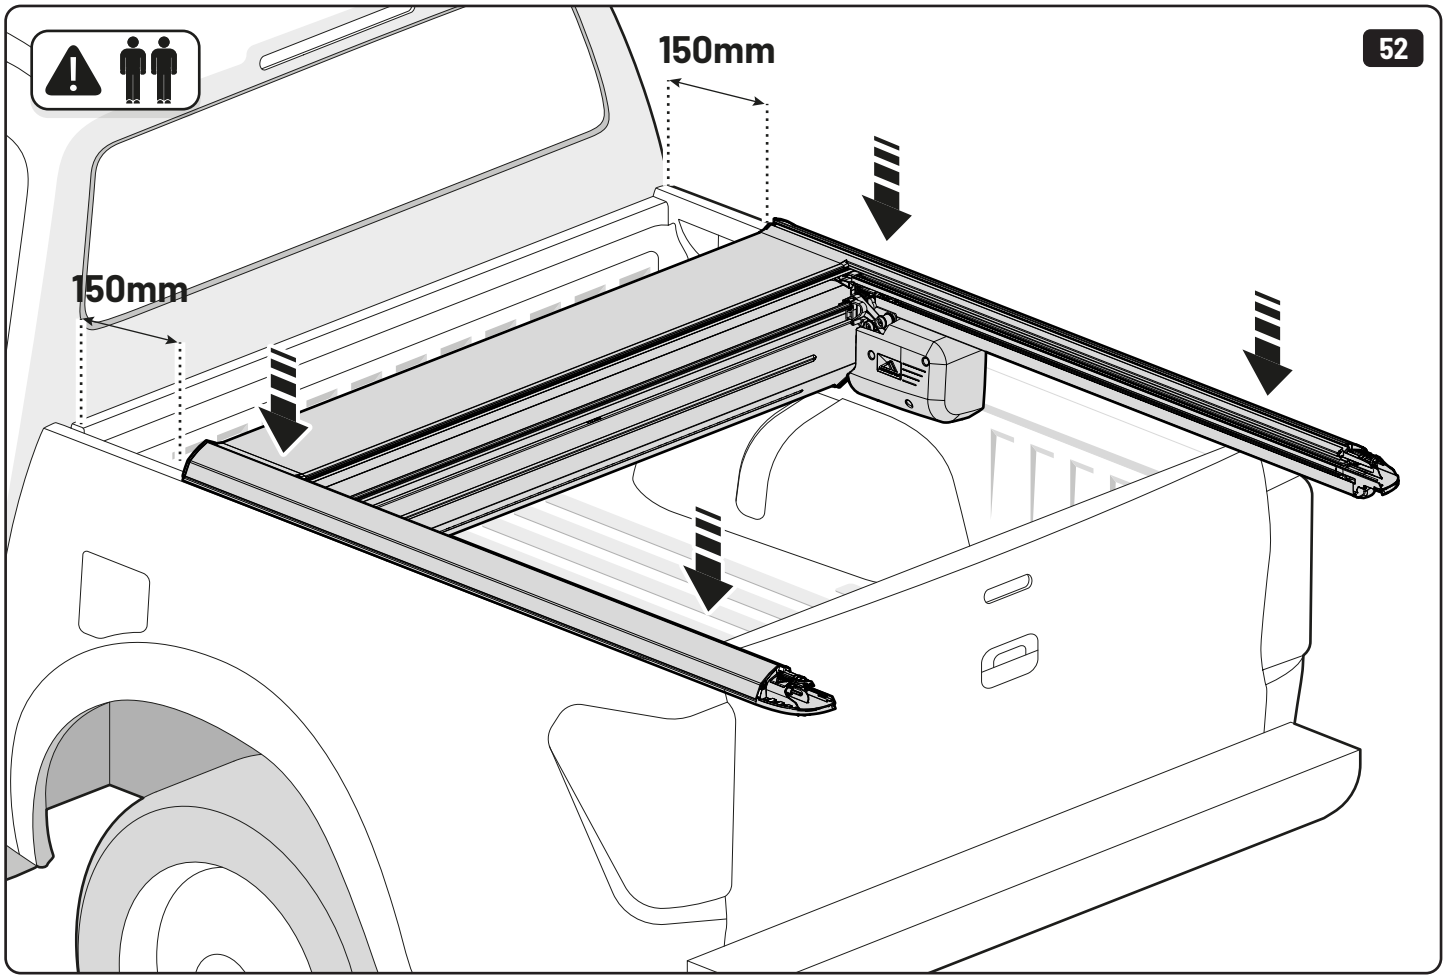


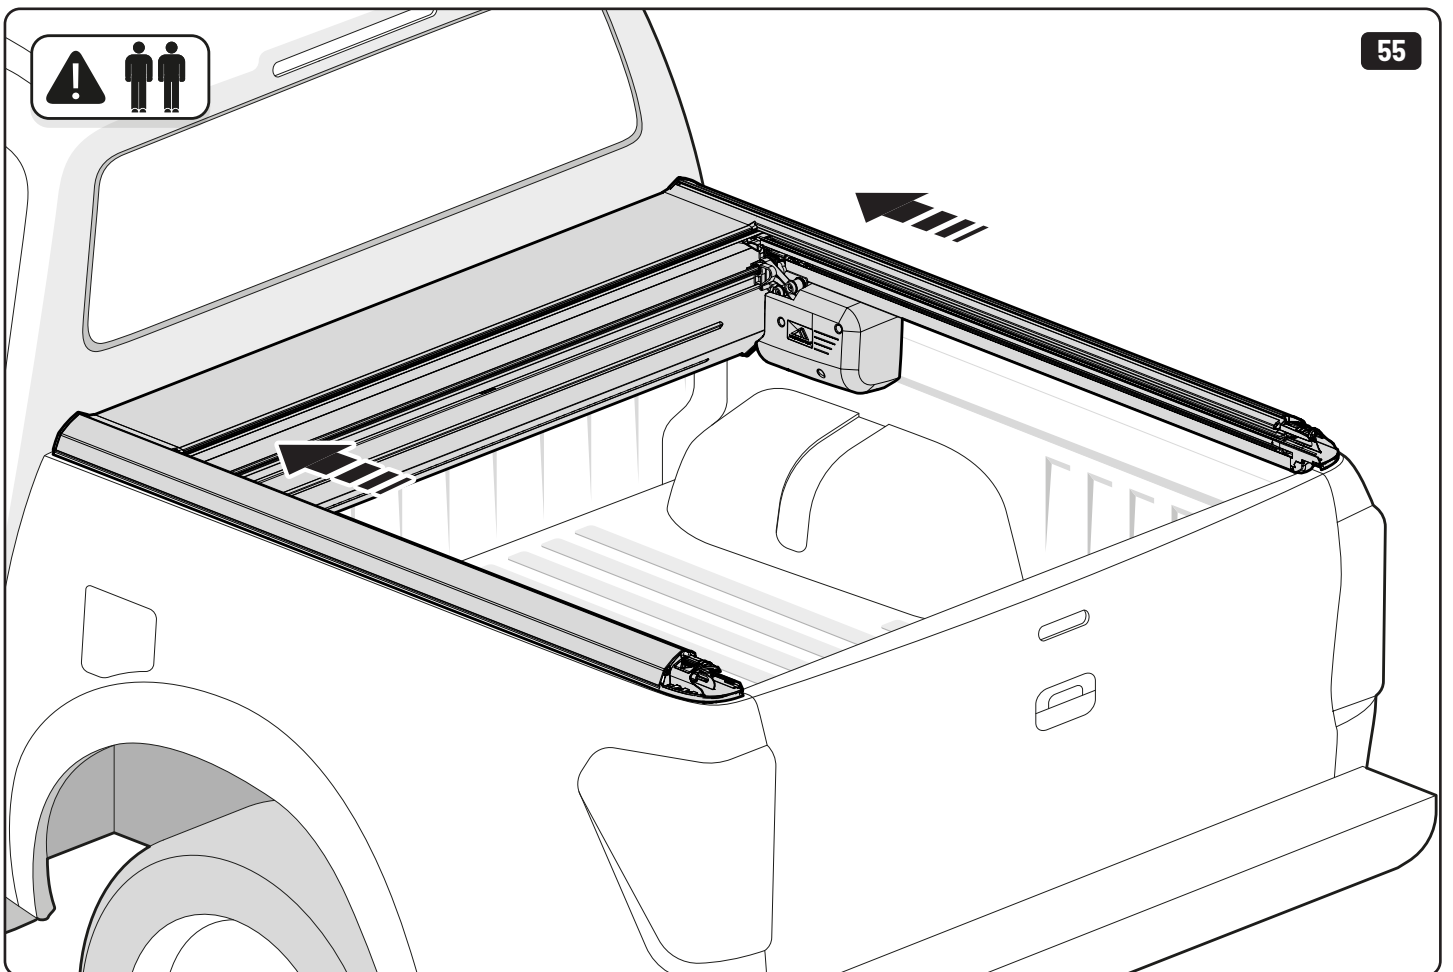
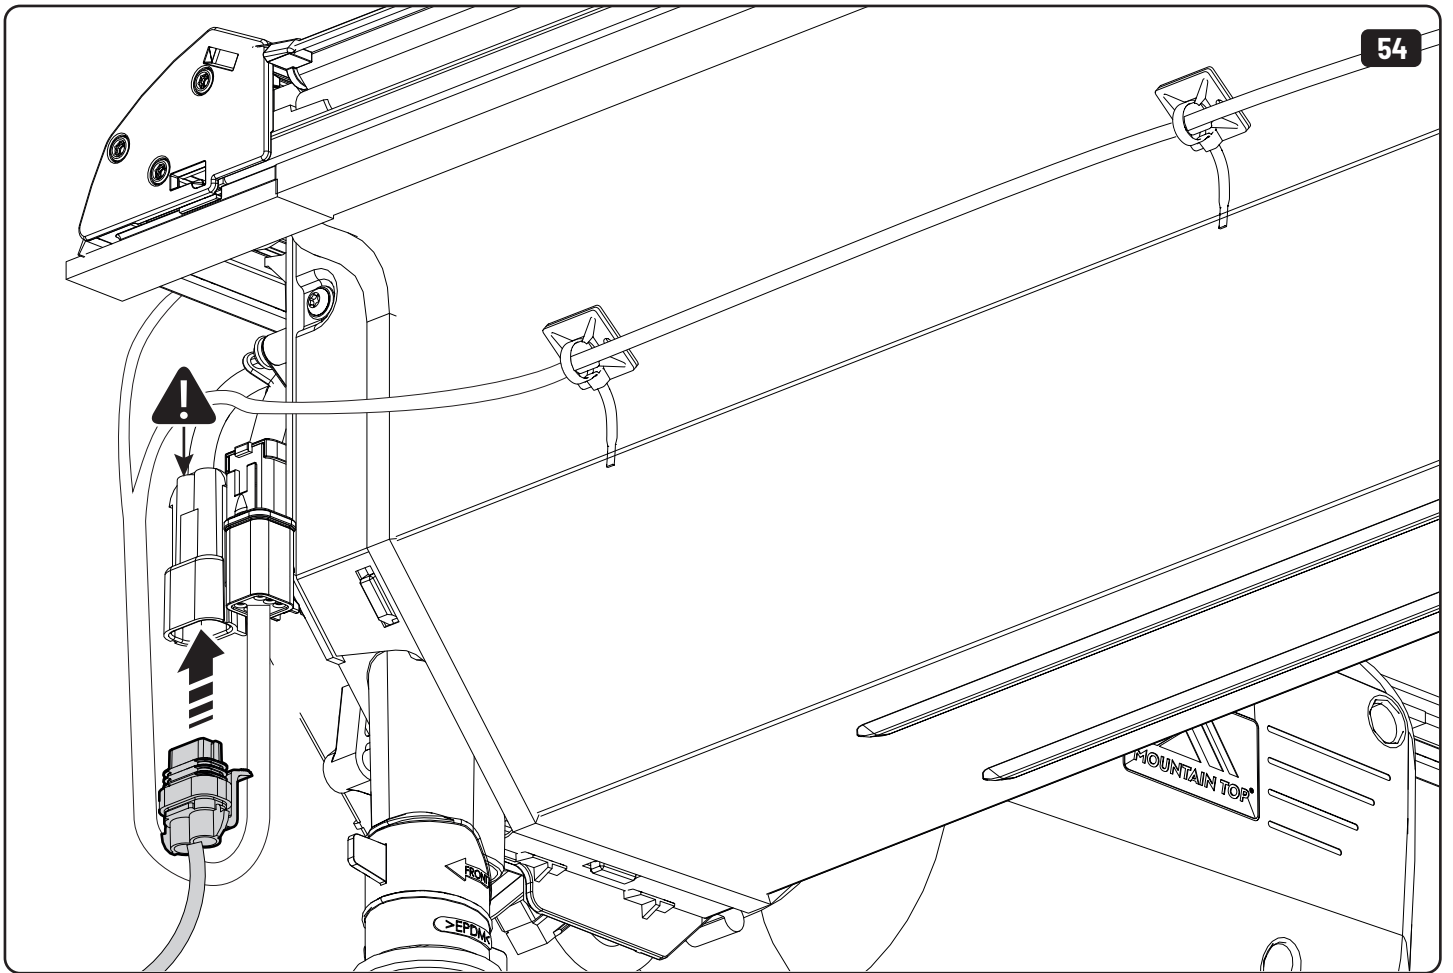


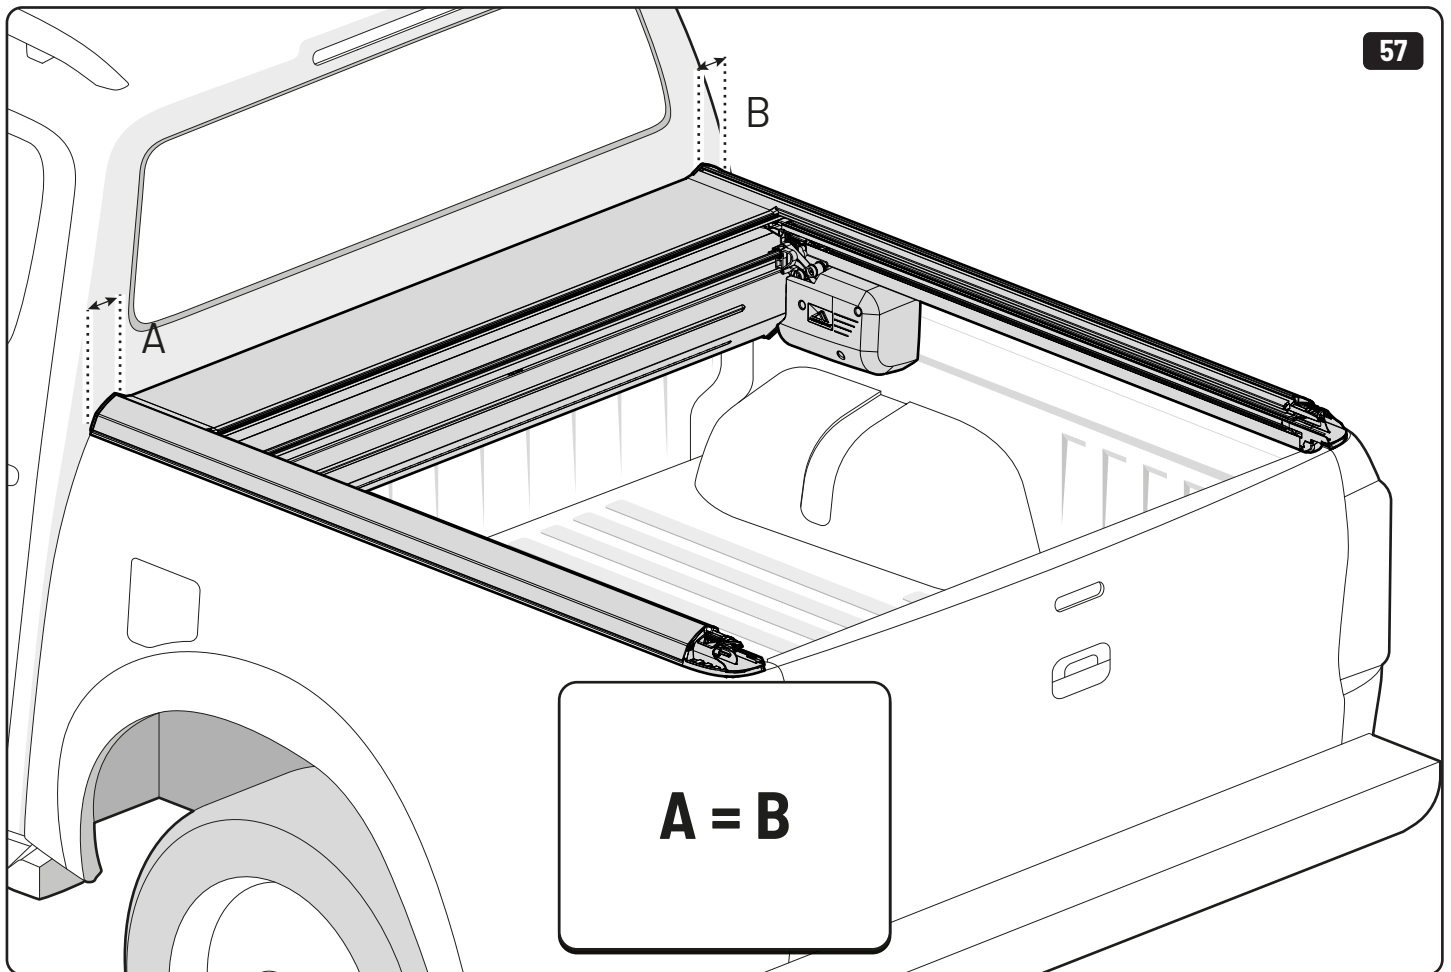
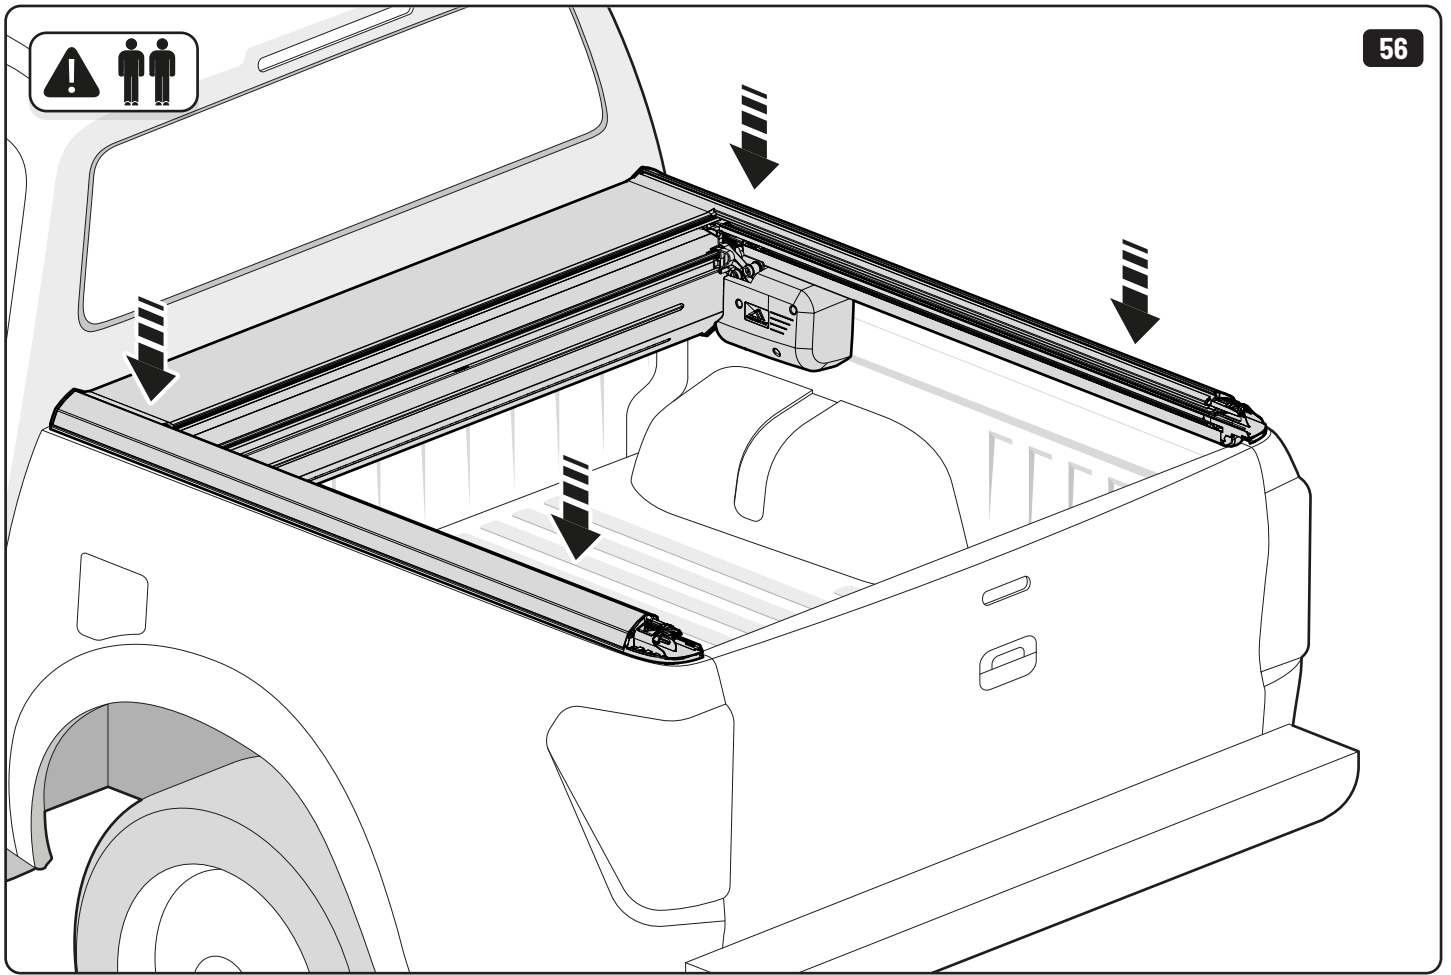


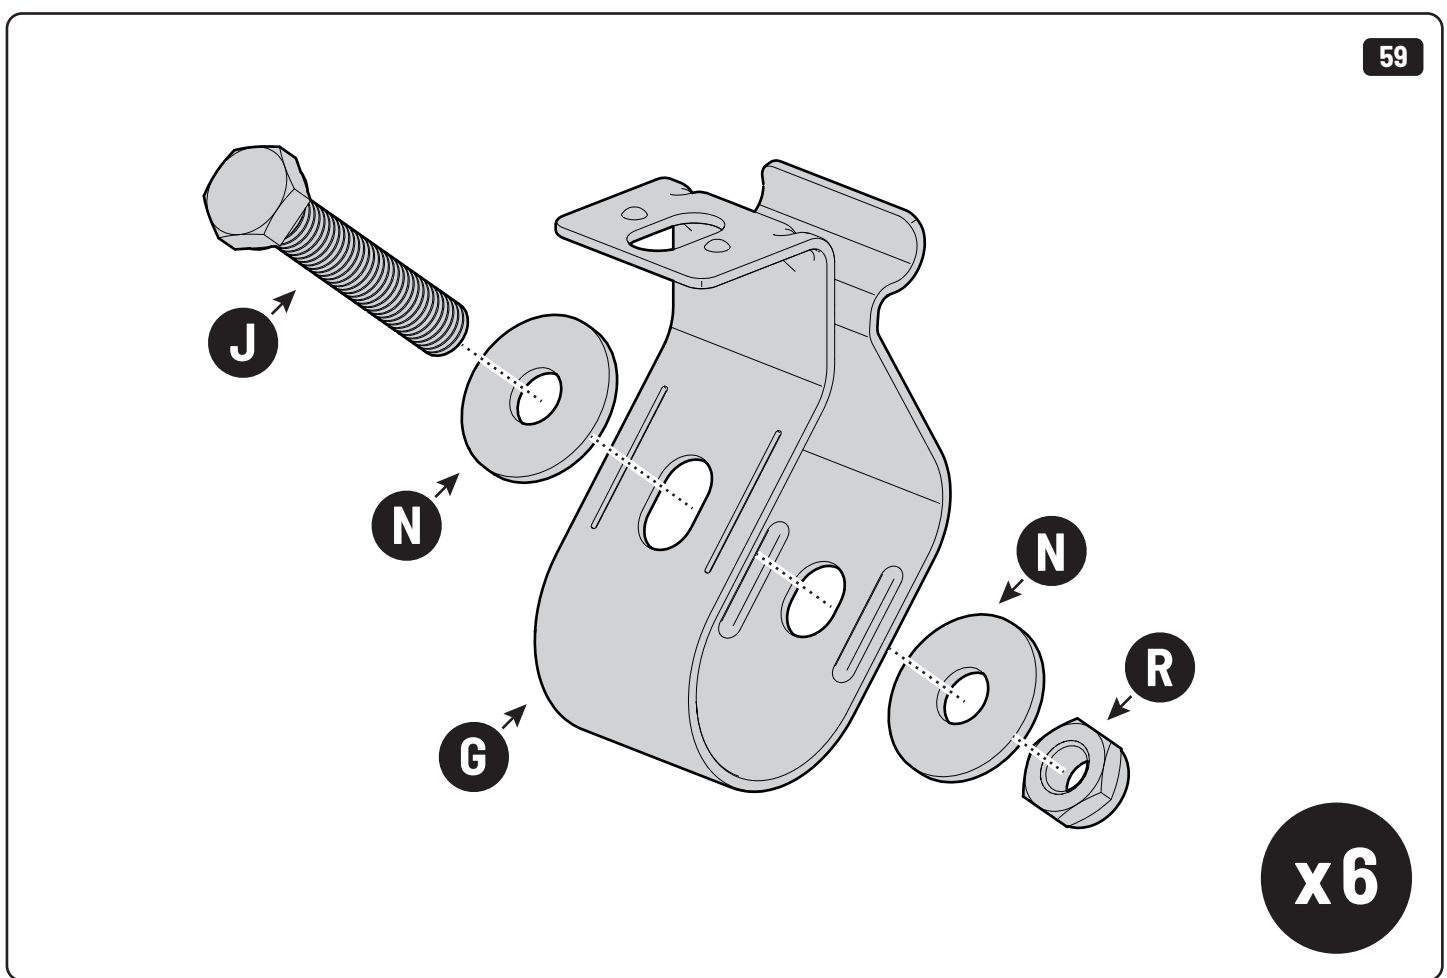
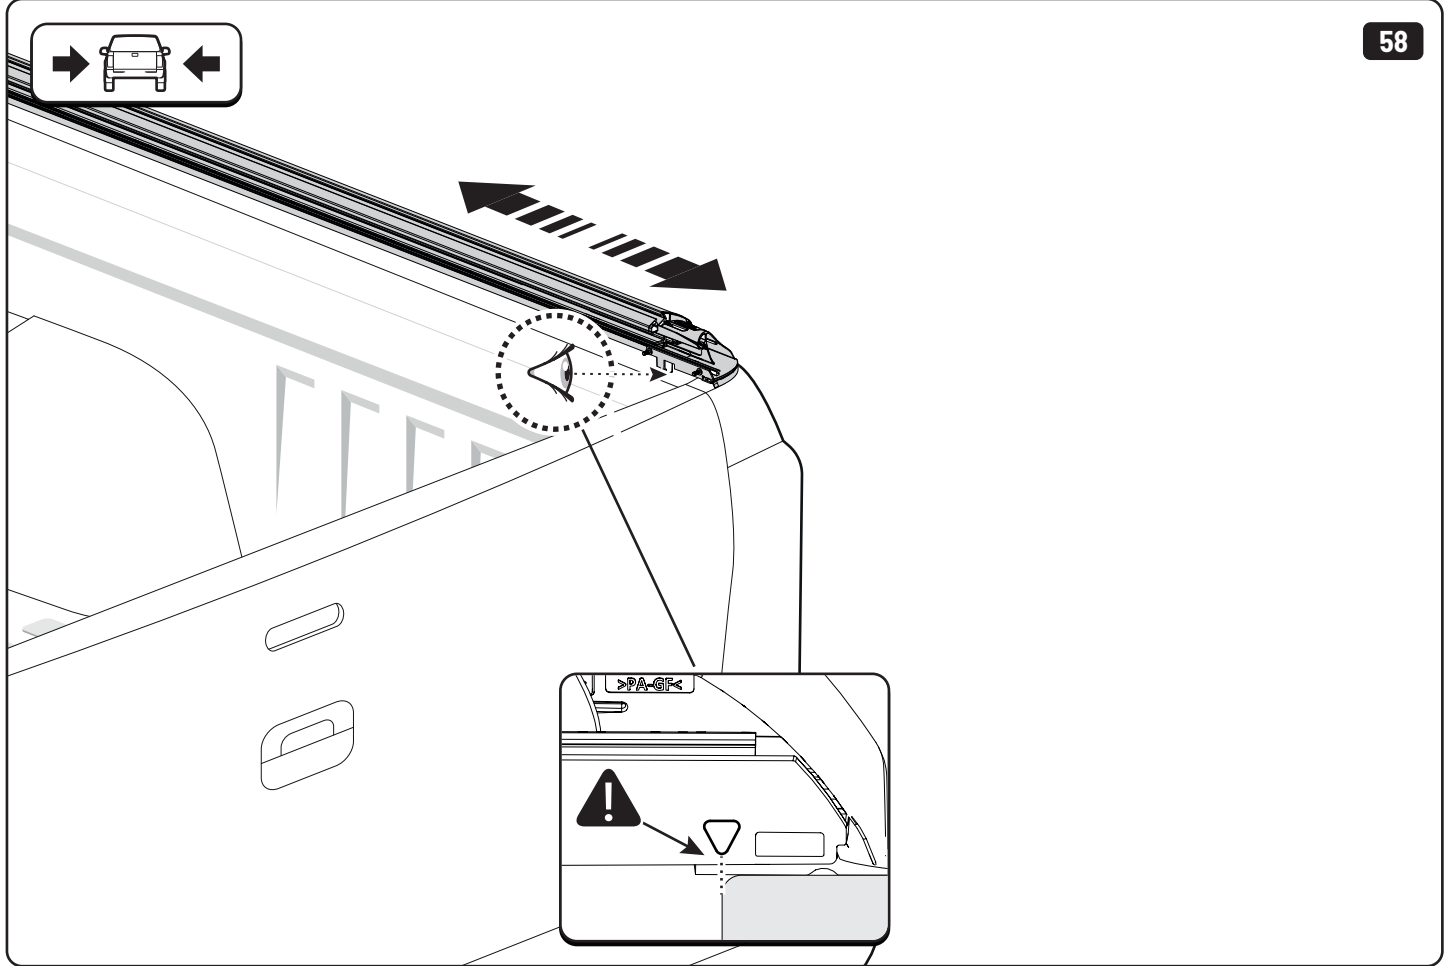




x6

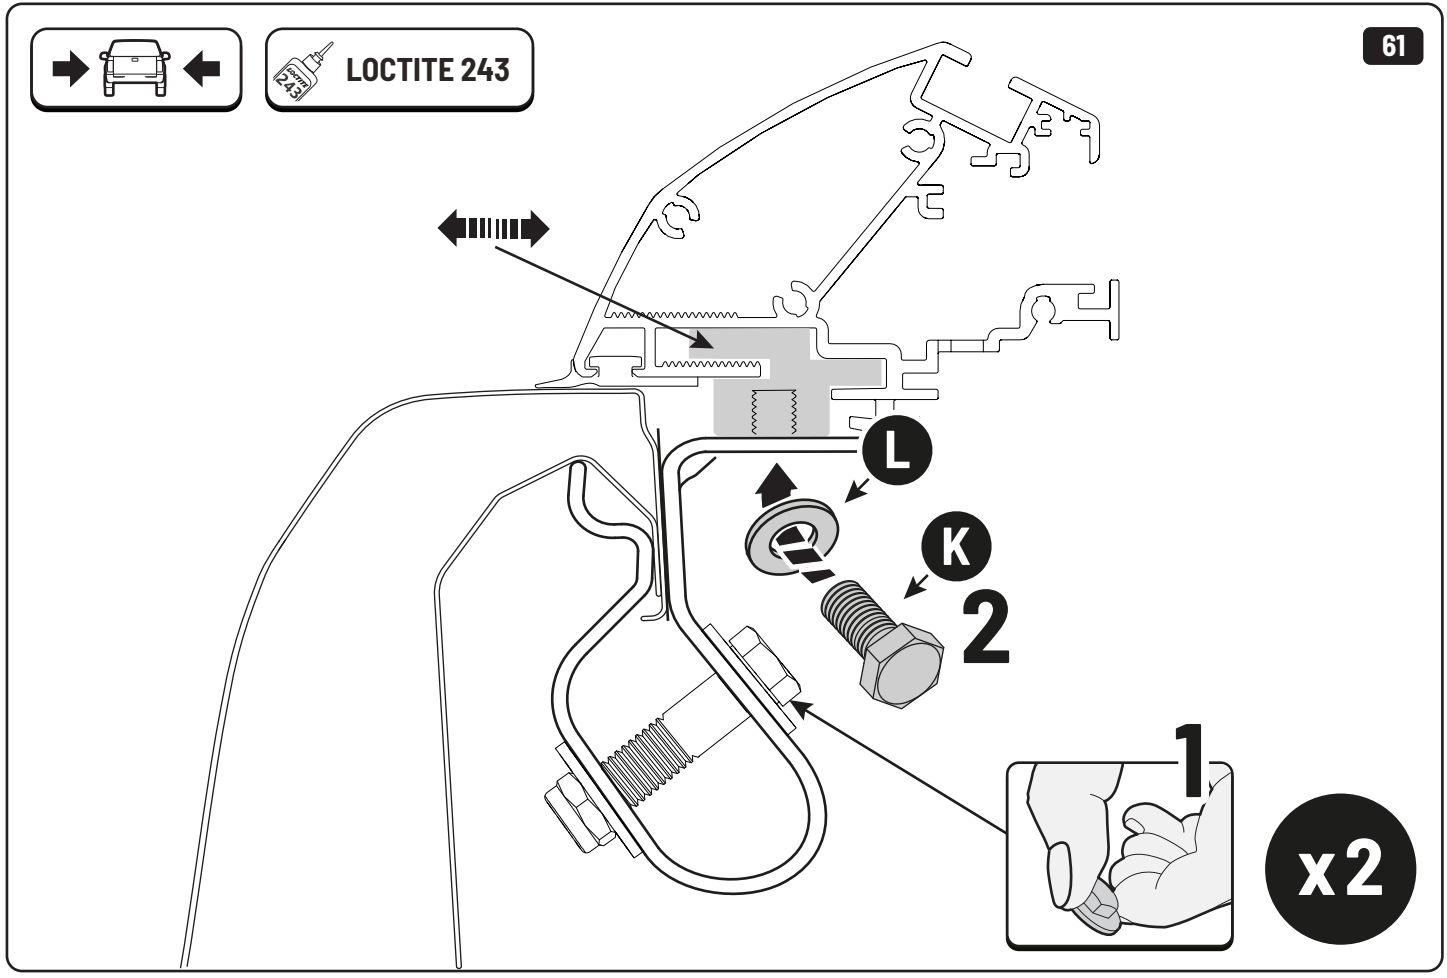
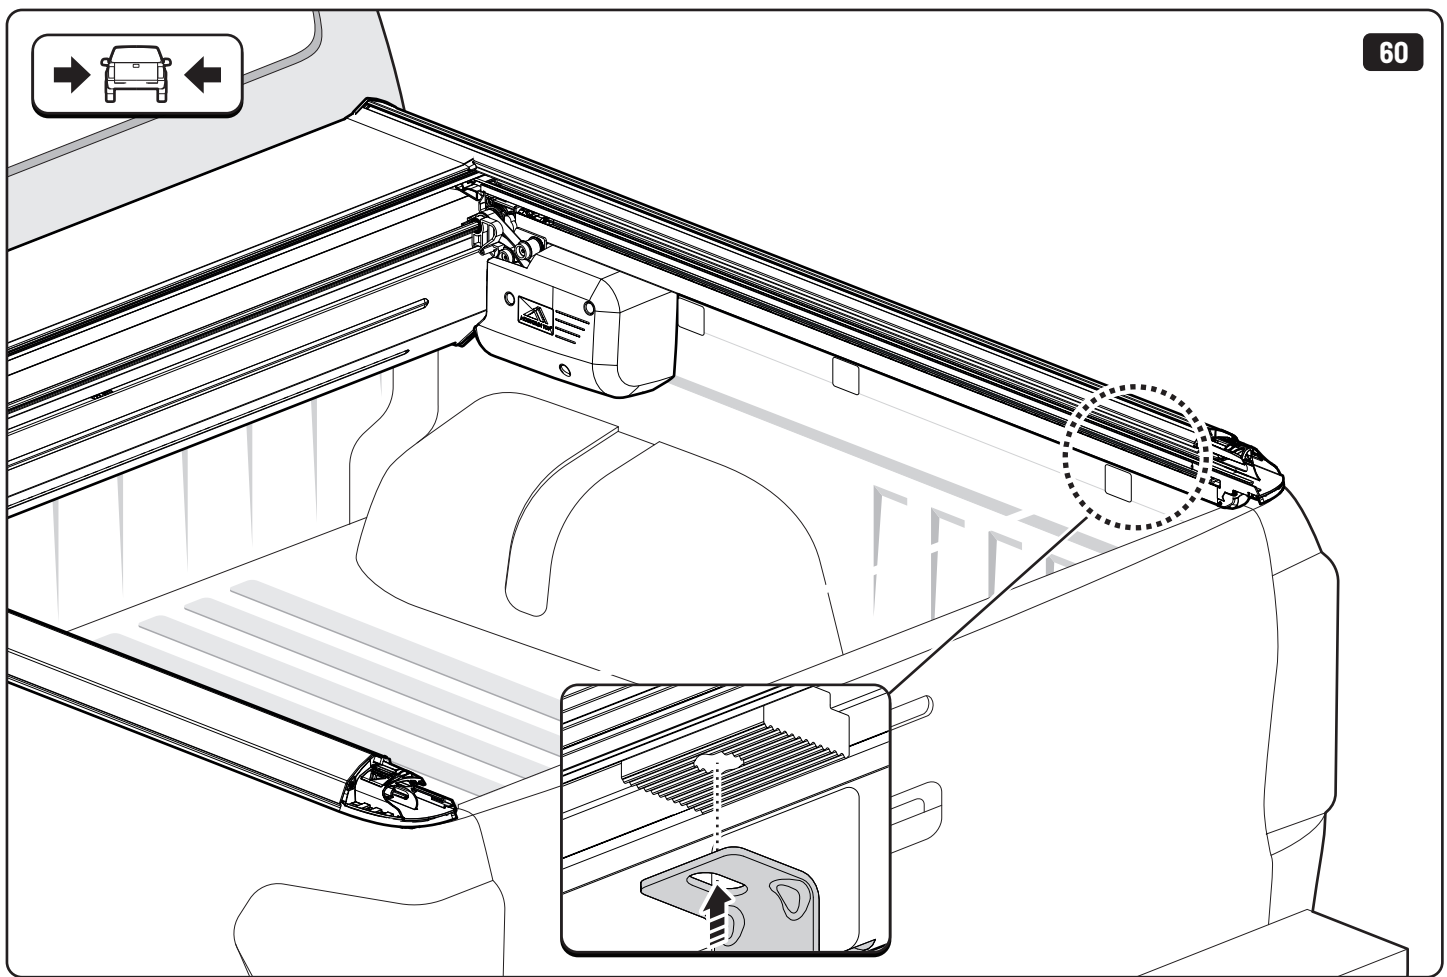


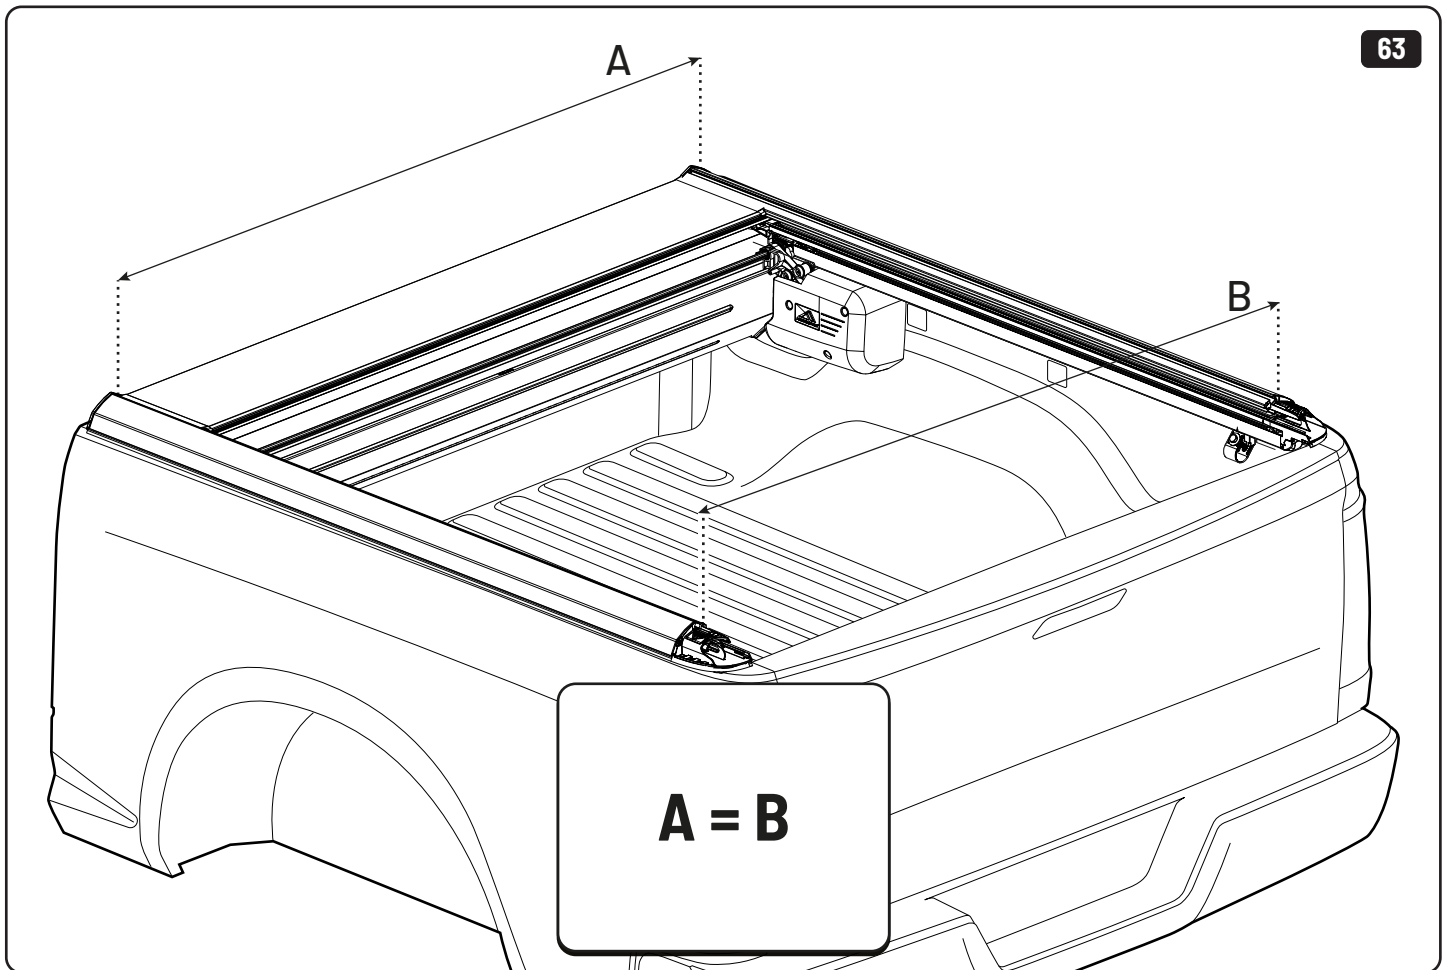
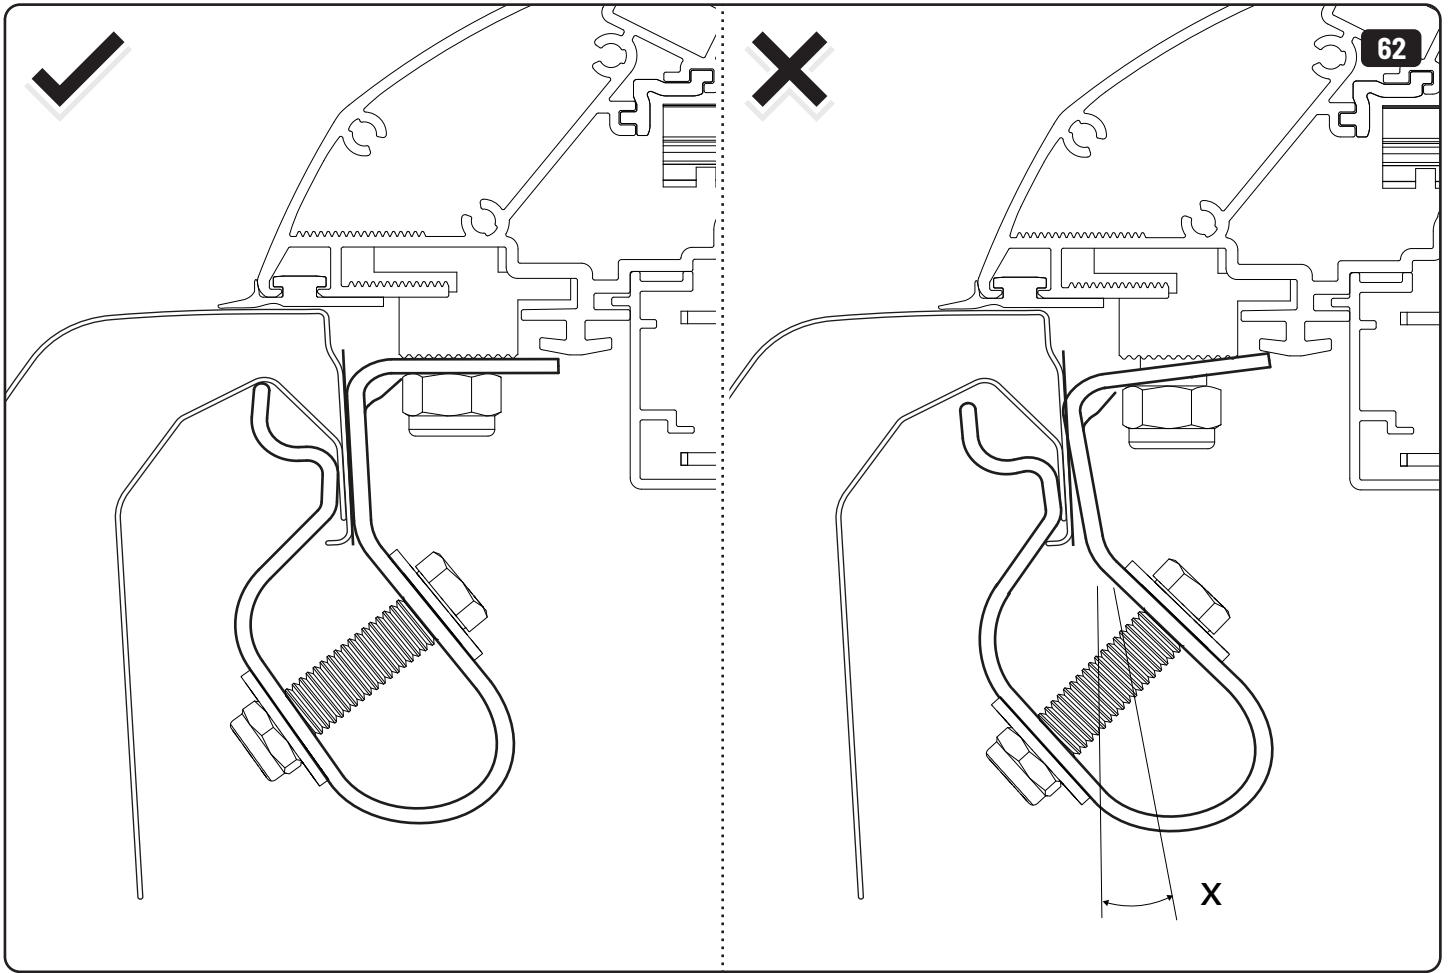


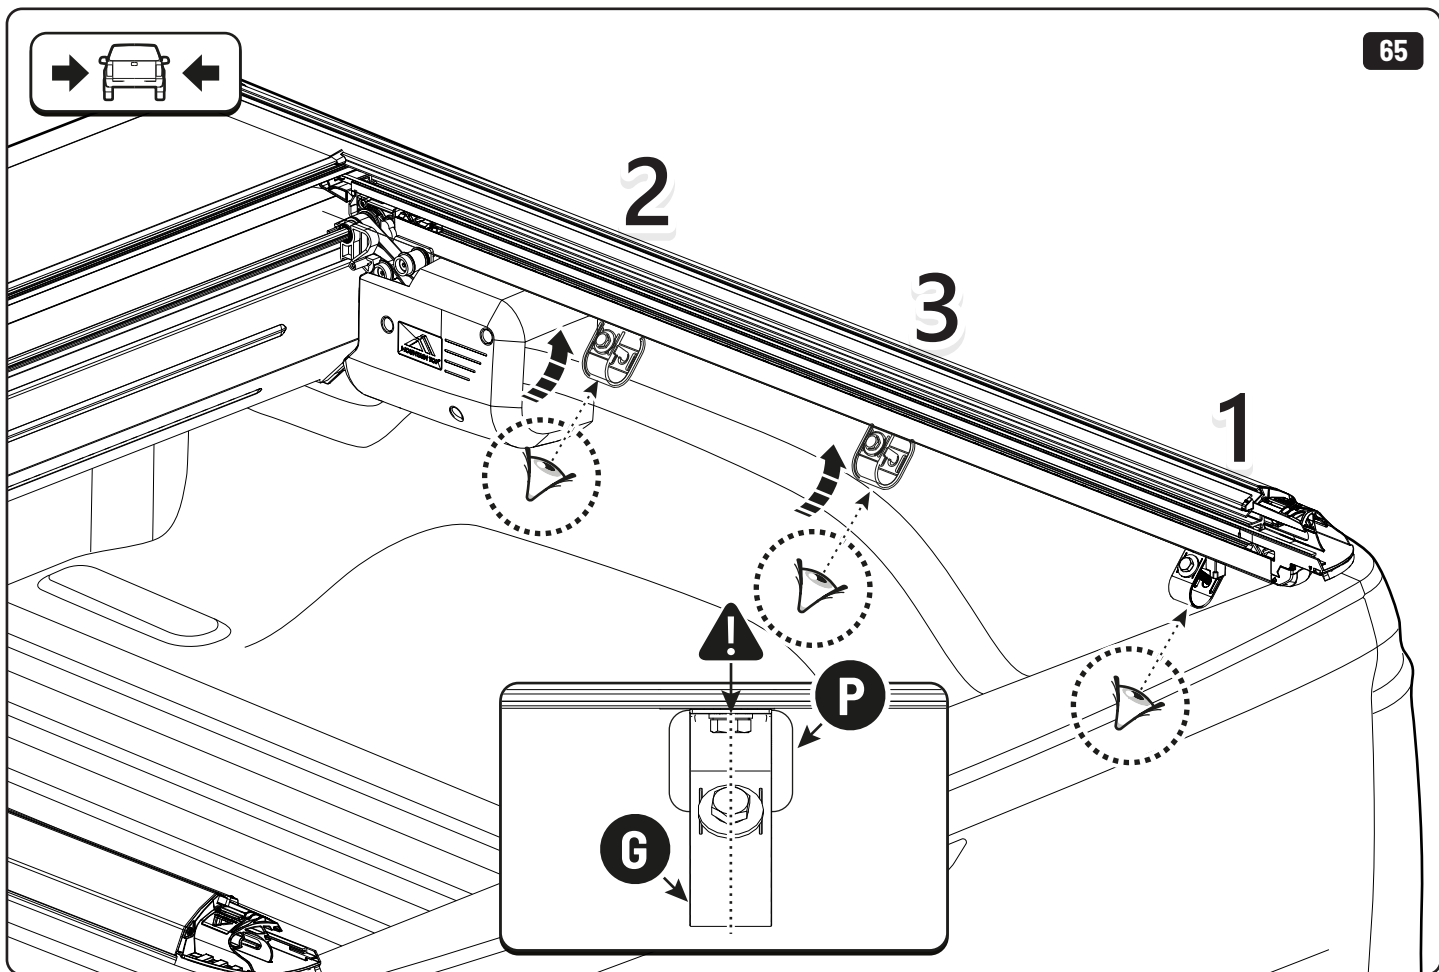
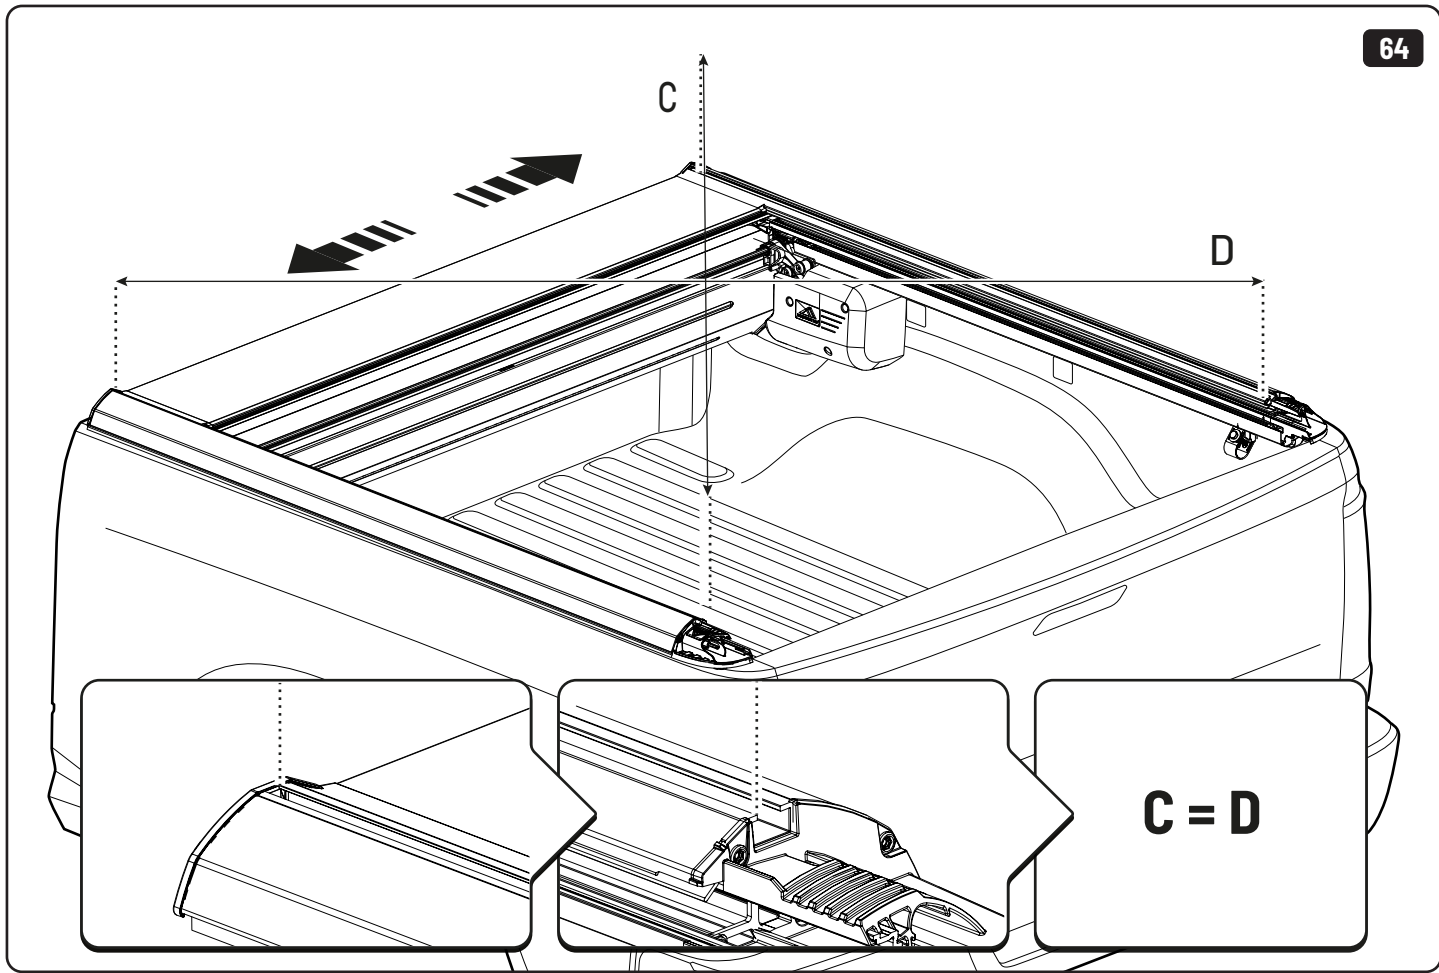



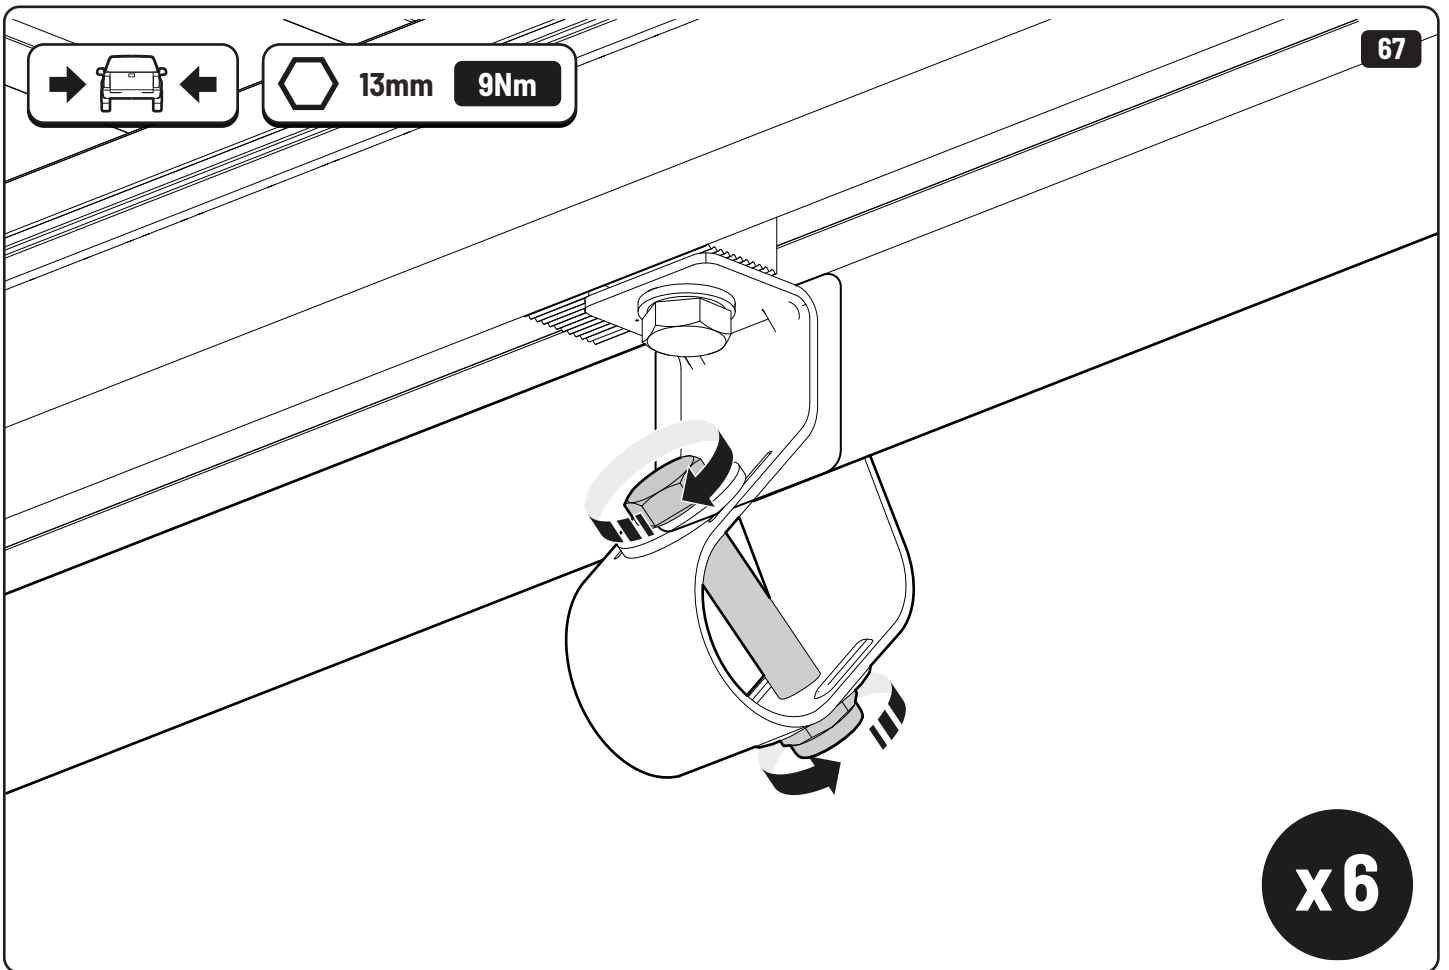
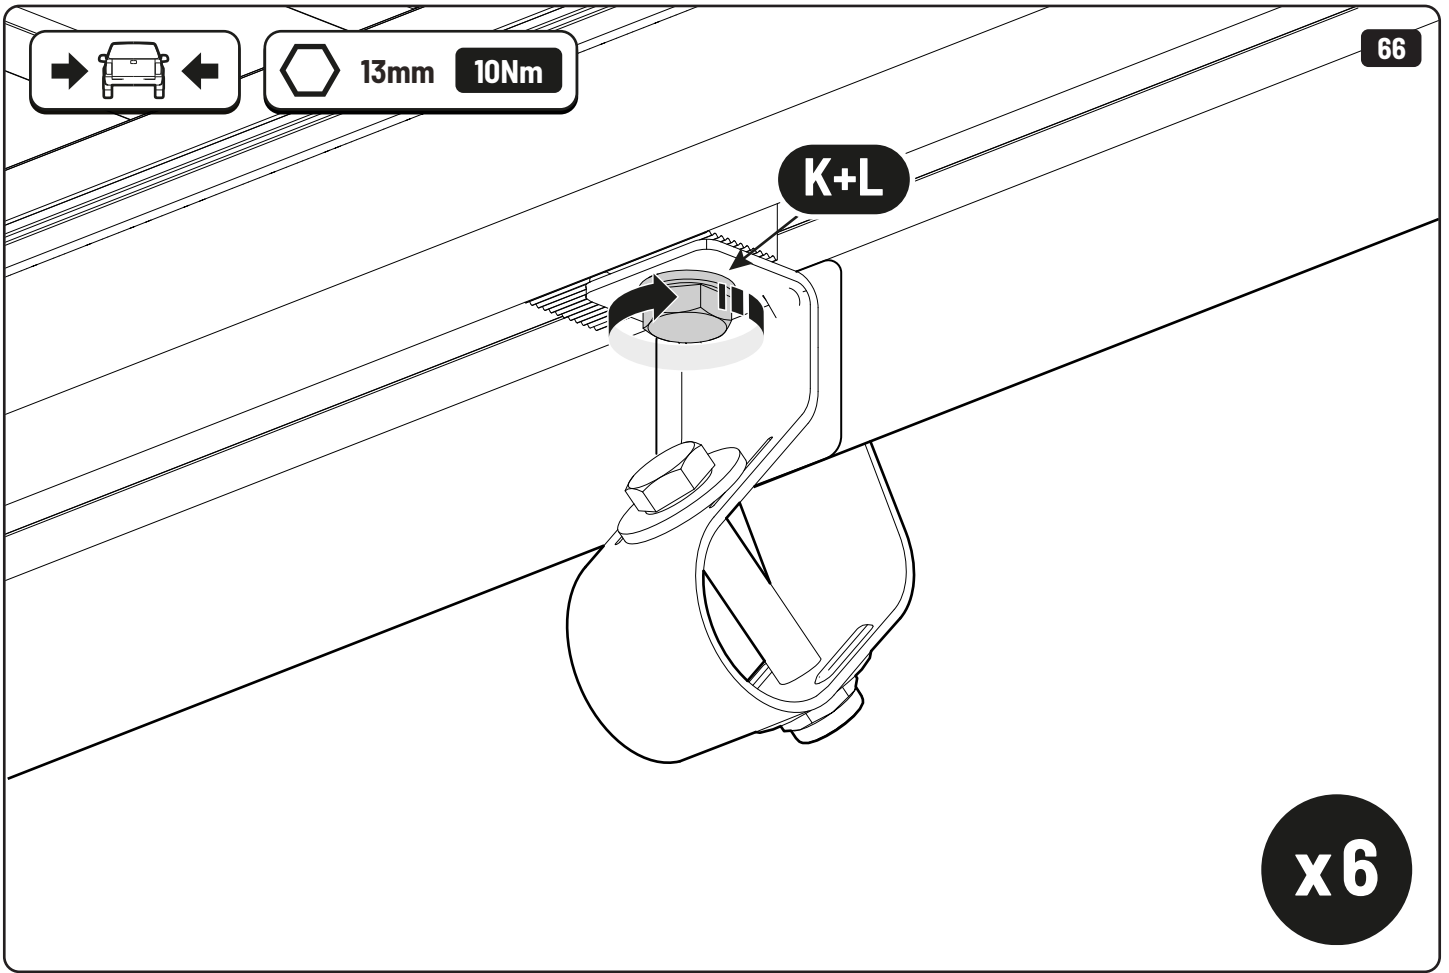


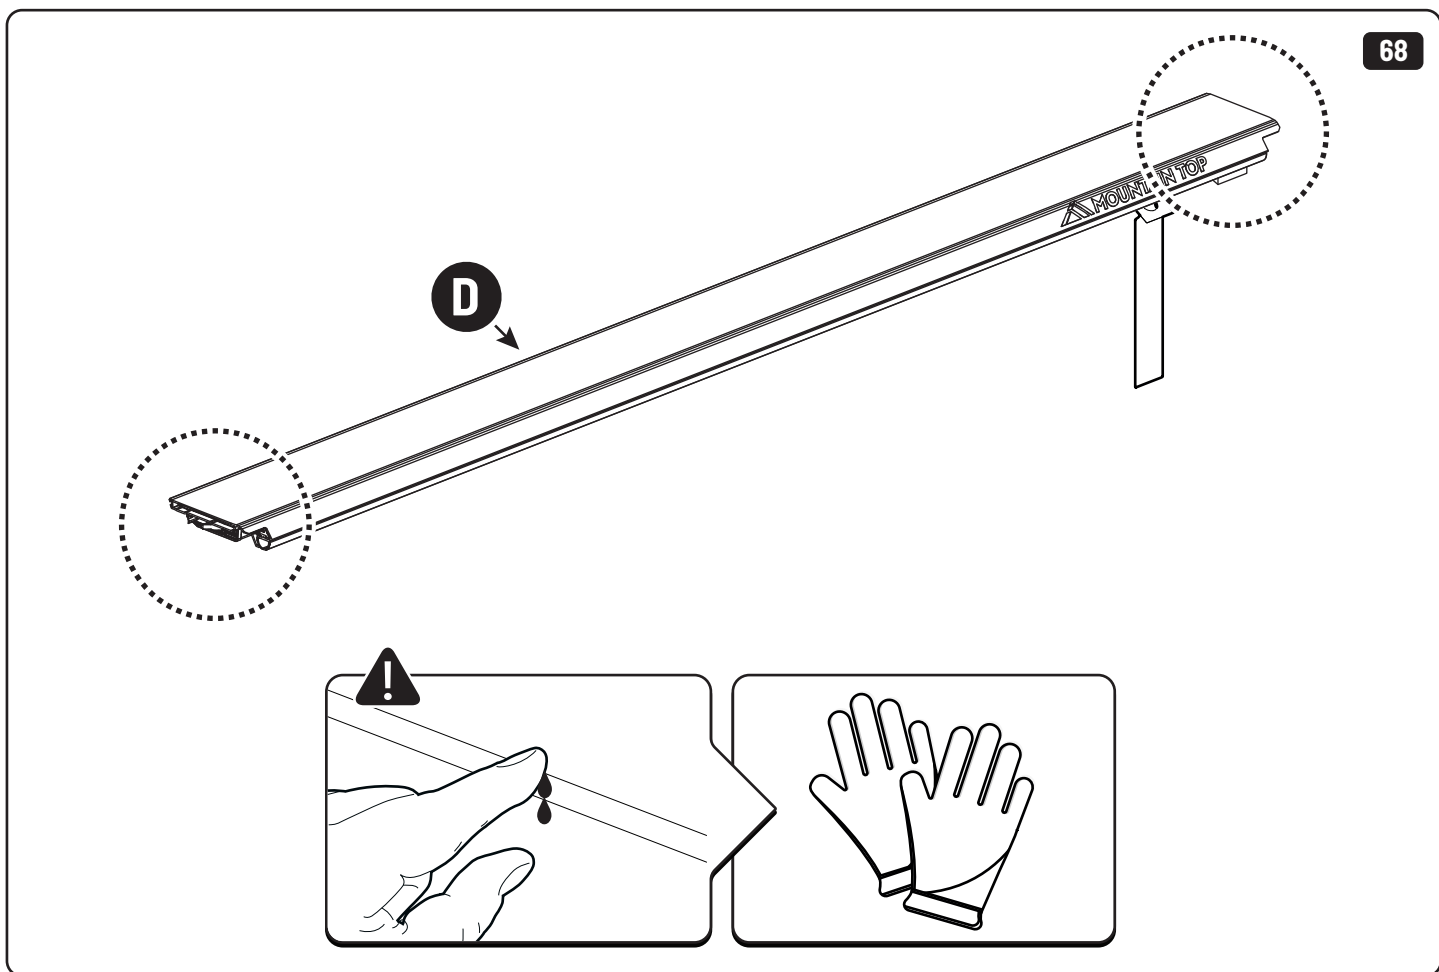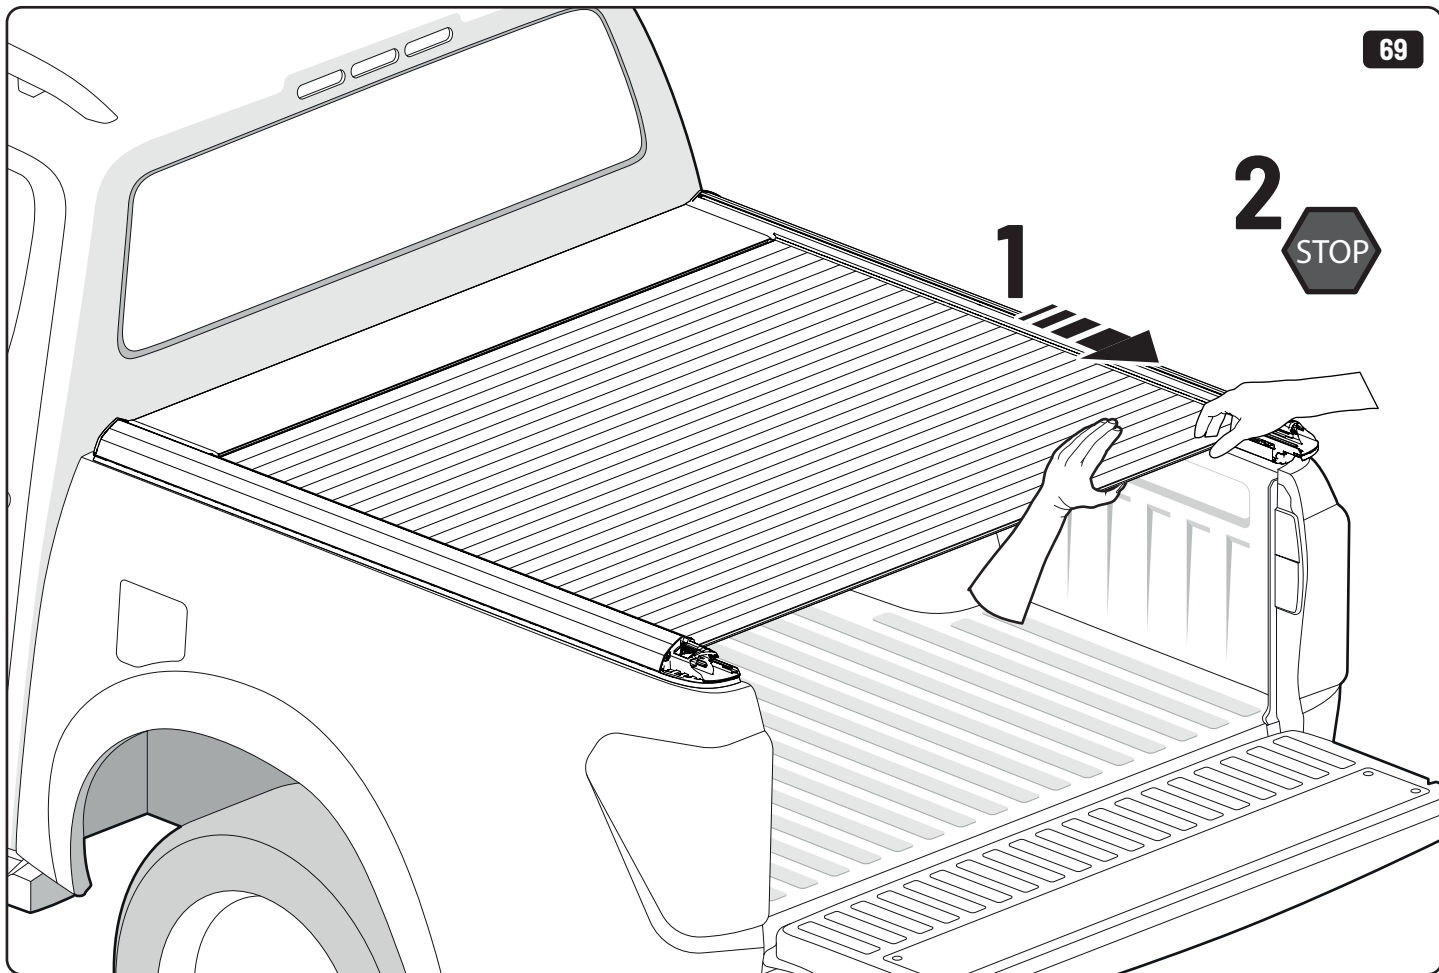


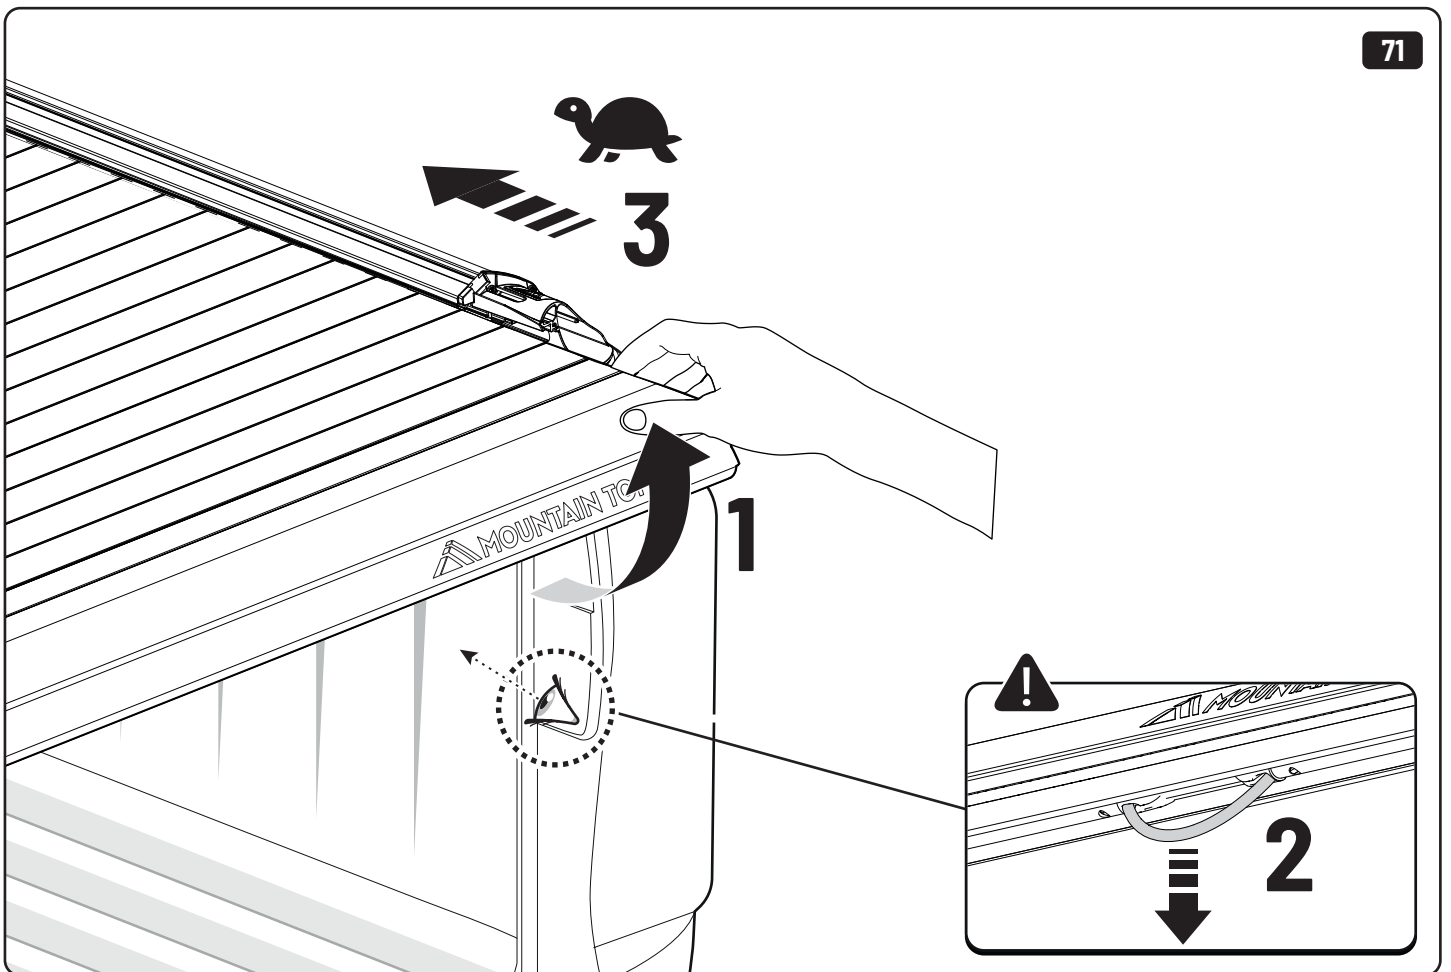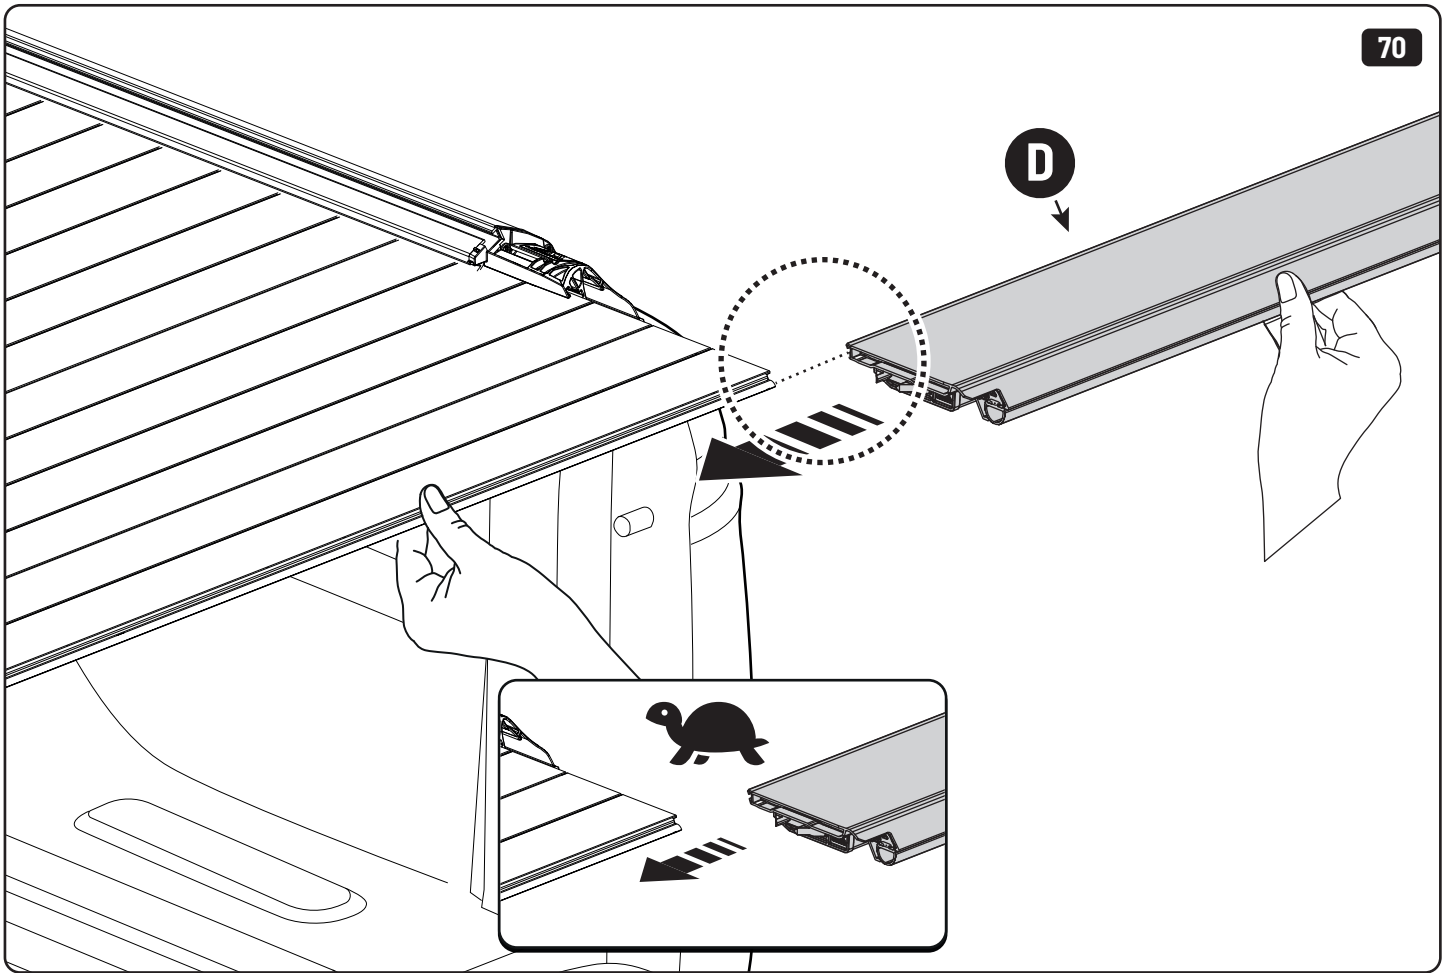


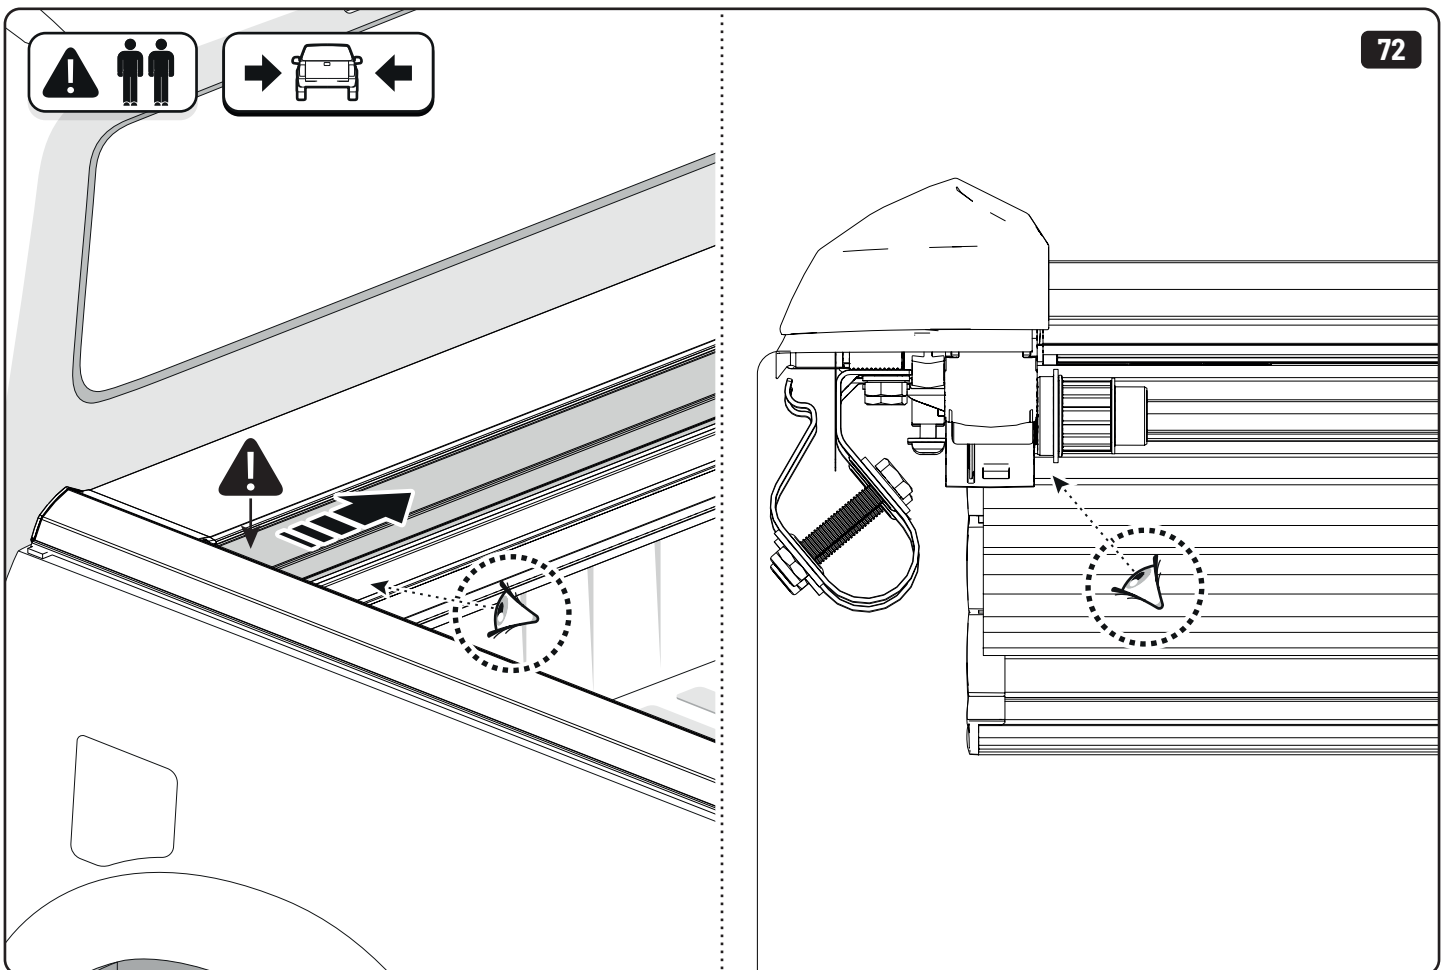
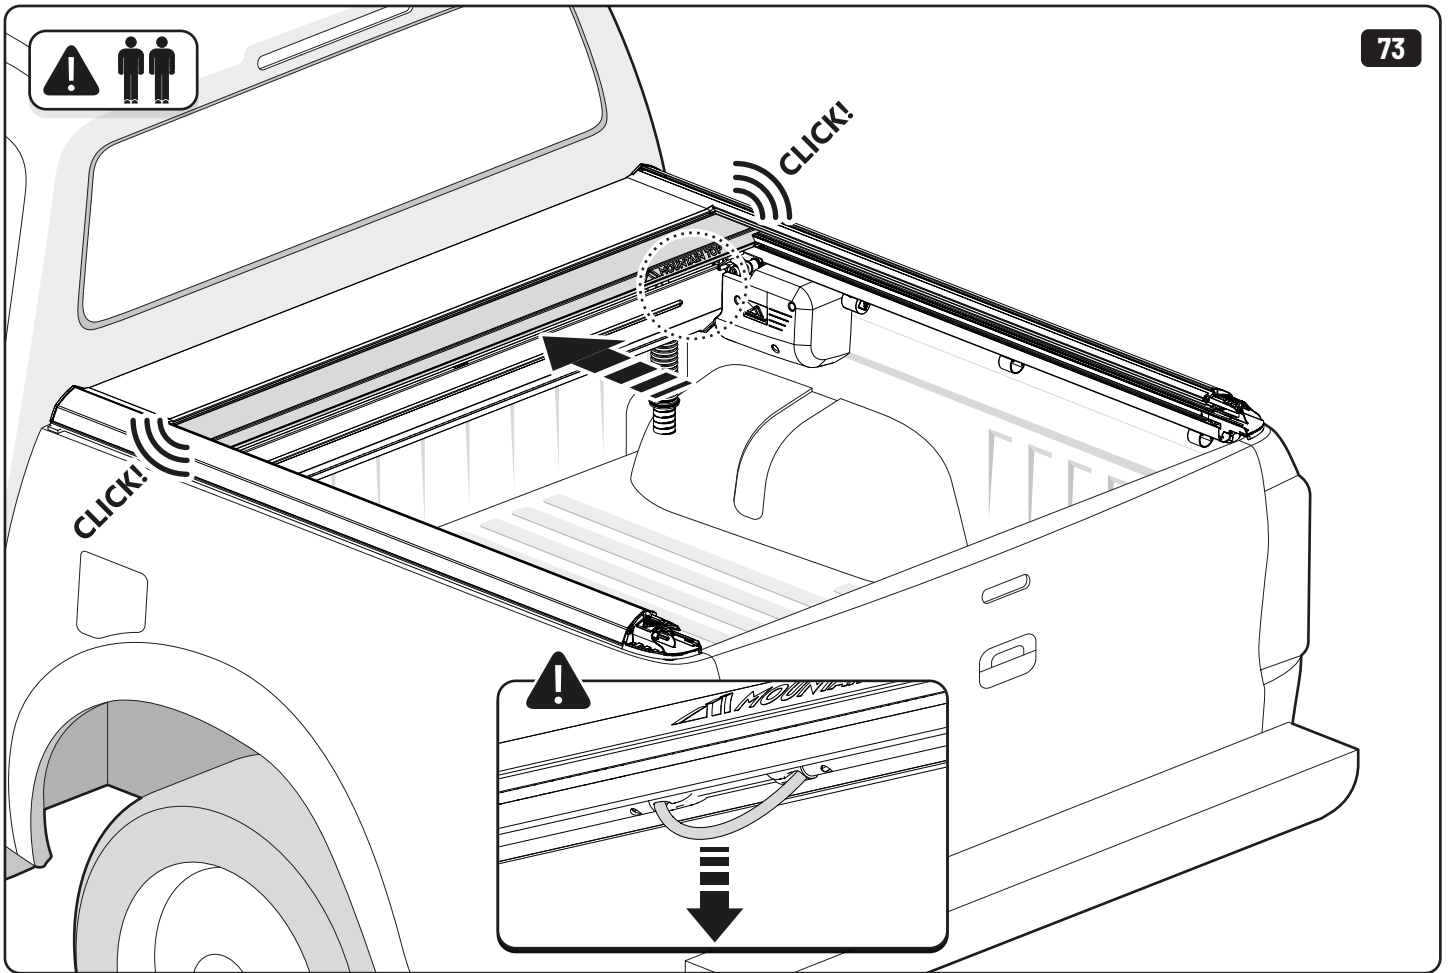


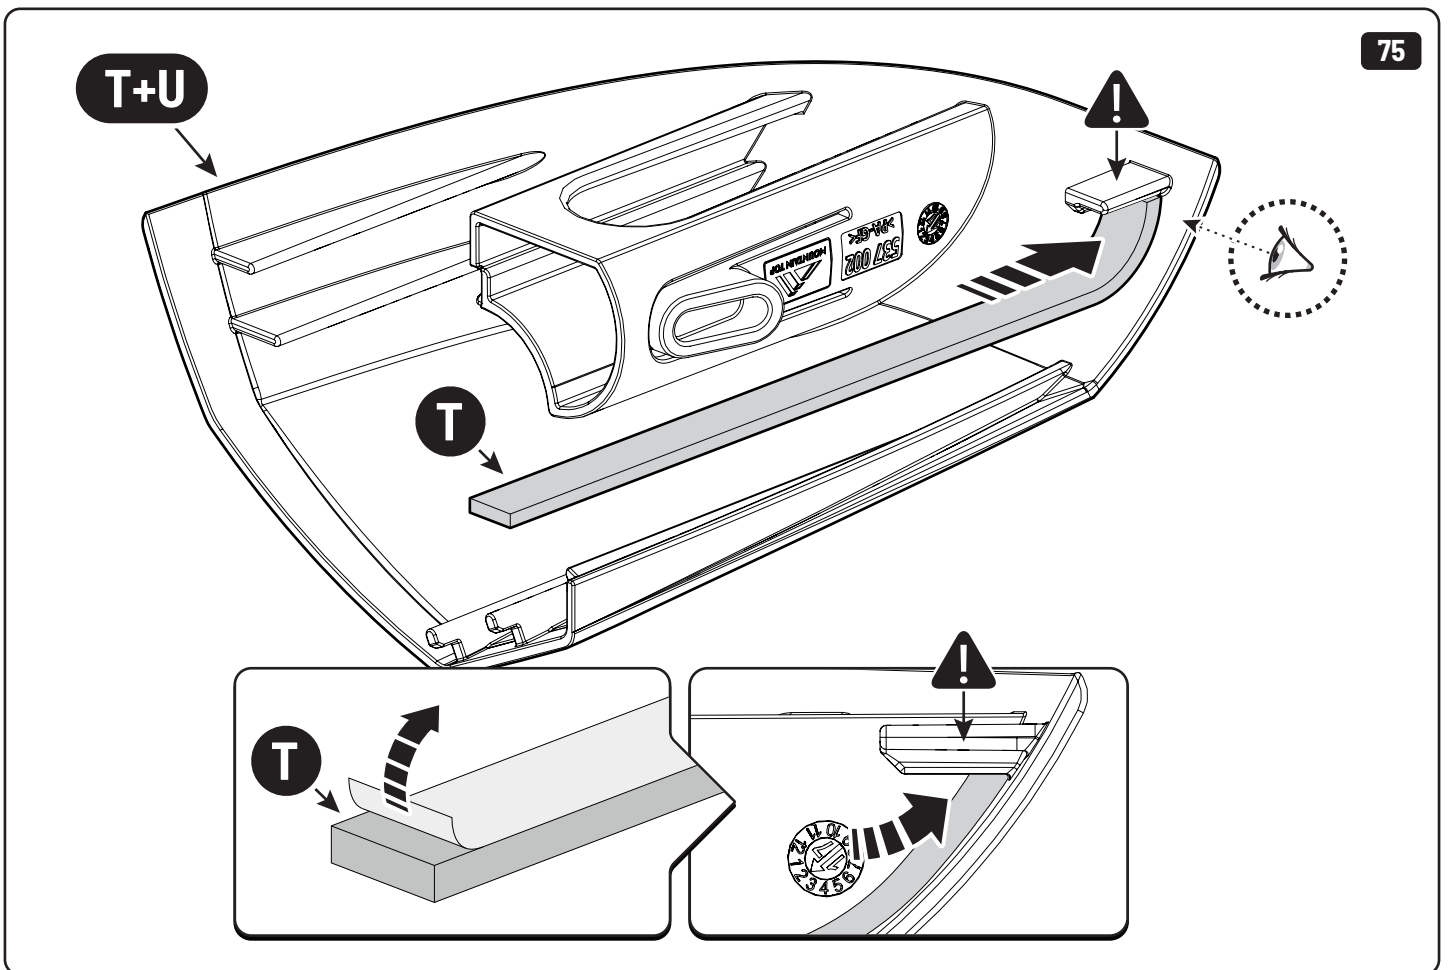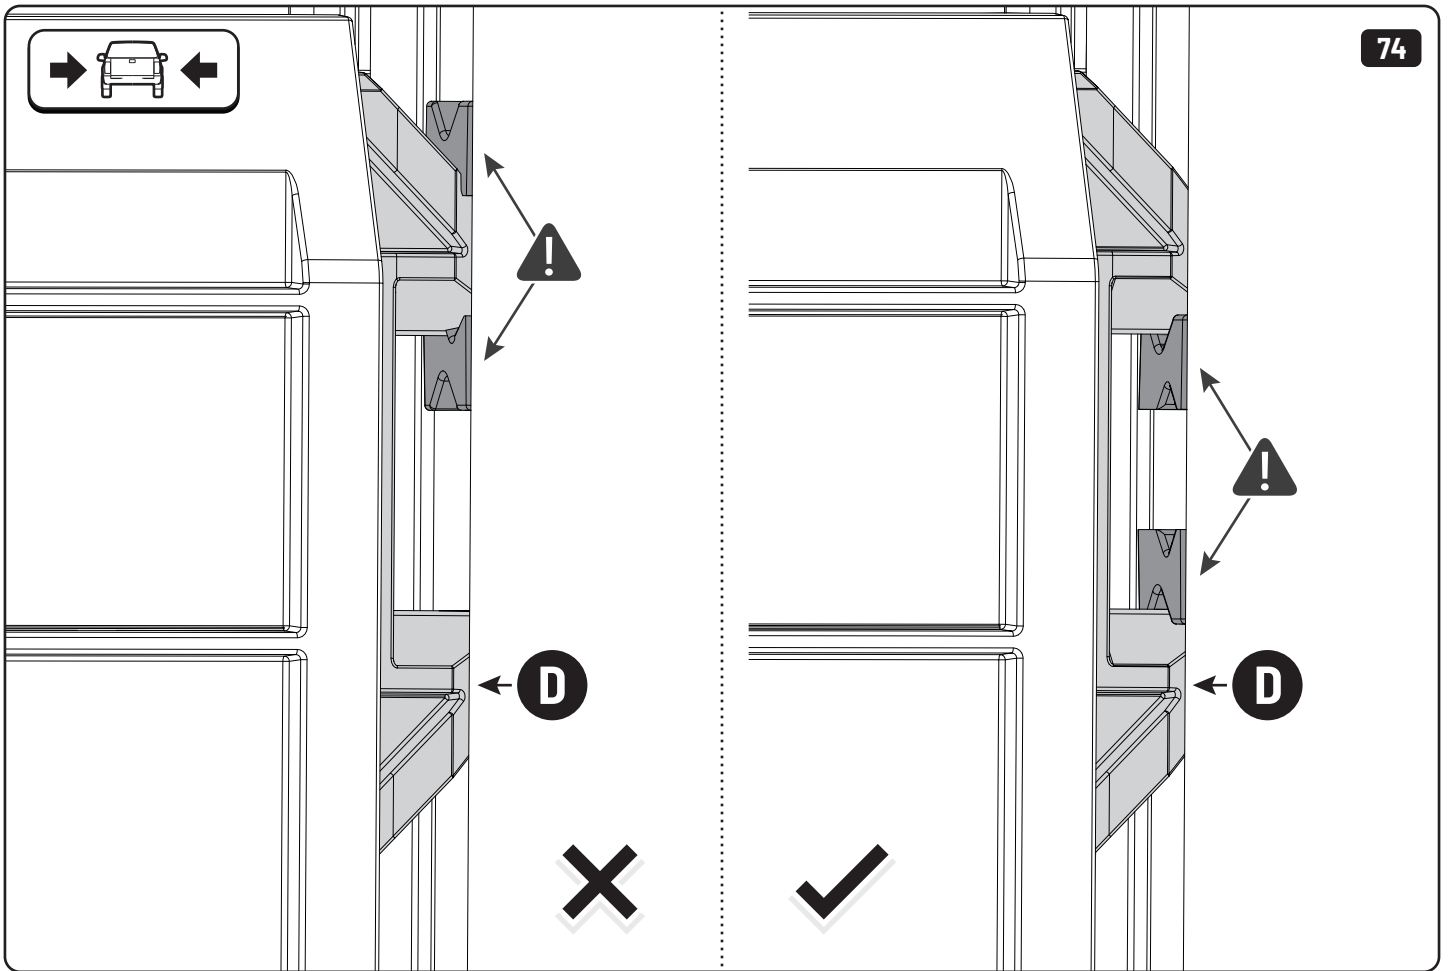

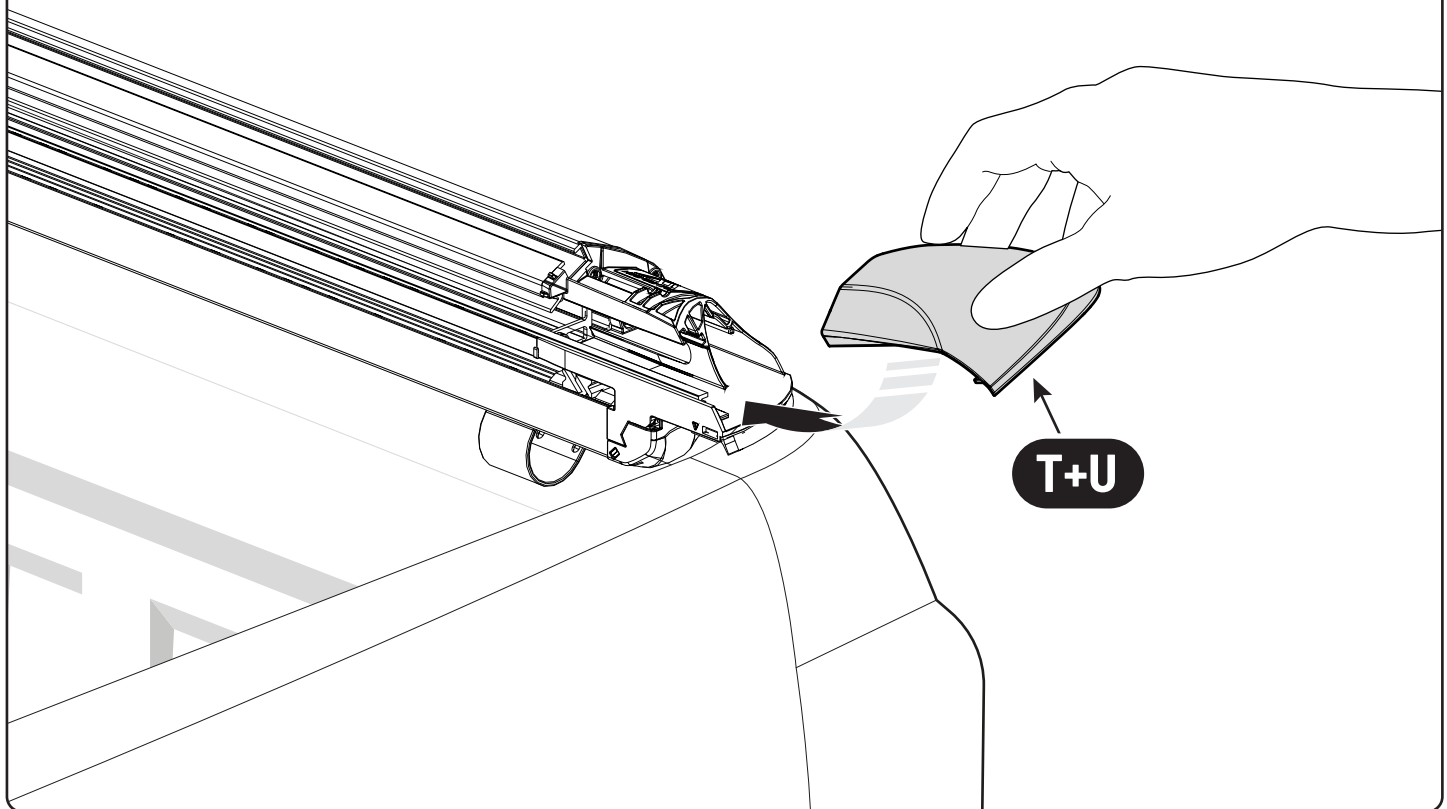
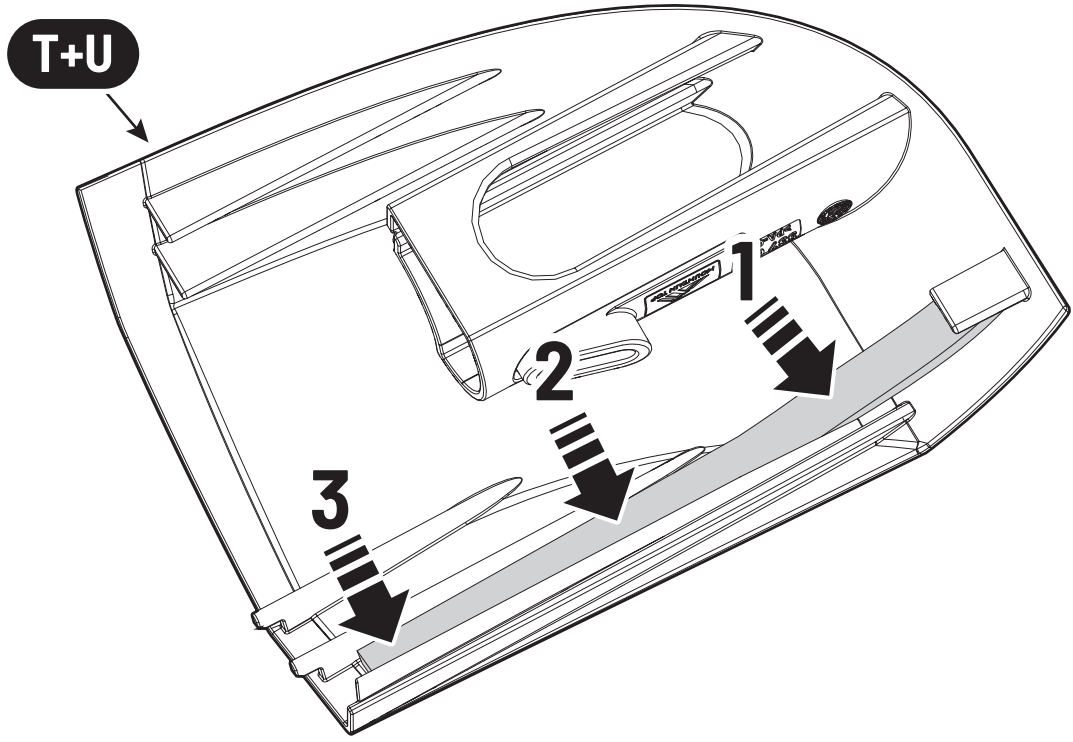


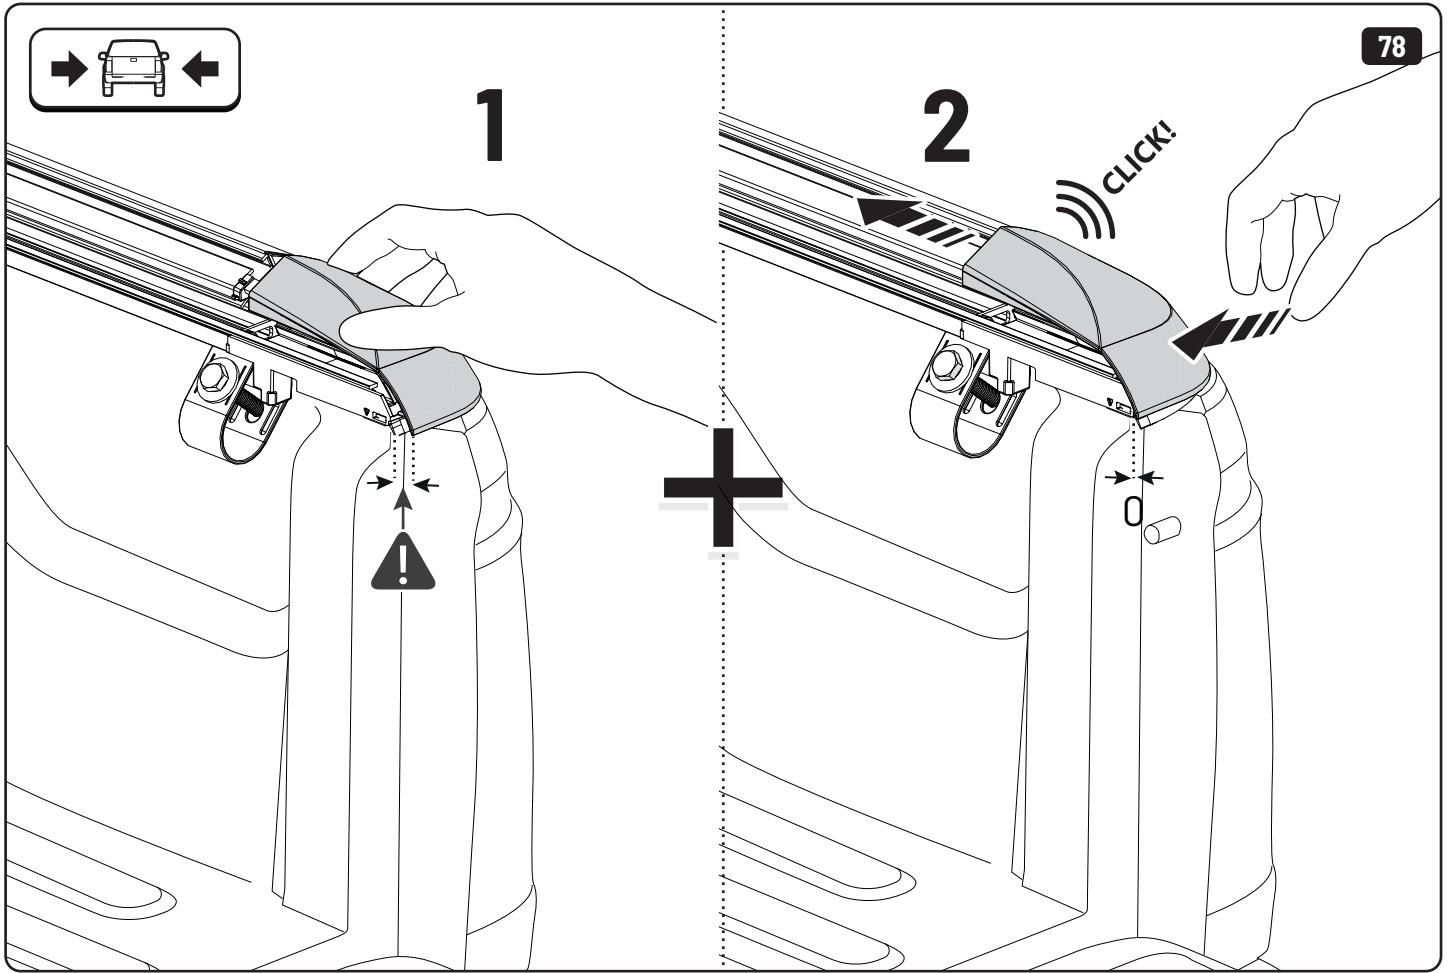


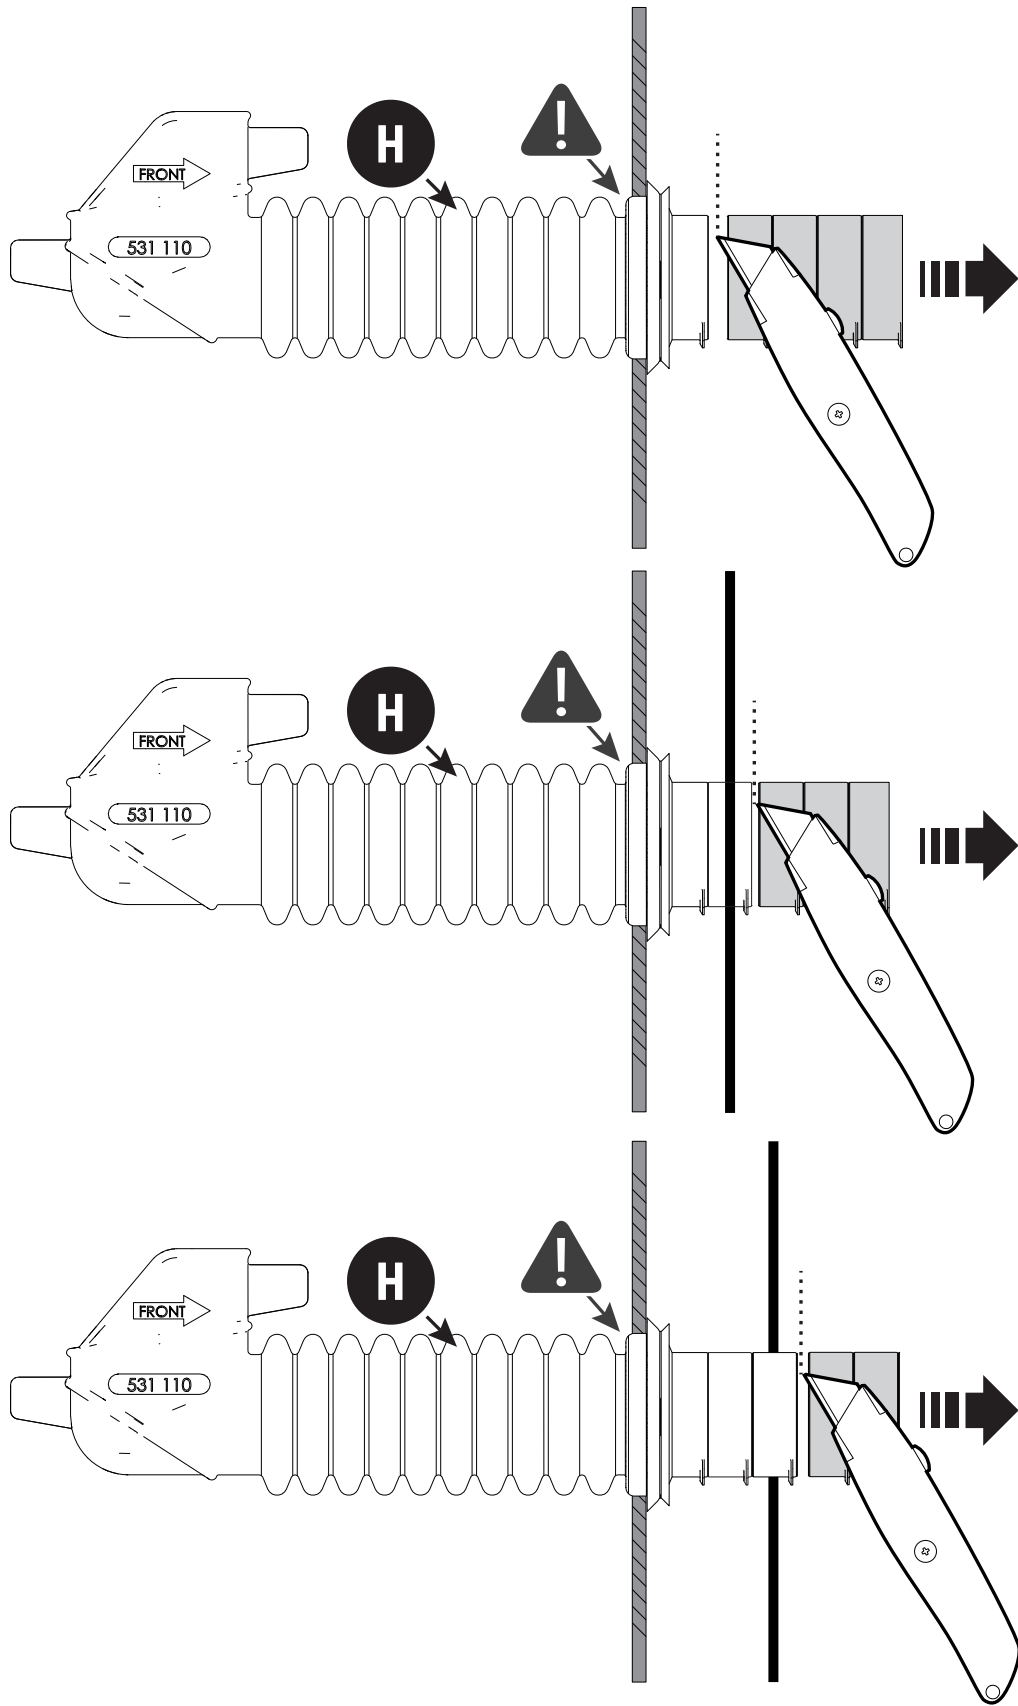


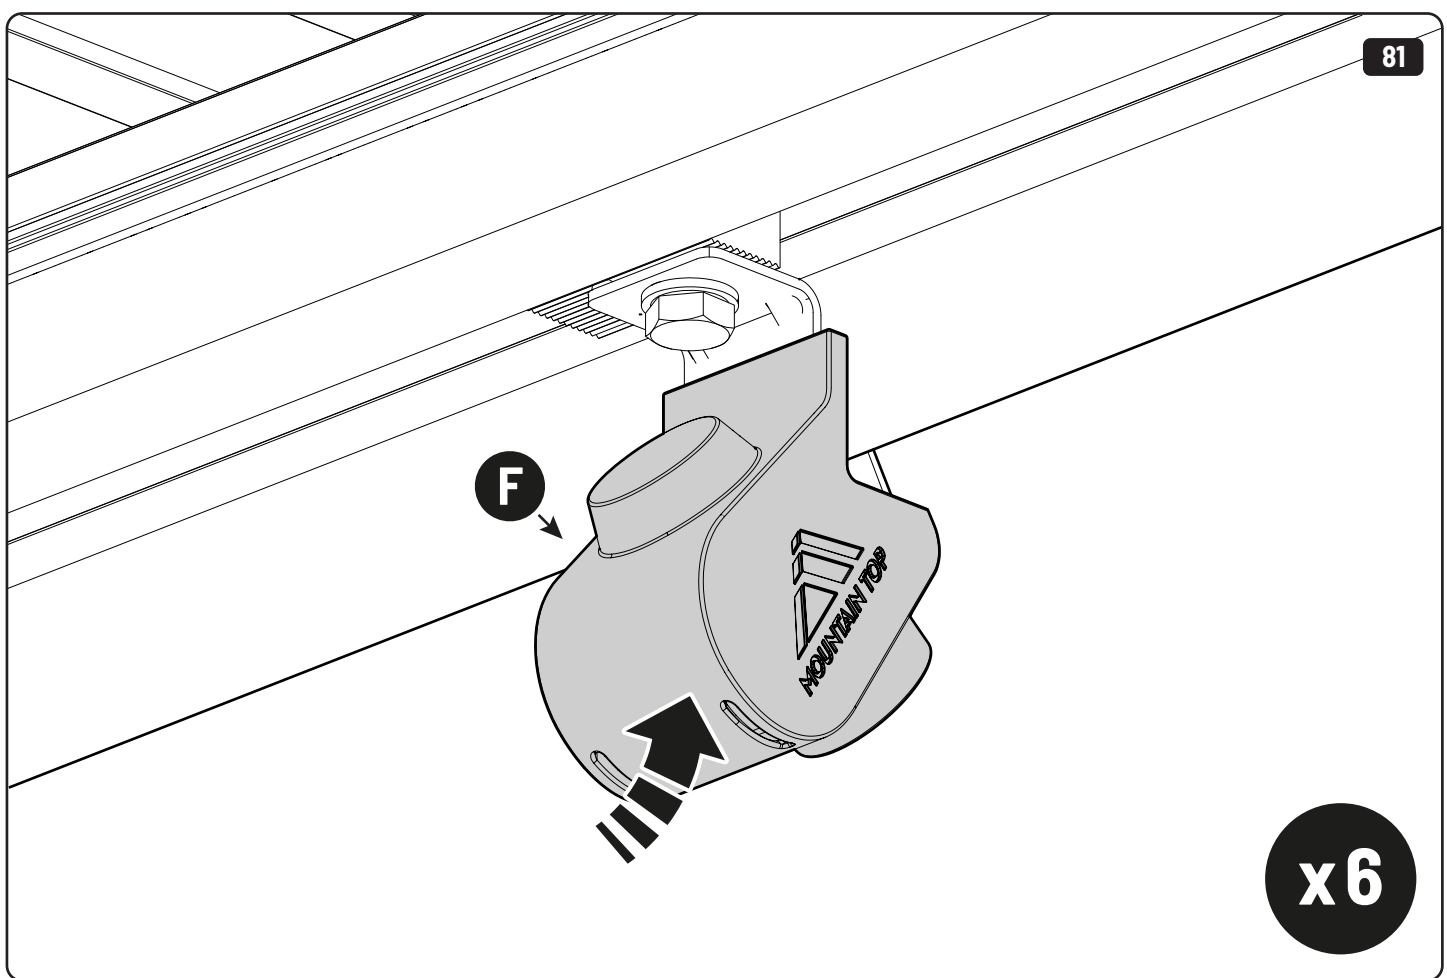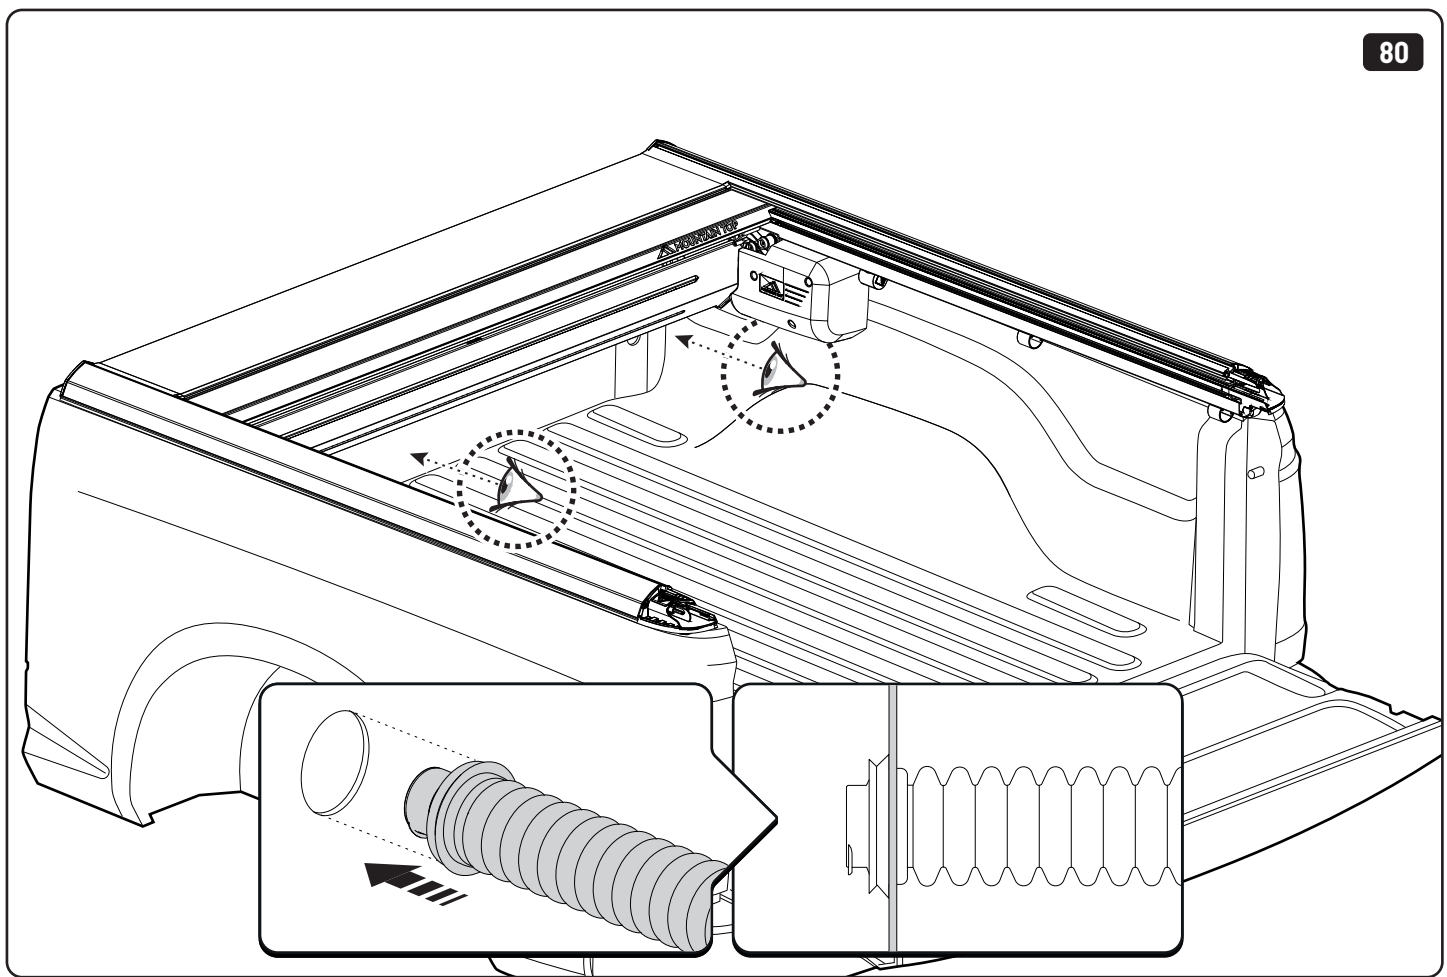

x6

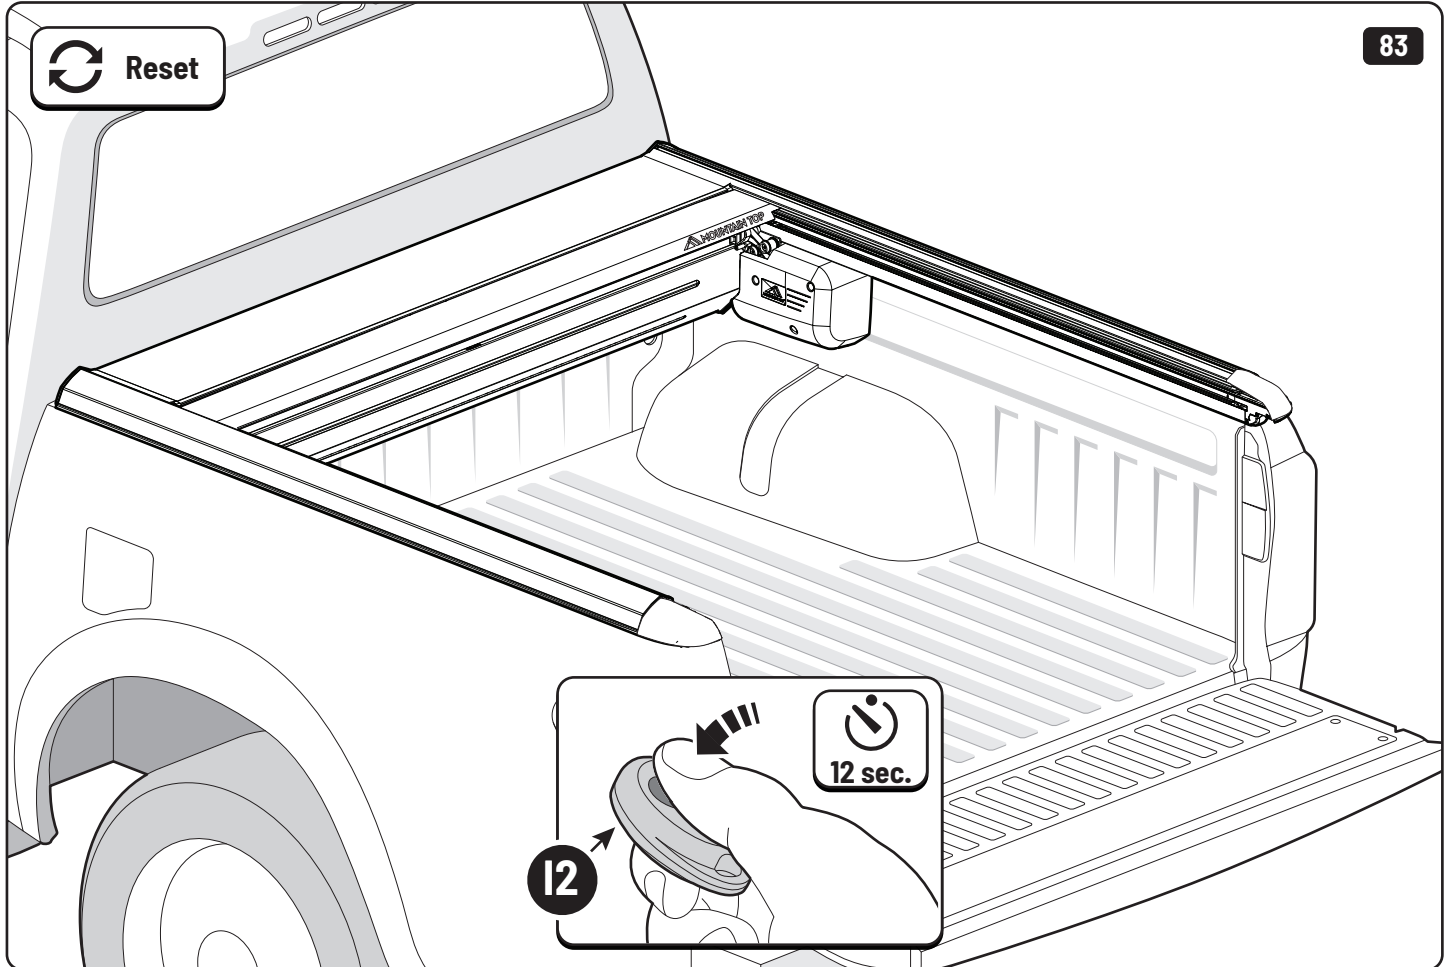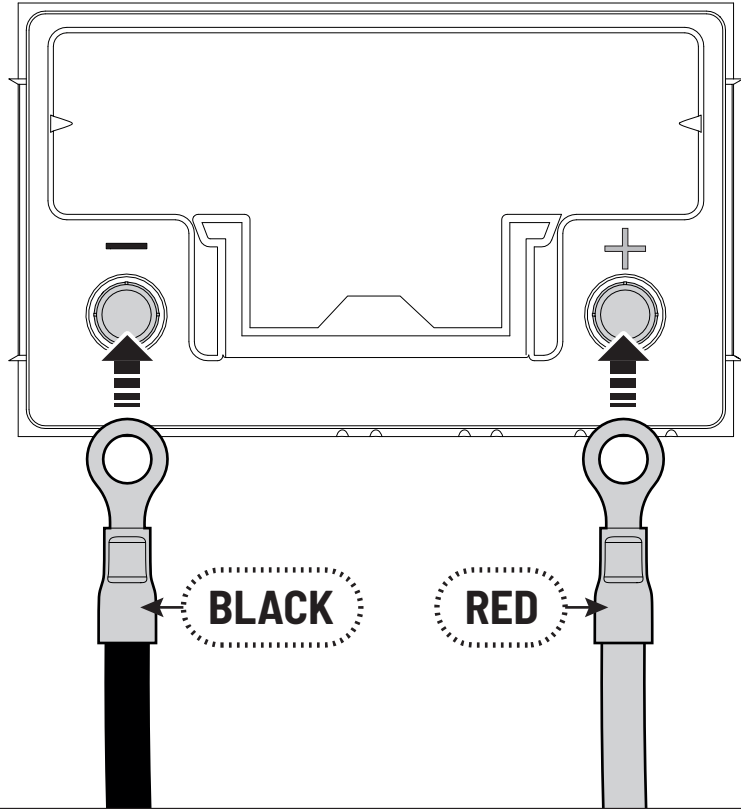

 Reset

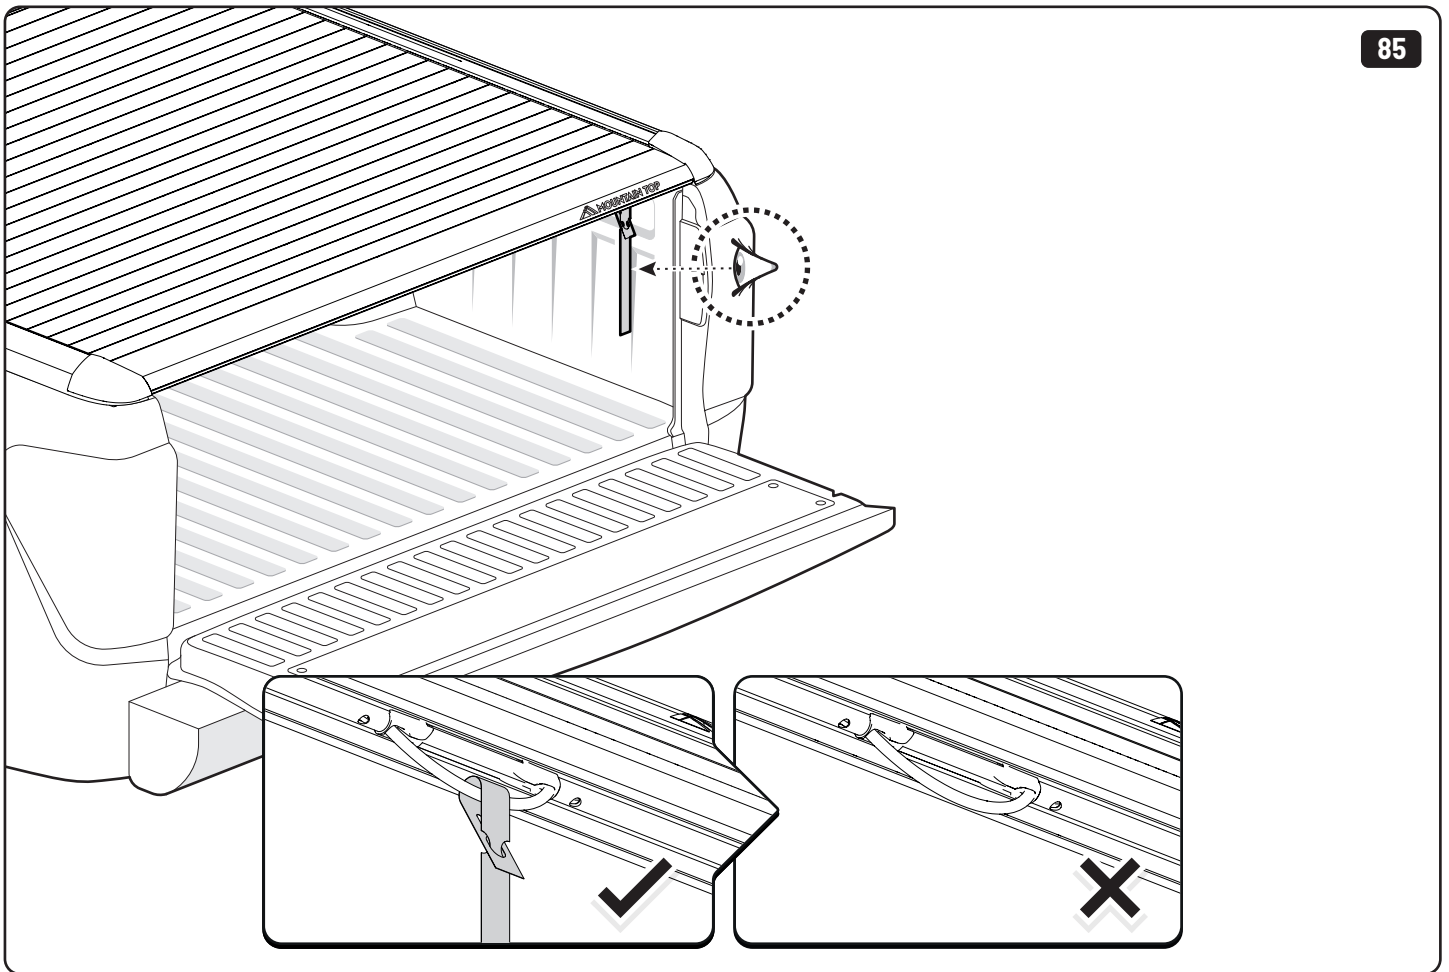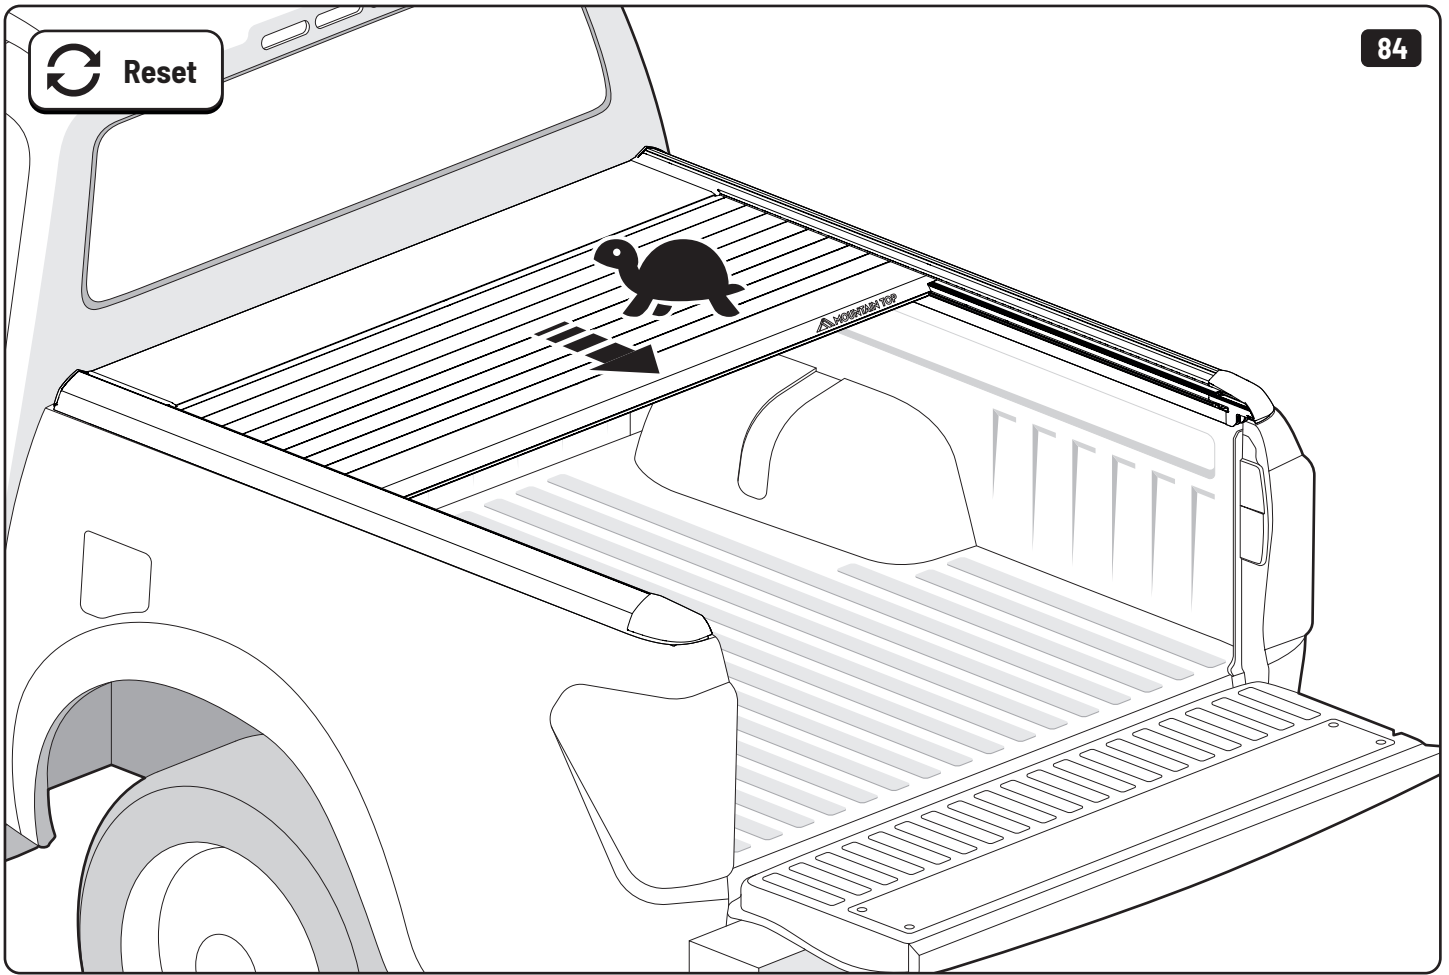



Steps	Page	Done by
Mounting rubber cross	9	
Mounting gliding rail in canister	15	
Holes for drain	24-28	
Width + Cross measurement	39+40	
Tightening the clamp screw	41	
Mounting drain	49	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab type (s)	Installation time	Weight
EVOe IS10 AB01	Isuzu / 2020 ->	Double Cab	1 hour (s)	43 kg
EVOe IS11 AB01	Isuzu / 2020 ->	Extra Cab	1 hour (s)	48 kg
EVOe IS10 AB11	Isuzu / 2020 ->	Double Cab	1 hour (s)	43 kg
EVOe IS11 AB11	Isuzu / 2020 ->	Extra Cab	1 hour (s)	48 kg
EVOe FO90 AB01	Ranger / 2011 ->	Double Cab	1 hour (s)	42 kg
EVOe FO90 AB11	Ranger / 2011 ->	Double Cab	1 hour (s)	42 kg
EVOe MX20 AB11	Maxus / 2022 ->	Crew Cab	1 hour (s)	42 kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni di montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare