





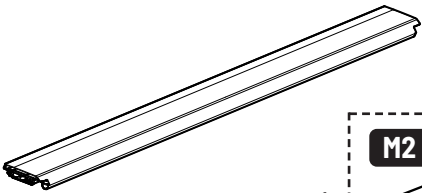

MOUNTAIN TOP® EVOe ROLL COVER

Installation manual



















DOWNLOAD PDF

Parts

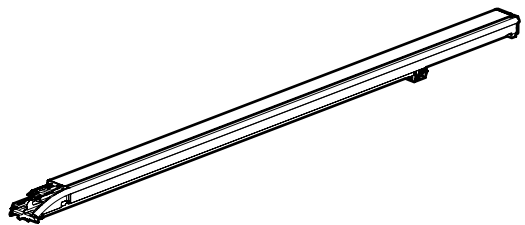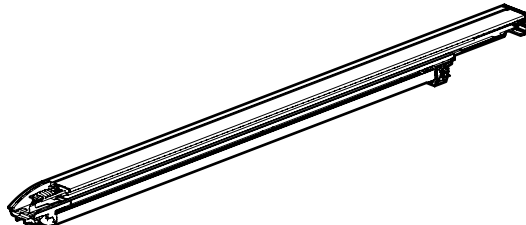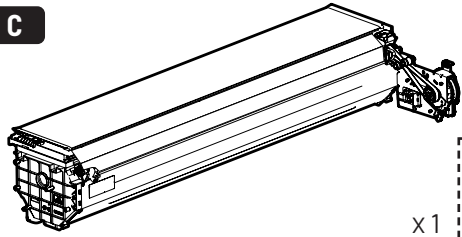
<p>A</p>  <p>x1</p>	<p>B</p>  <p>x1</p>
<p>C</p>  <p>x1</p> <div style="border: 1px dashed black; padding: 2px; display: inline-block;"> <p>L2</p>  <p>x2</p> </div>	<p>D</p>  <p>x1</p> <div style="border: 1px dashed black; padding: 2px; display: inline-block;"> <p>M2</p>  <p>x1</p> </div>

Kit
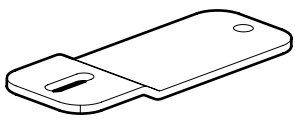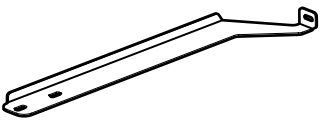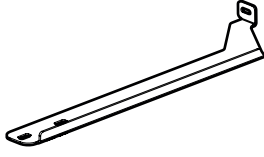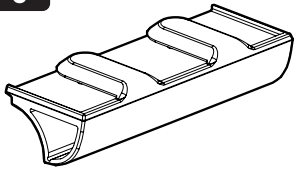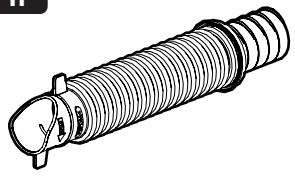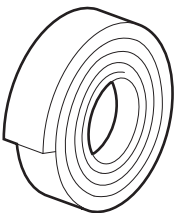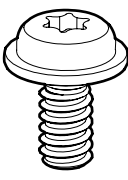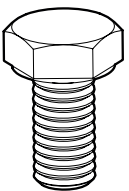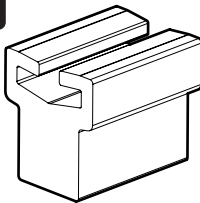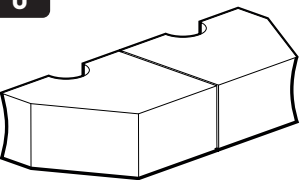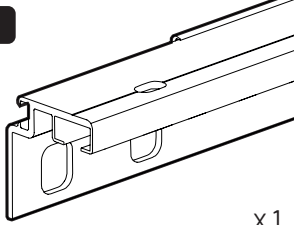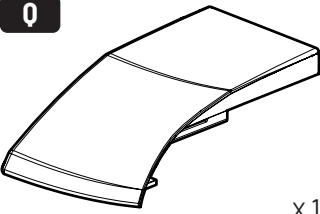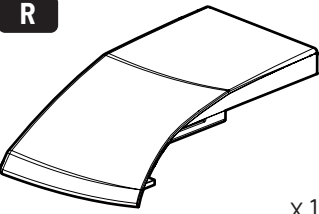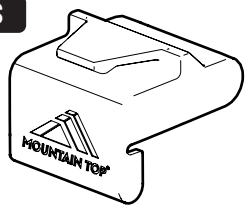
<p>E</p>  <p>x2</p>	<p>F1</p>  <p>x1</p>	<p>F2</p>  <p>x1</p>	<p>G</p>  <p>x2</p>
<p>H</p>  <p>x2</p>	<p>I</p>  <p>x1</p>	<p>J</p>  <p>x5</p>	<p>K</p>  <p>x4</p>
<p>L</p>  <p>x4</p>	<p>M</p>  <p>x2</p>	<p>N</p>  <p>x5</p>	<p>O</p>  <p>x1</p>
<p>P</p>  <p>x1</p>	<p>Q</p>  <p>x1</p>	<p>R</p>  <p>x1</p>	<p>S</p>  <p>x2</p>


Kit

T

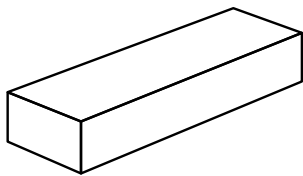


x2

U

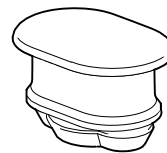


x2

V

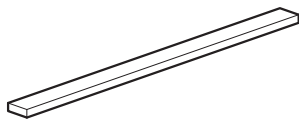


x2

W

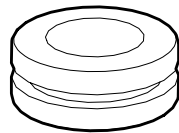

x1


X

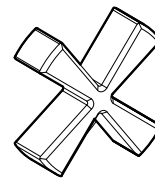

x2


Kit

Y

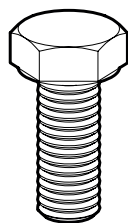

x4


Z

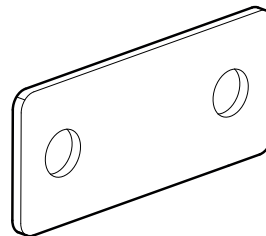

x2


Kit

A2

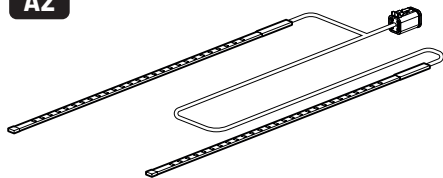


x1

B2

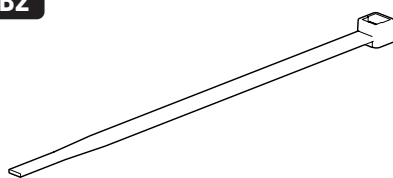

x6


C2

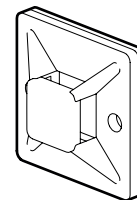

x6

Power supply kit

D2

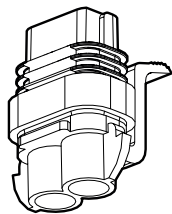


x1

E2




x1

F3



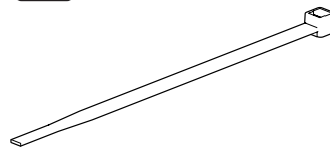



x6

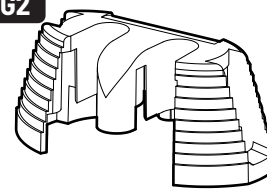


G2


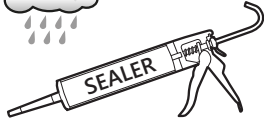





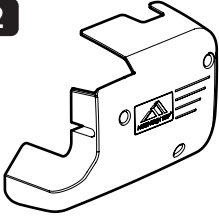

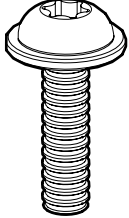


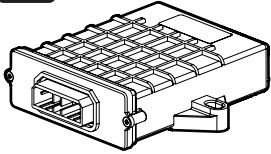
x1


Kit		
 <p>H2</p> <p>x1</p>	 <p>I2</p> <p>x3</p>	 <p>J2</p> <p>x2</p>

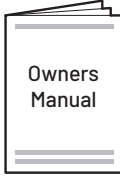Kit
 <p>K2</p> <p>x1</p>



Kit		
 <p>Manual</p> <p>x1</p>	 <p>TÜV</p> <p>x1</p>	 <p>Owners Manual</p> <p>x1</p>

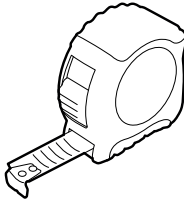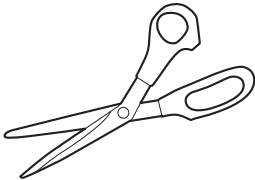Tools needed				
  <p>SEALER</p>	 <p>Ø3.5MM Ø18MM Ø40MM</p>	<p>1 - 25 Nm</p>  <p>● 4mm ⚙ T30 ○ M10 ⚙ 10+13mm</p>	 <p>ANTI-RUST</p> <p>Rust protection Rostschutzmittel Anti-rouille Anti roest</p>	 <p>Silicone Spray</p>
	 <p>H₂O</p>			 <p>LOCTITE 243</p>

Applying rust protection

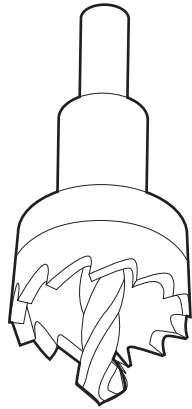

Ø18 + Ø40 MM

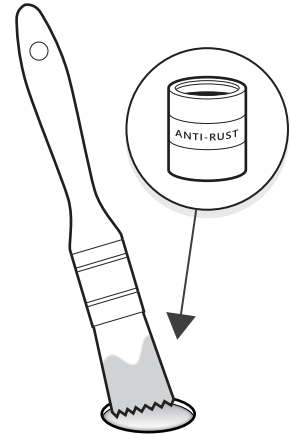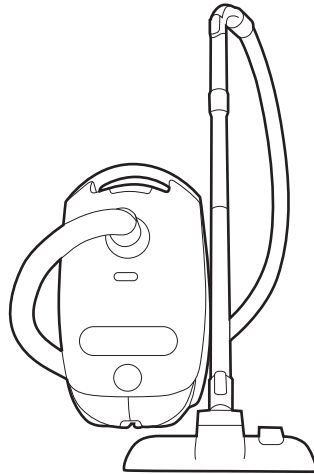


Remove all accessories from the truck bed that interferes with the roll cover before installing.

This includes cargo racks, bedliners, covers, cargo management systems etc.


Sharp edge




1

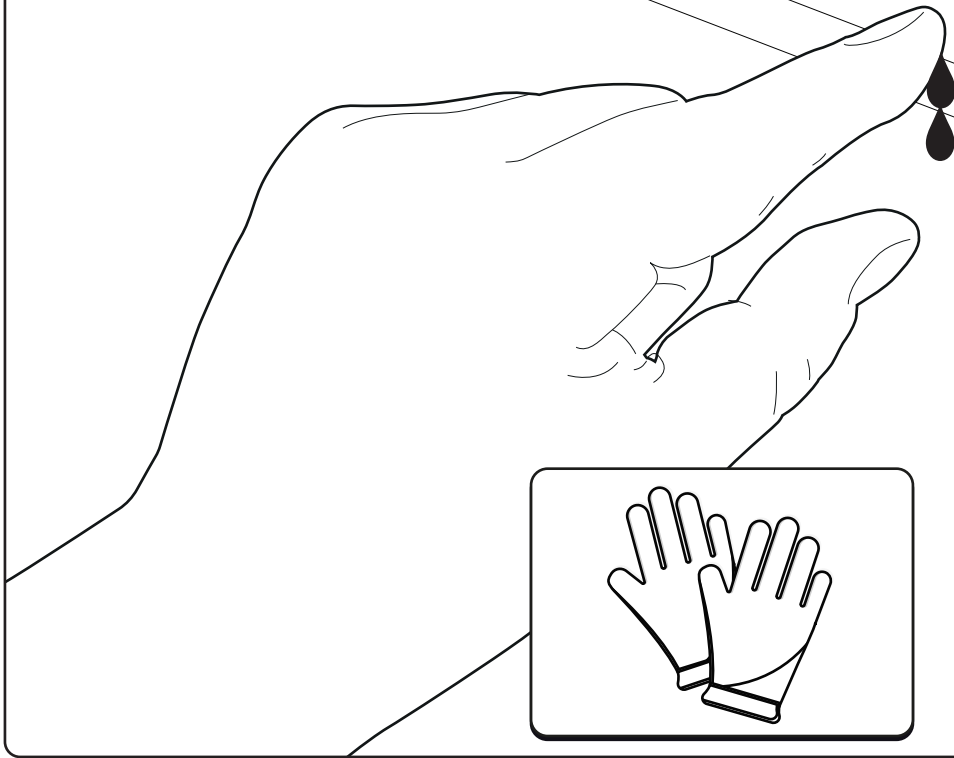


2

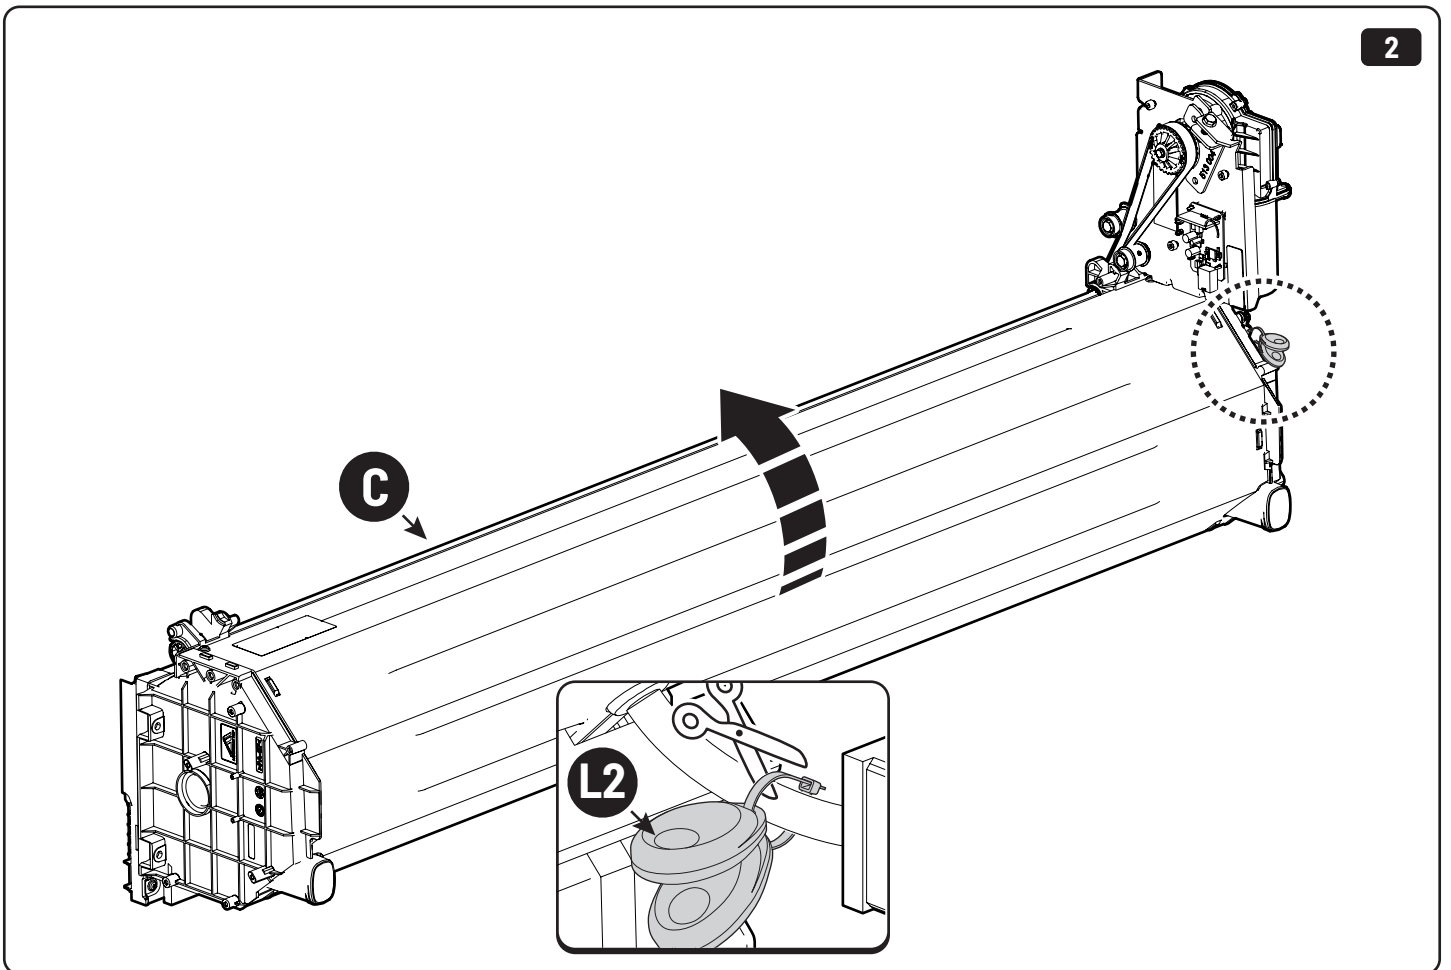

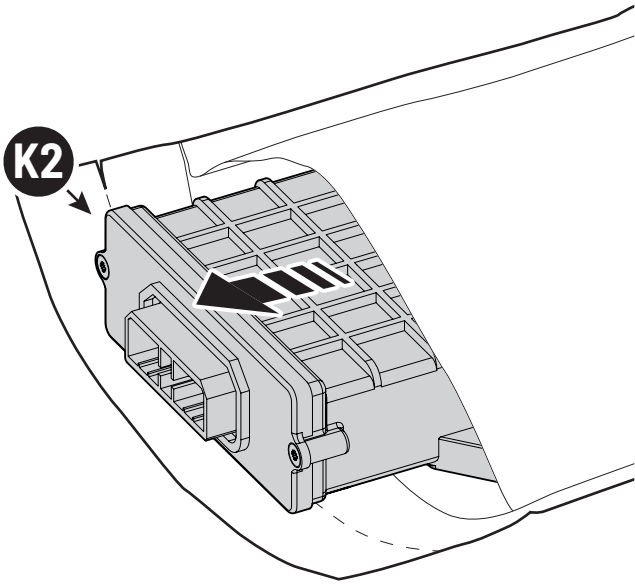




1


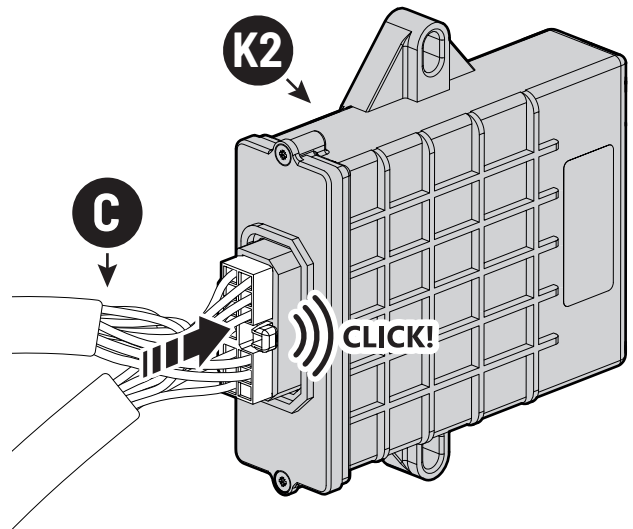




2



4mm 2,4Nm


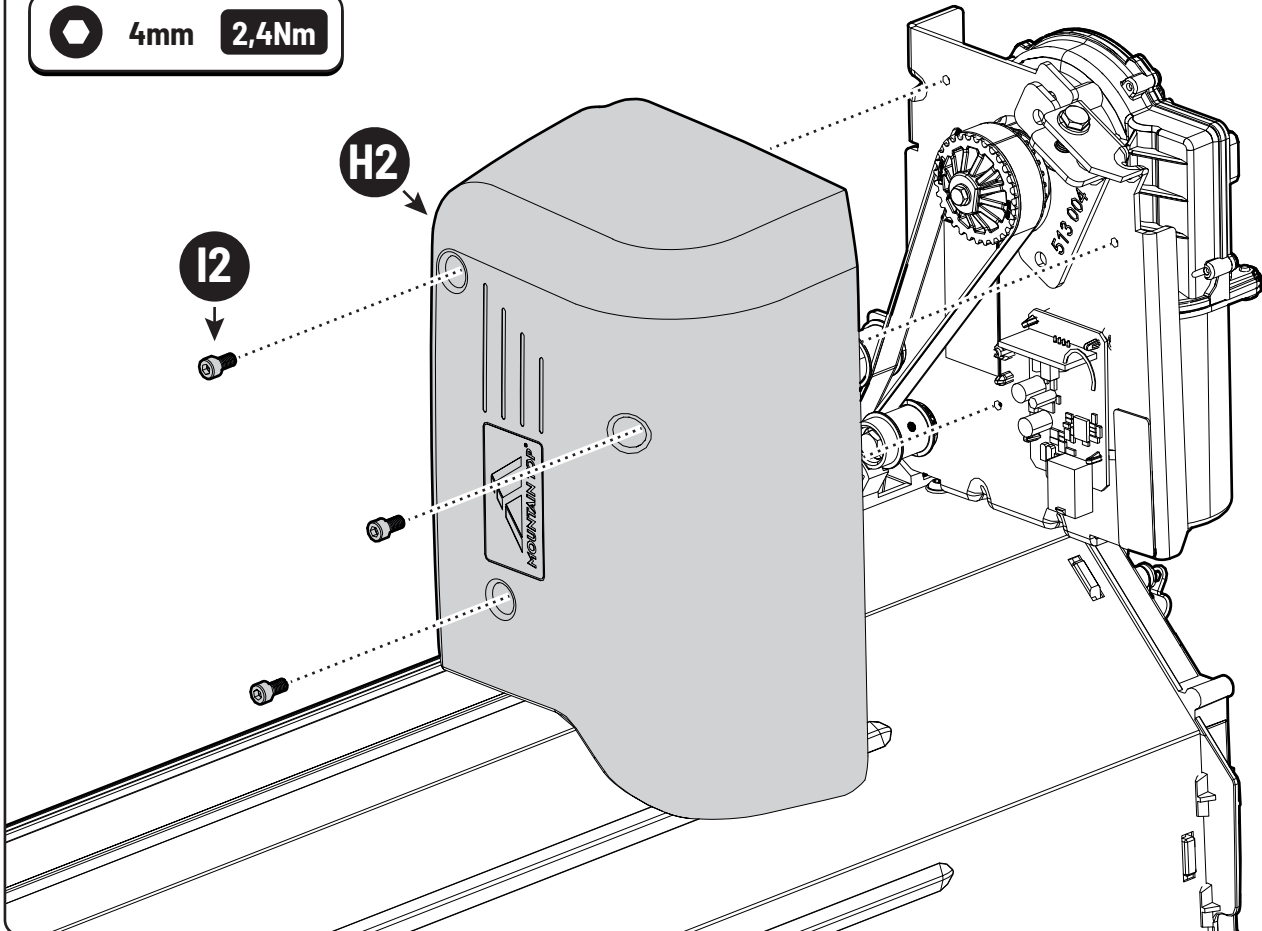


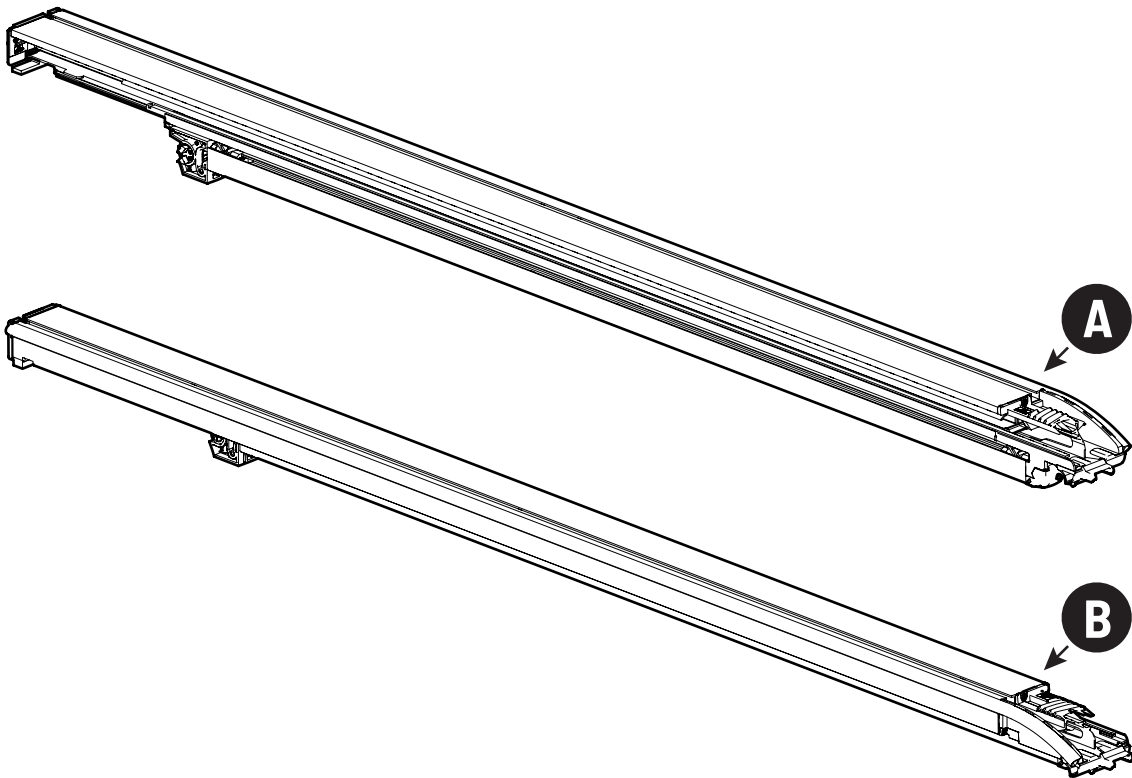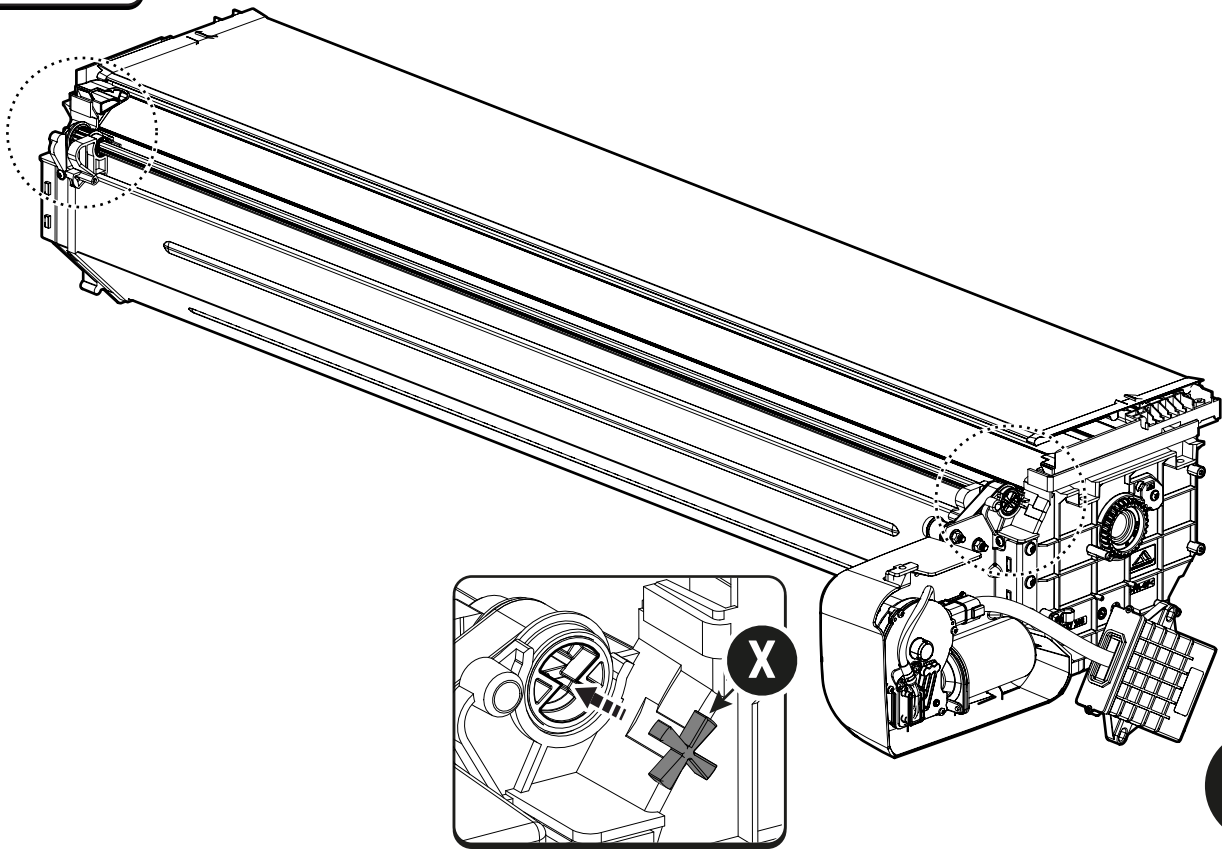

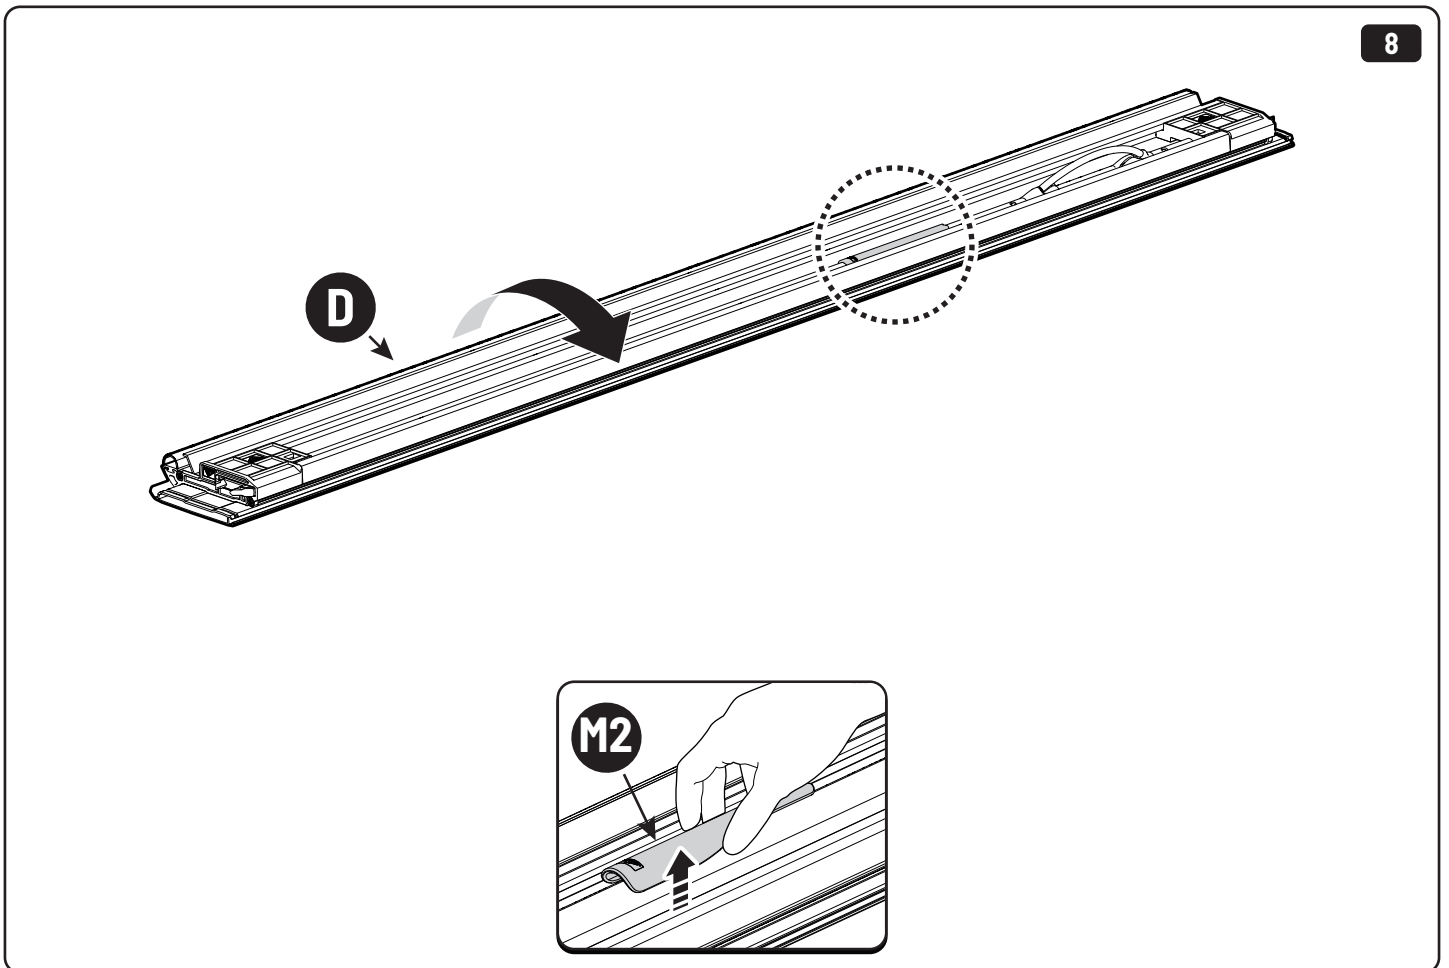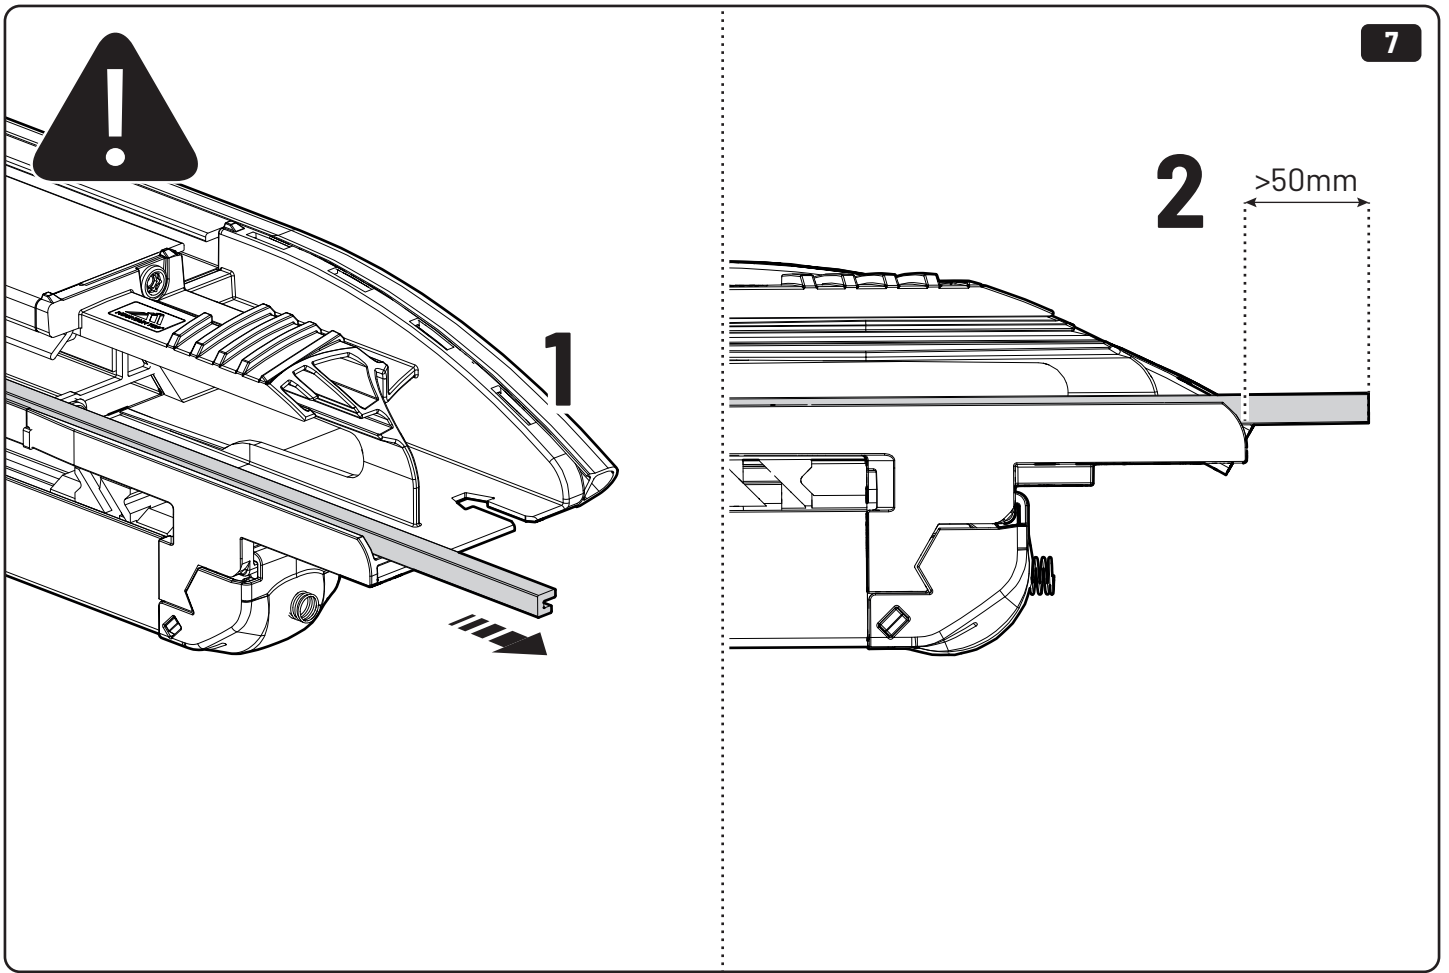


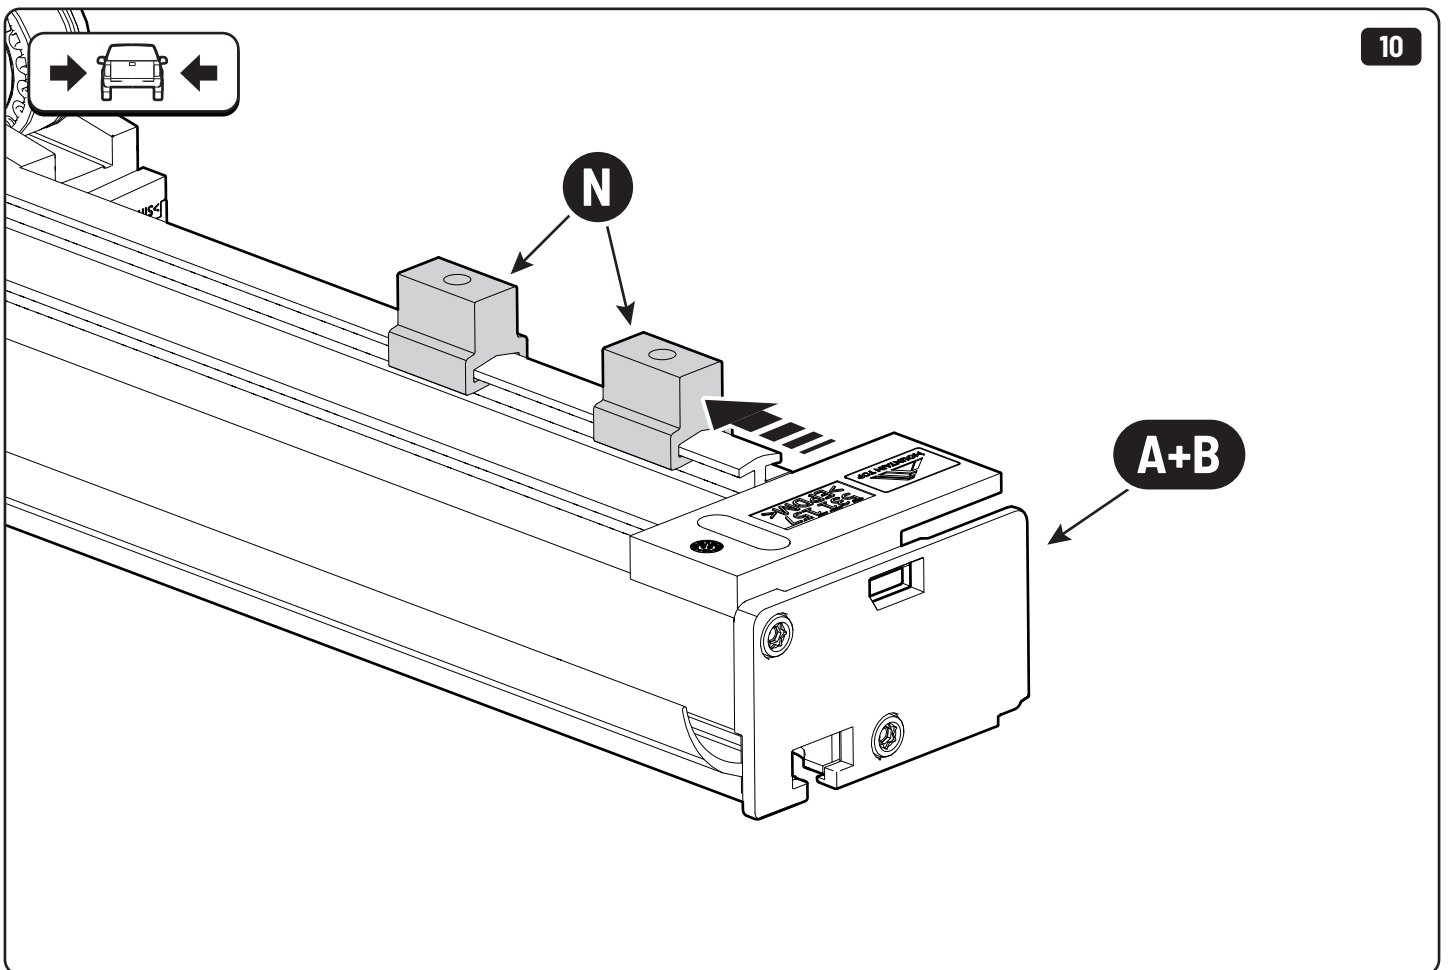
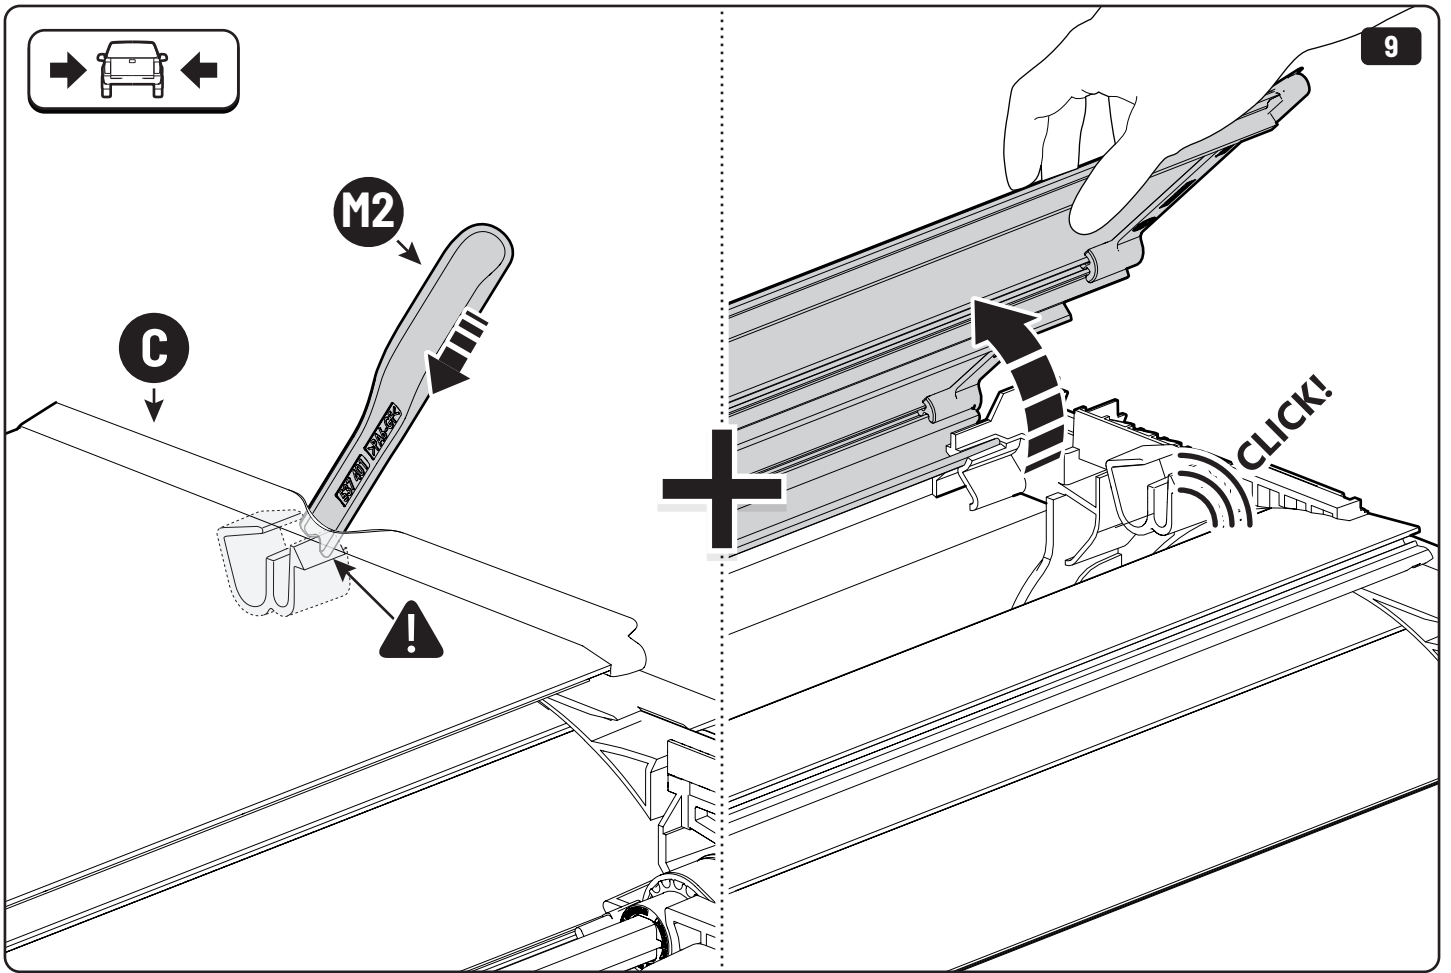


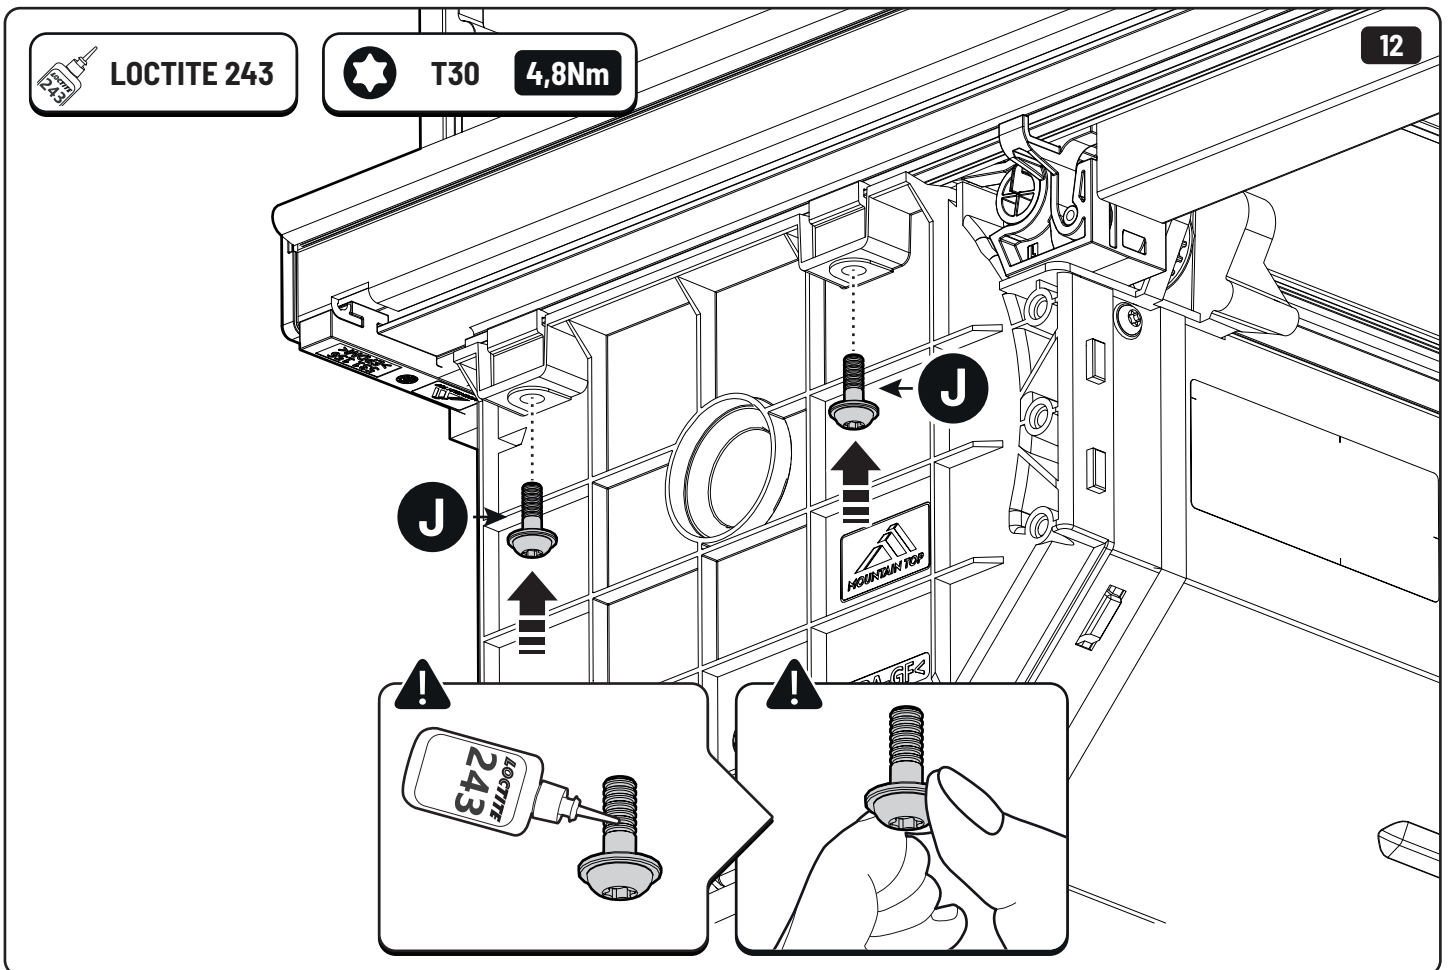
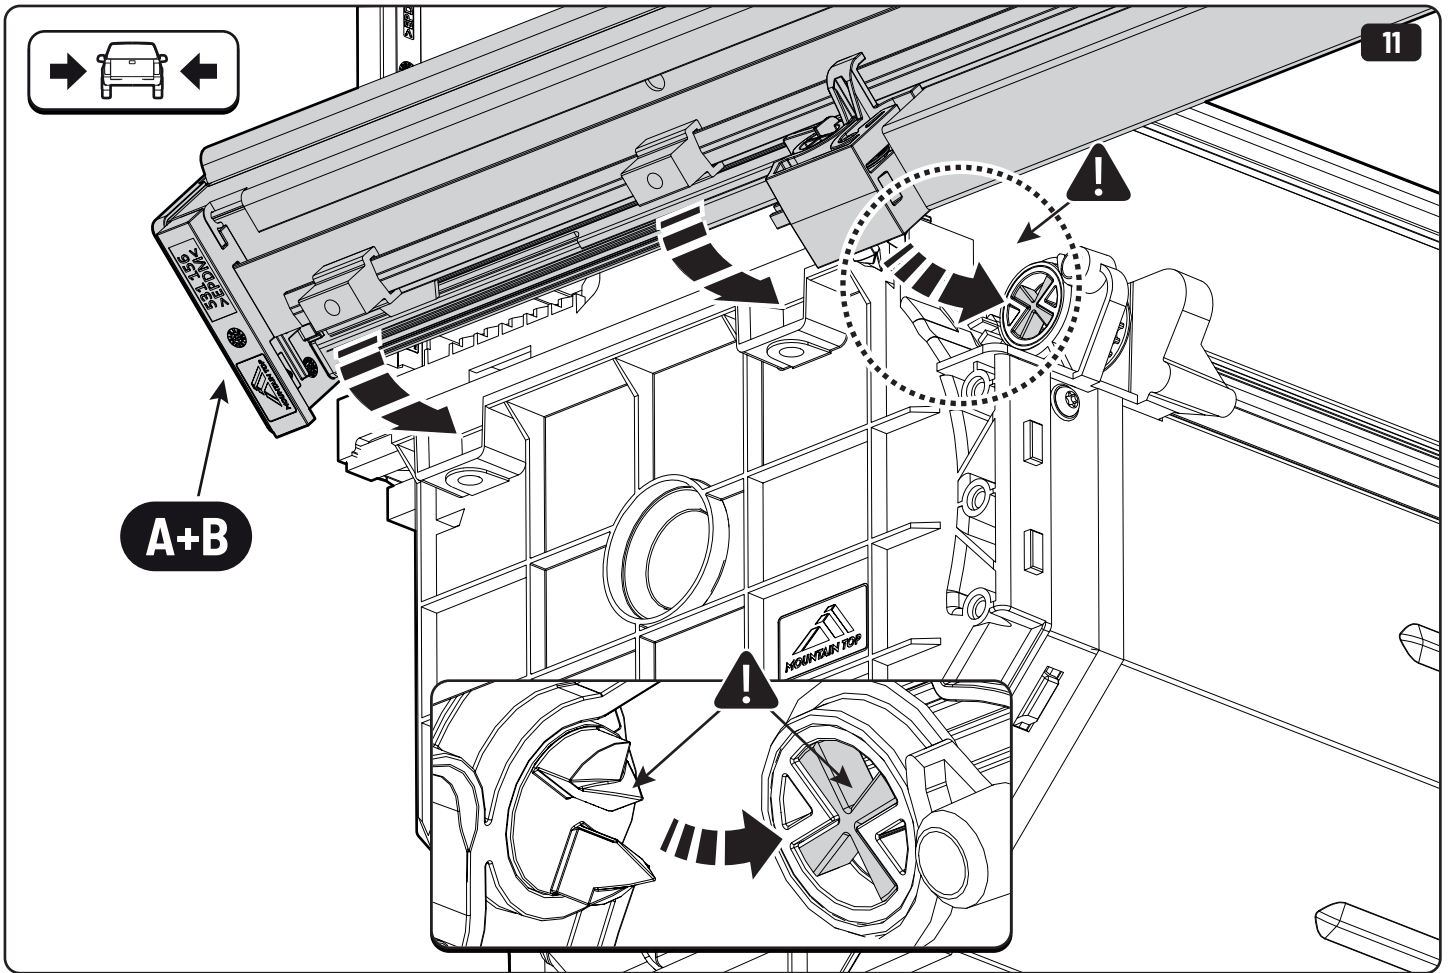


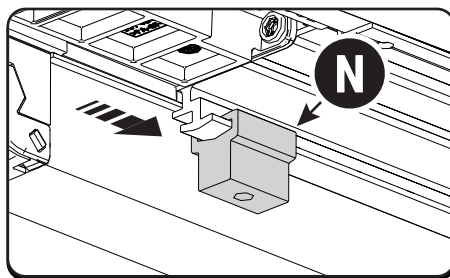
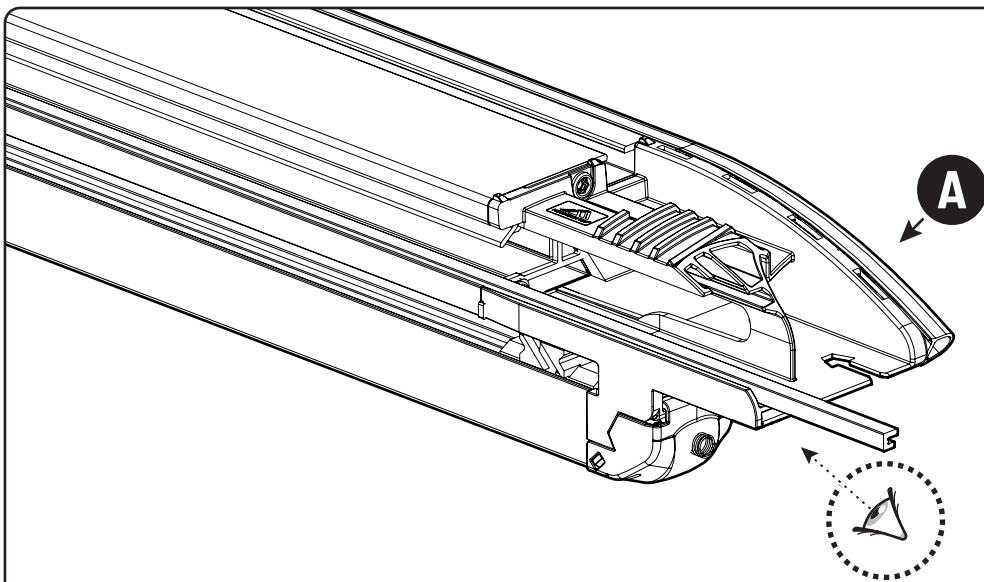



 **LOCTITE 243**



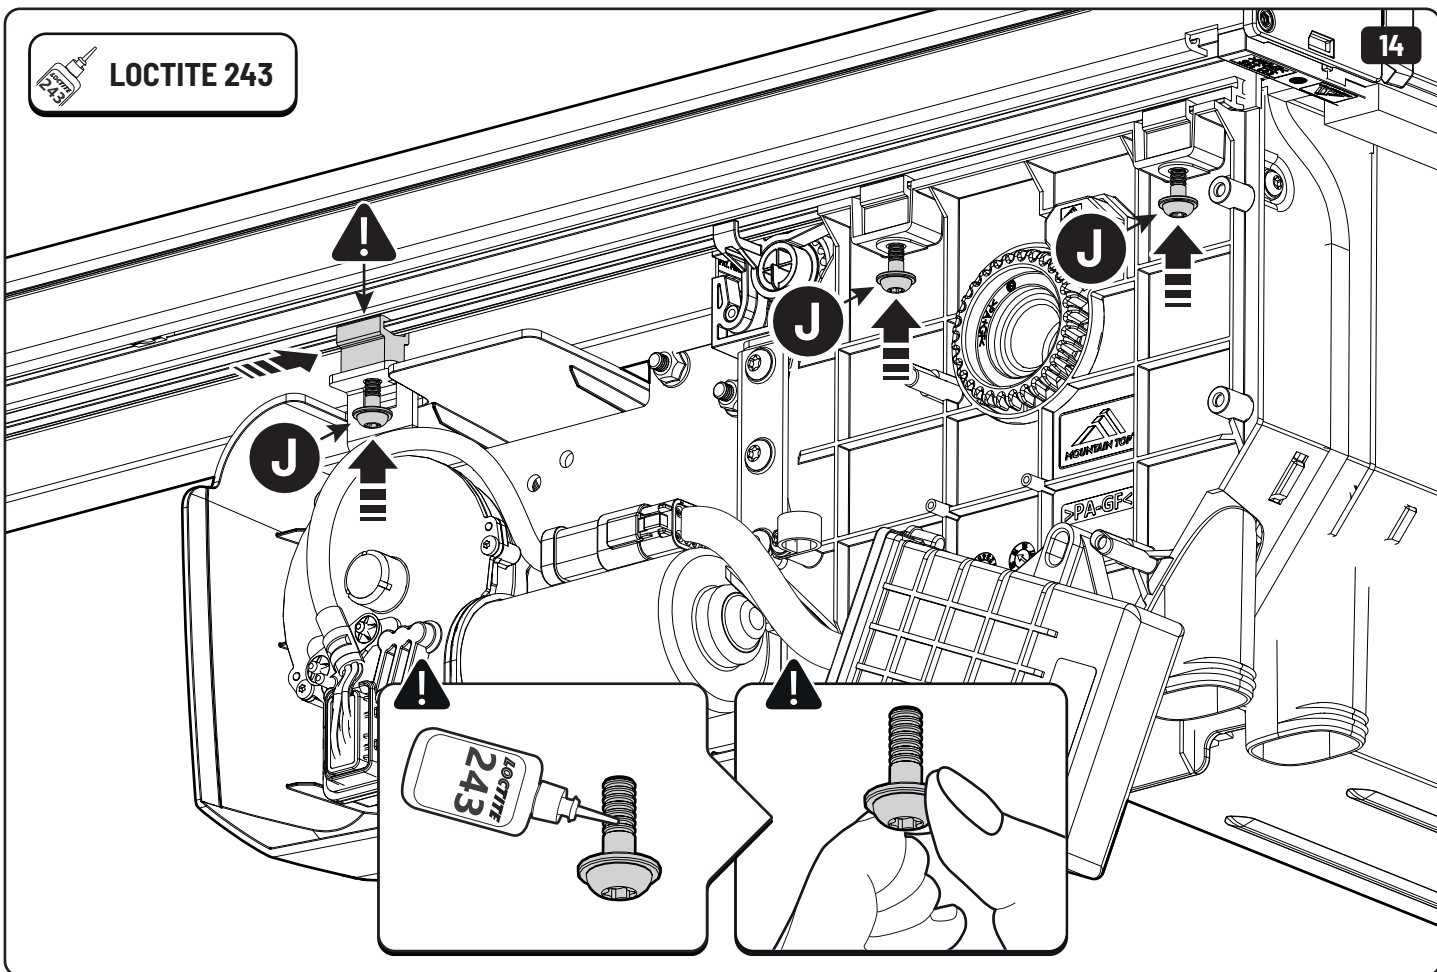


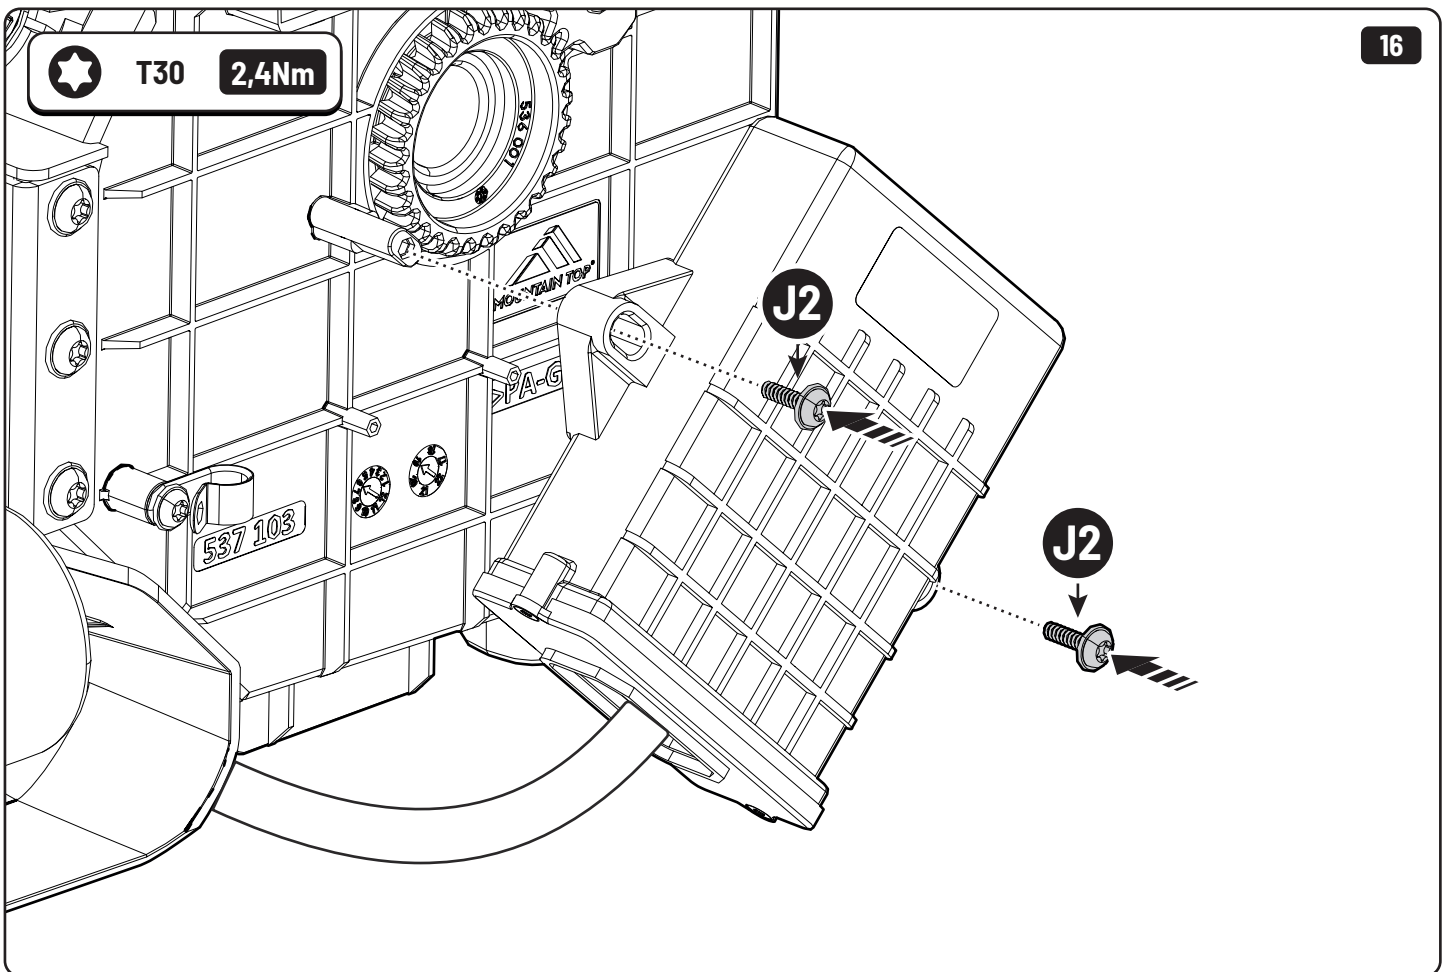
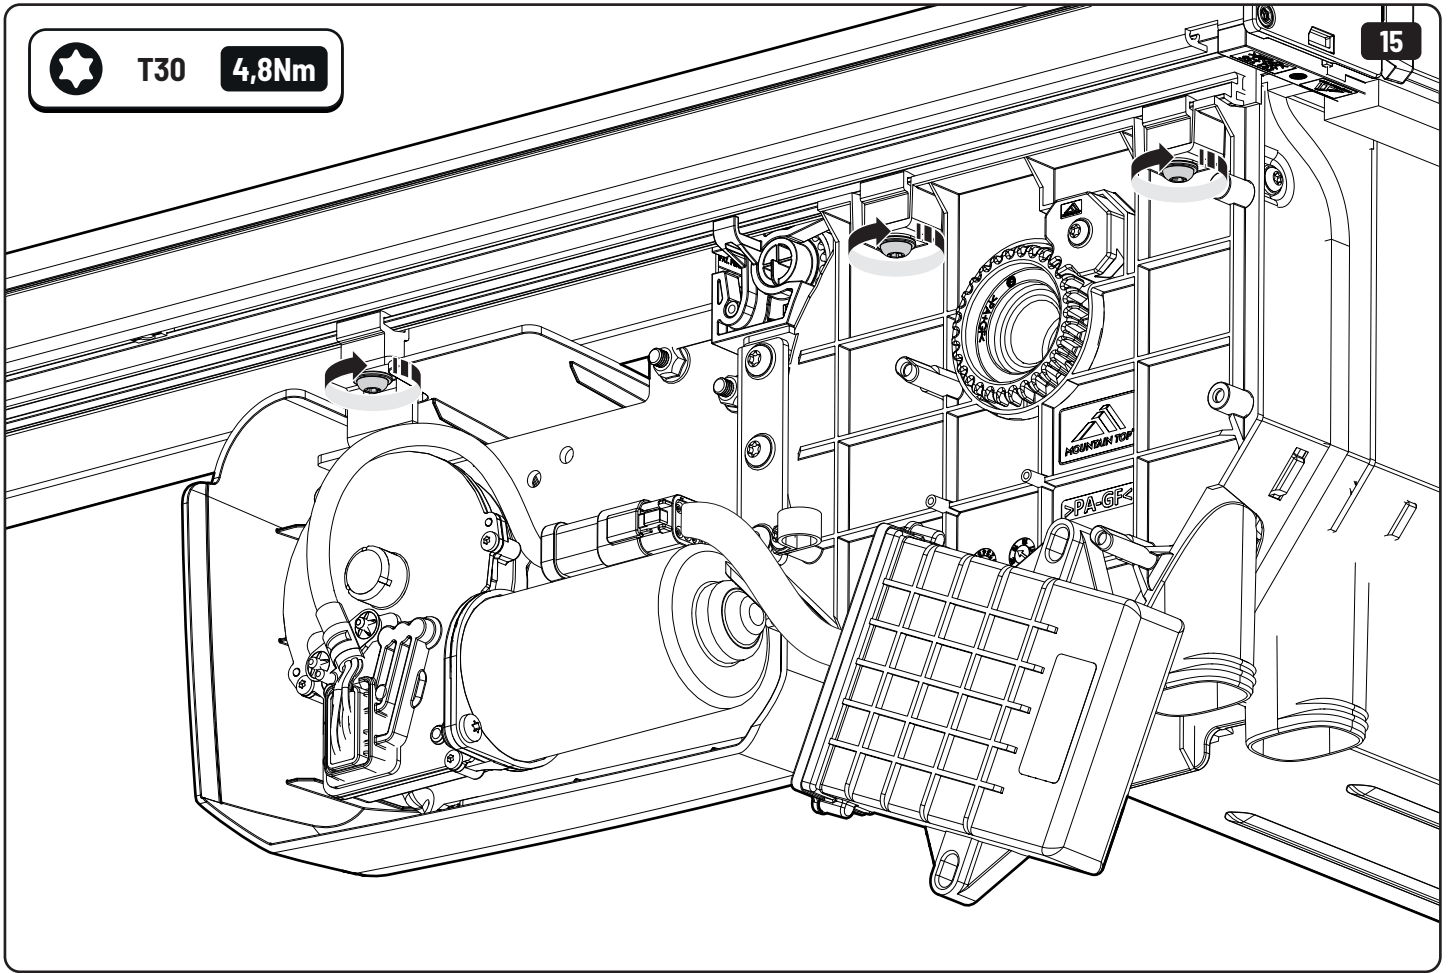


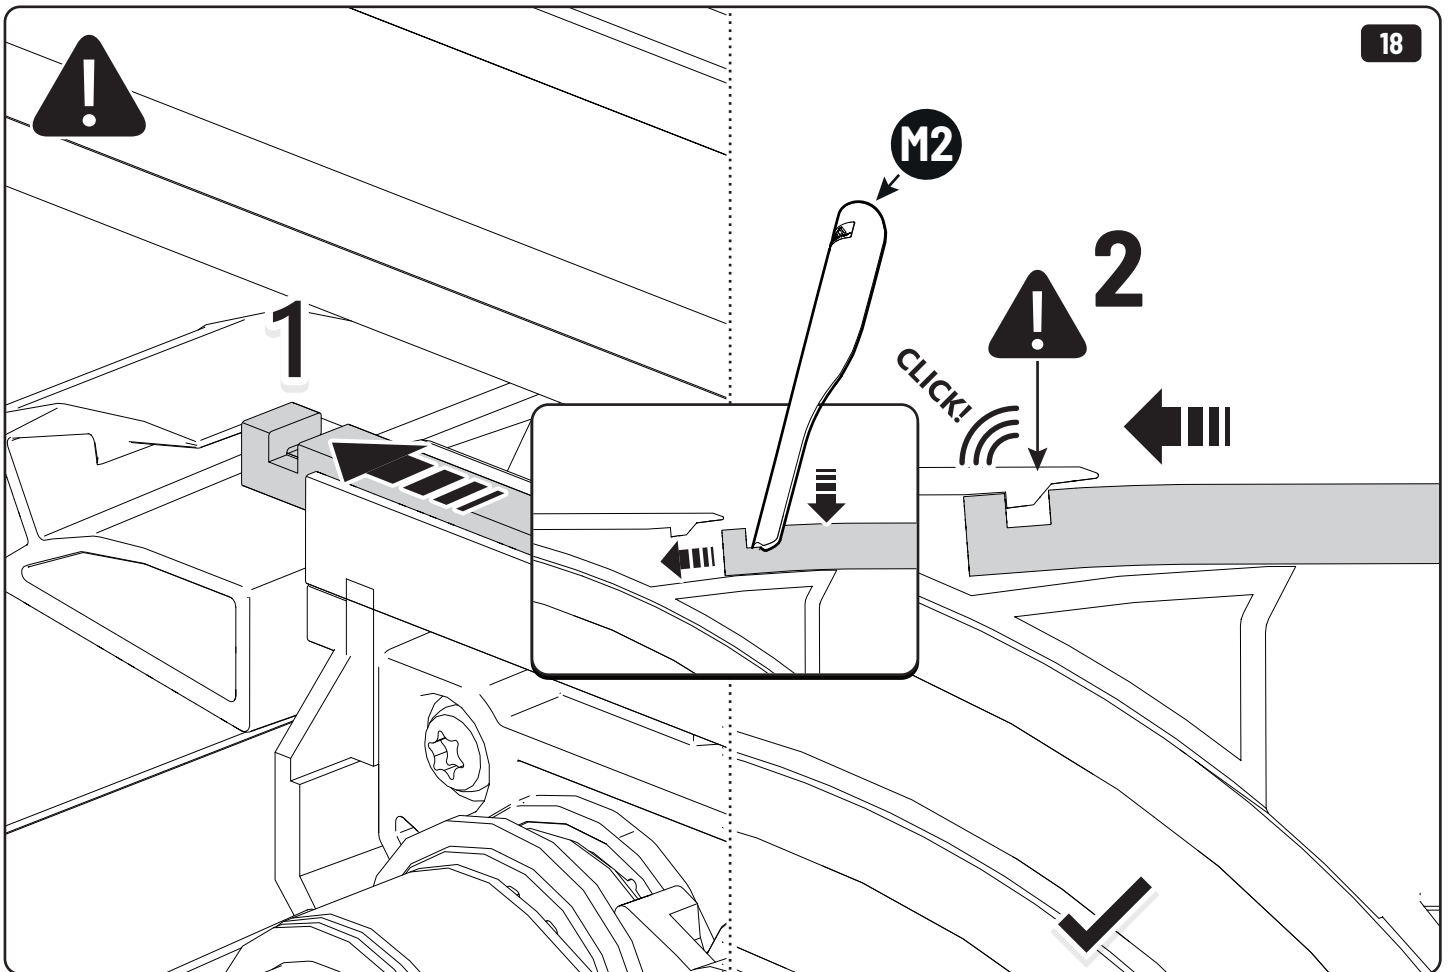
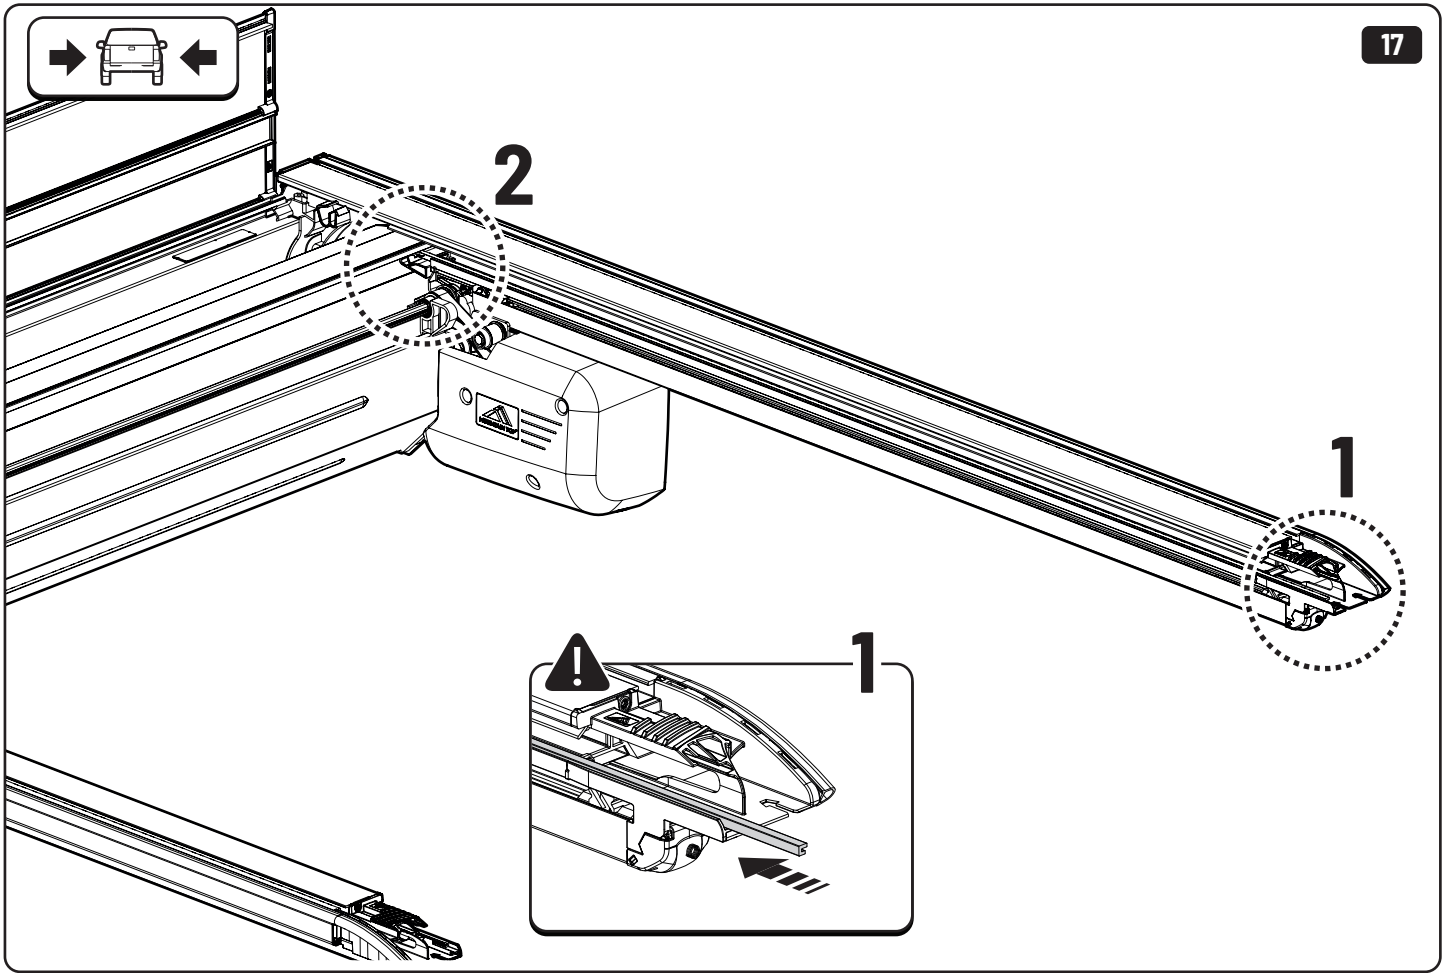


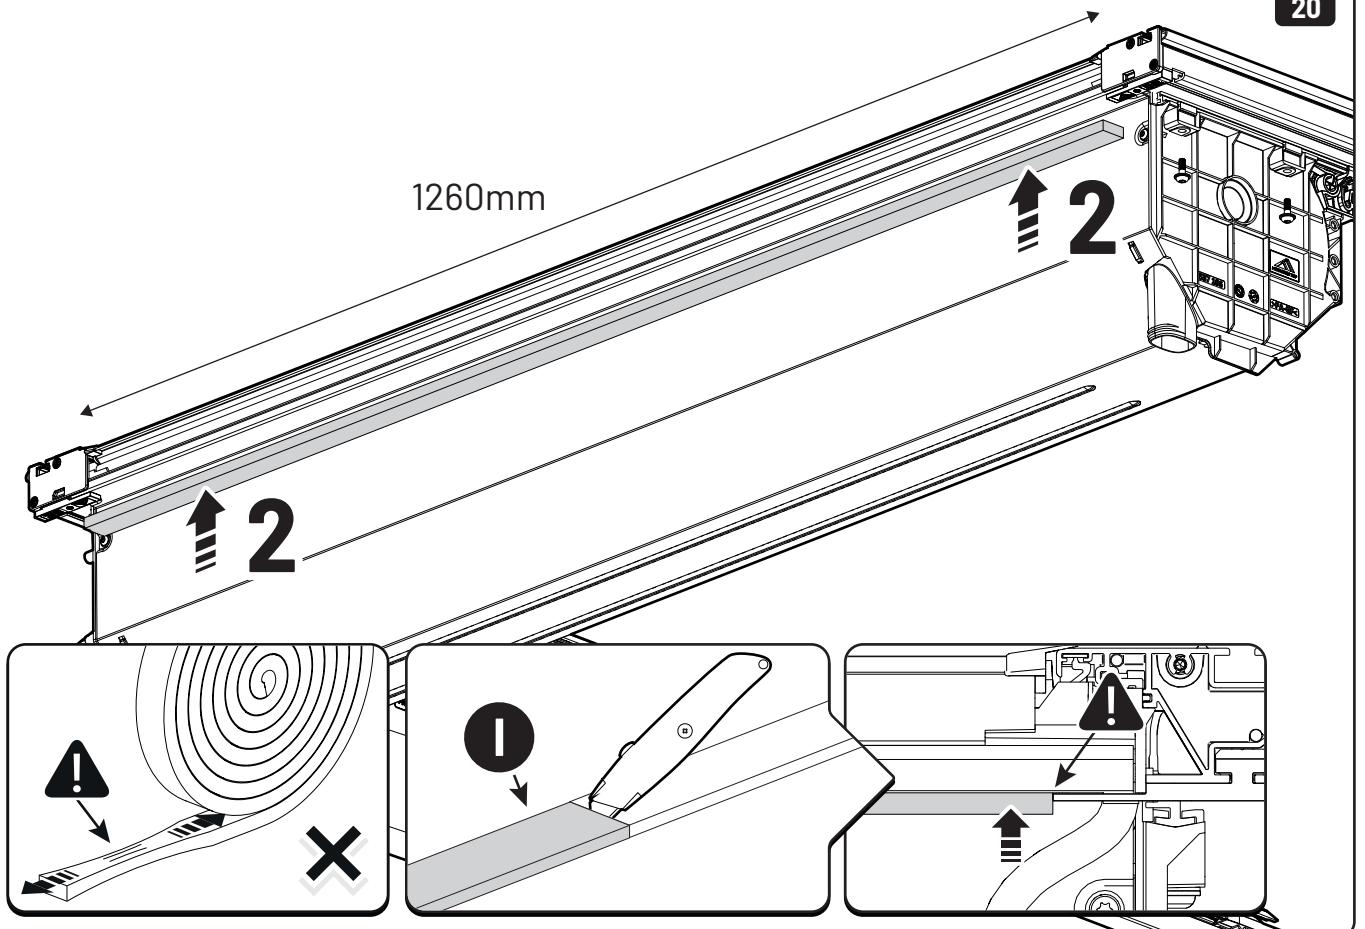
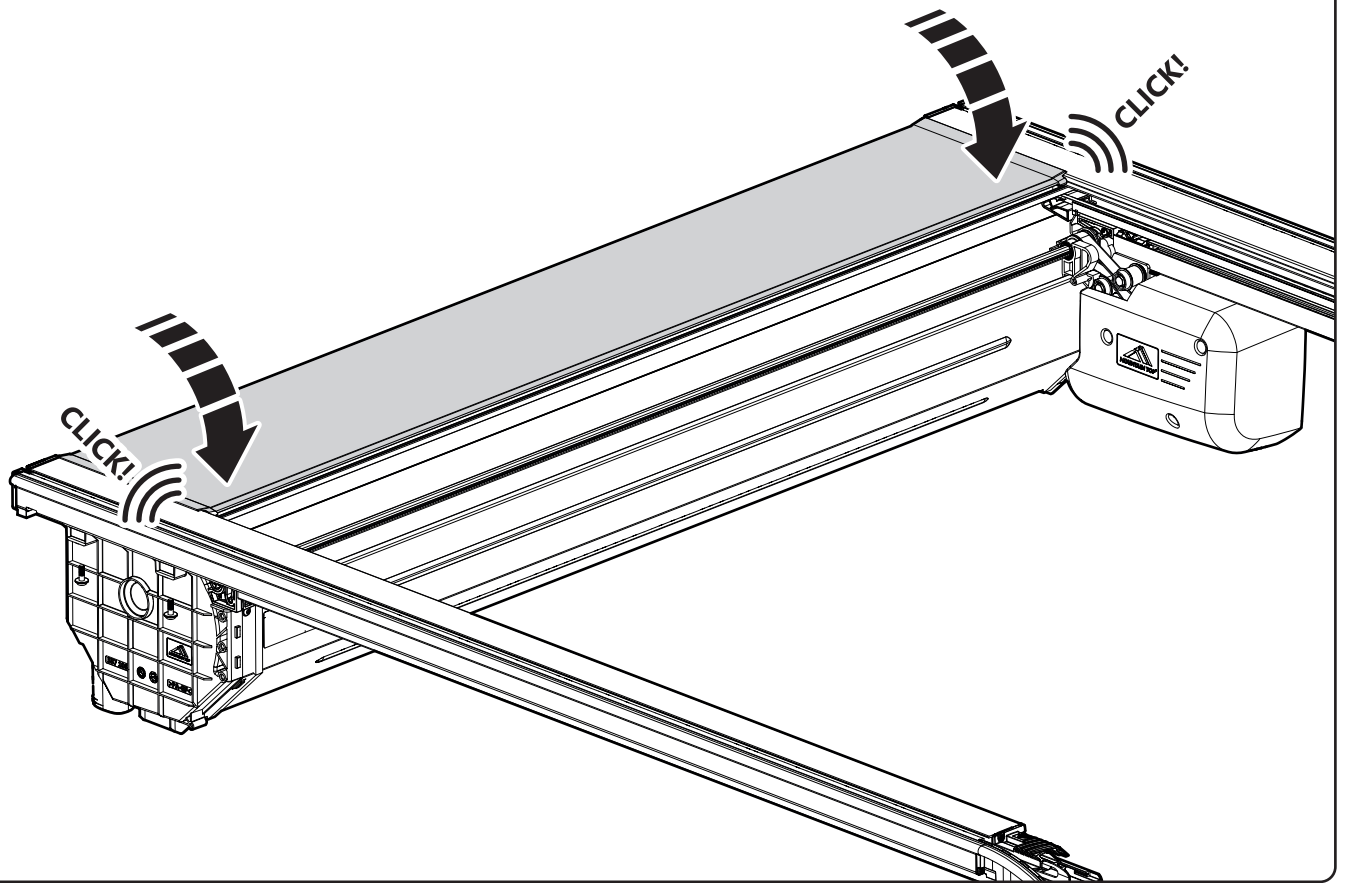



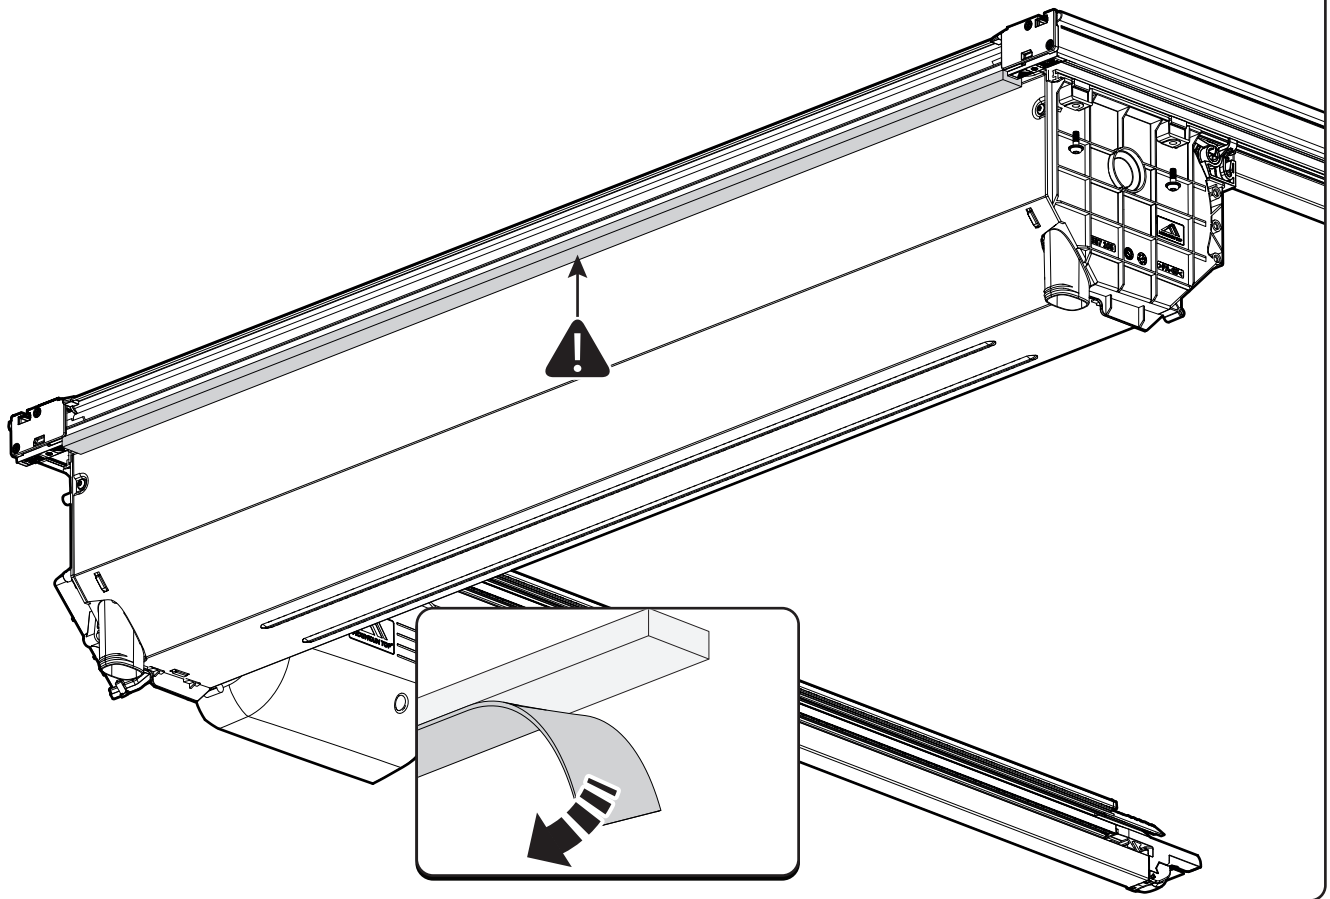


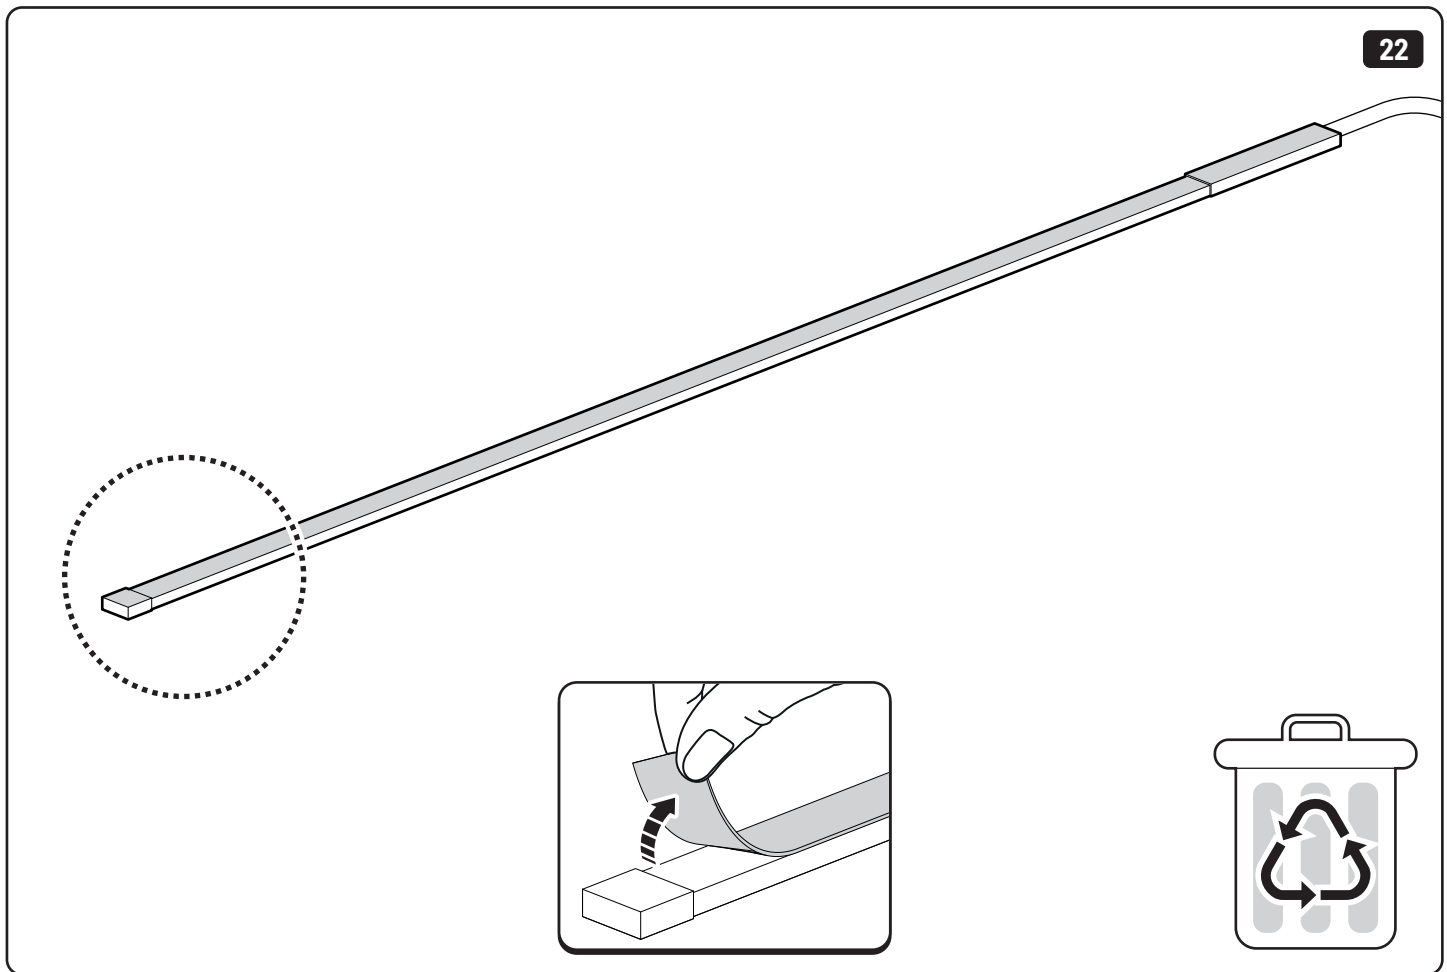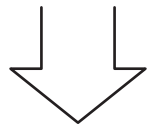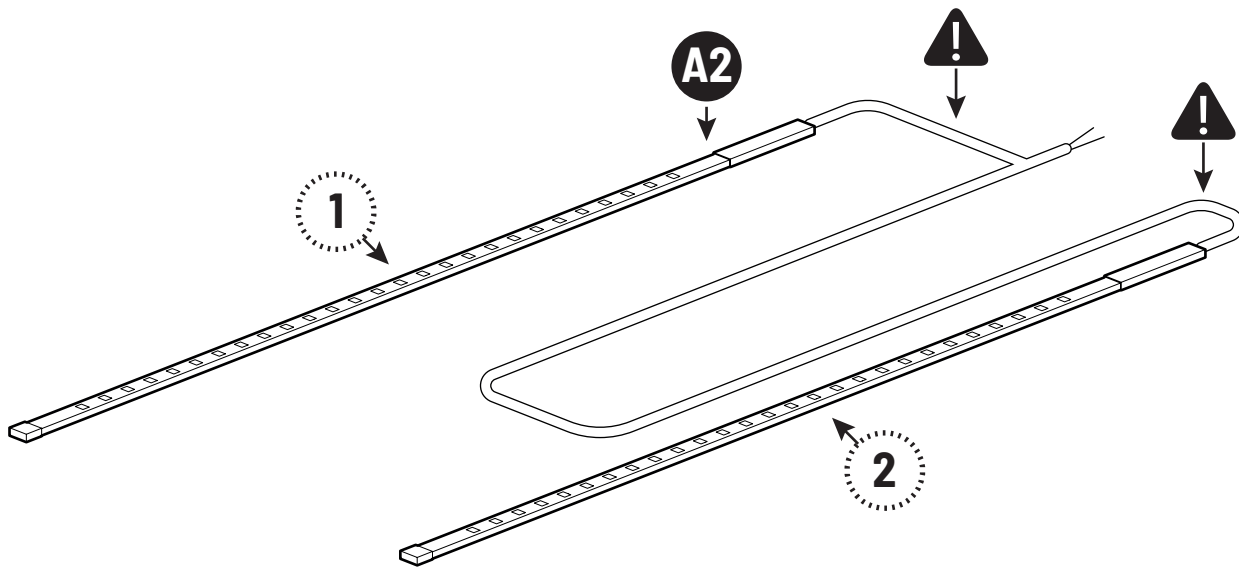

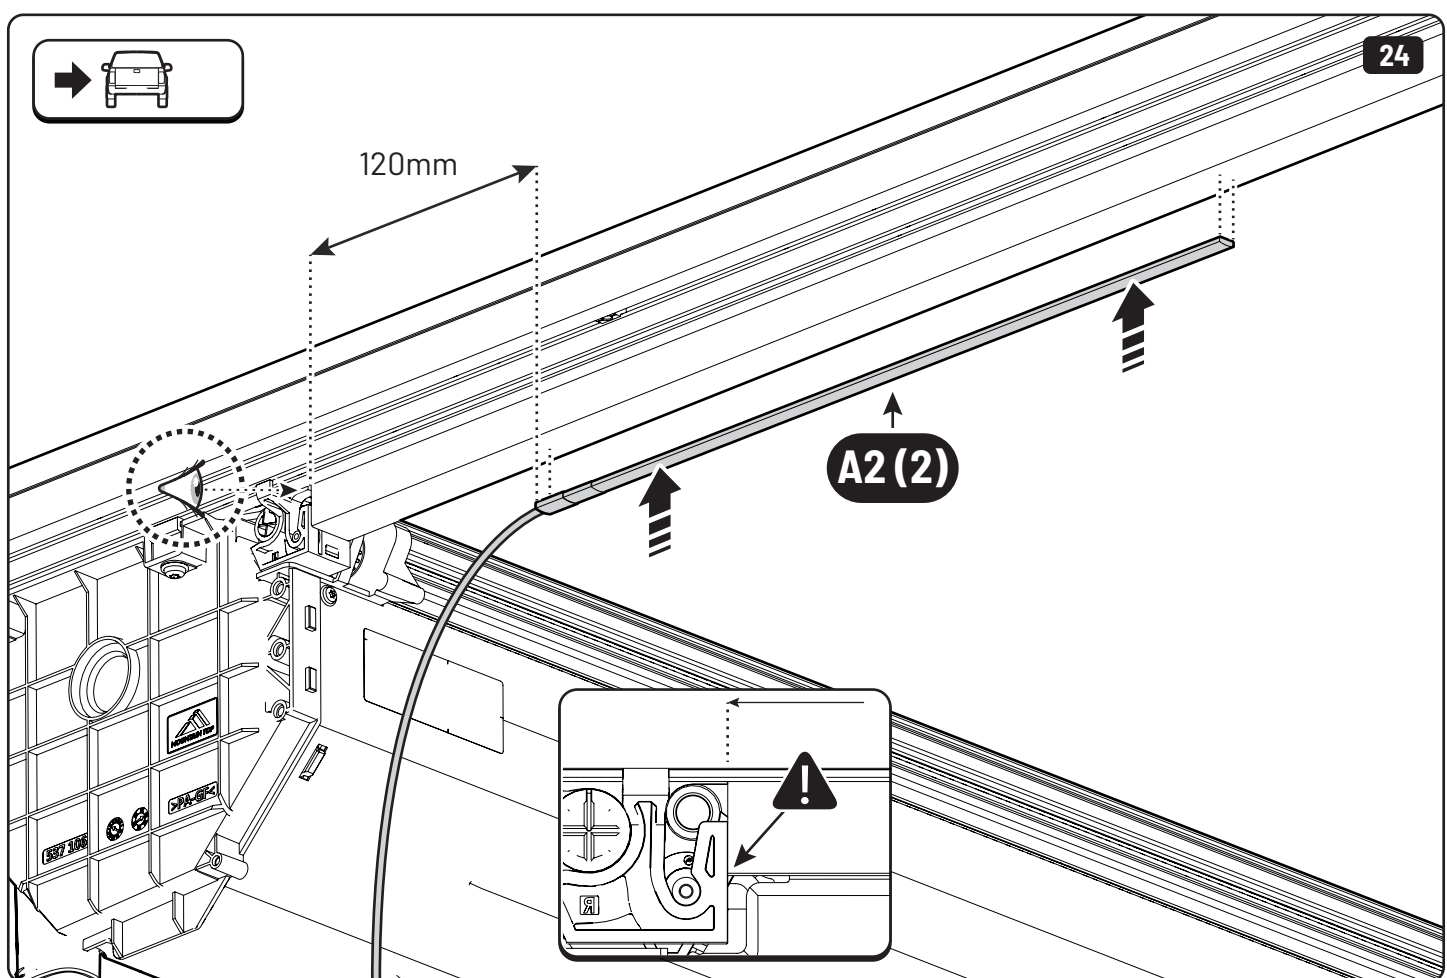
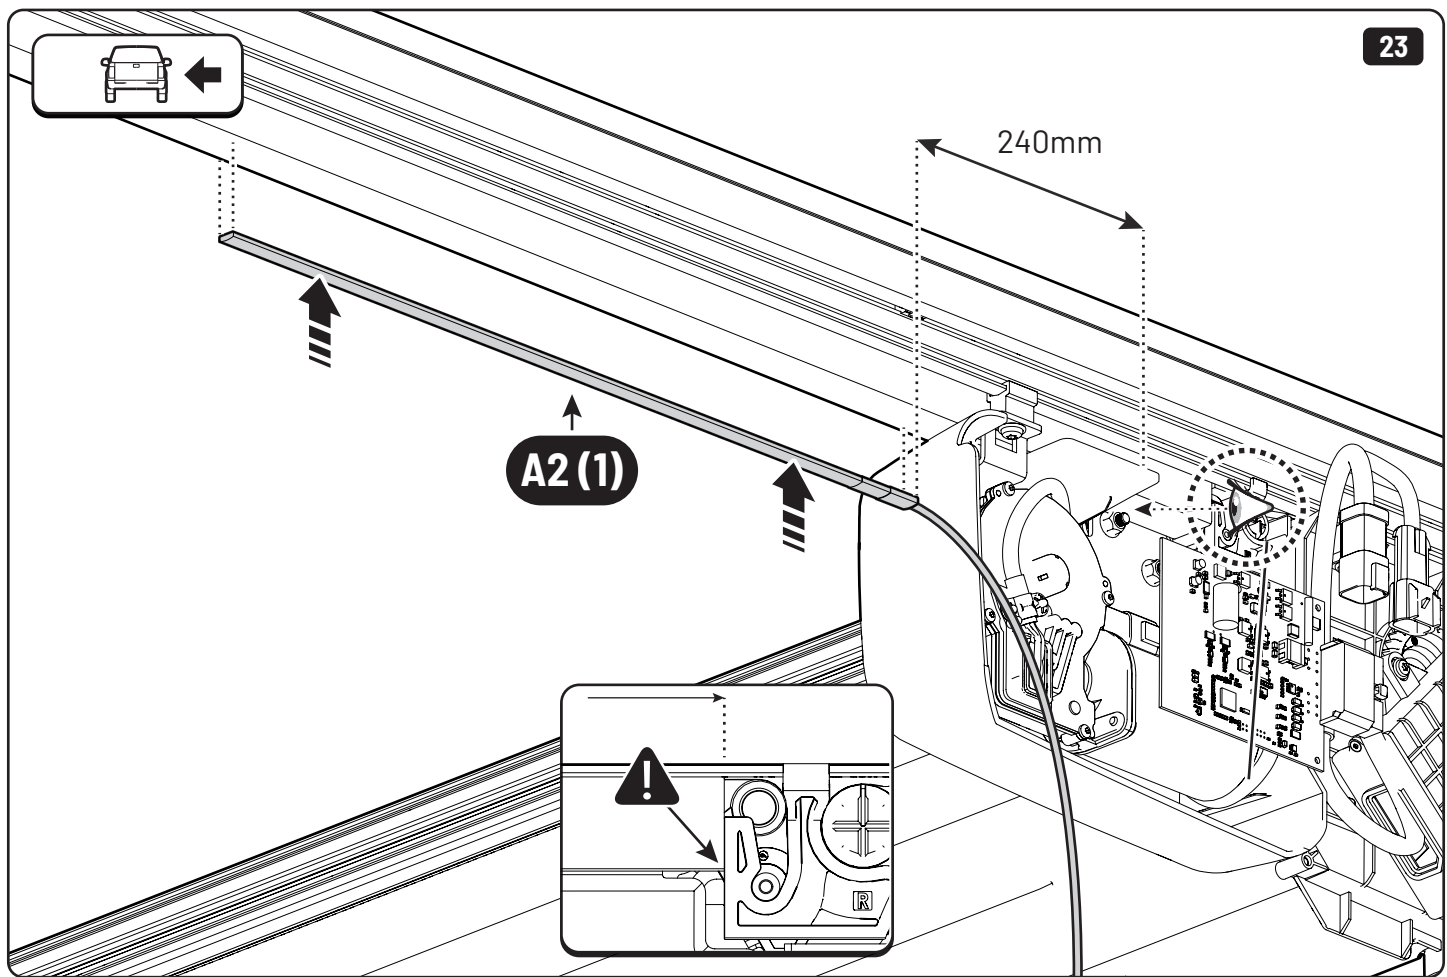


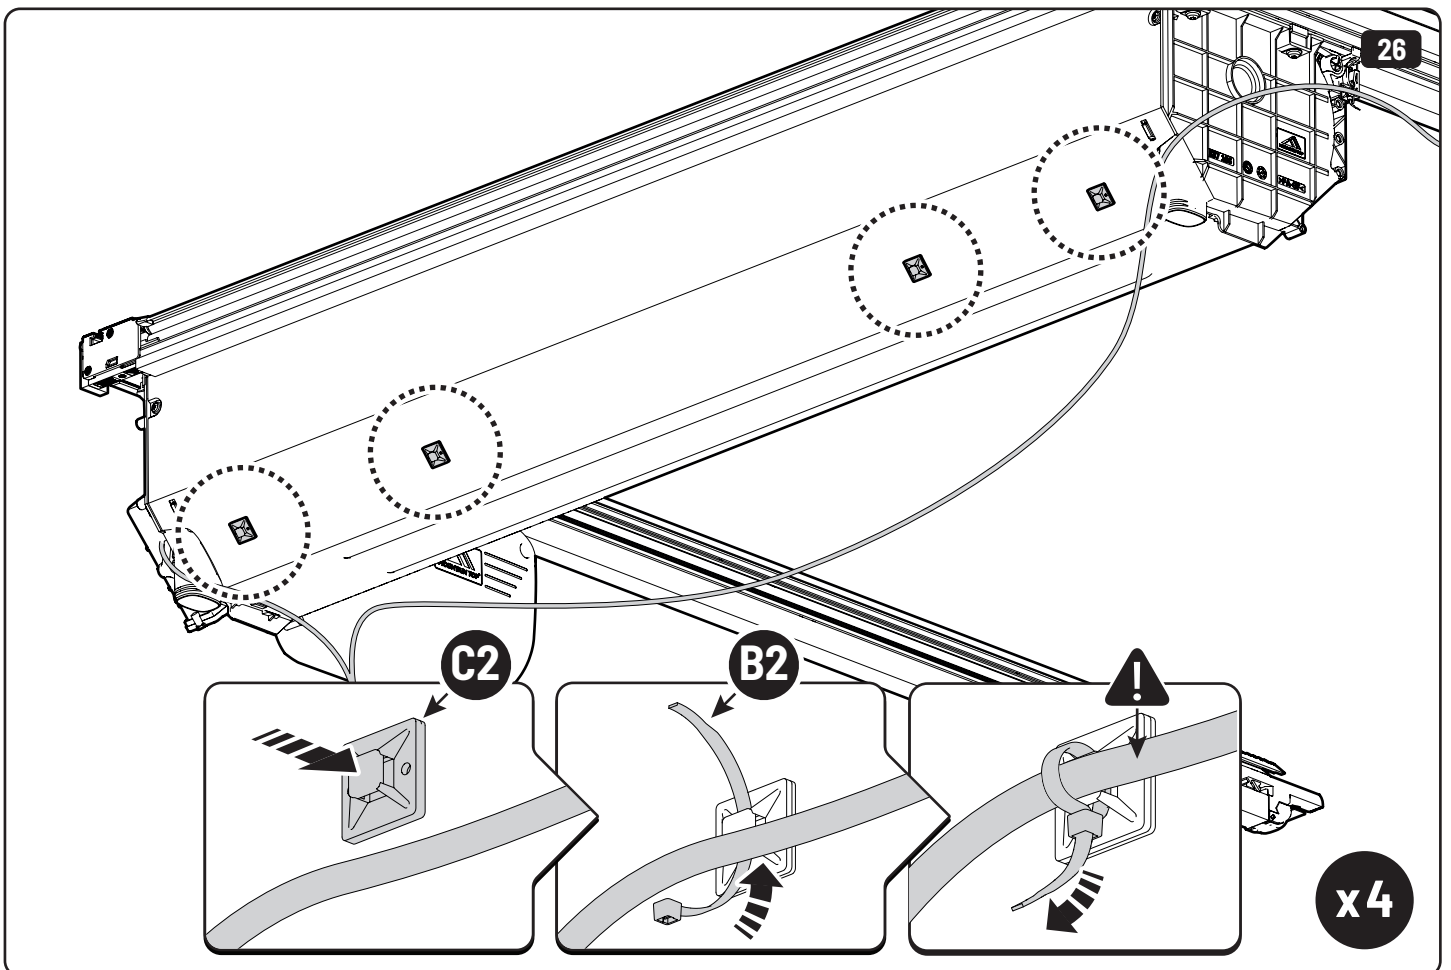
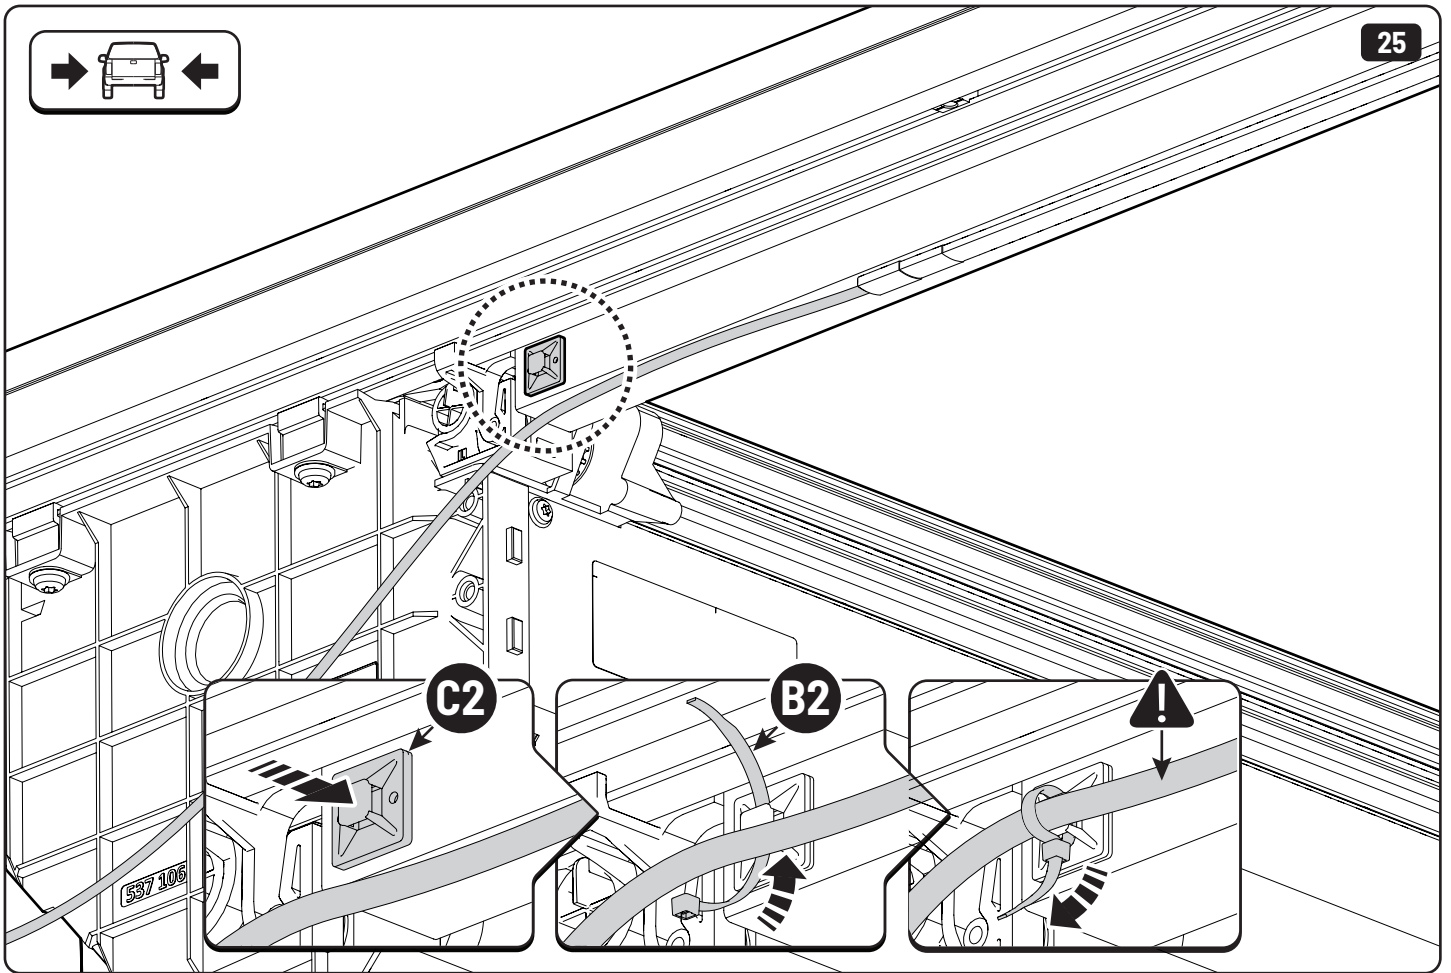


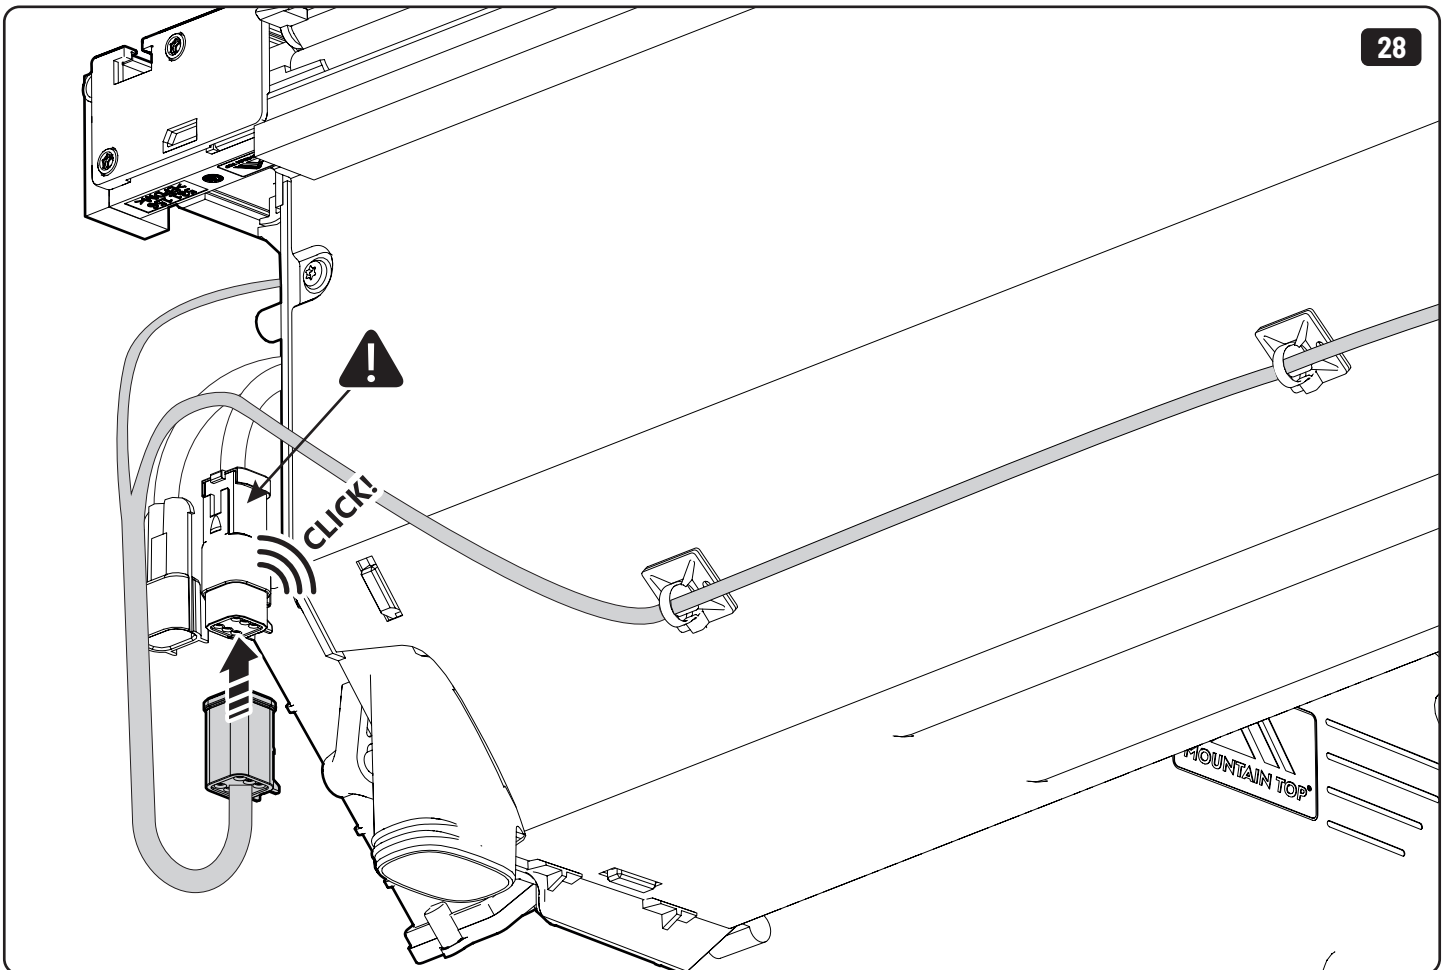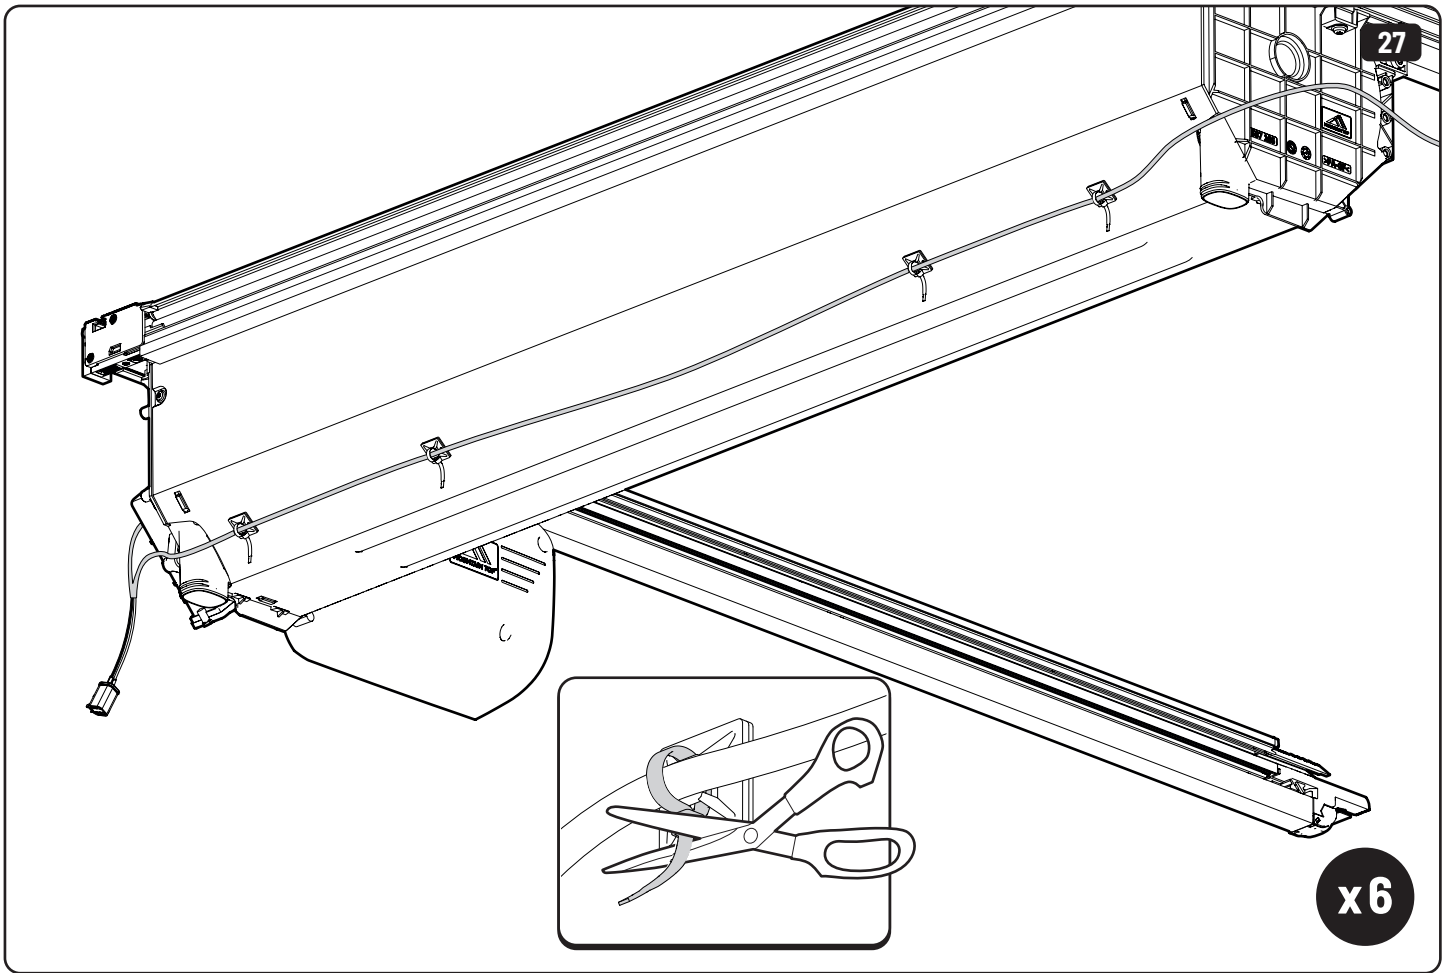

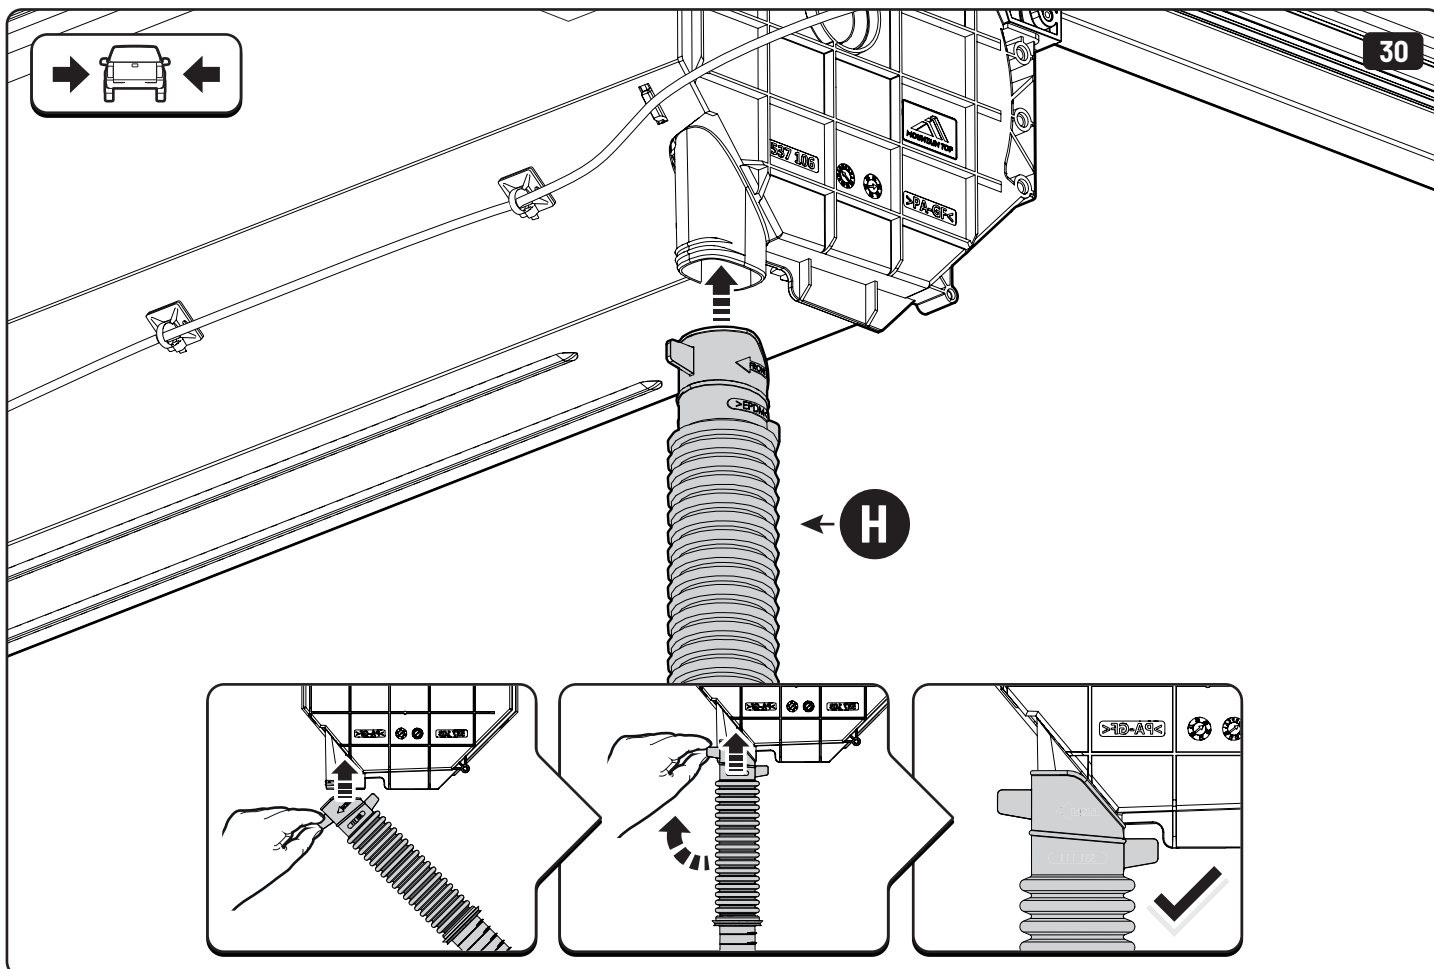
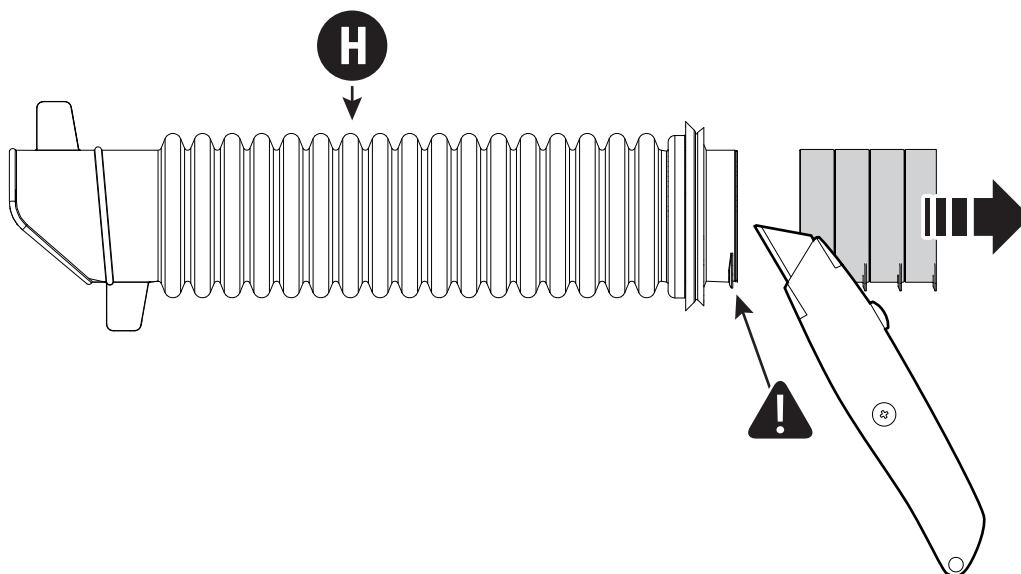




13mm

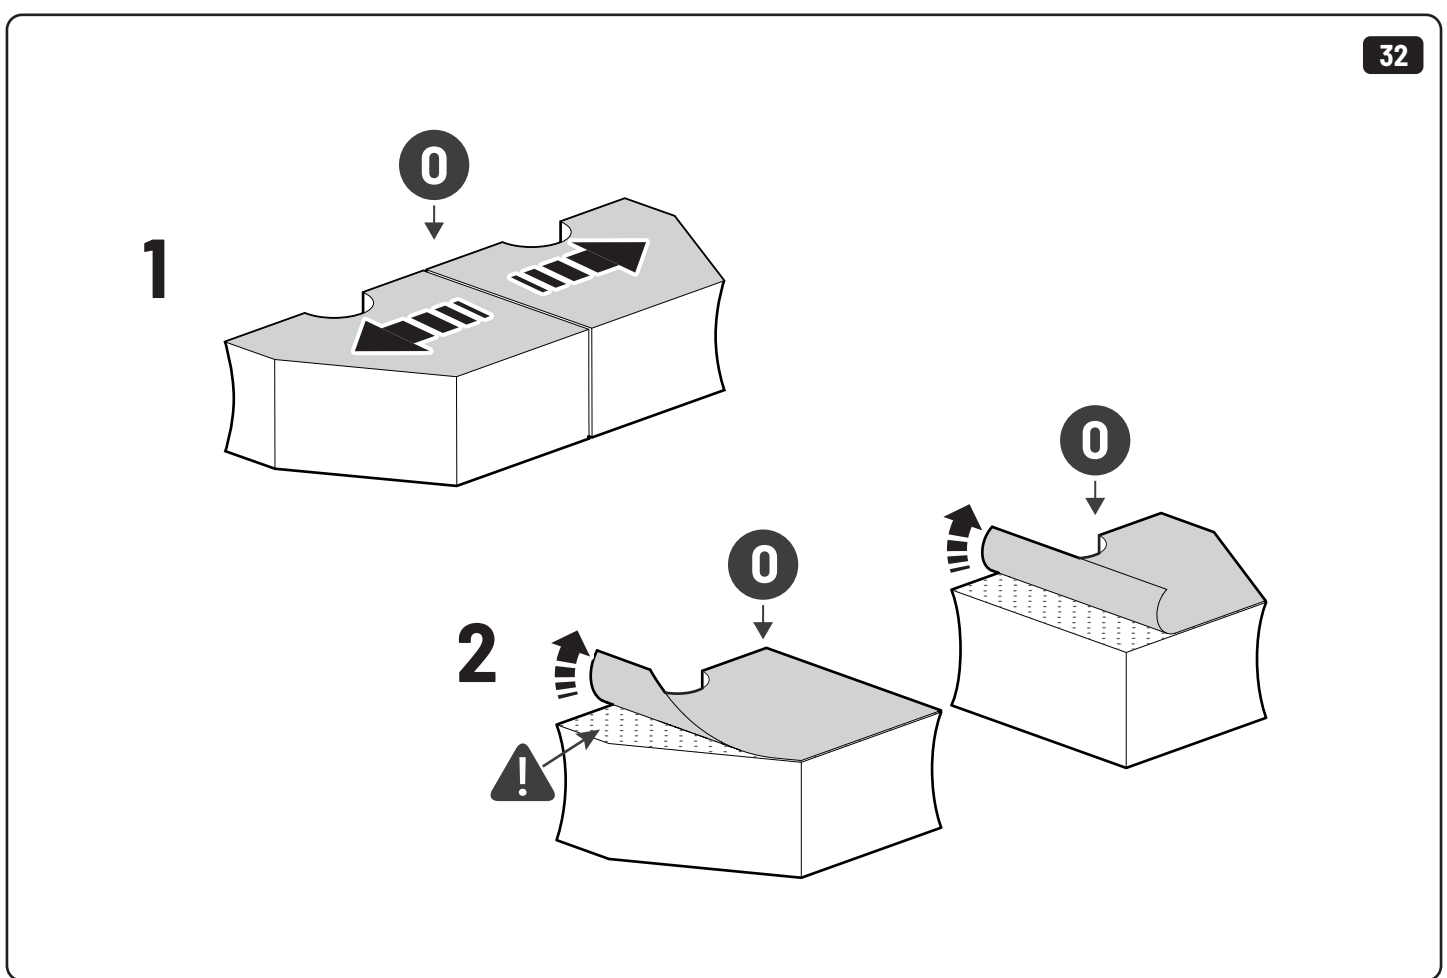
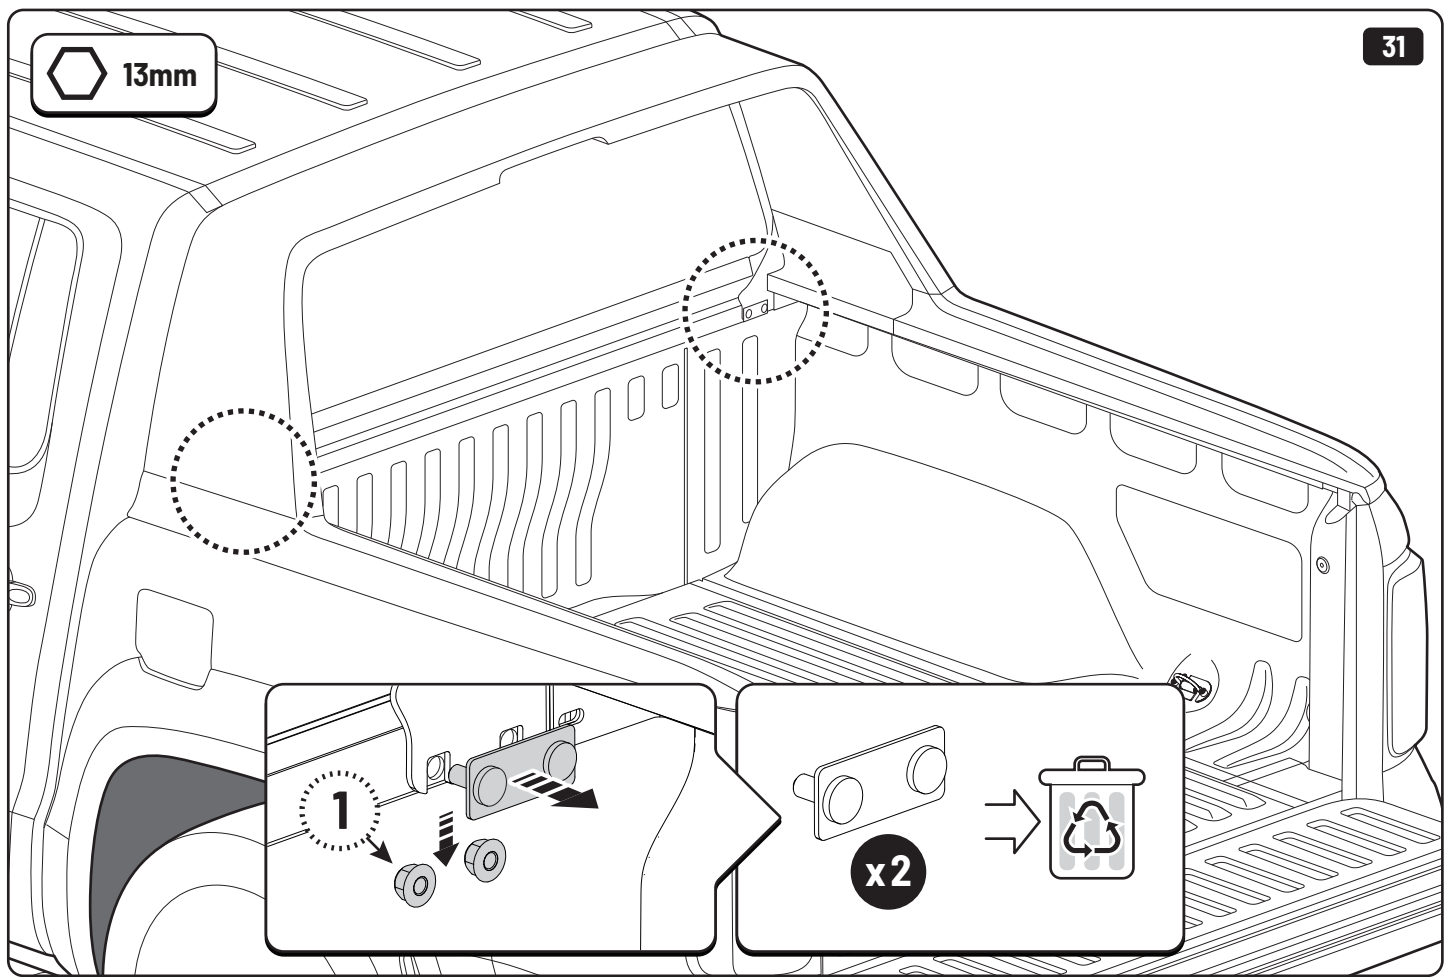


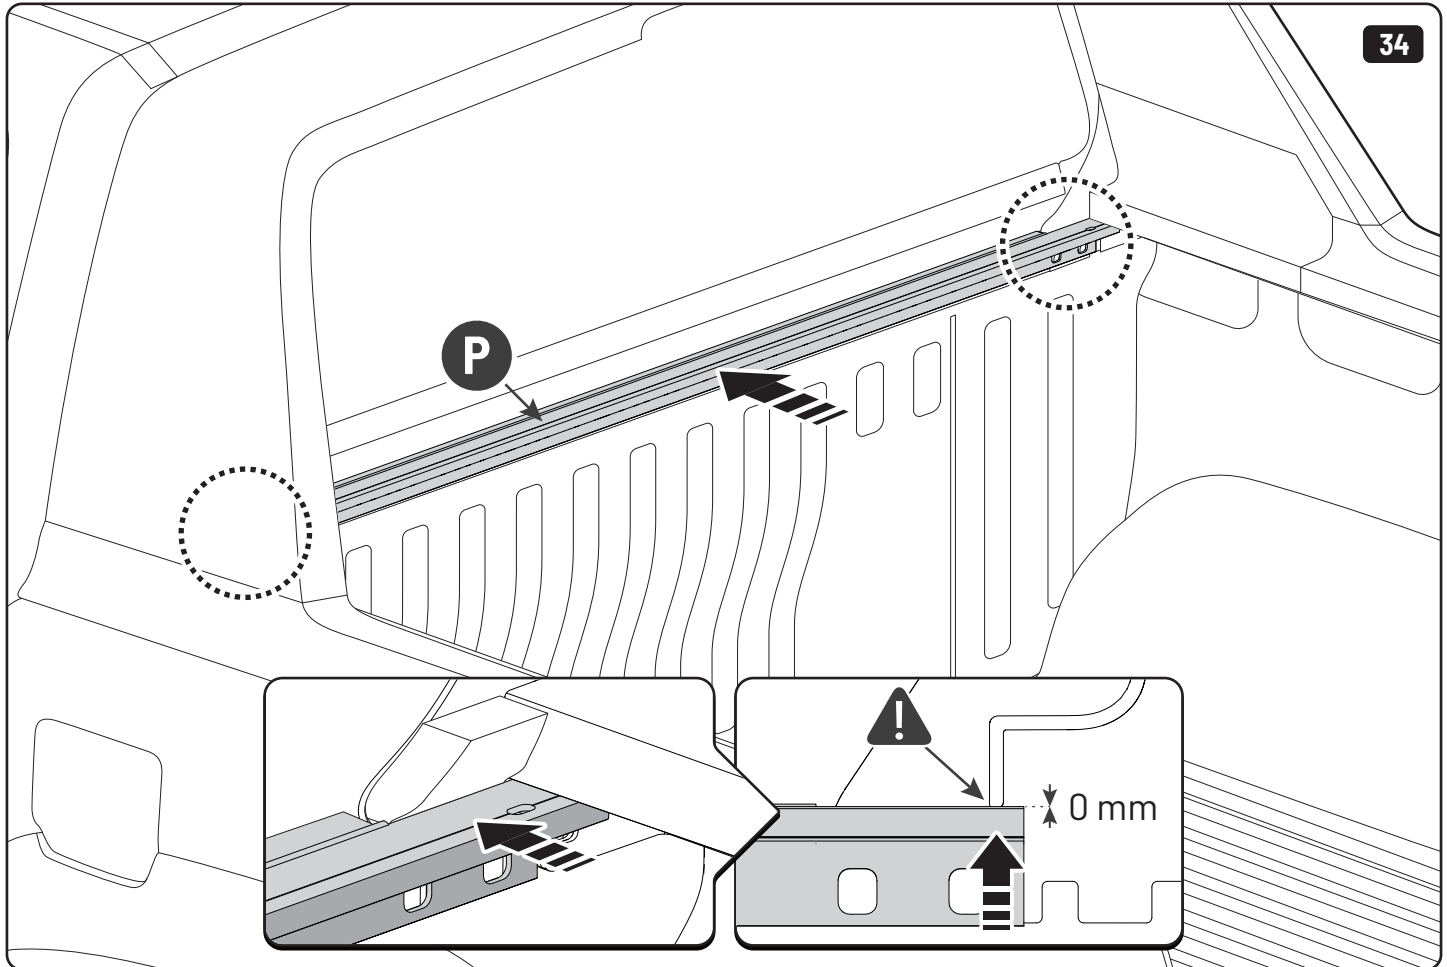
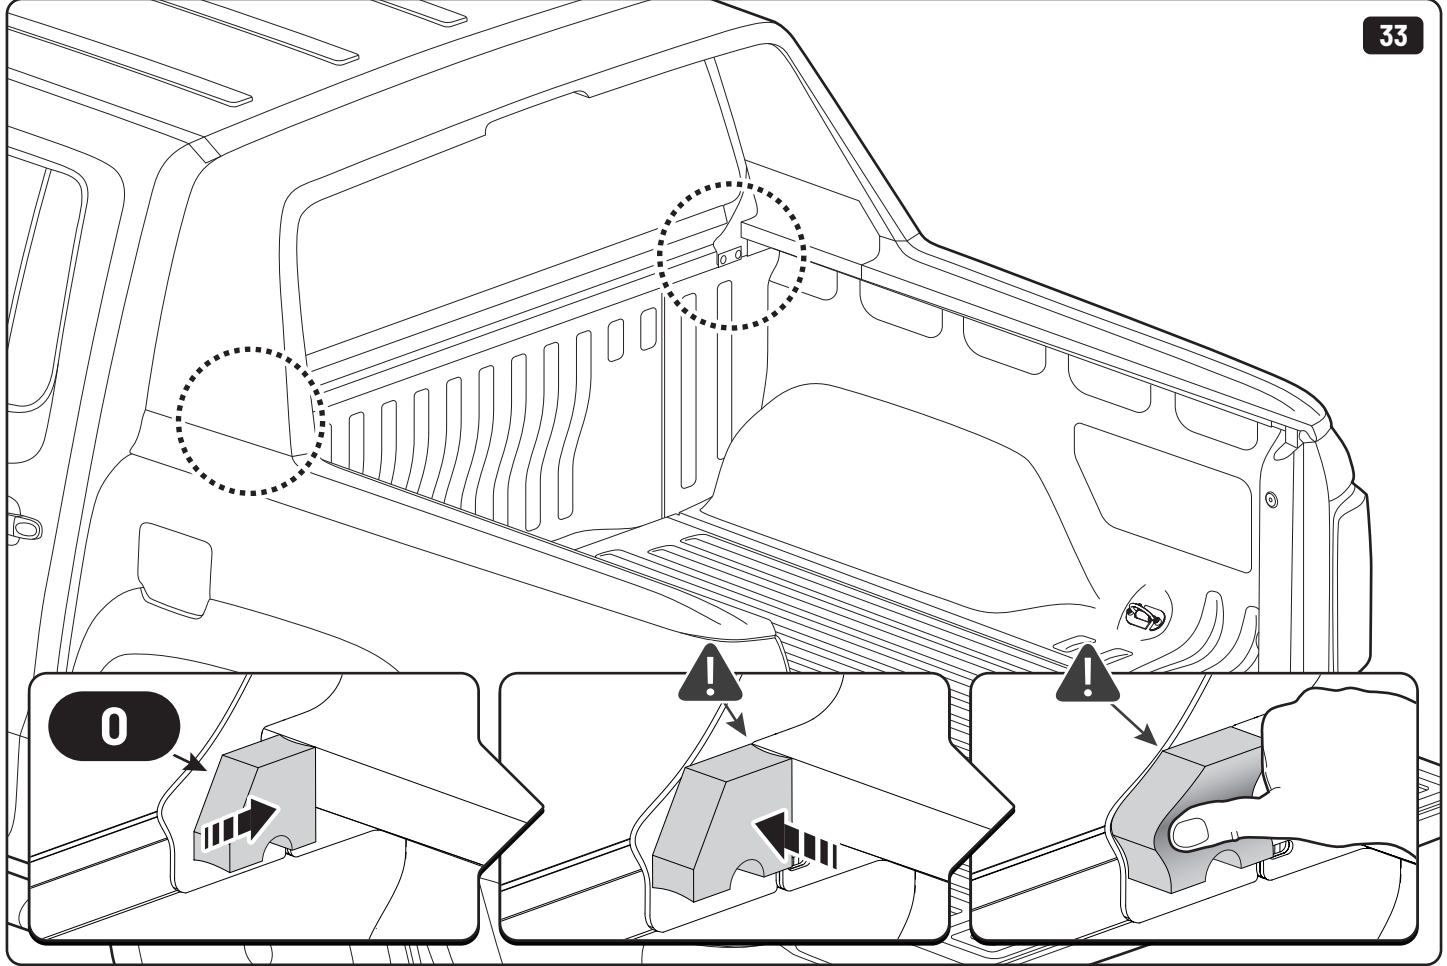




13mm 20Nm

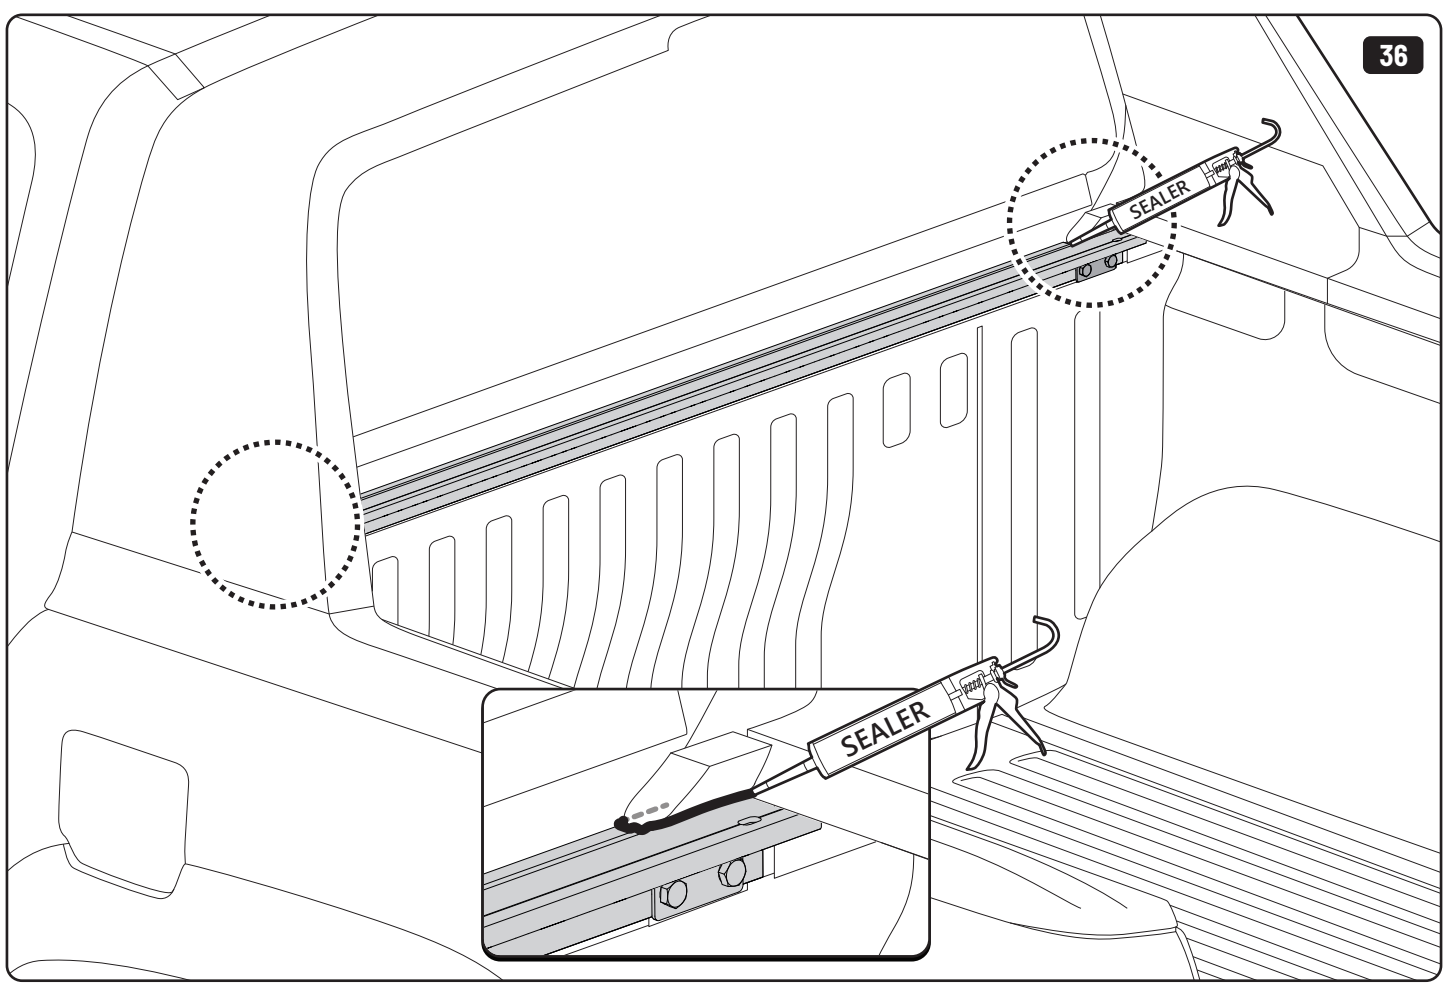
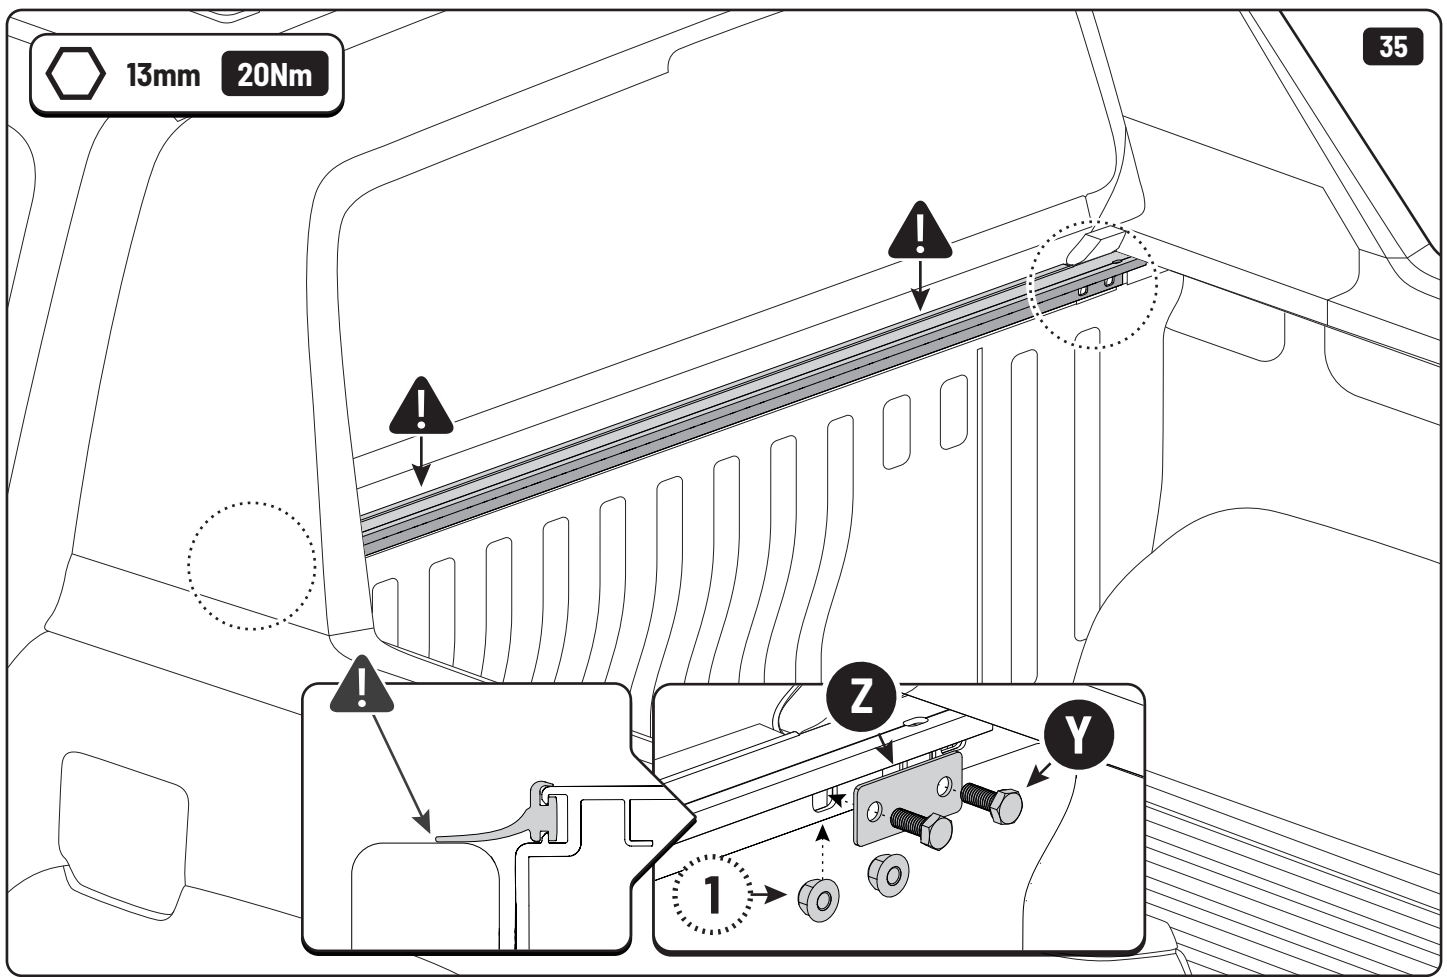


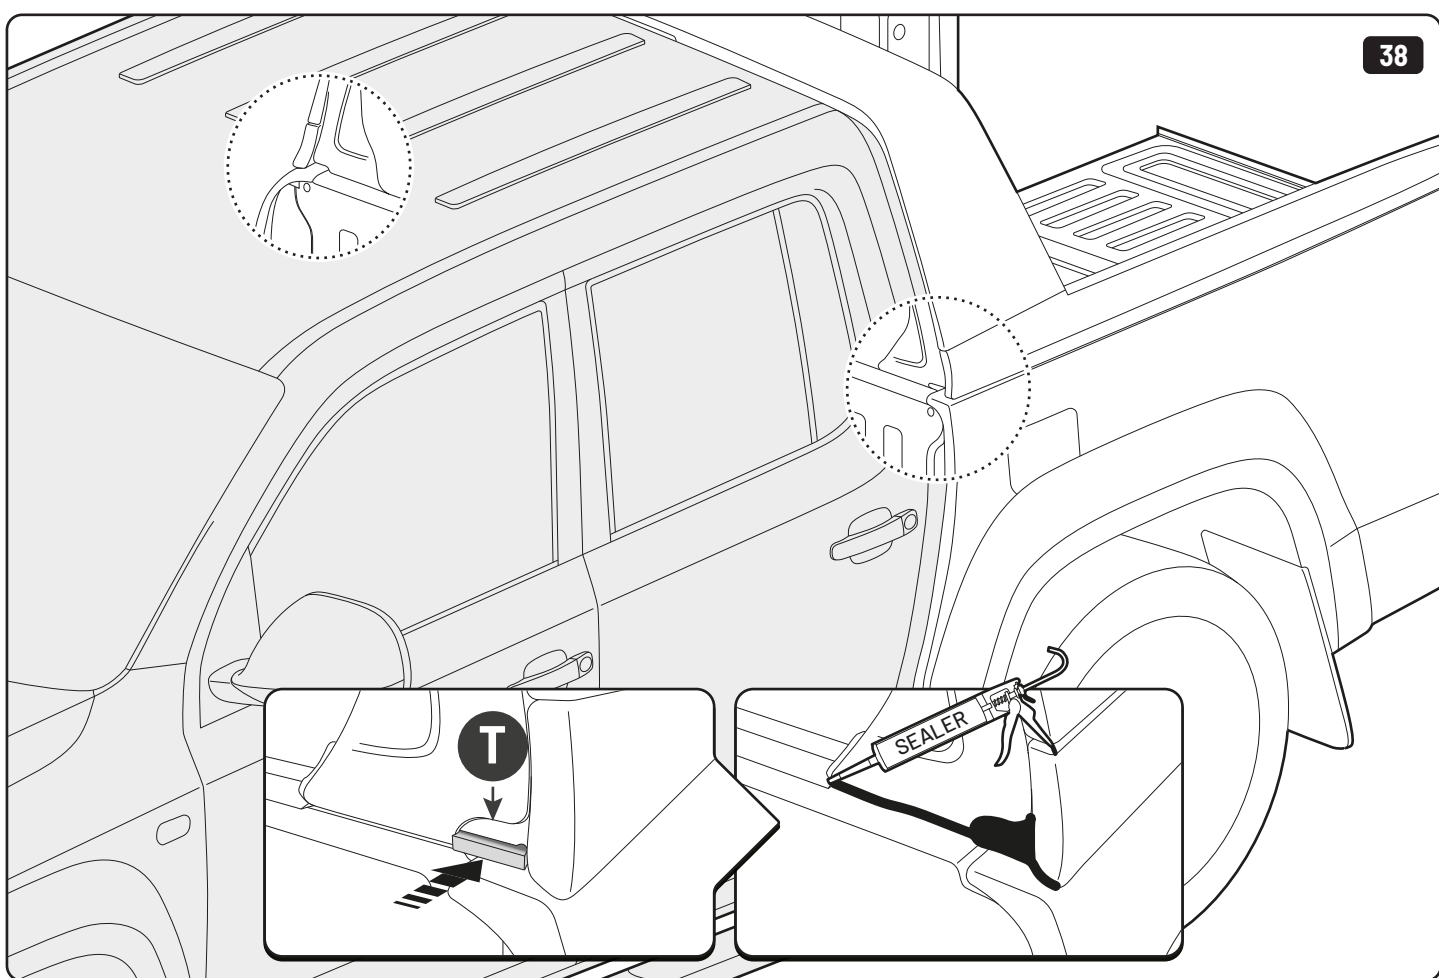
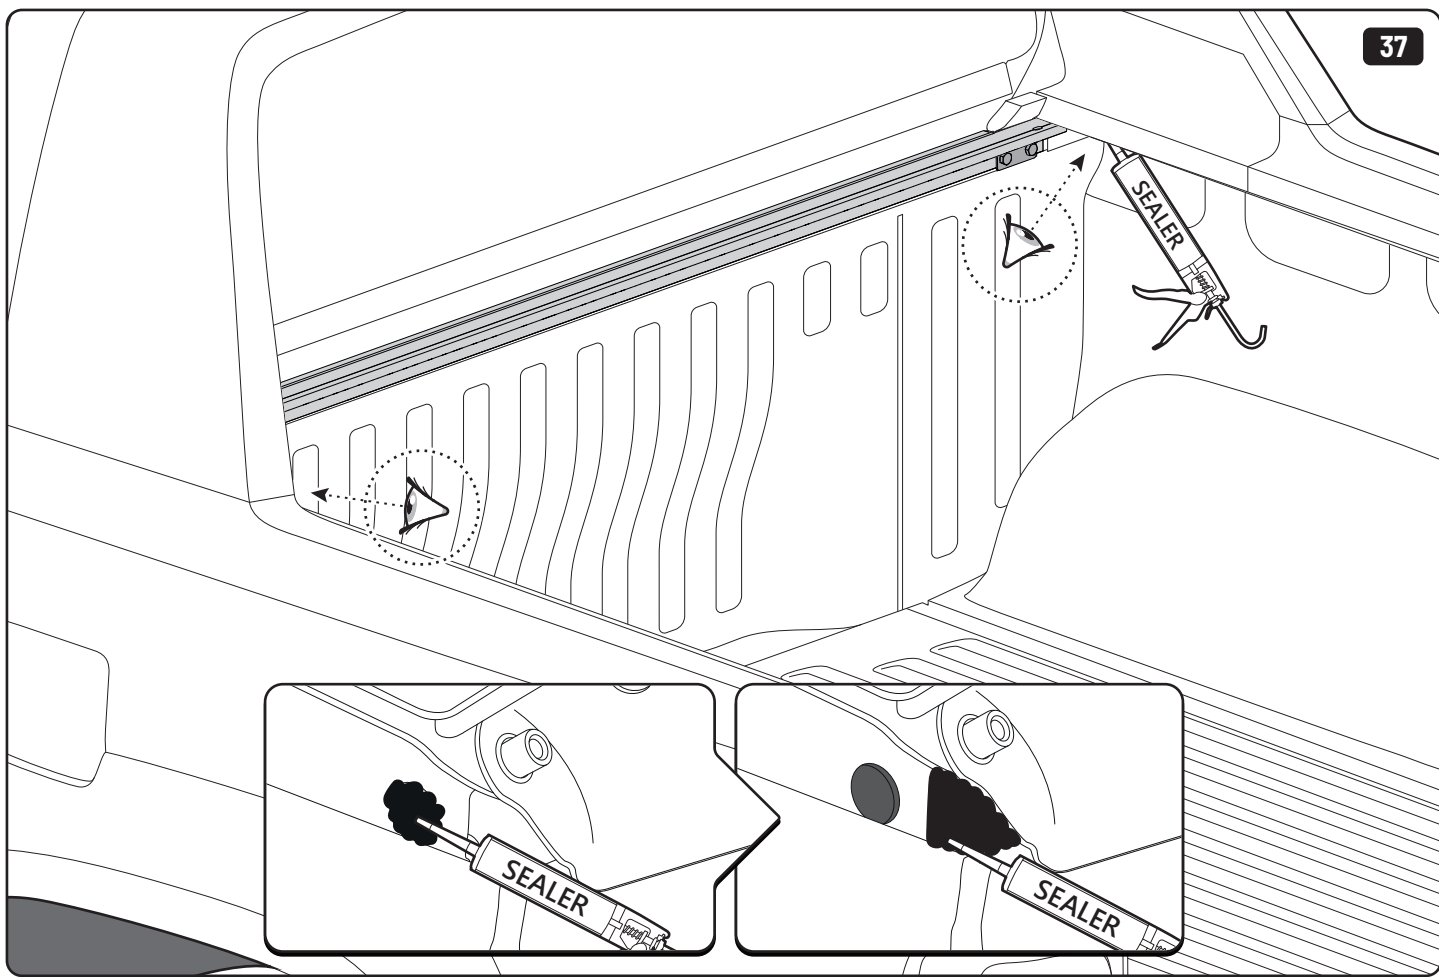


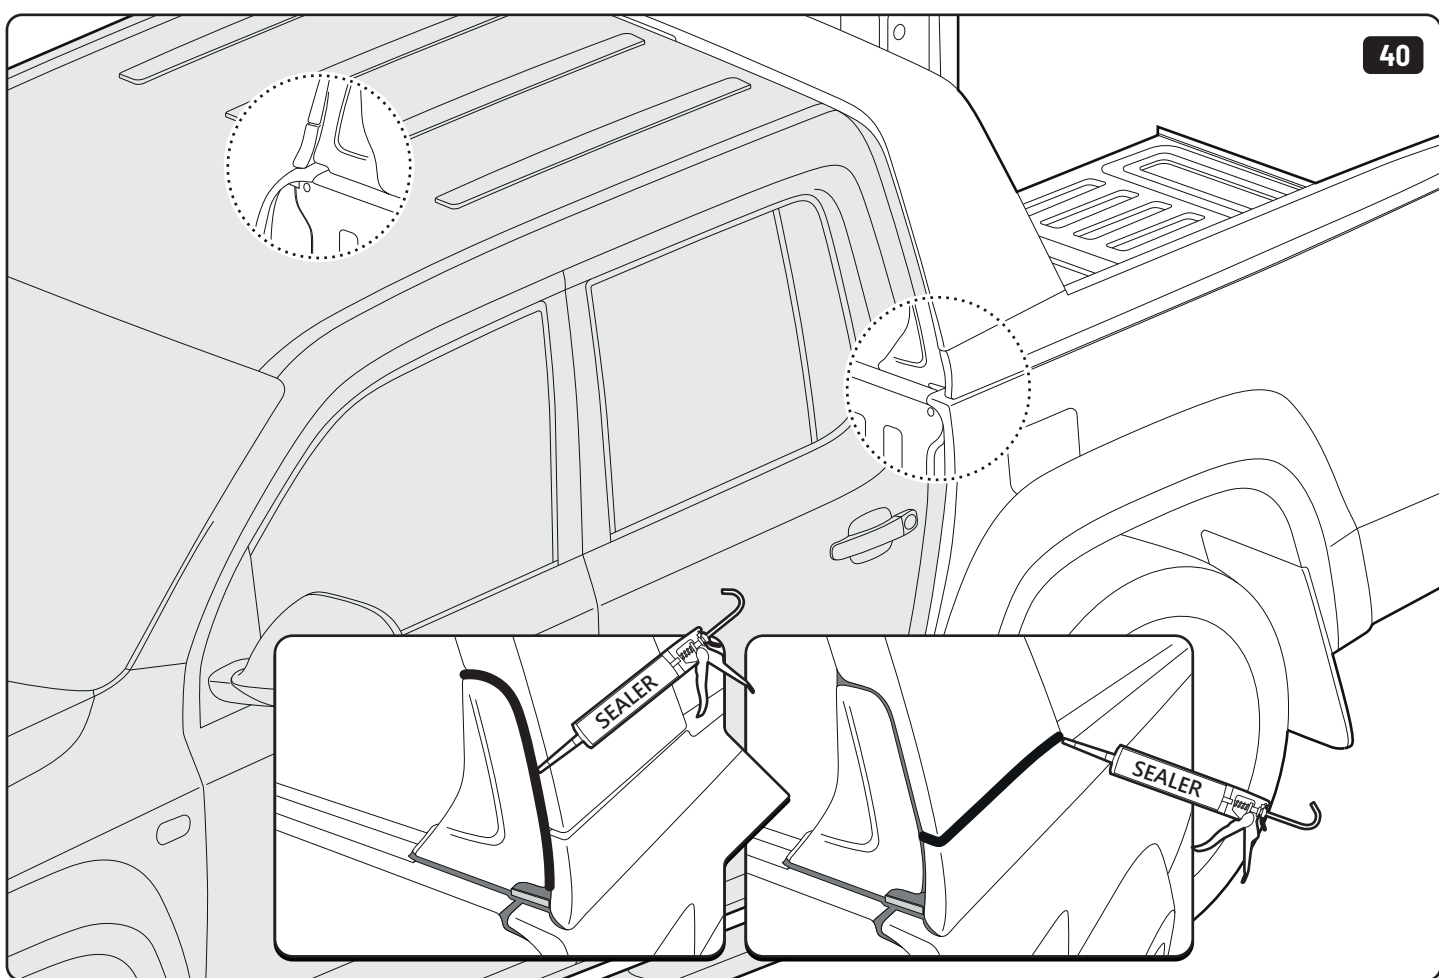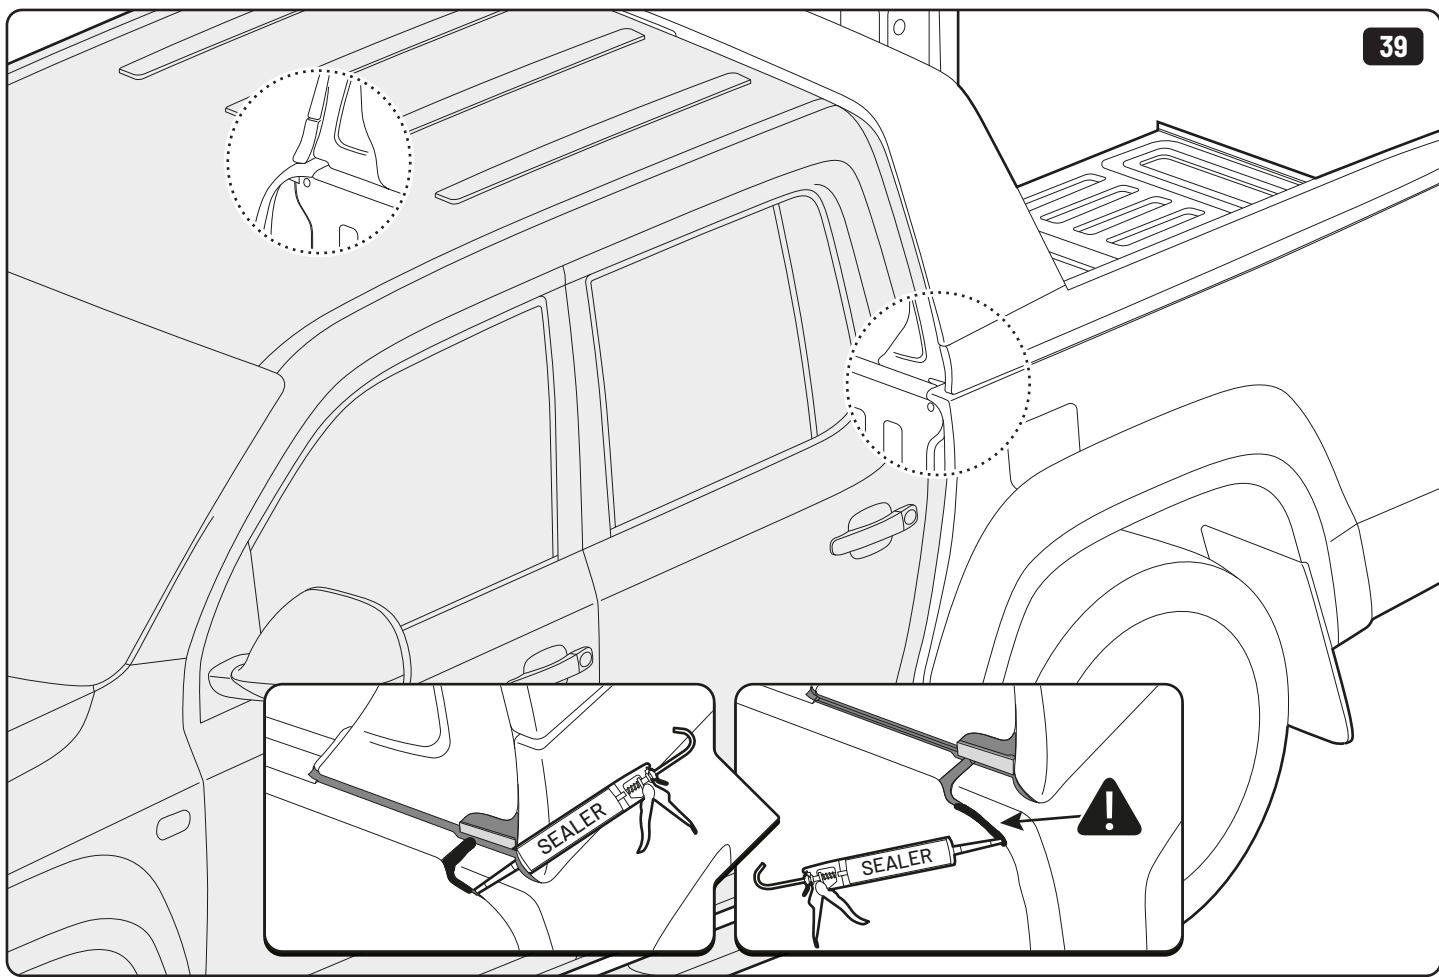

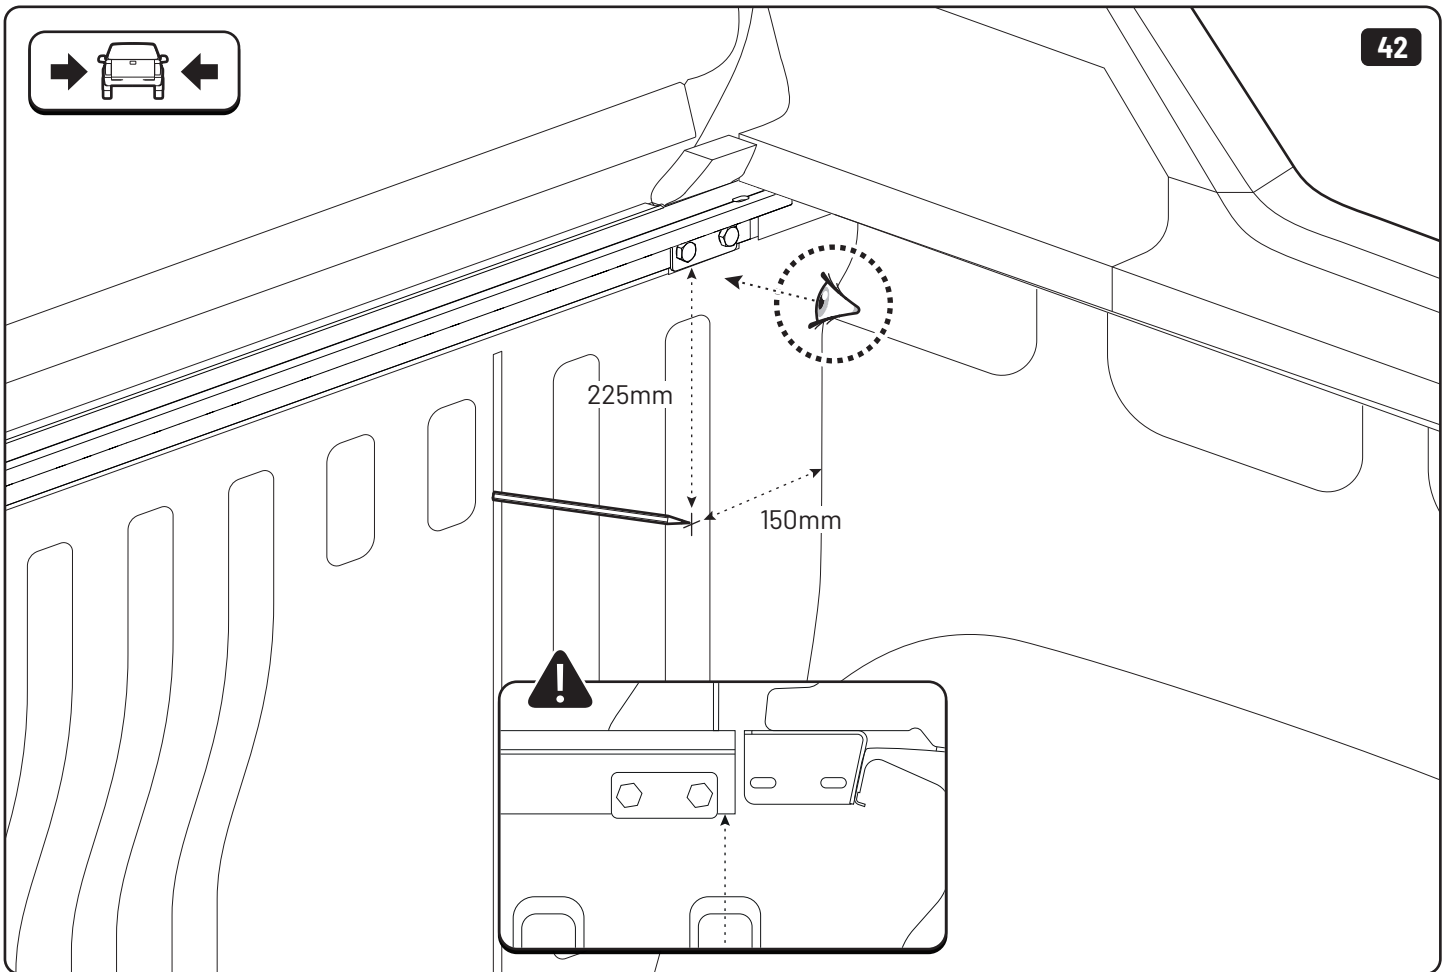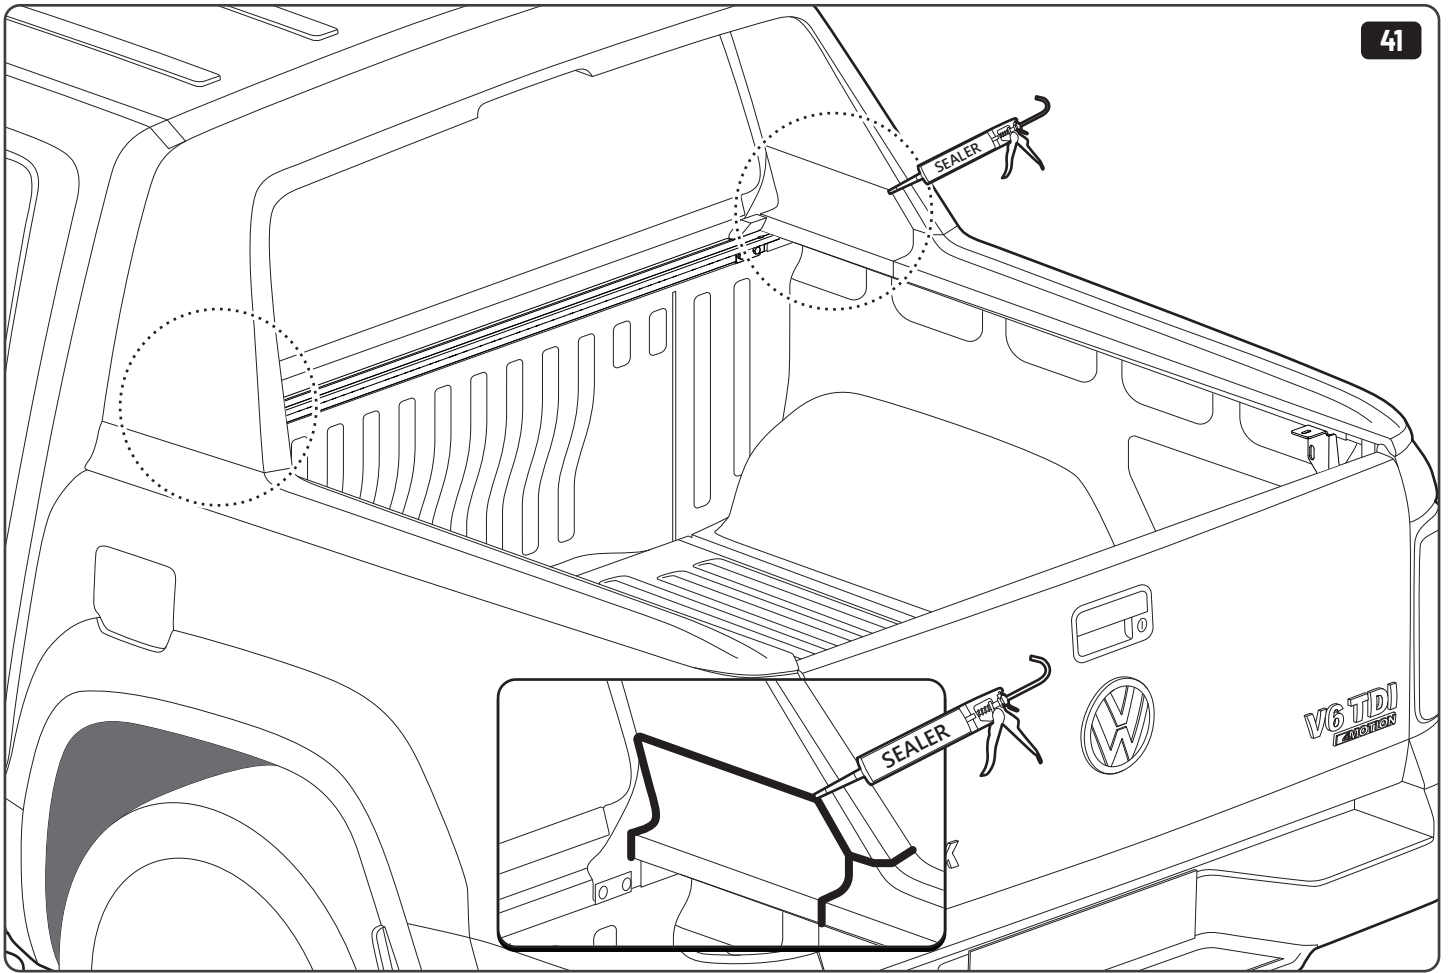

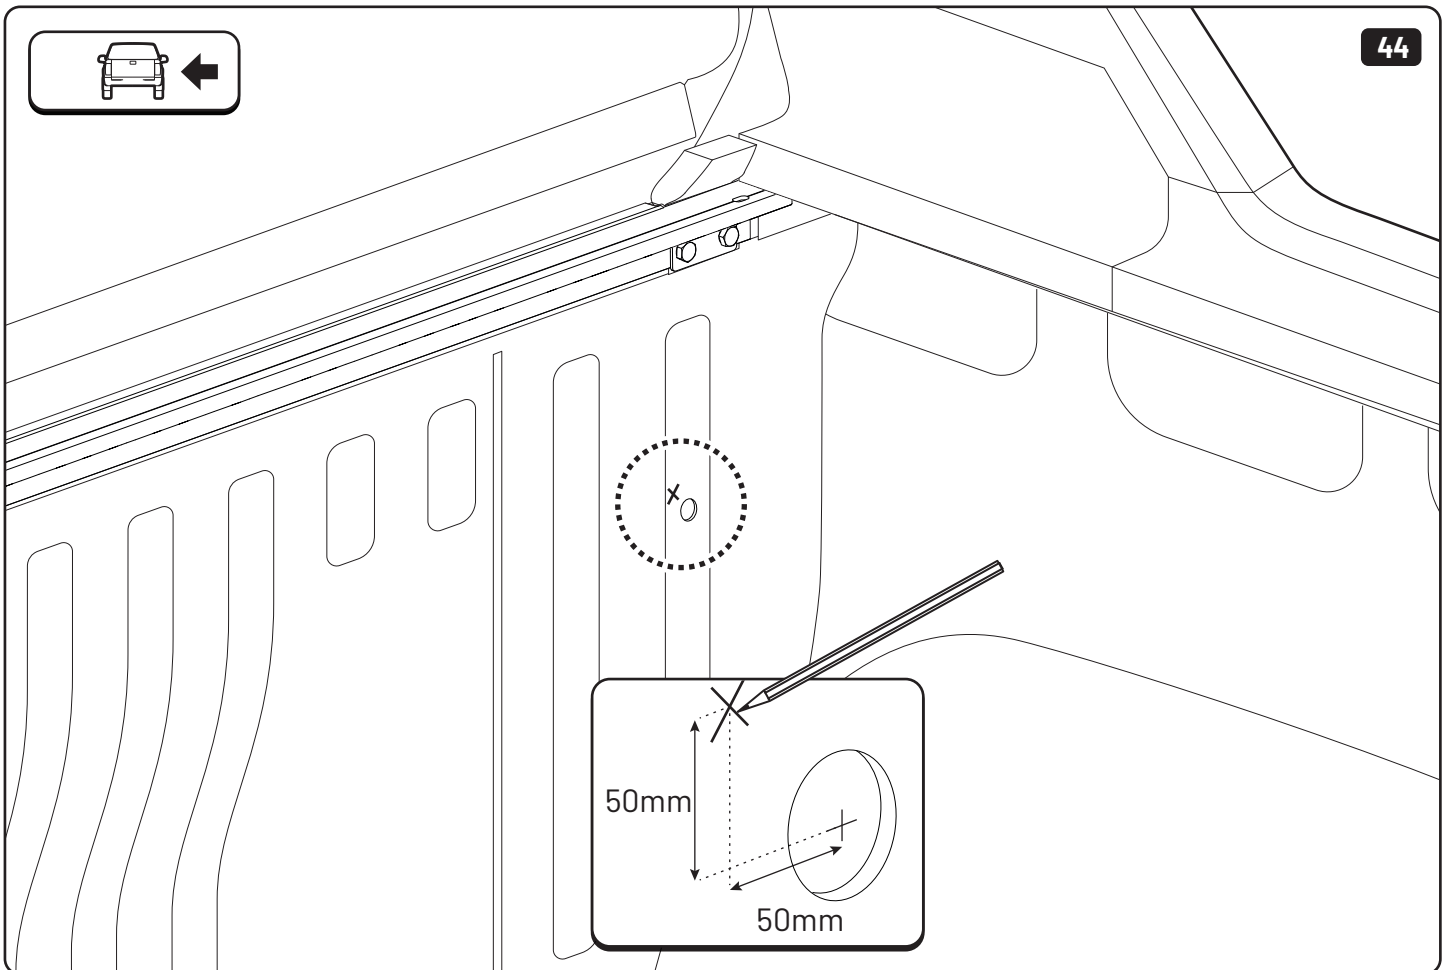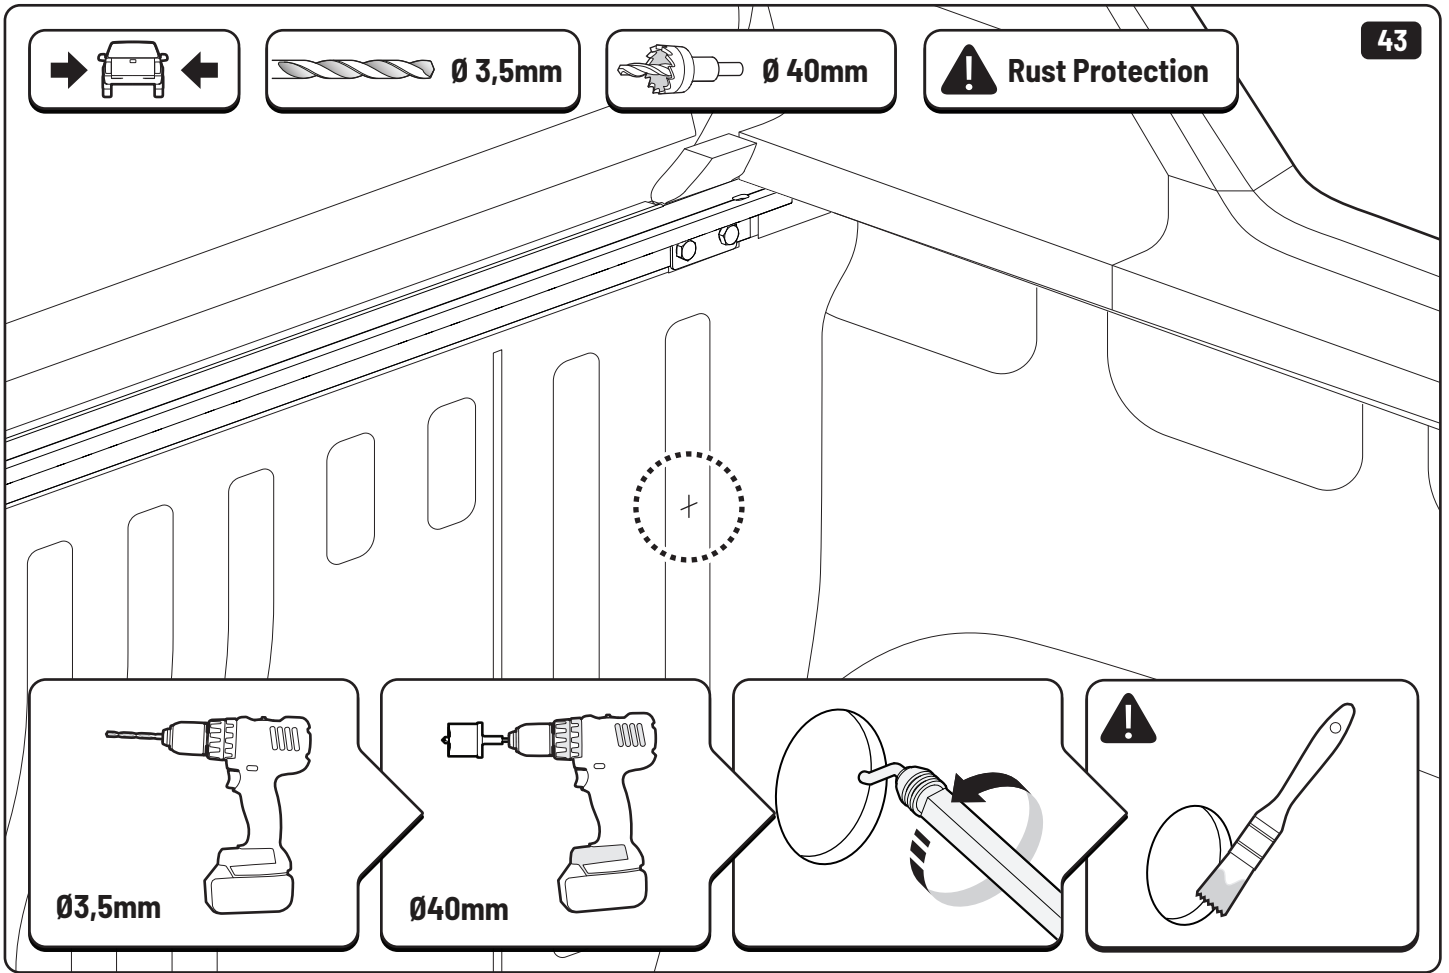

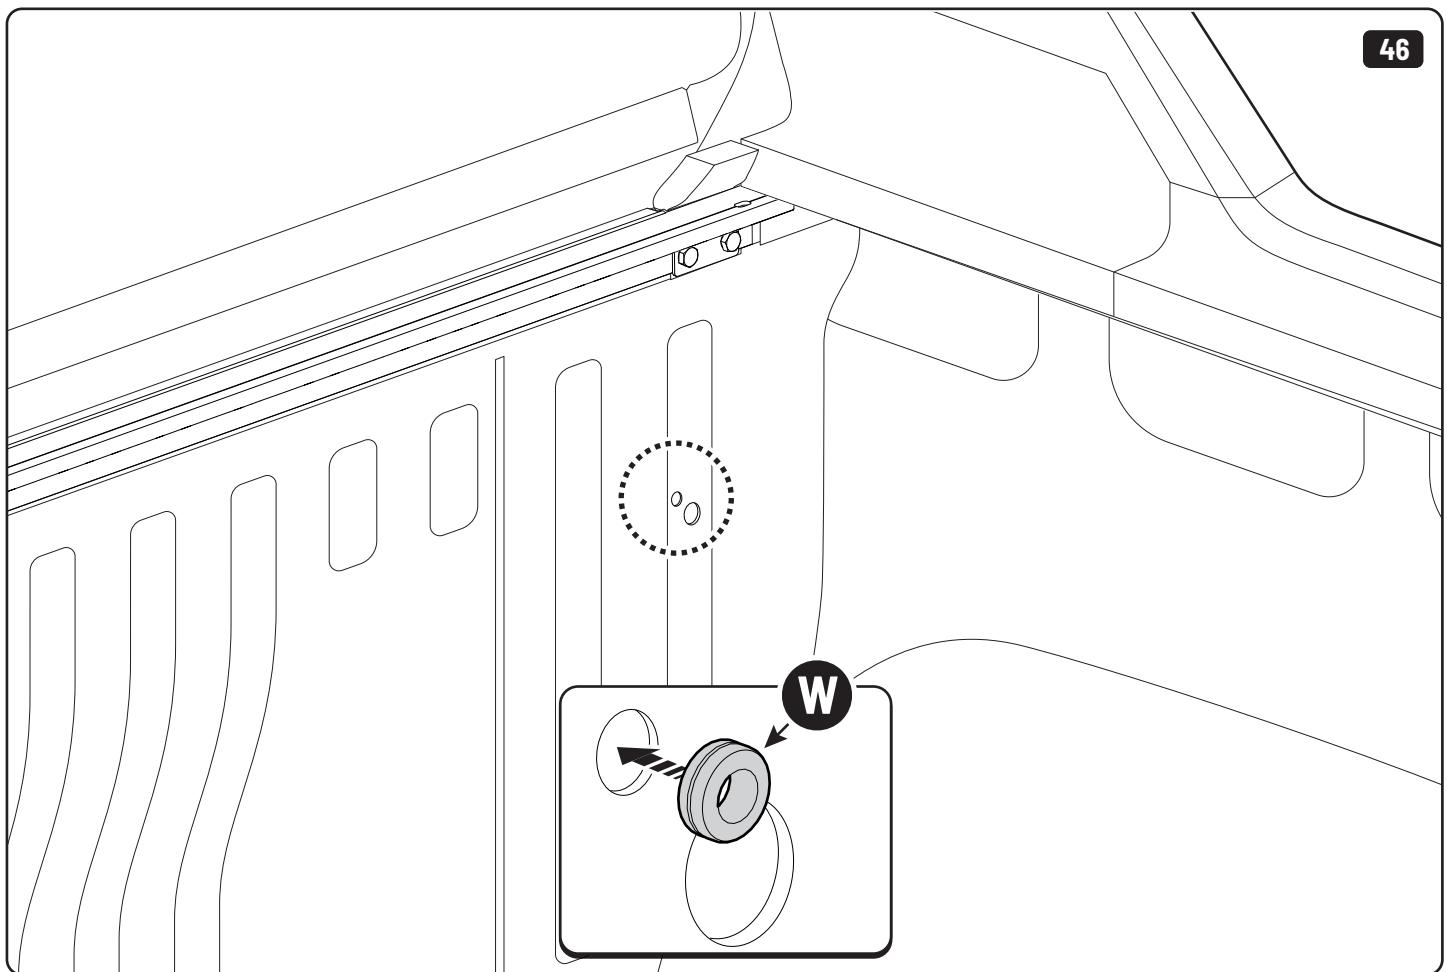
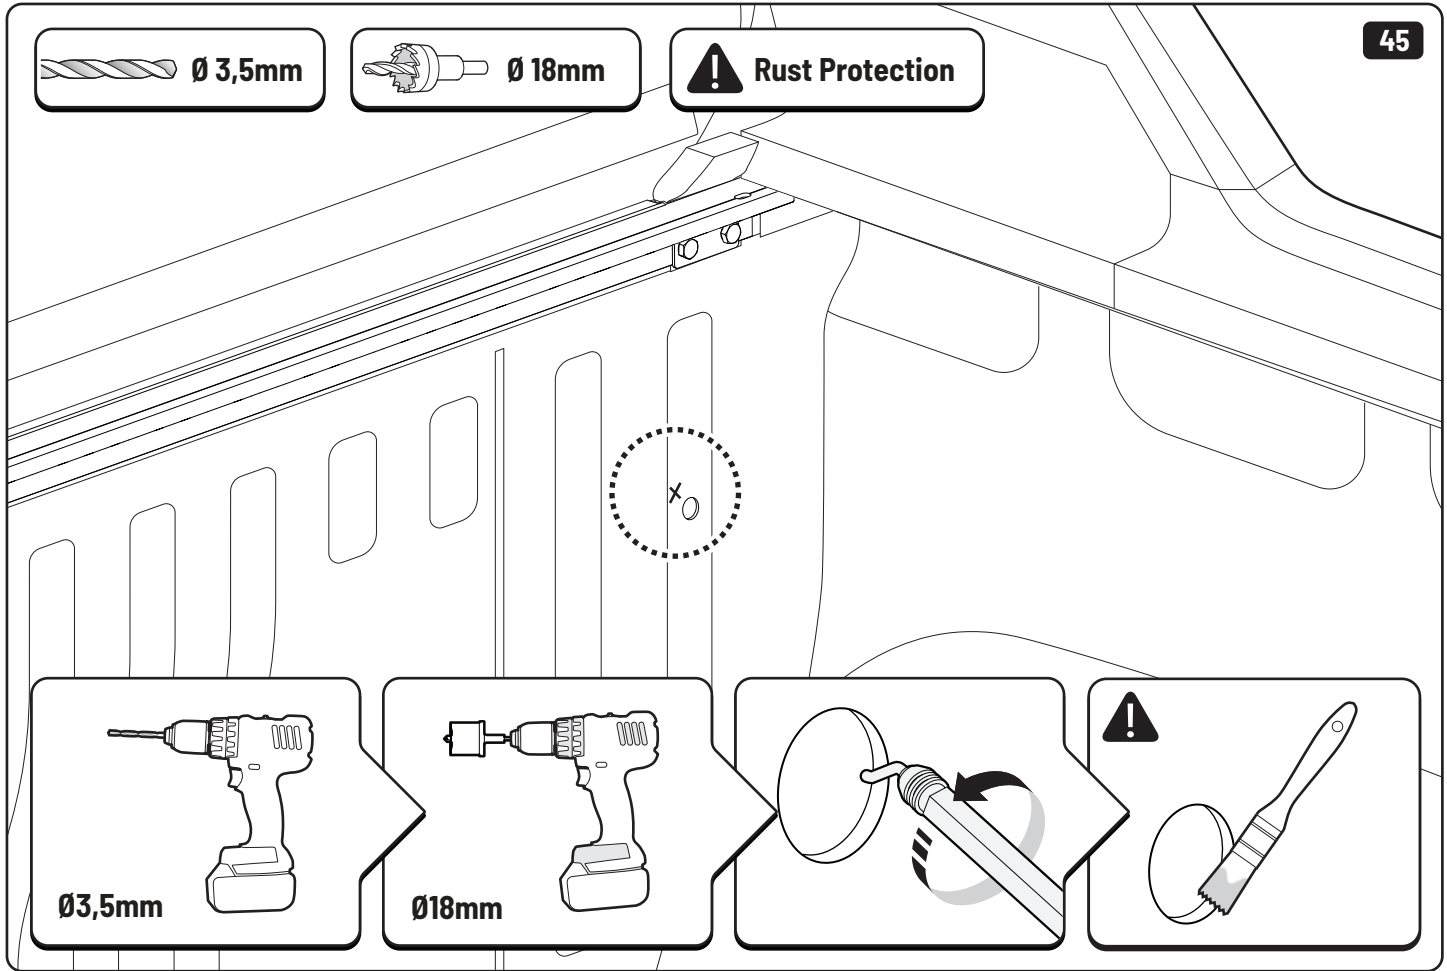



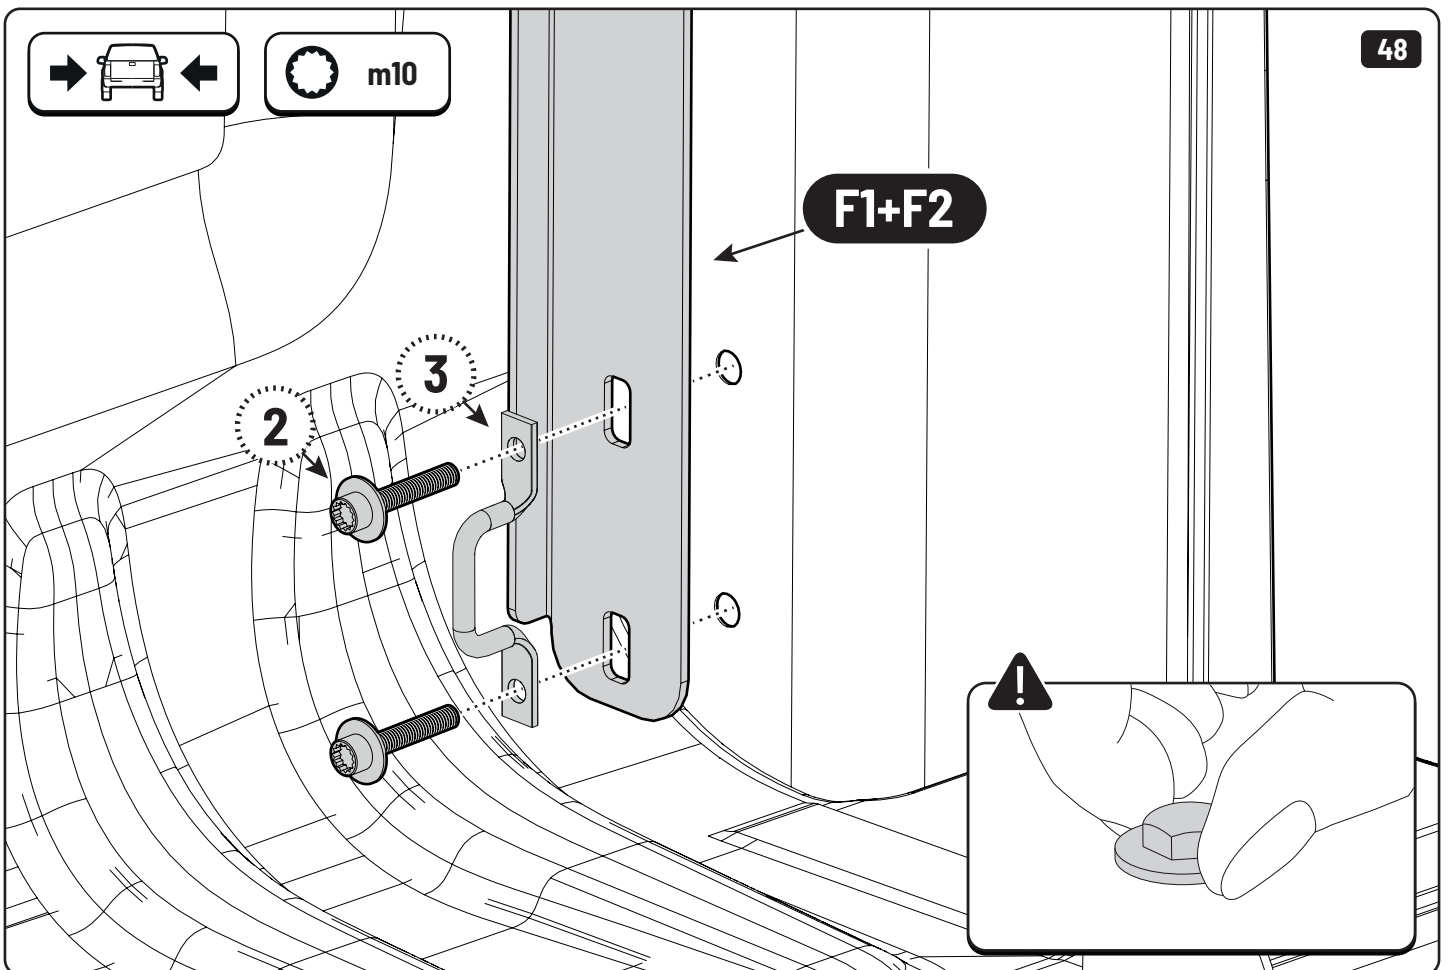
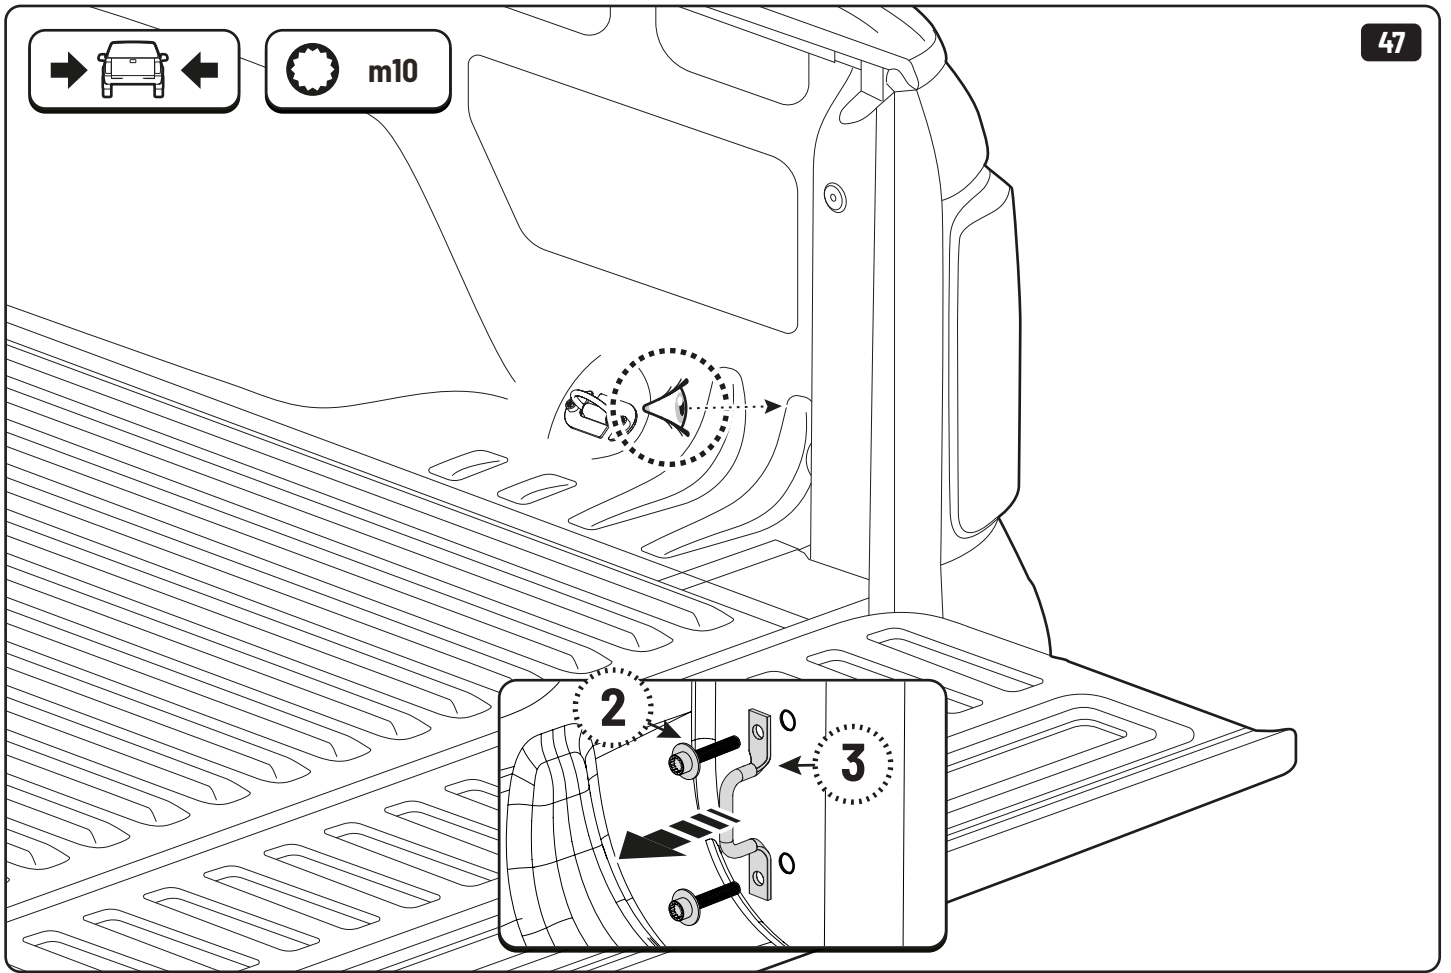




T30




10mm



LOCTITE 243

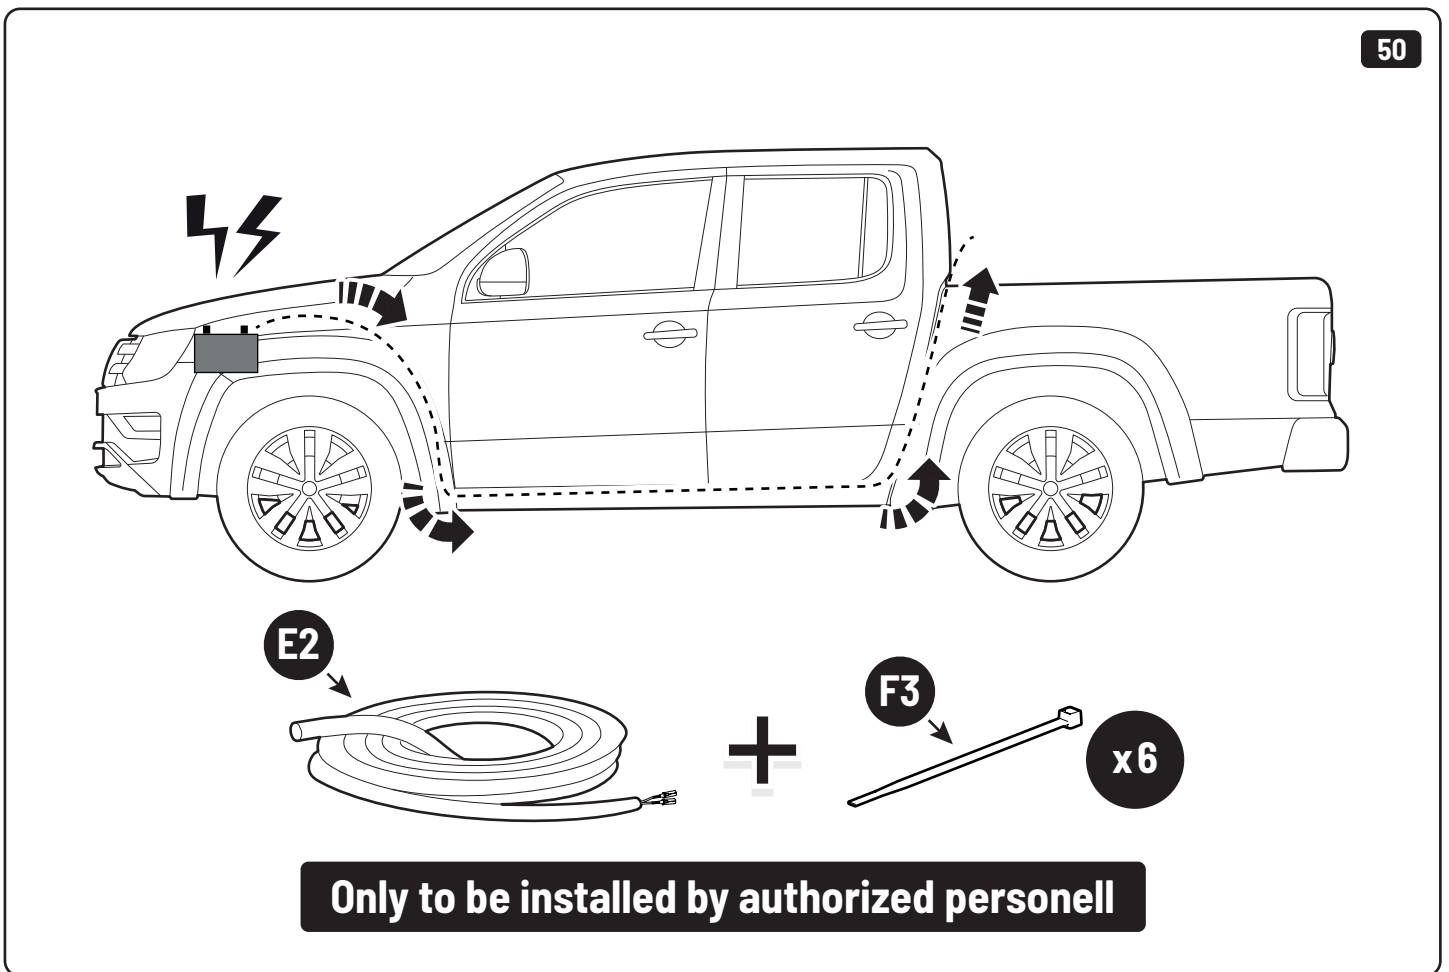
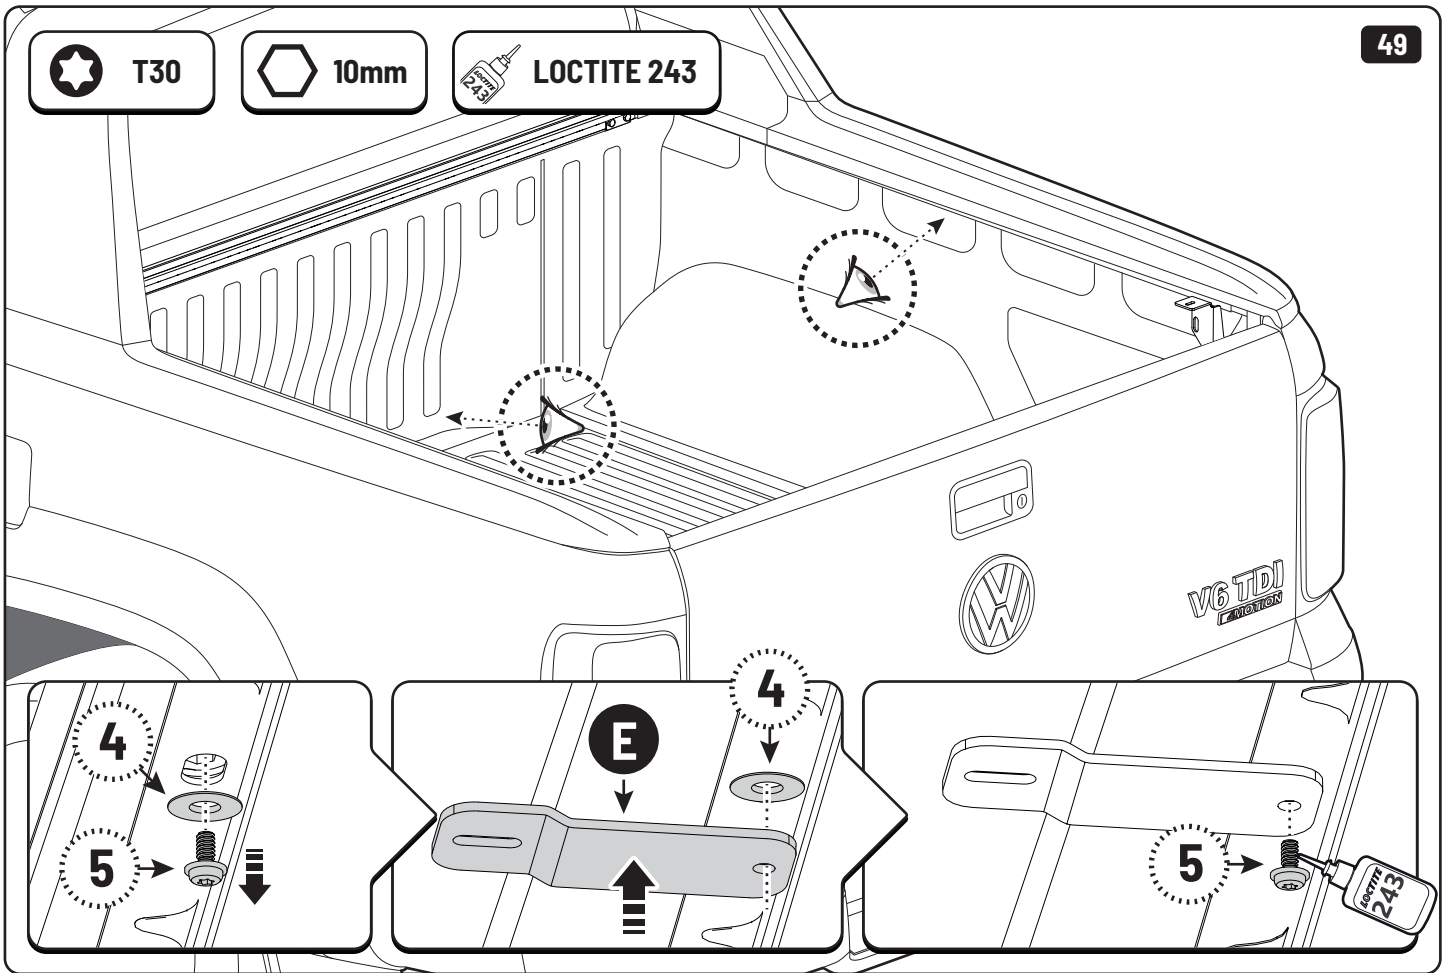


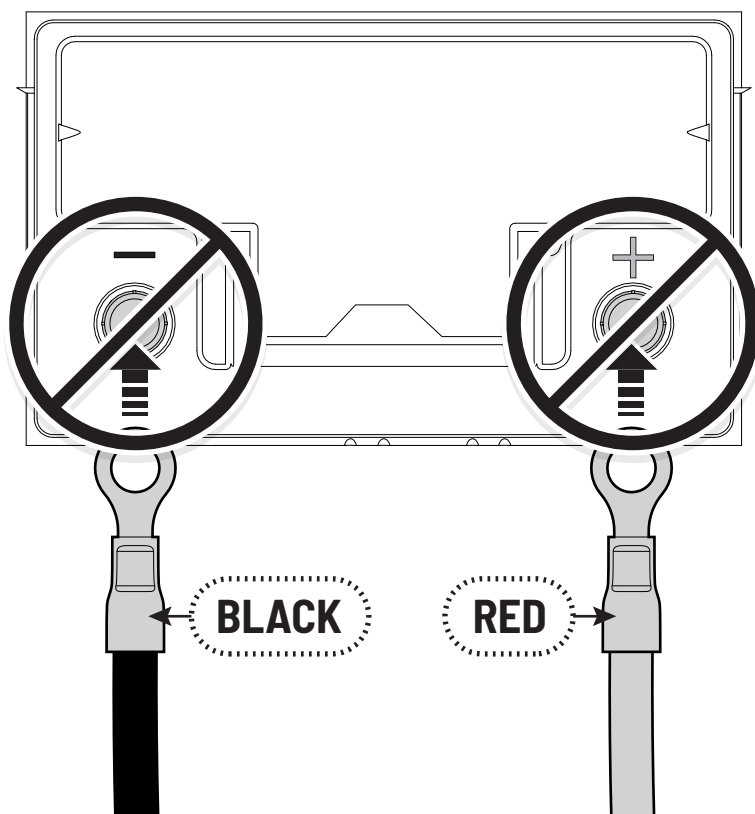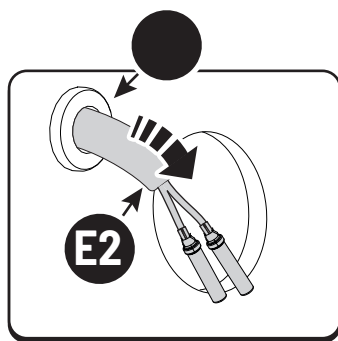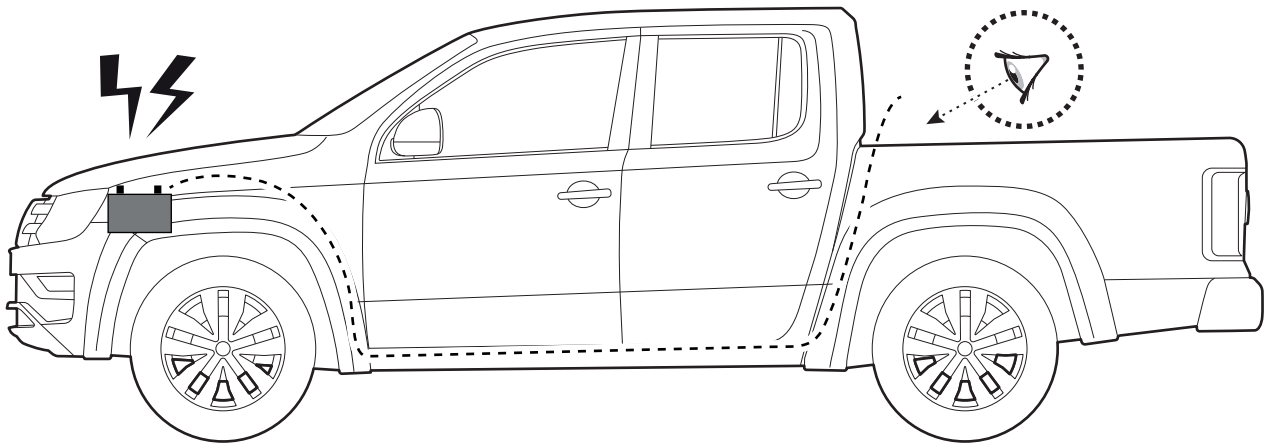

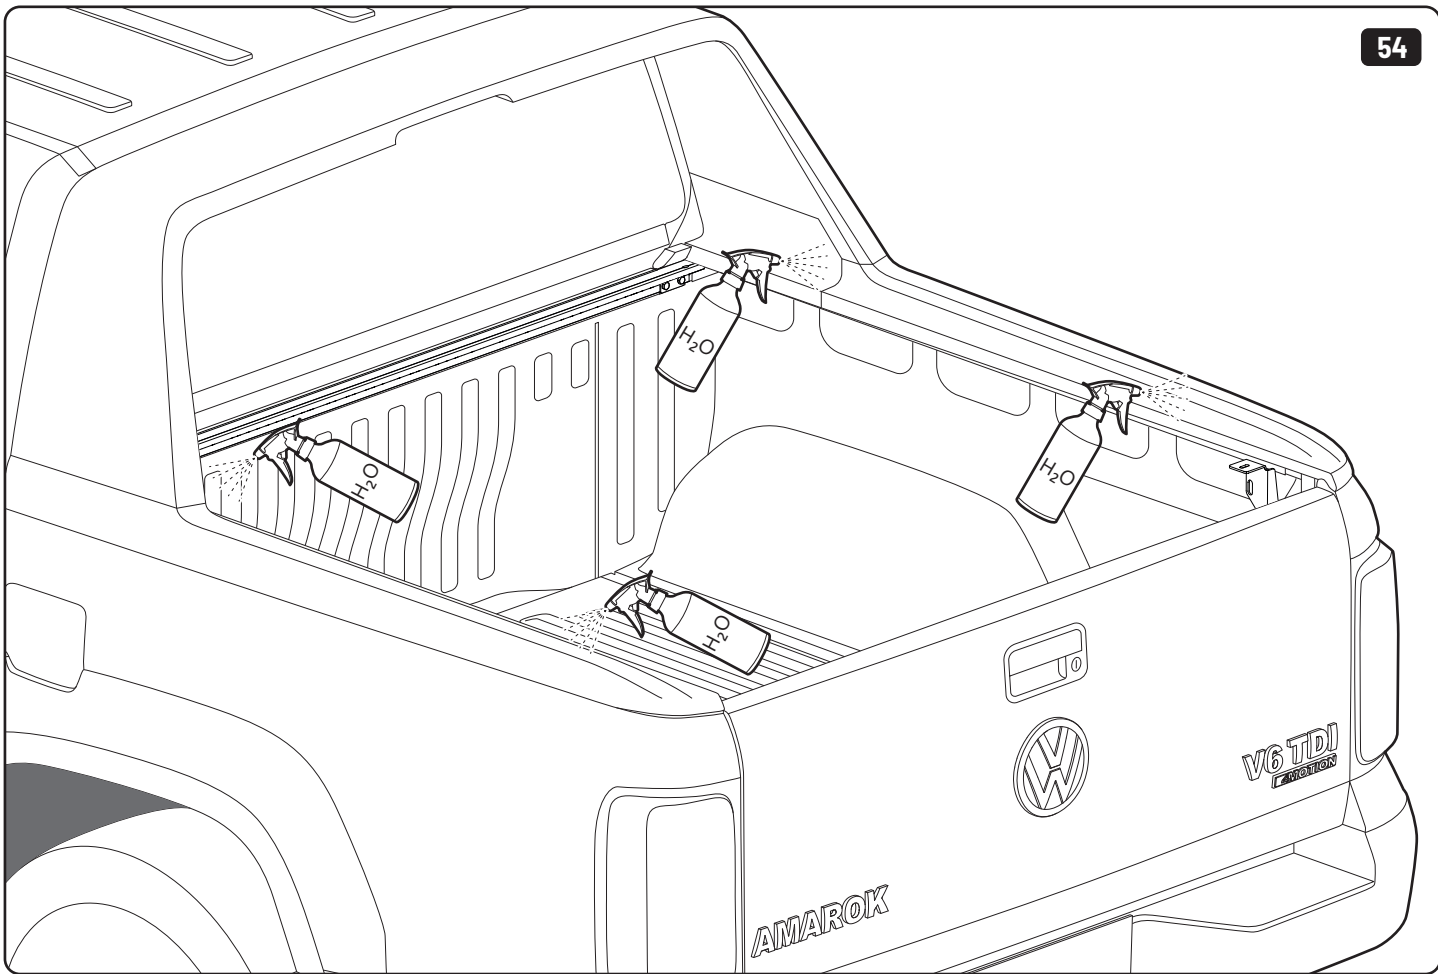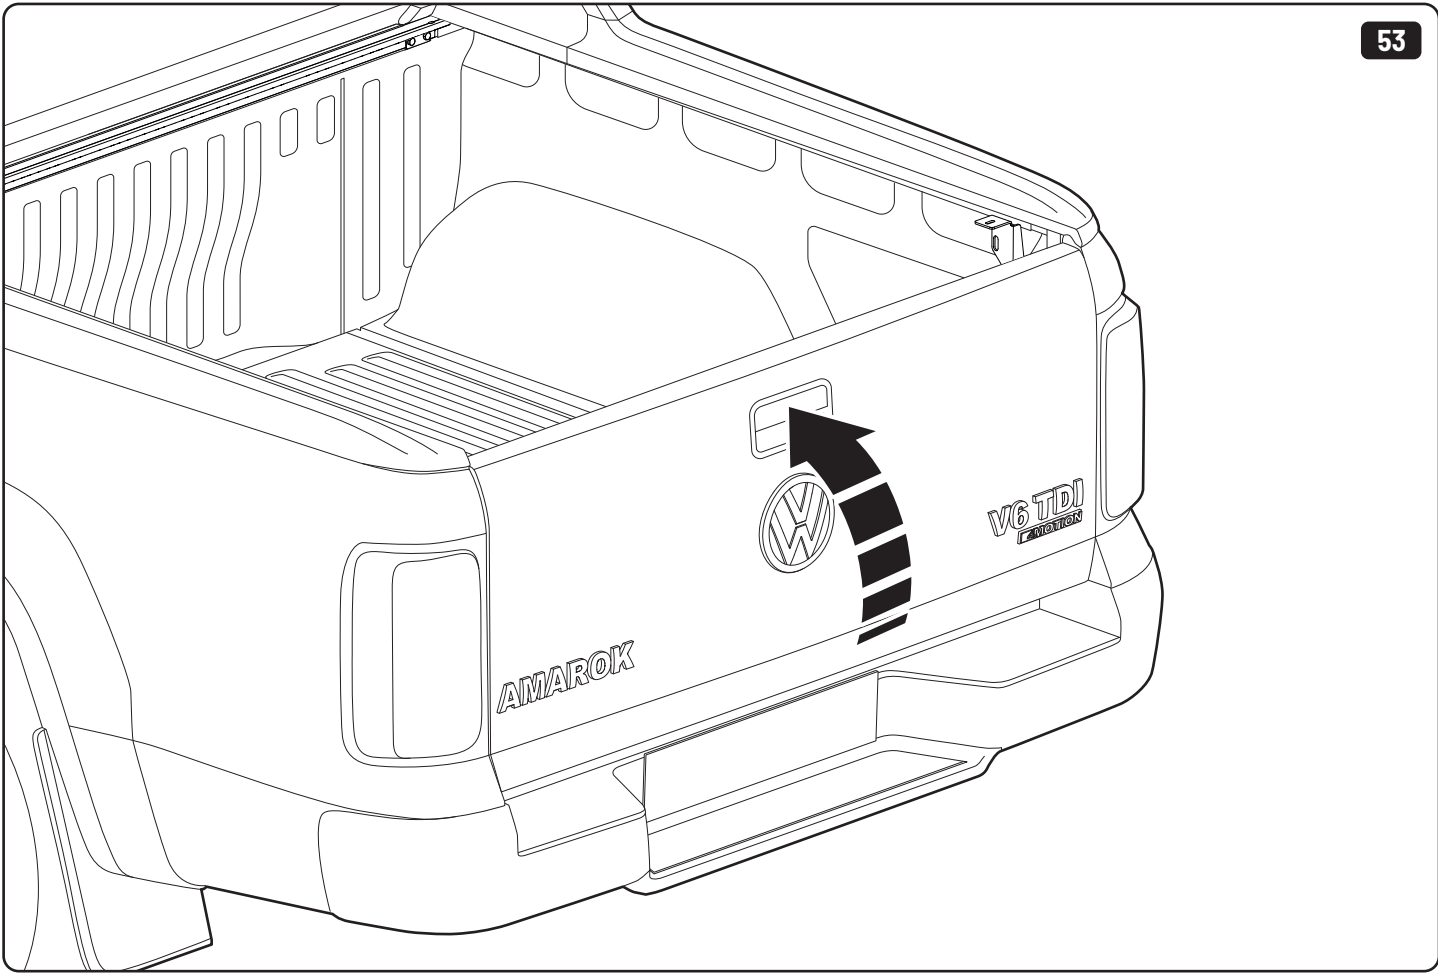


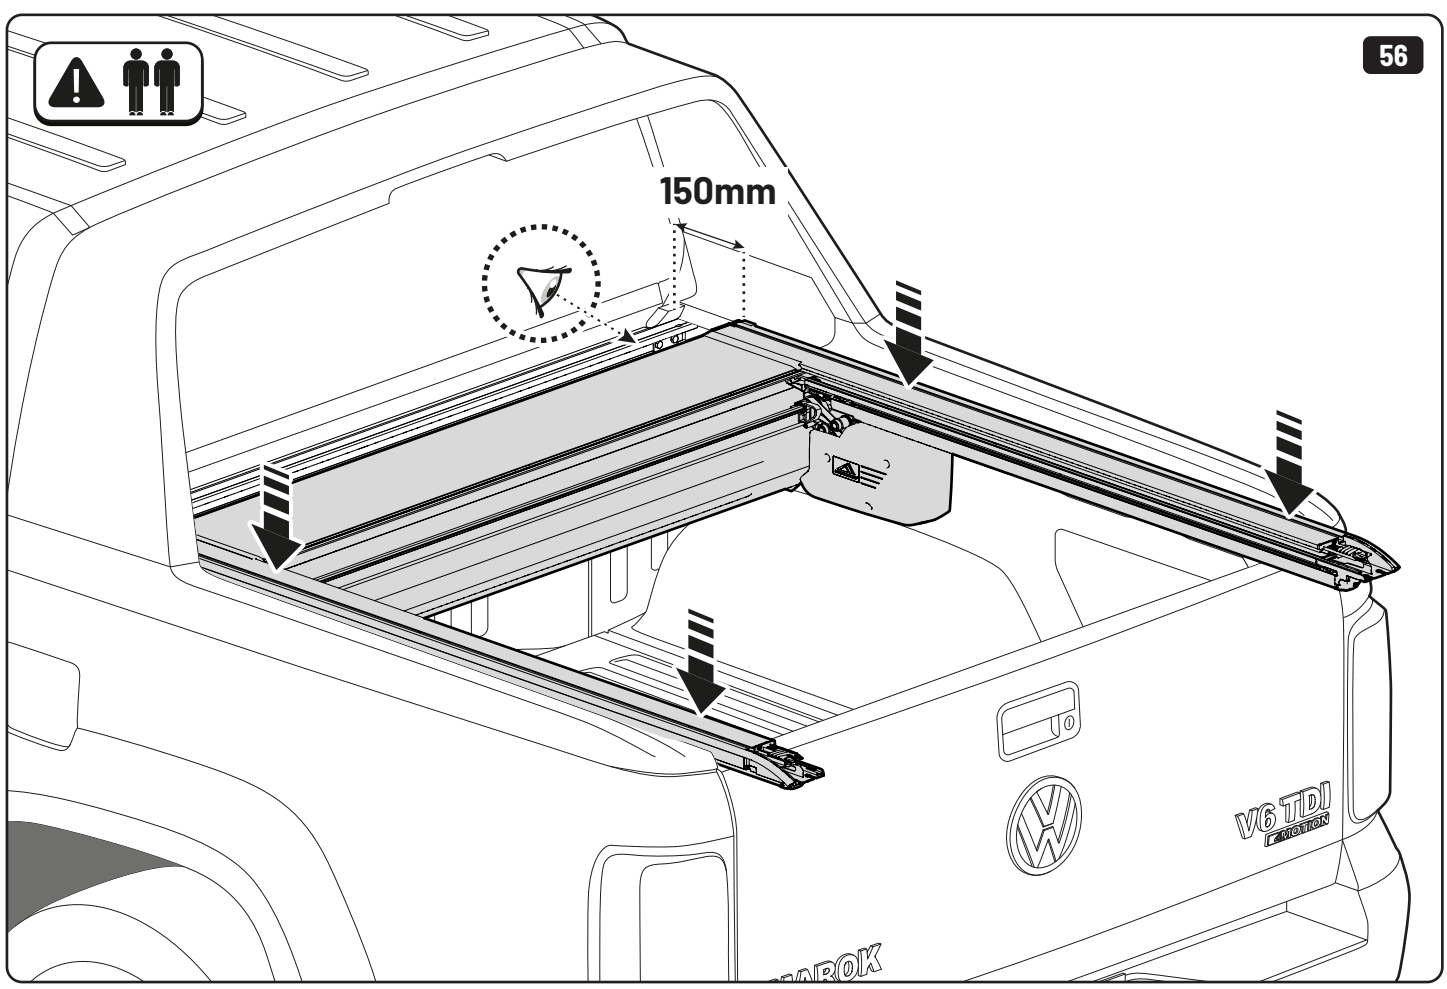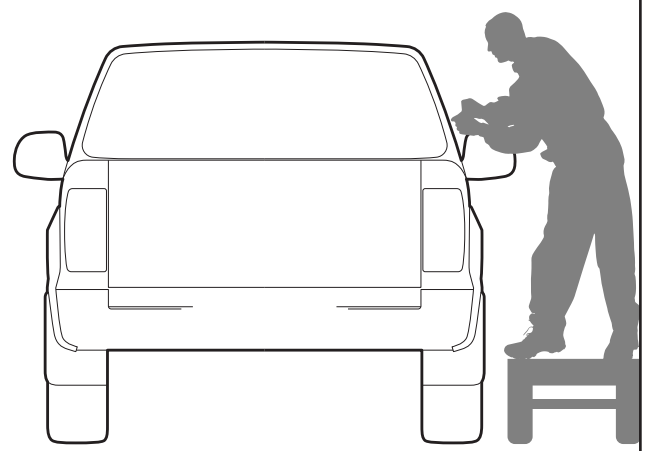
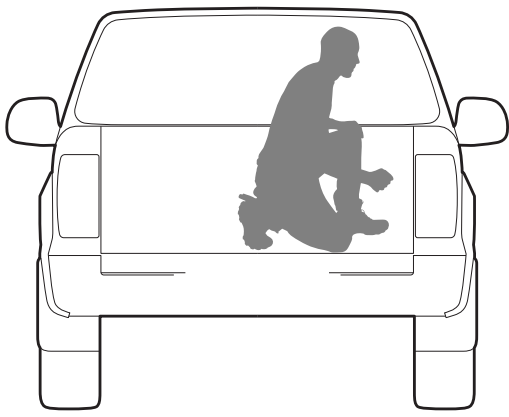


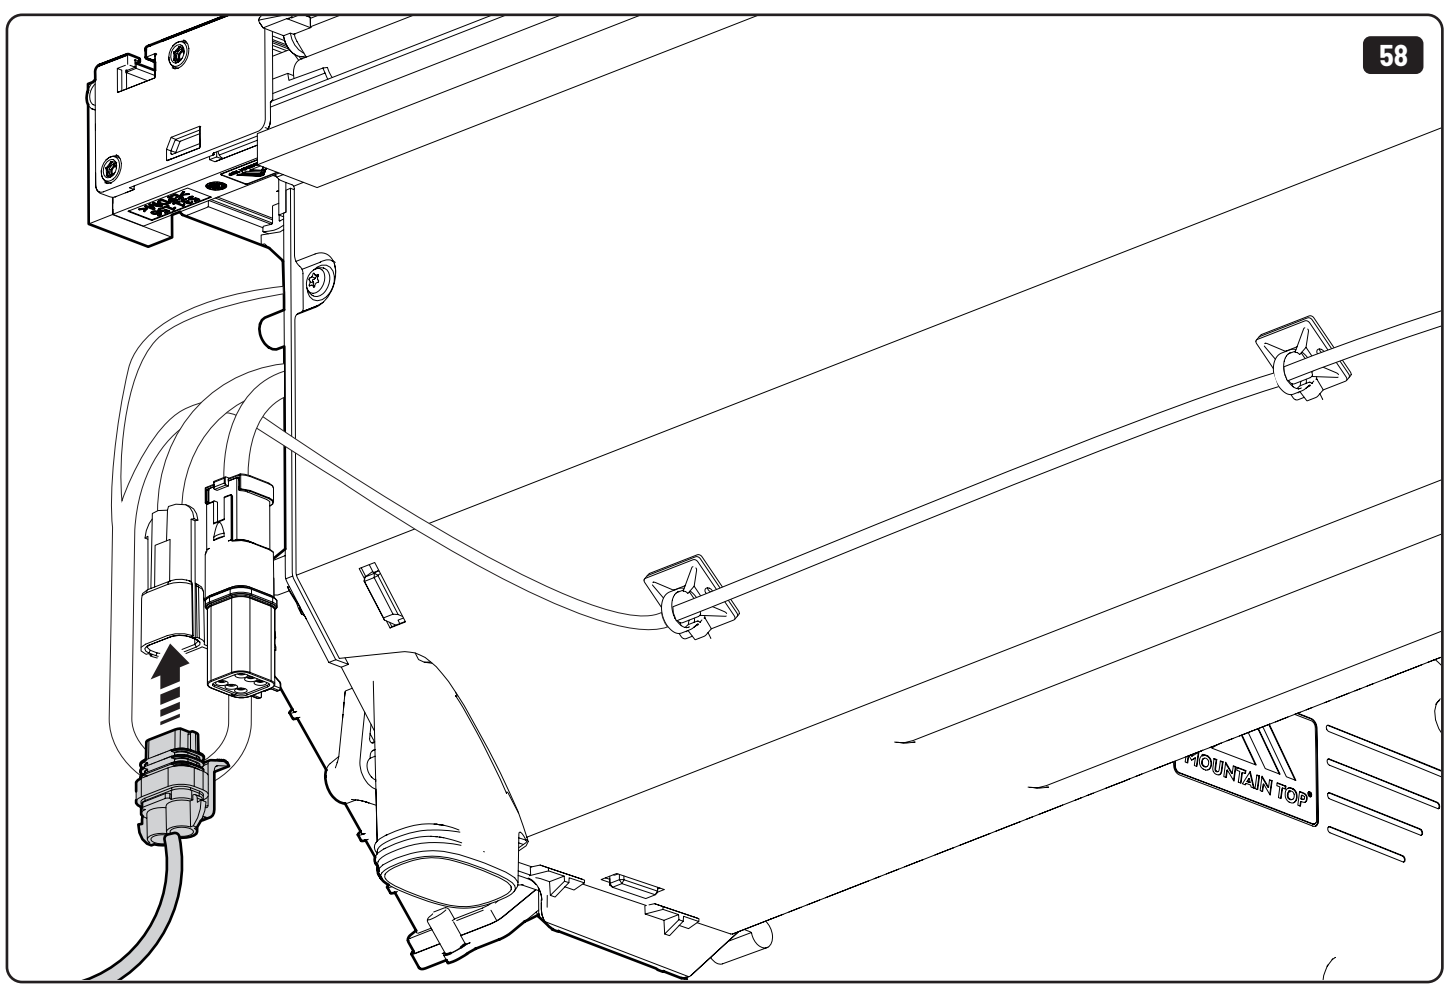
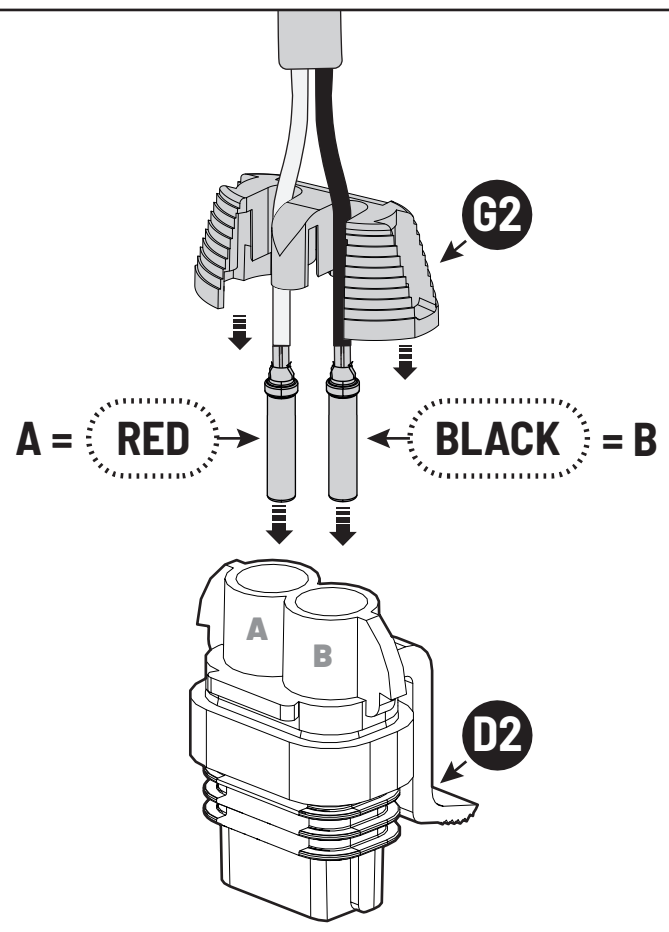


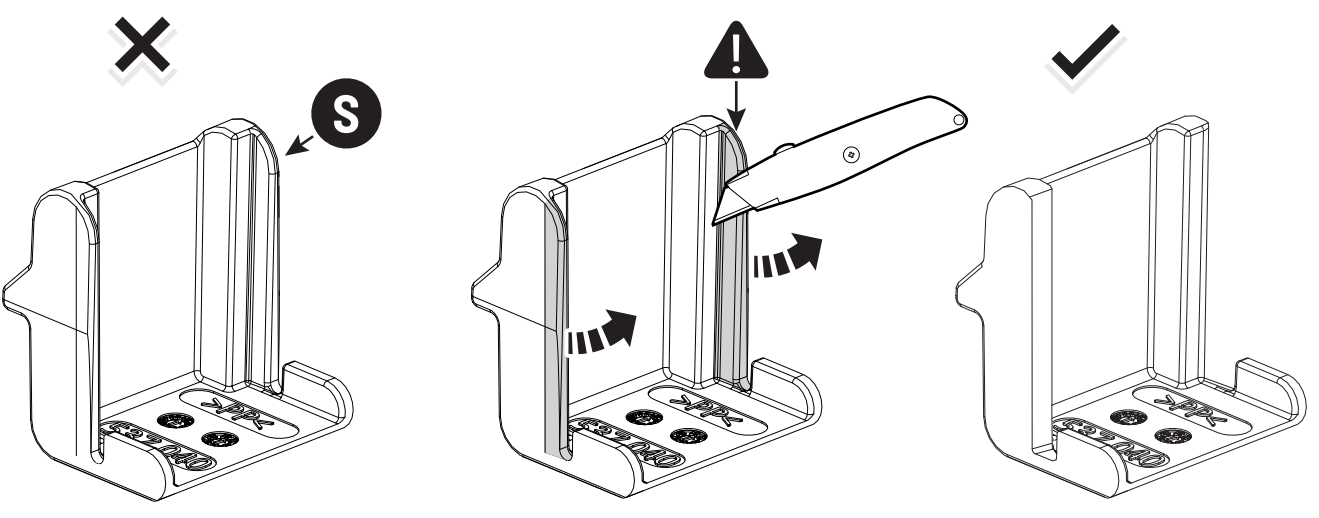



x2

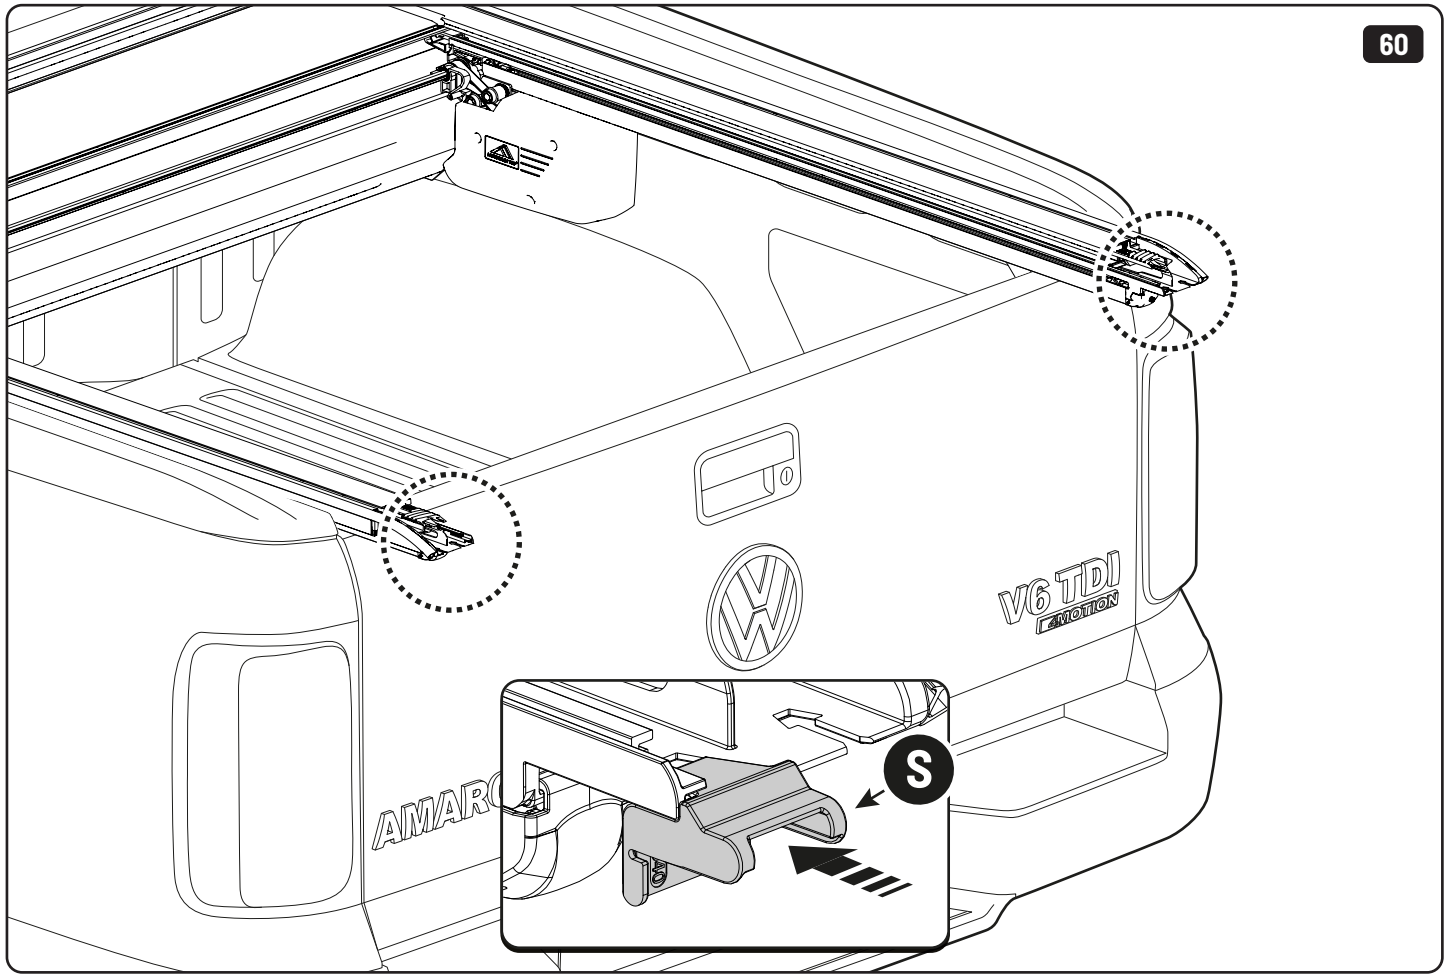

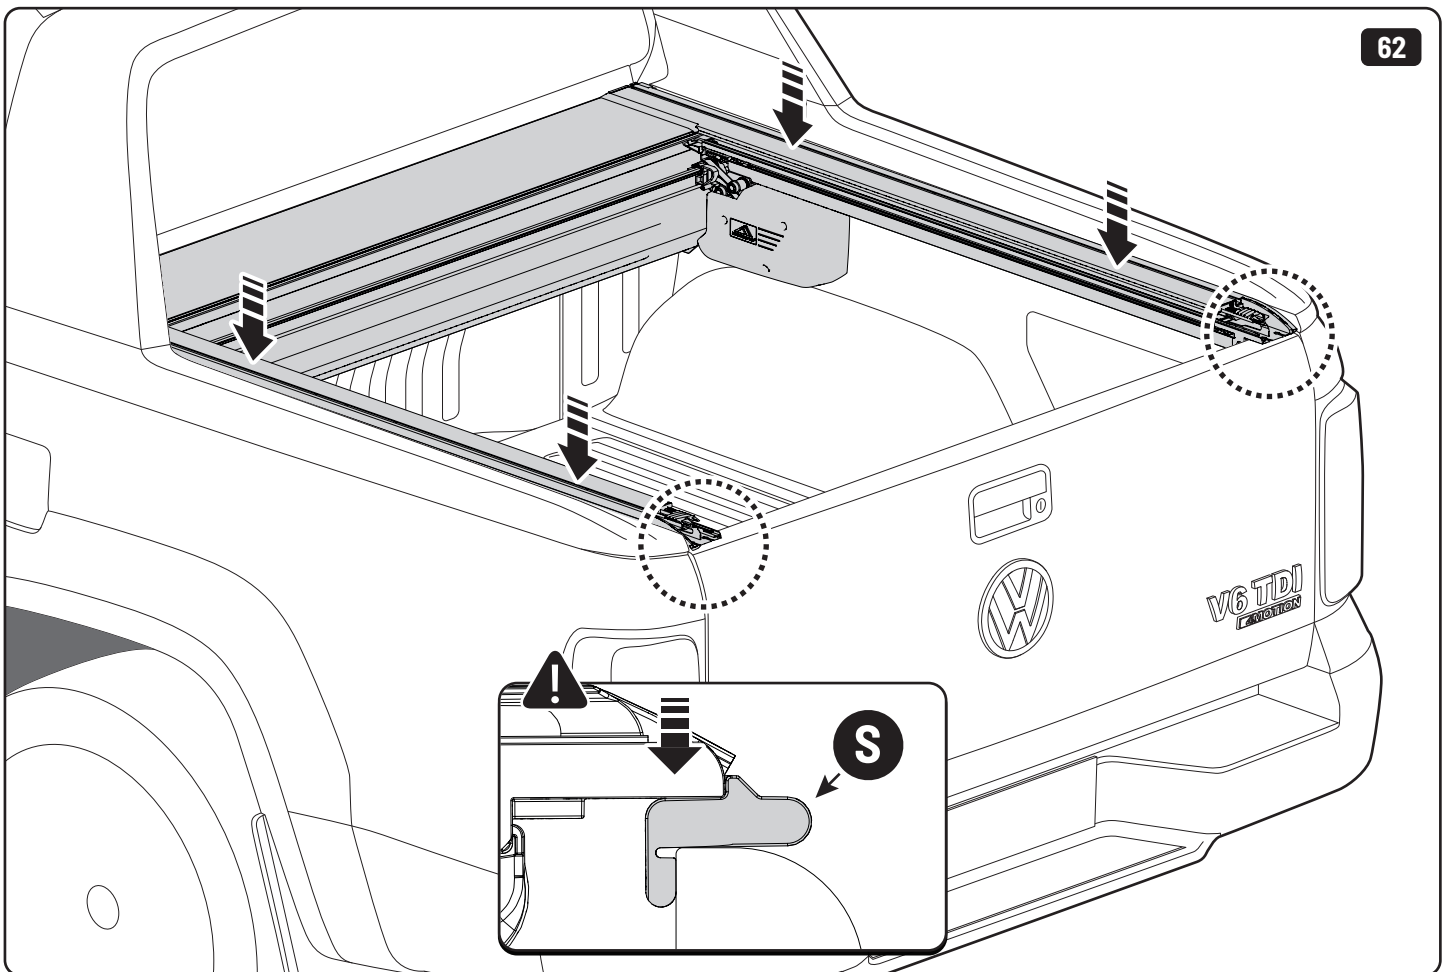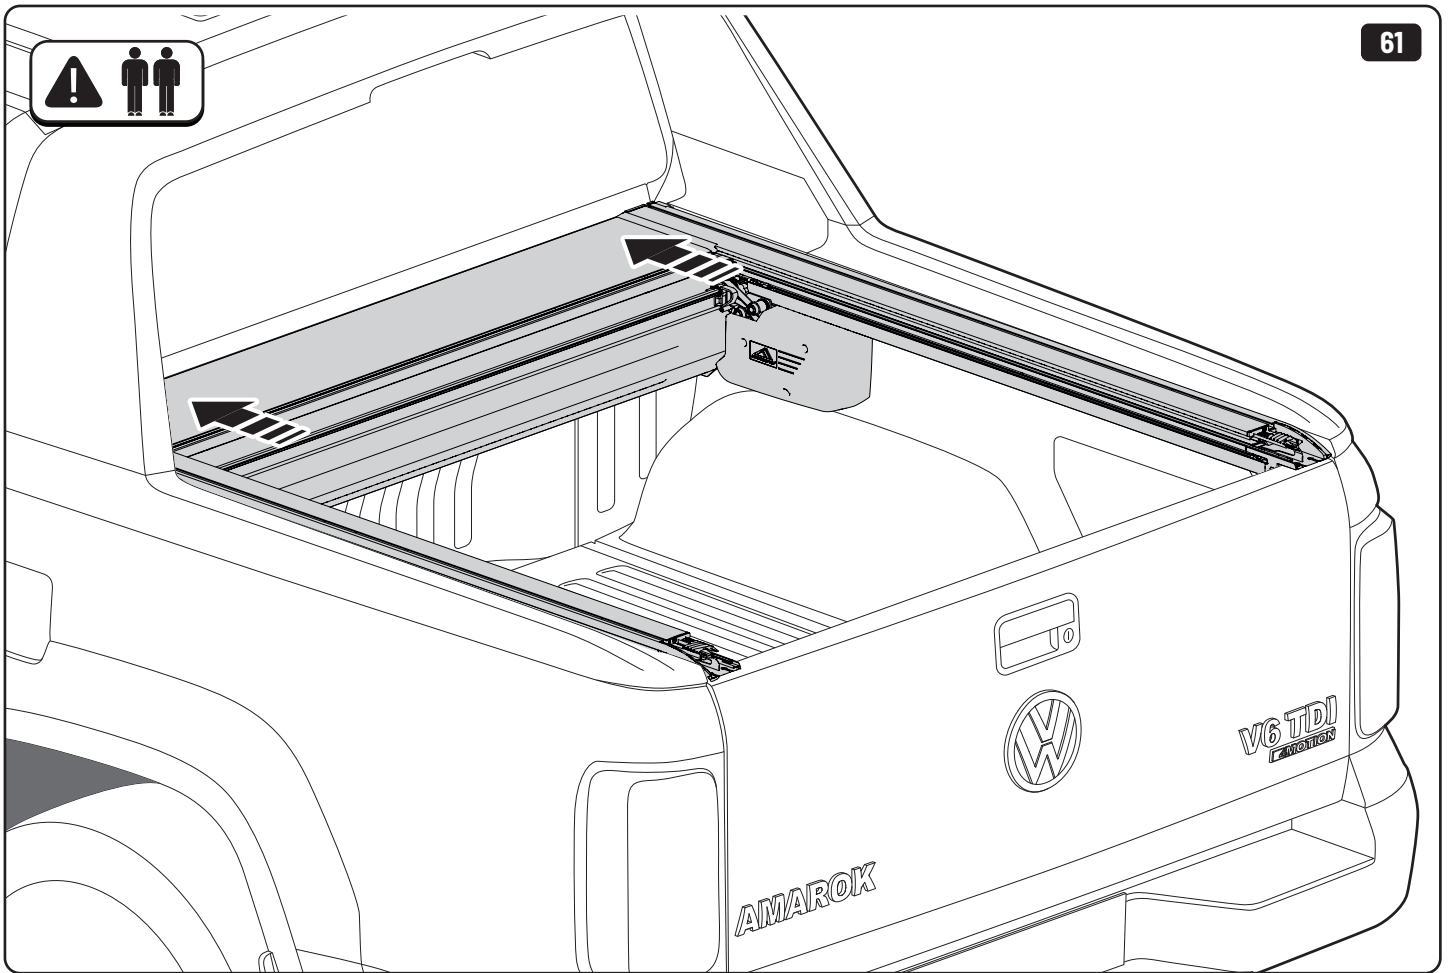

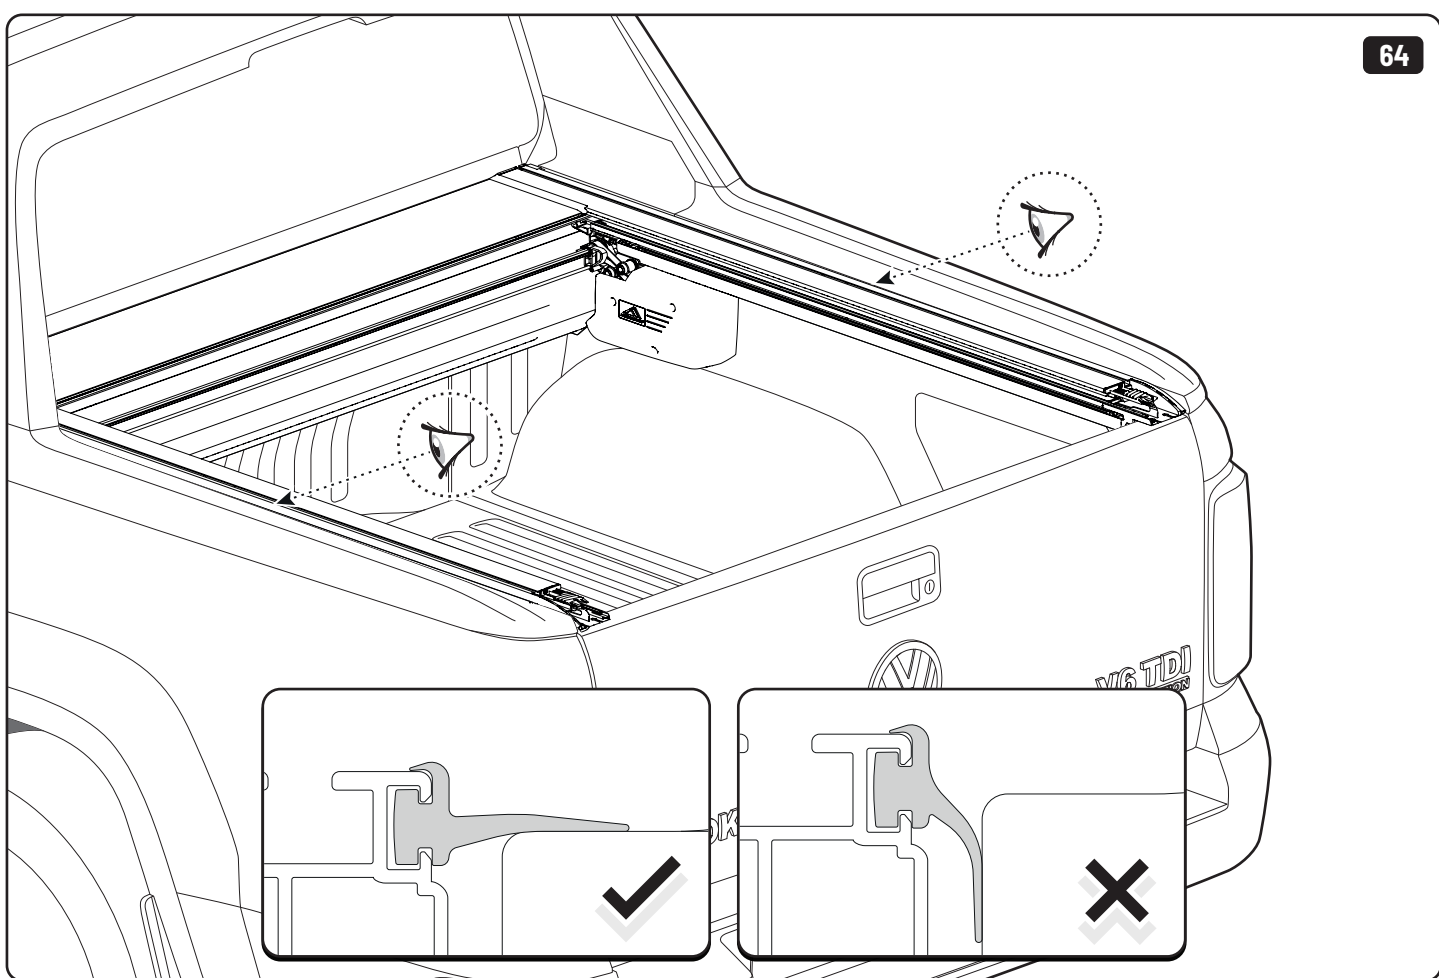
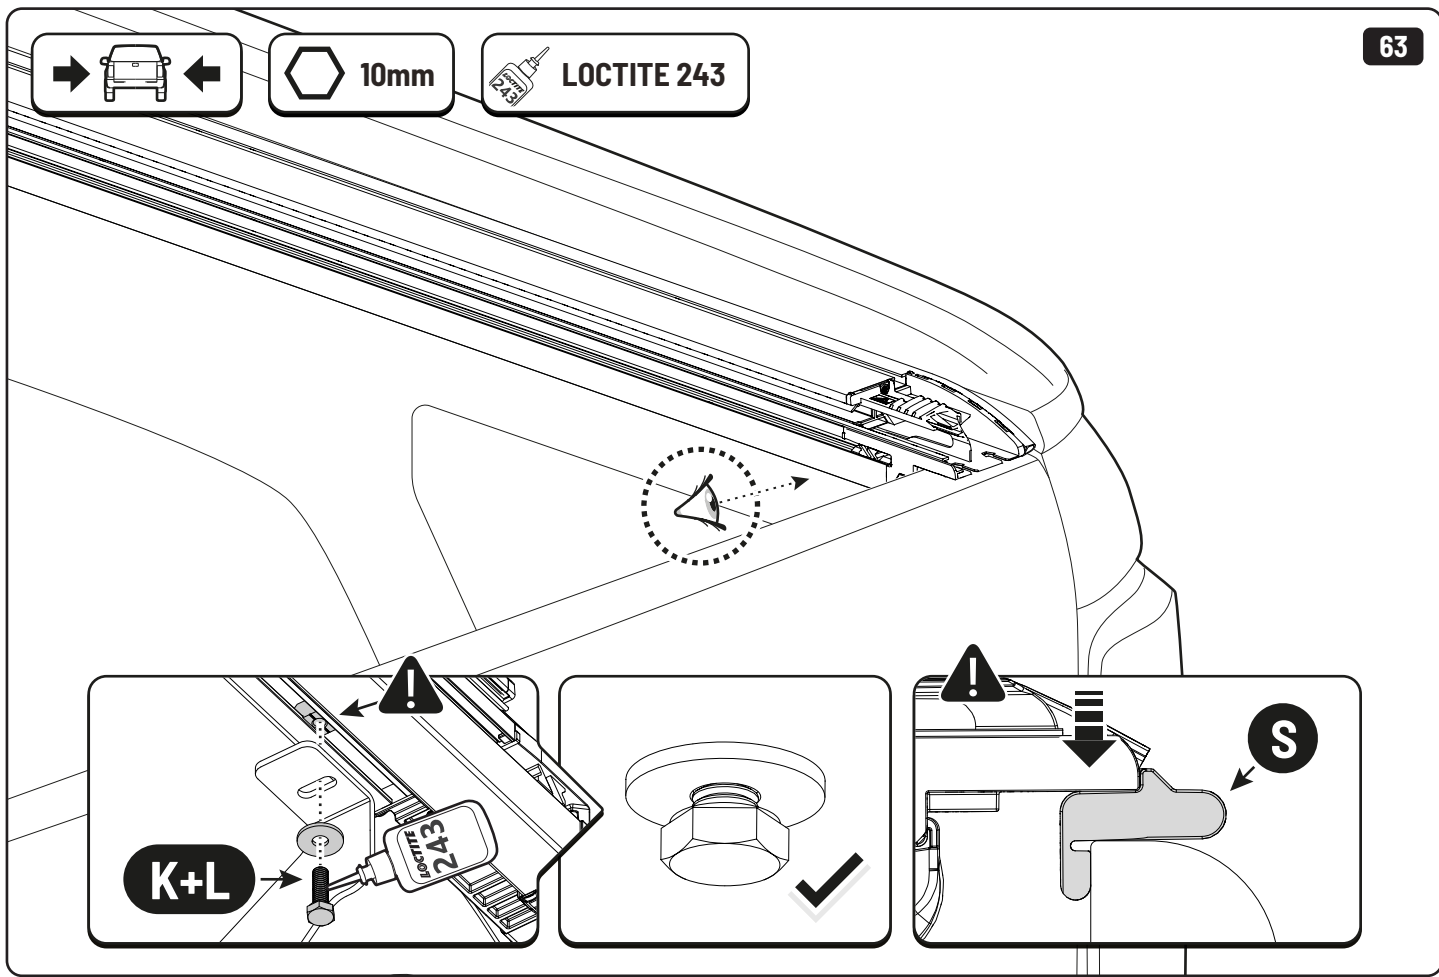


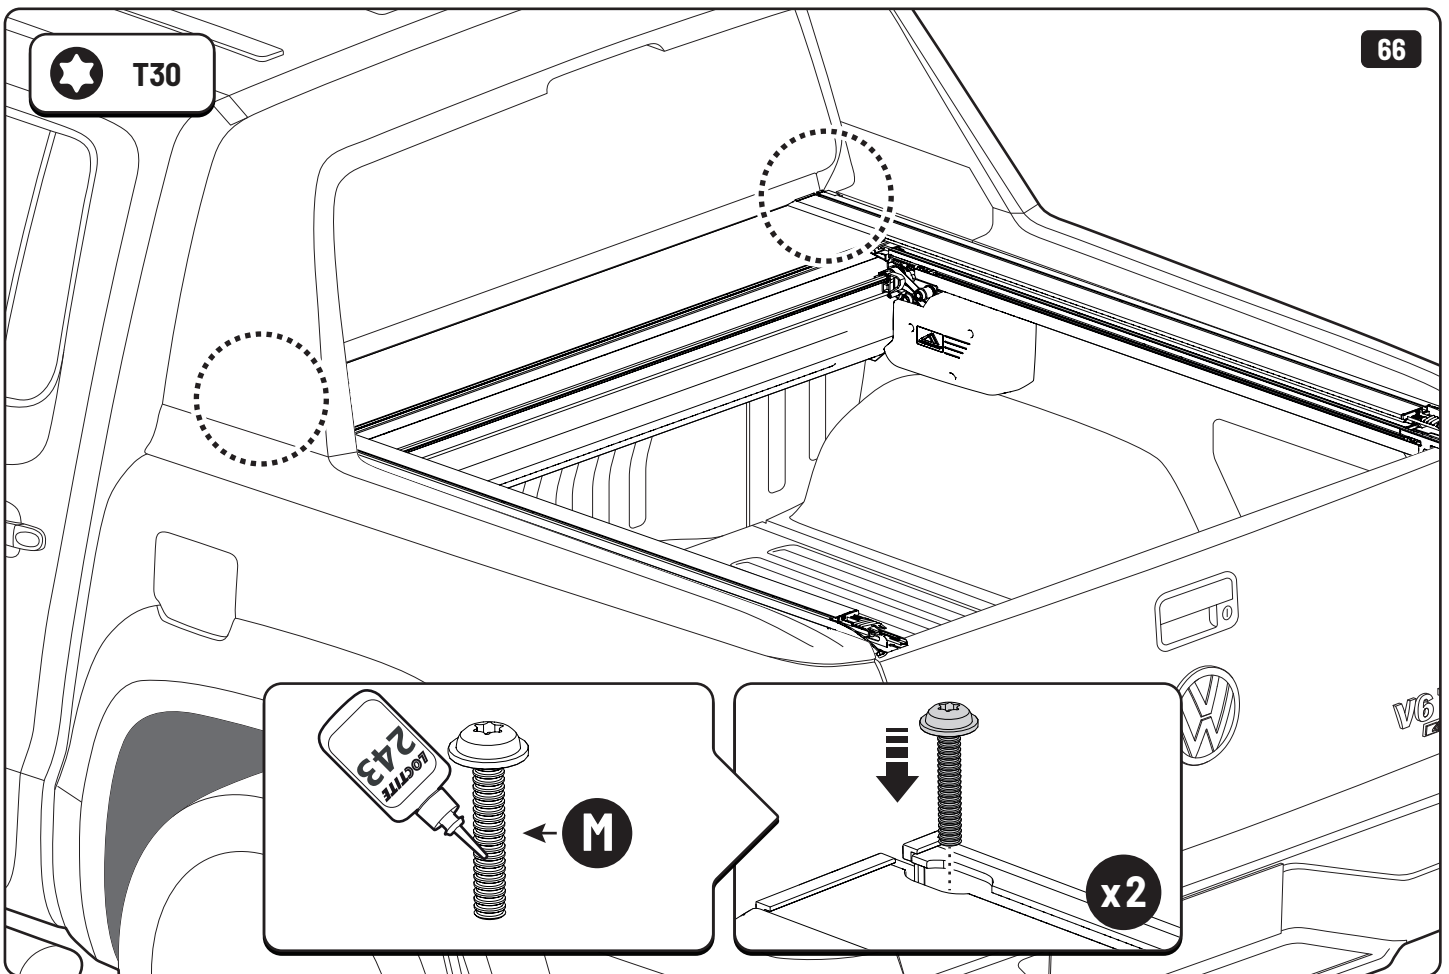
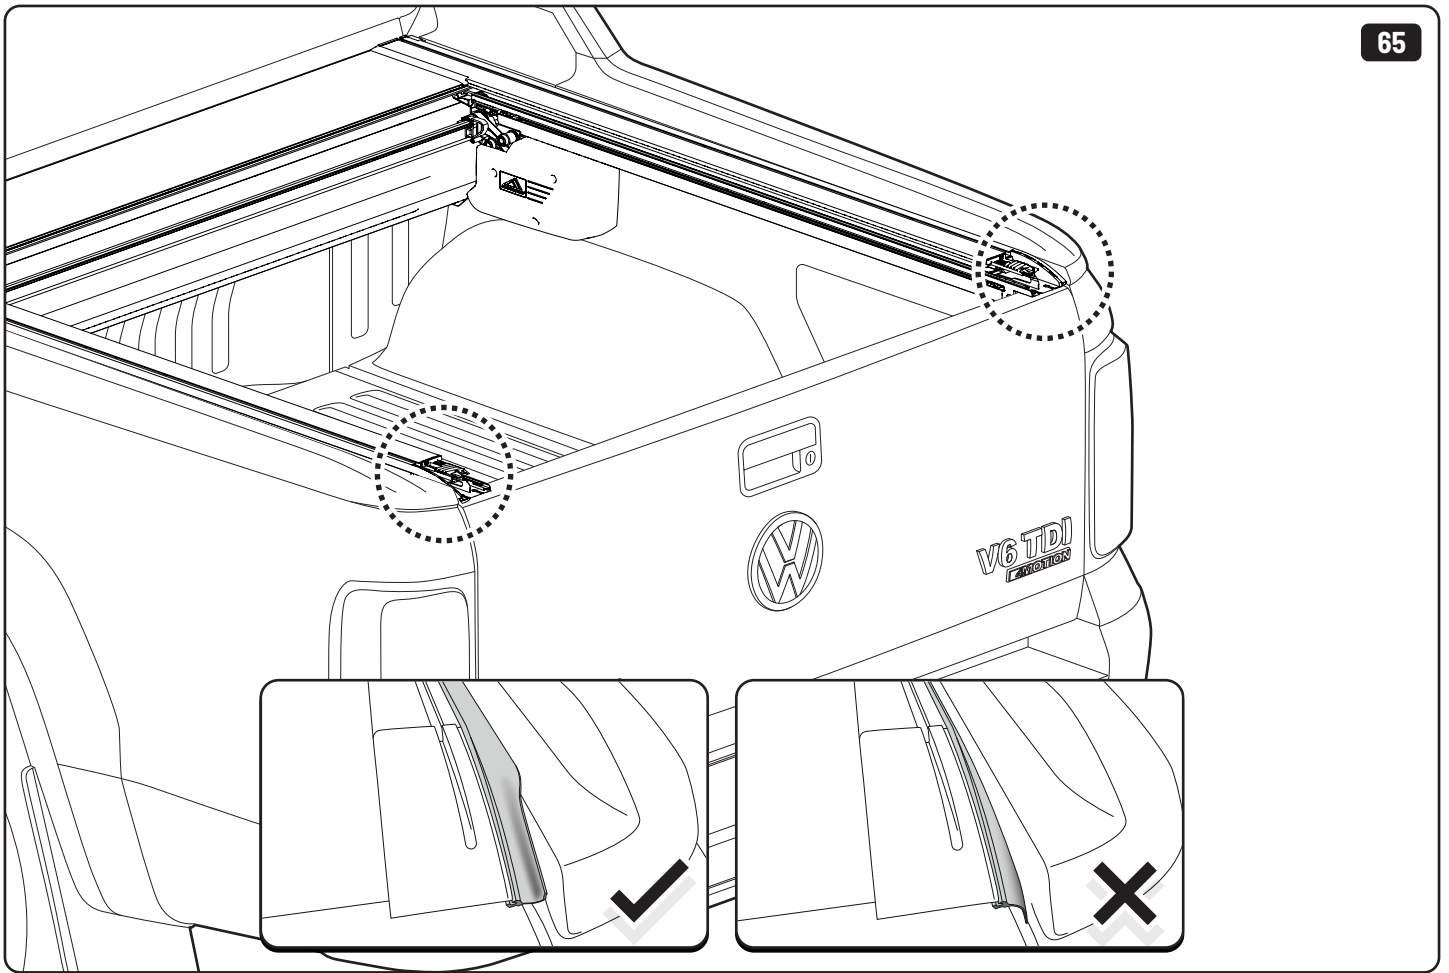




T30

10mm

LOCTITE 243

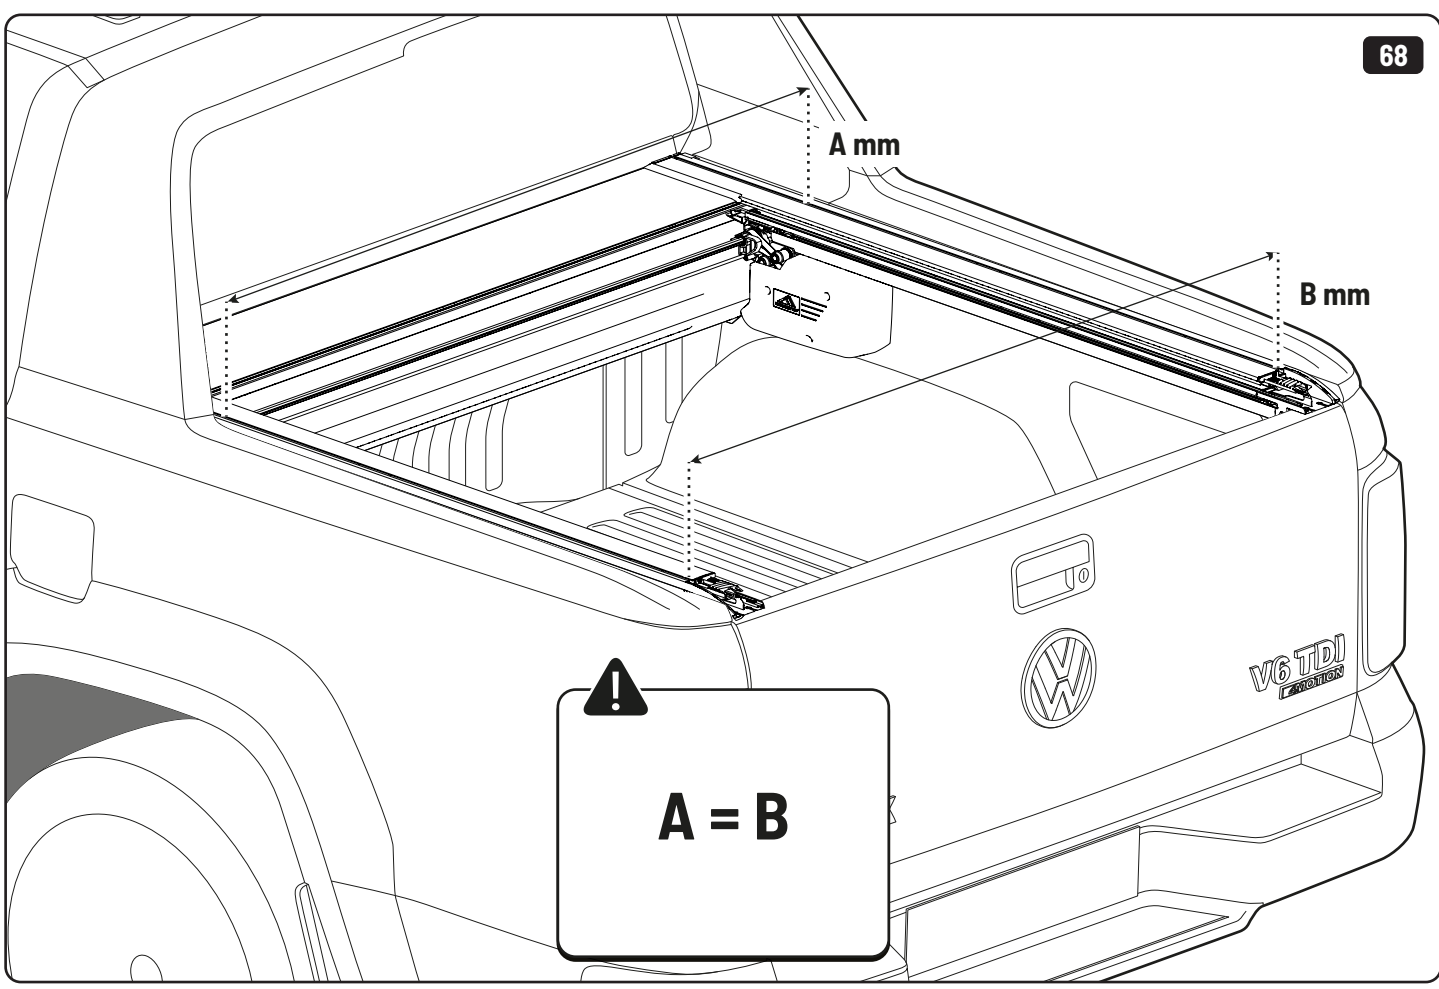
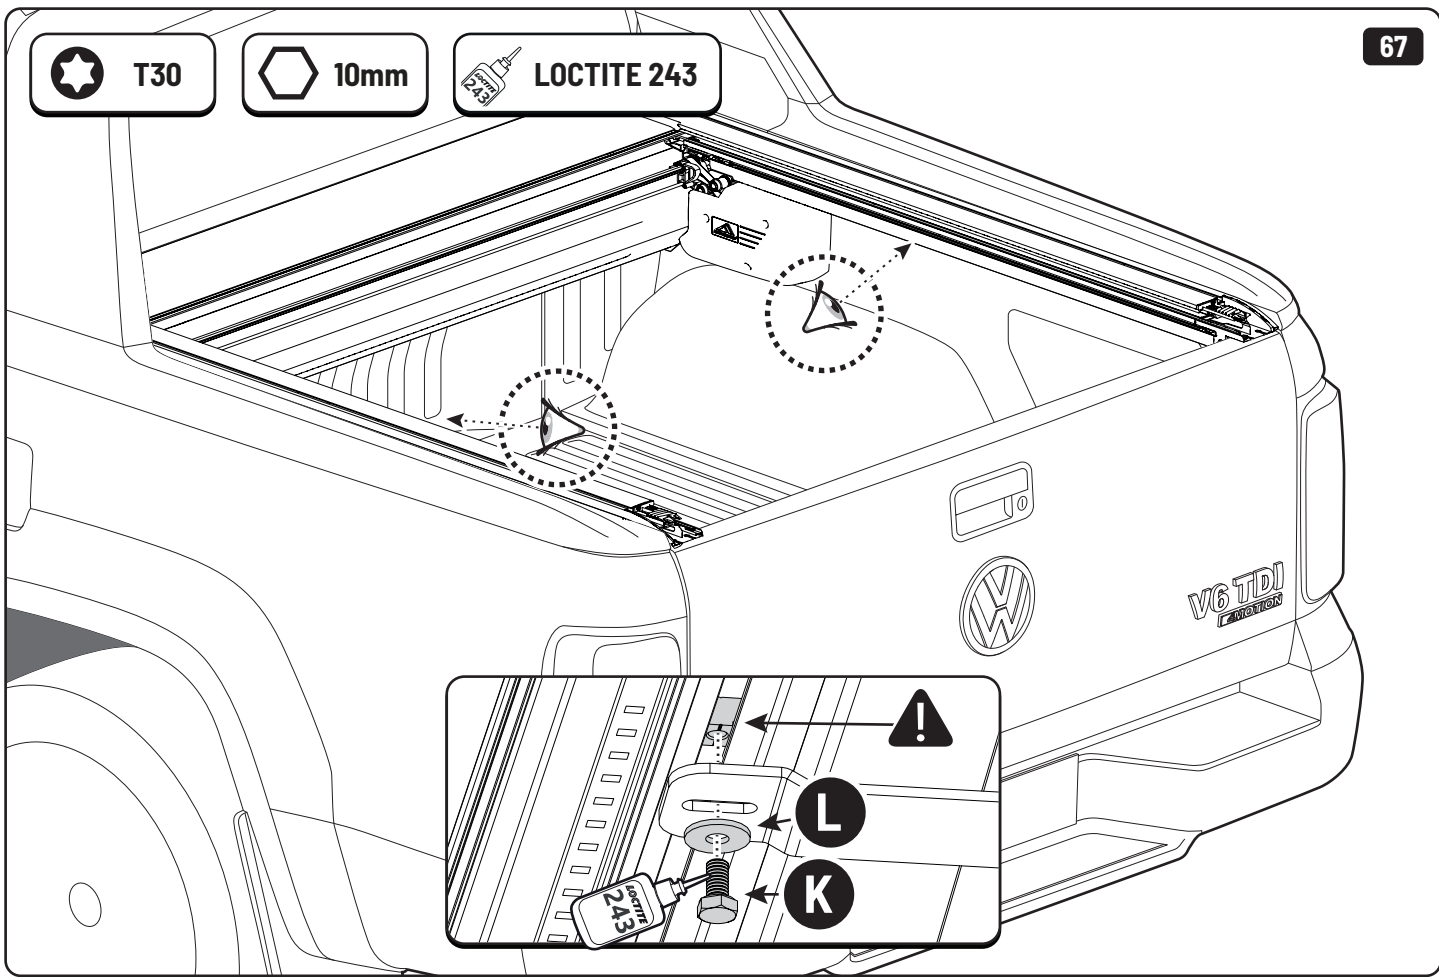


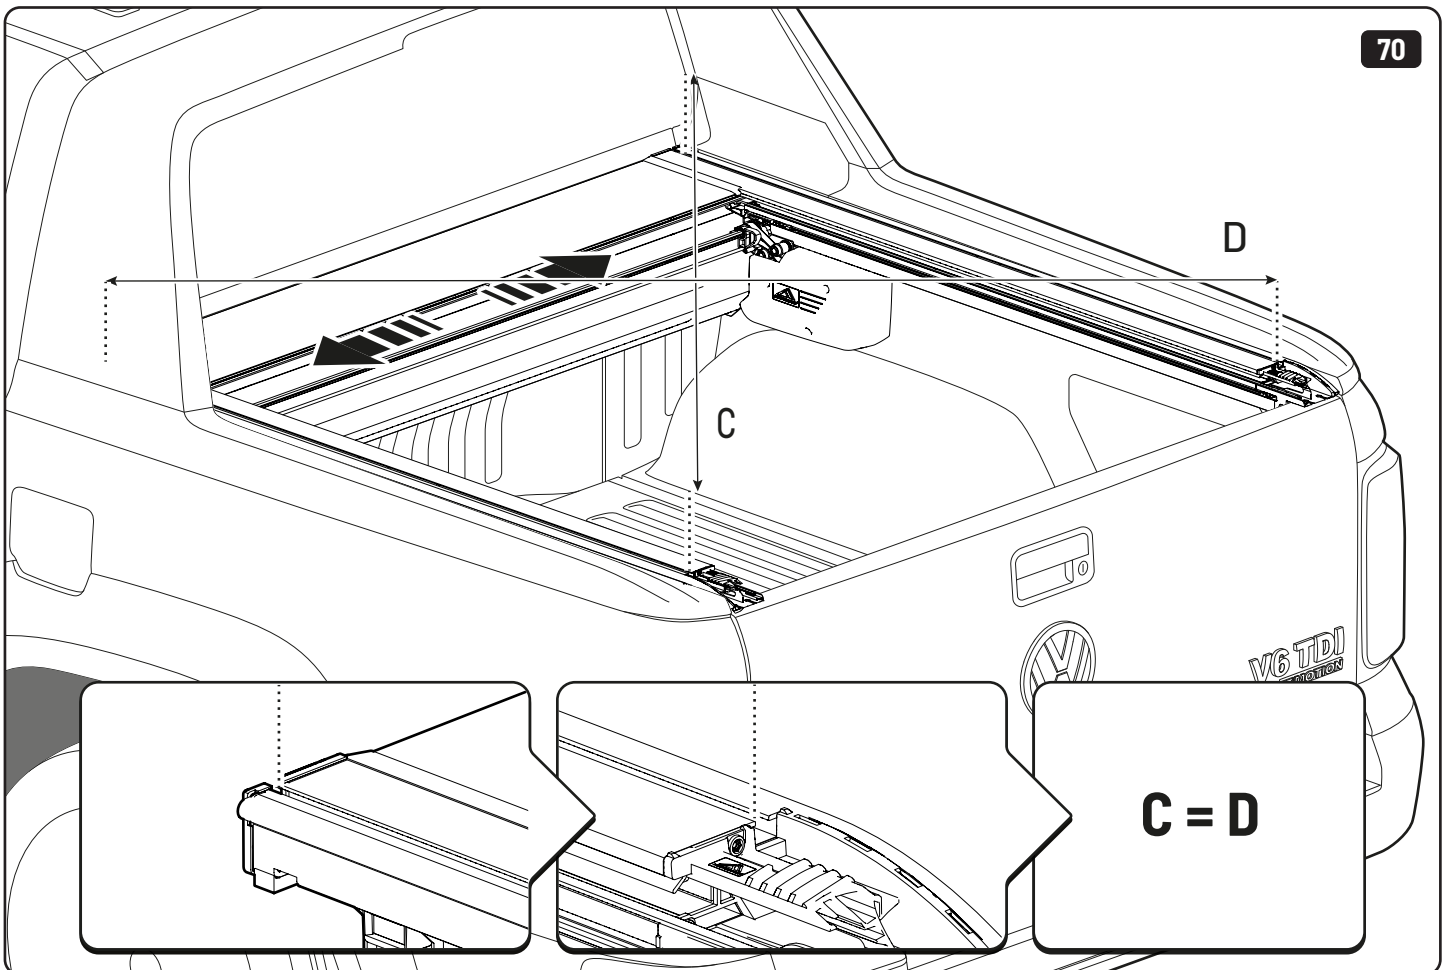
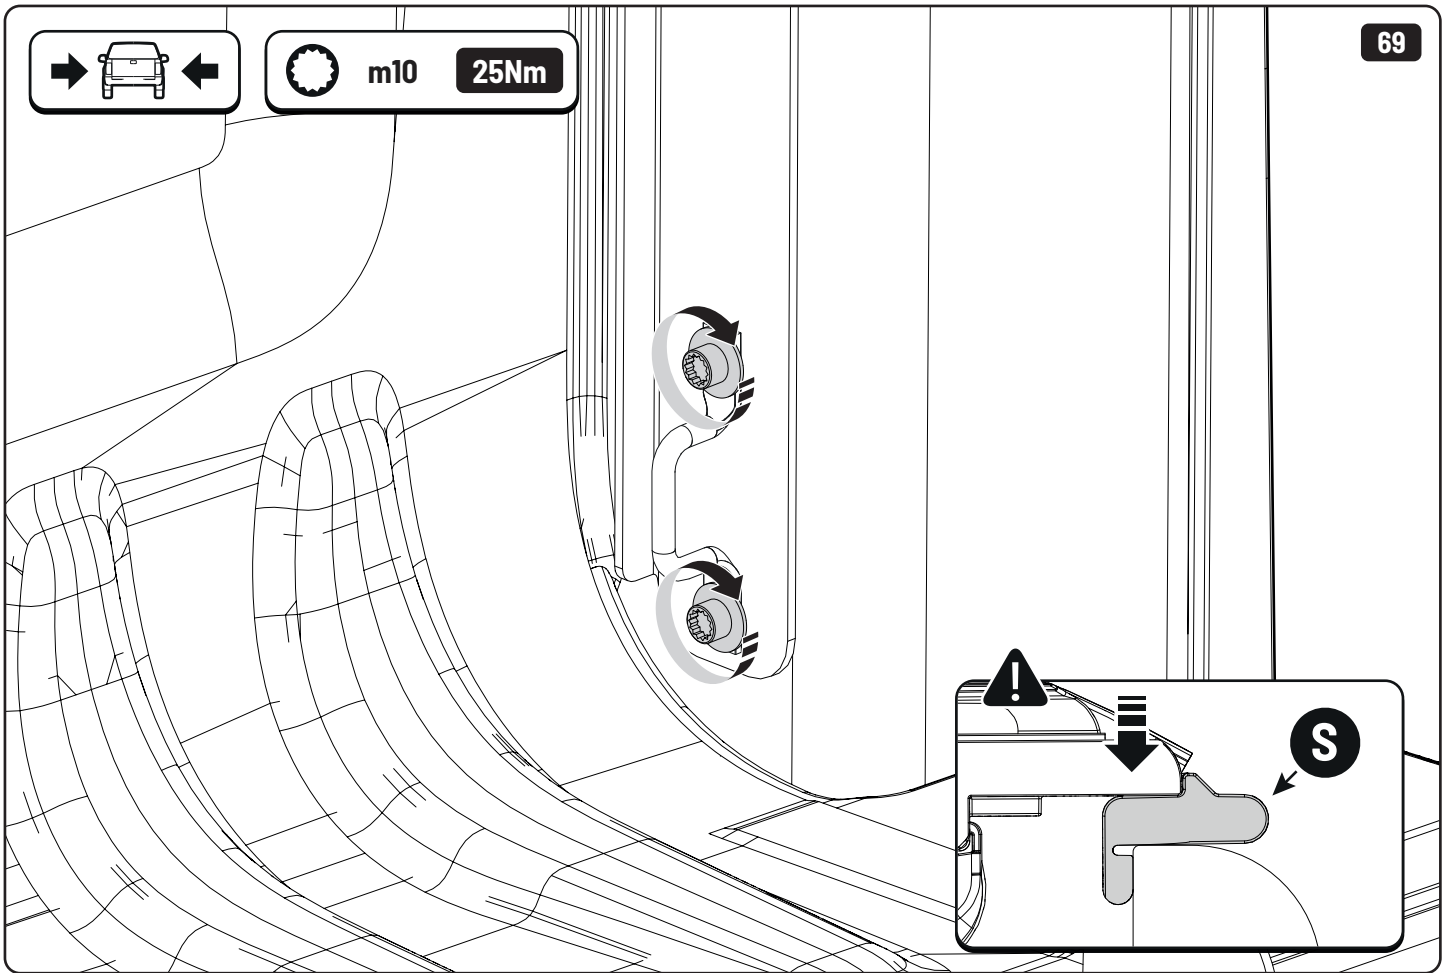




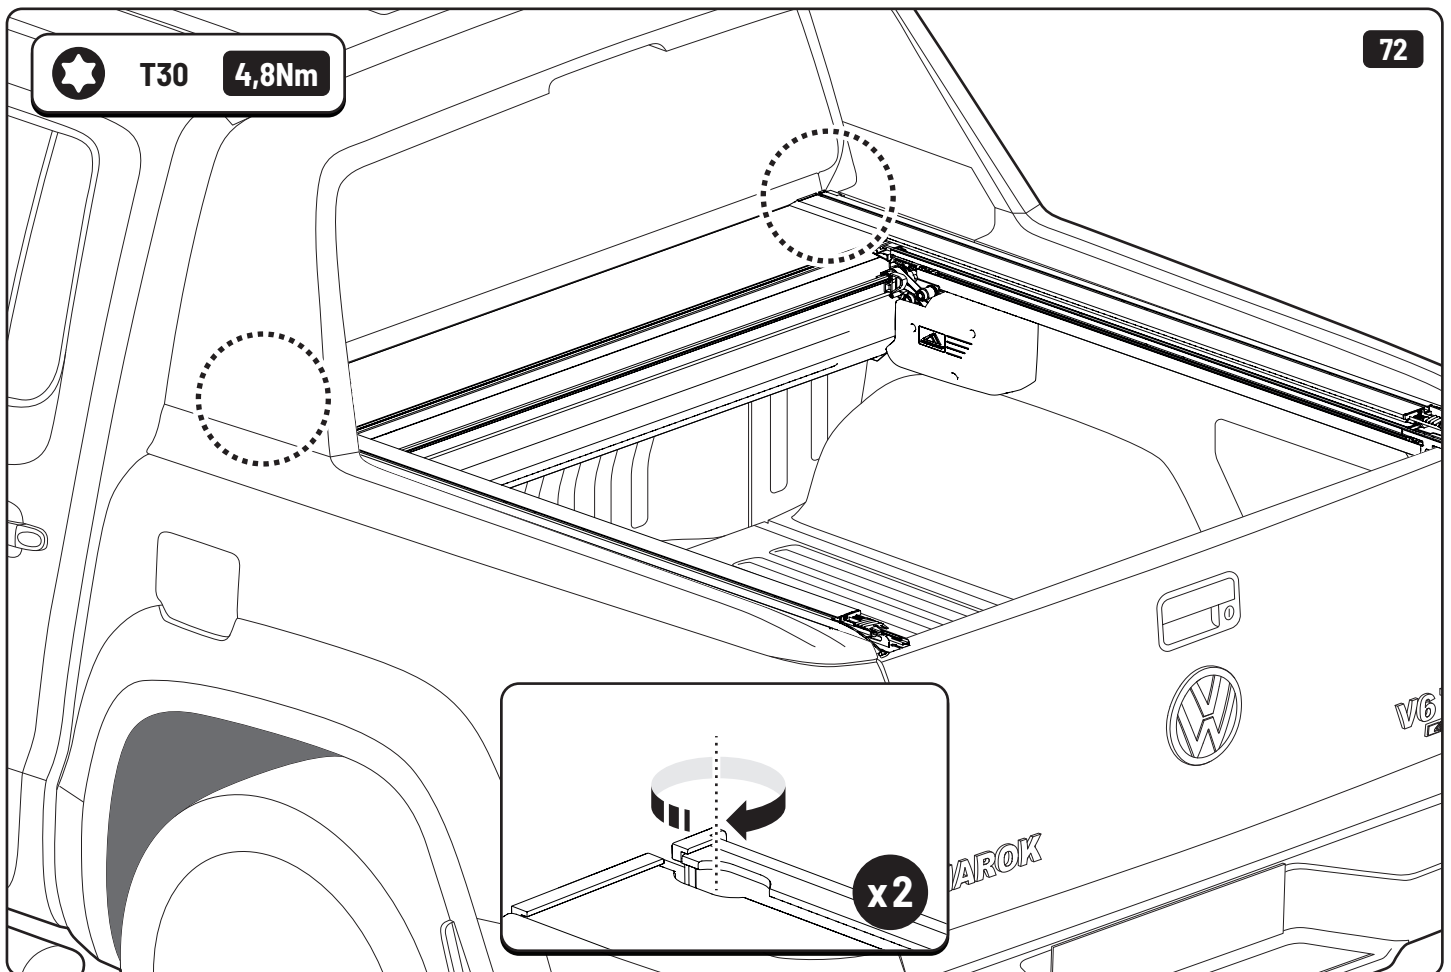
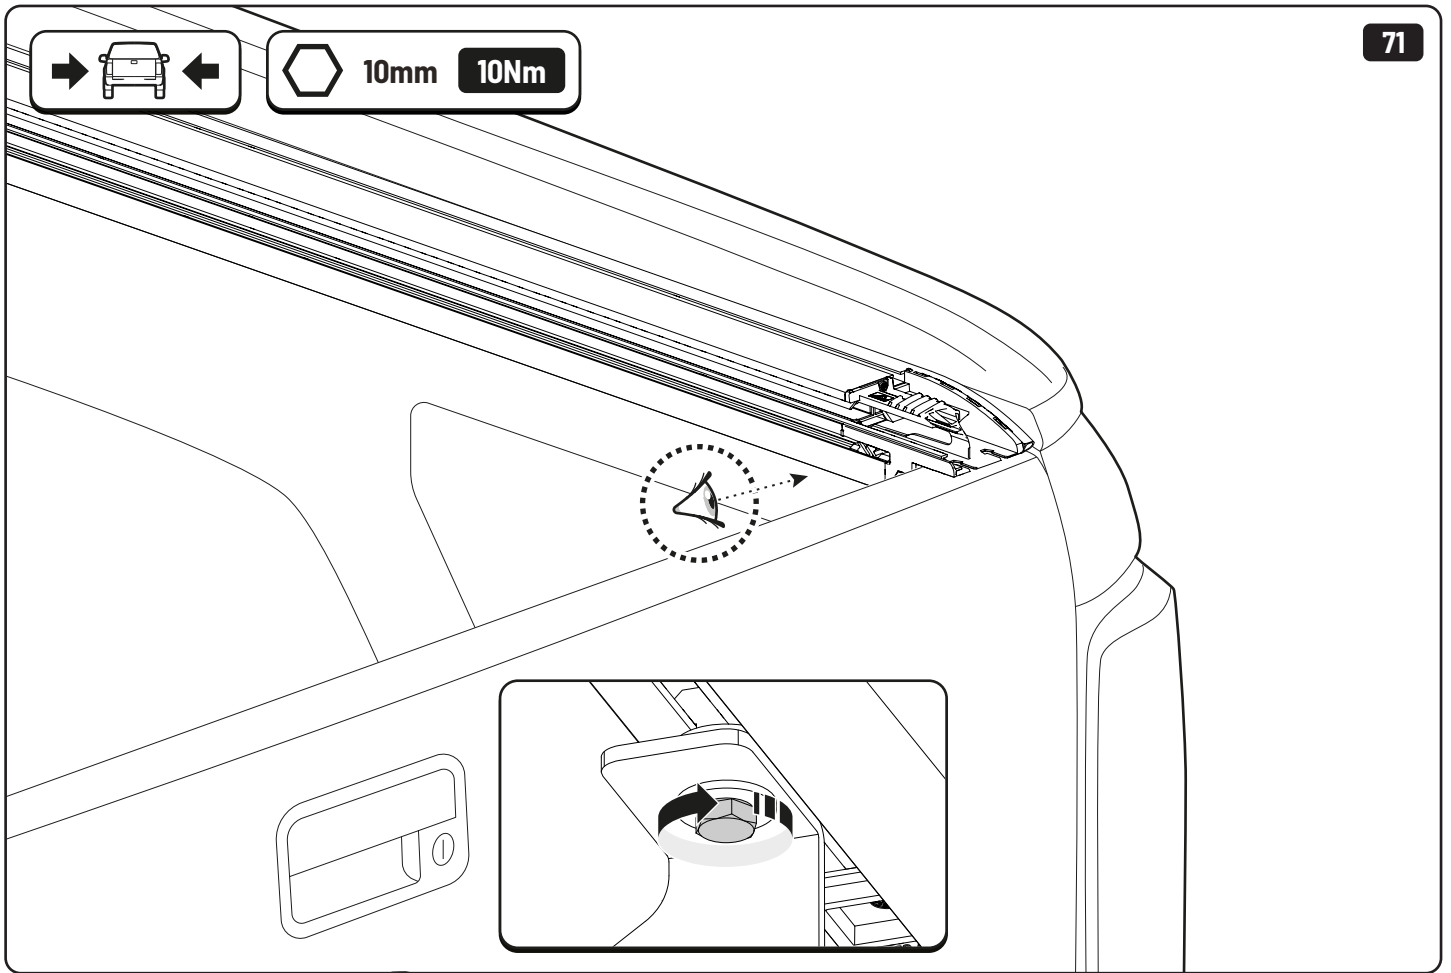




10mm 10Nm



T30 10Nm

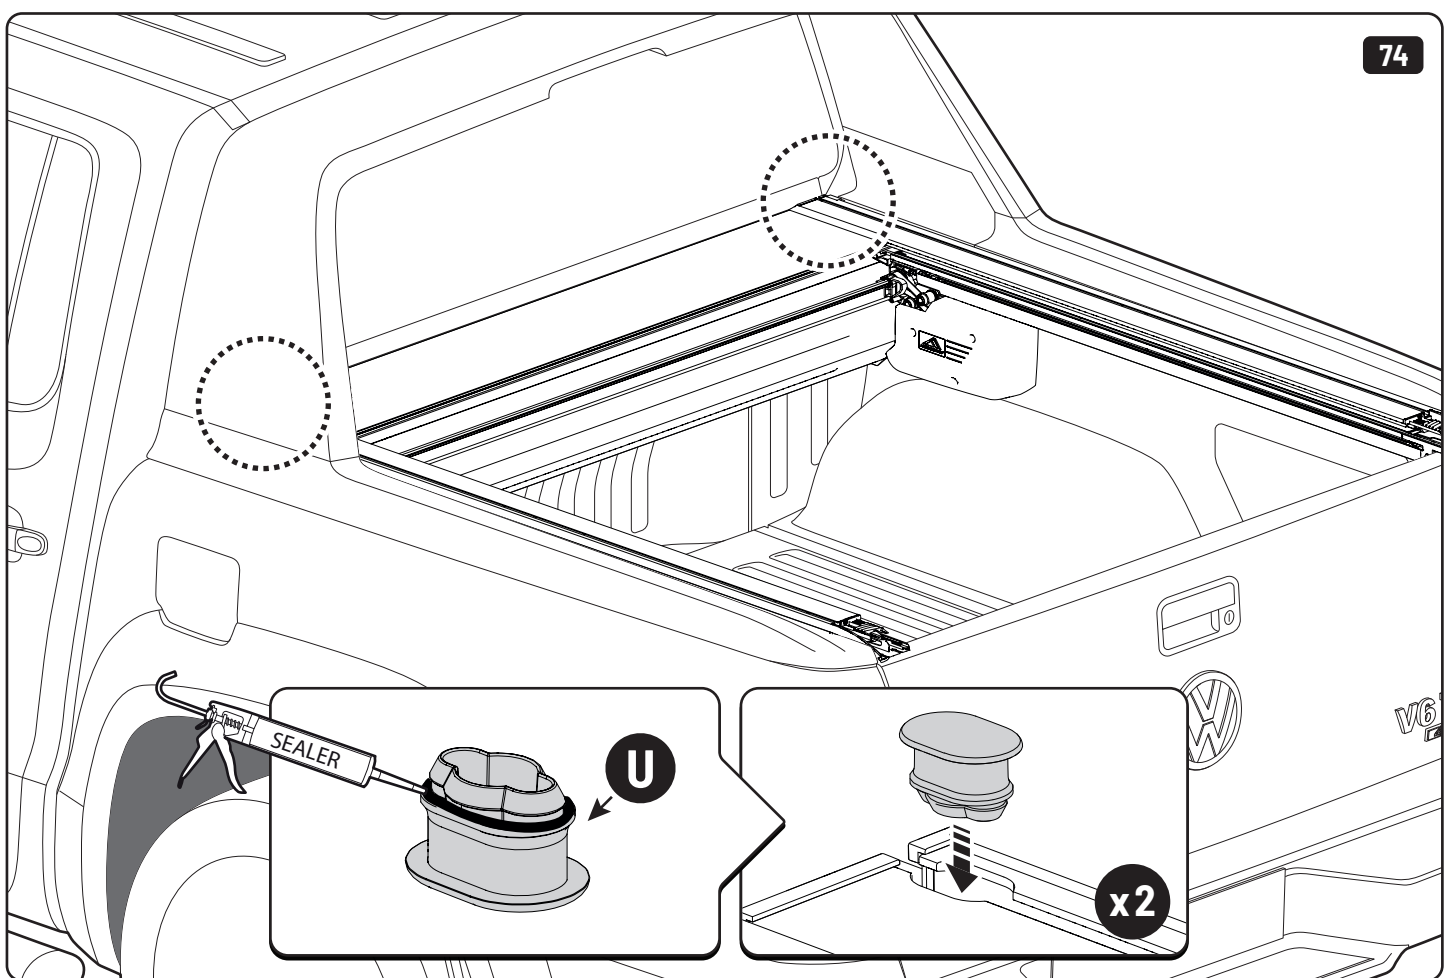
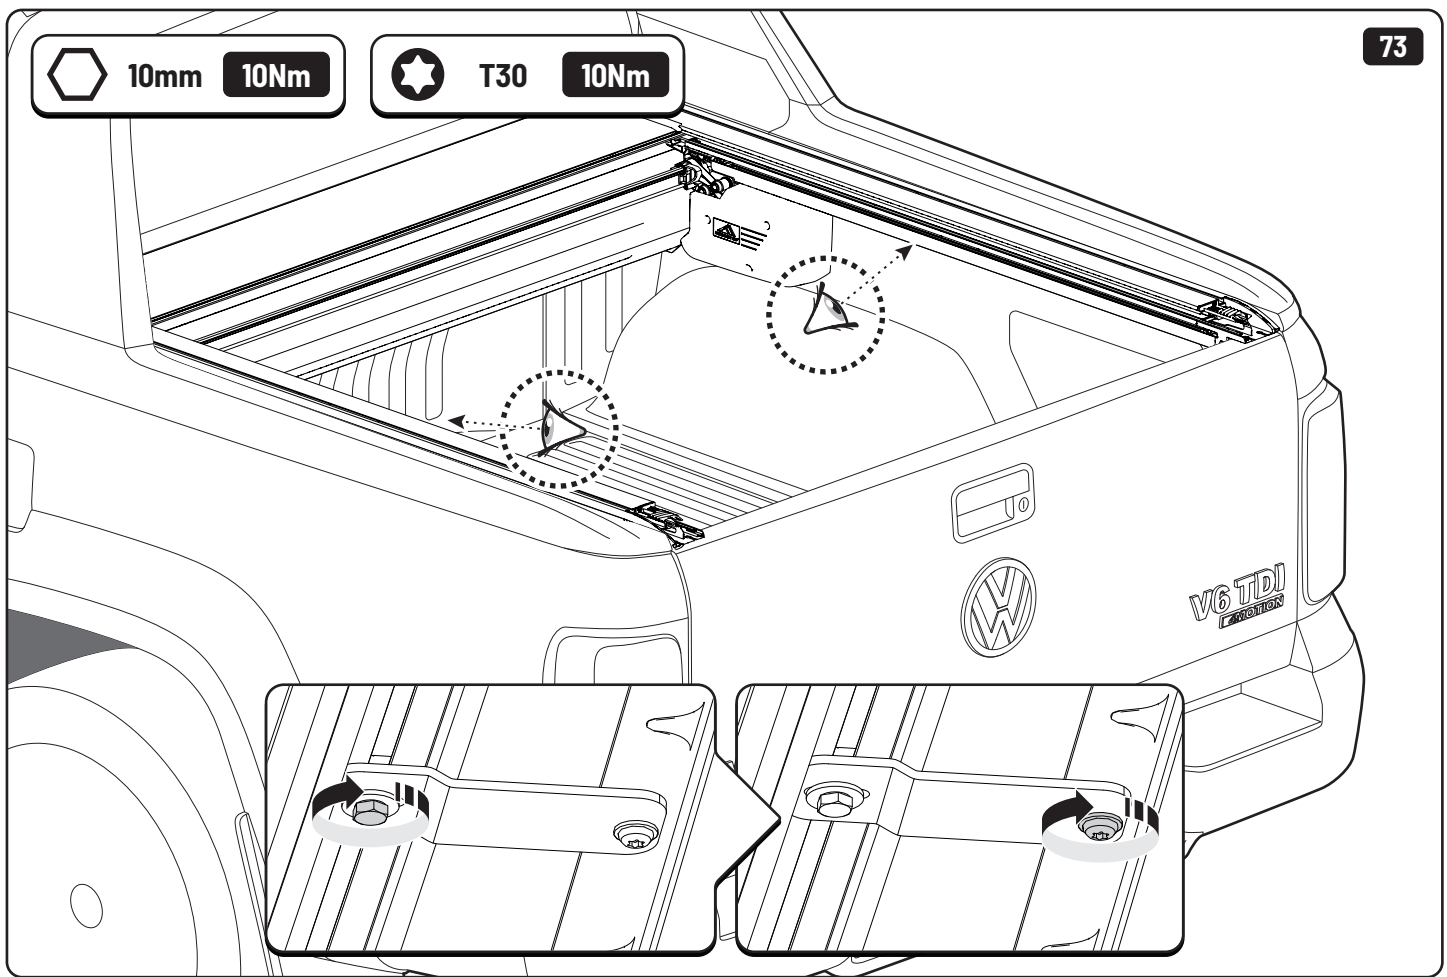


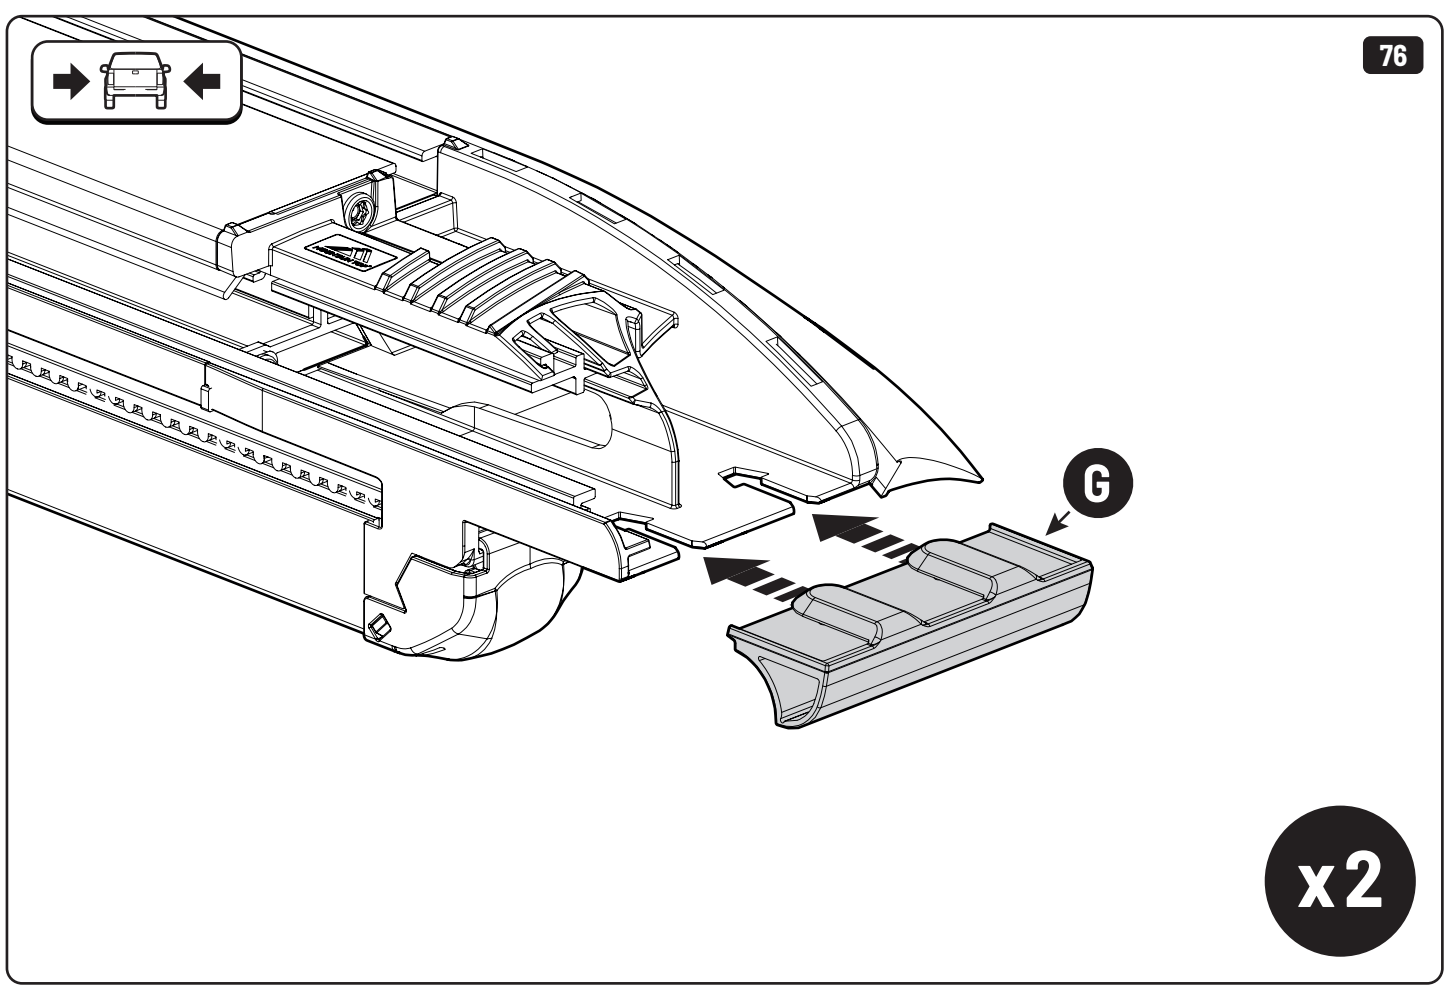
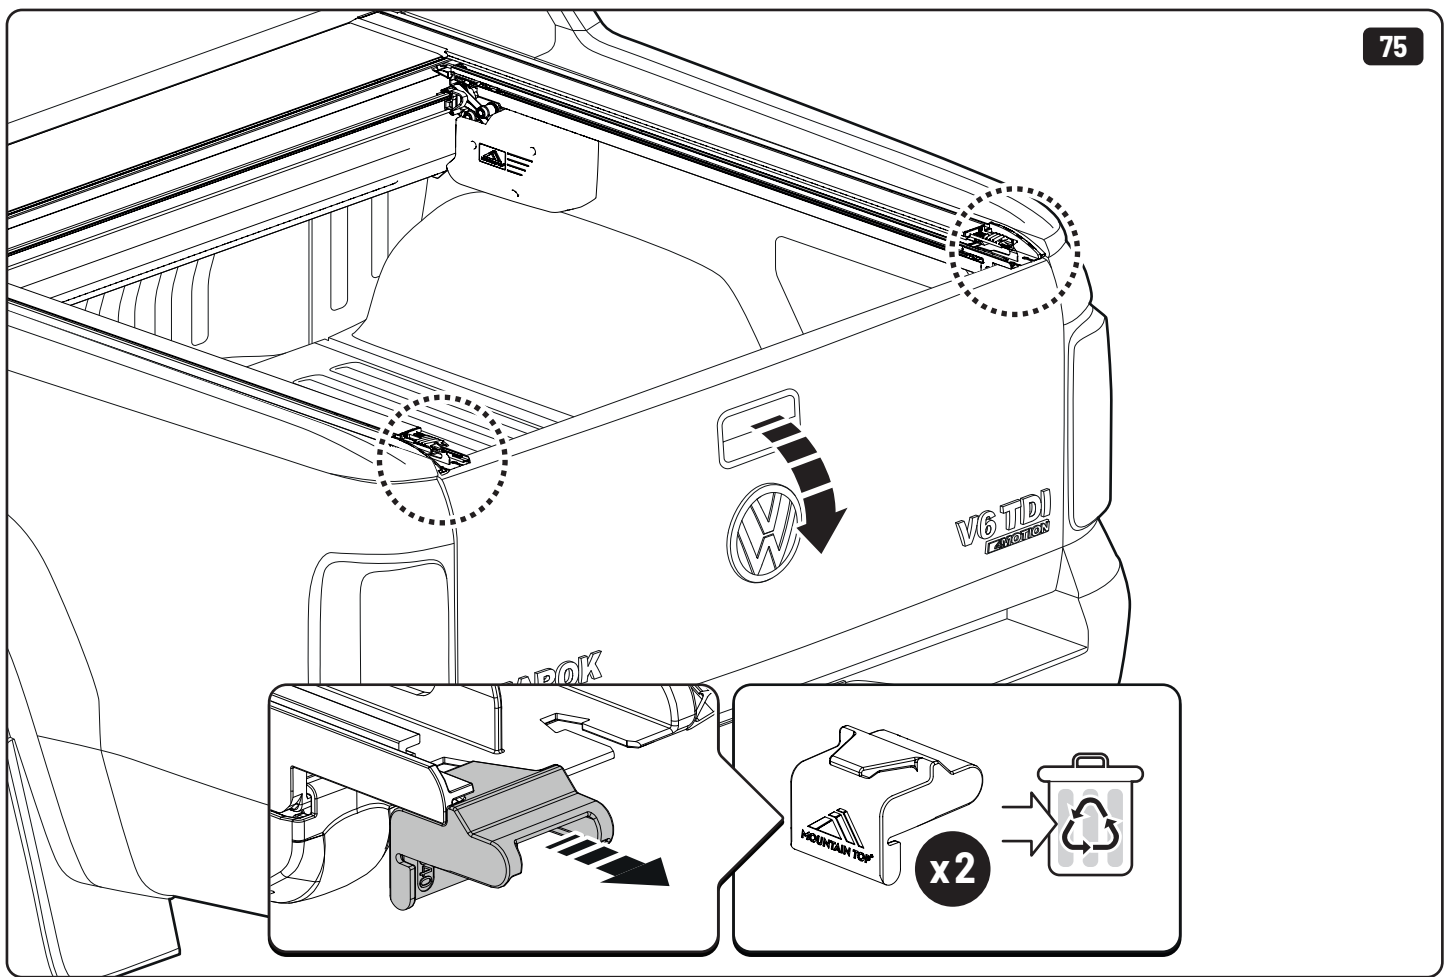


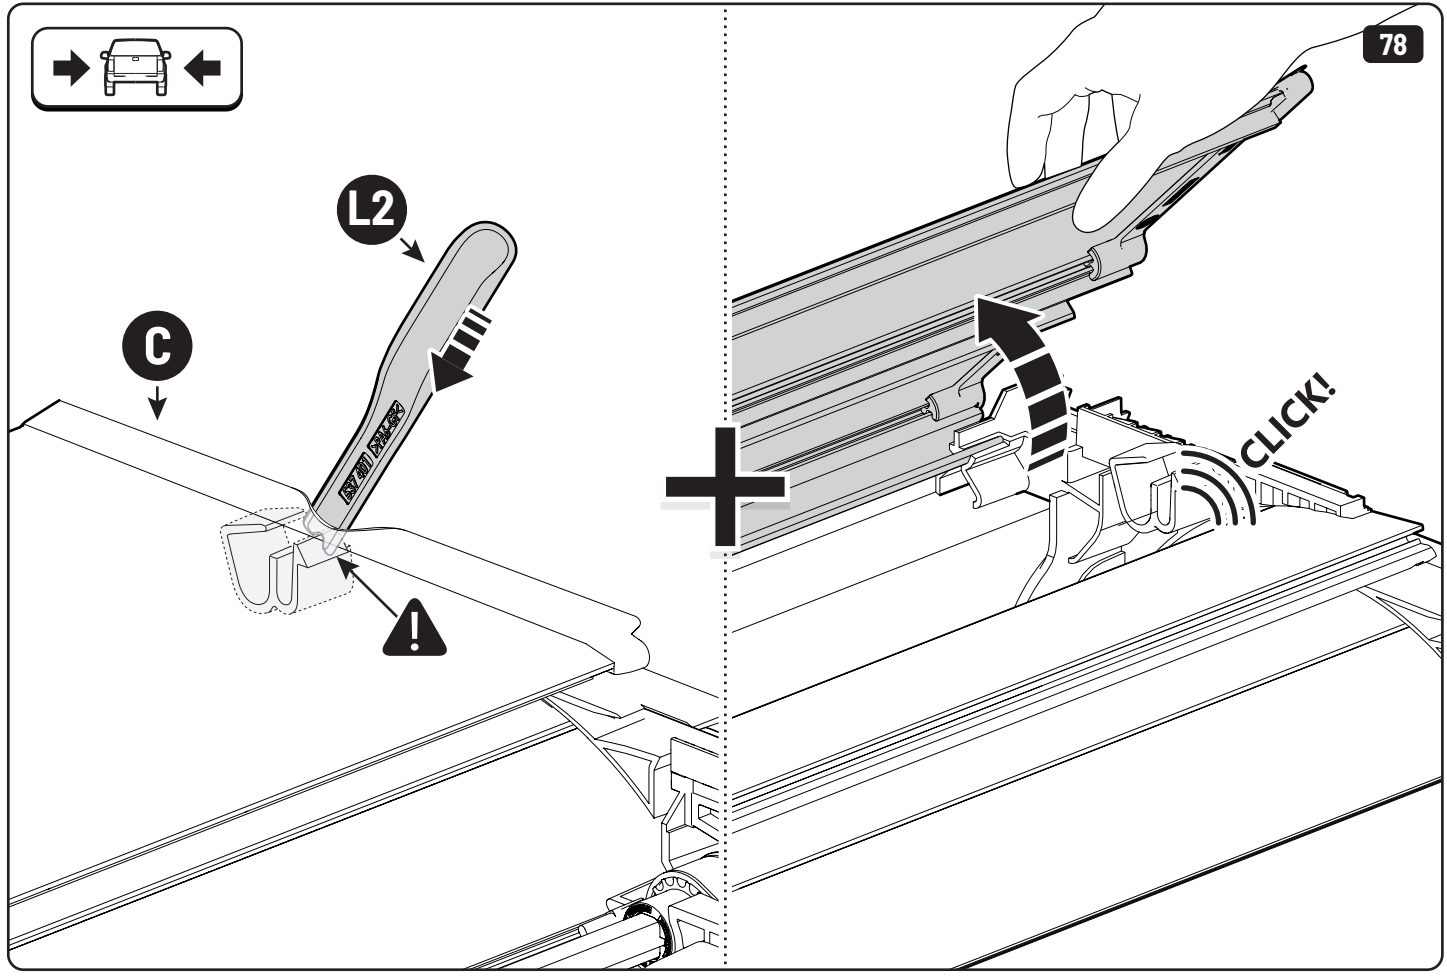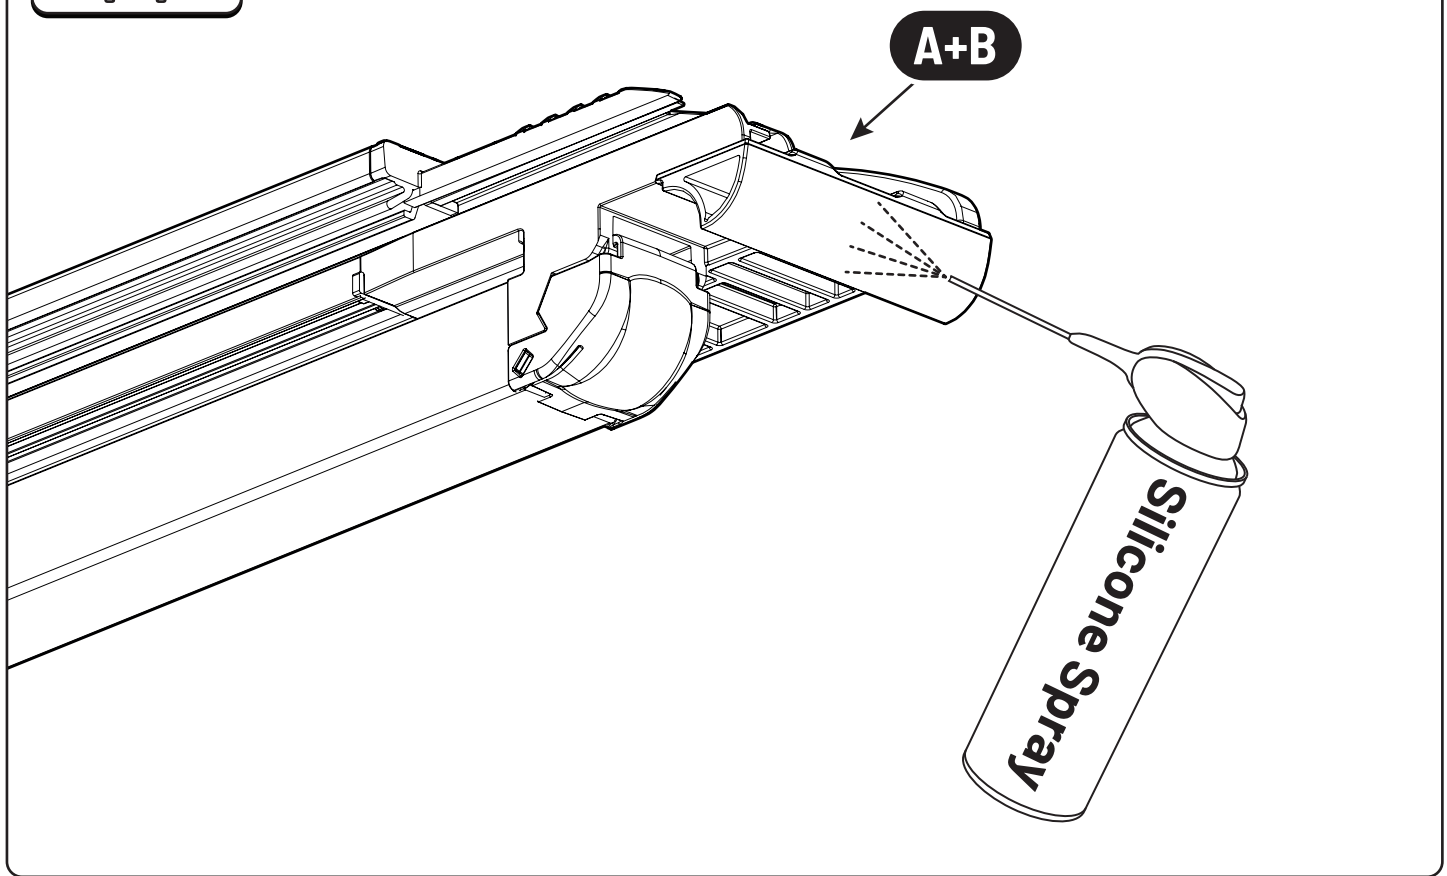



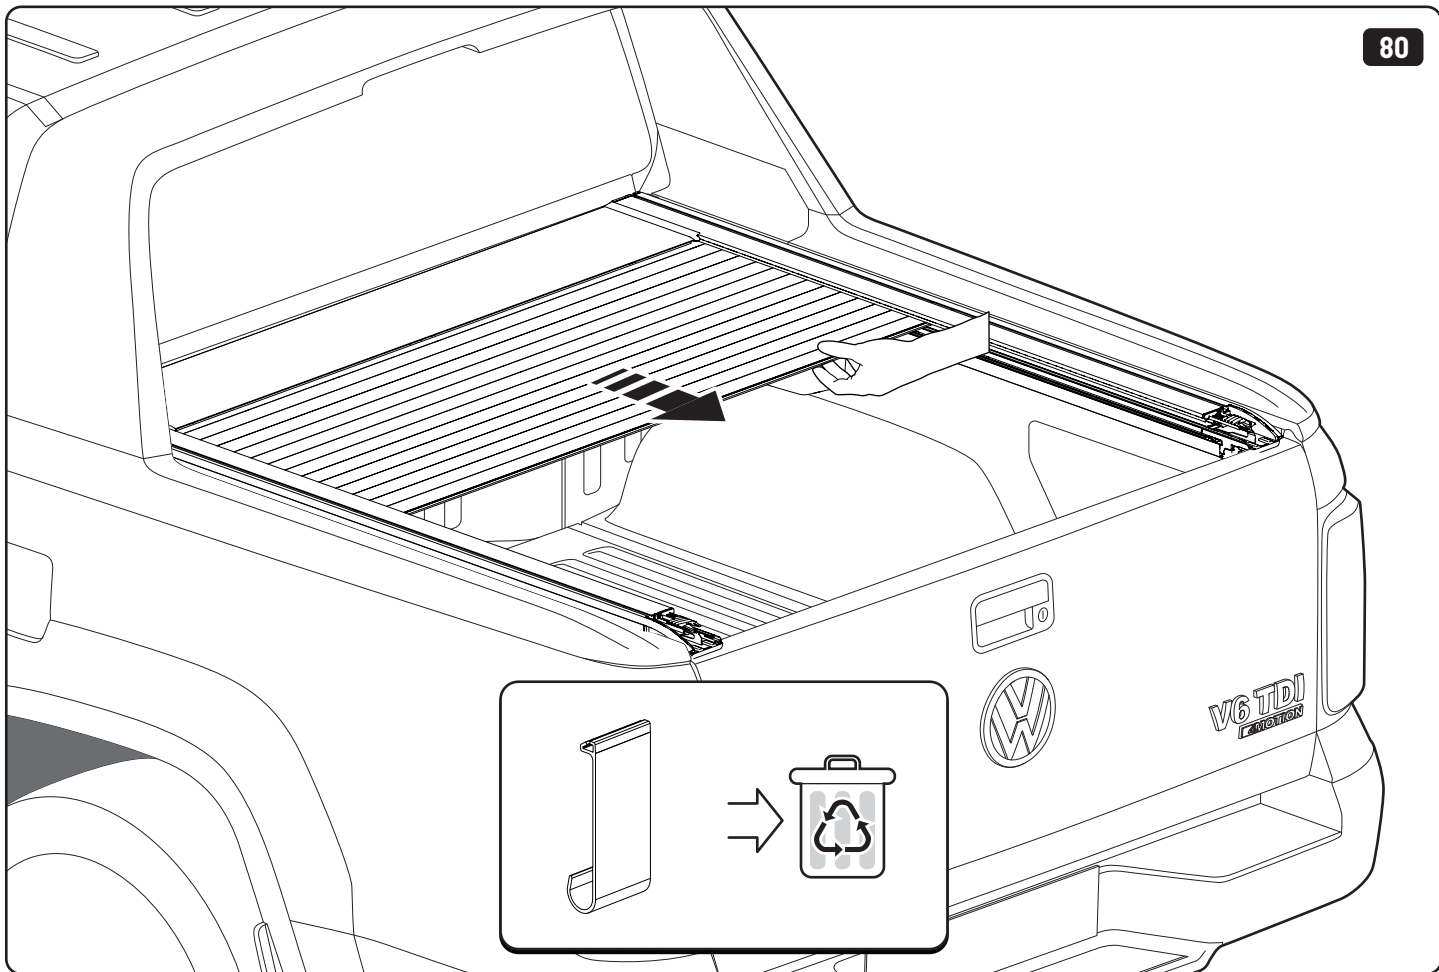
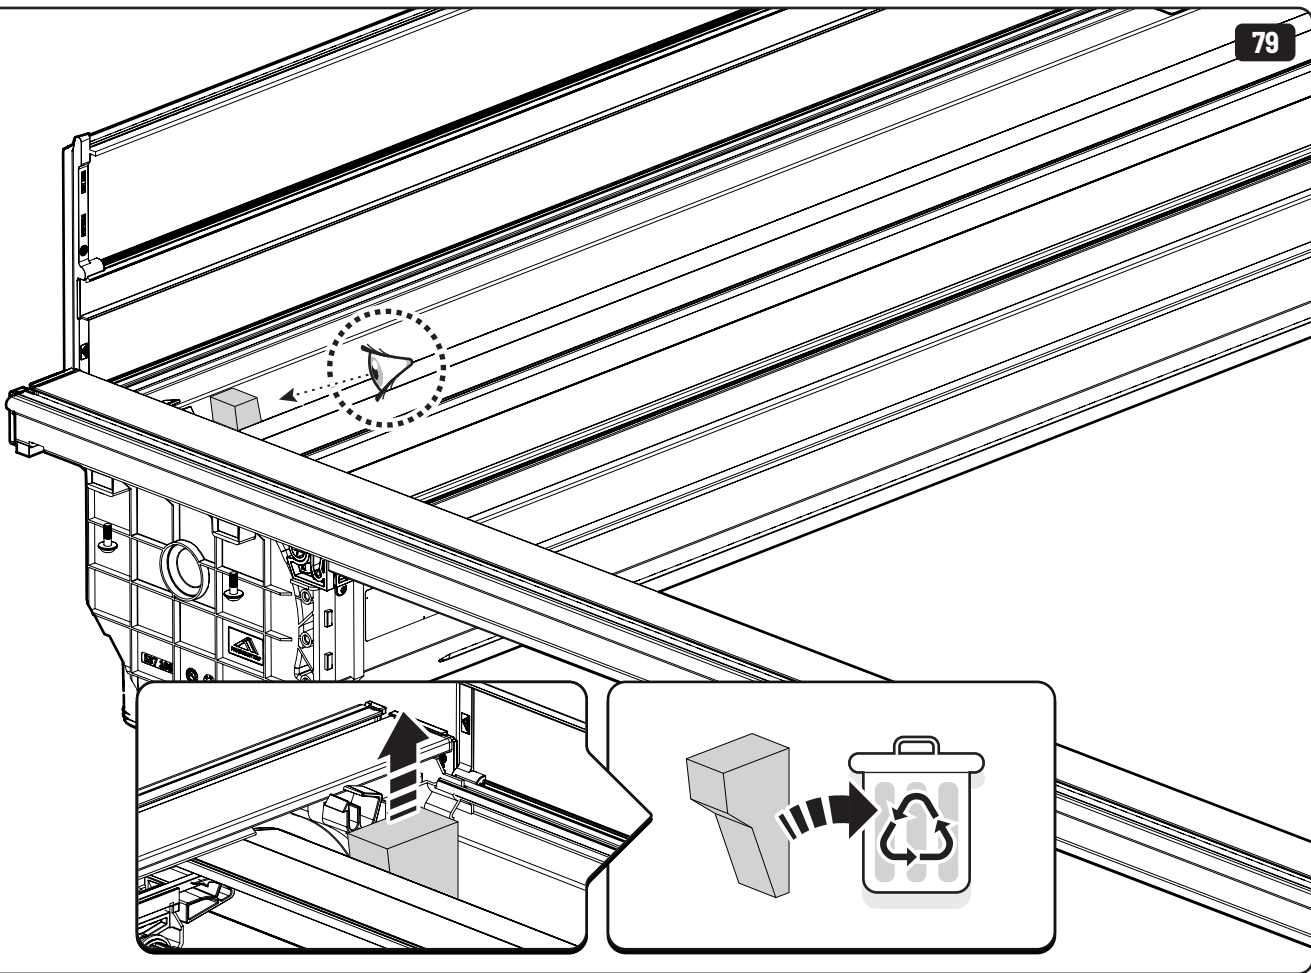


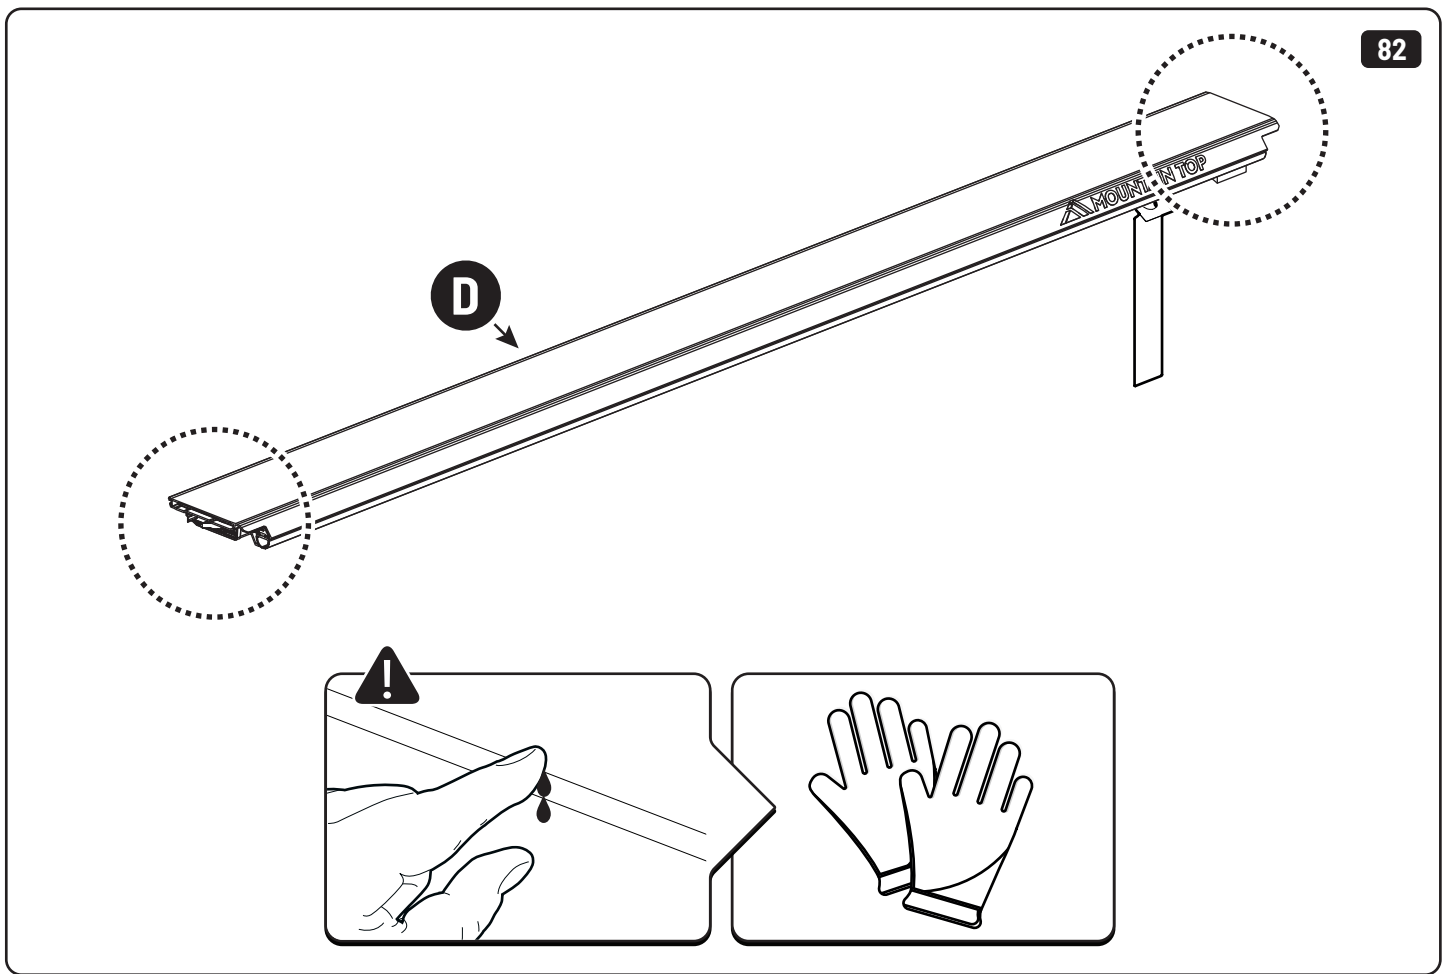
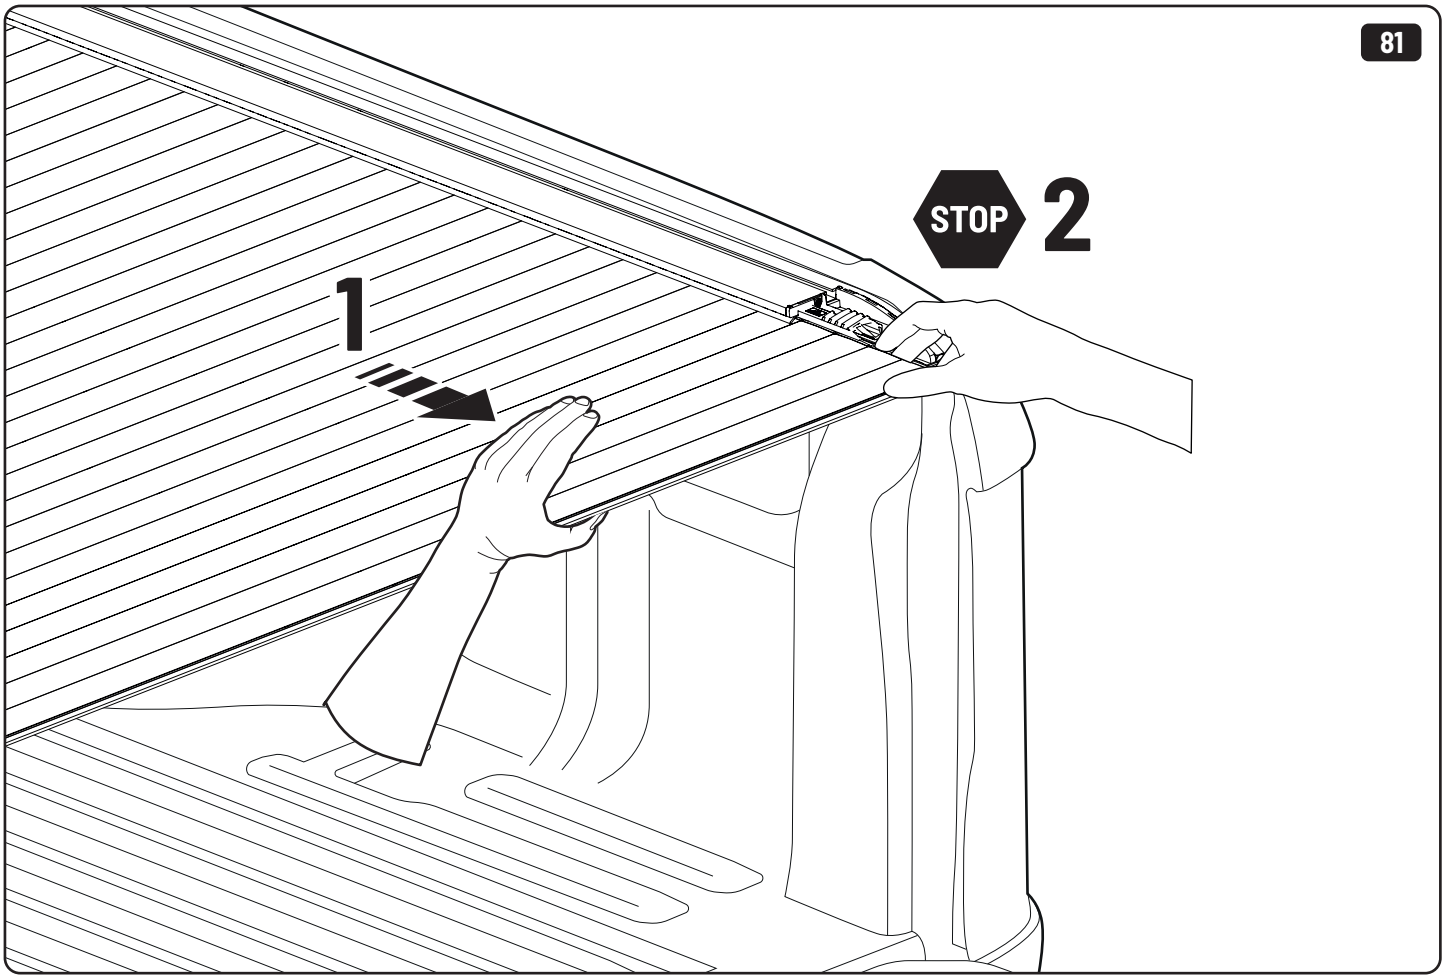



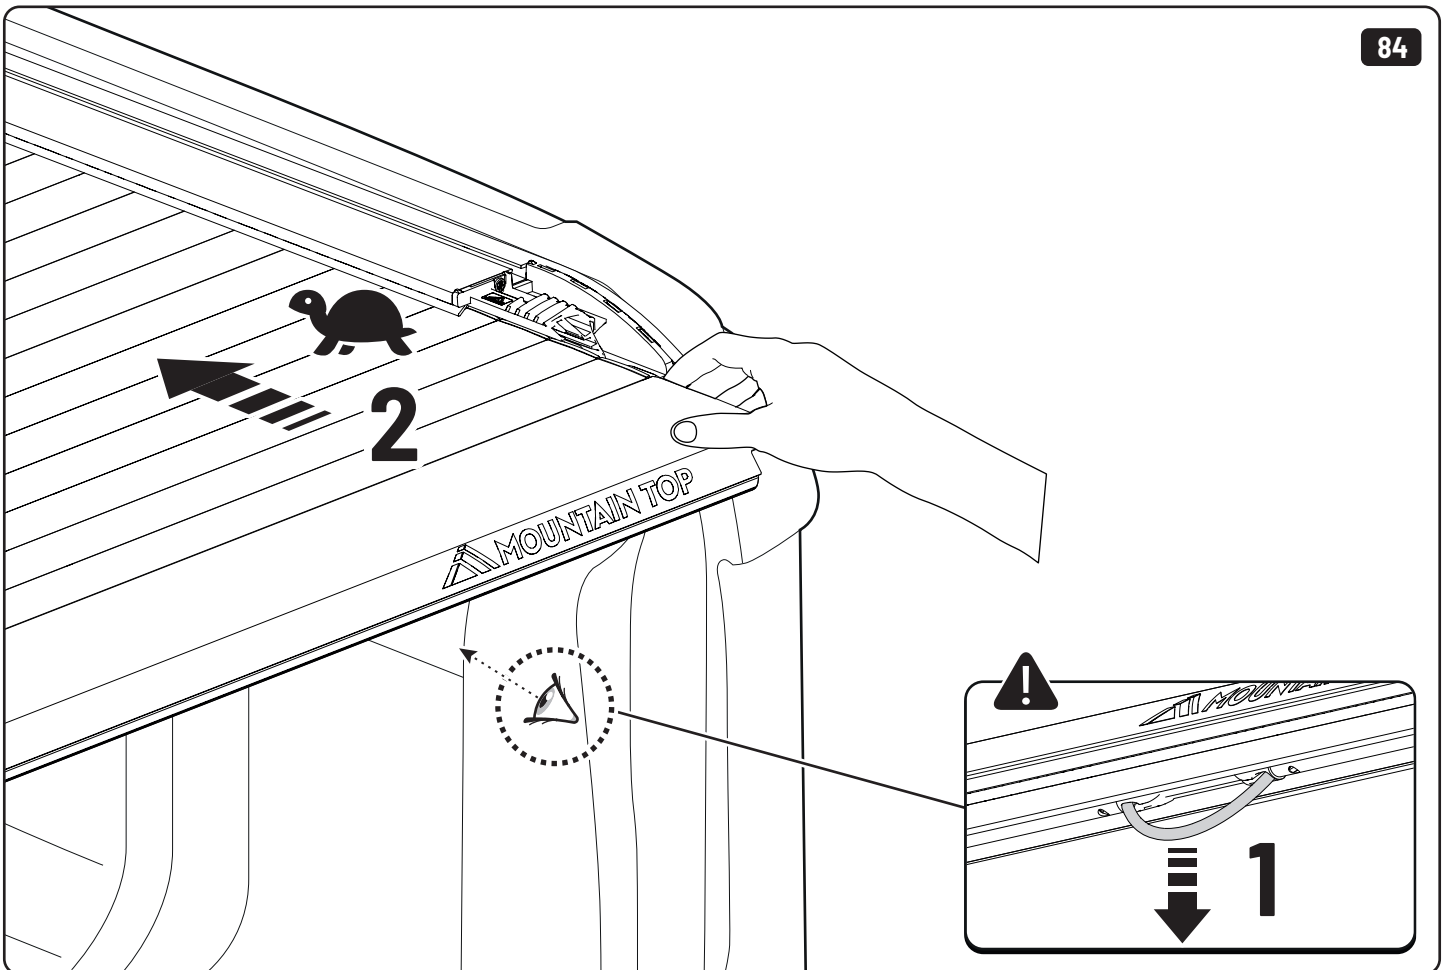
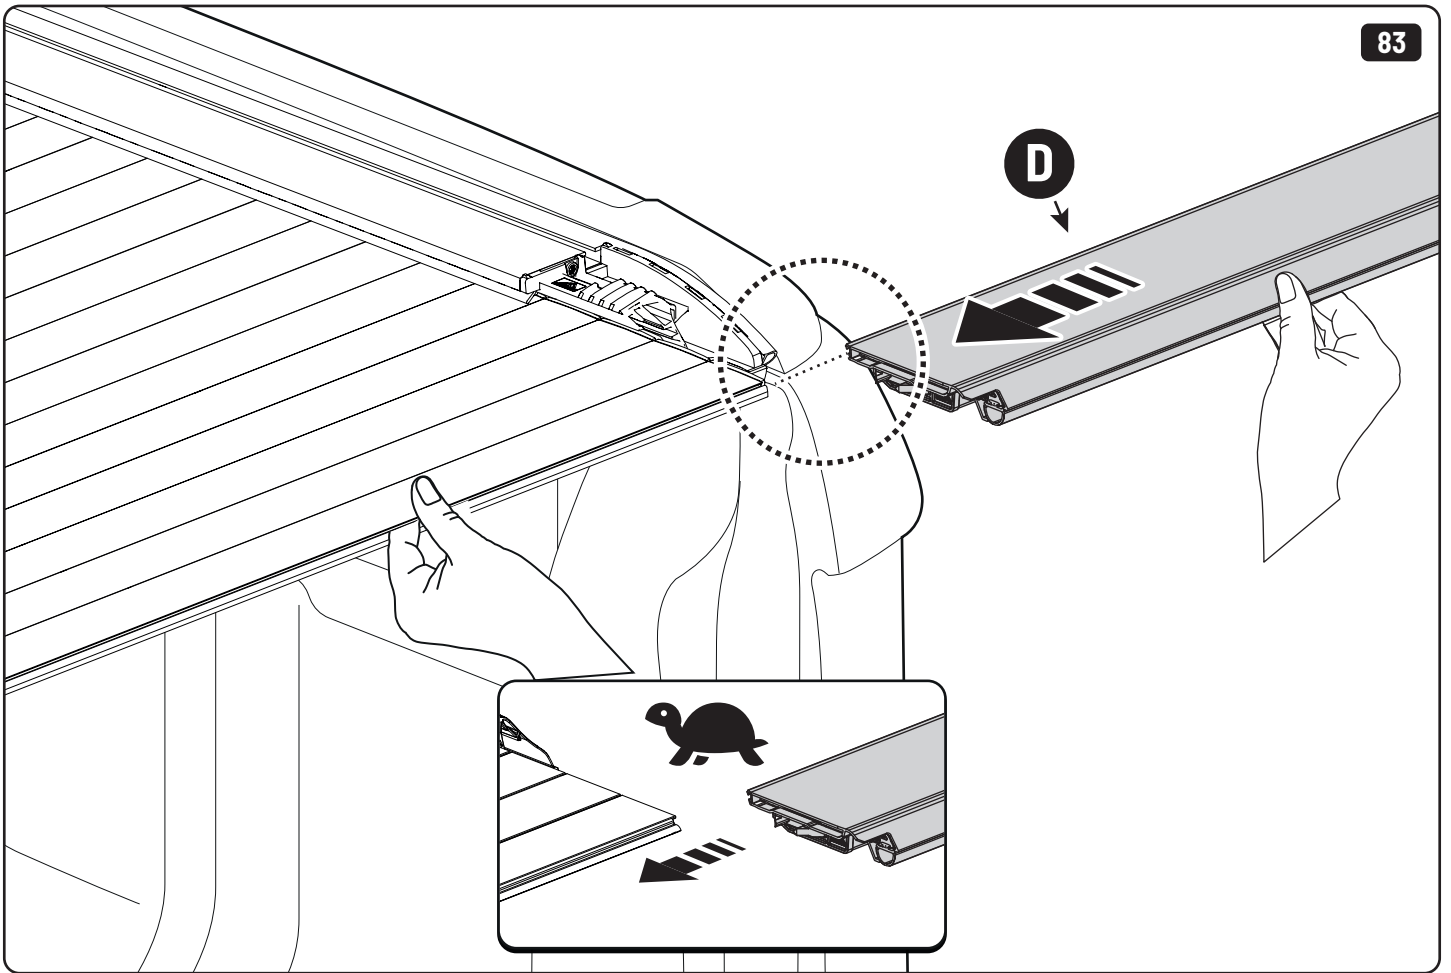


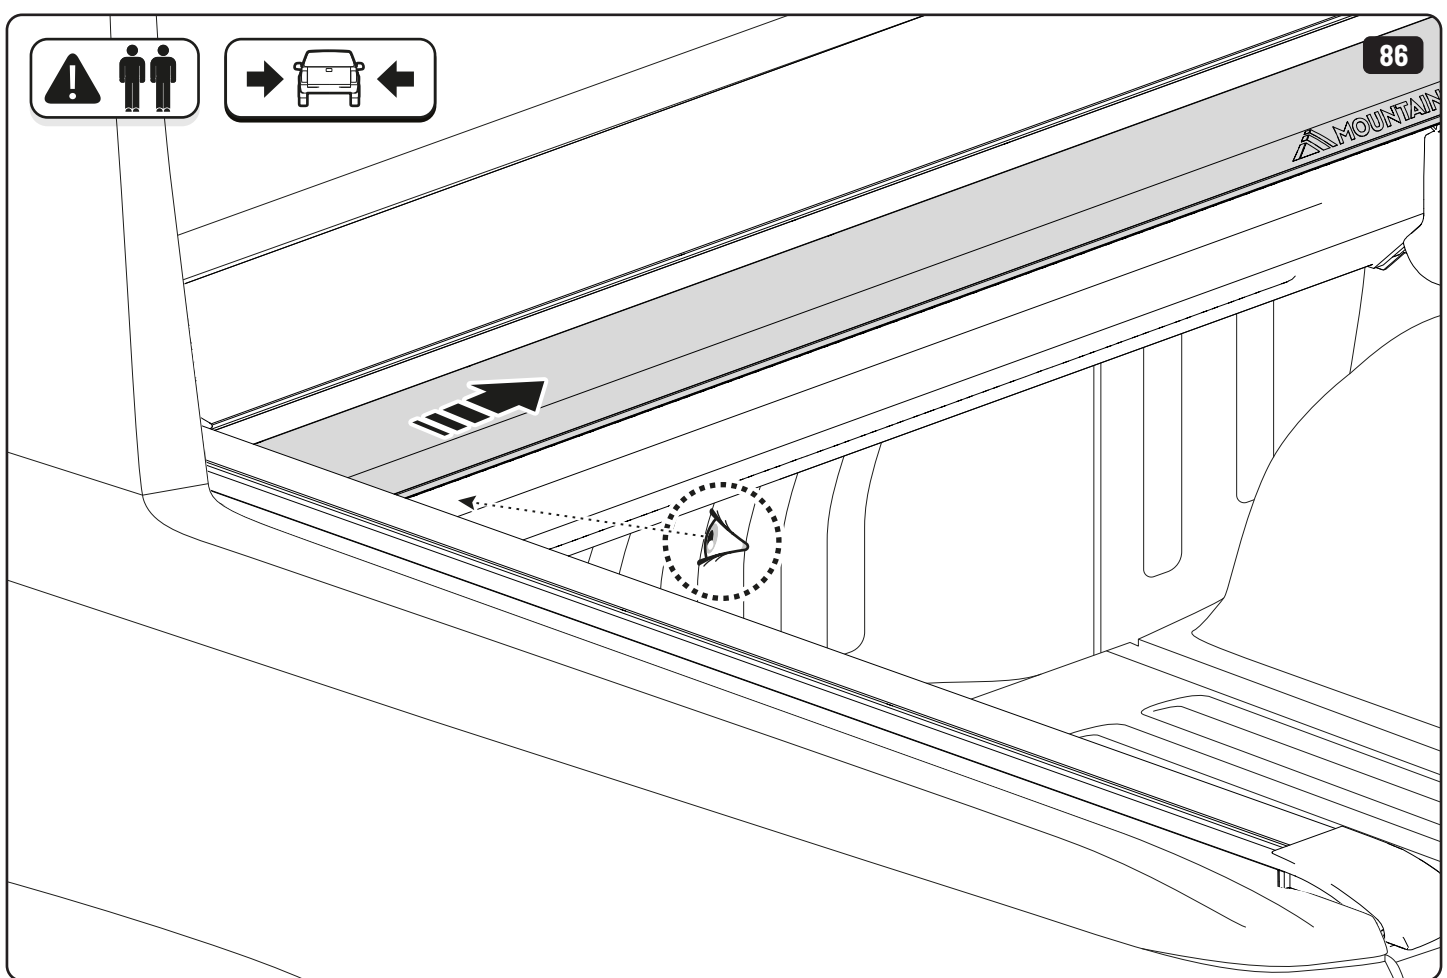
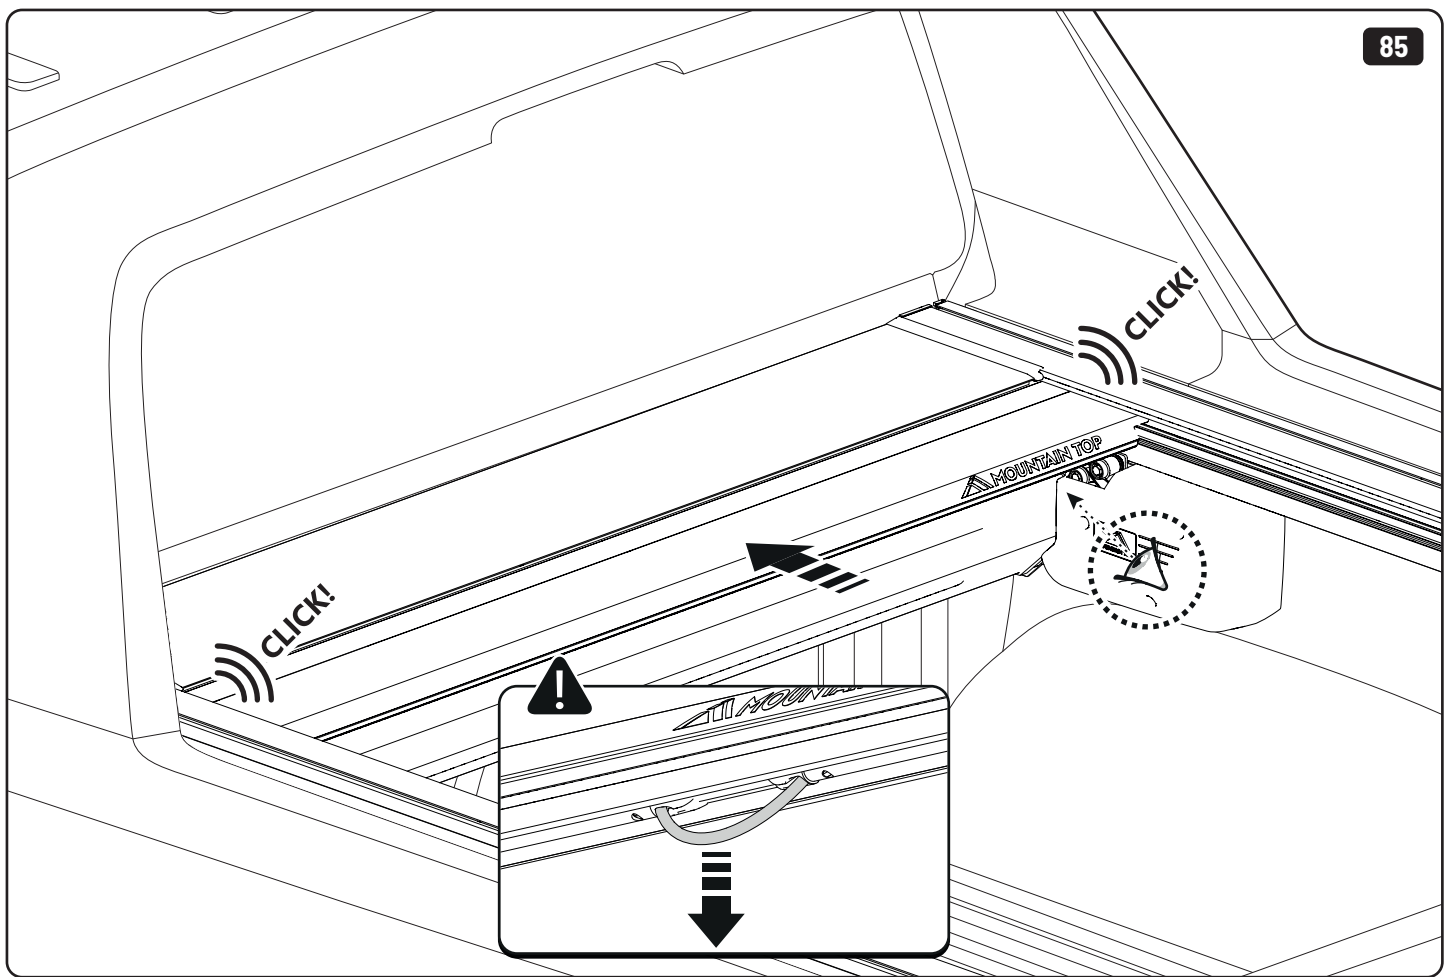


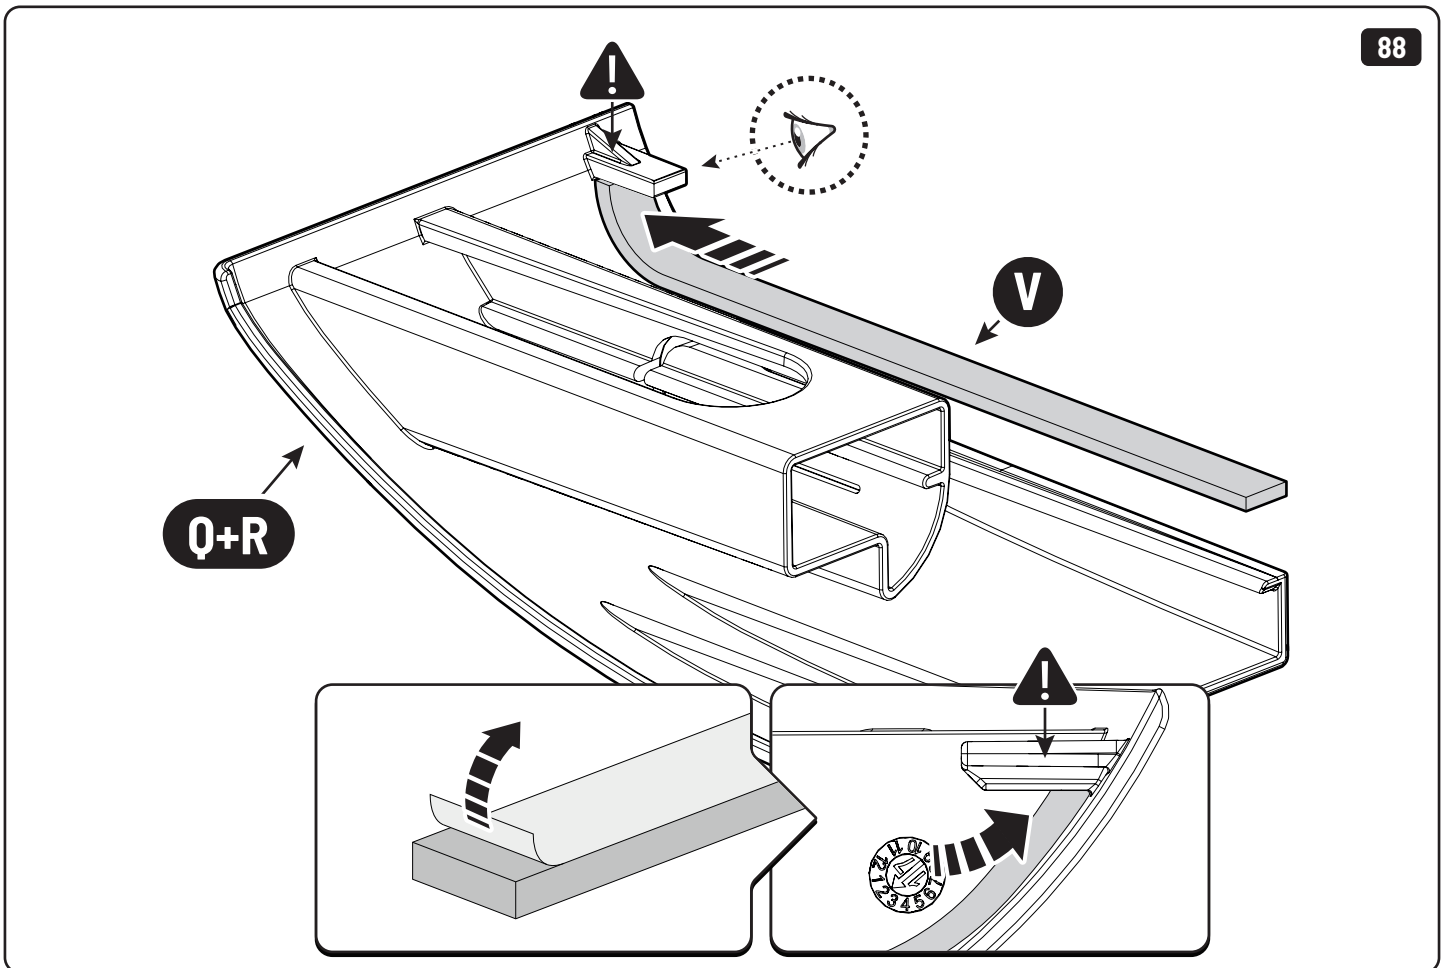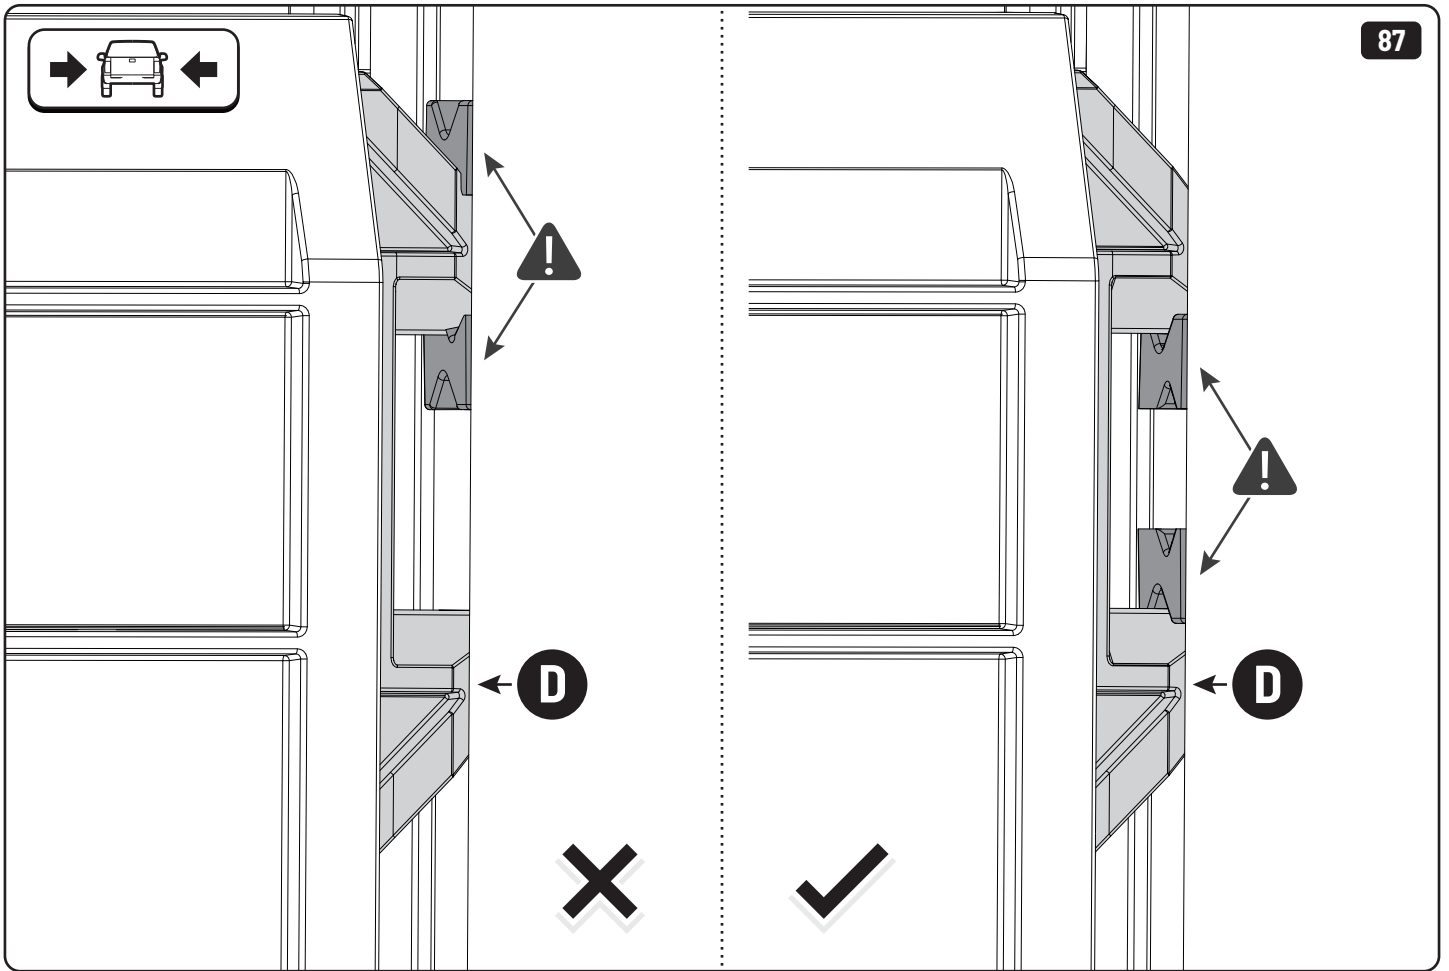

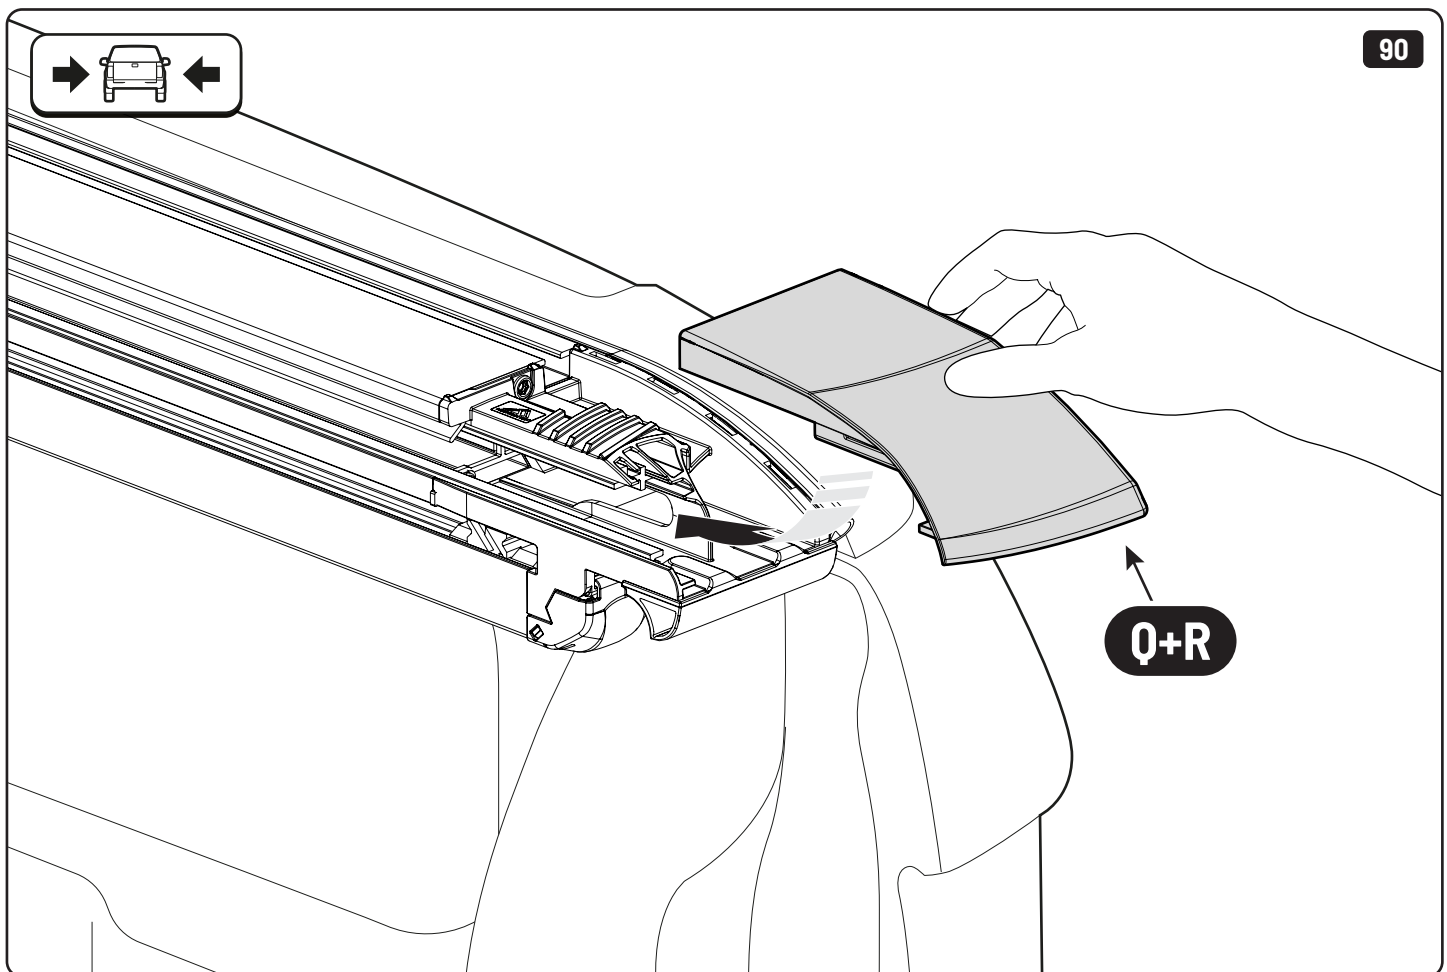
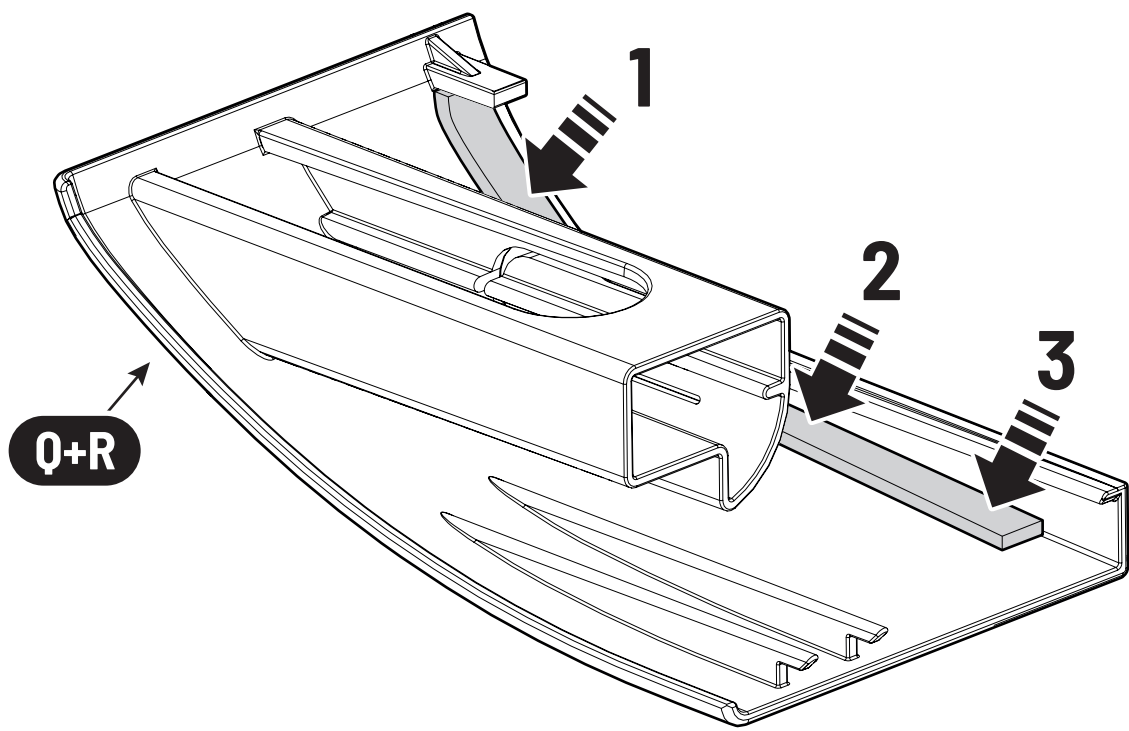


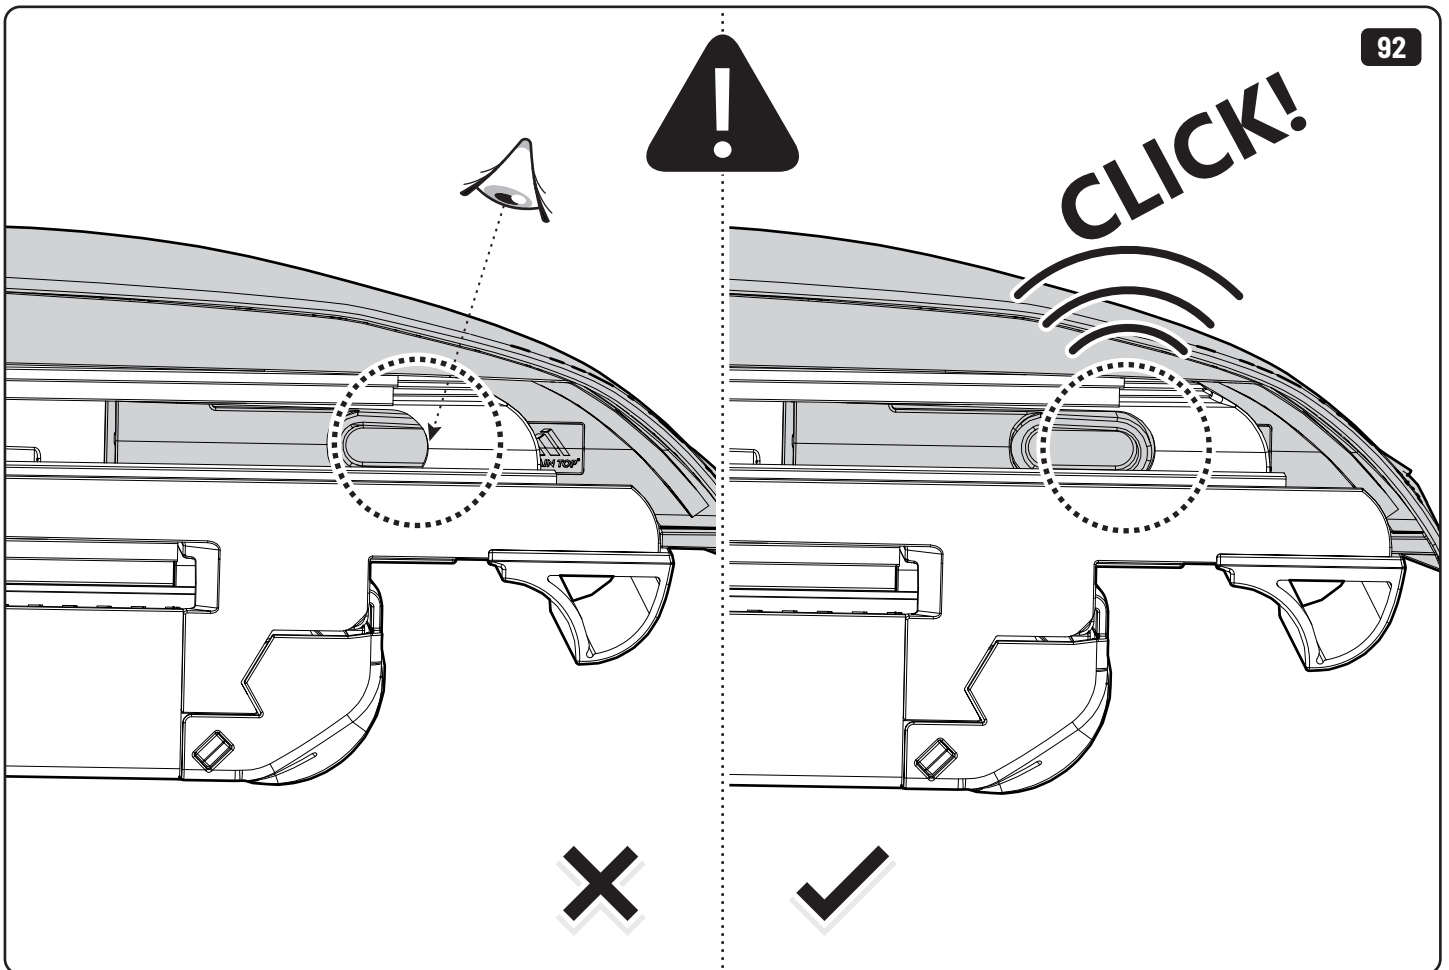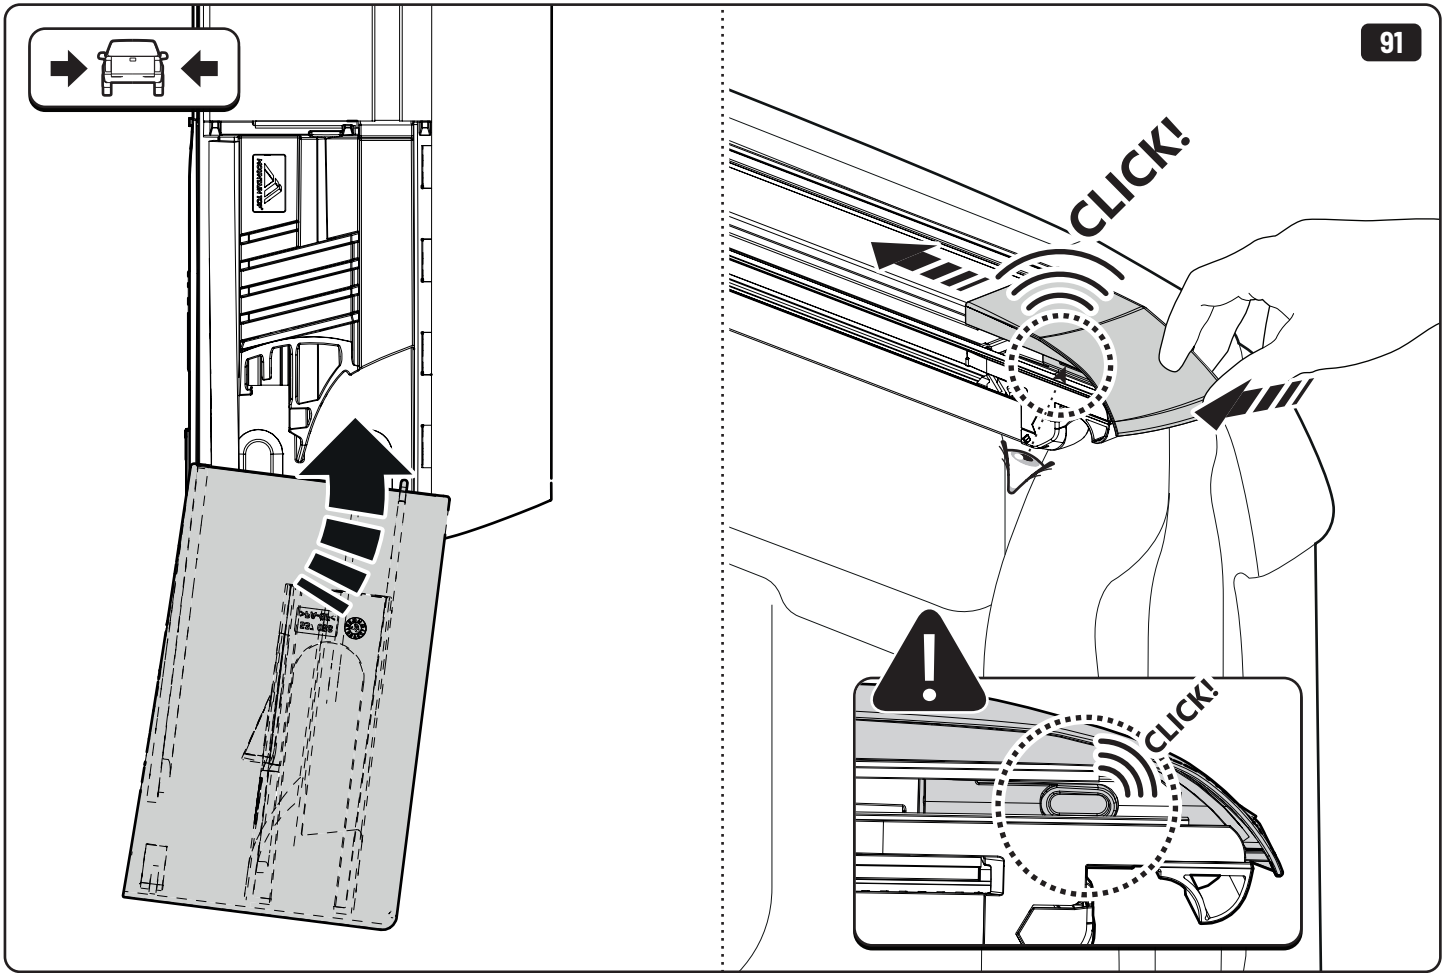

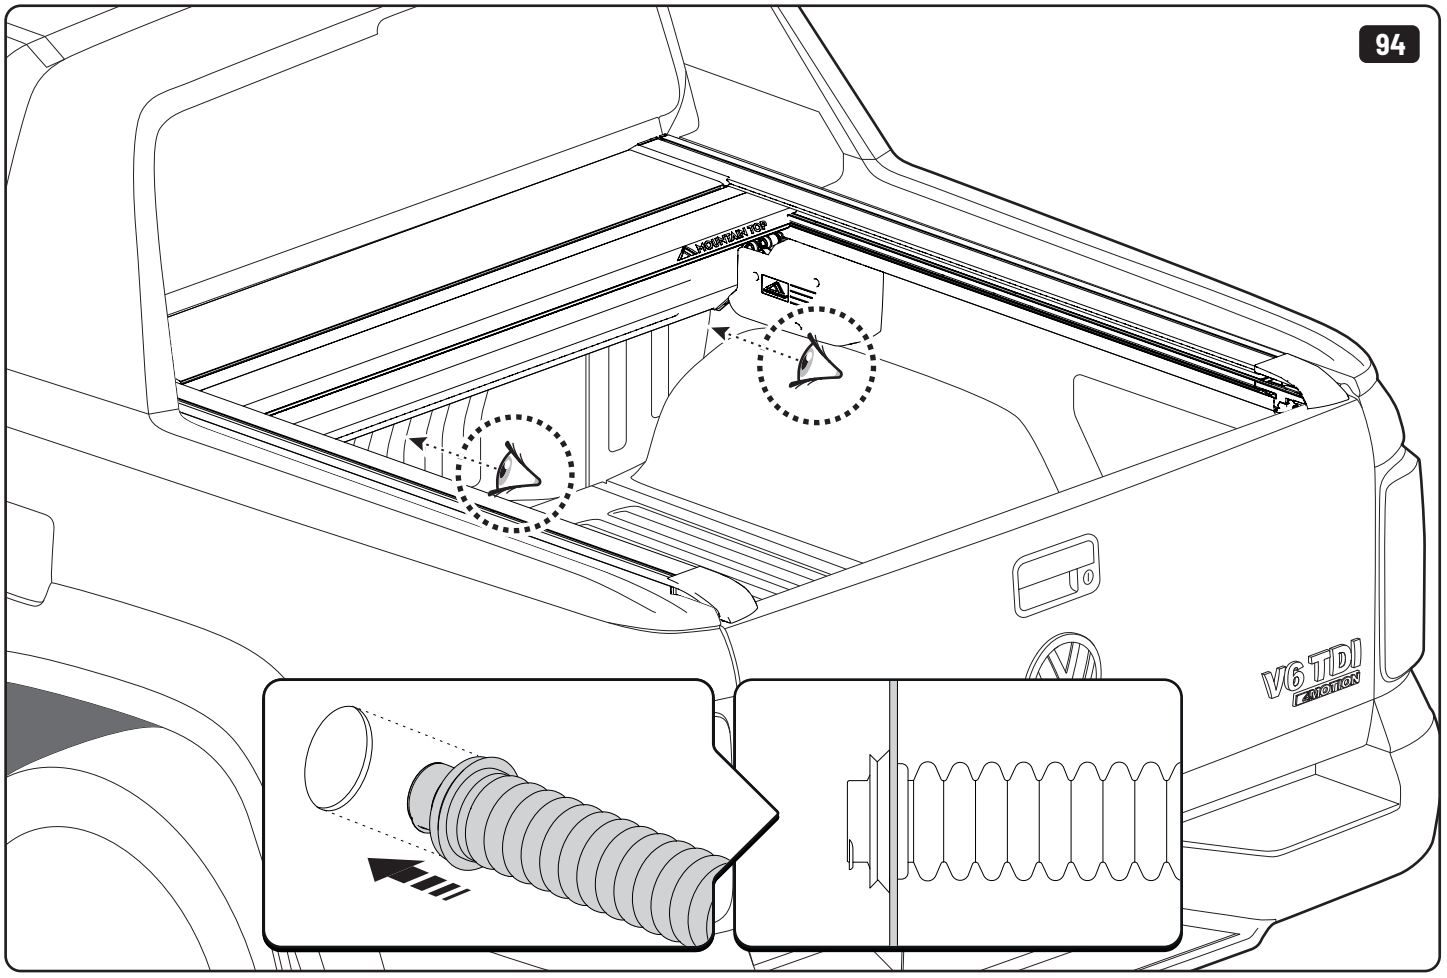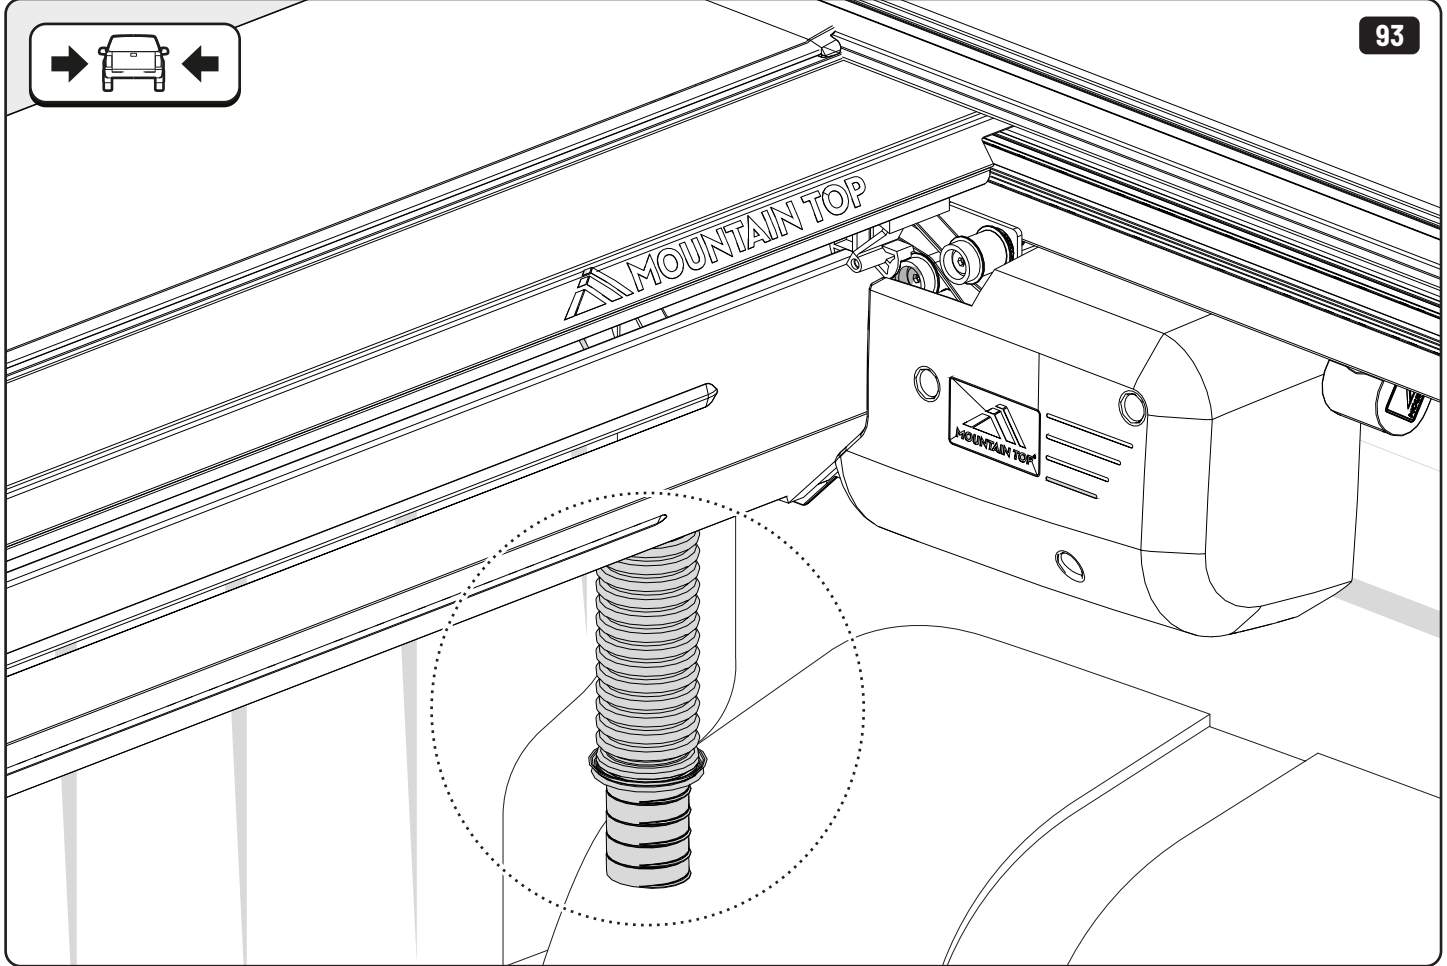


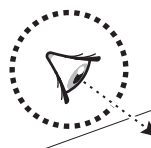



MOUNTAIN TOP

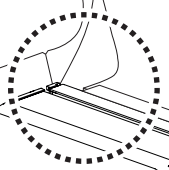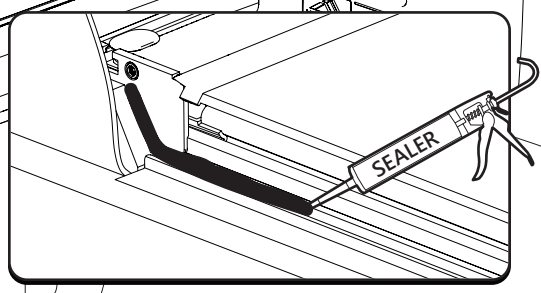


MOUNTAIN TOP

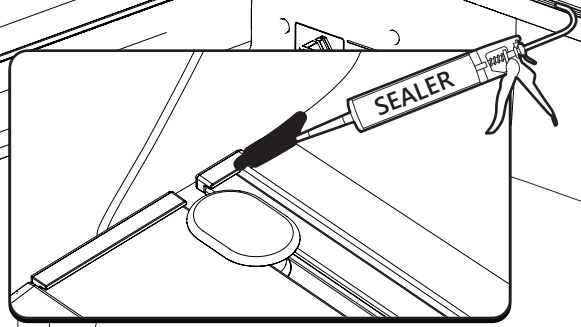


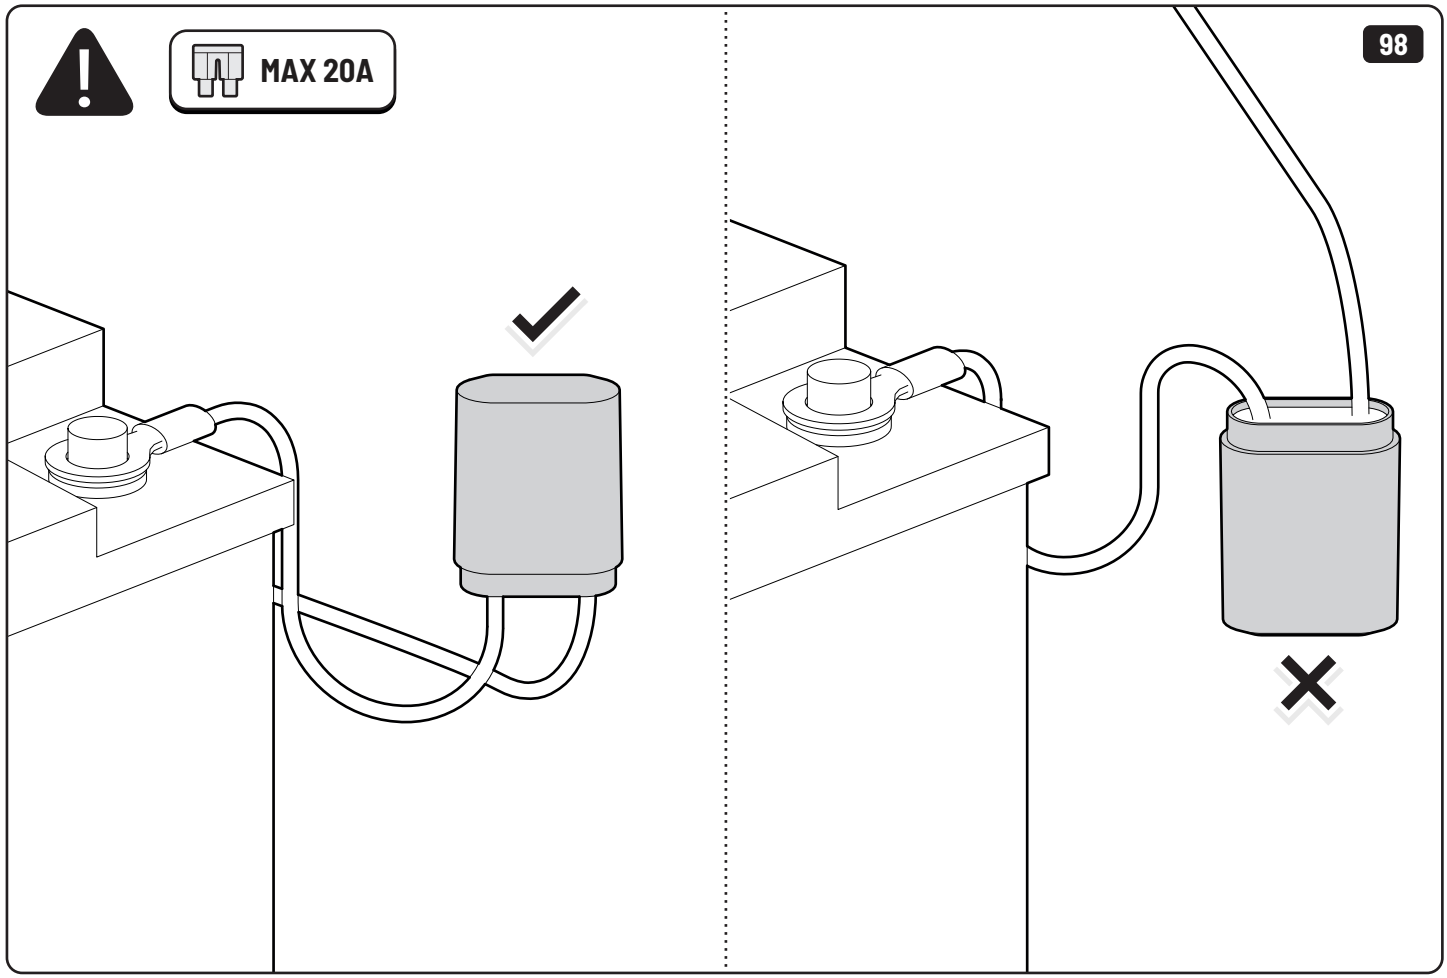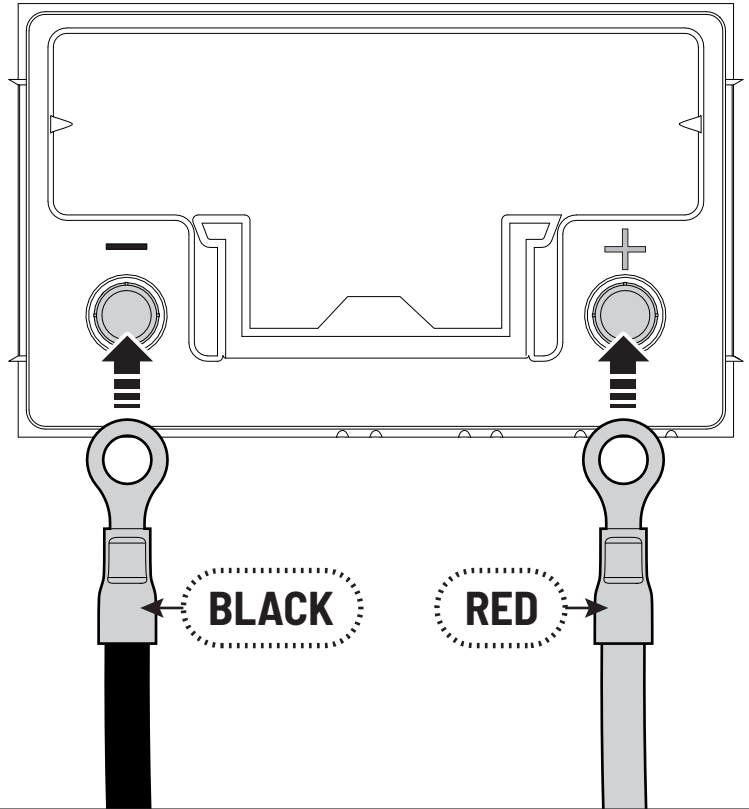


Reset

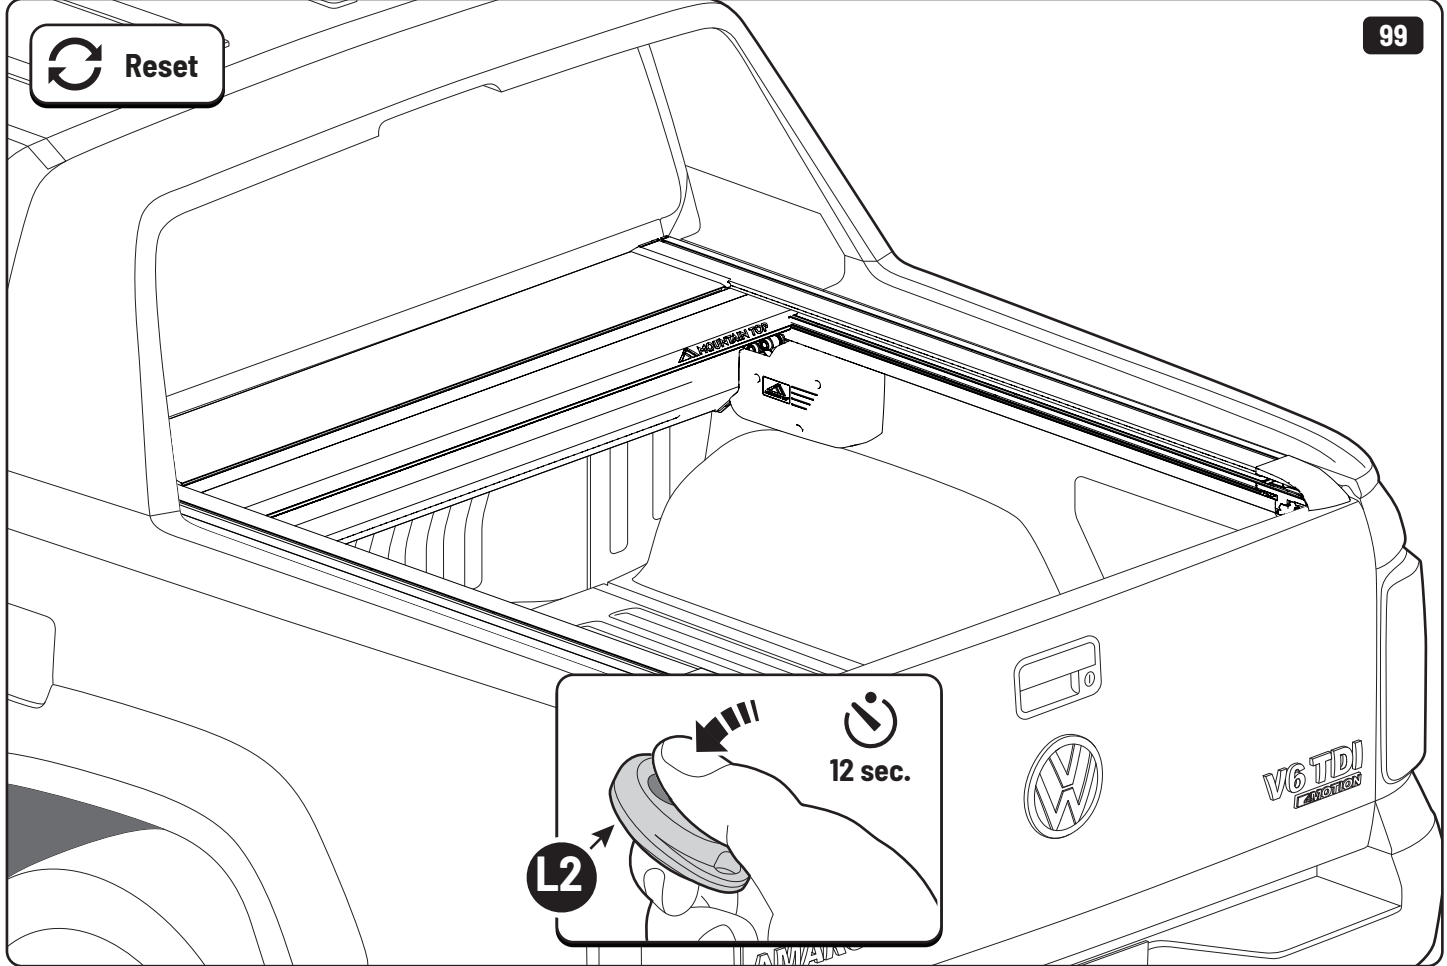

Reset

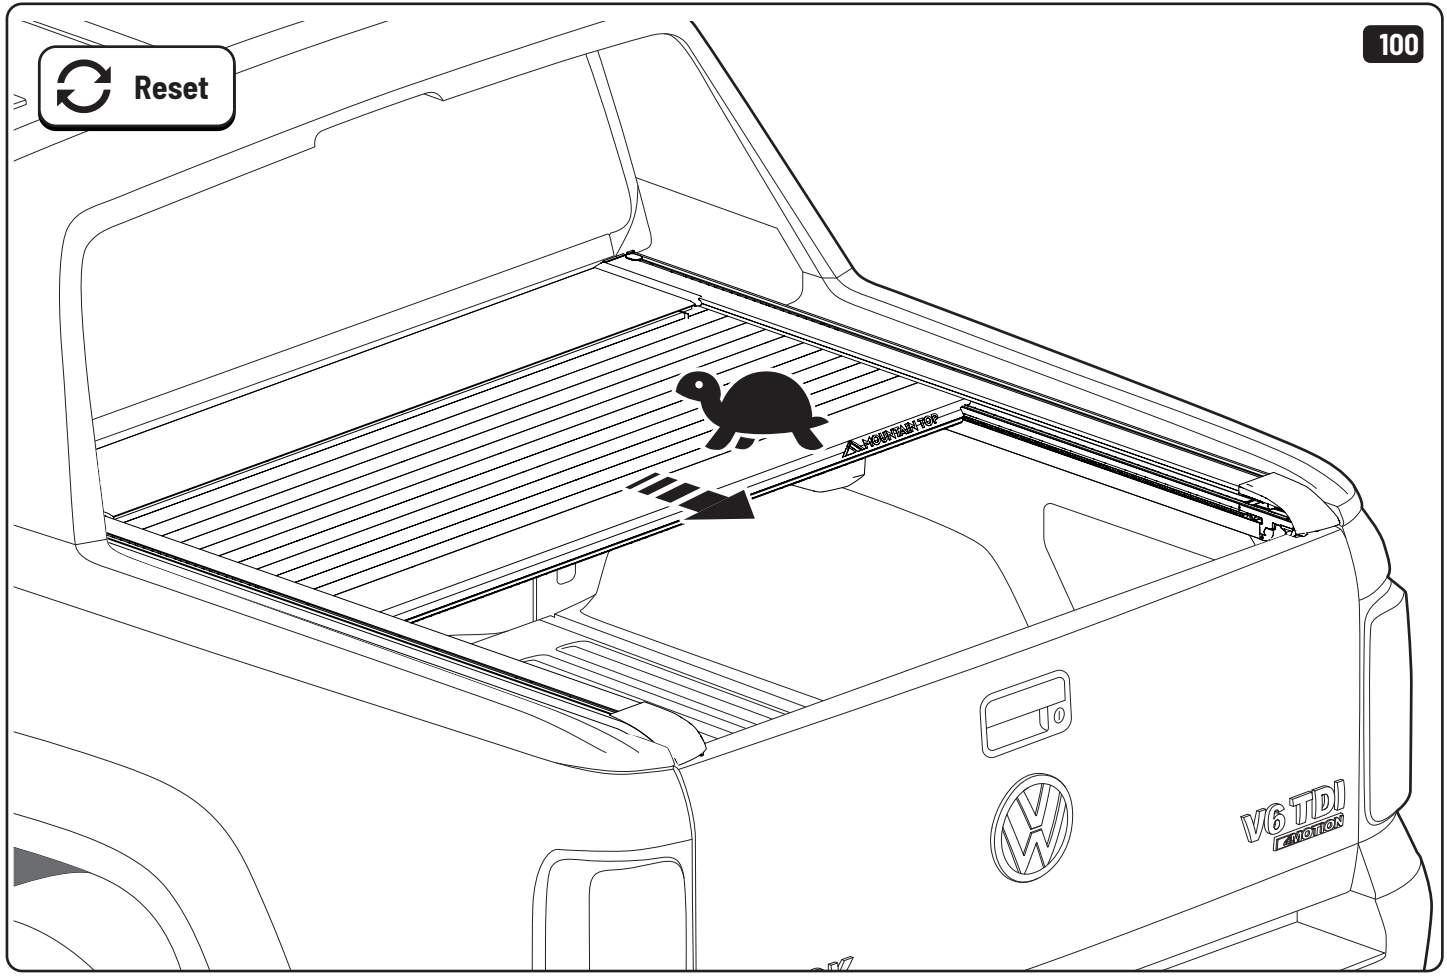

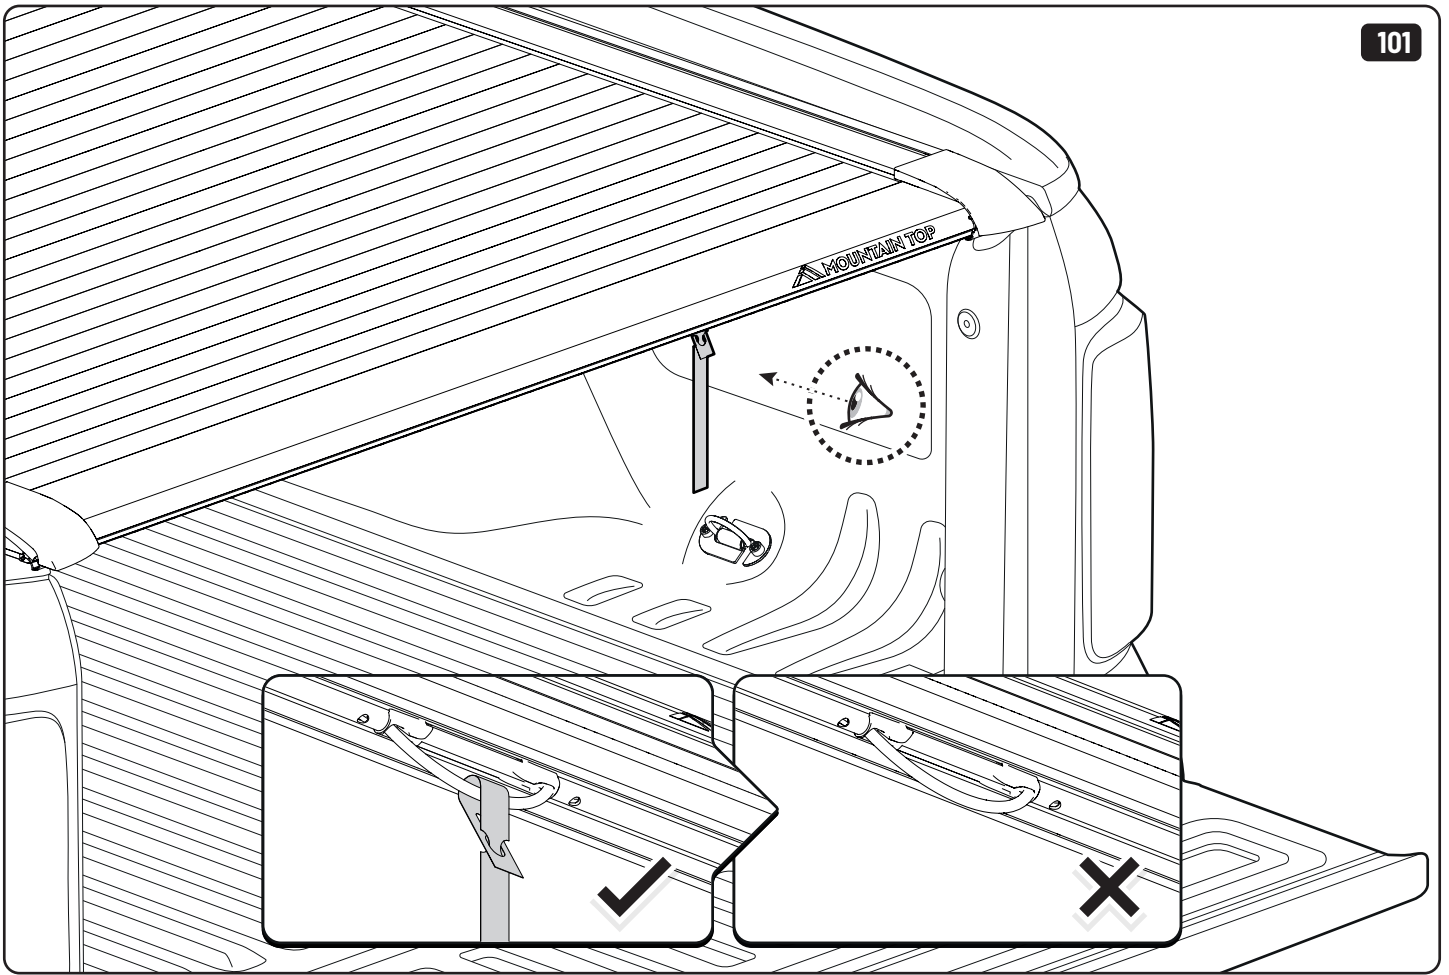



Steps	Page	Done by
Mounting rubber cross	7	
Mounting gliding rail in canister	13-14	
Holes for drain	27-29	
Width + Cross measurement	40-41	
Tightening bolts	42-43	
Mounting drain	52-53	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab type (s)	Installation time	Weight
EVOe VW80 HB01	Aventura / 2017 ->	Double Cab	1 hour (s)	41 kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni di montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare