



MOUNTAIN TOP[®] EV0m ROLL COVER

Installation manual

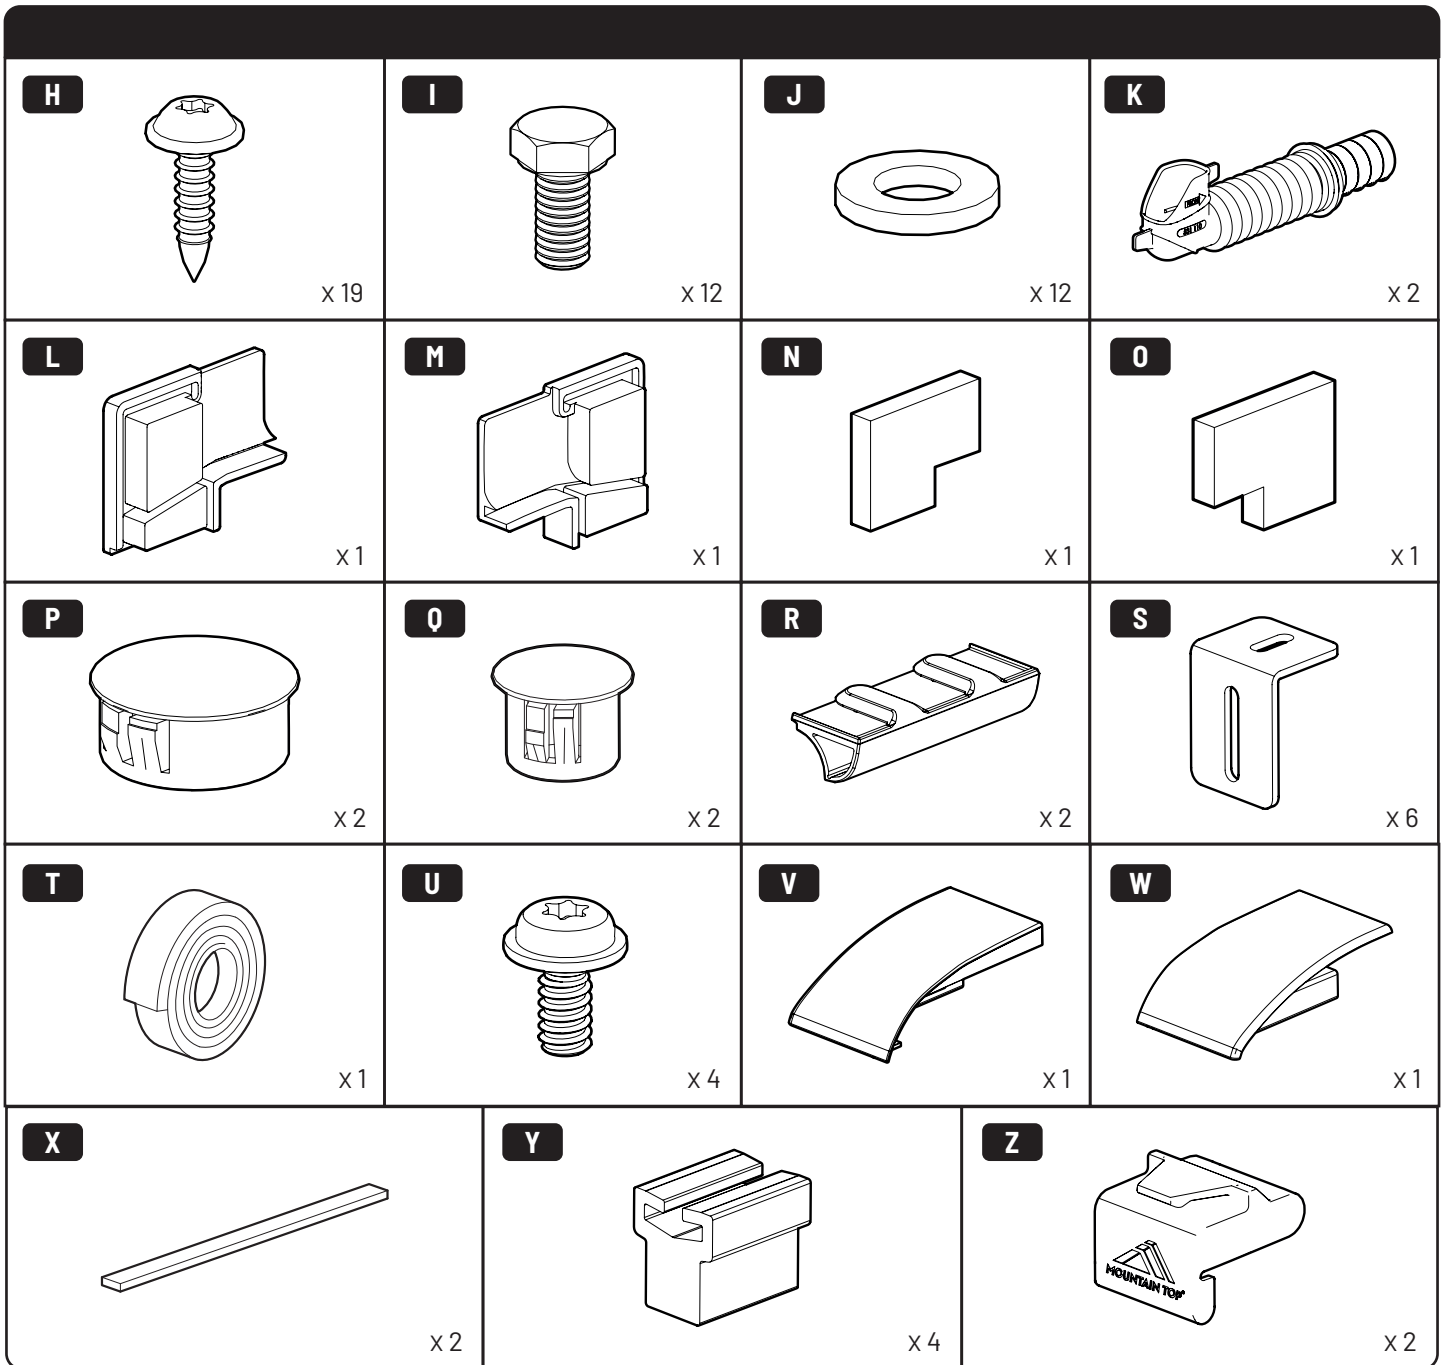

DOWNLOAD PDF

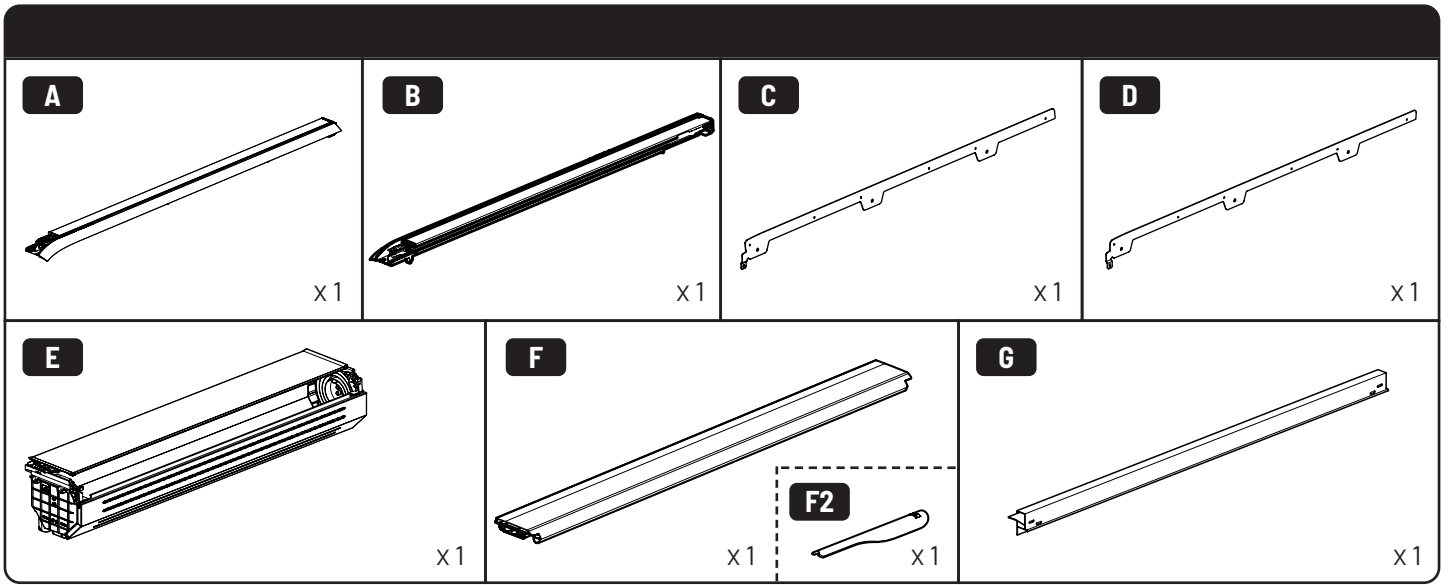


Kit




Manual

x1

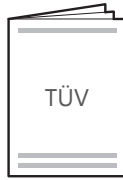

TÜV


x1

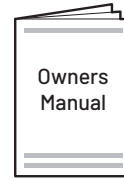

Owners
Manual


x1

Tools needed

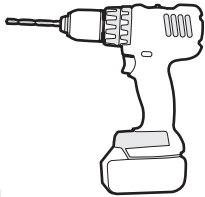

Ø3.5MM
Ø2.4MM







1 - 25 Nm

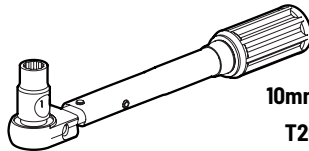

10mm
T20
T30





Rust protection
Rostschutzmittel
Anti-rouille
Anti roest

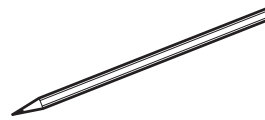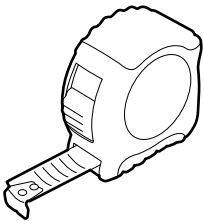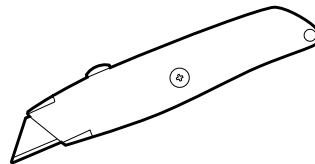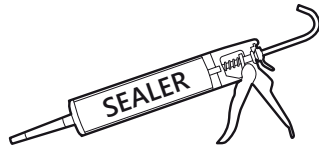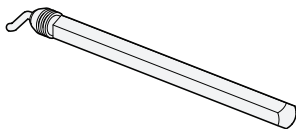








Applying rust protection




Ø32 + Ø18 MM

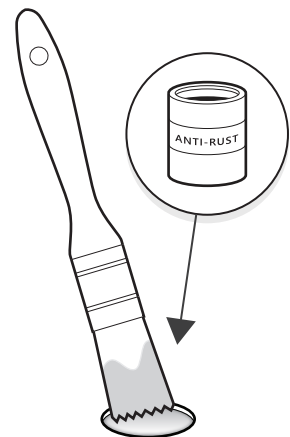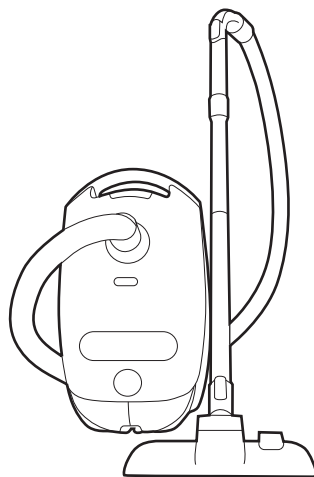

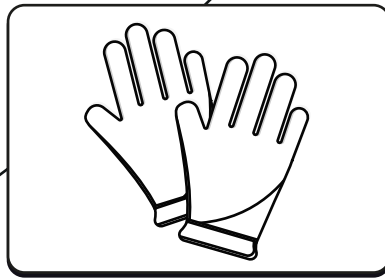


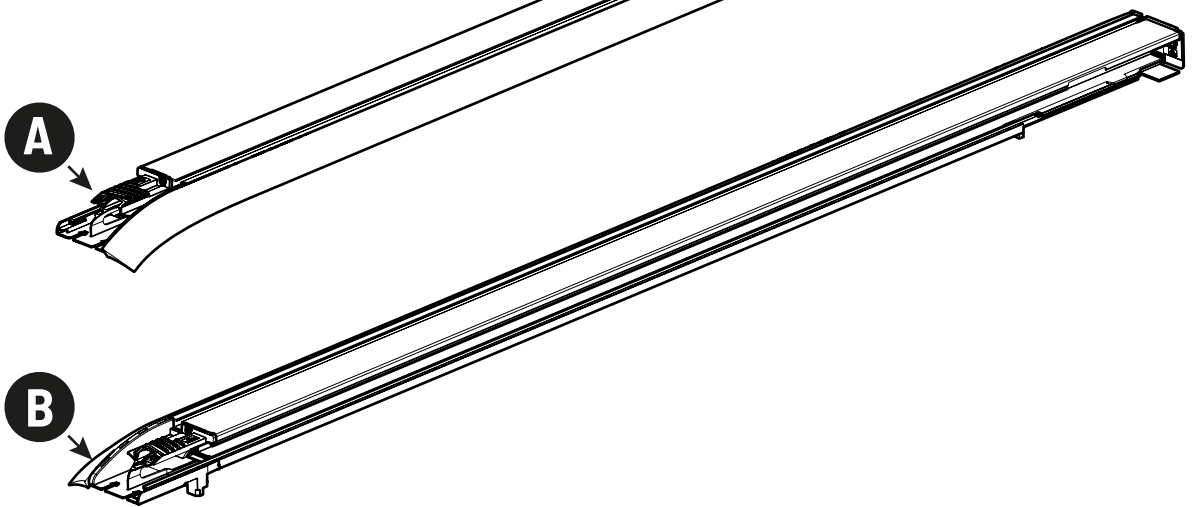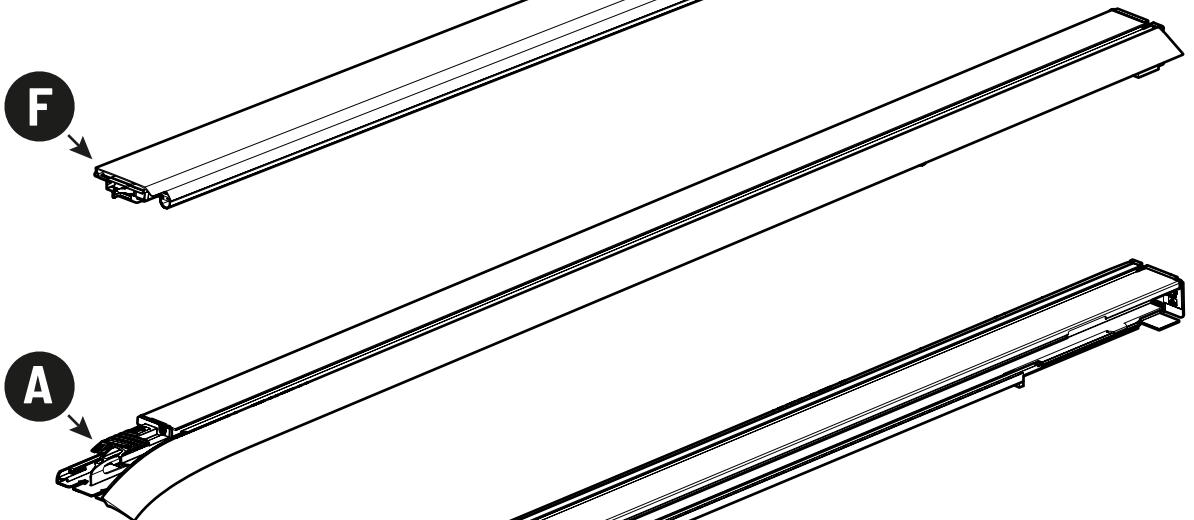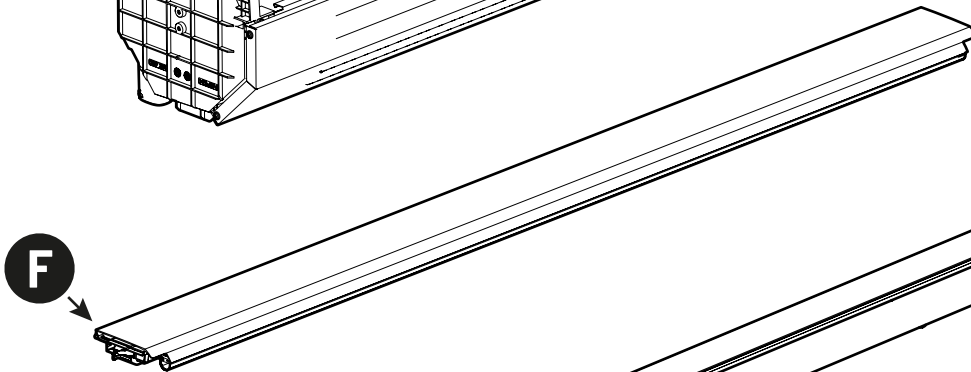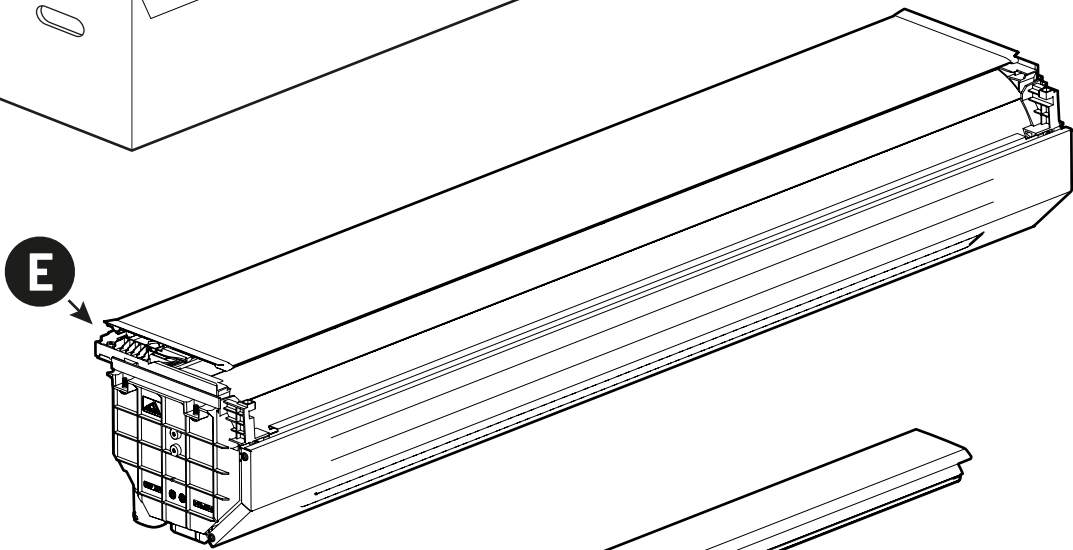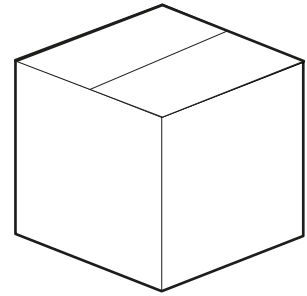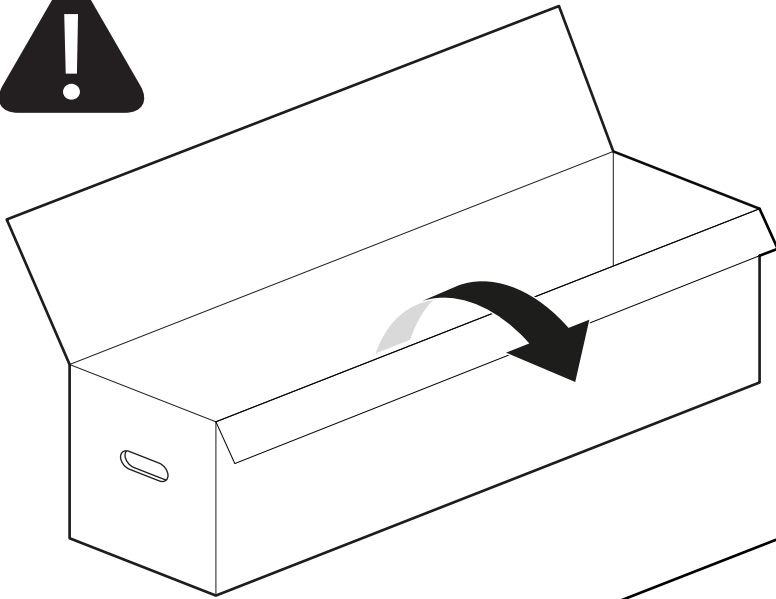

2


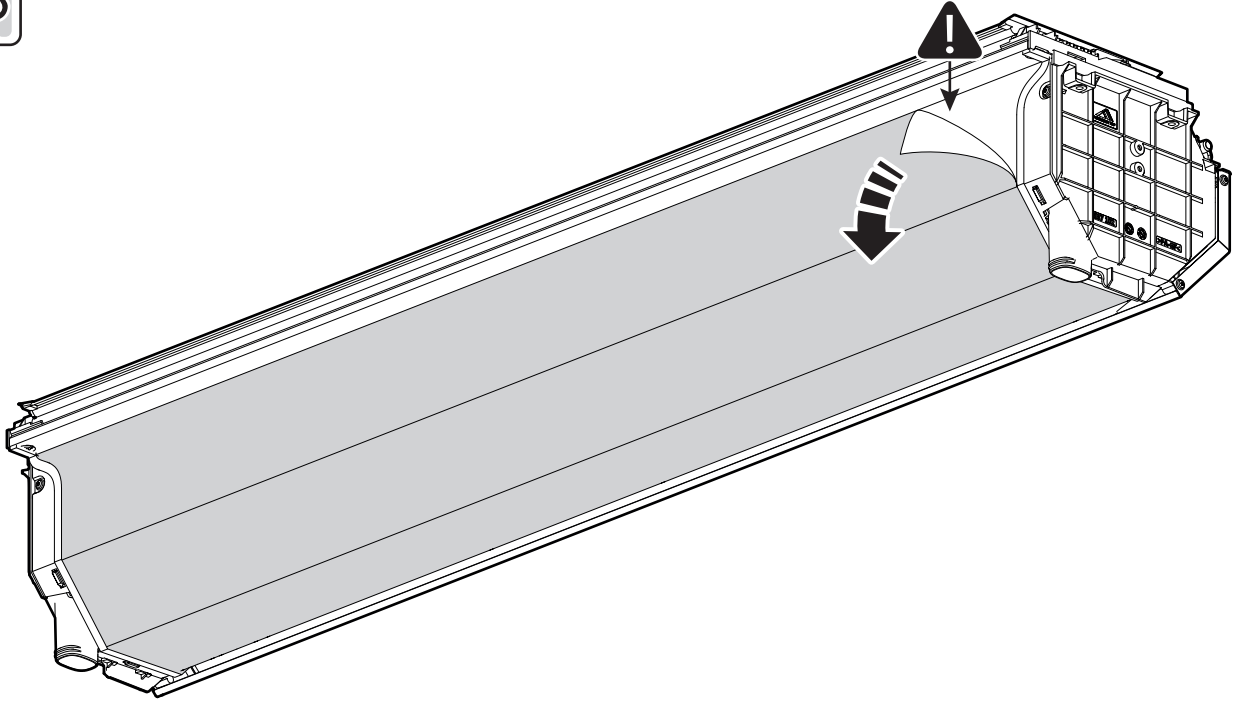


3

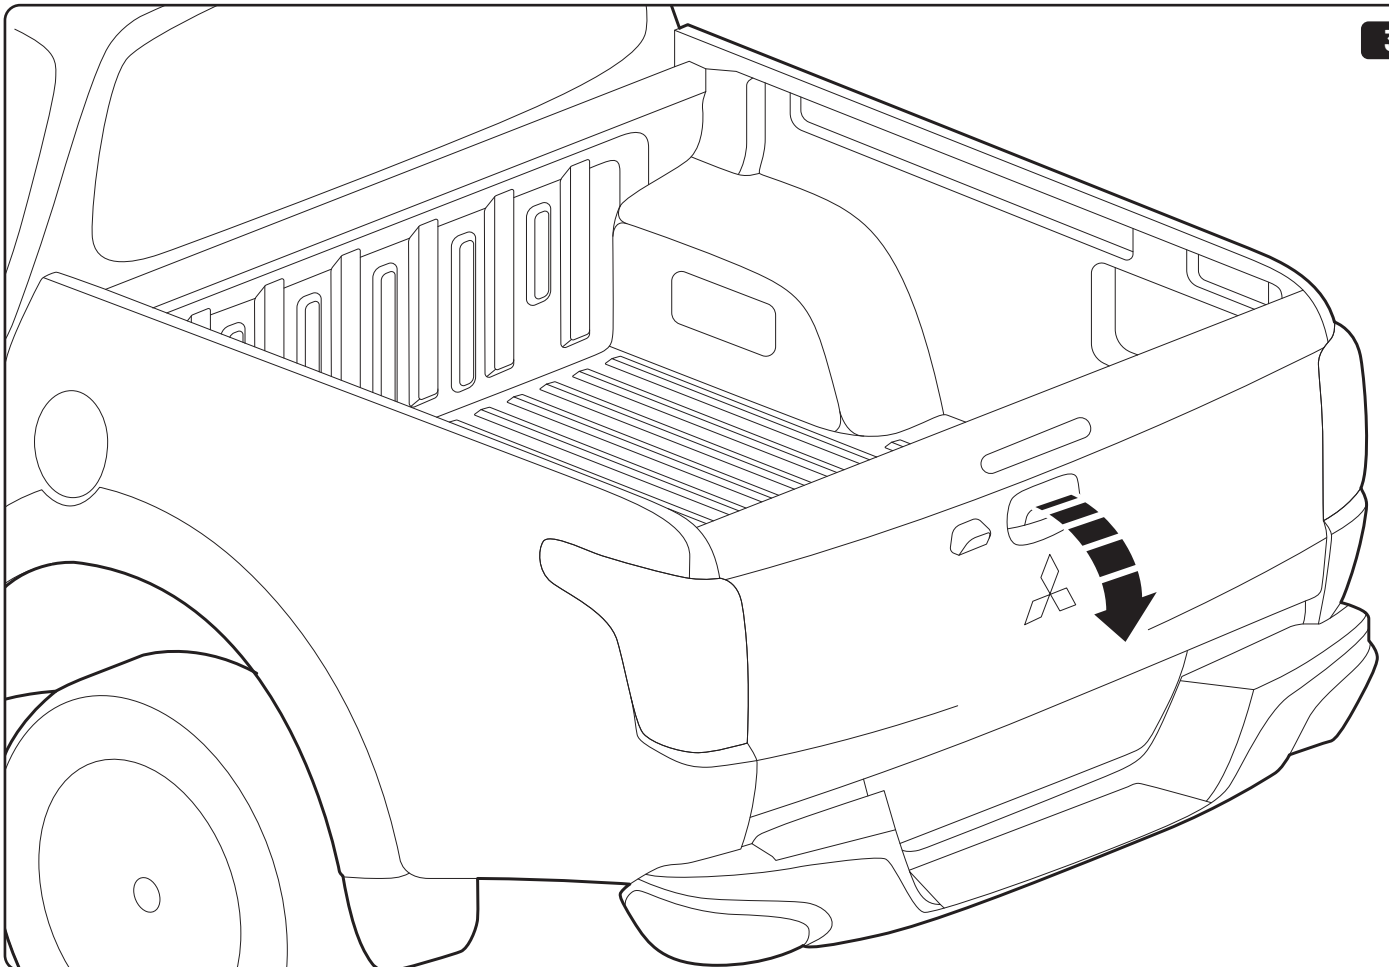












4

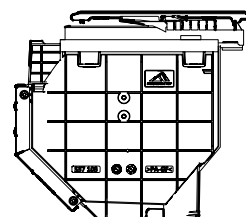
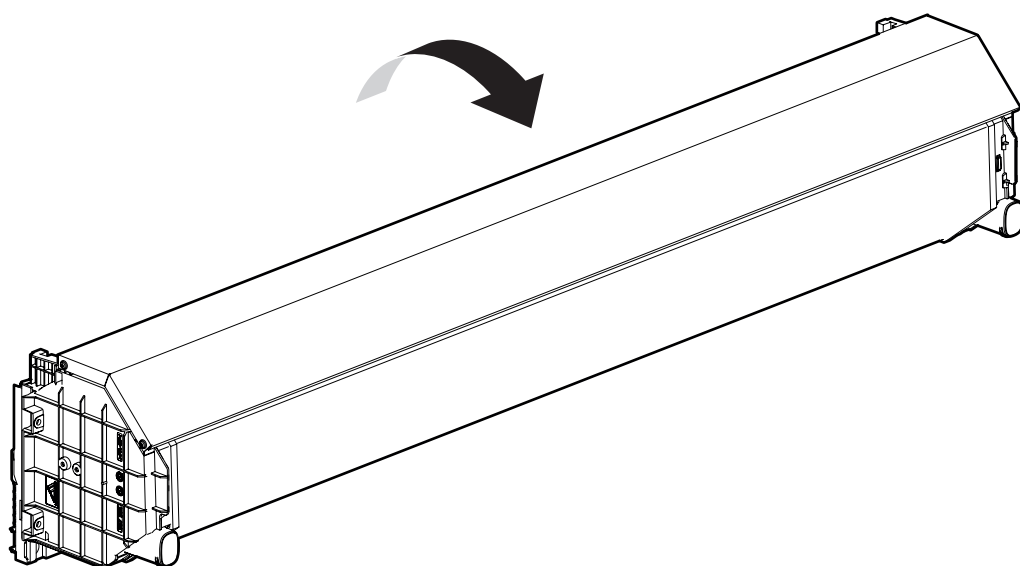




5

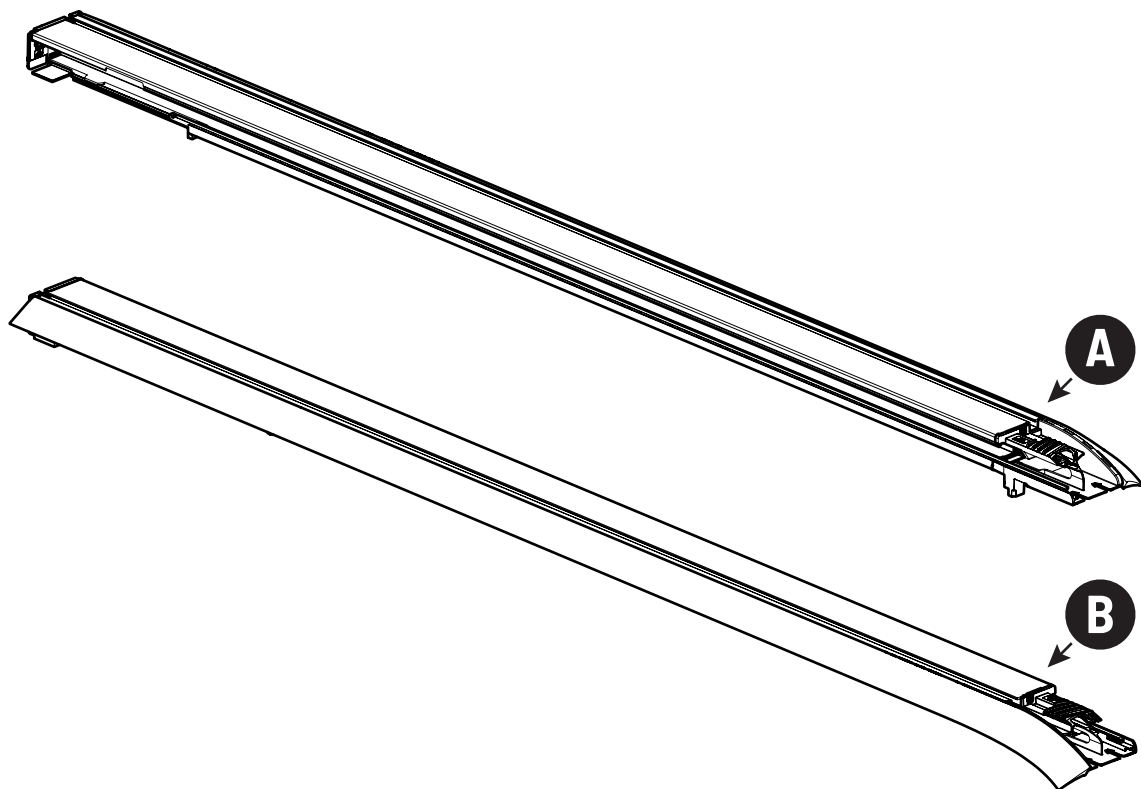

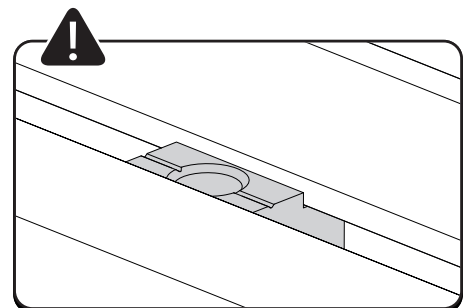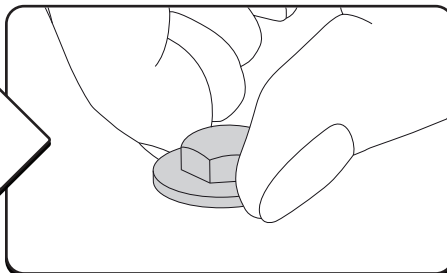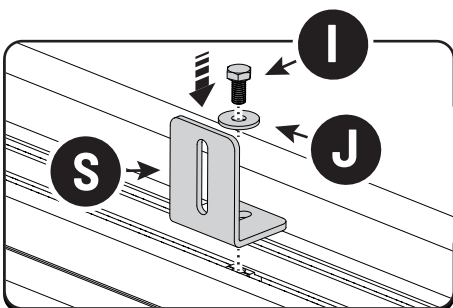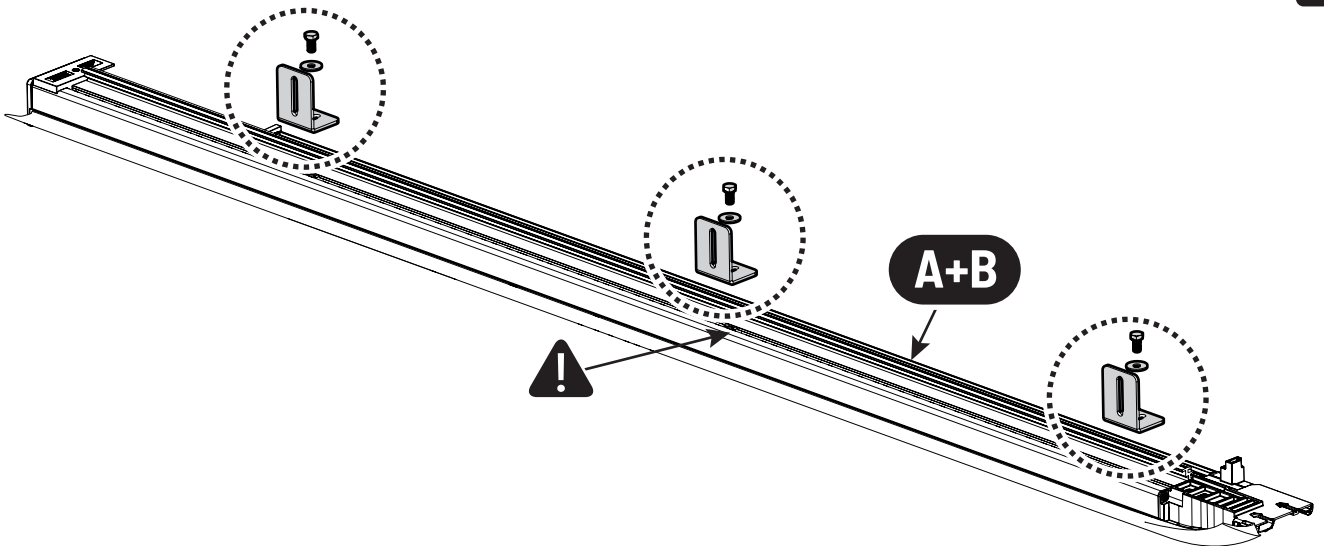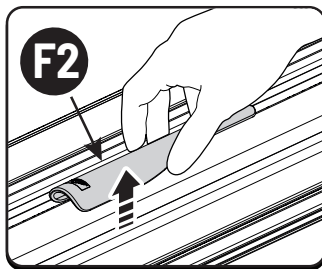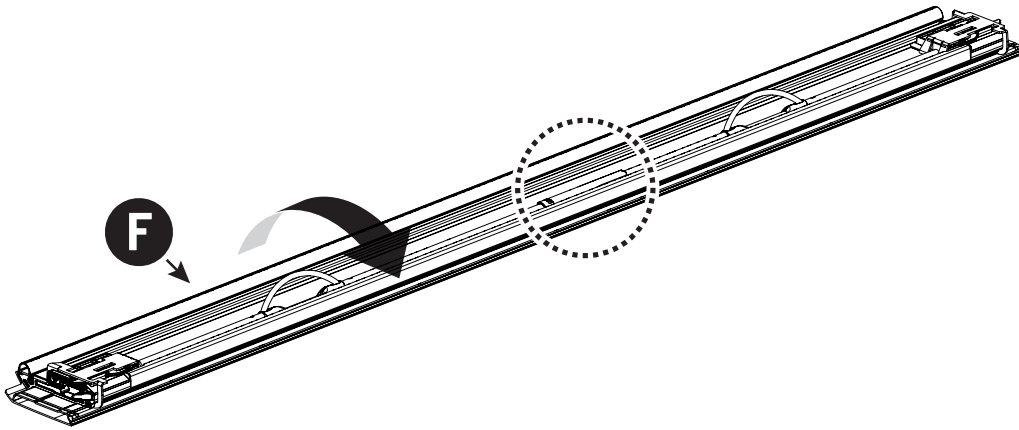

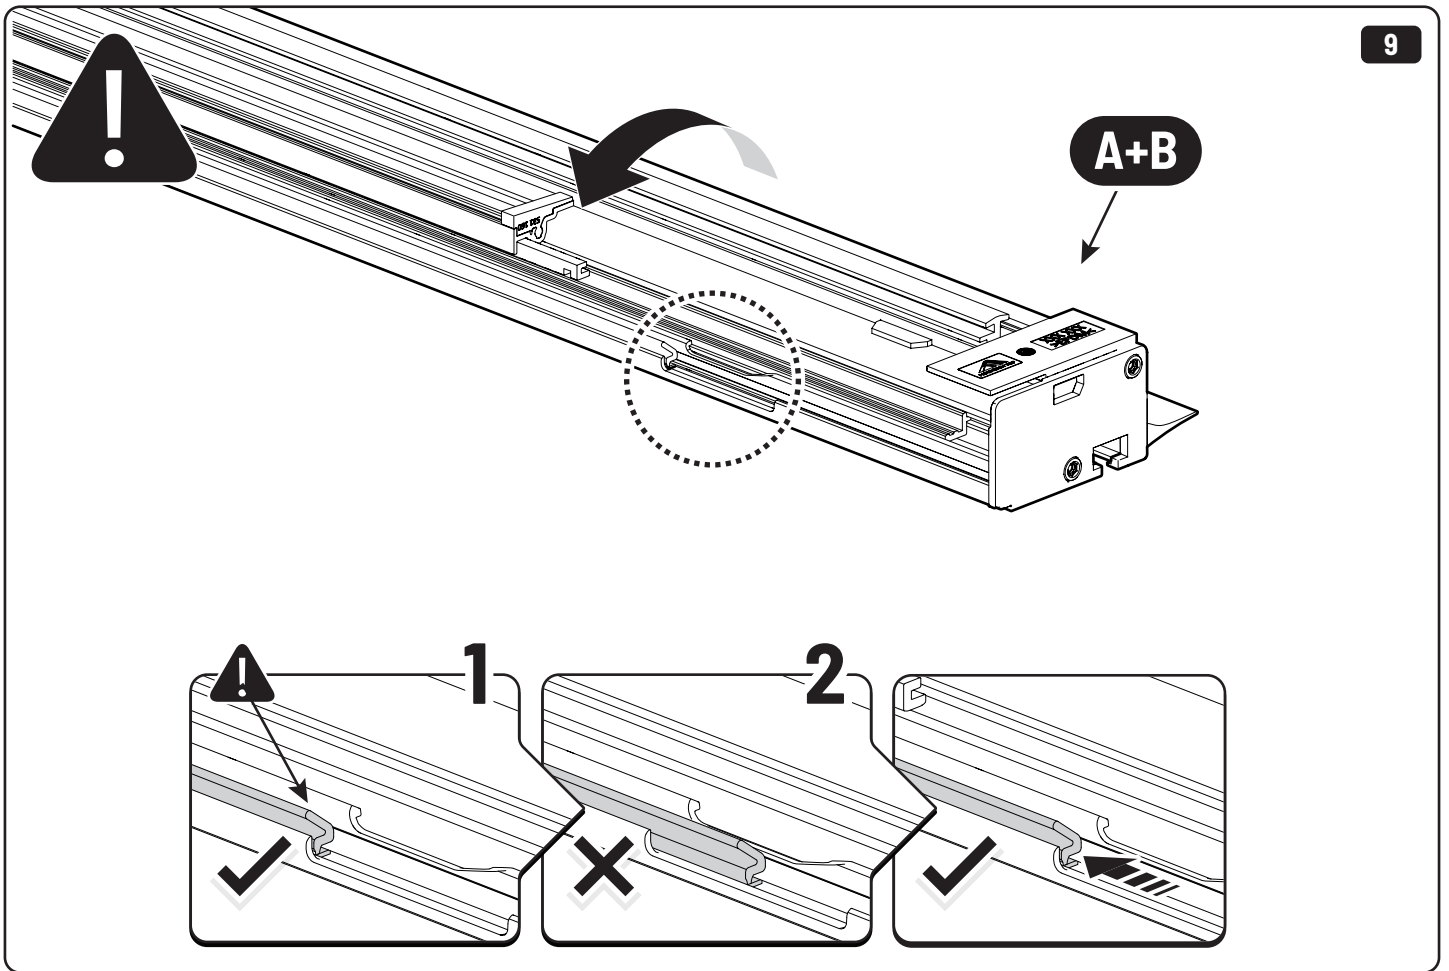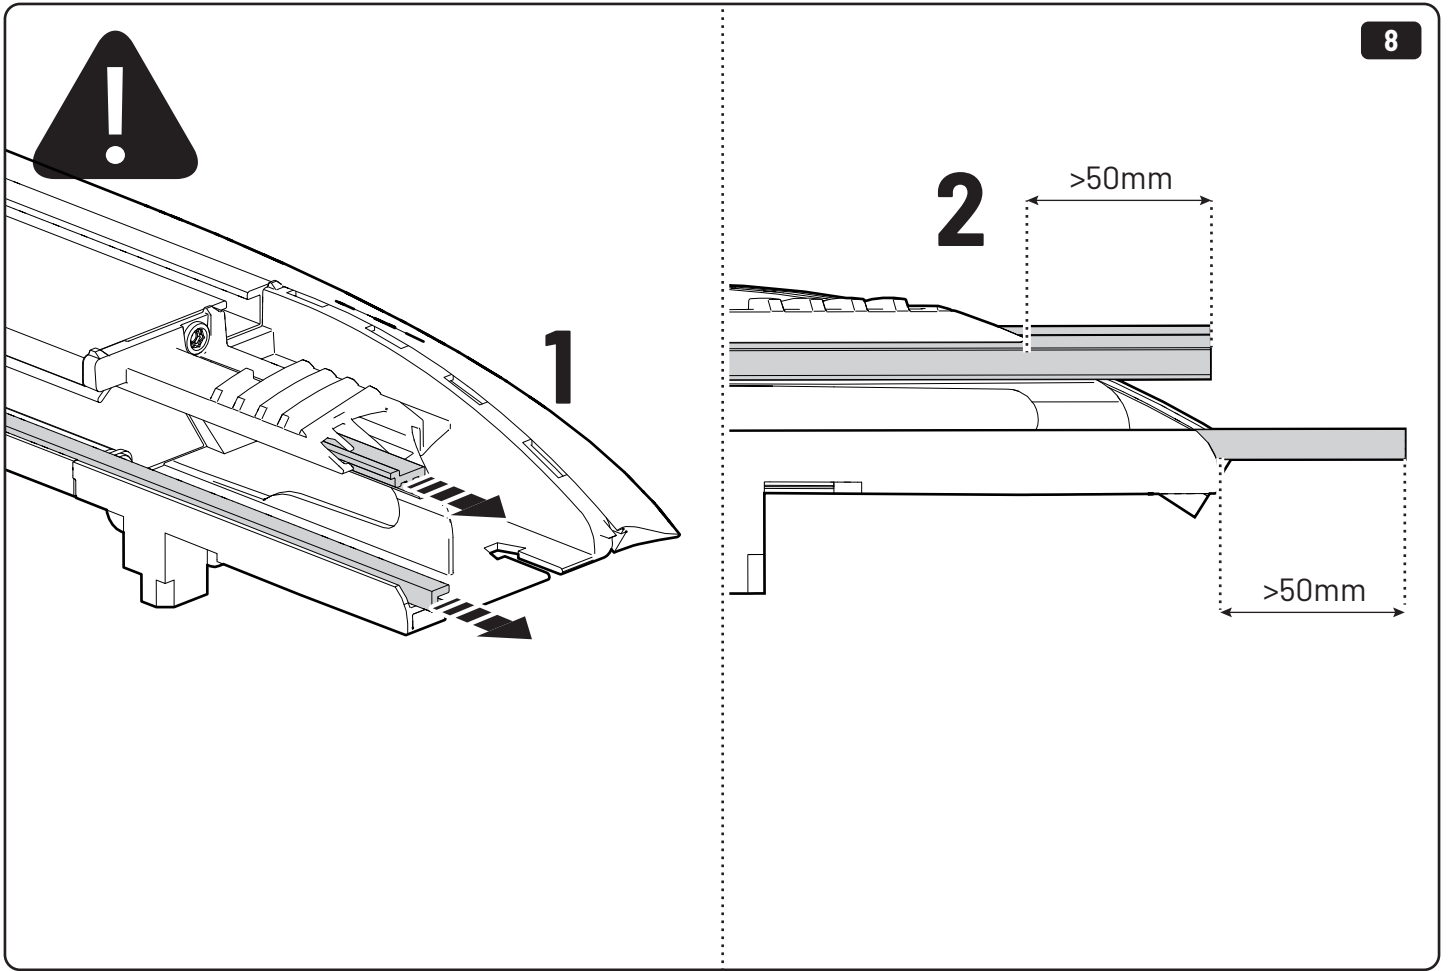


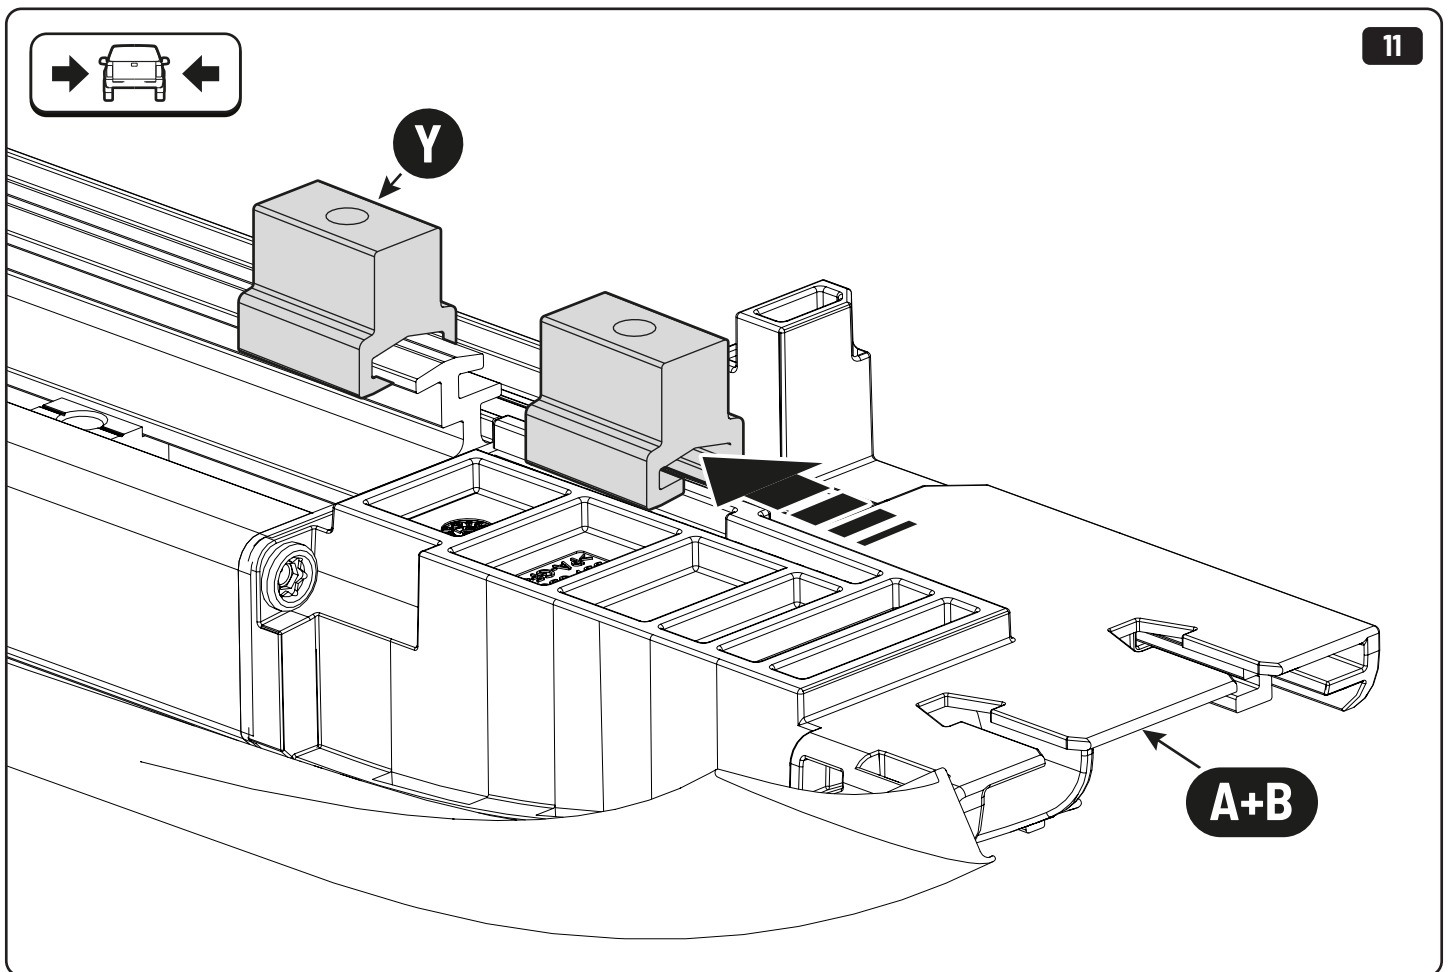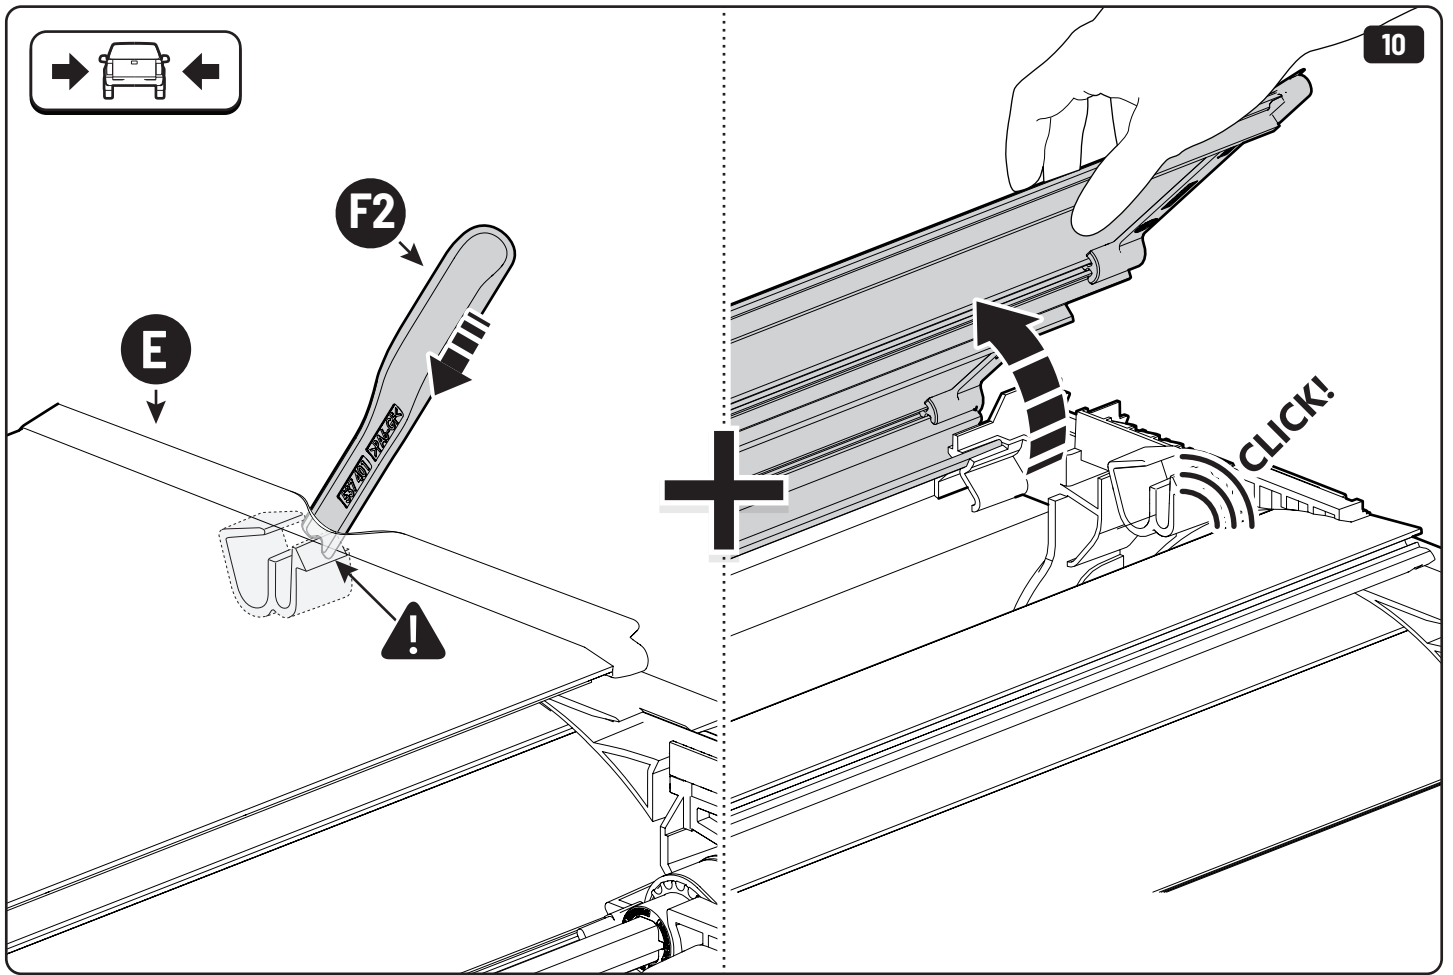

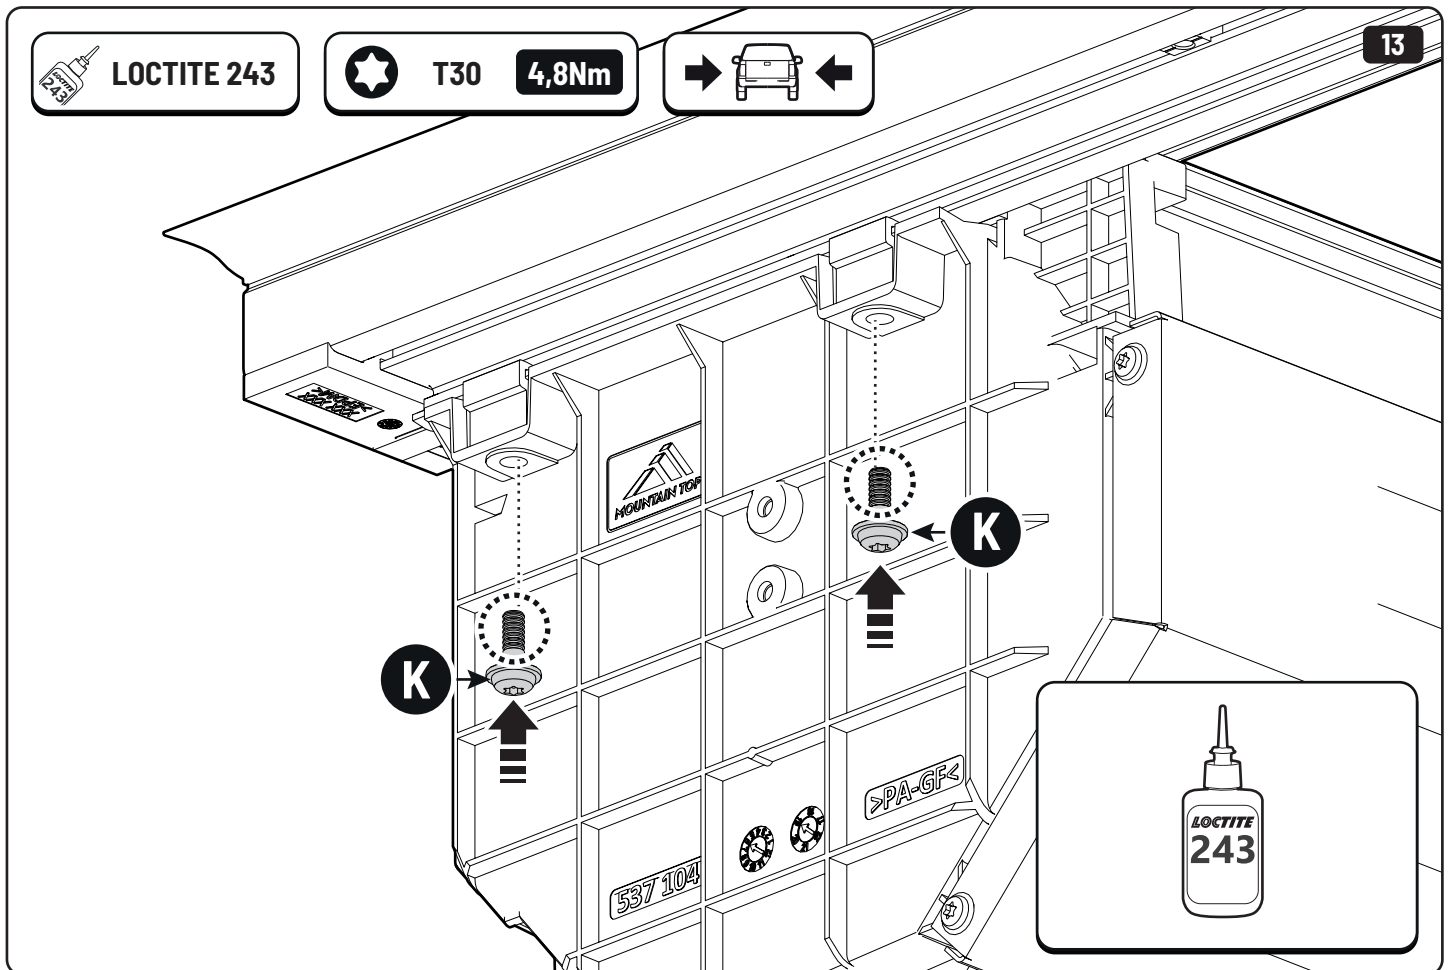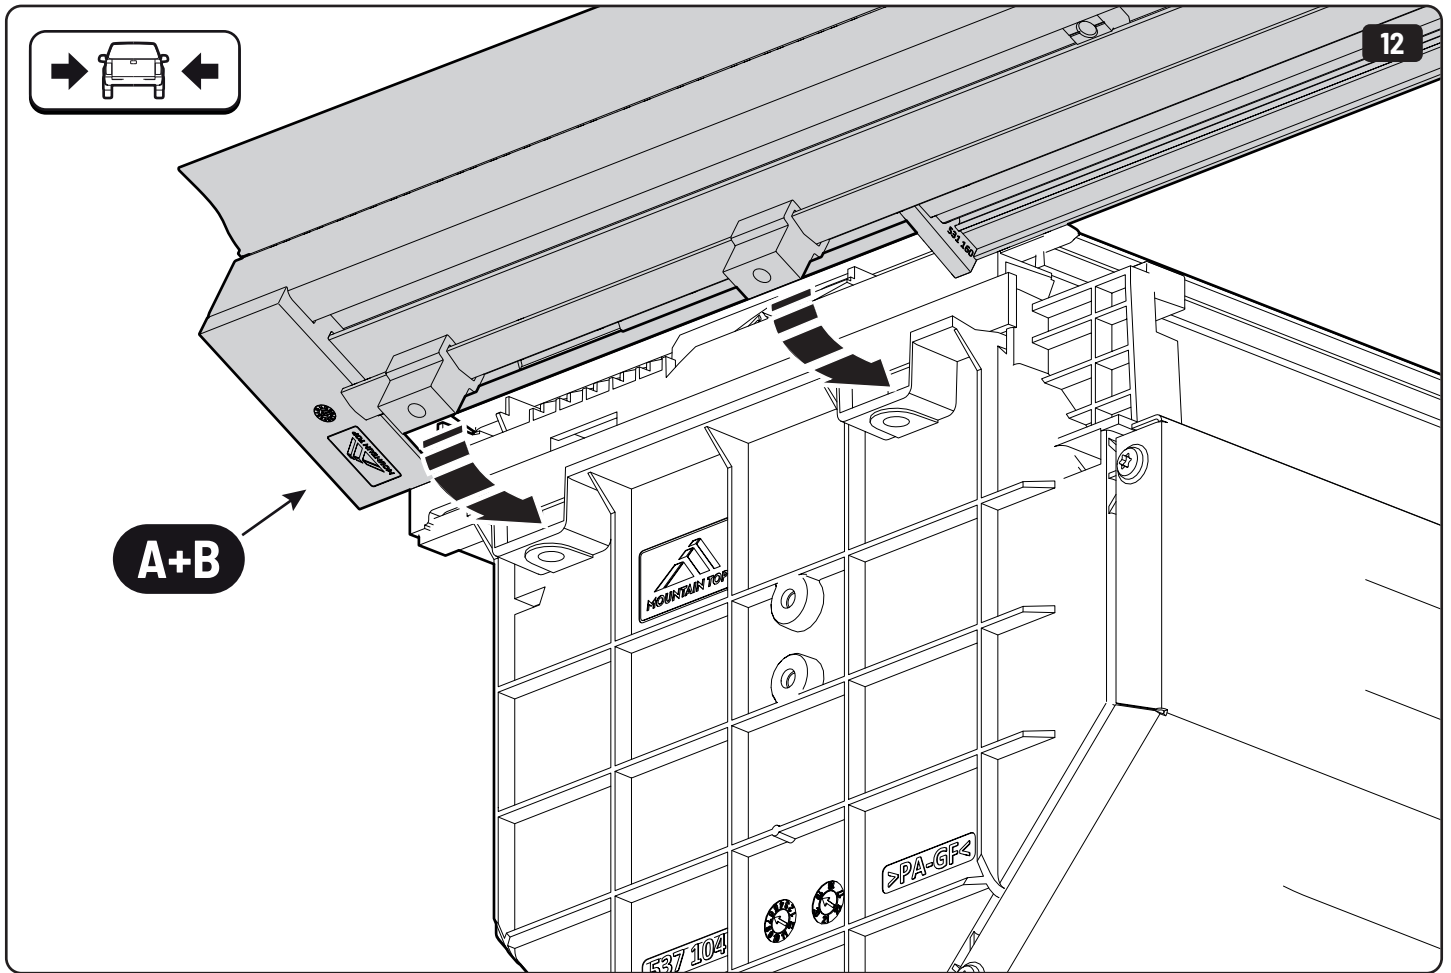




A+B


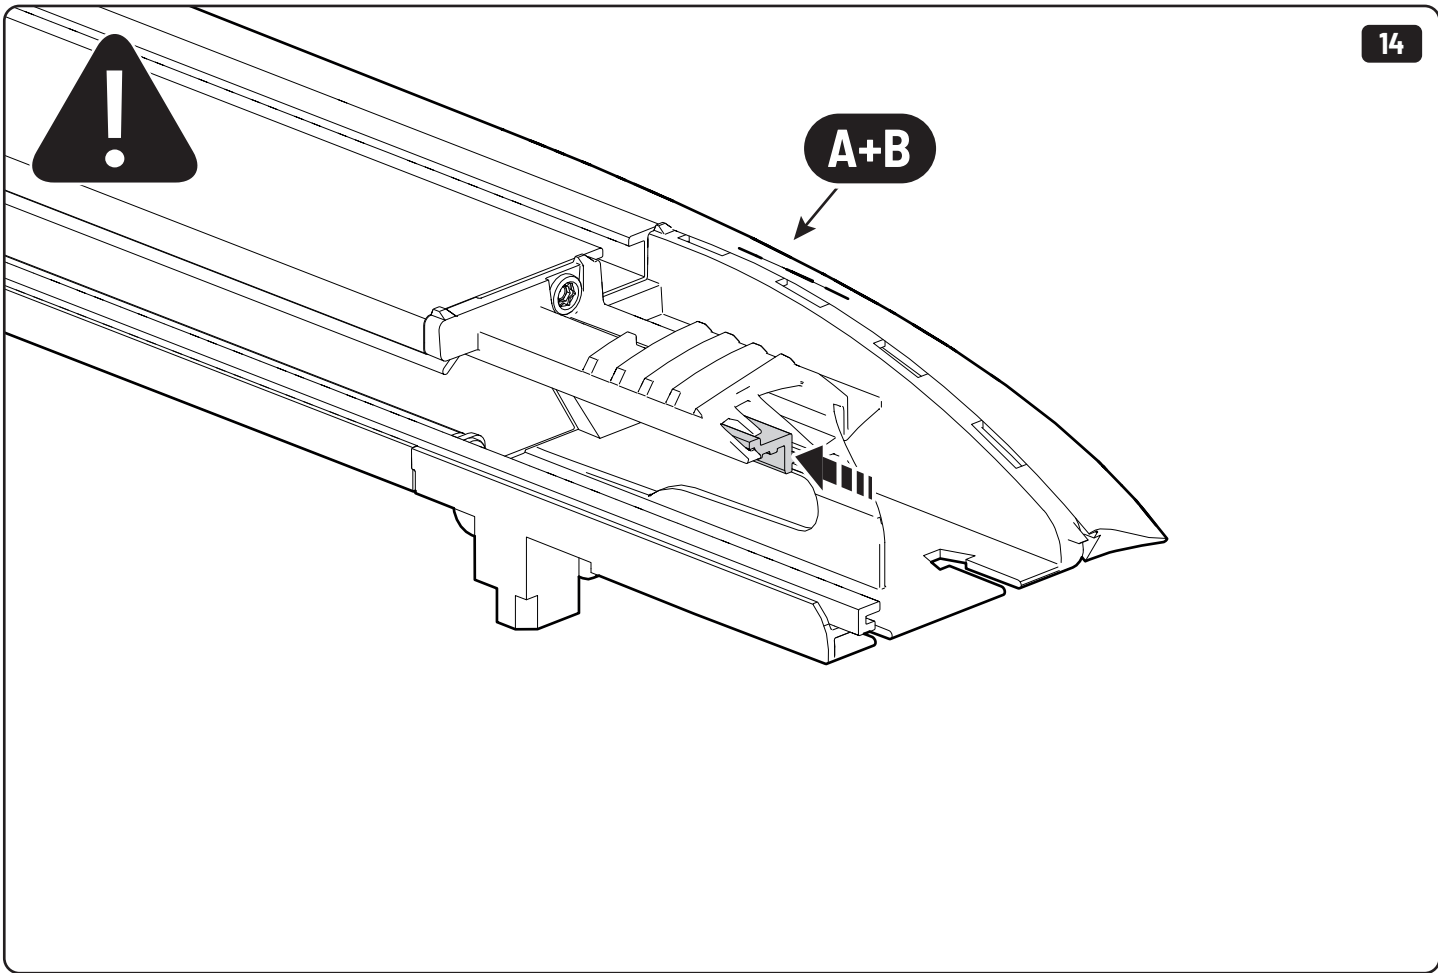




F2



2








CLICK!






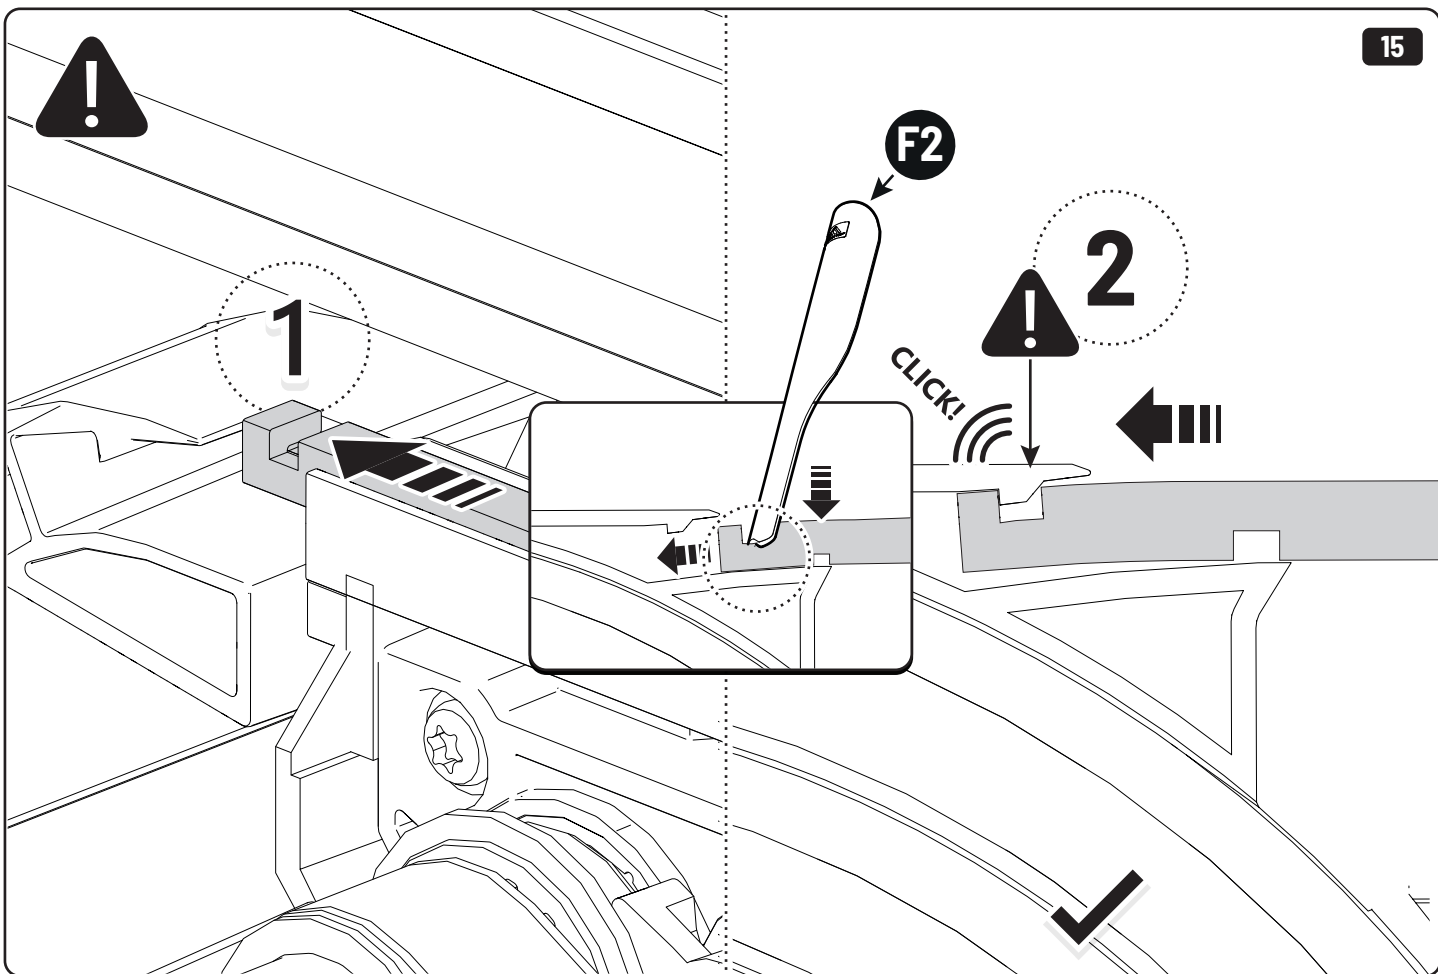


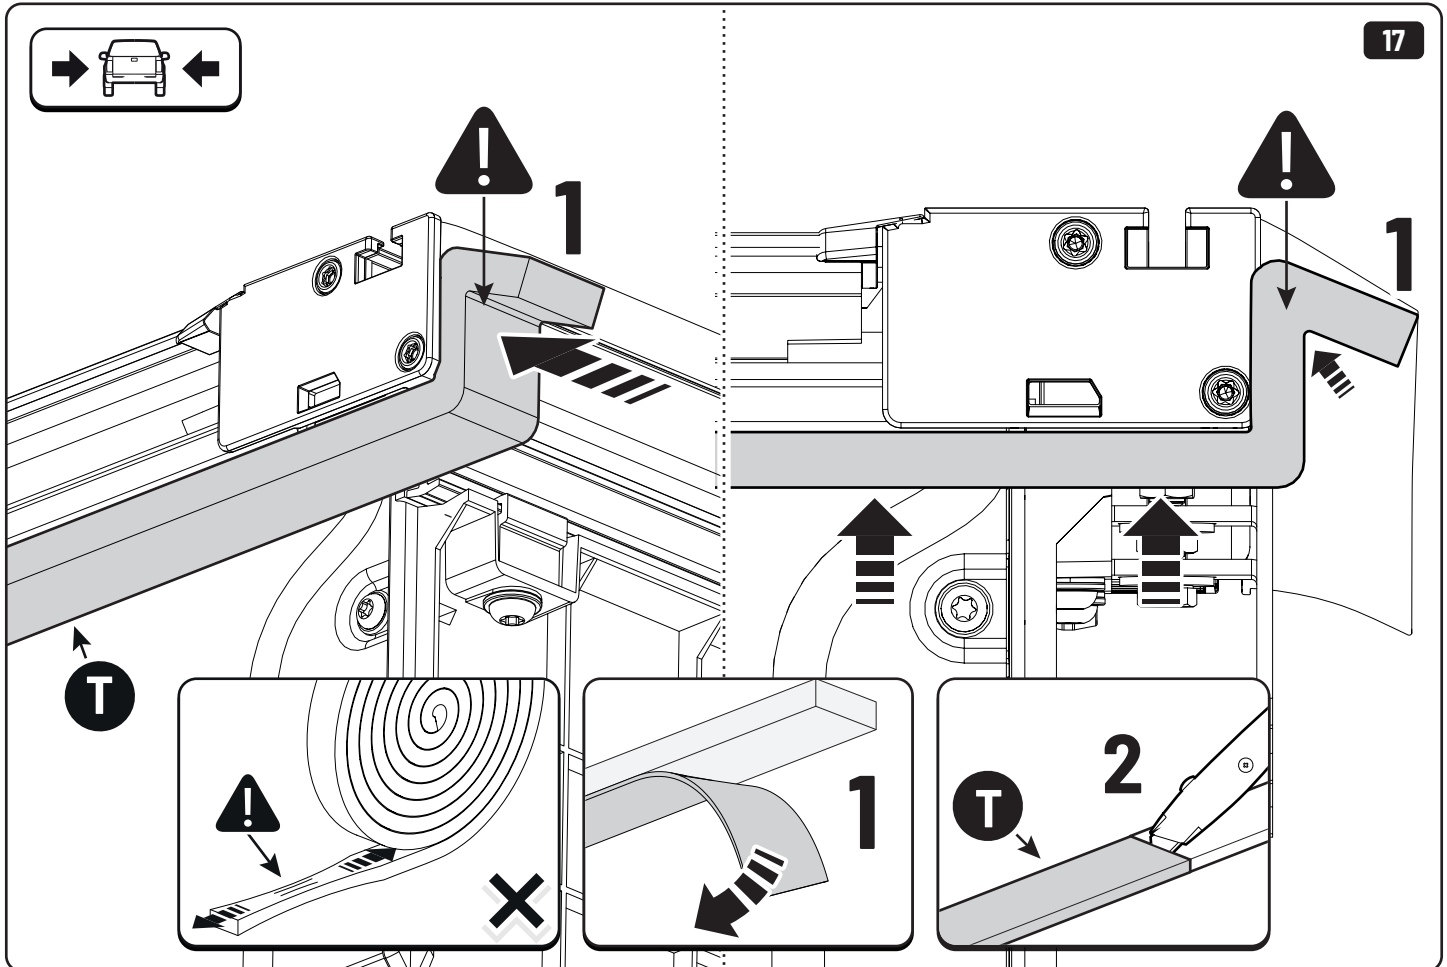
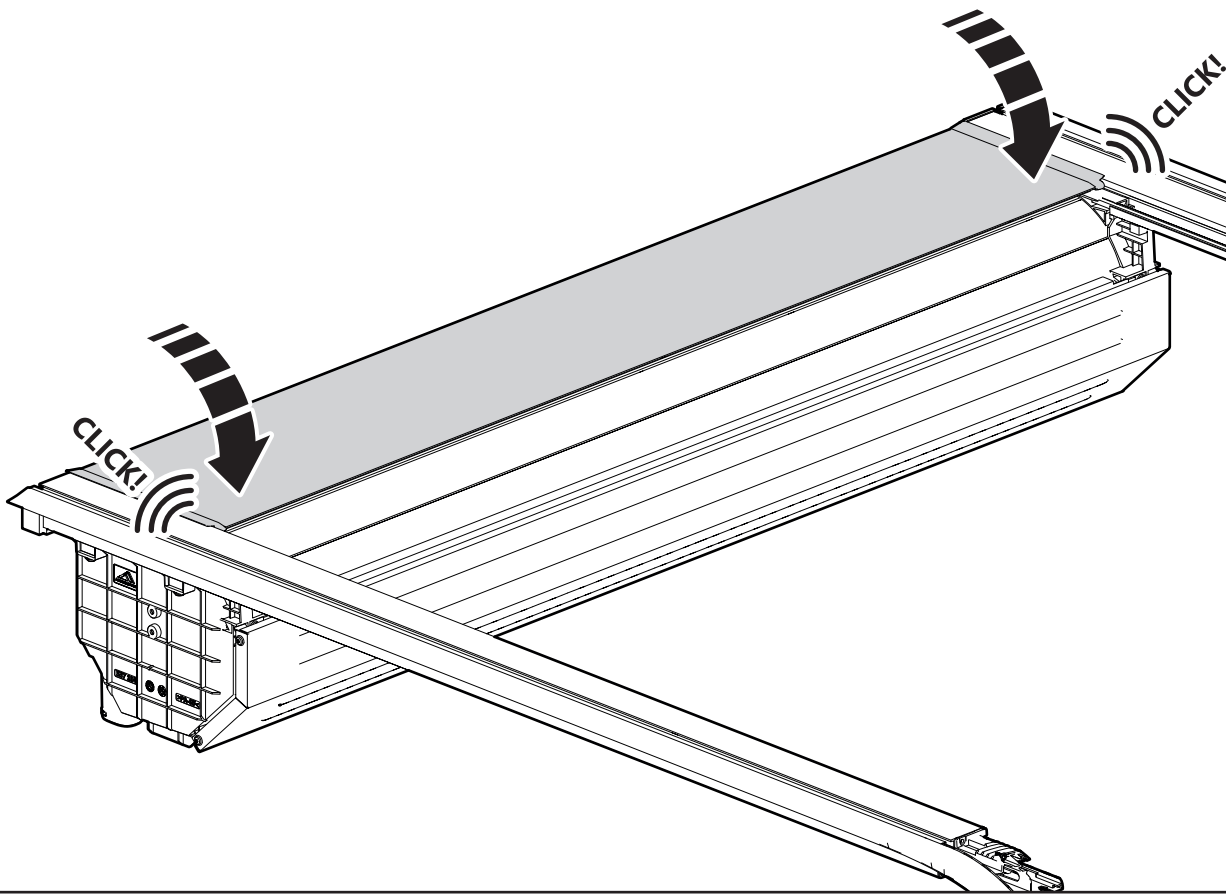


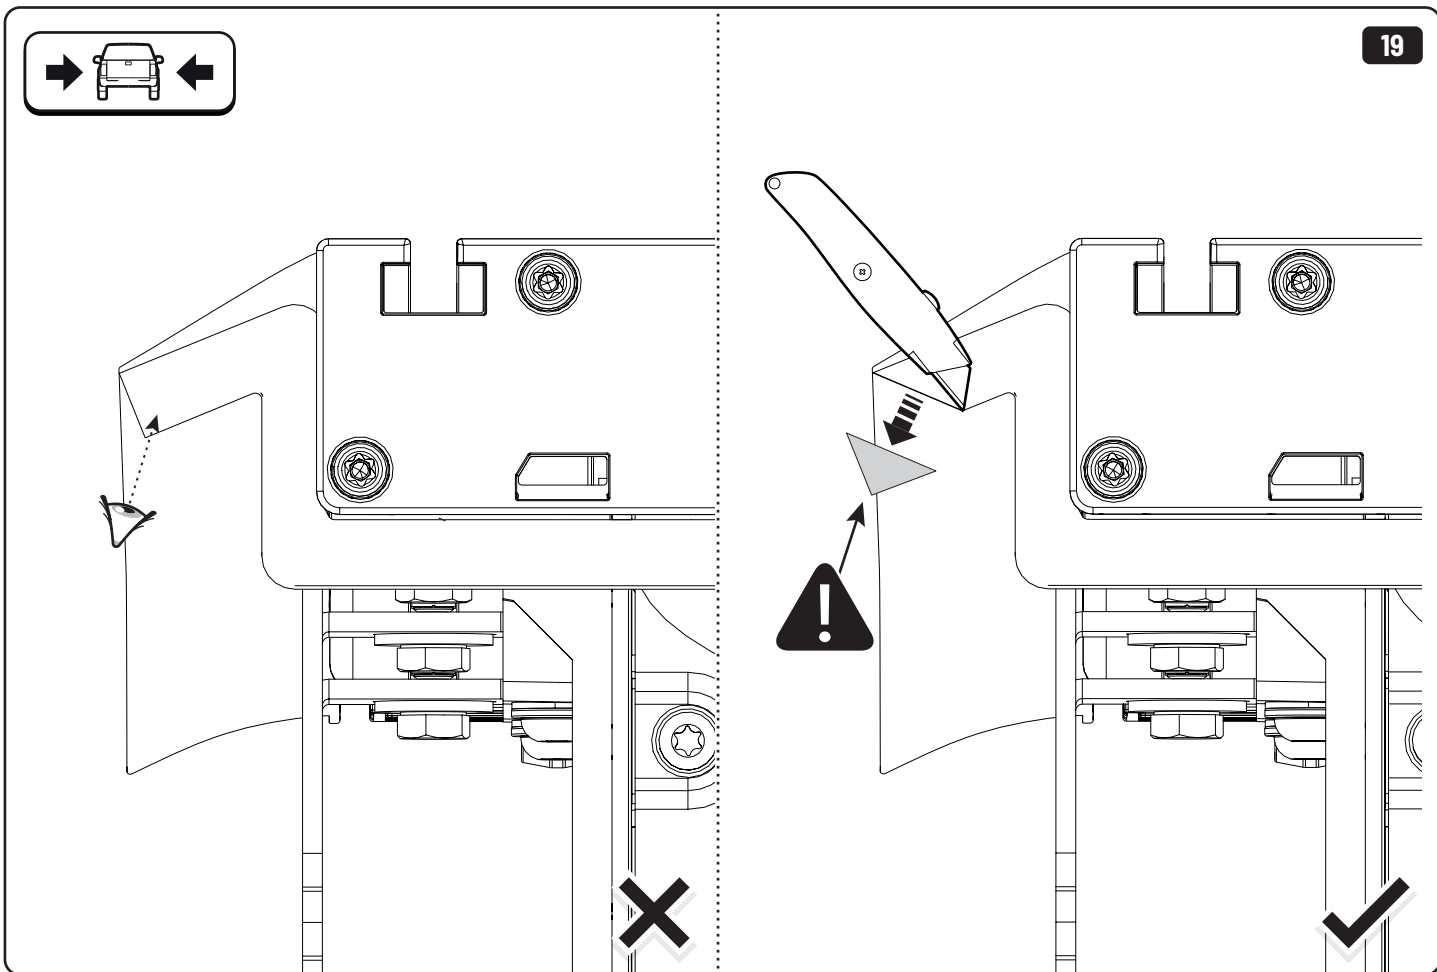
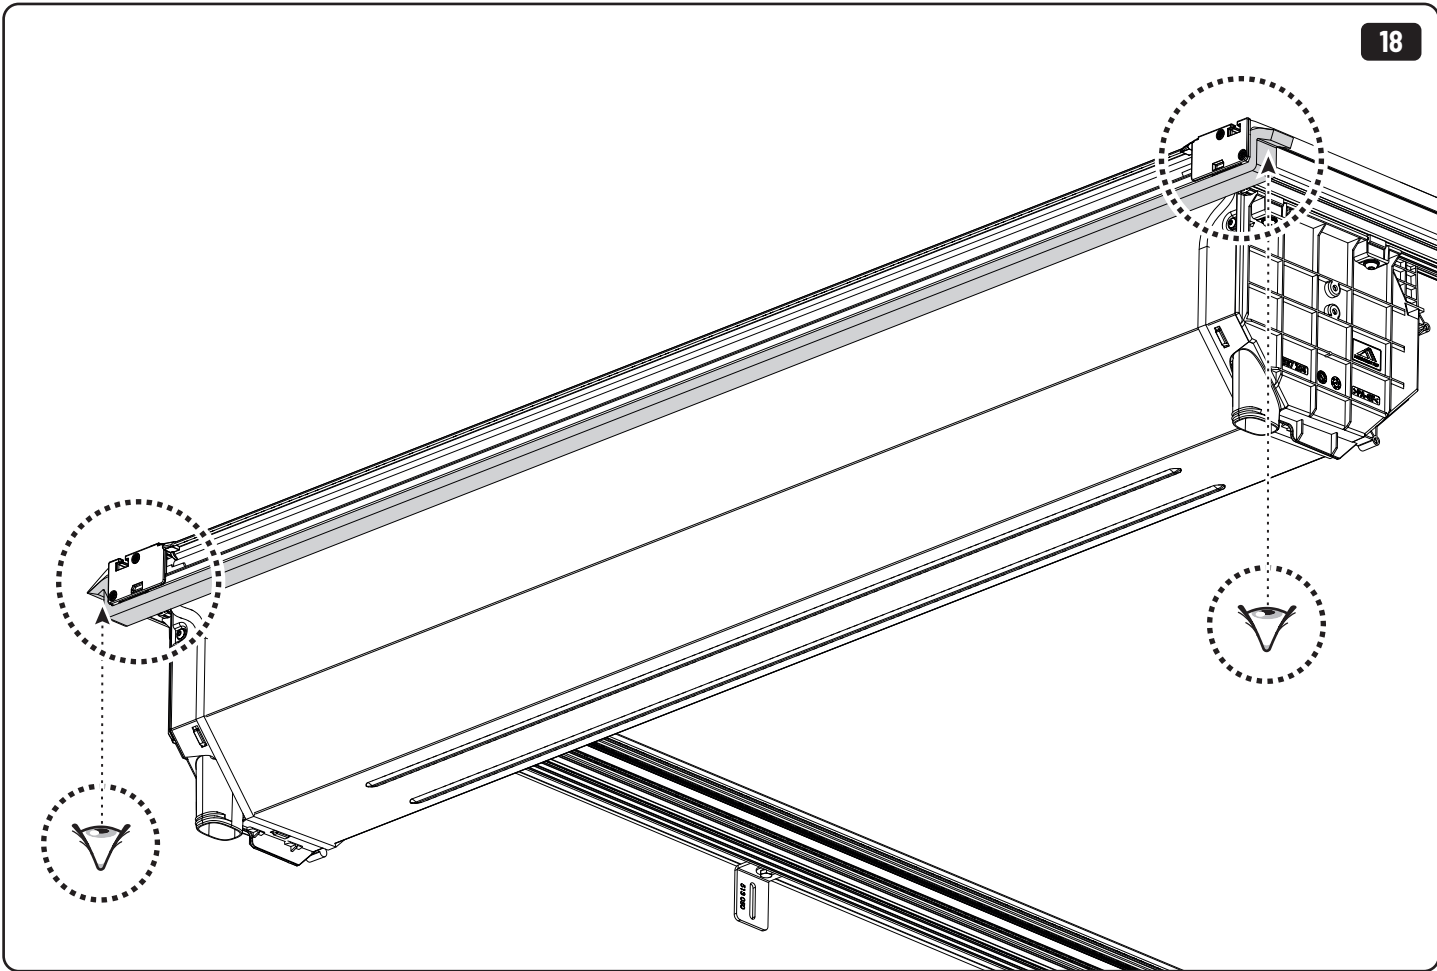


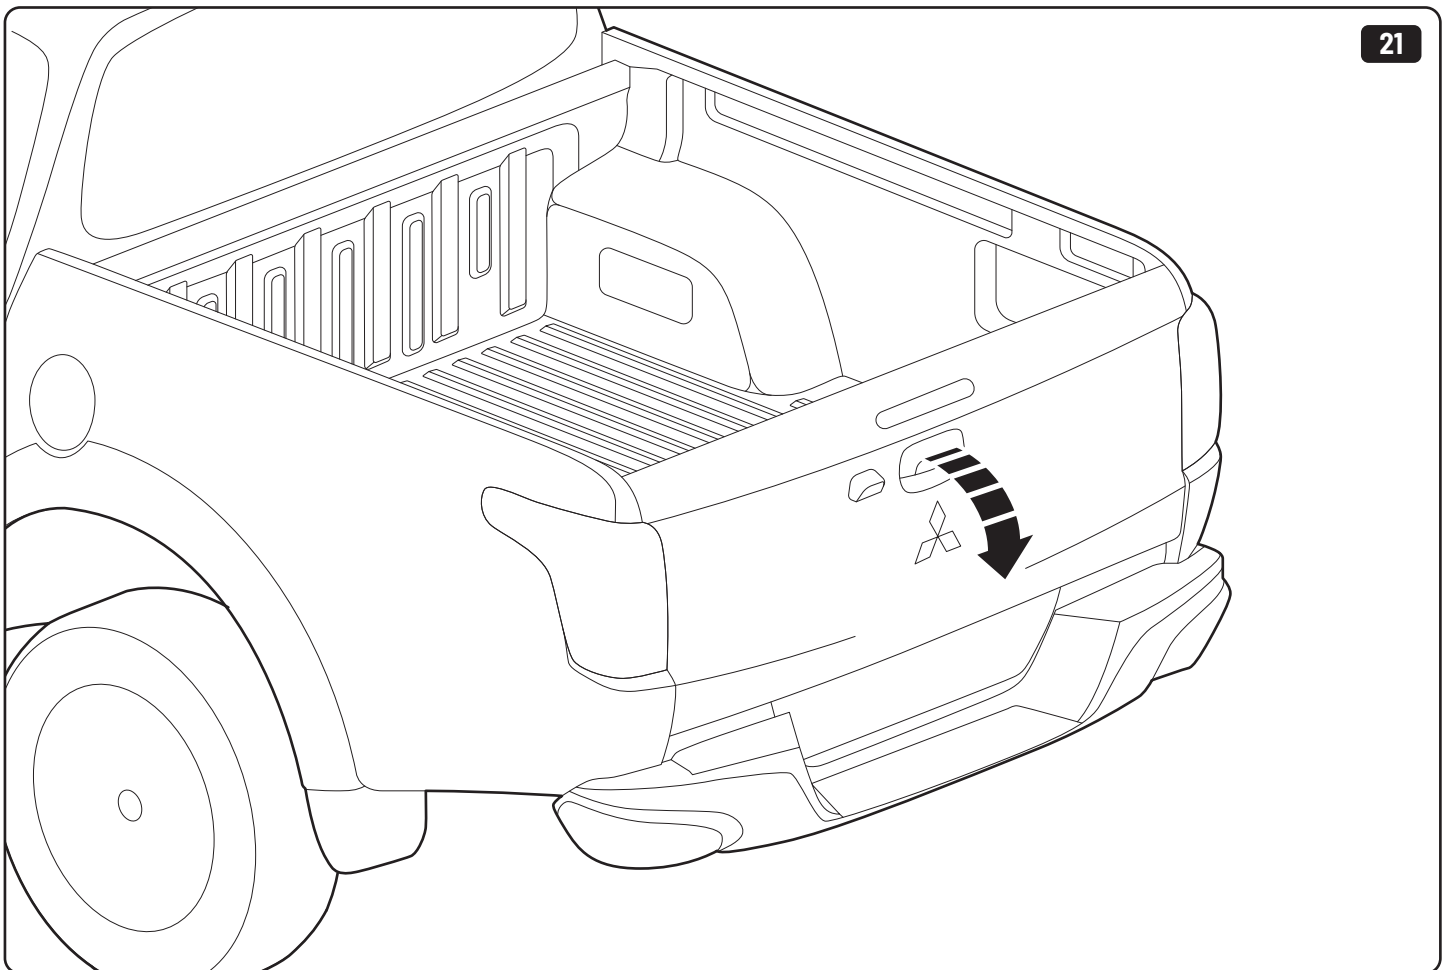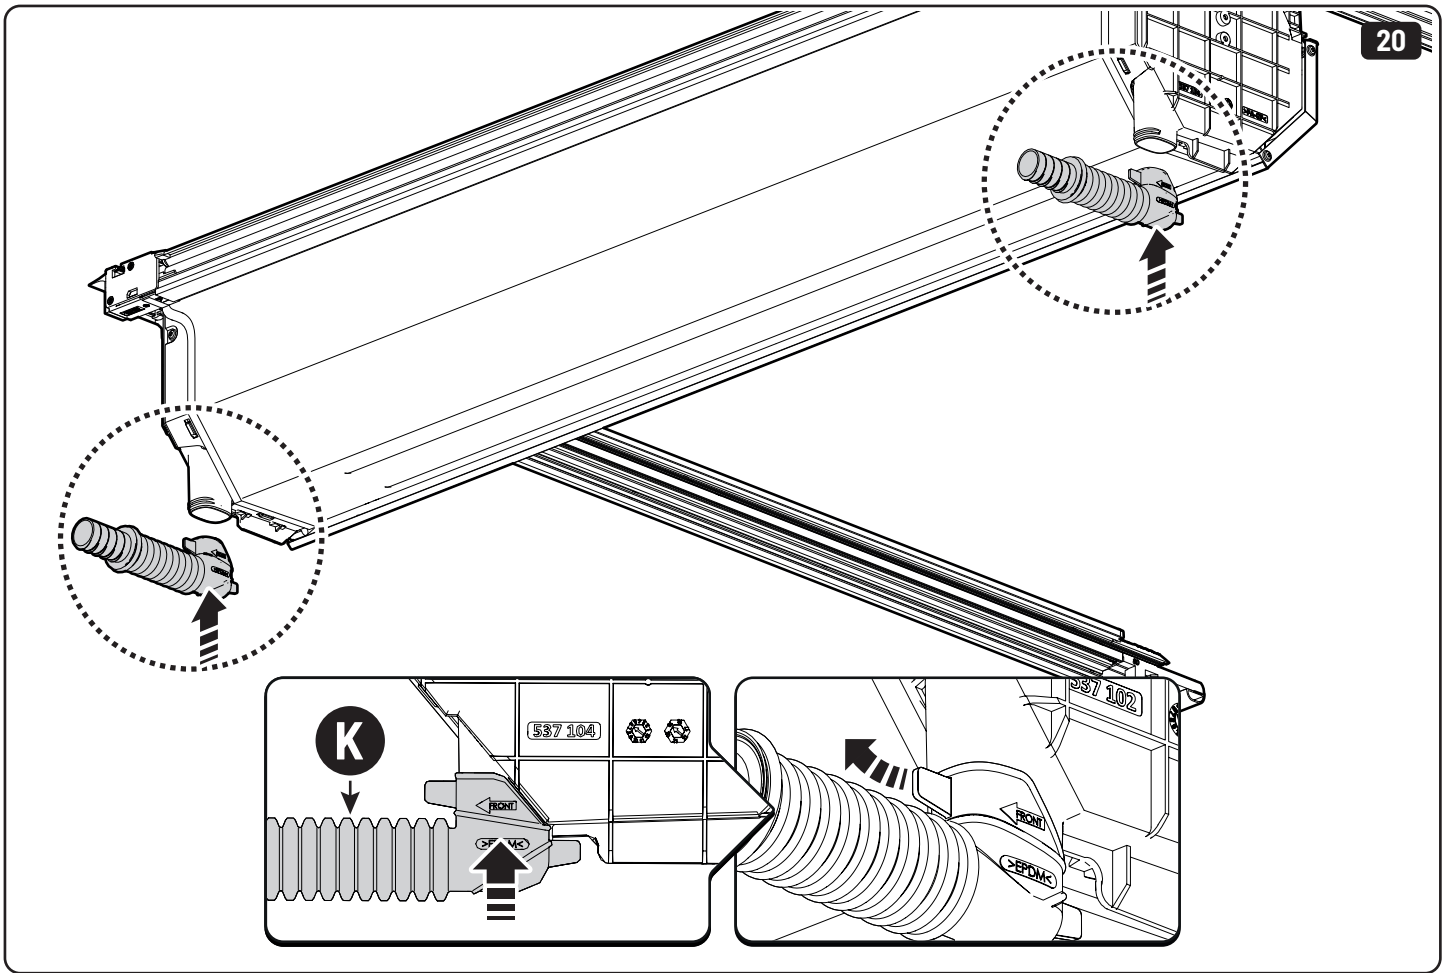

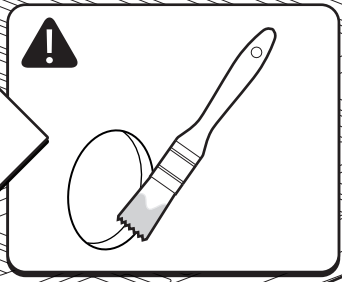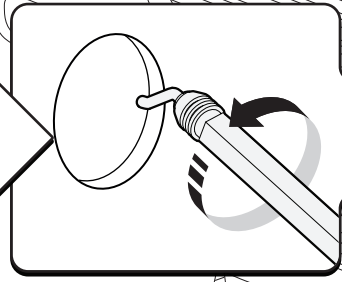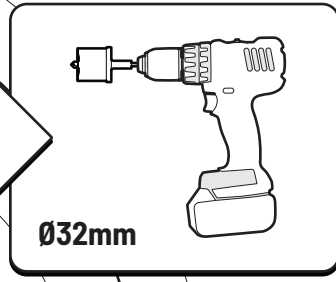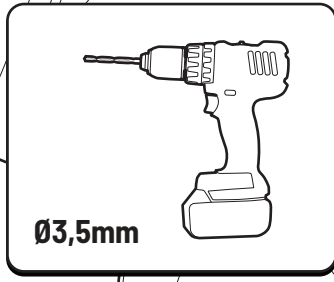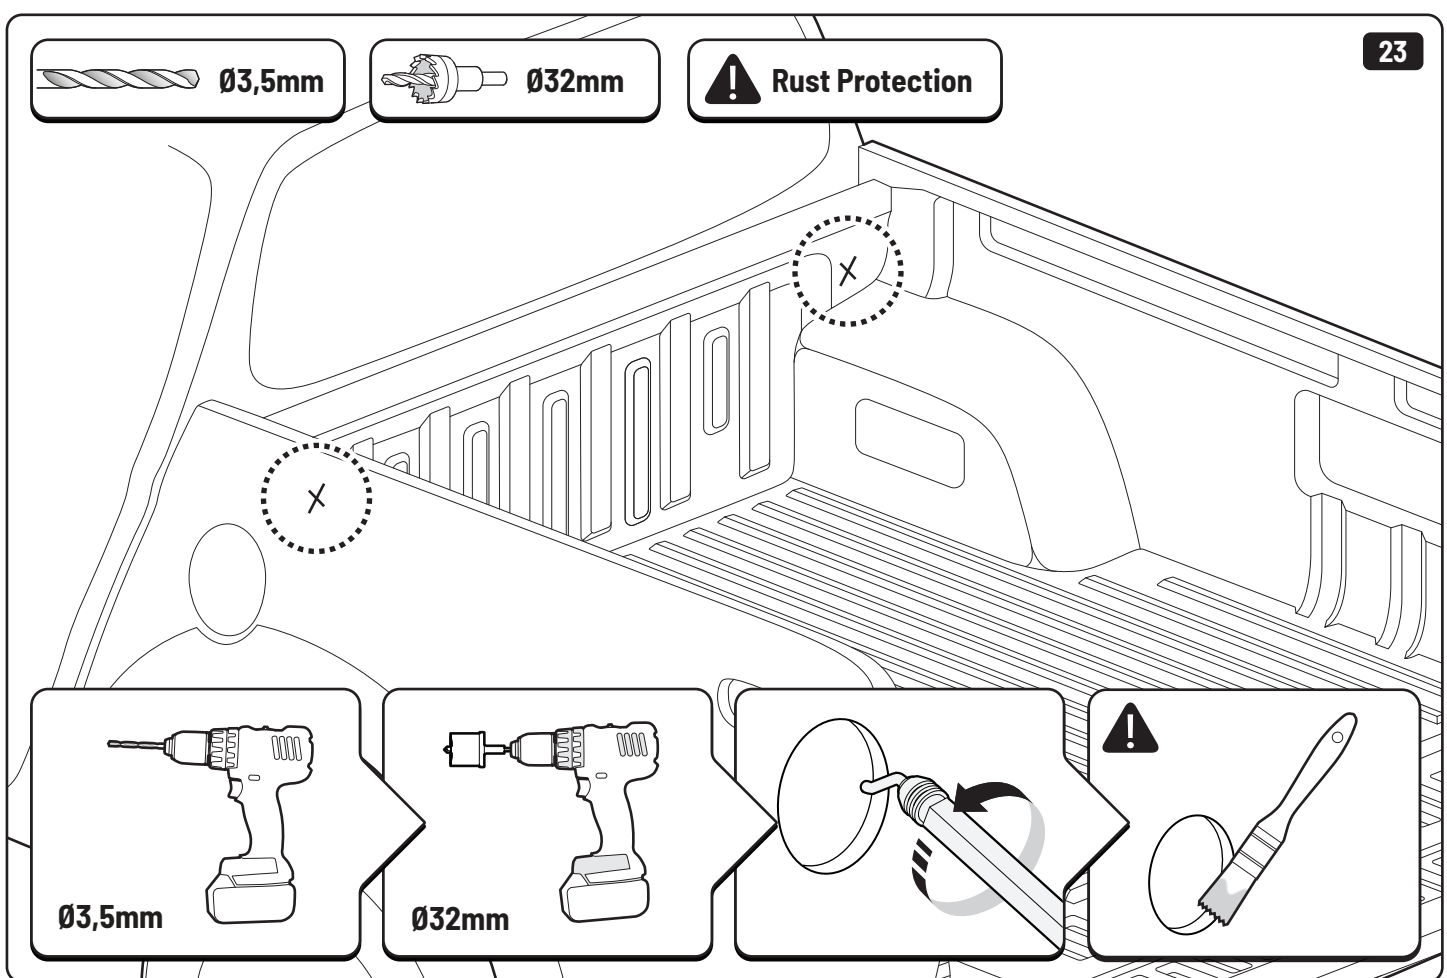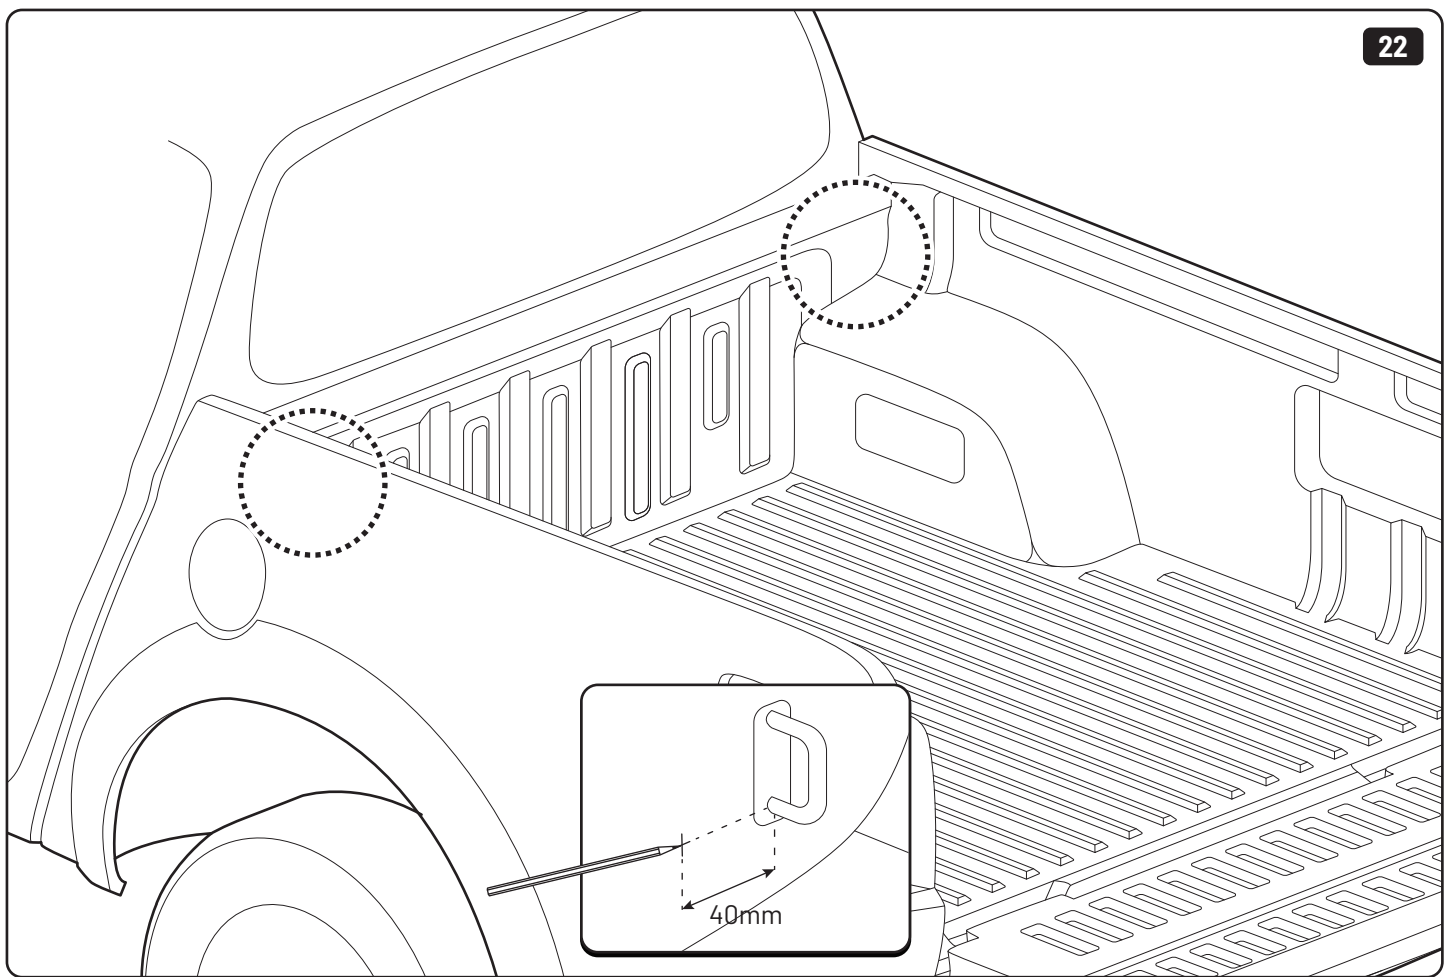


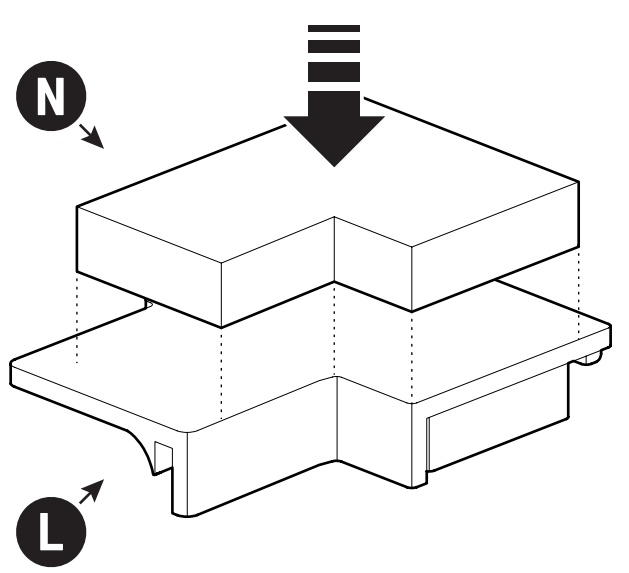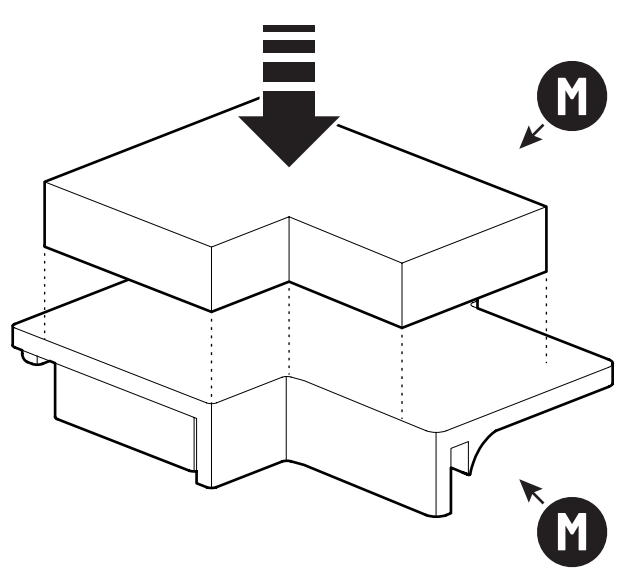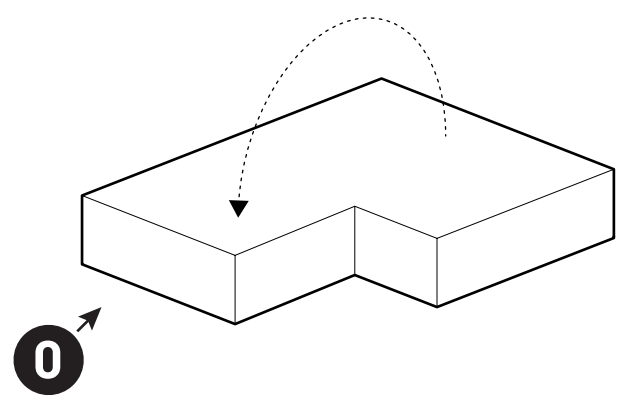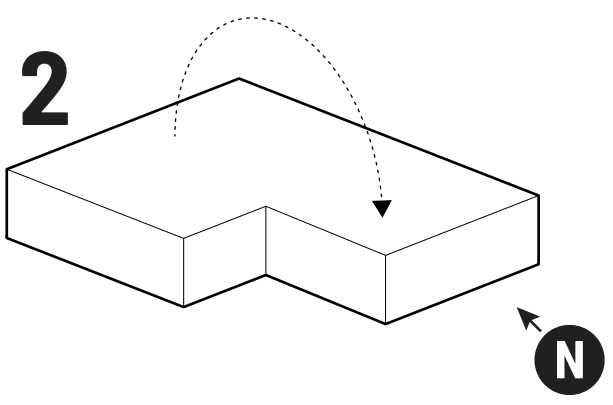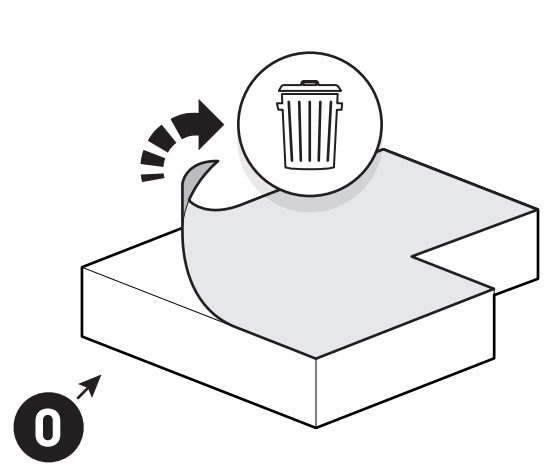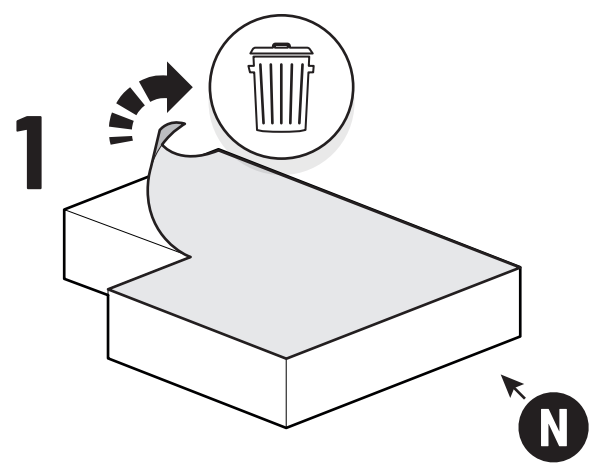

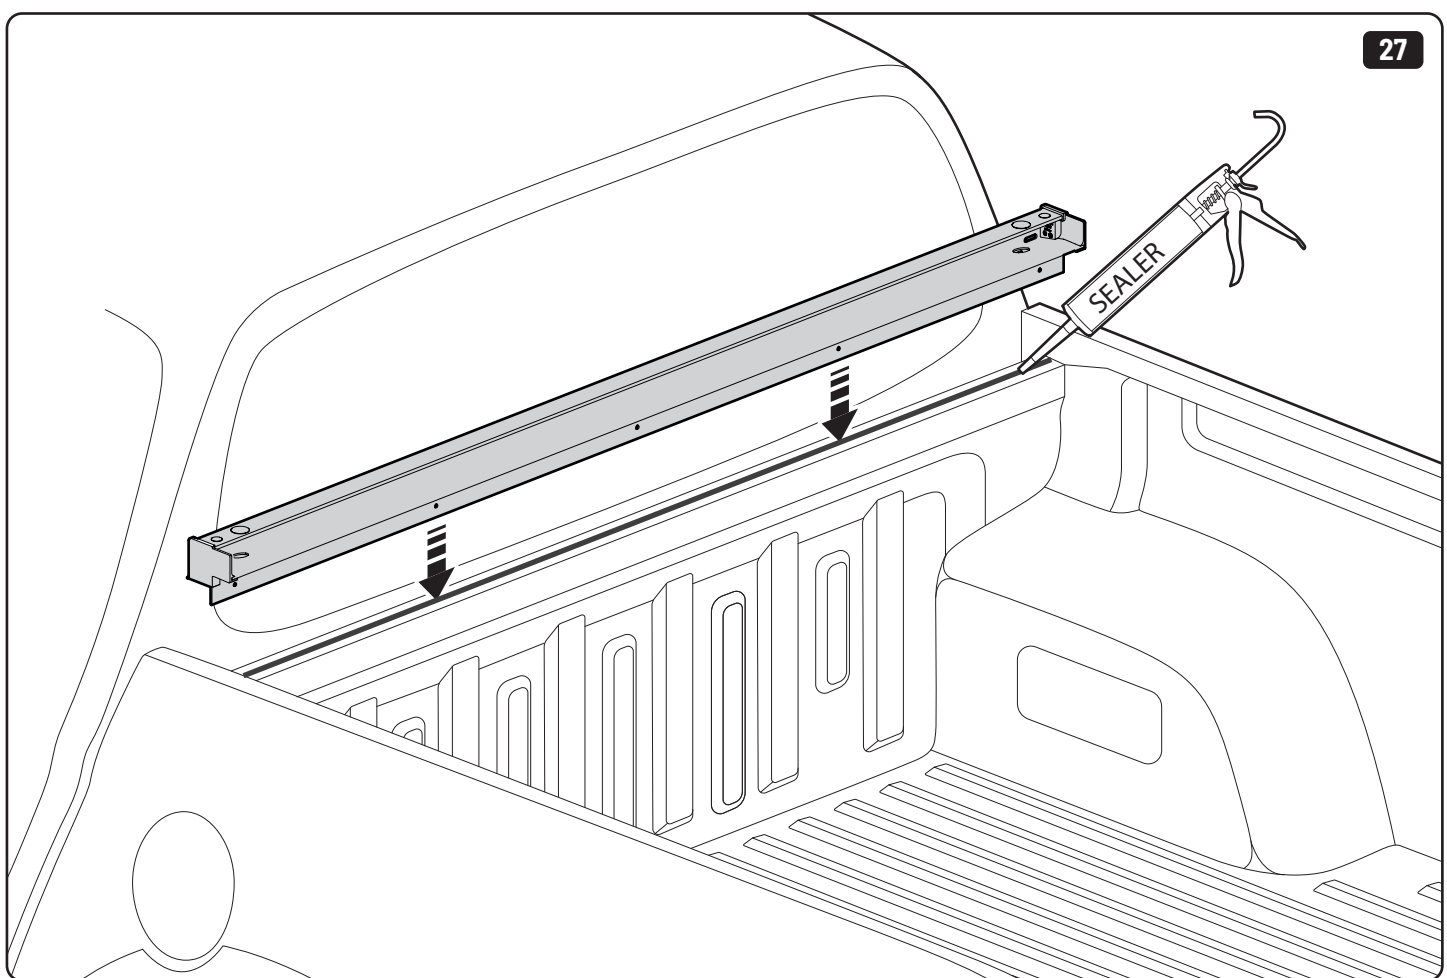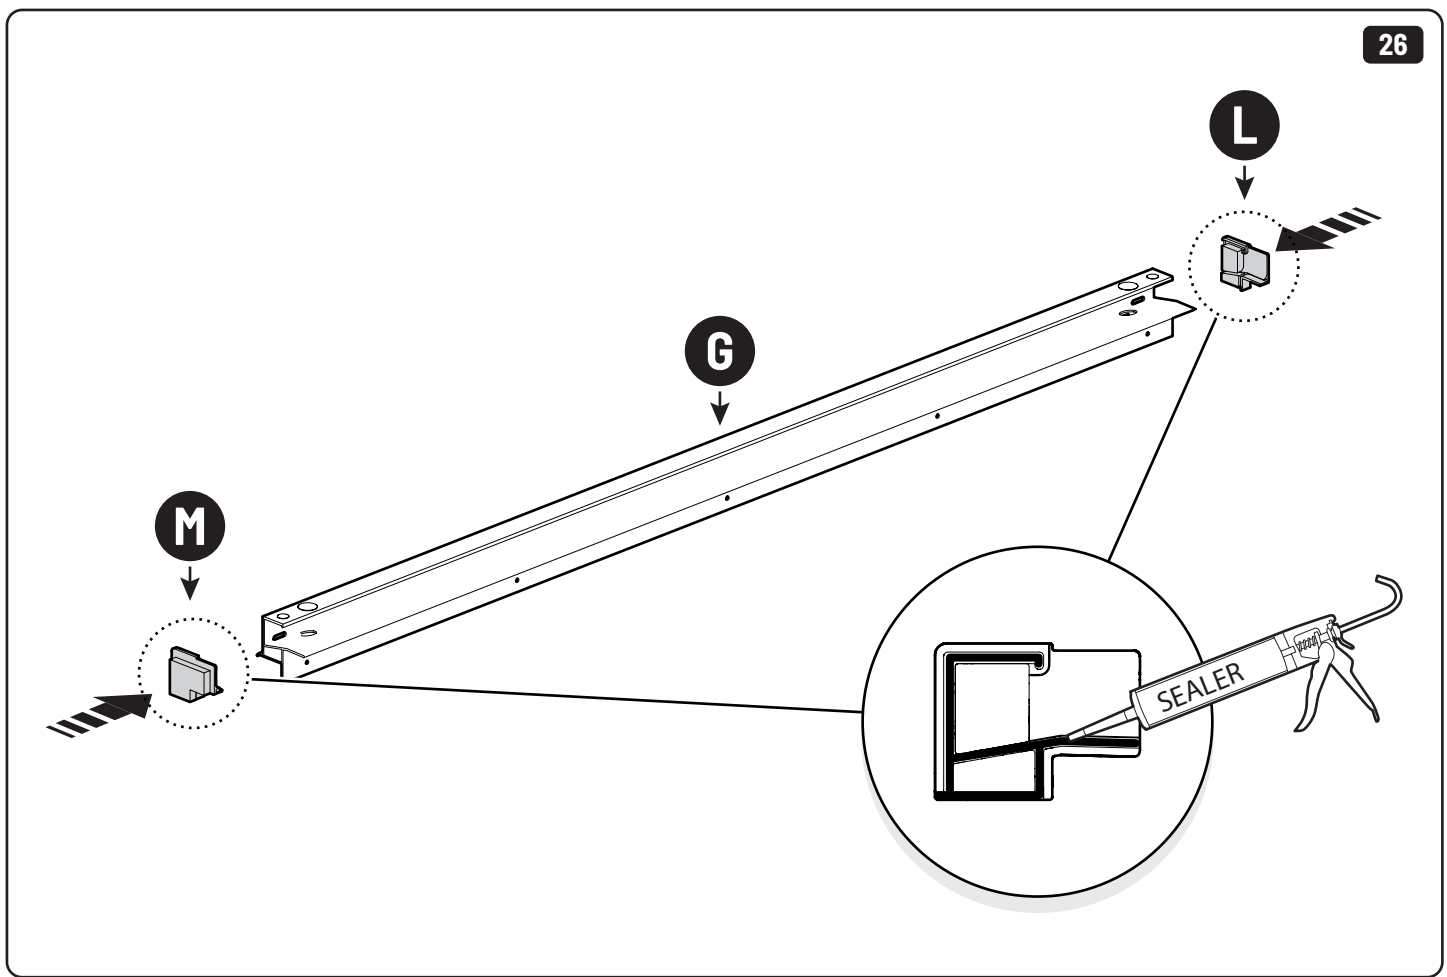


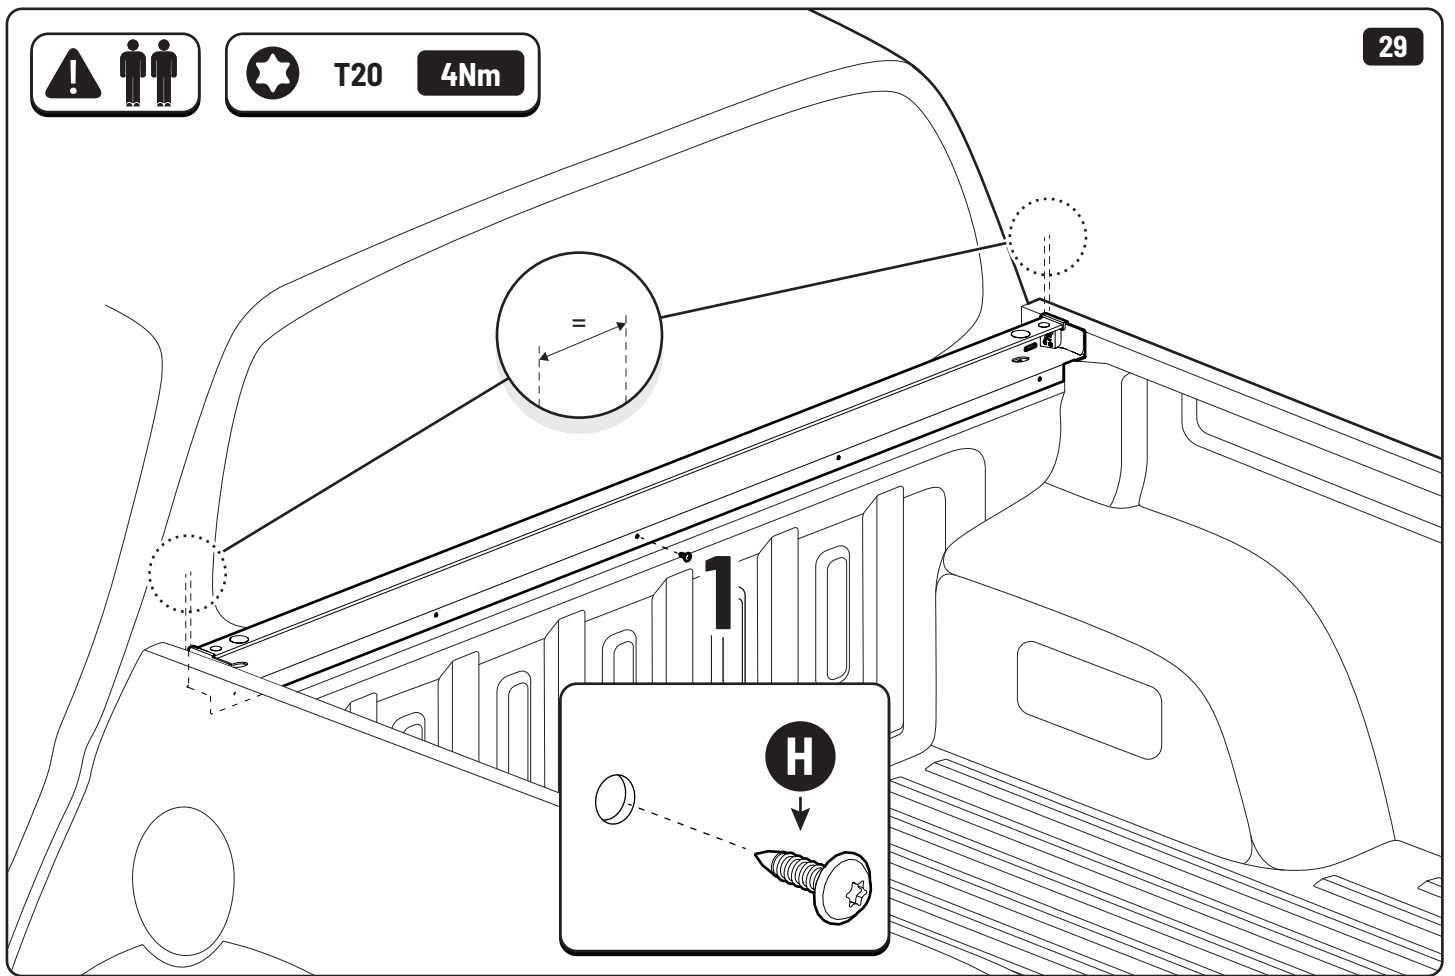
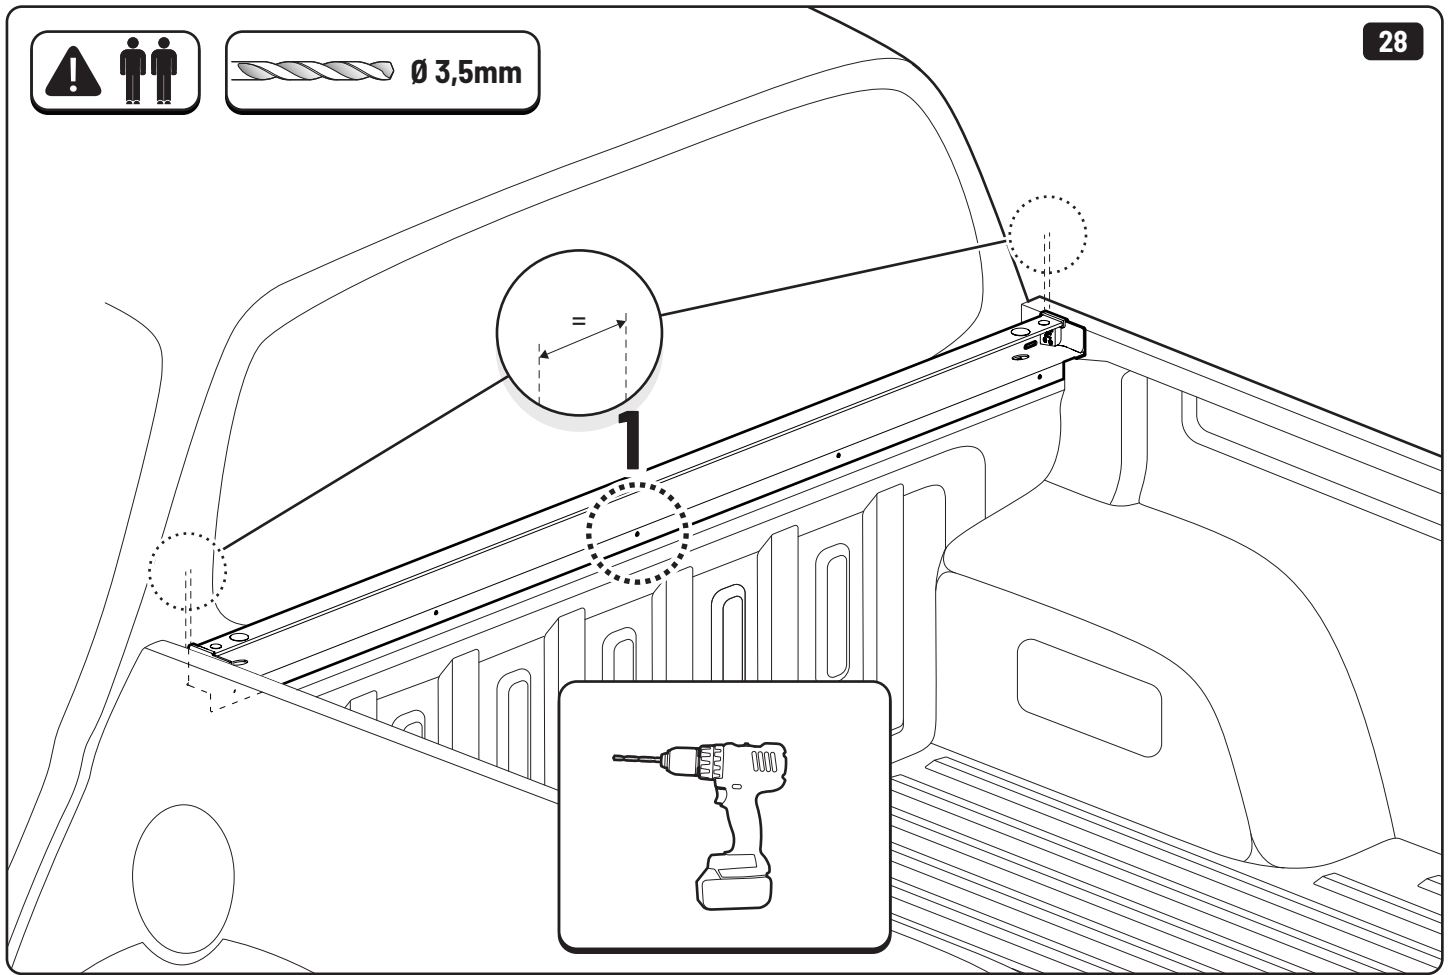




 Ø 3,5mm


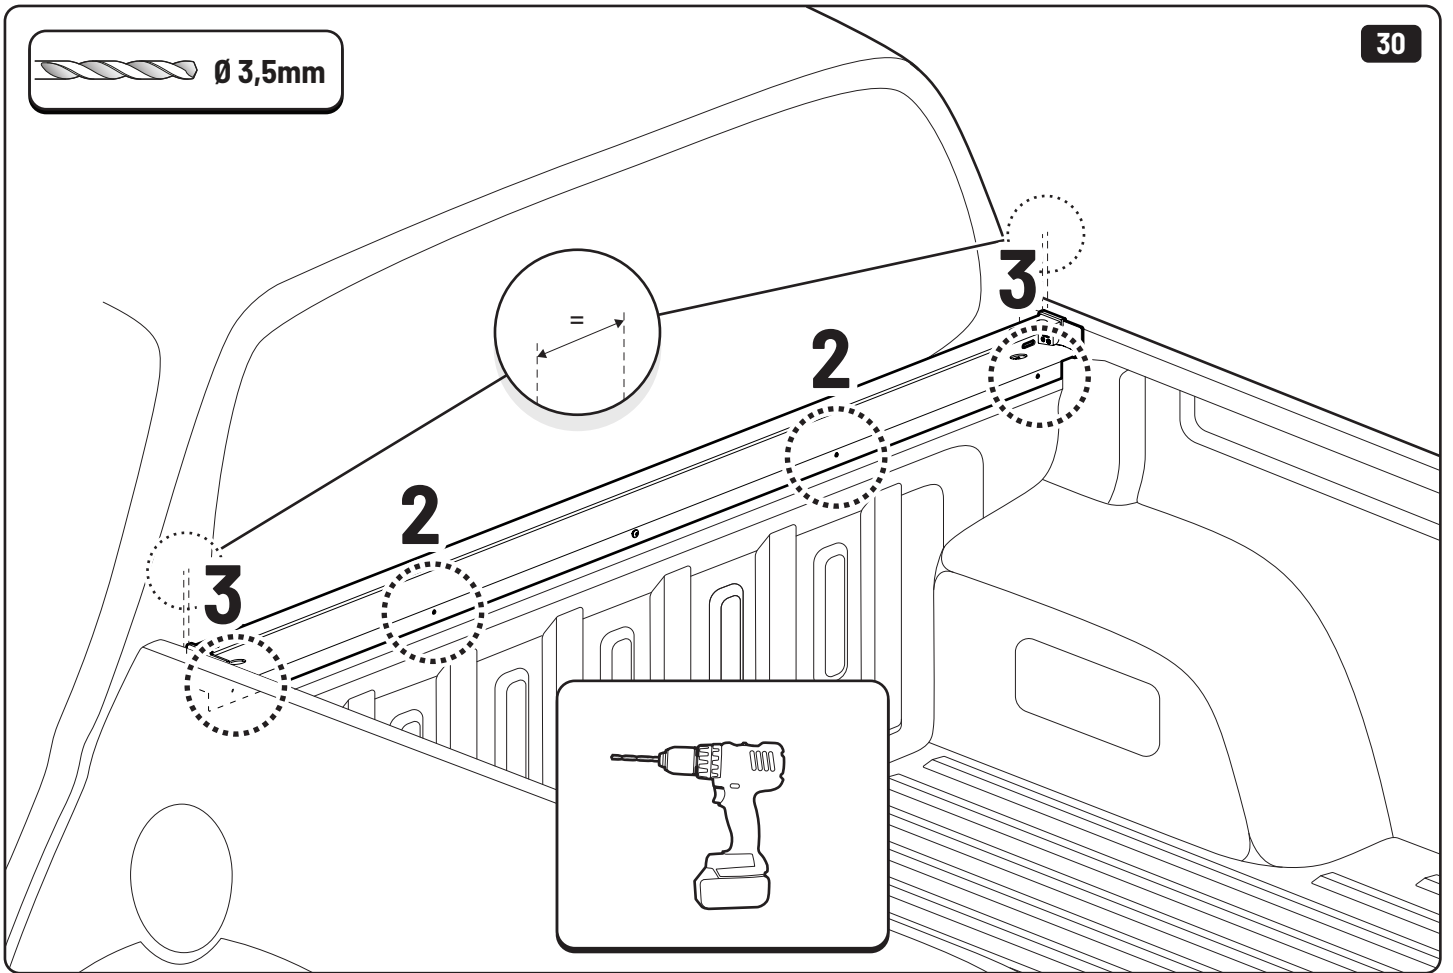


 T20 **4Nm**

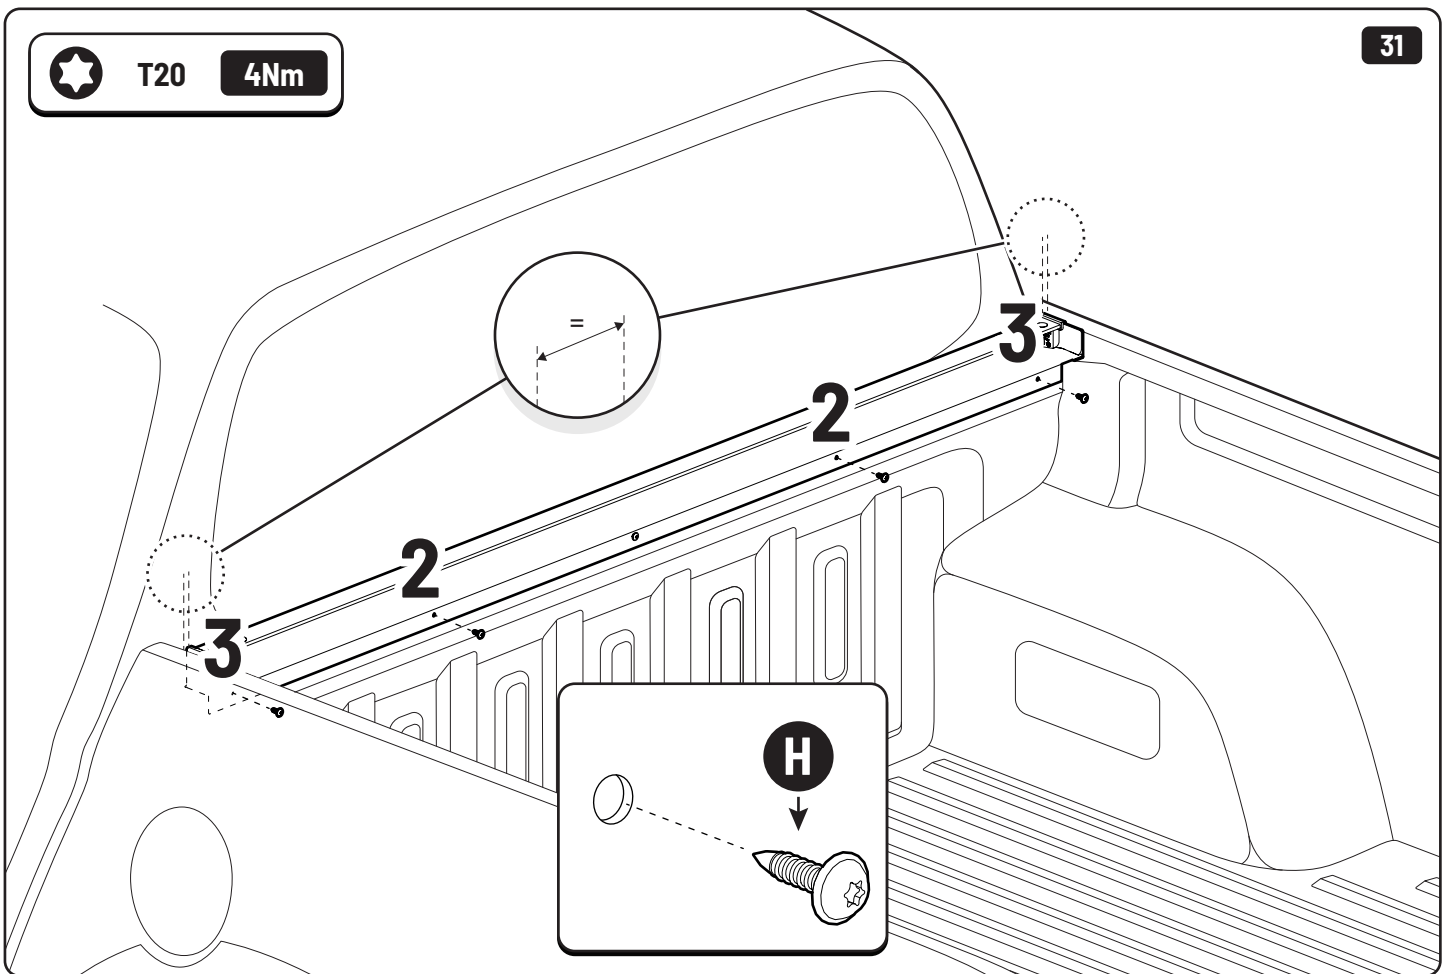



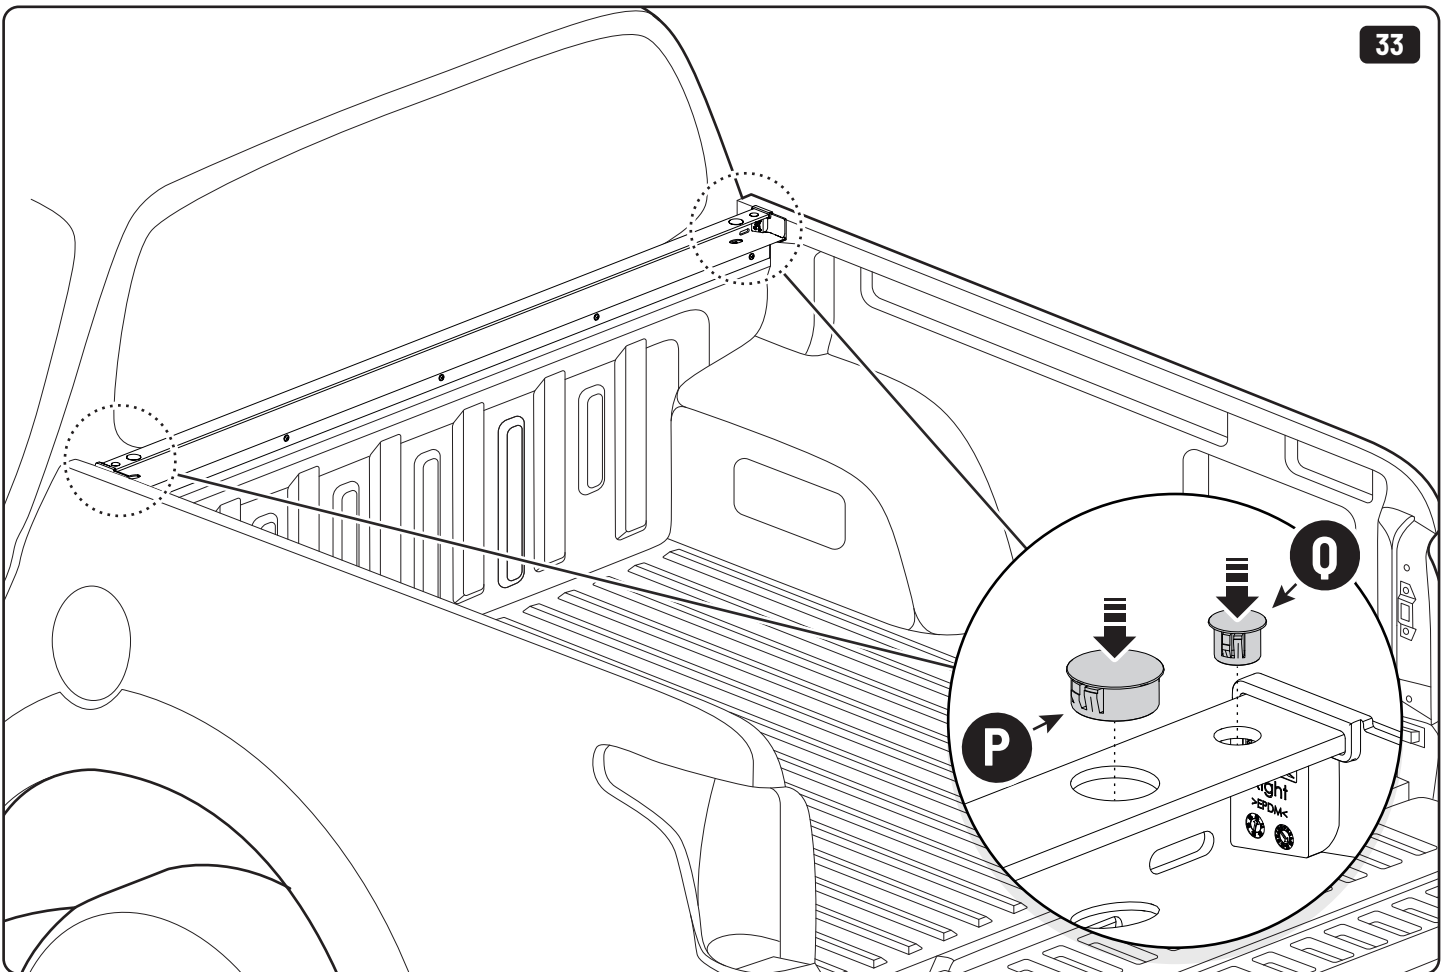
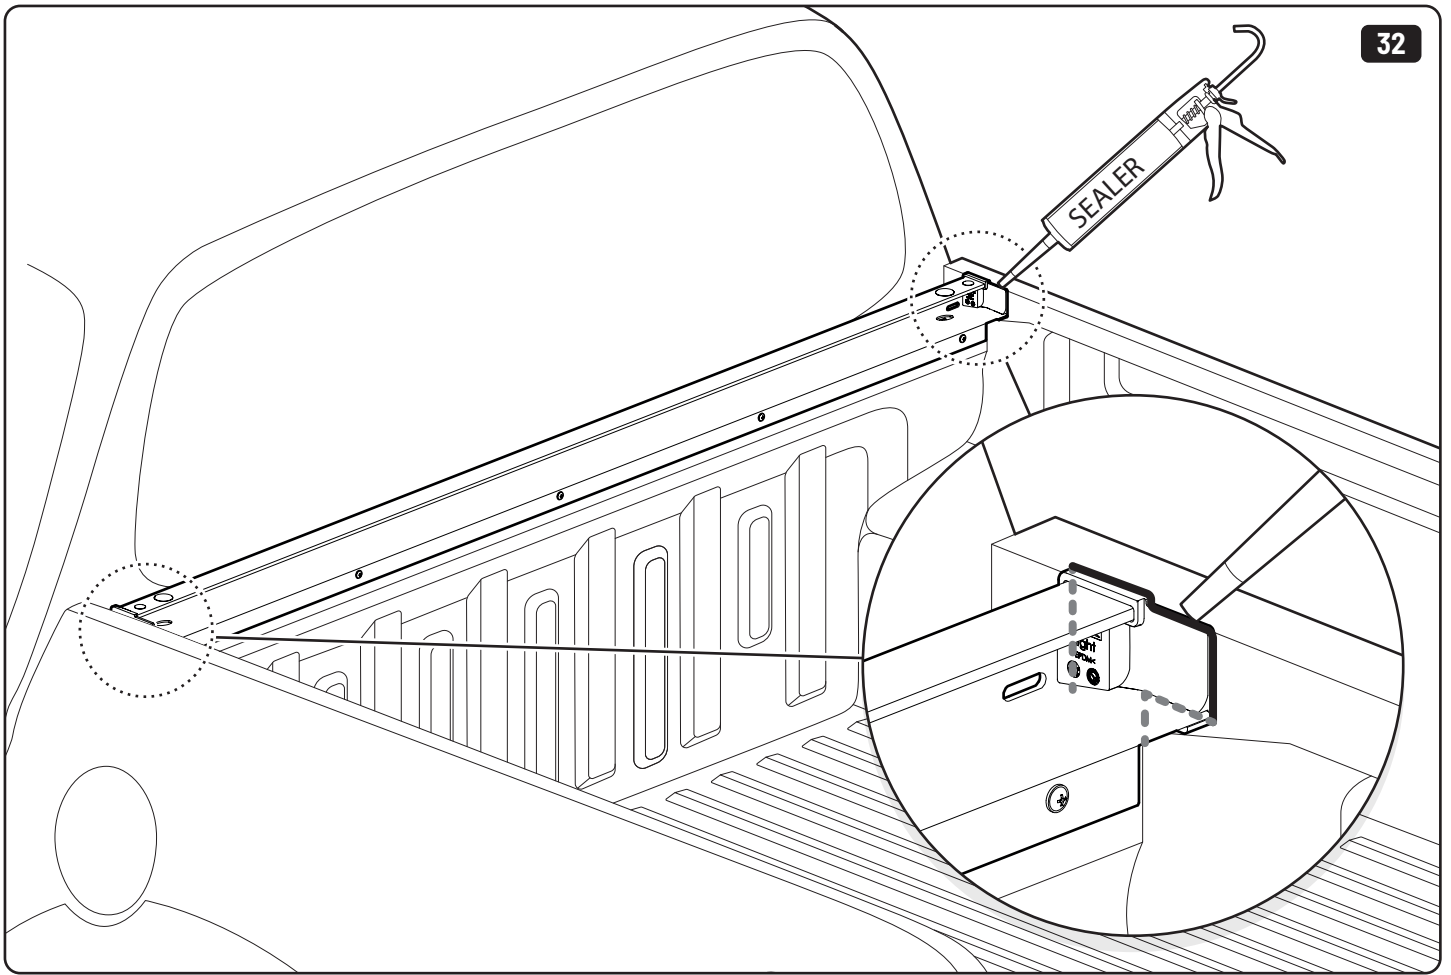


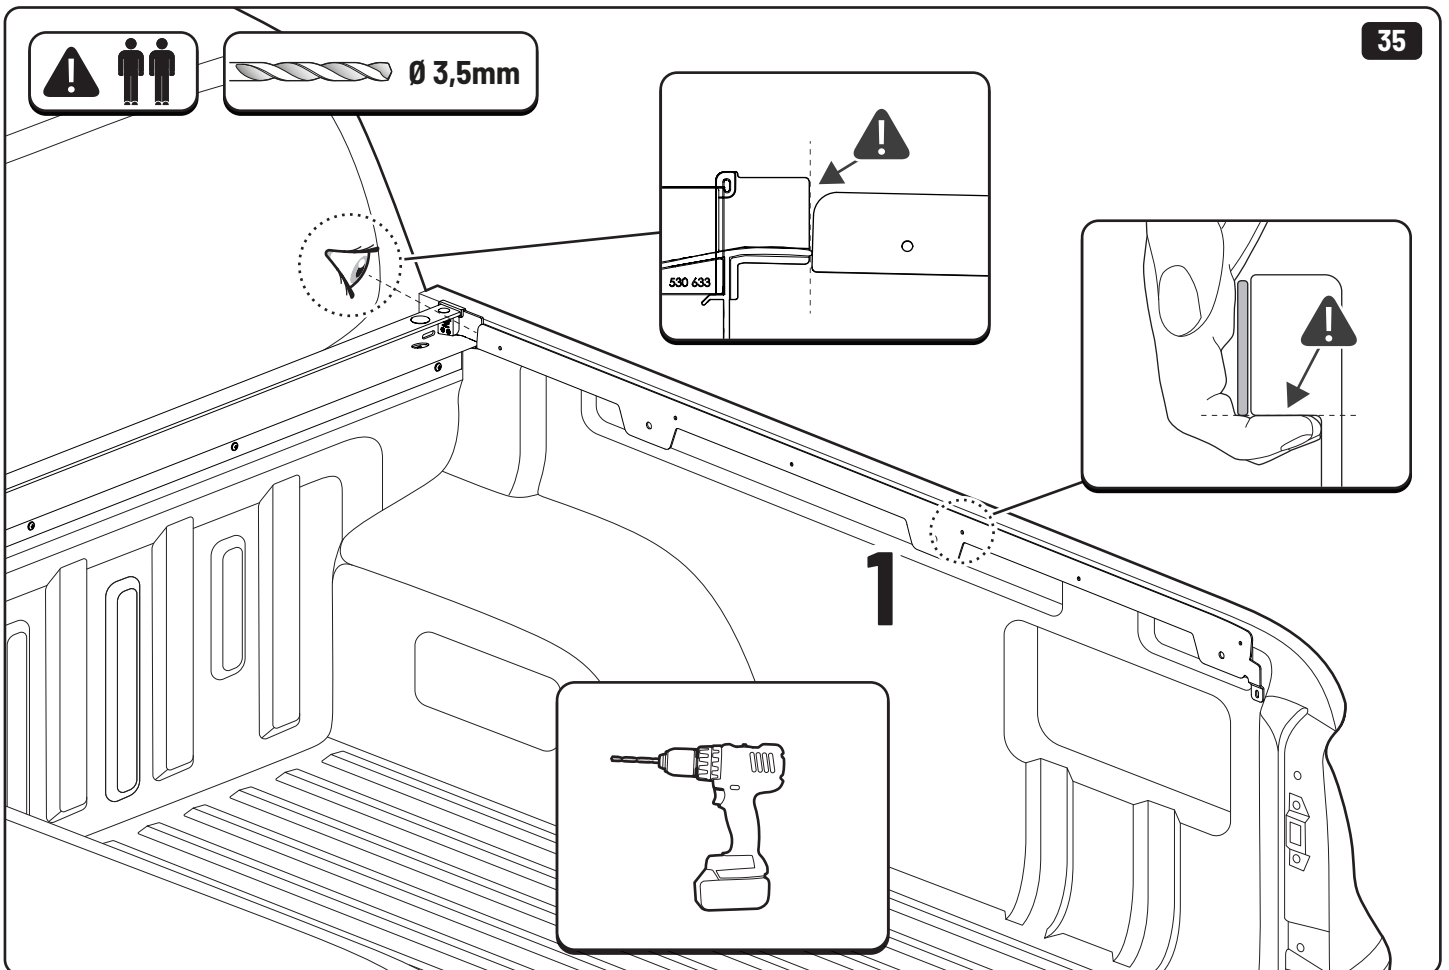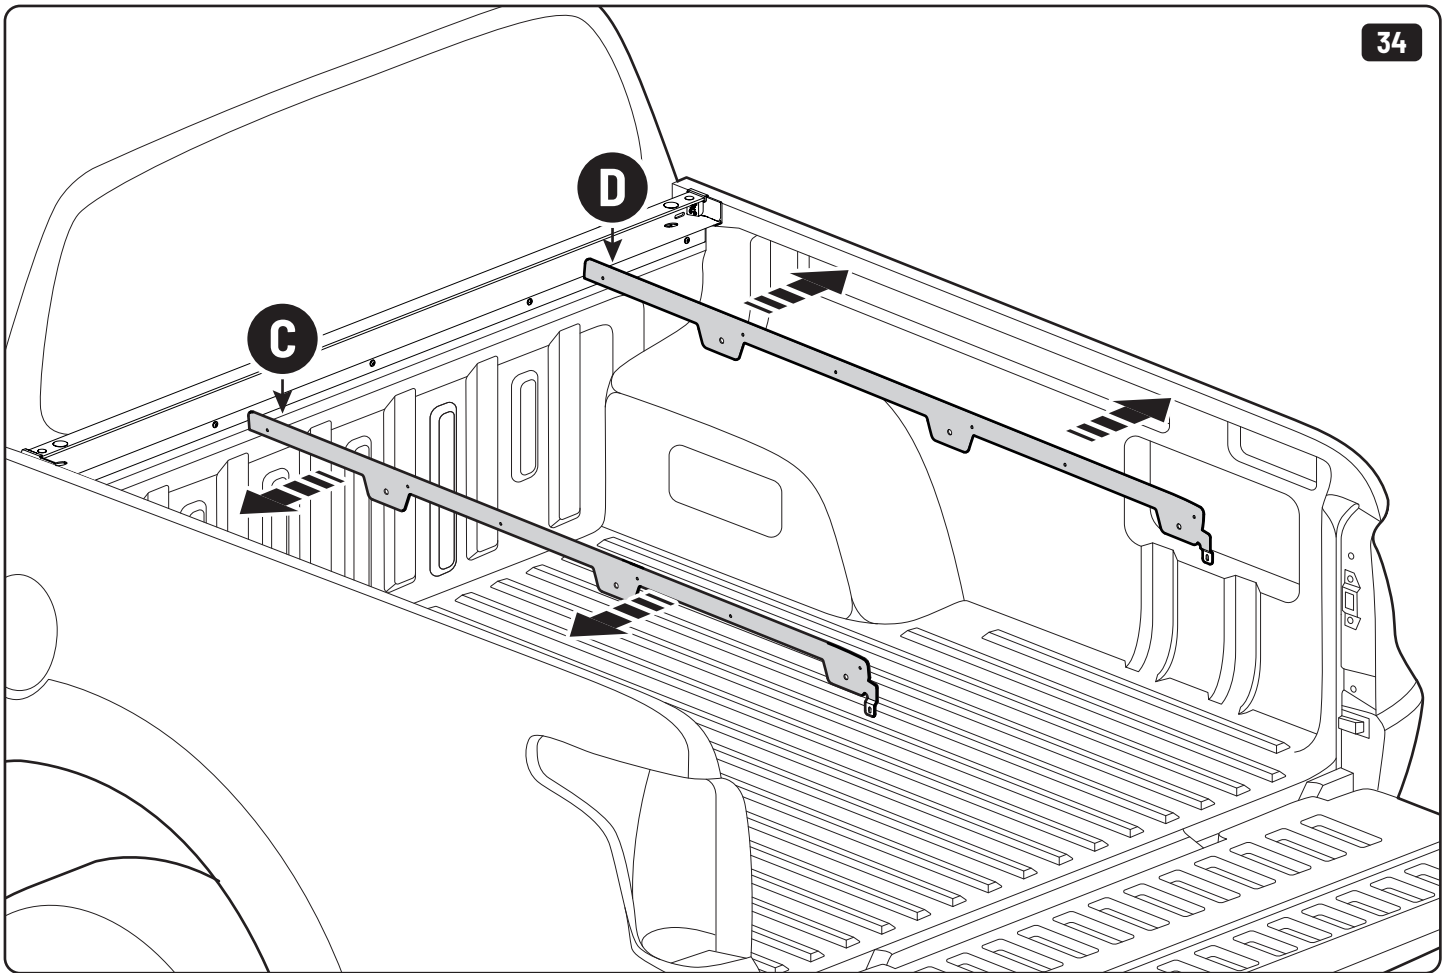

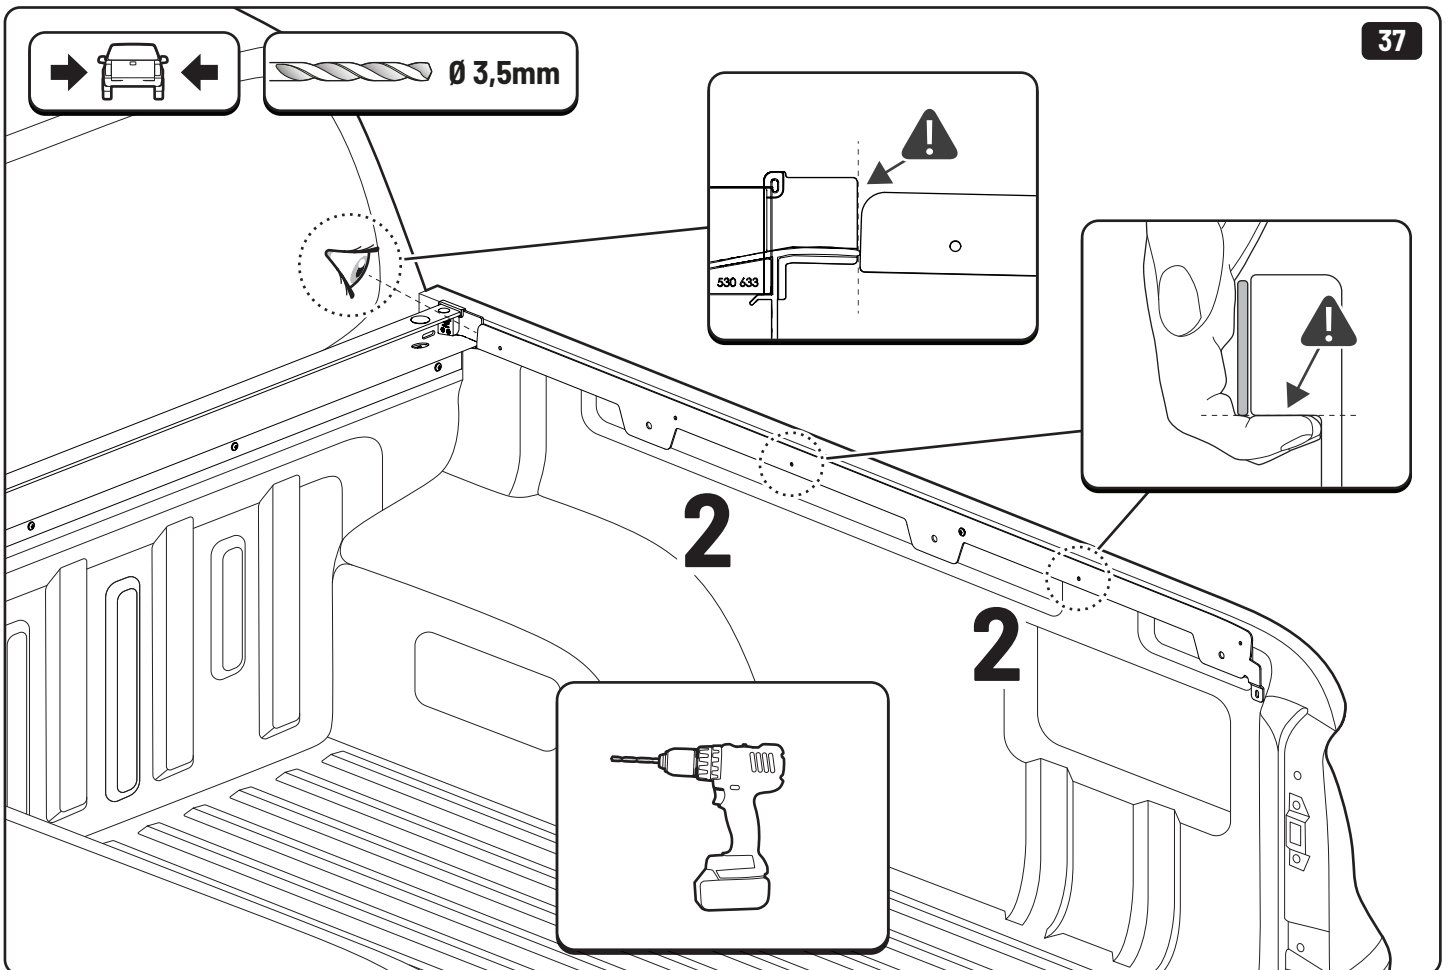
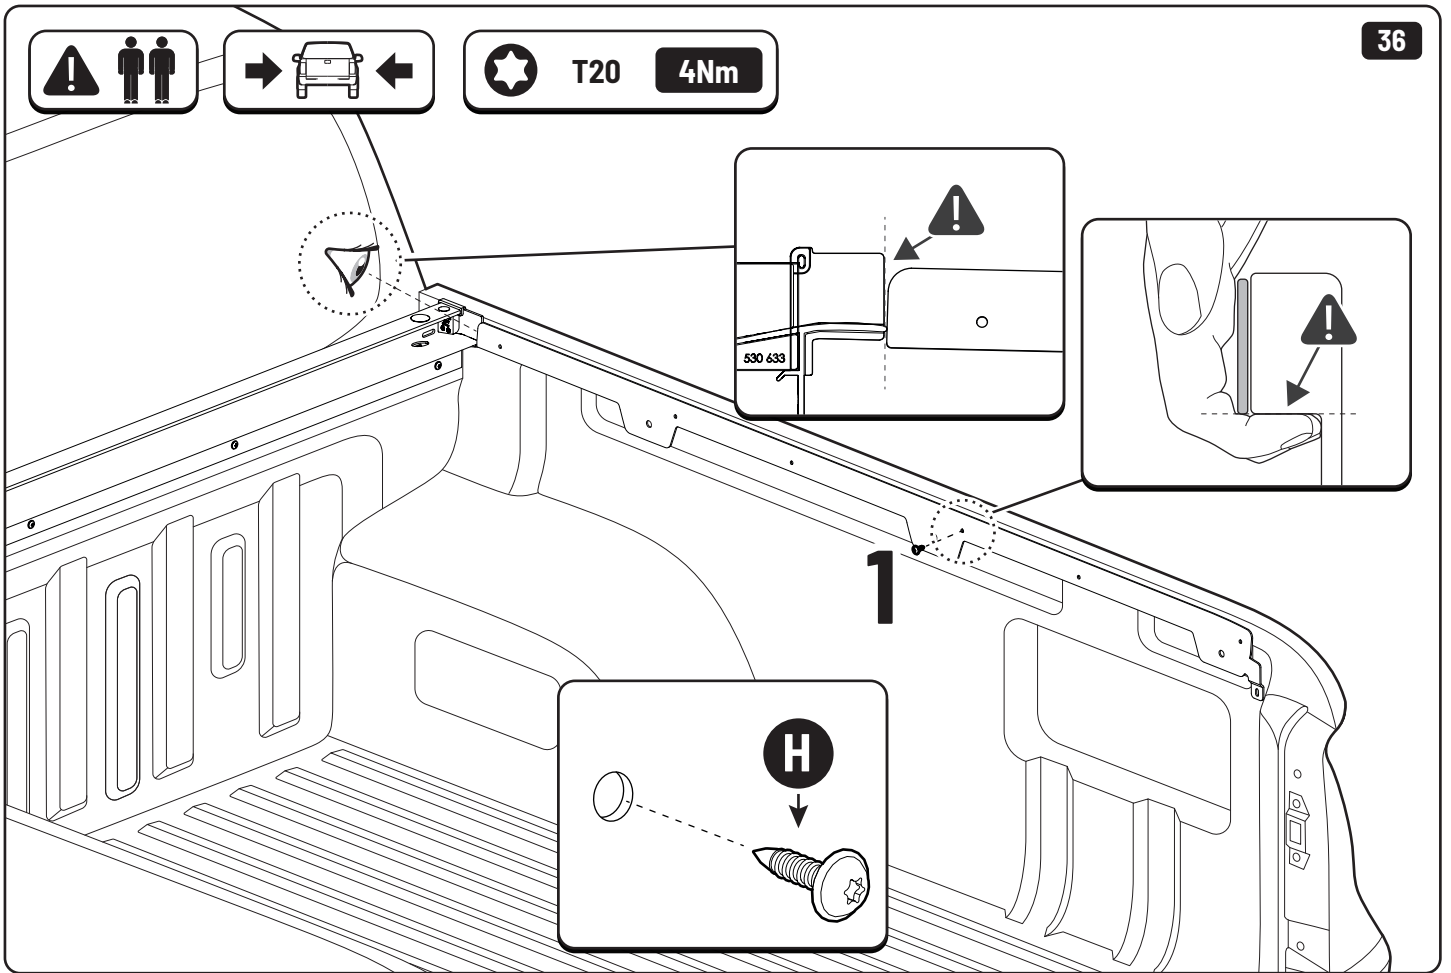







T20 4Nm

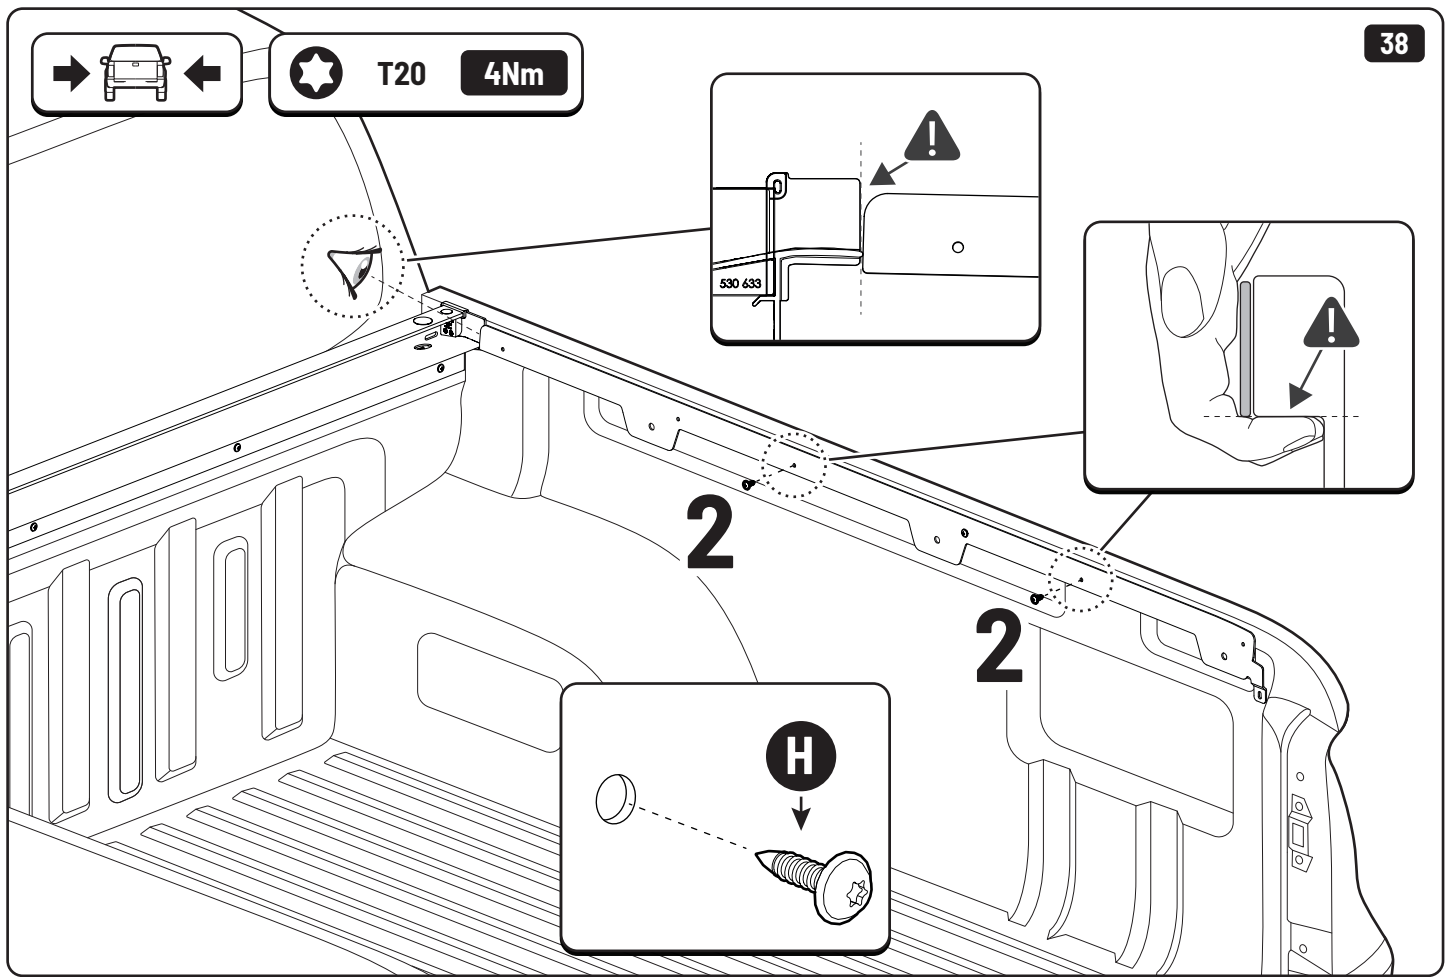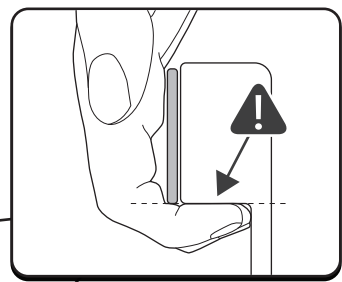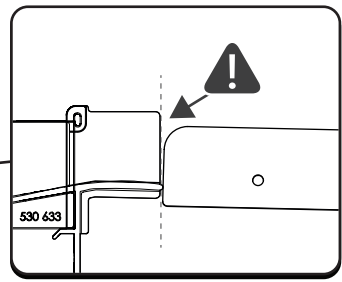


Ø 3,5mm

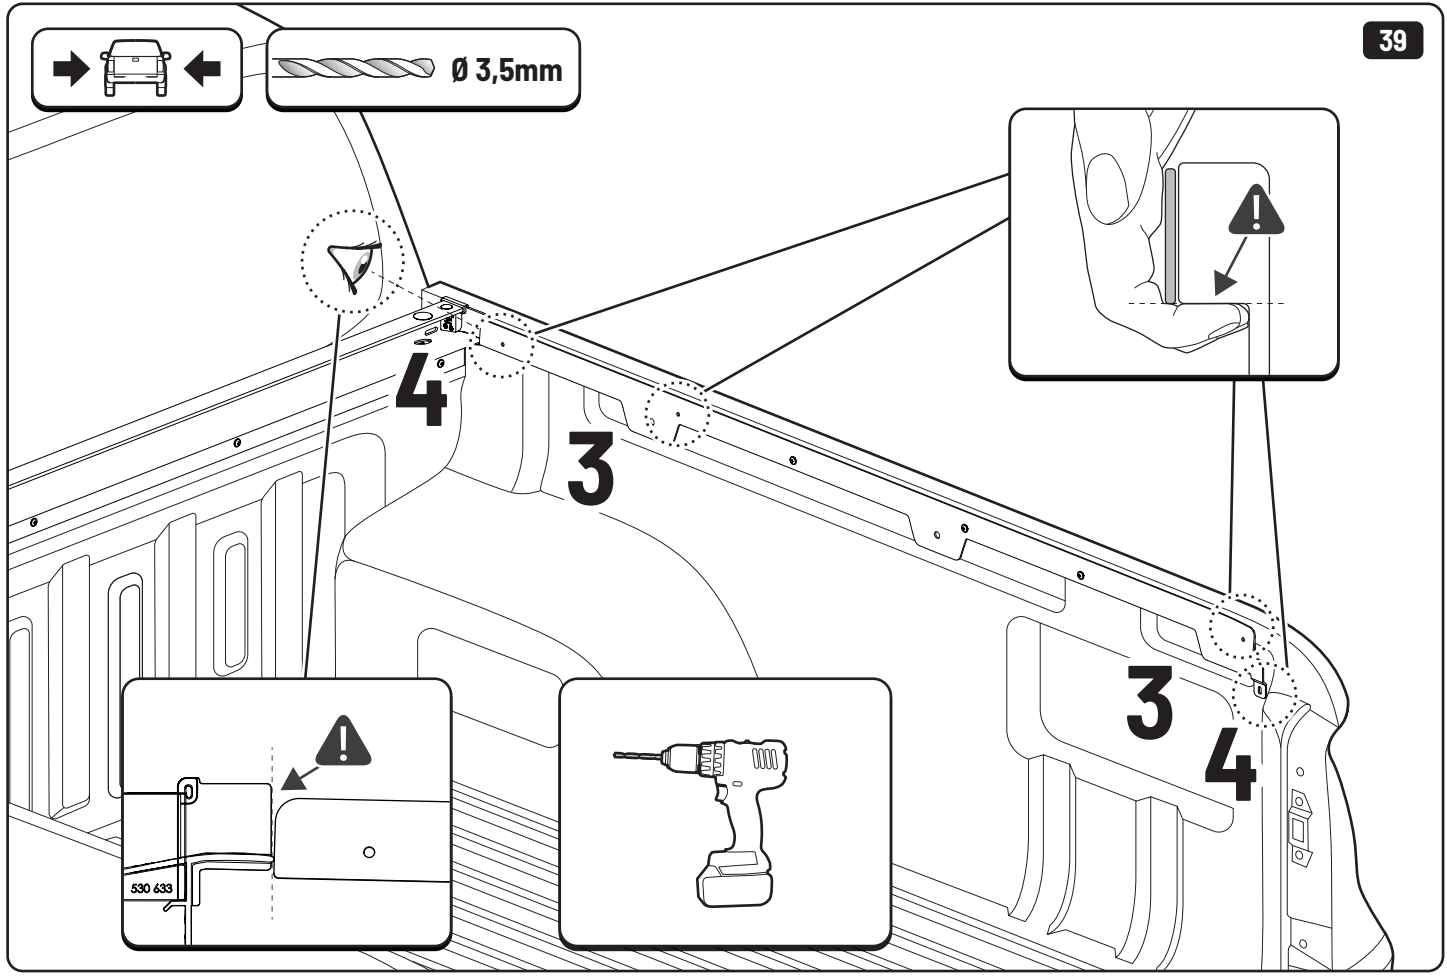
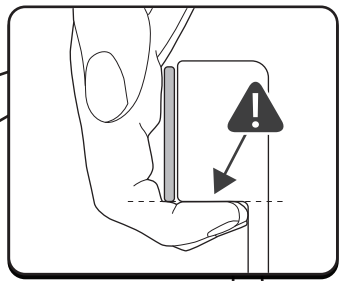



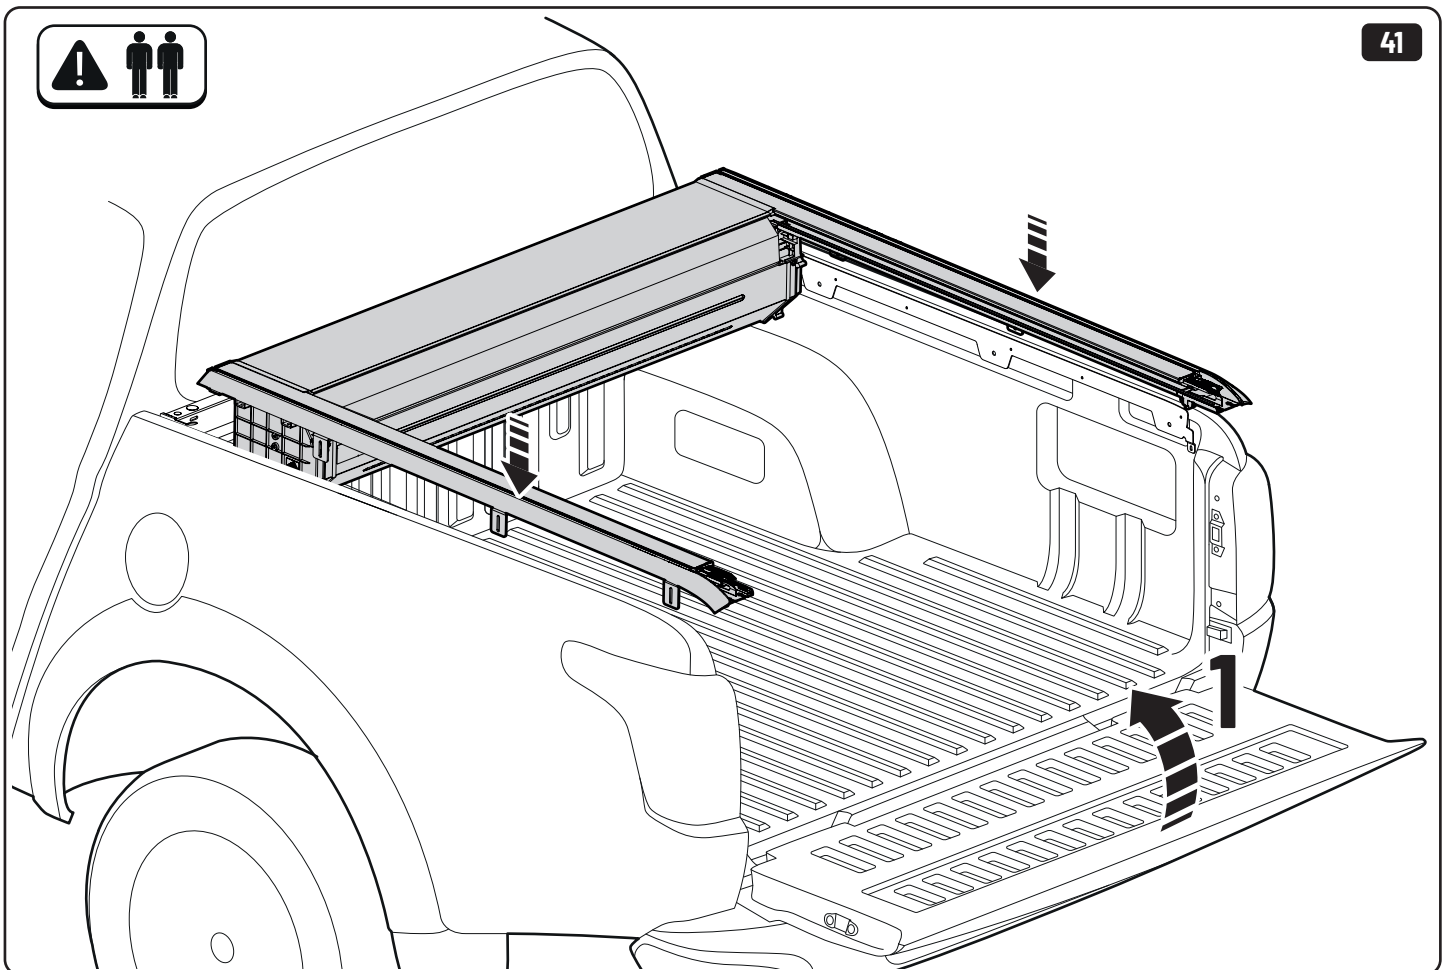
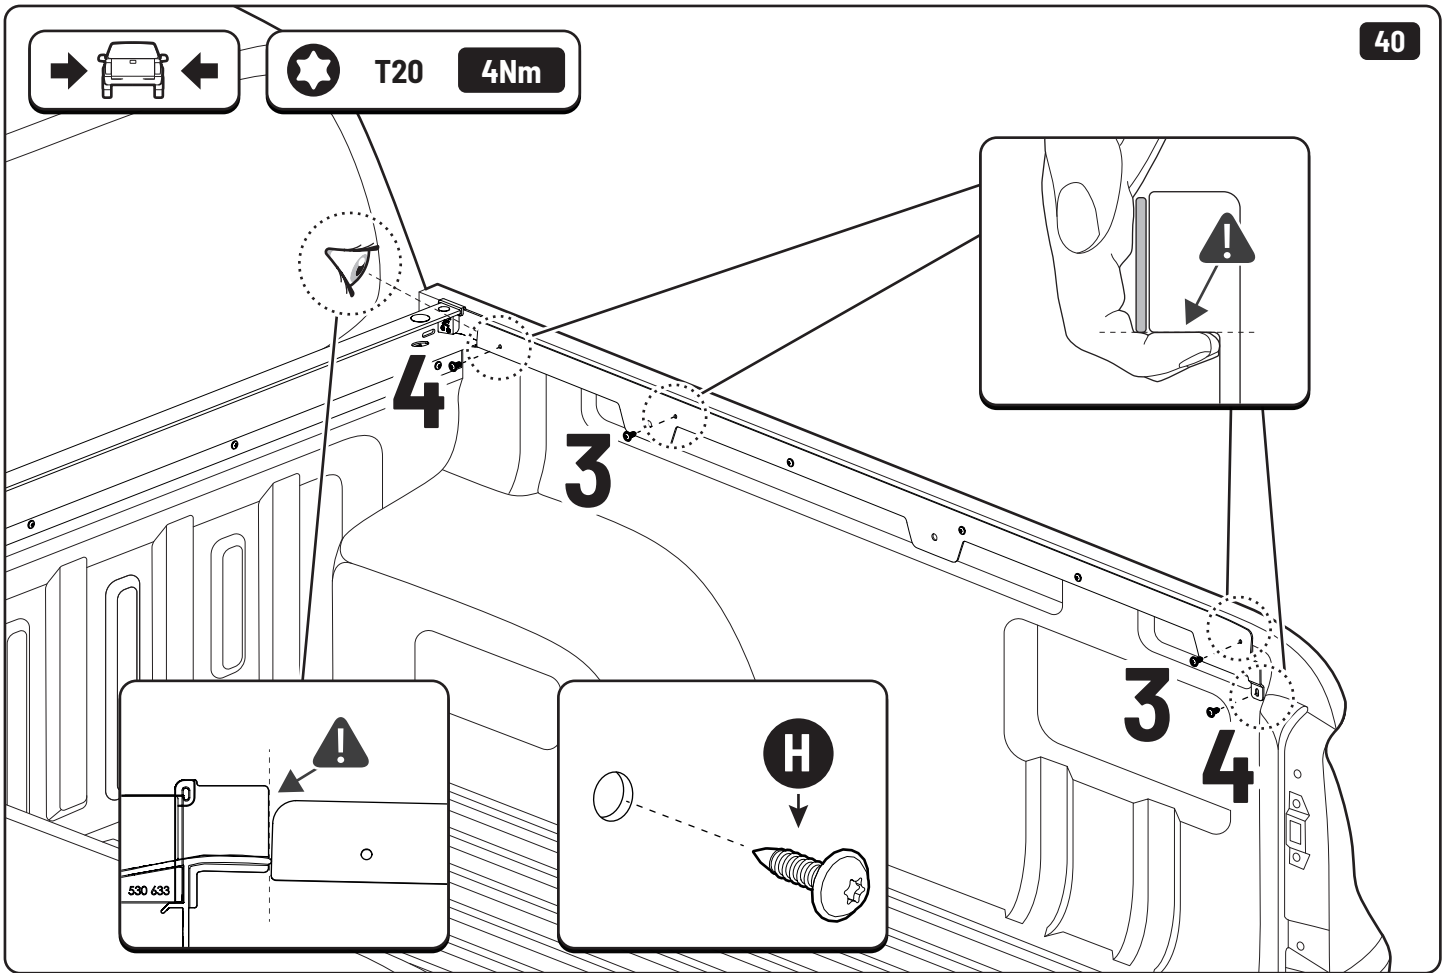


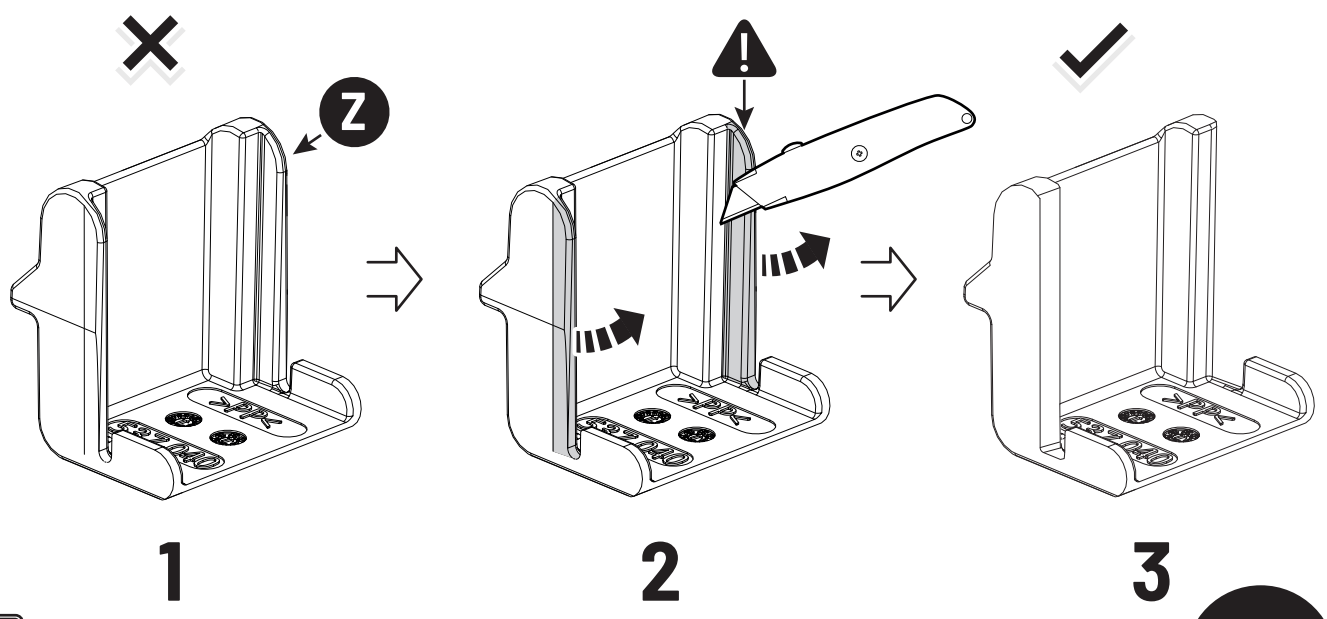


x2


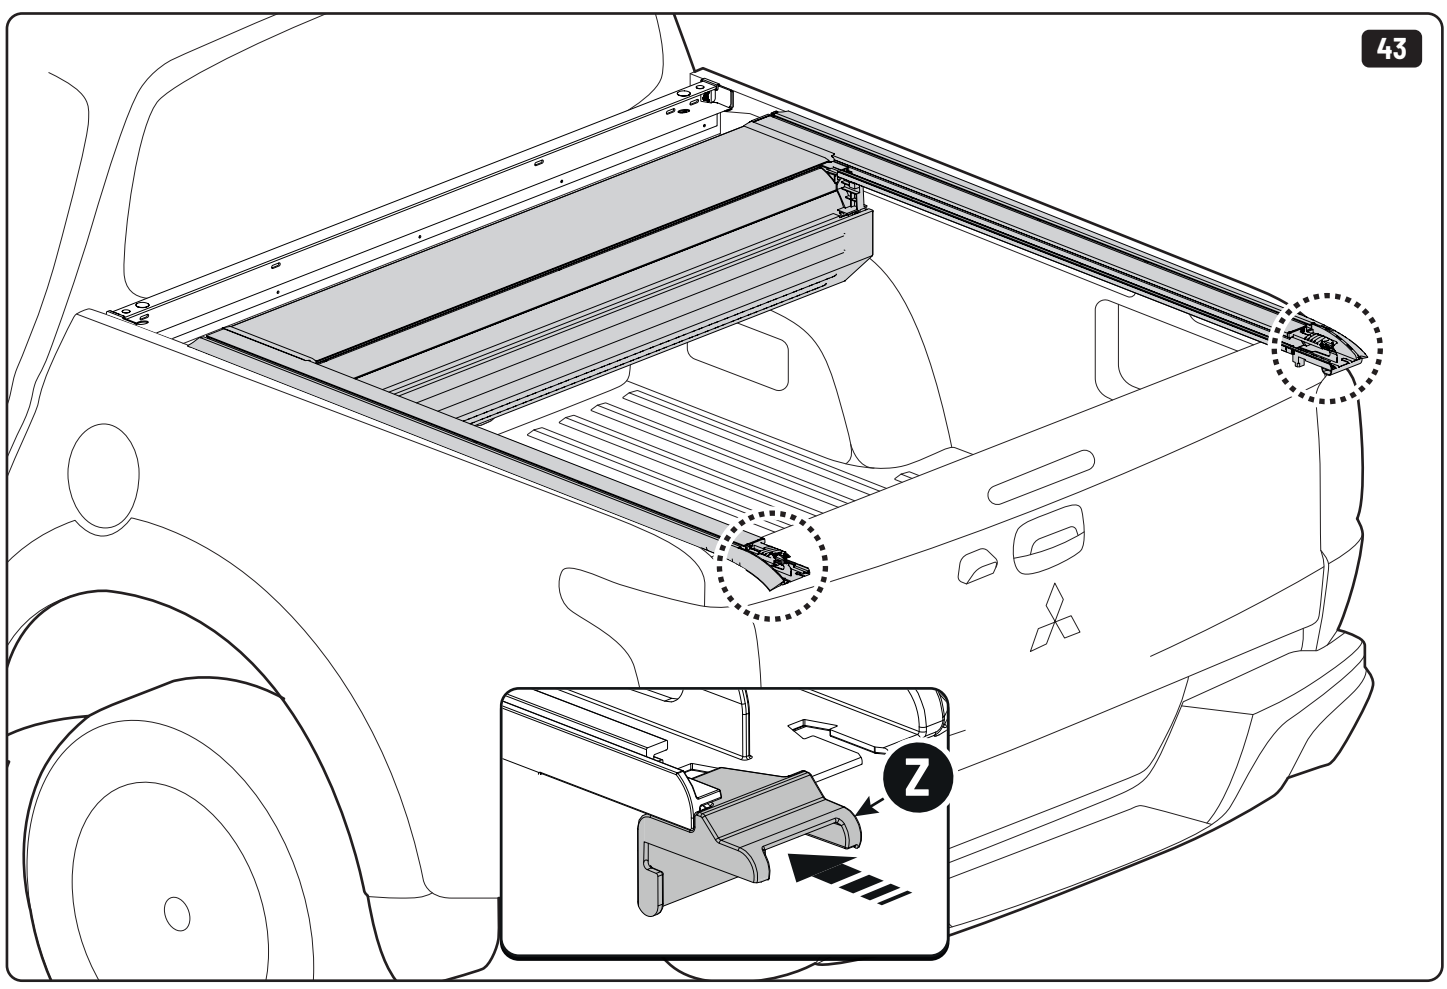


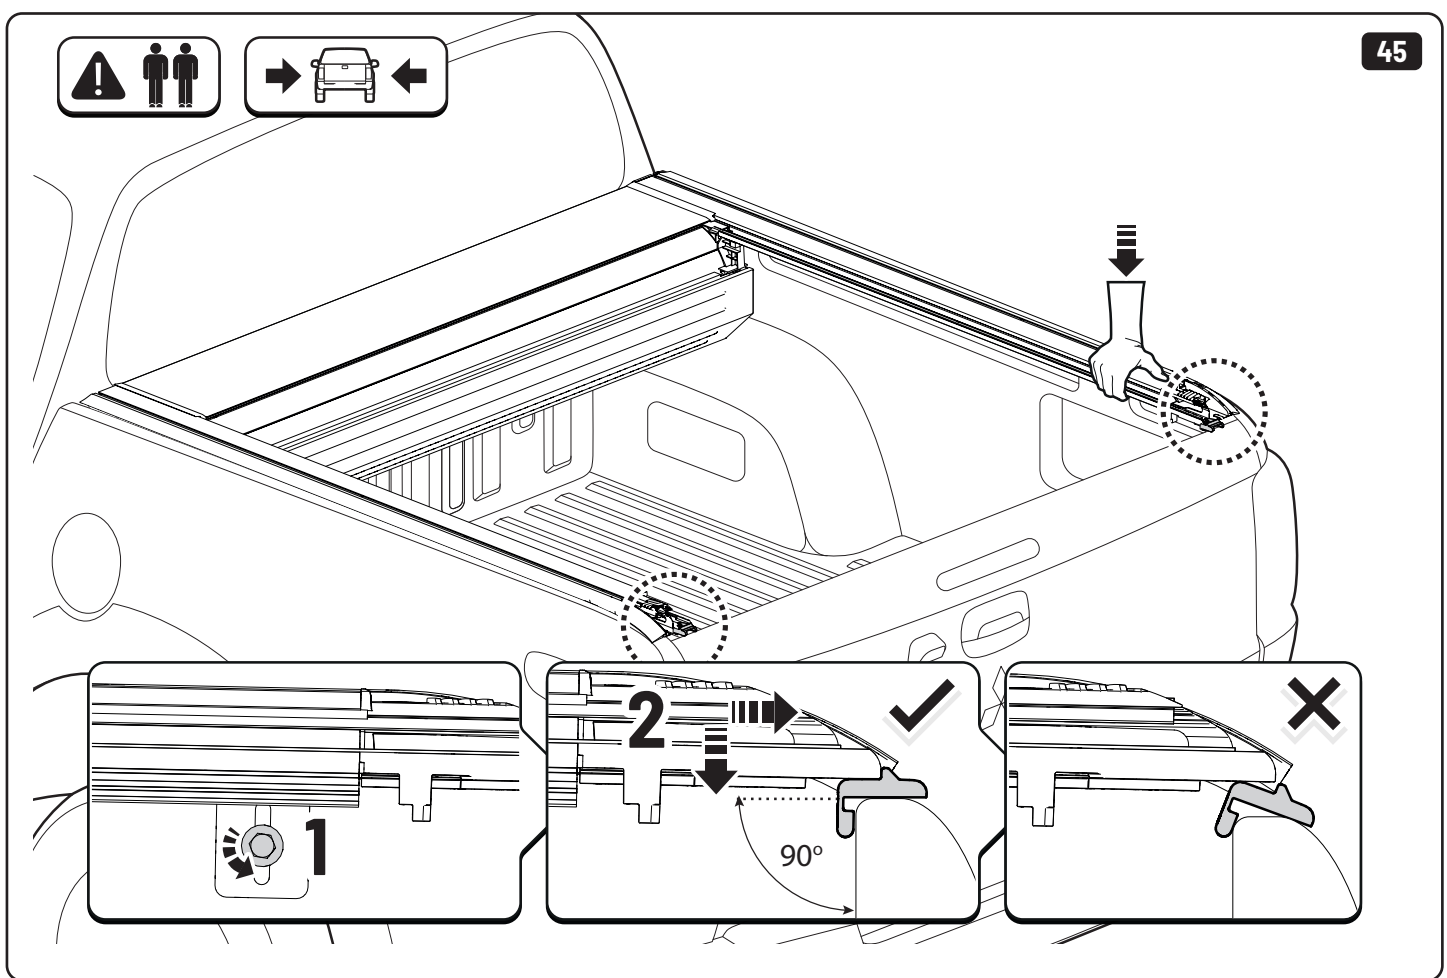
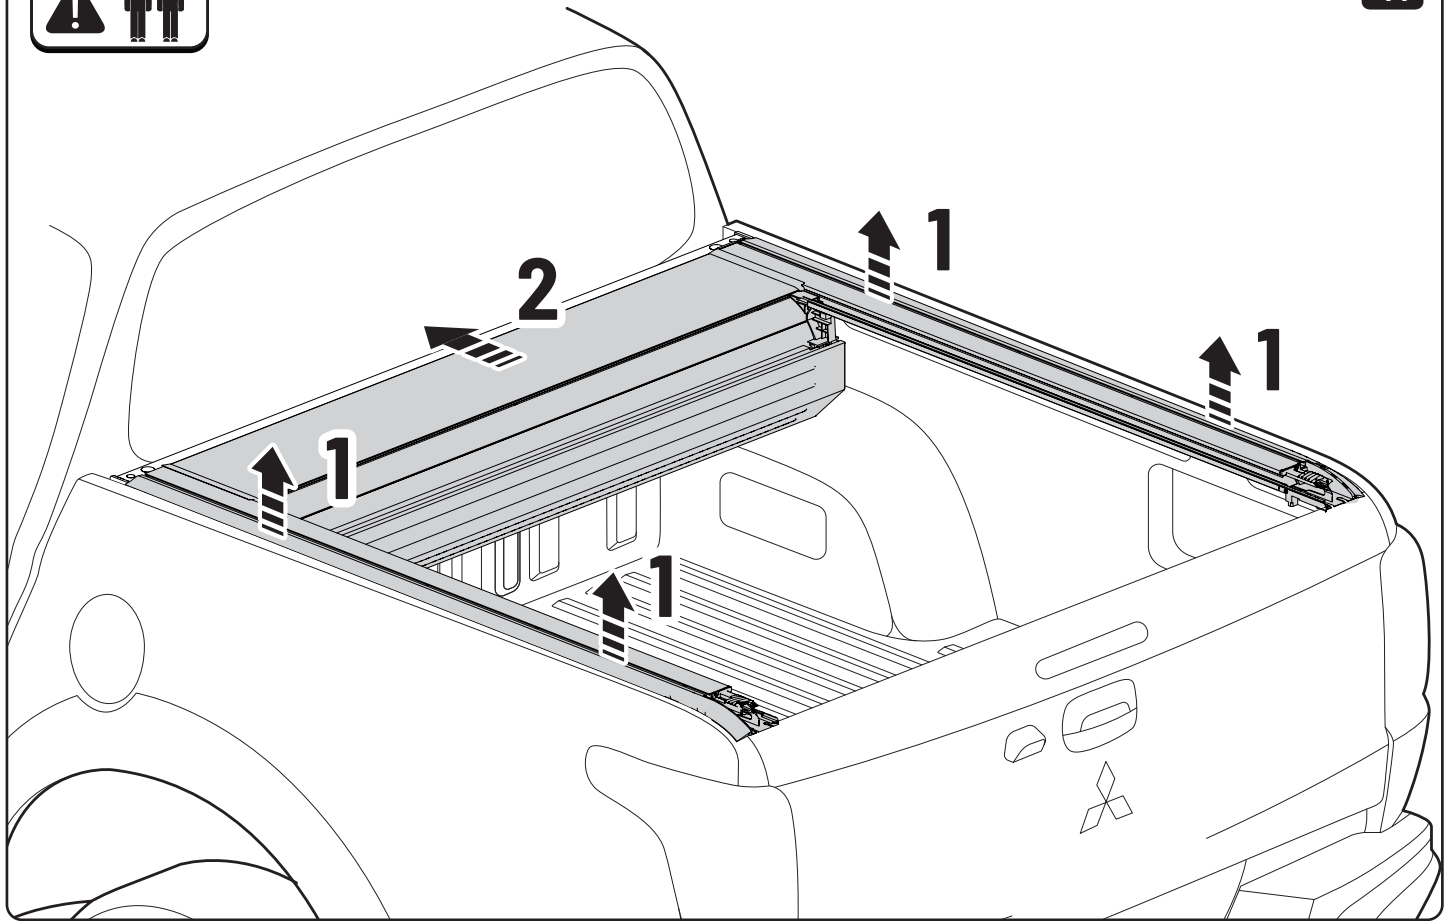


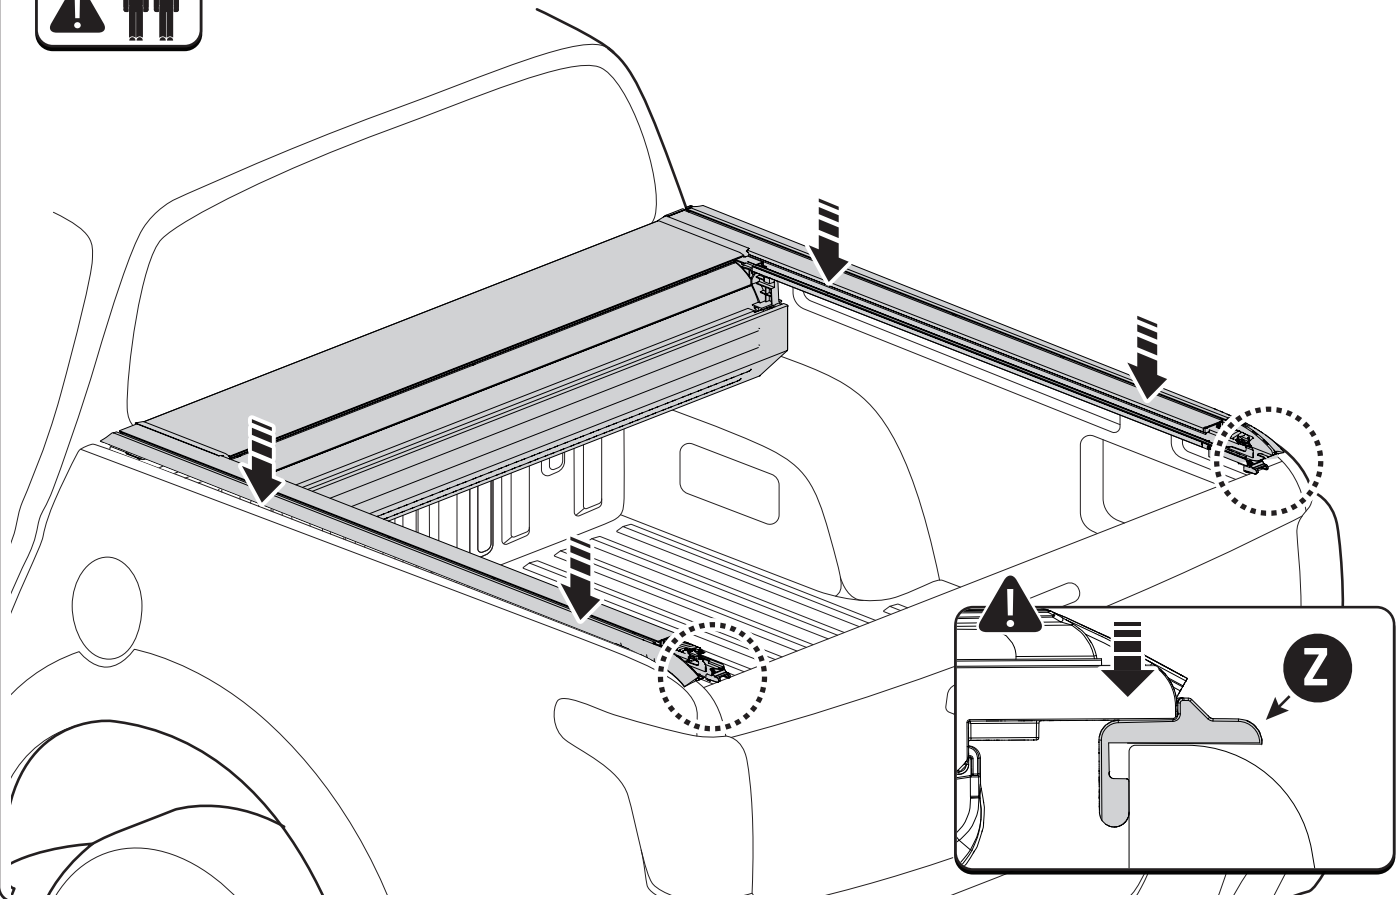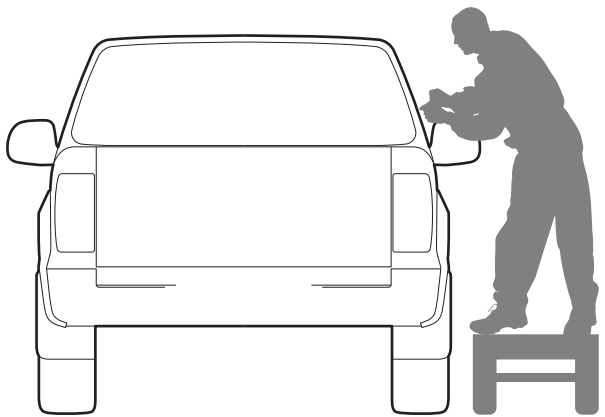
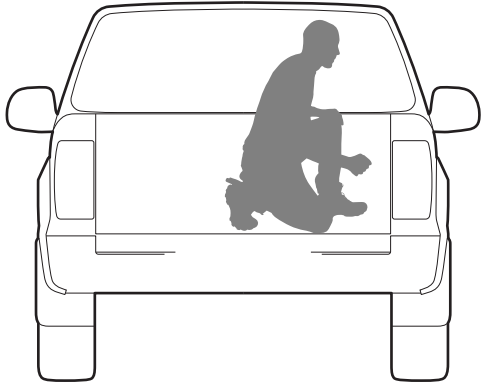








10mm 10Nm

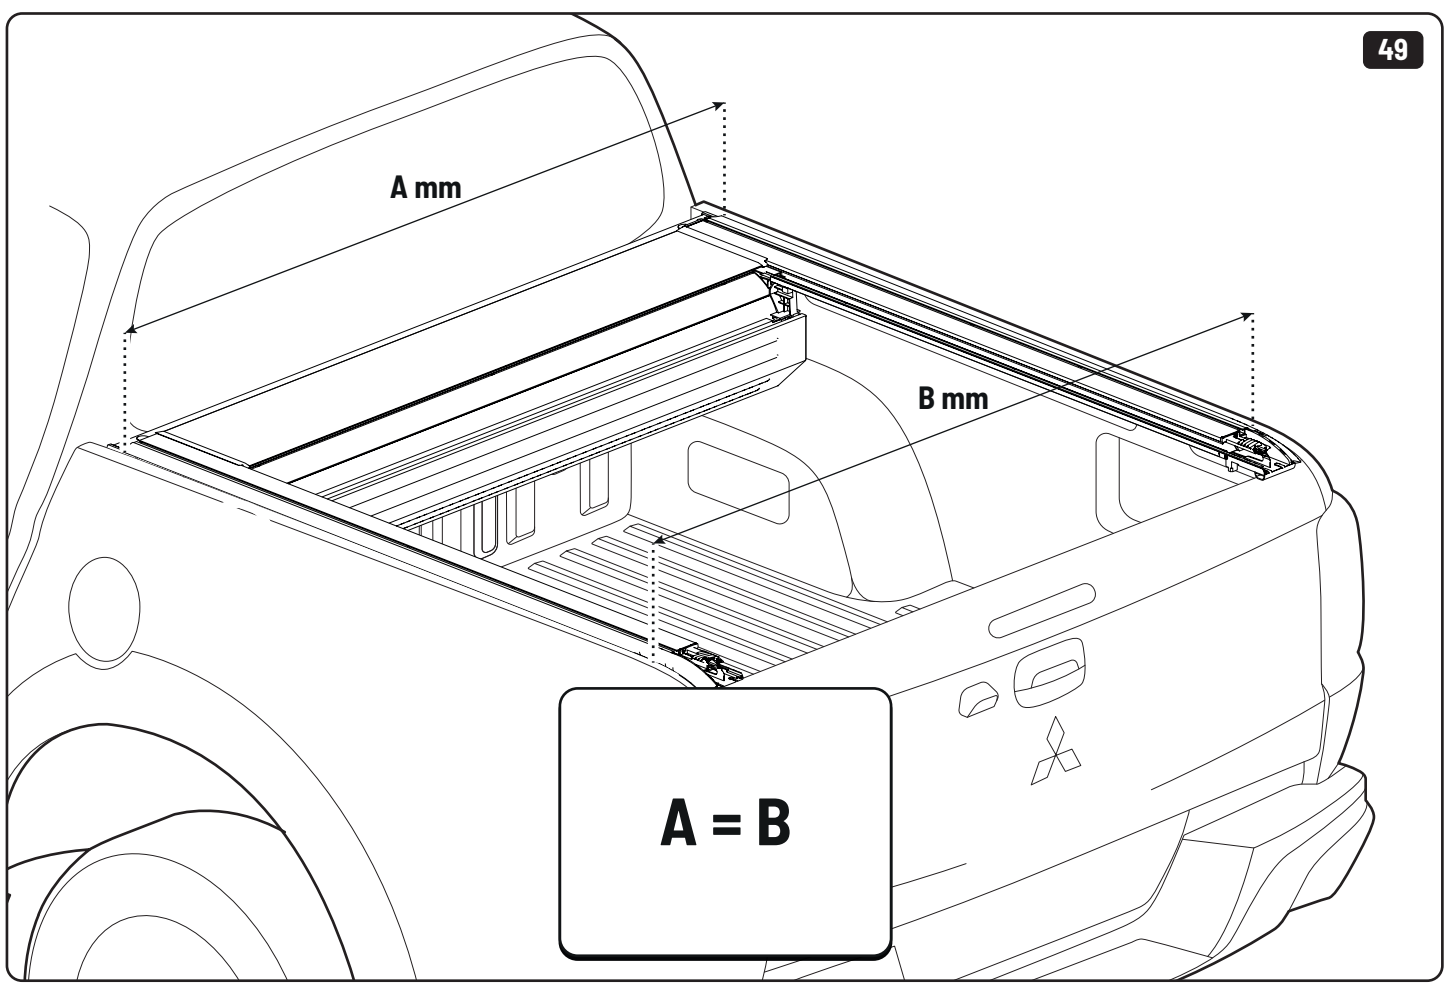
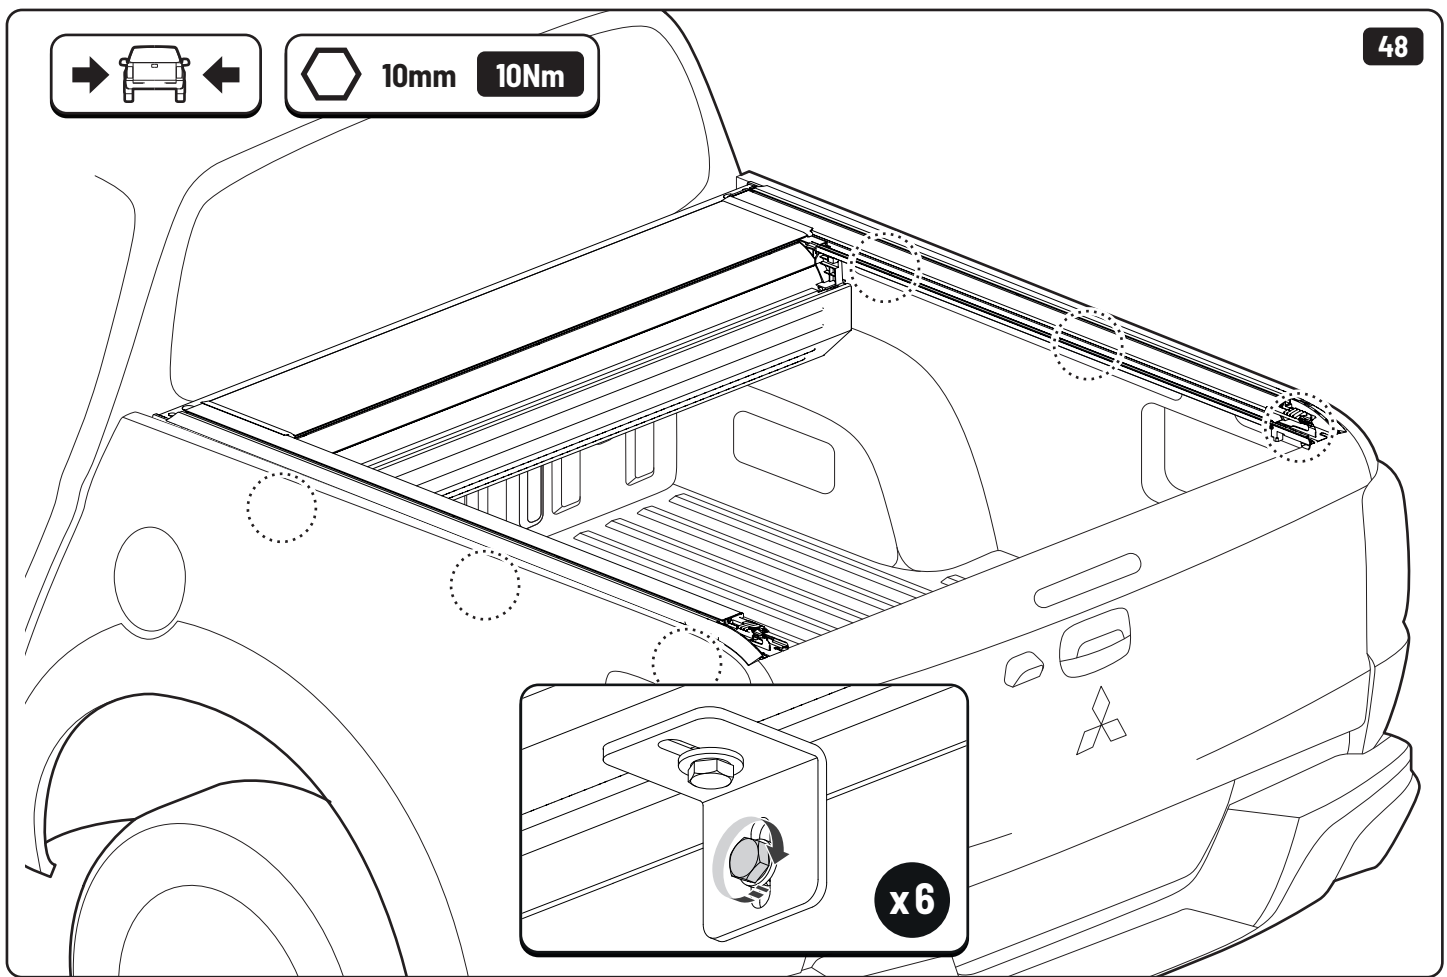


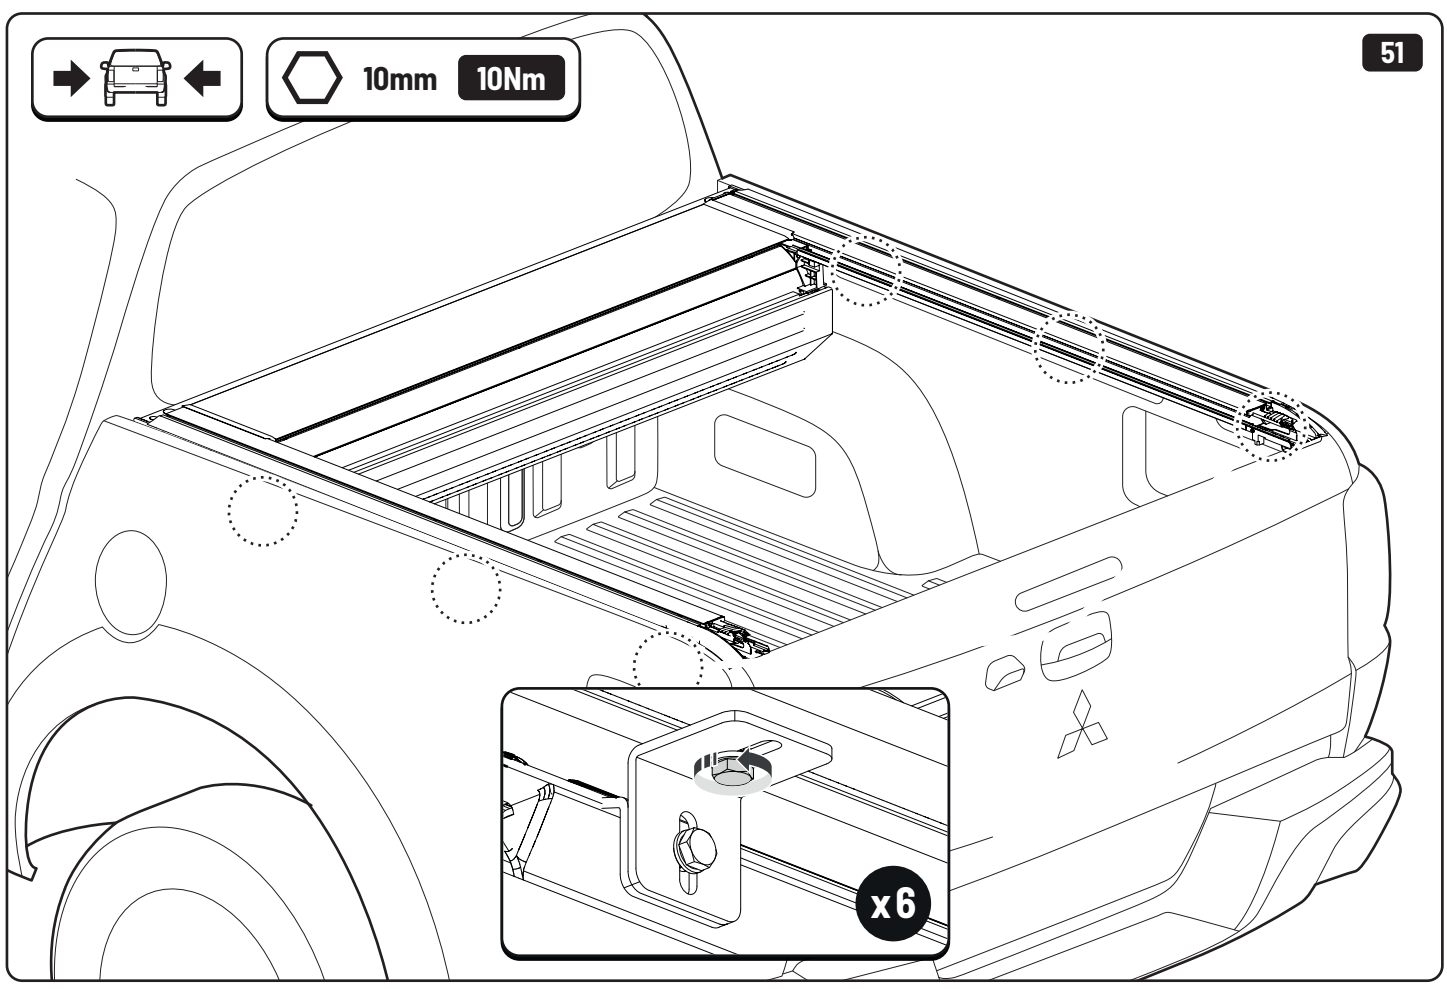
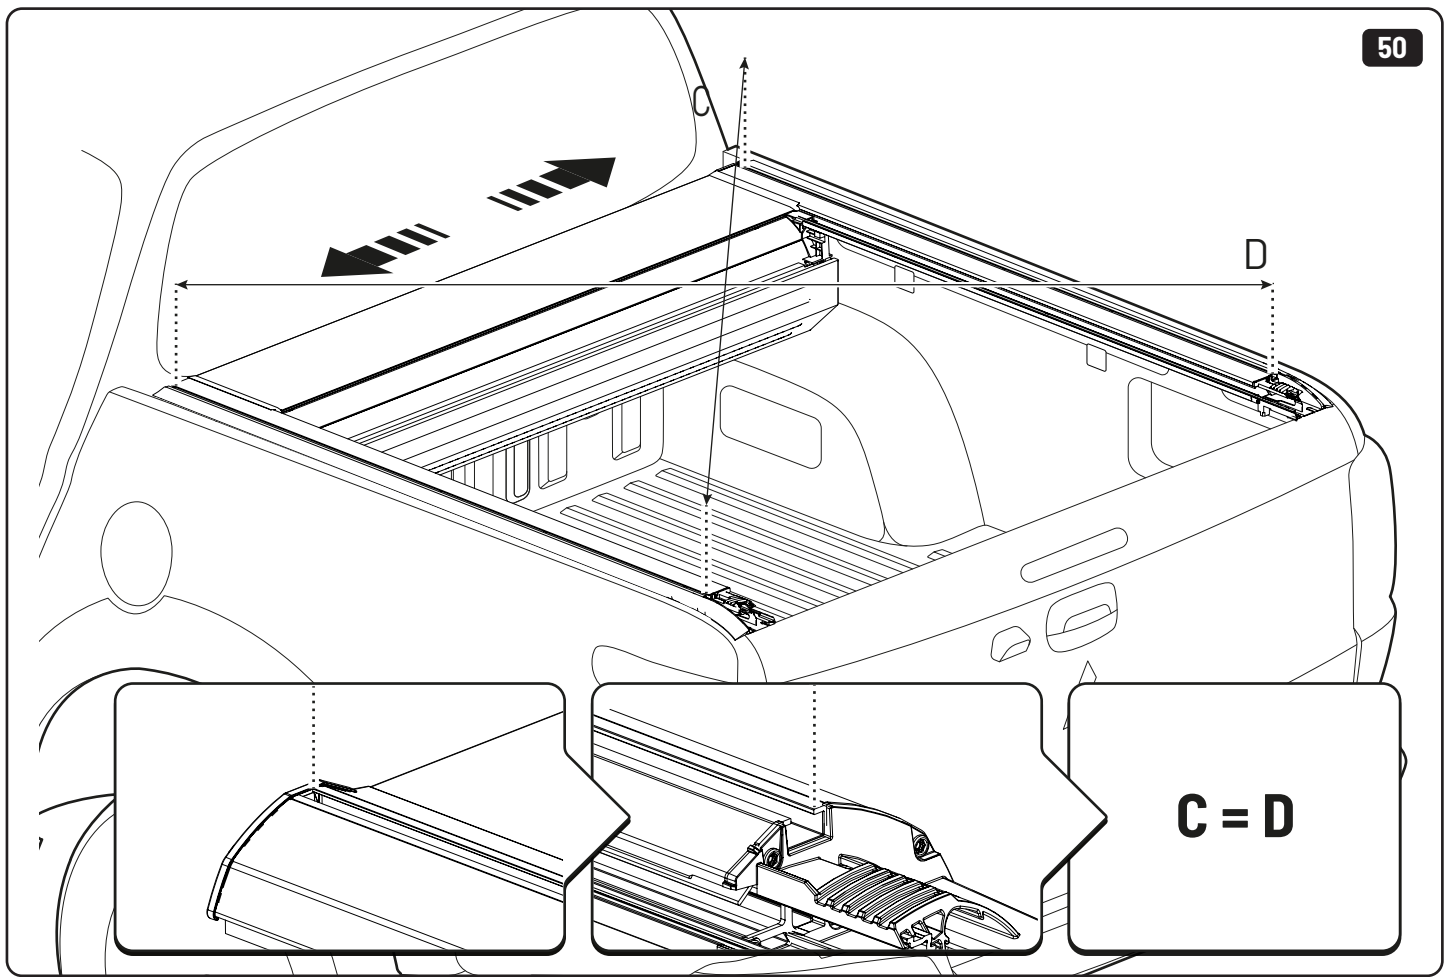


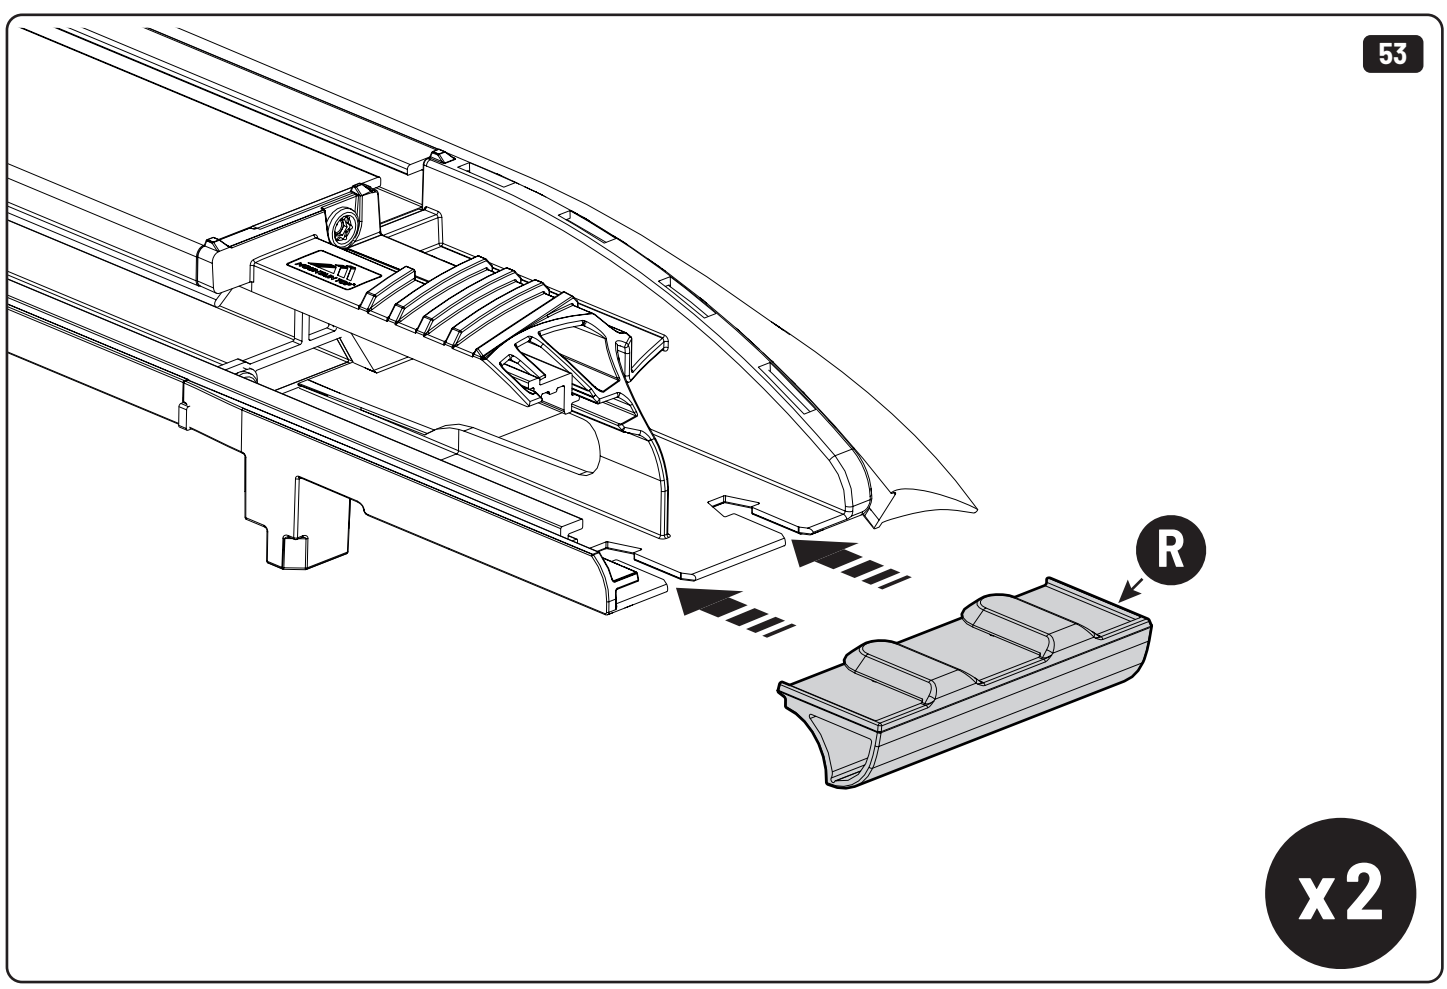
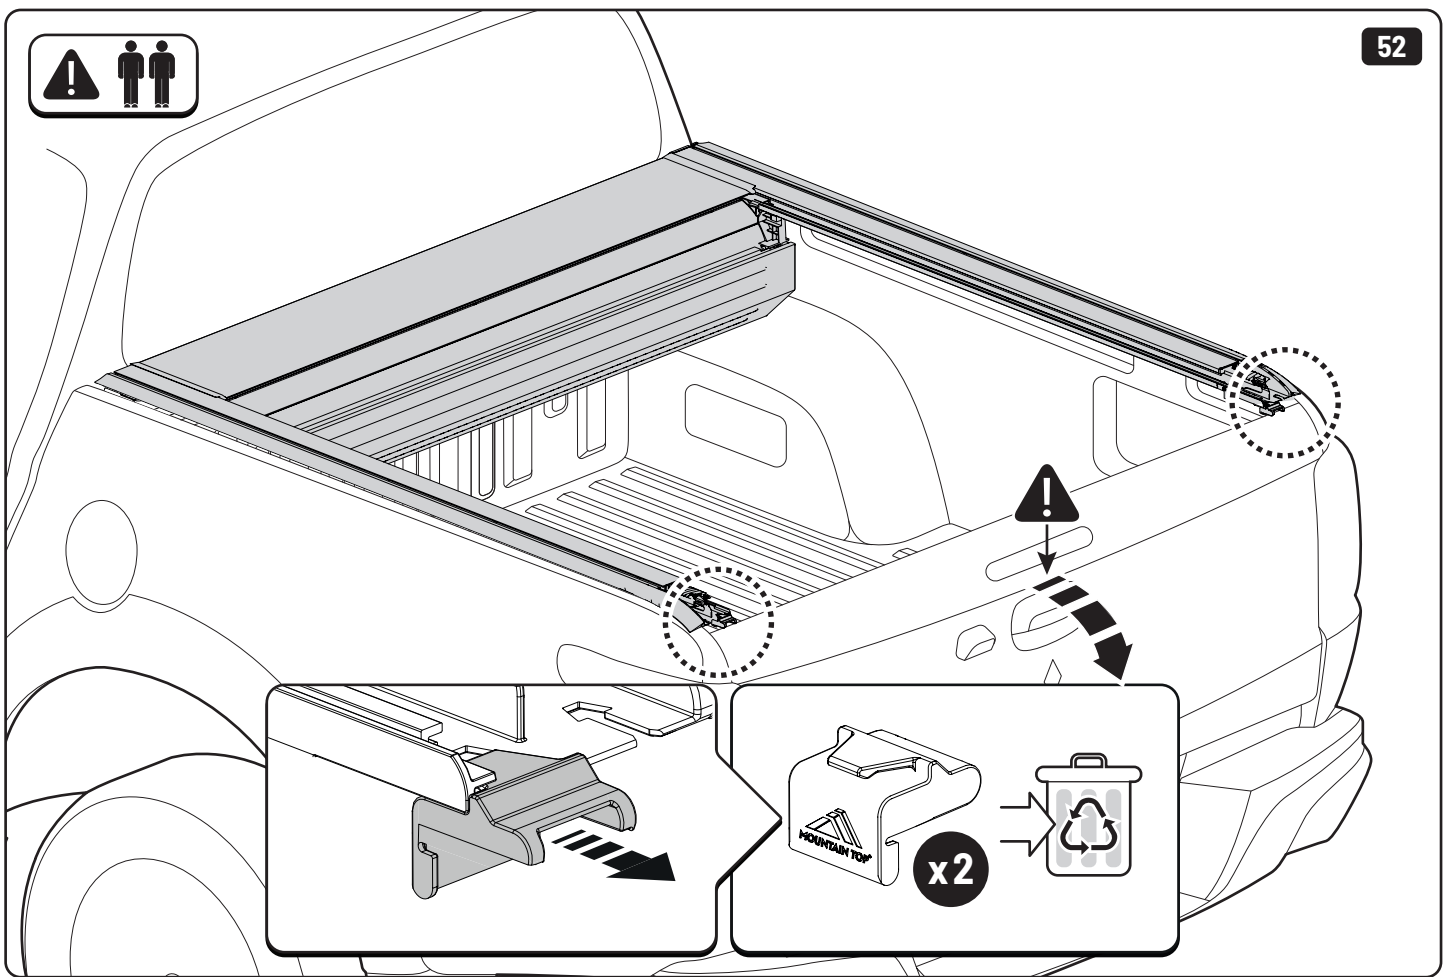


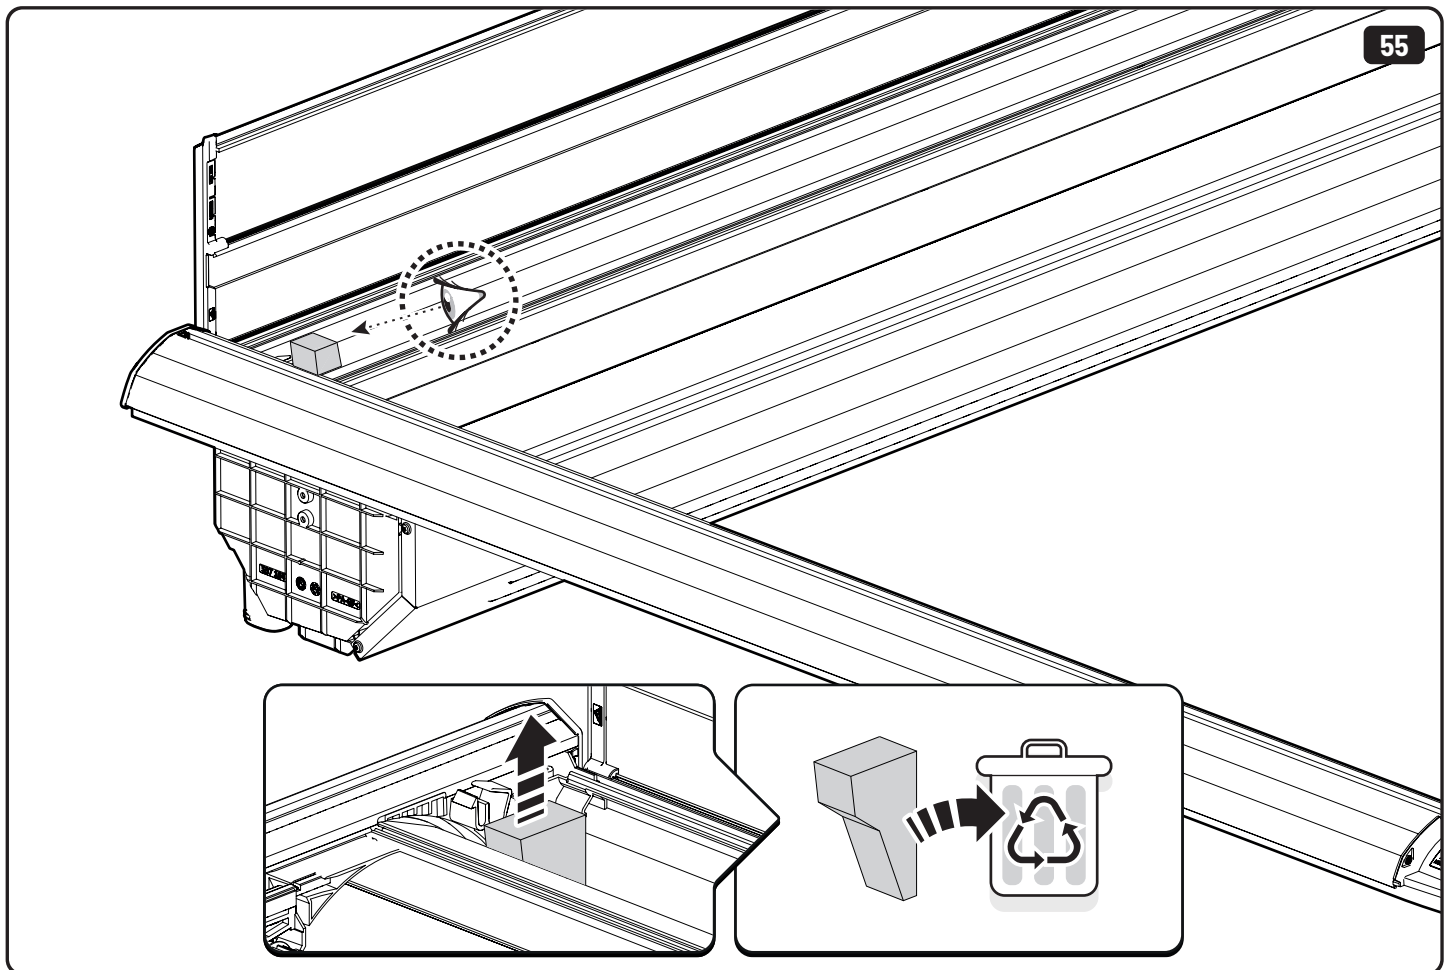
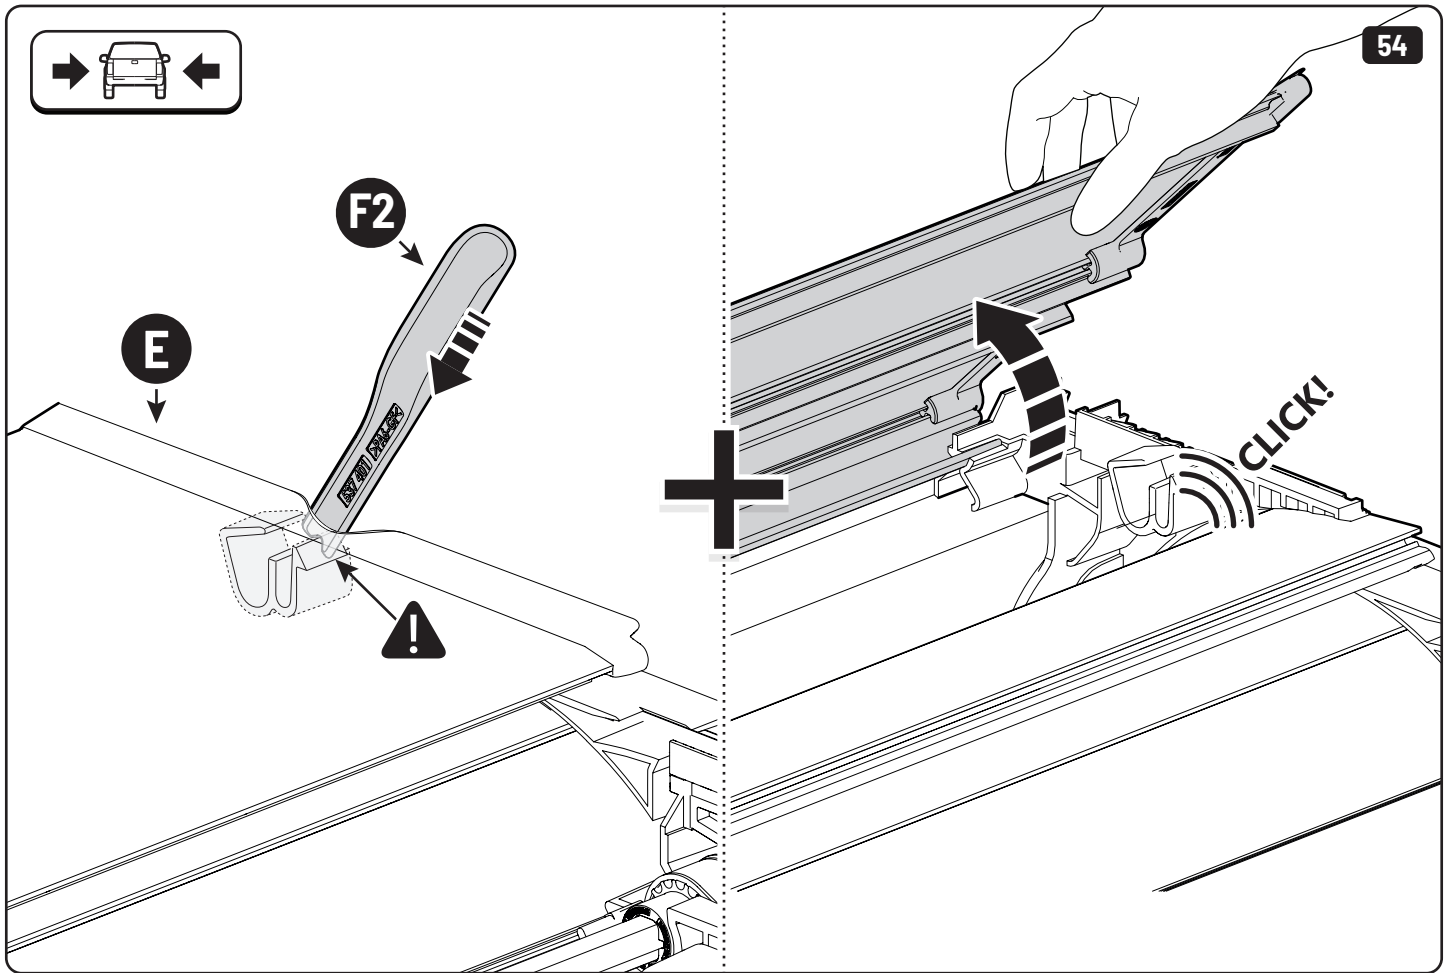


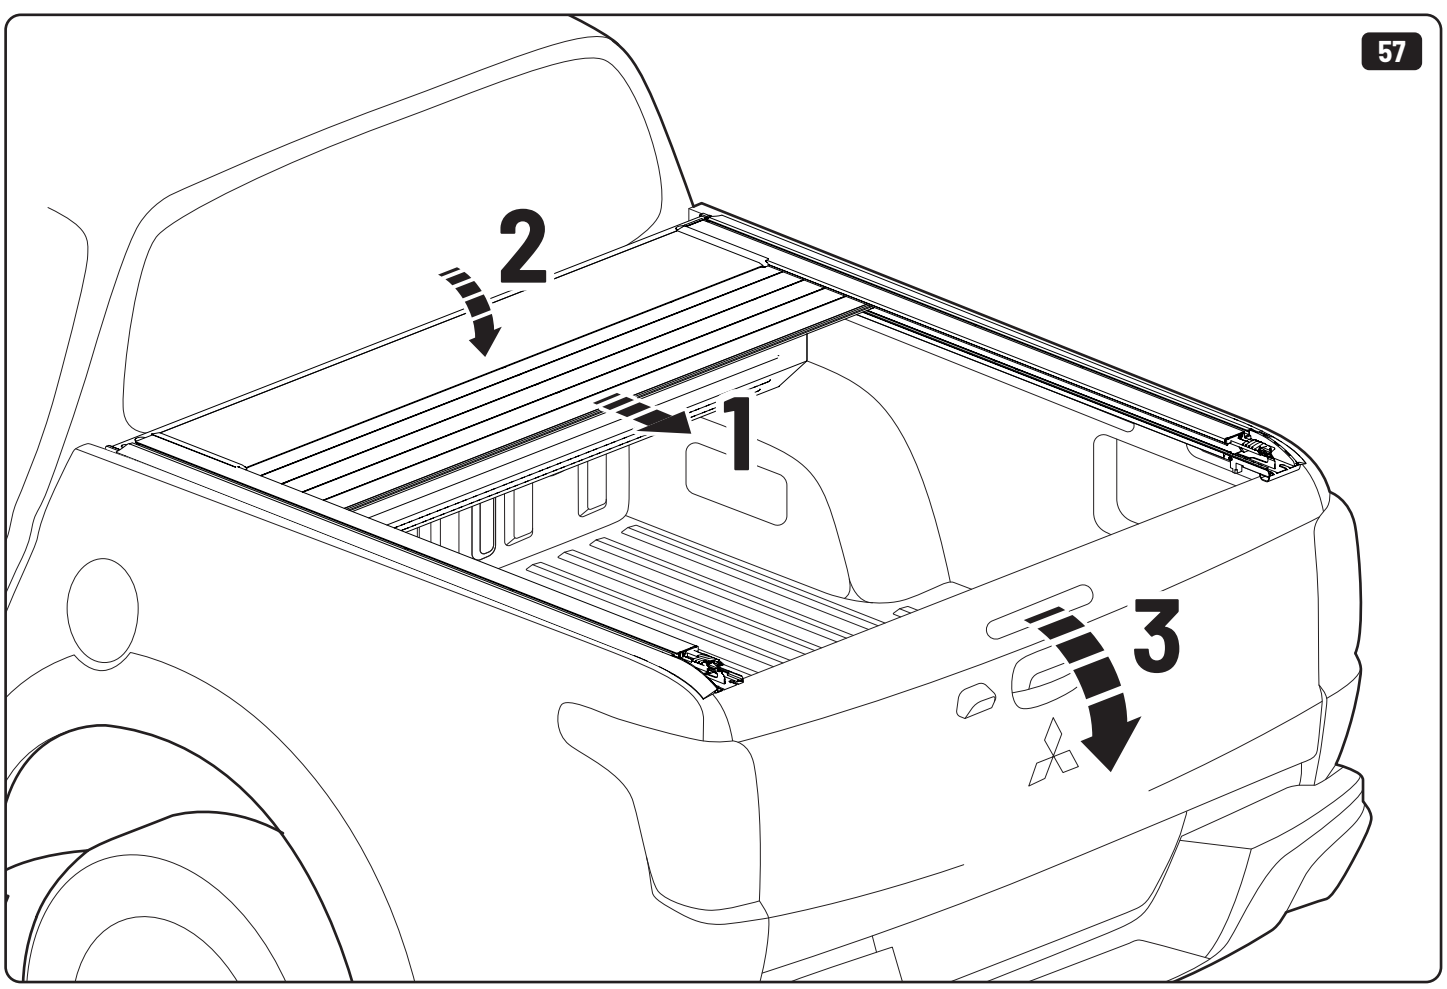
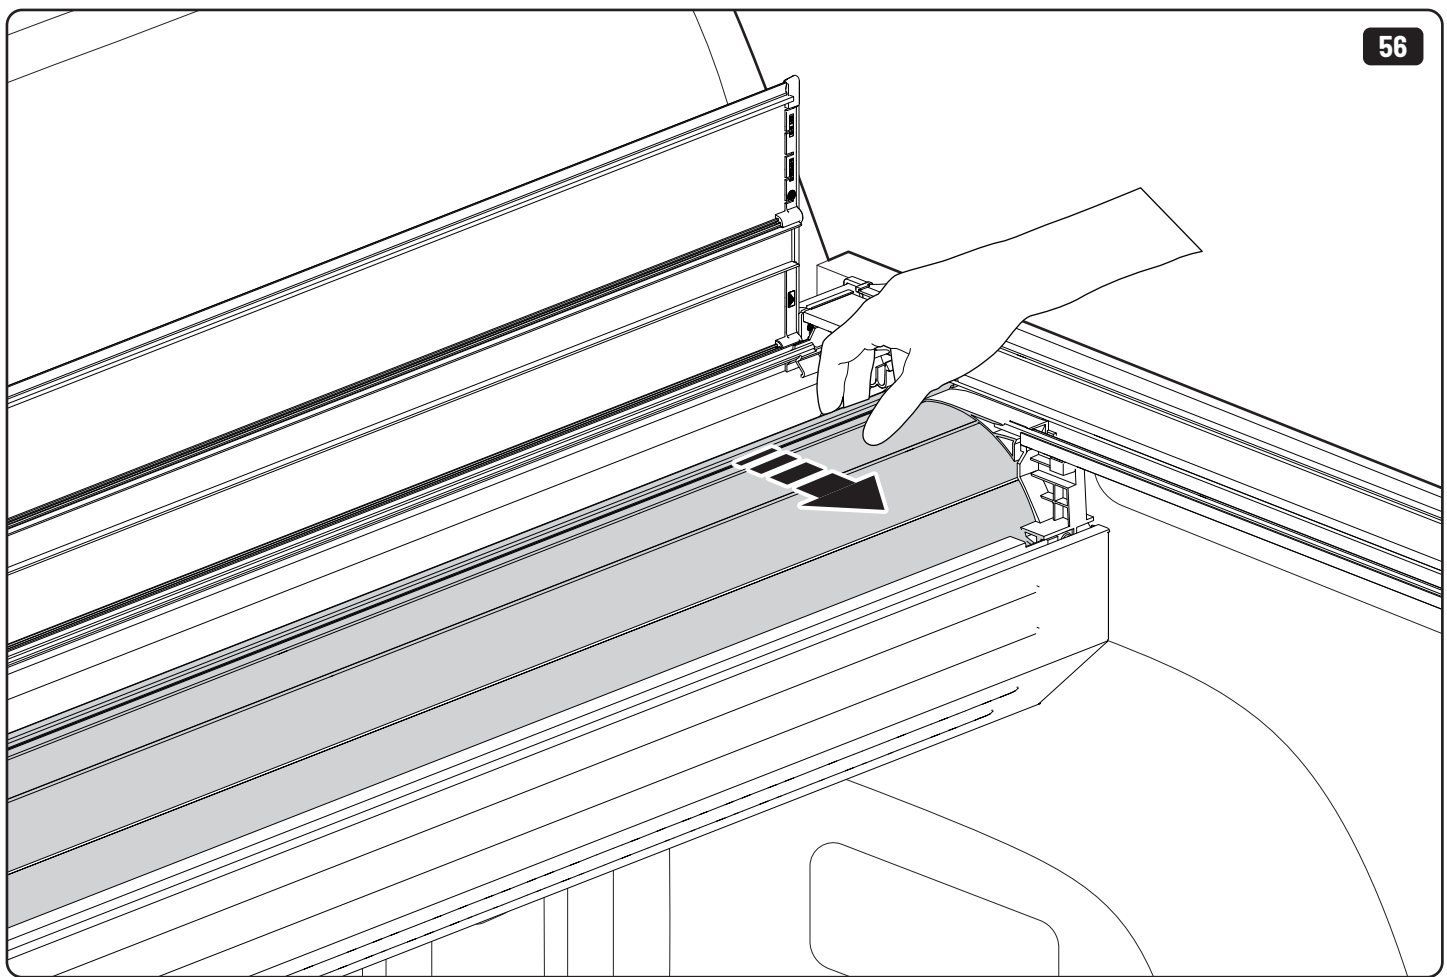


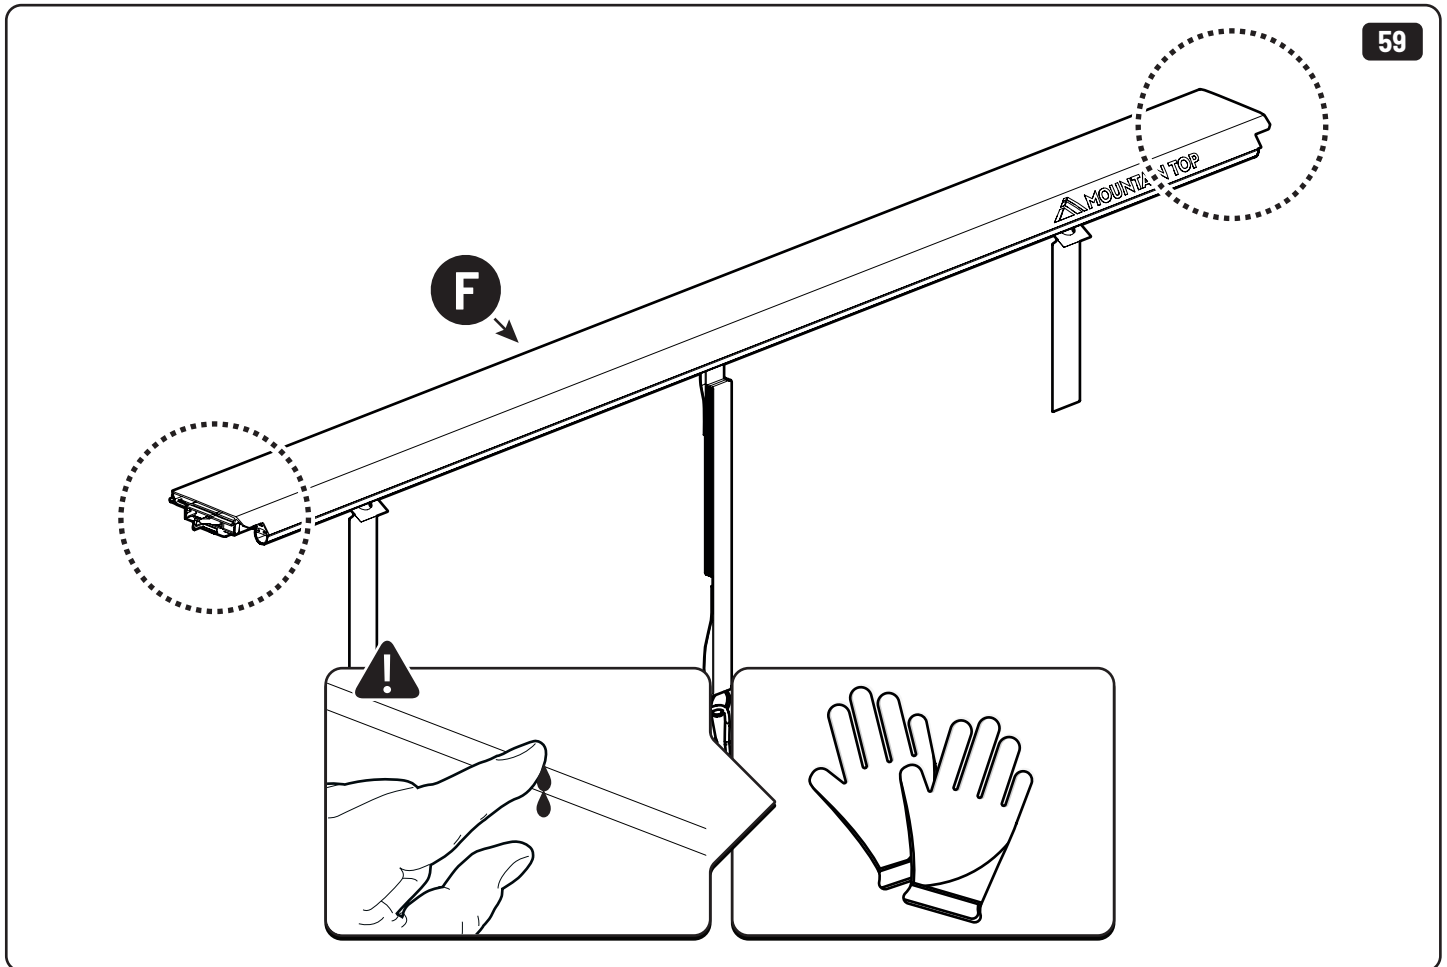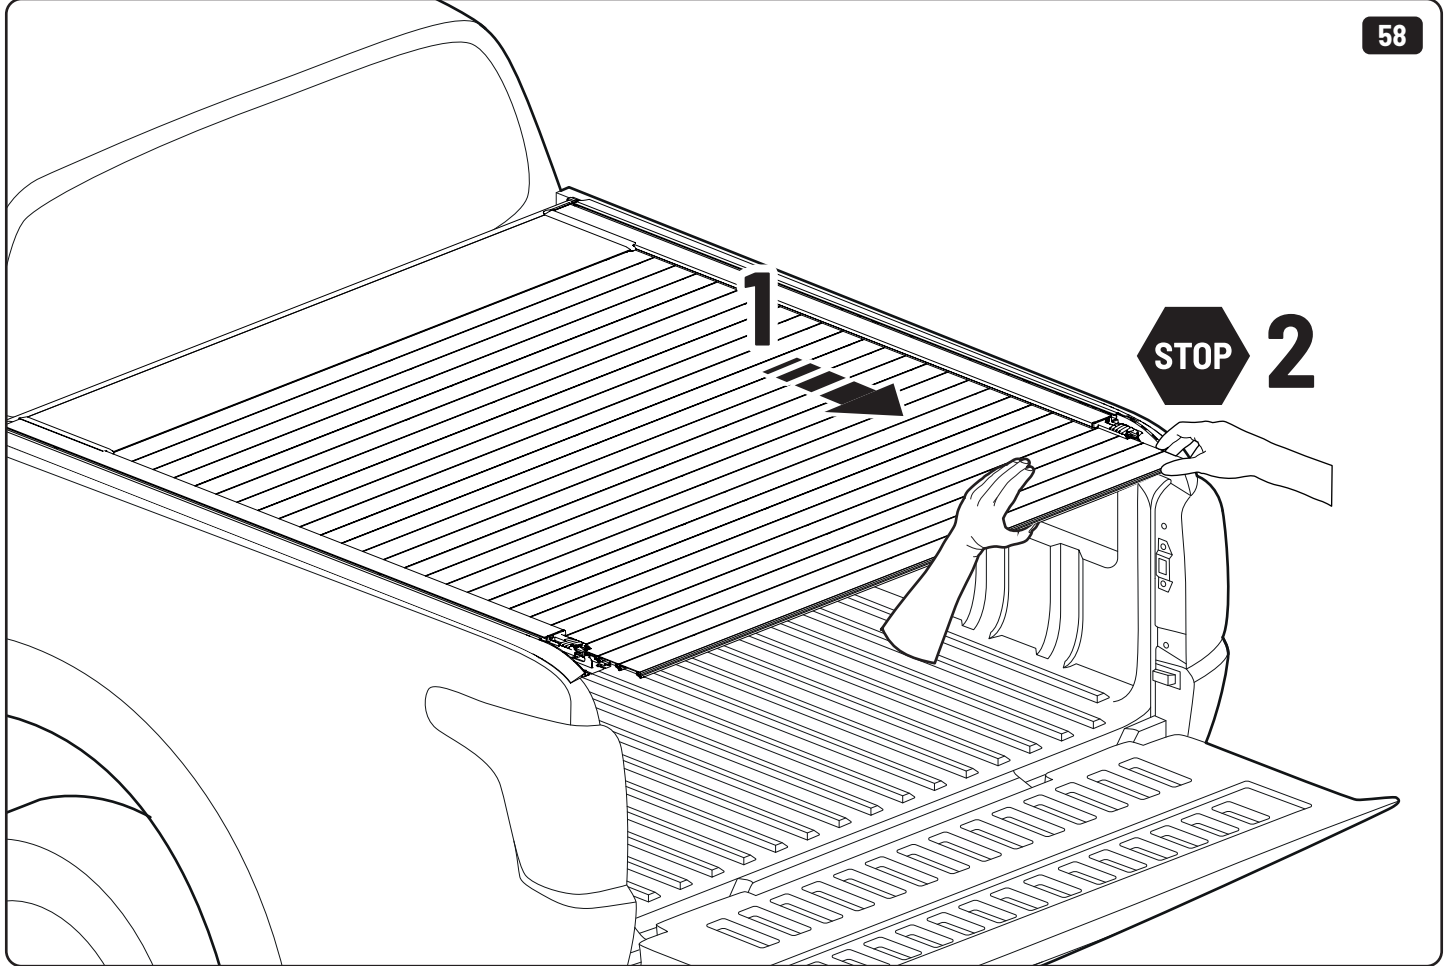


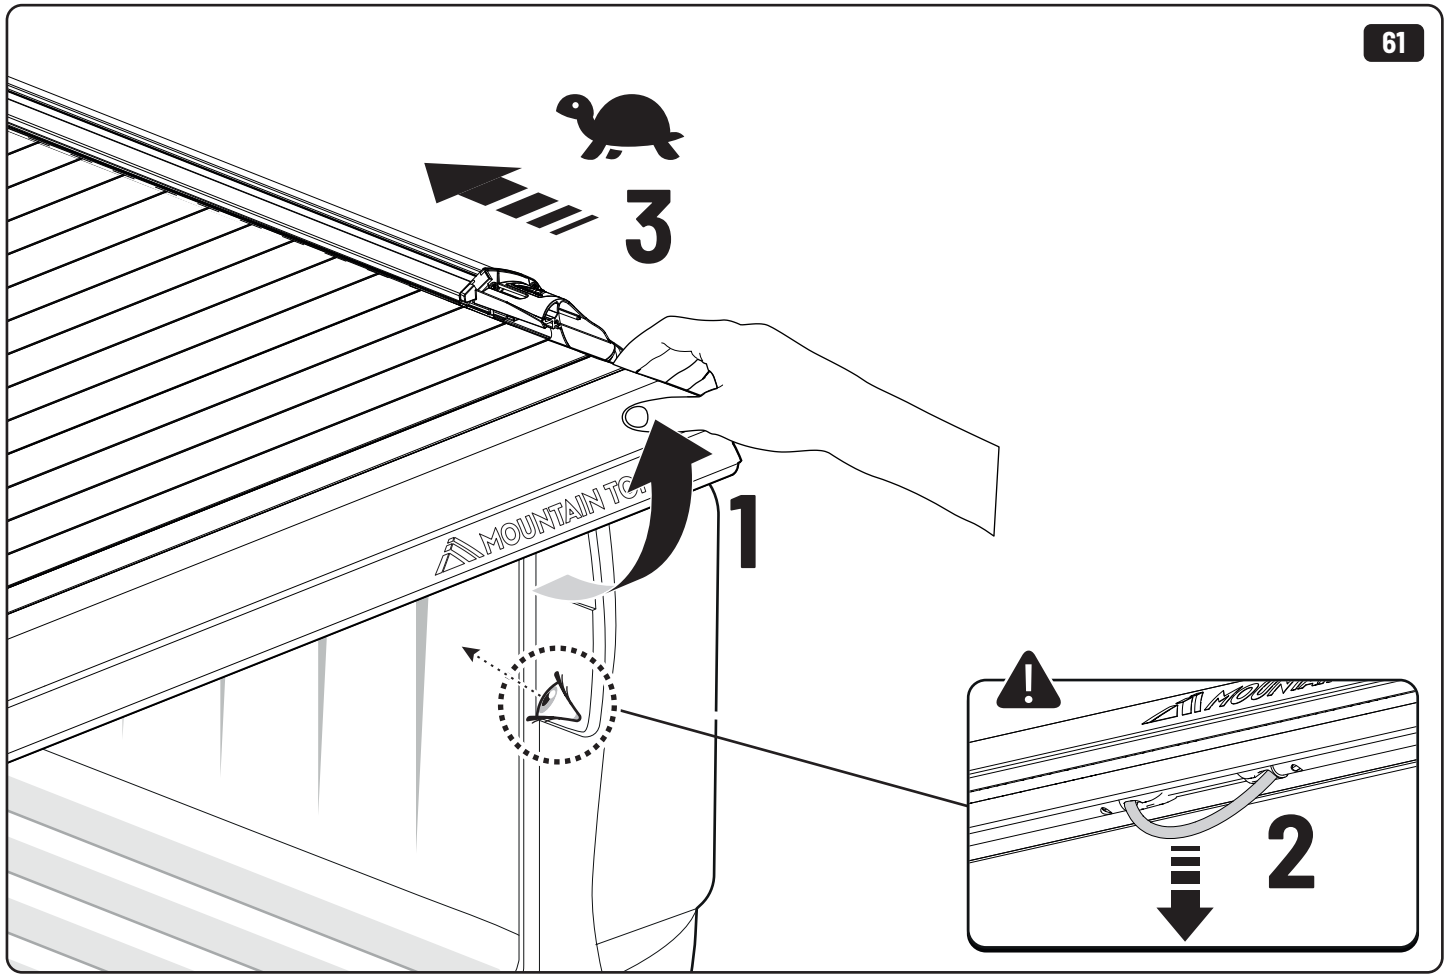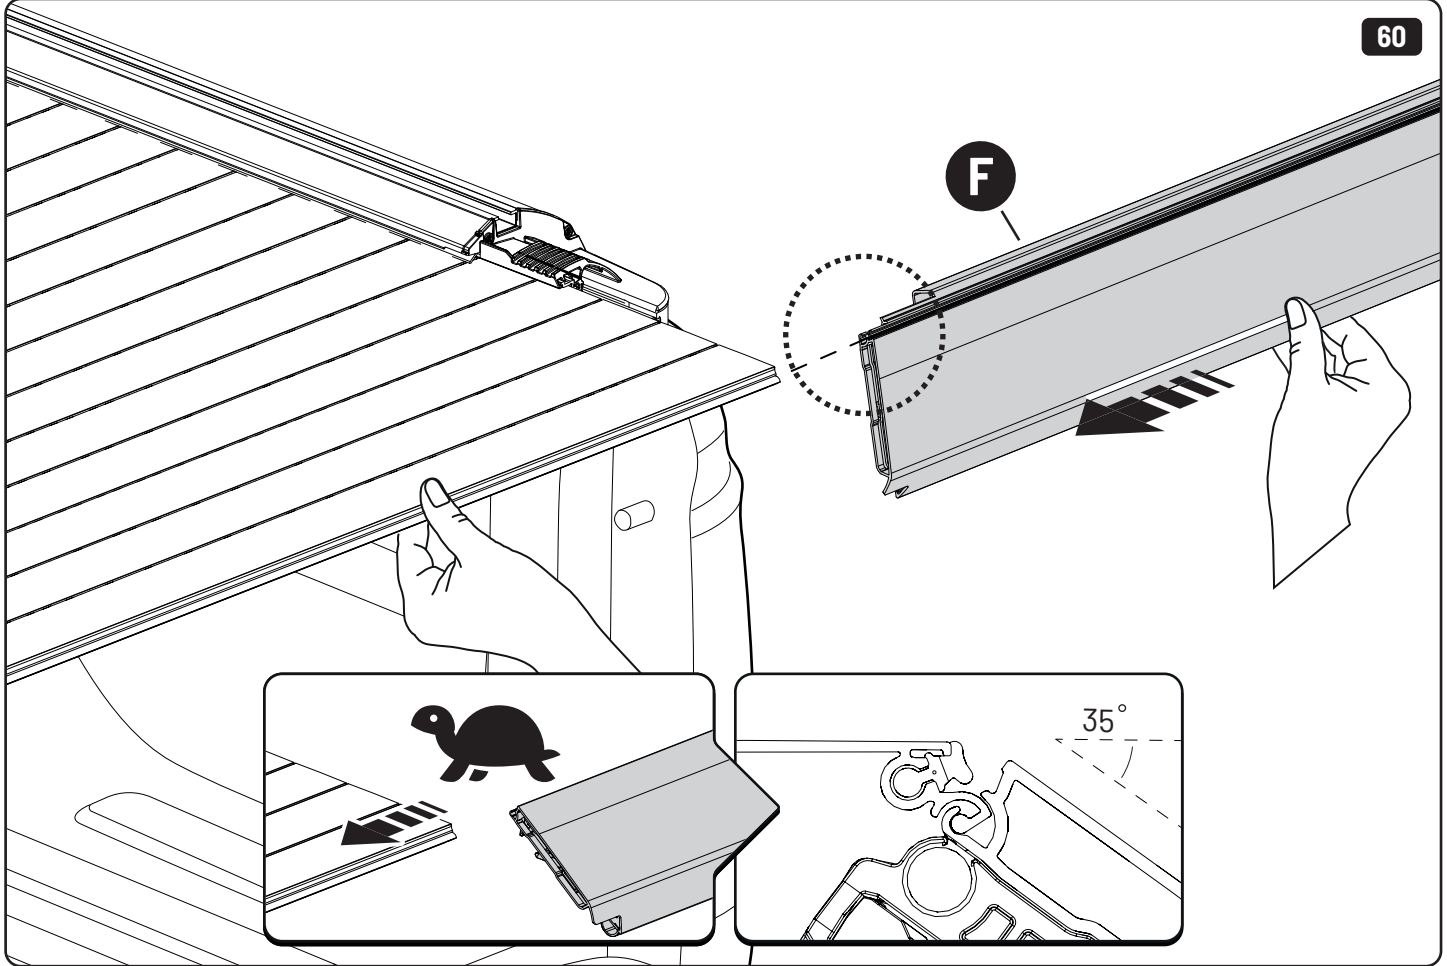


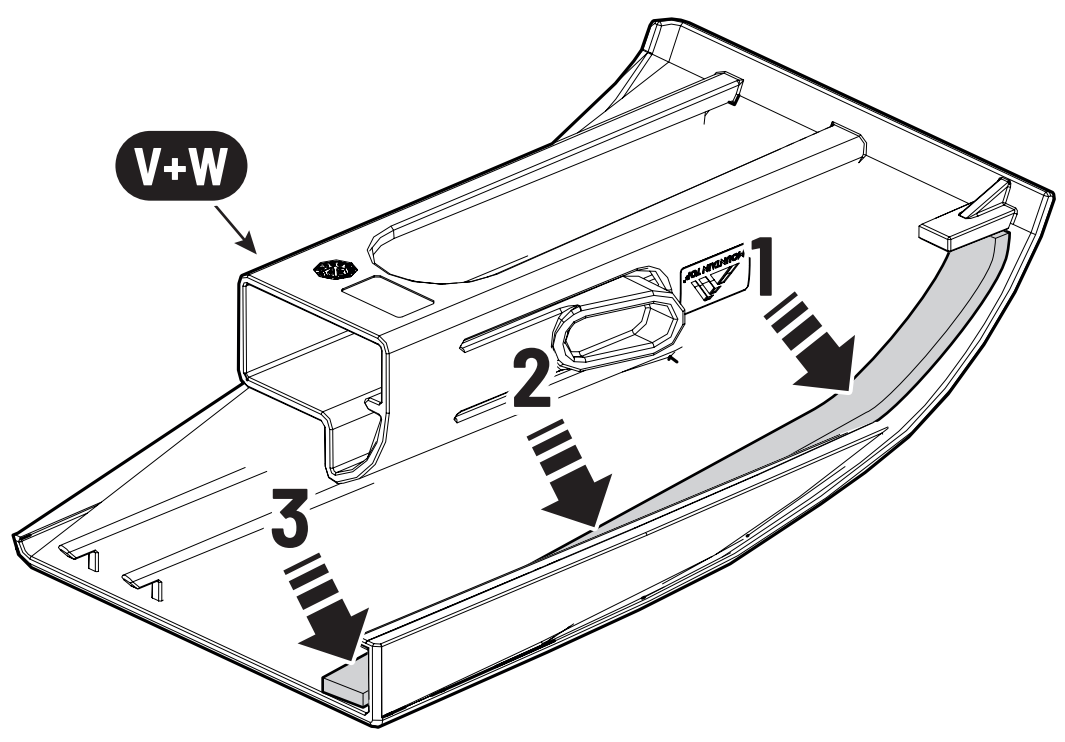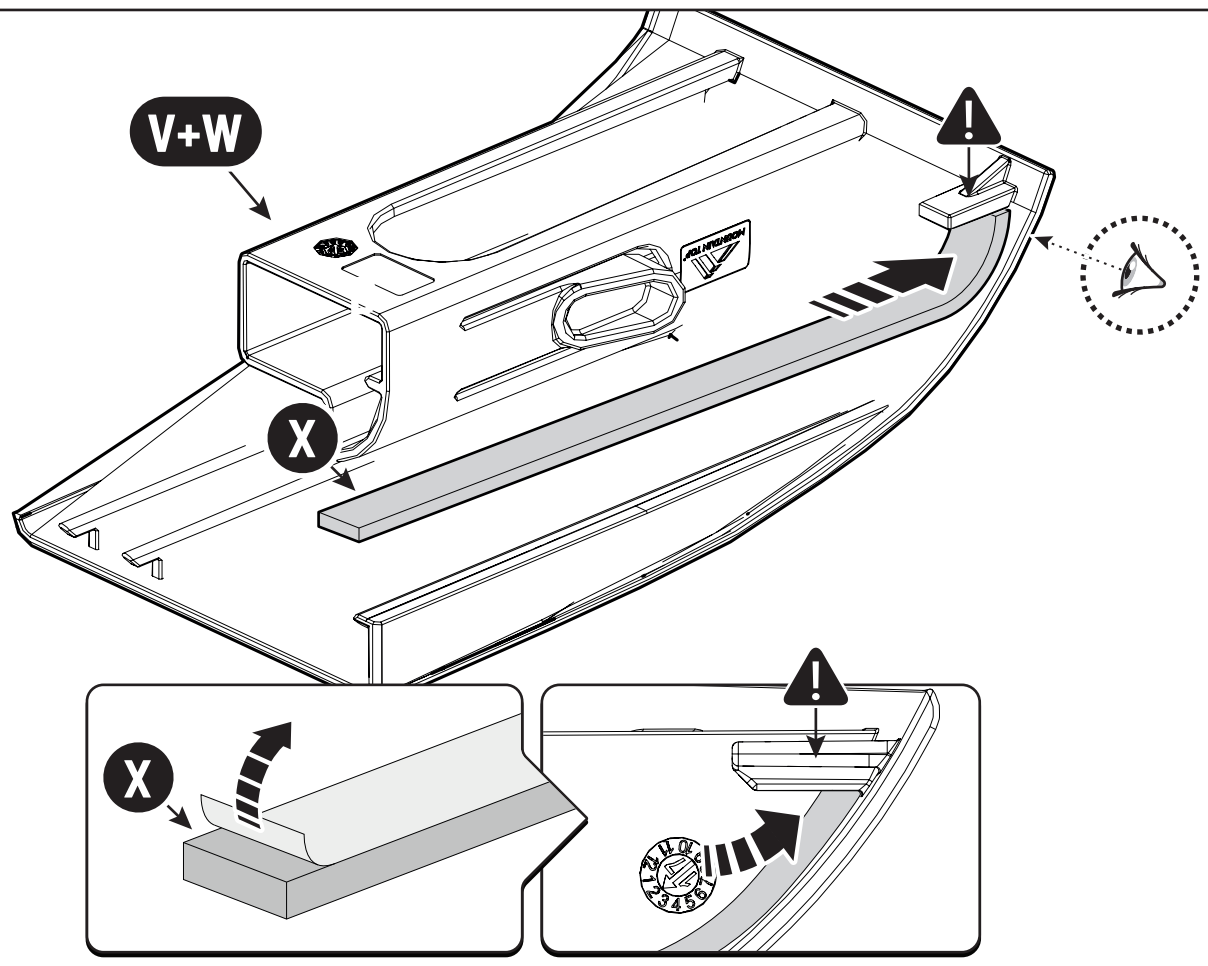

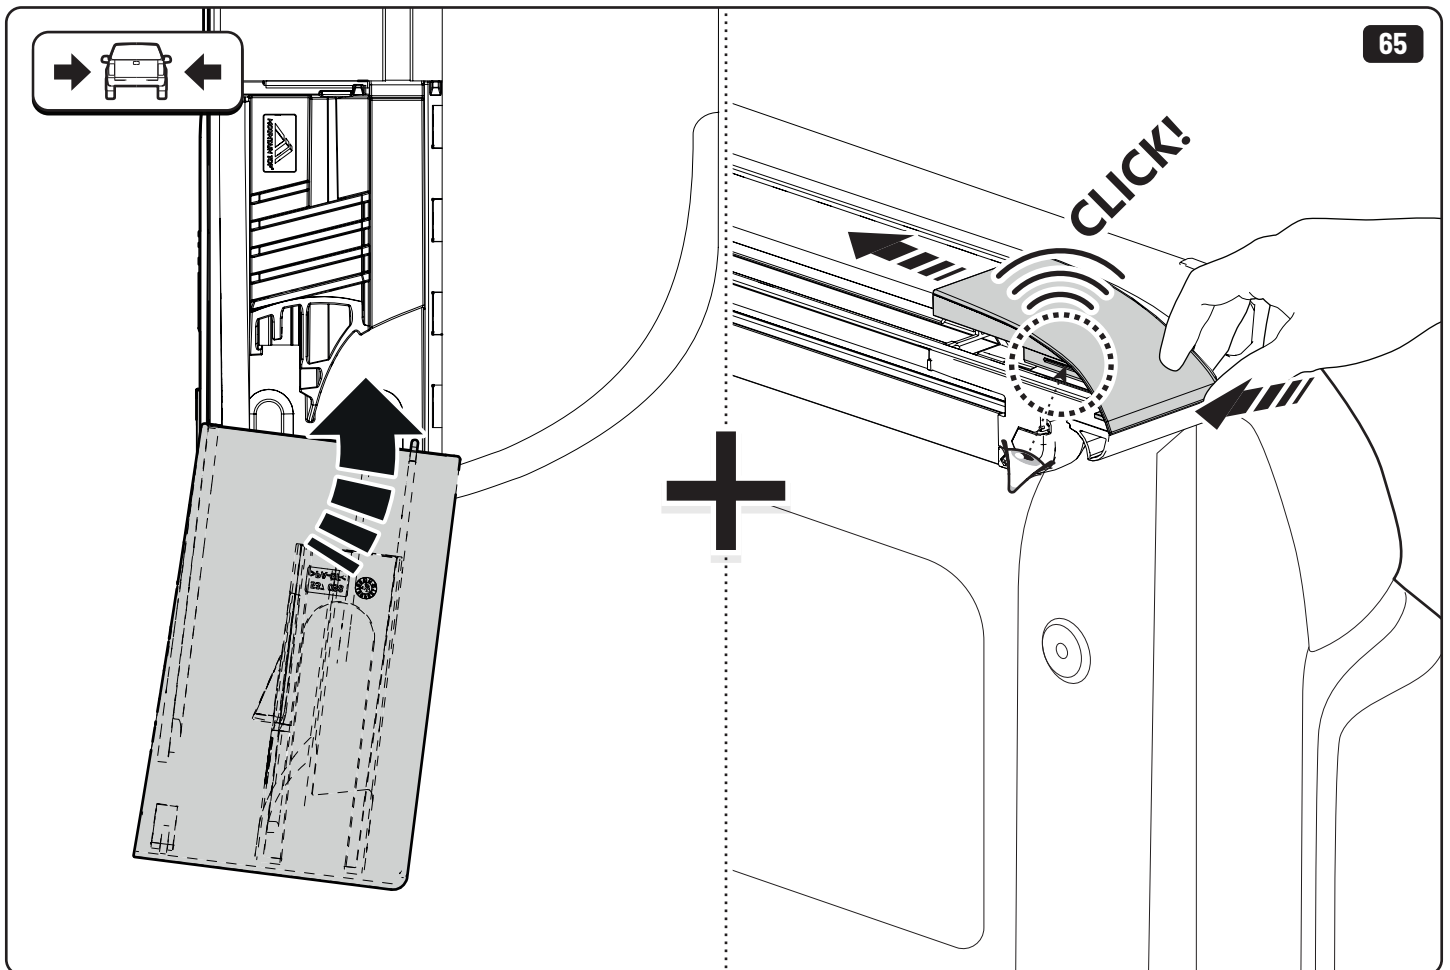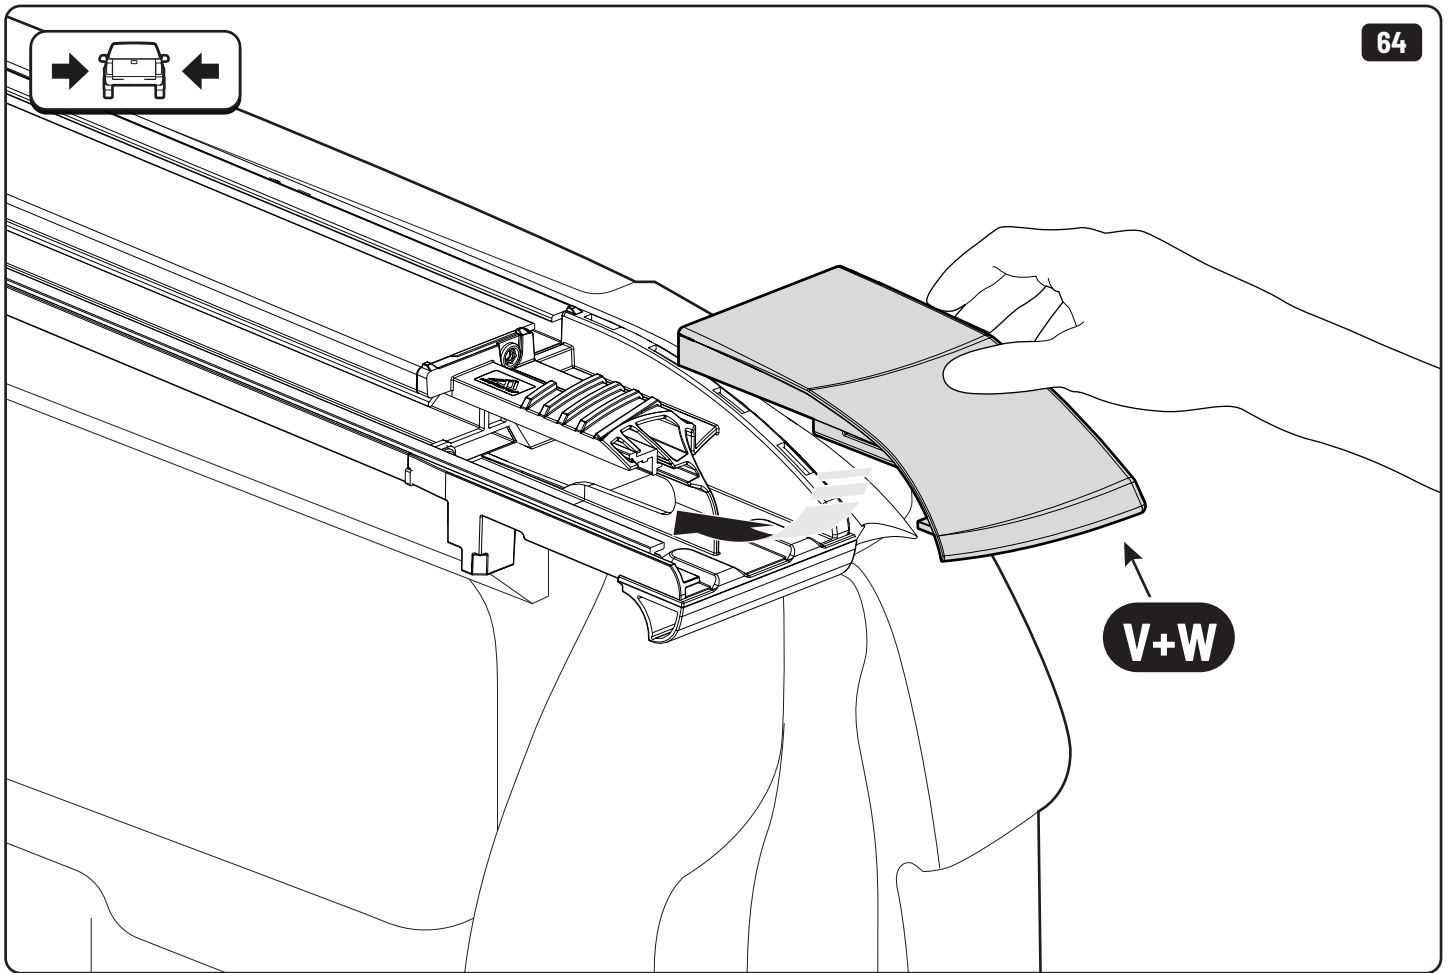

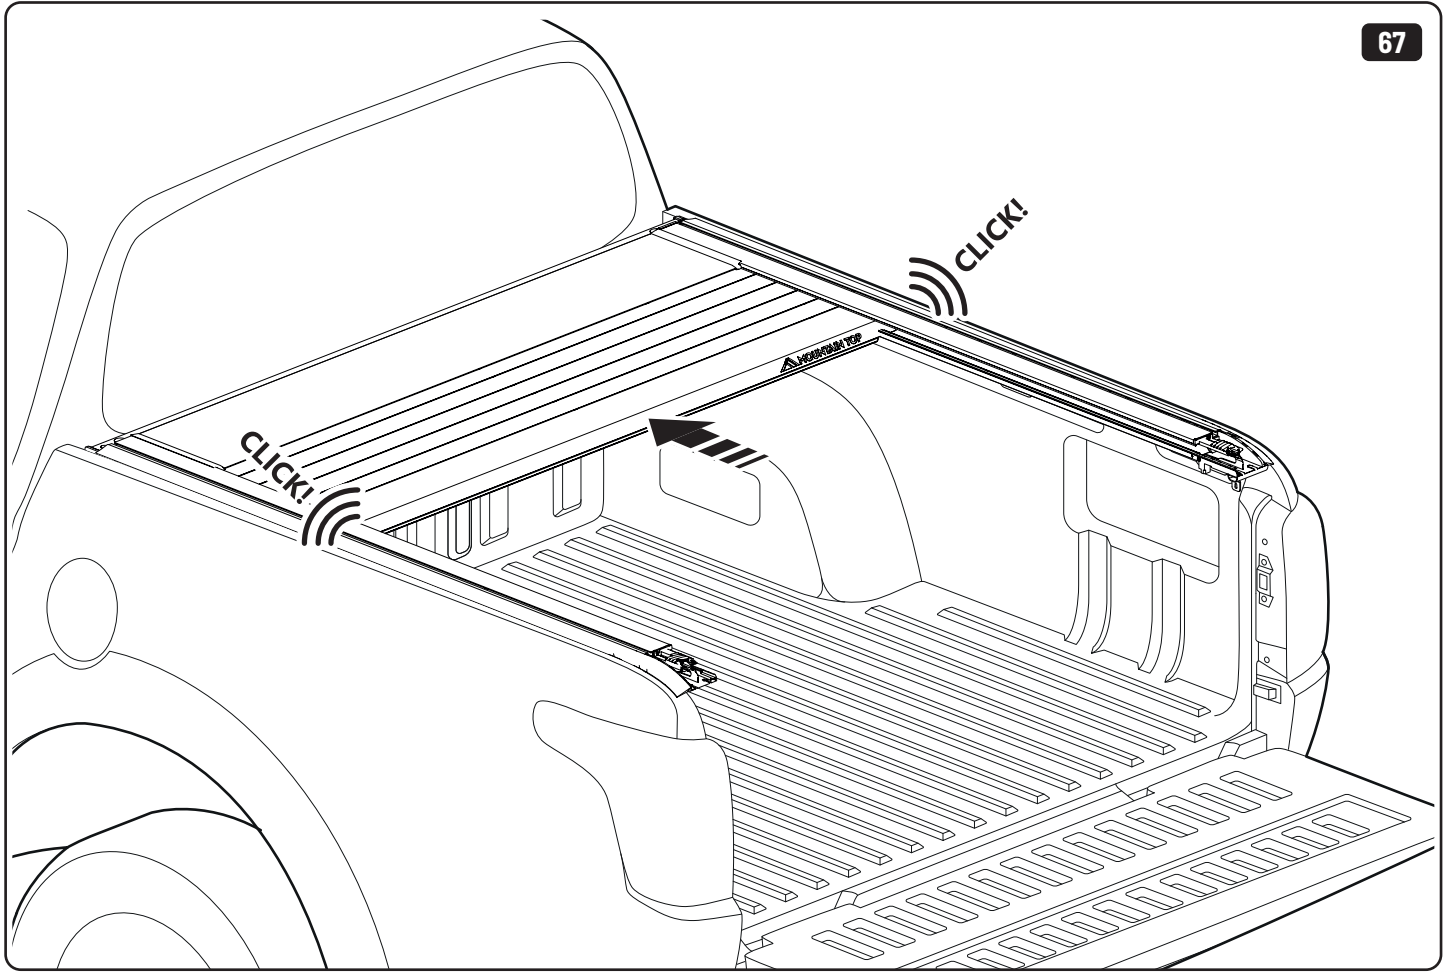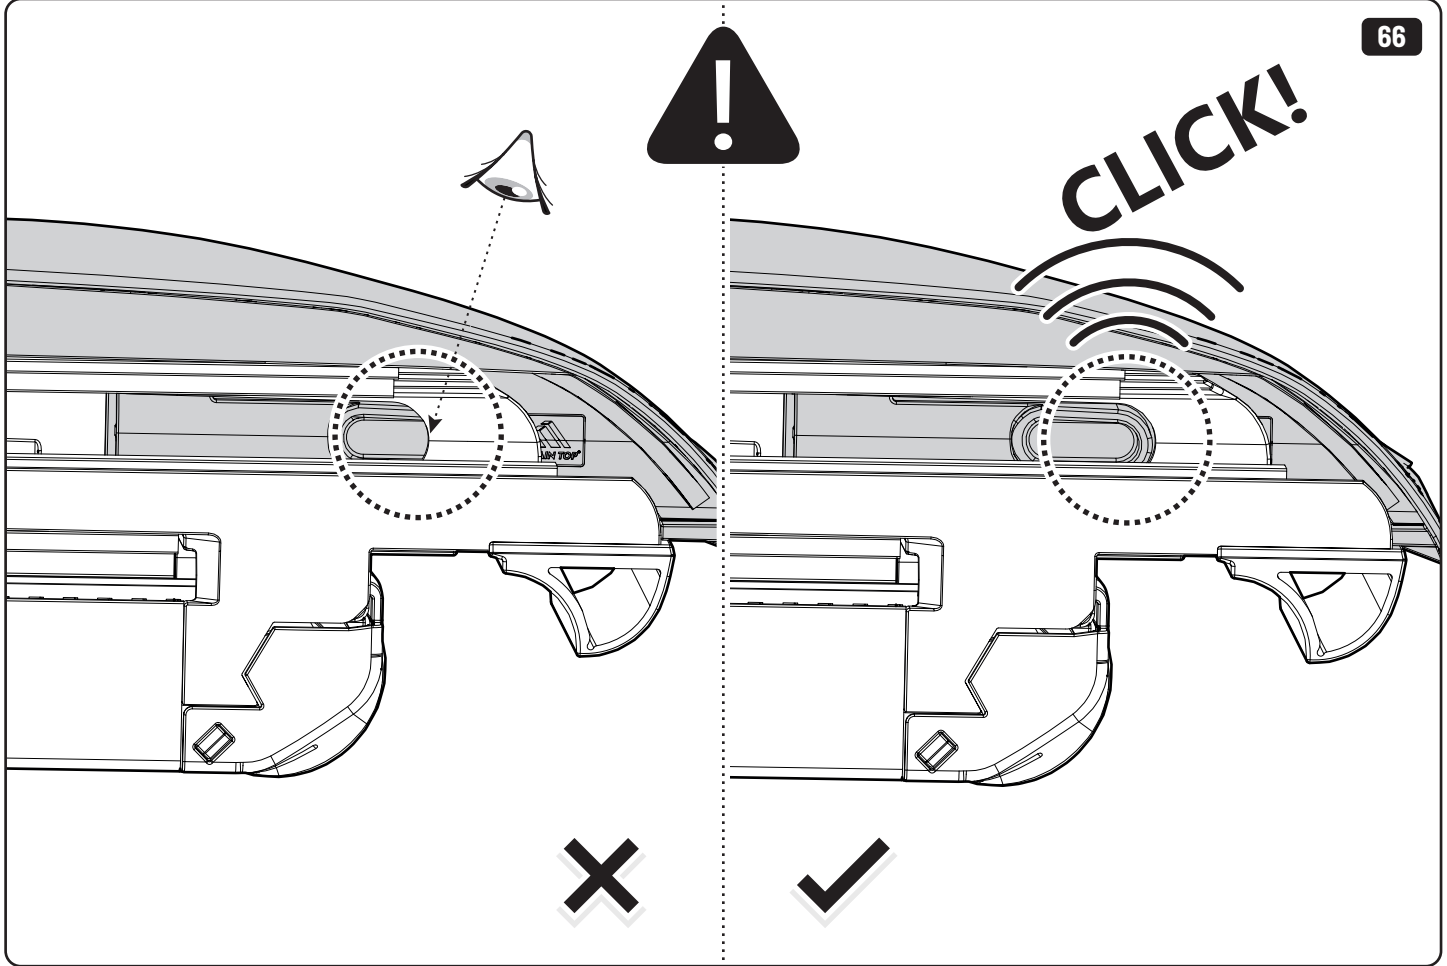

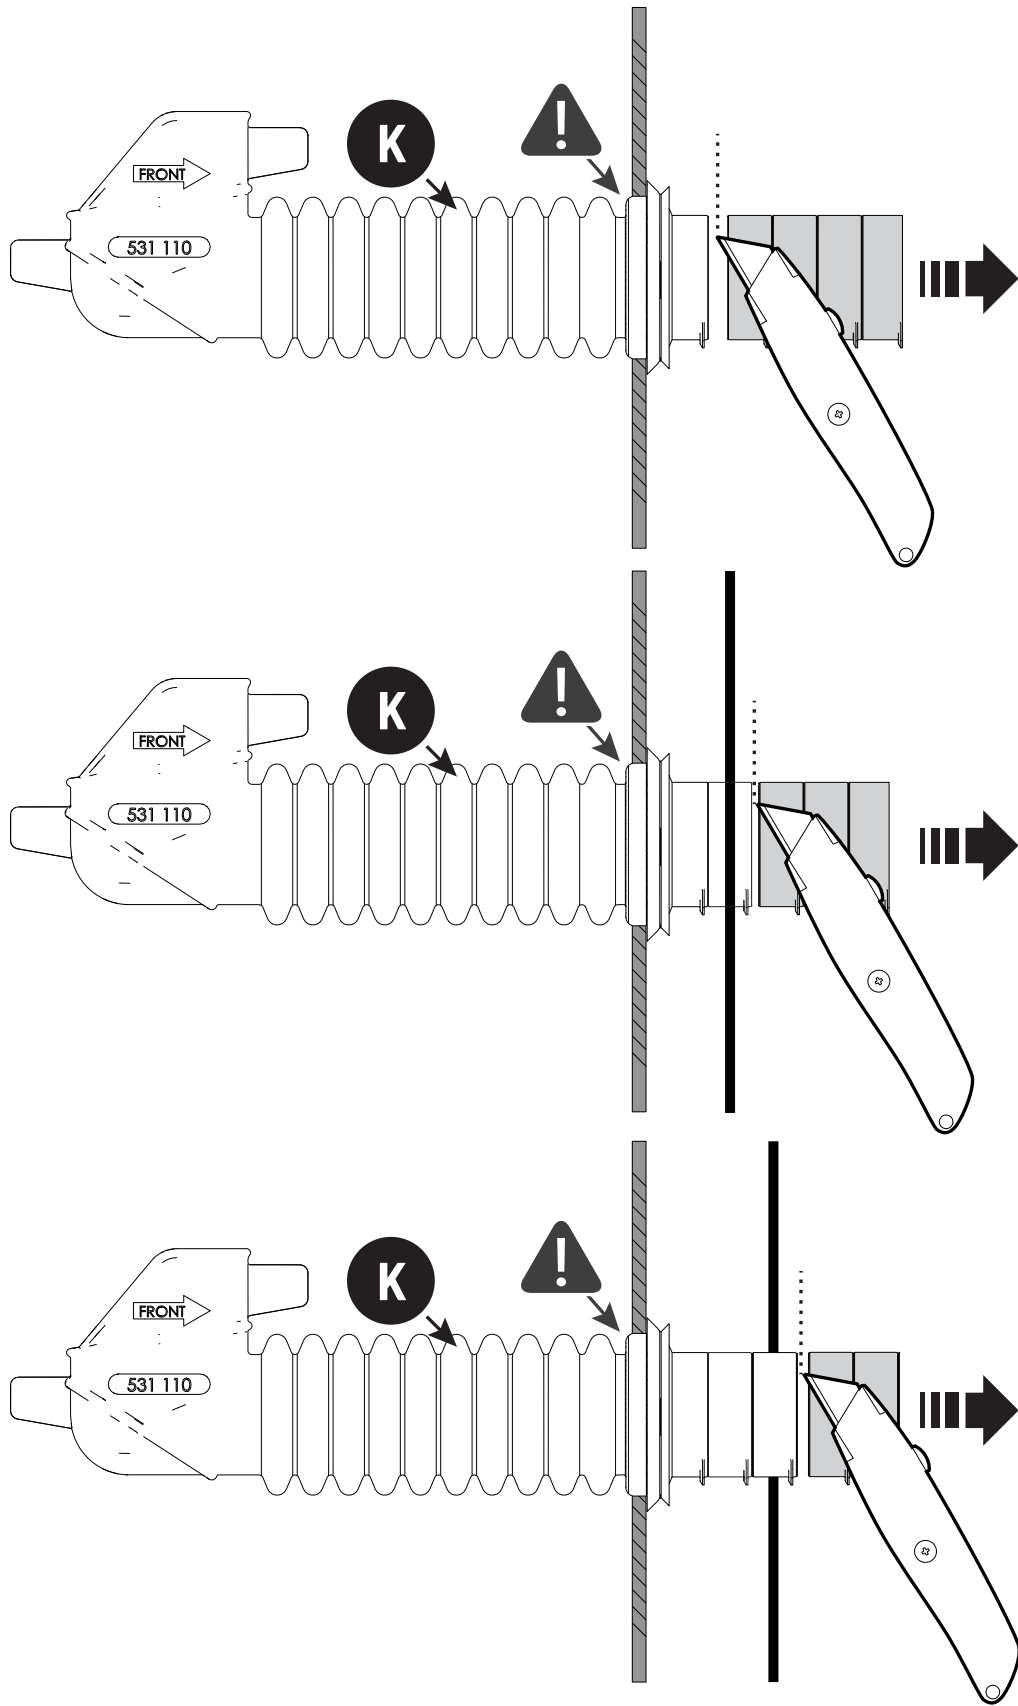

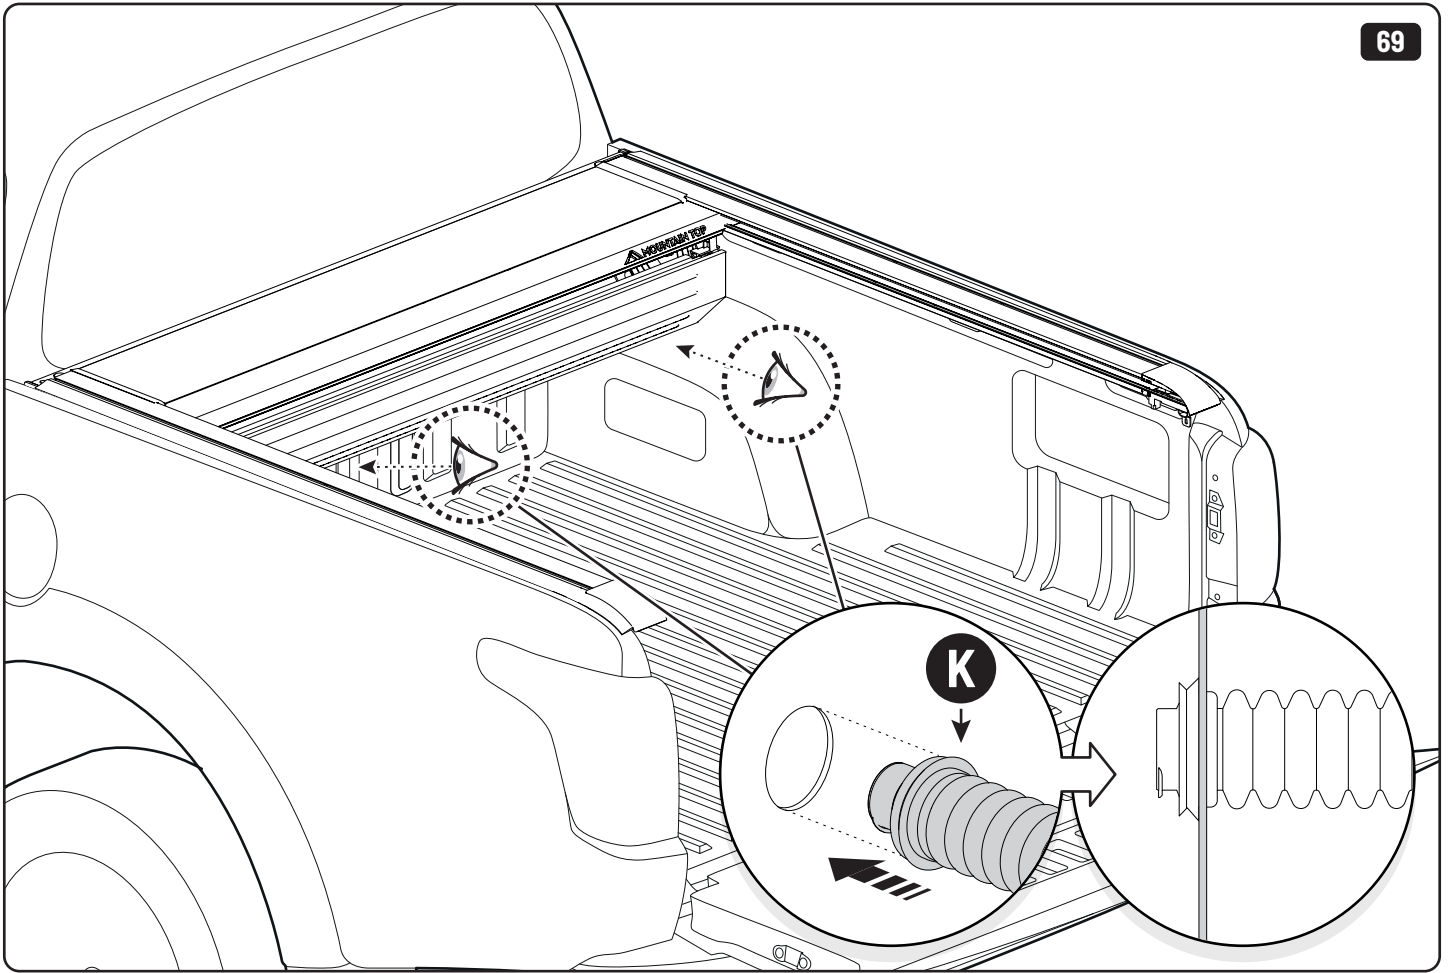



Steps	Page	Done by
Mounting gliding rail in canister	12	
Holes for drain	16	
Width + Cross measurement	29+30	
Tightening the bracket	30+31	
Mounting drain	40	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

	Model / Year	Cab type (s)	Installation time	Weight
EV0m MI10 HB01	L200 / 2019 ->	Double Cab	1 hour (s)	31 kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni di montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare