






MOUNTAIN TOP[®] EV0m ROLL COVER

Installation manual












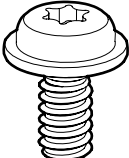
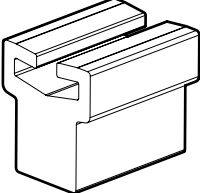
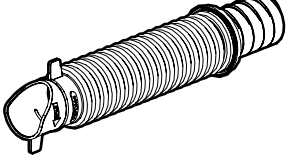
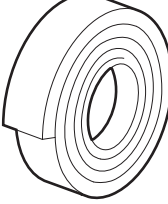

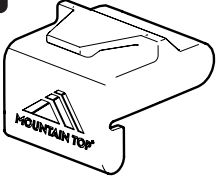


DOWNLOAD PDF

Parts
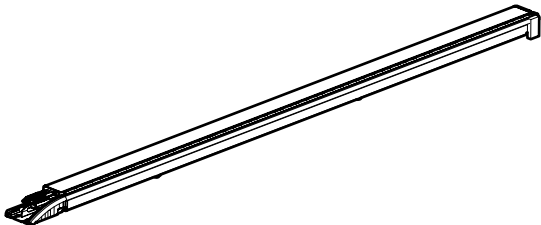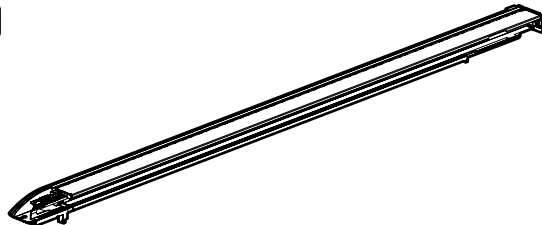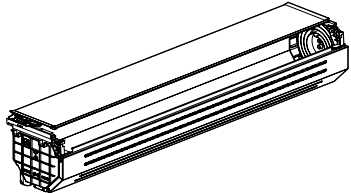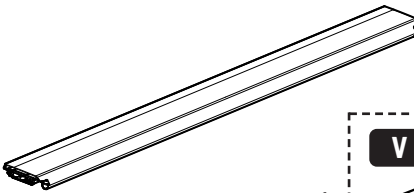
<p>A</p>  <p>x1</p>	<p>B</p>  <p>x1</p>
<p>C</p>  <p>x2</p>	<p>D</p>  <p>x1</p> <div style="border: 1px dashed black; padding: 2px; display: inline-block;"> <p>V</p>  <p>x1</p> </div>

Kit
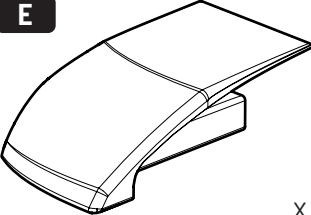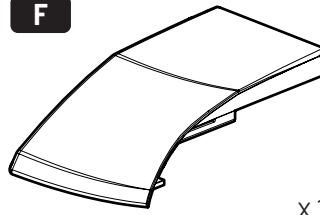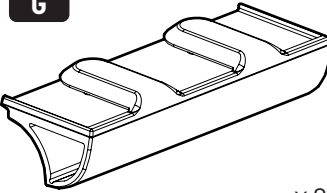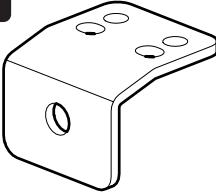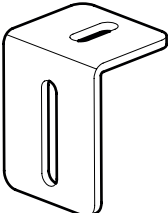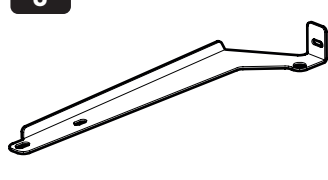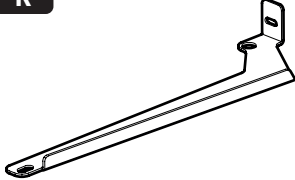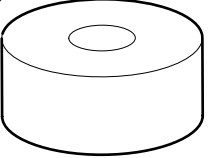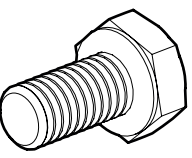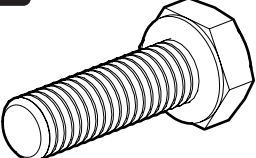
<p>E</p>  <p>x1</p>	<p>F</p>  <p>x1</p>	<p>G</p>  <p>x2</p>	<p>H</p>  <p>x4</p>
<p>I</p>  <p>x4</p>	<p>J</p>  <p>x1</p>	<p>K</p>  <p>x1</p>	<p>L</p>  <p>x2</p>
<p>M</p>  <p>x8</p>	<p>N</p>  <p>x2</p>	<p>O</p>  <p>x10</p>	<p>P</p>  <p>x4</p>
<p>Q</p>  <p>x4</p>	<p>R</p>  <p>x2</p>	<p>S</p>  <p>x1</p>	<p>T</p>  <p>x4</p>
<p>U</p>  <p>x2</p>			


Kit



x1




x1

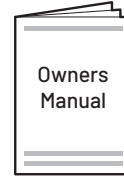


x1

Tools needed

Ø3.5MM
Ø40MM

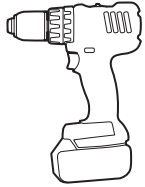





1 - 25 Nm

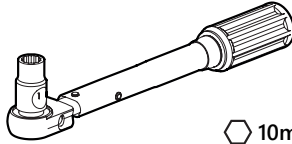


10mm
T30





Rust protection
Rostschutzmittel
Anti-rouille
Anti roest

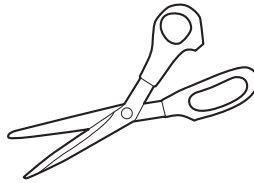
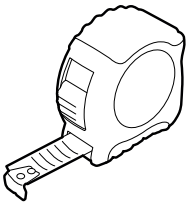








Applying rust protection

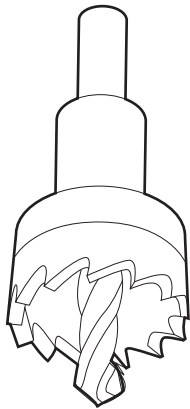

Ø40 MM

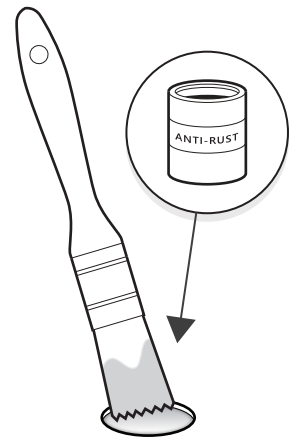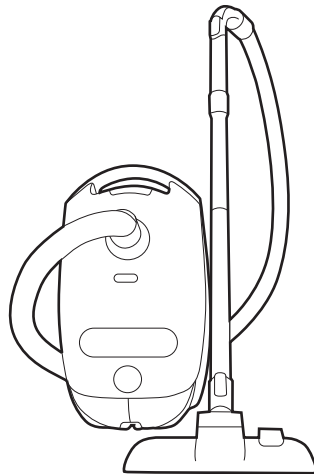


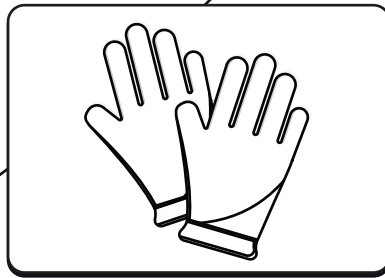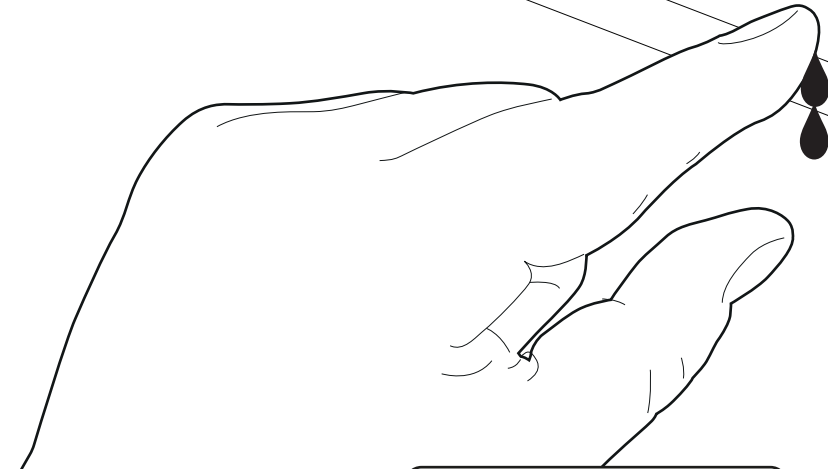

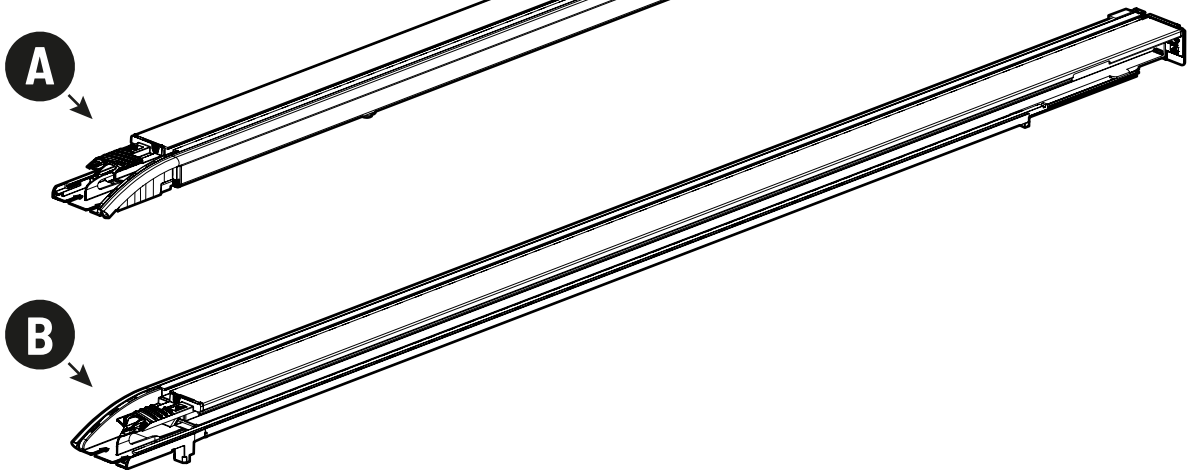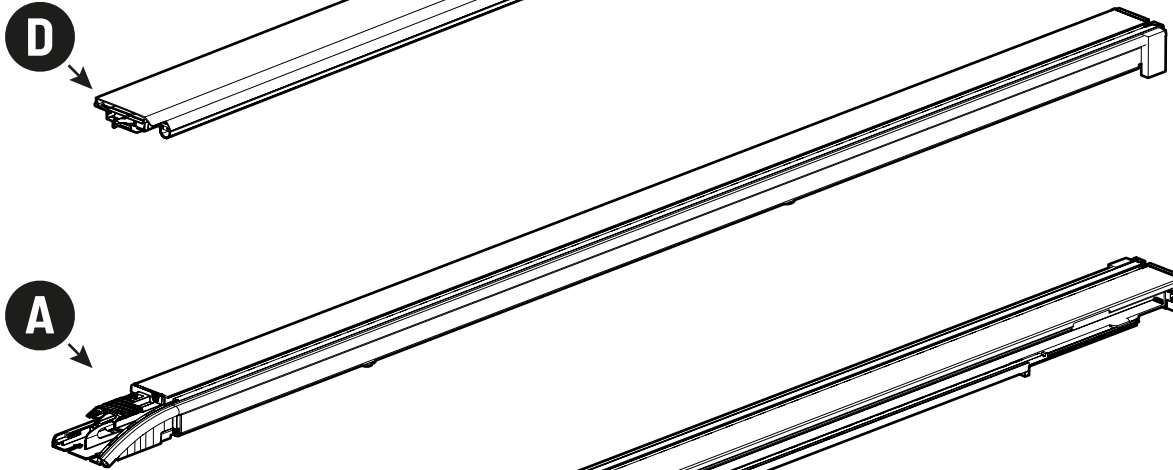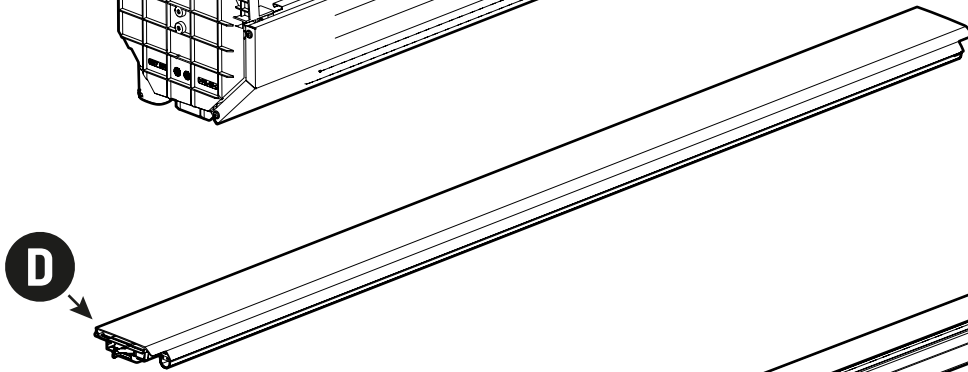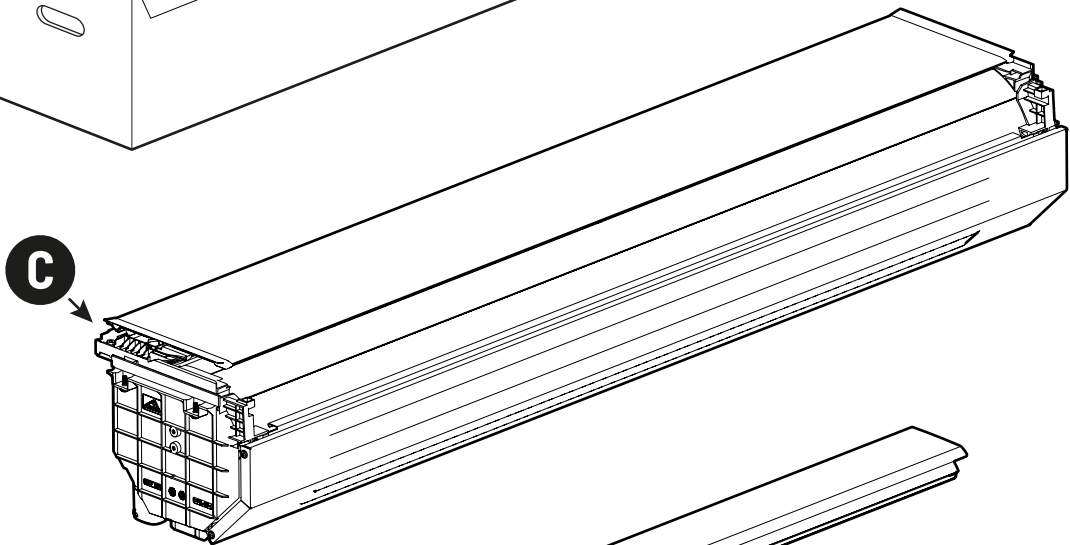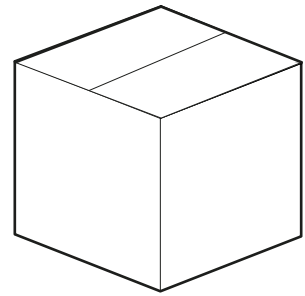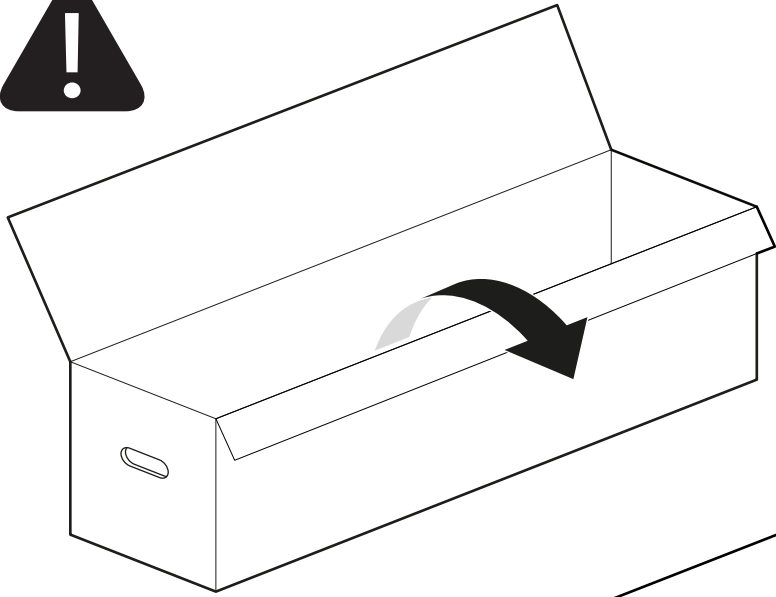




2


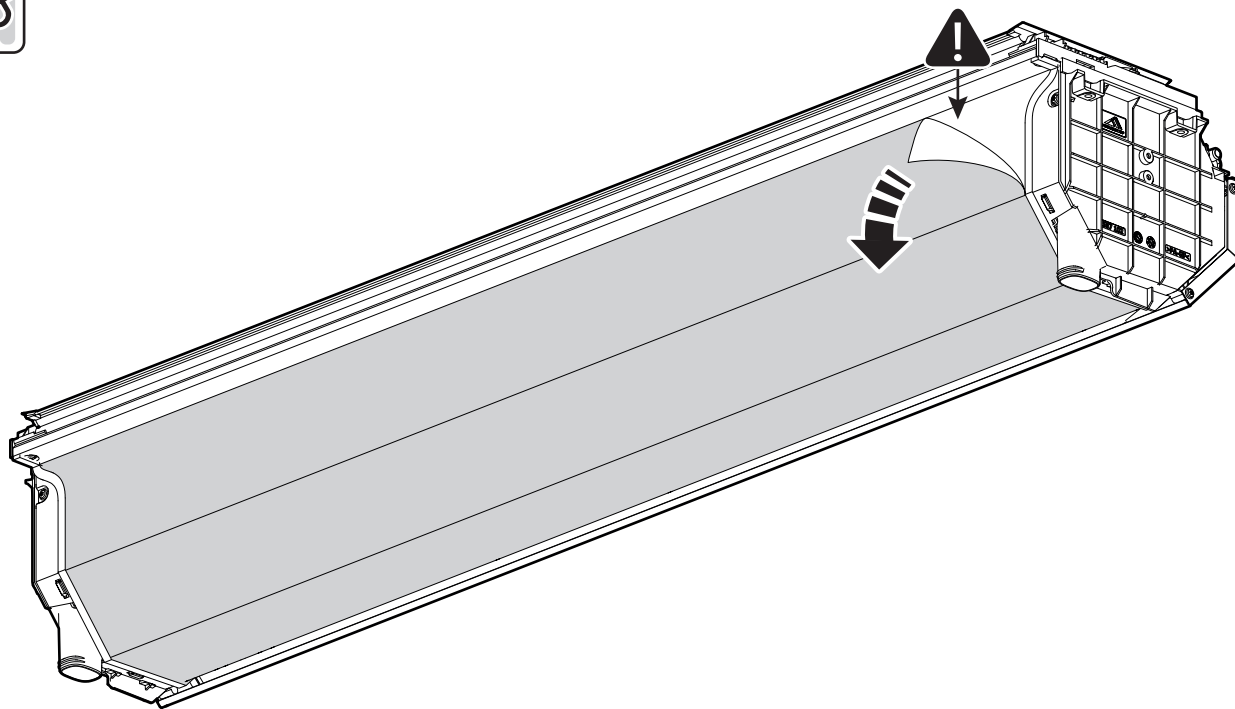


3

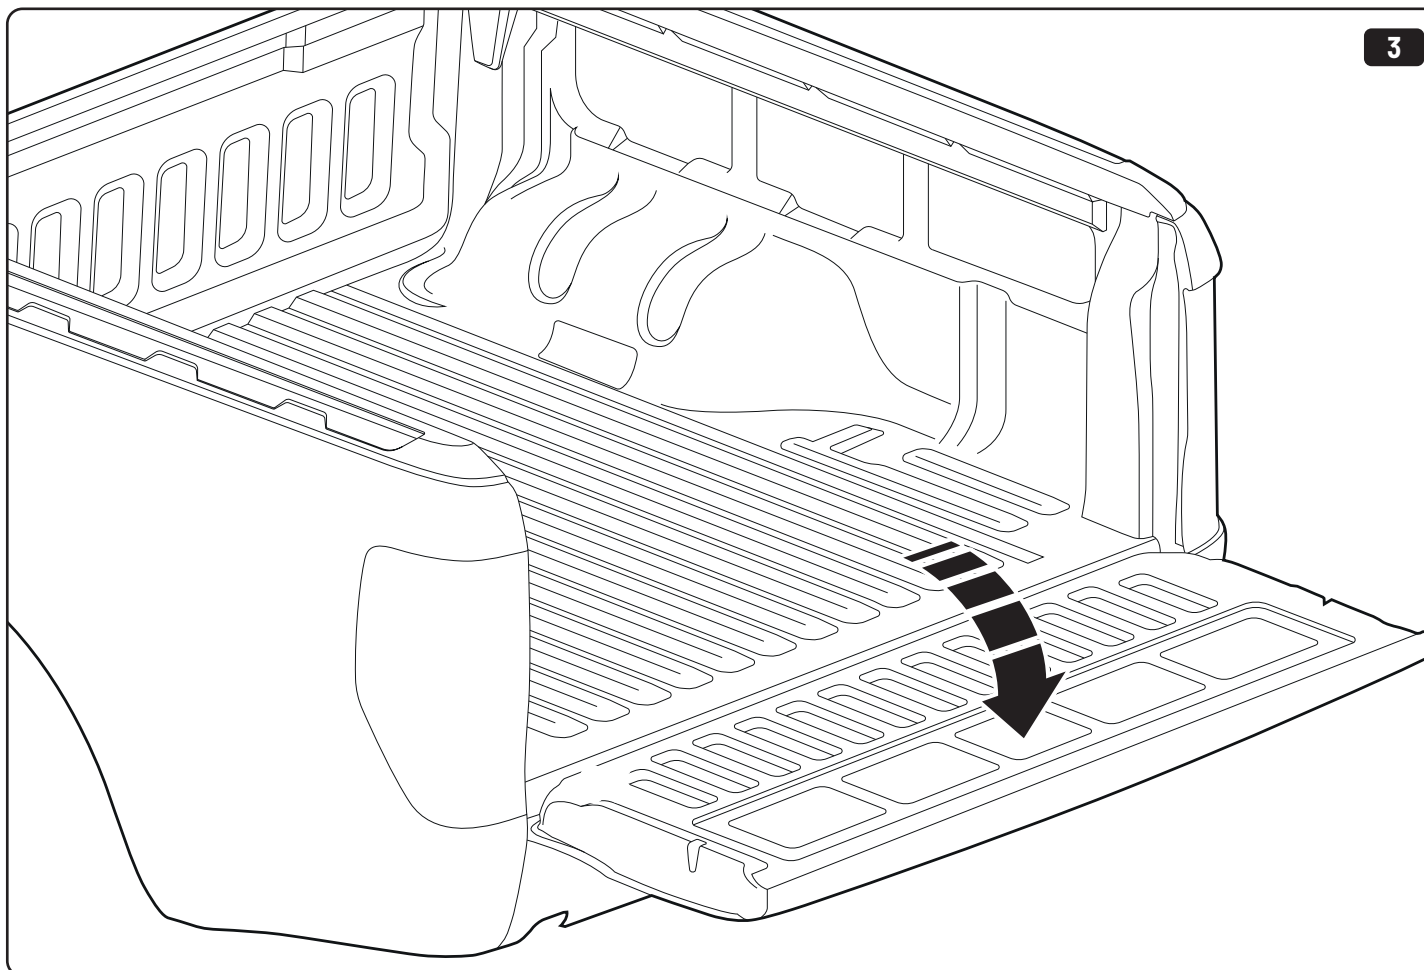






4



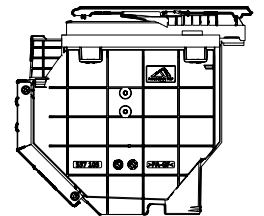
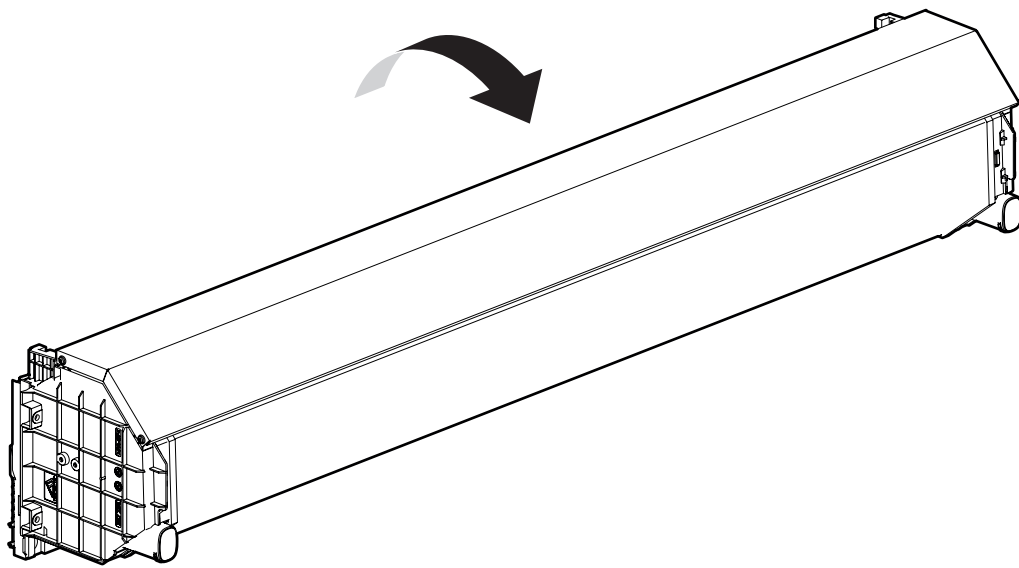




5


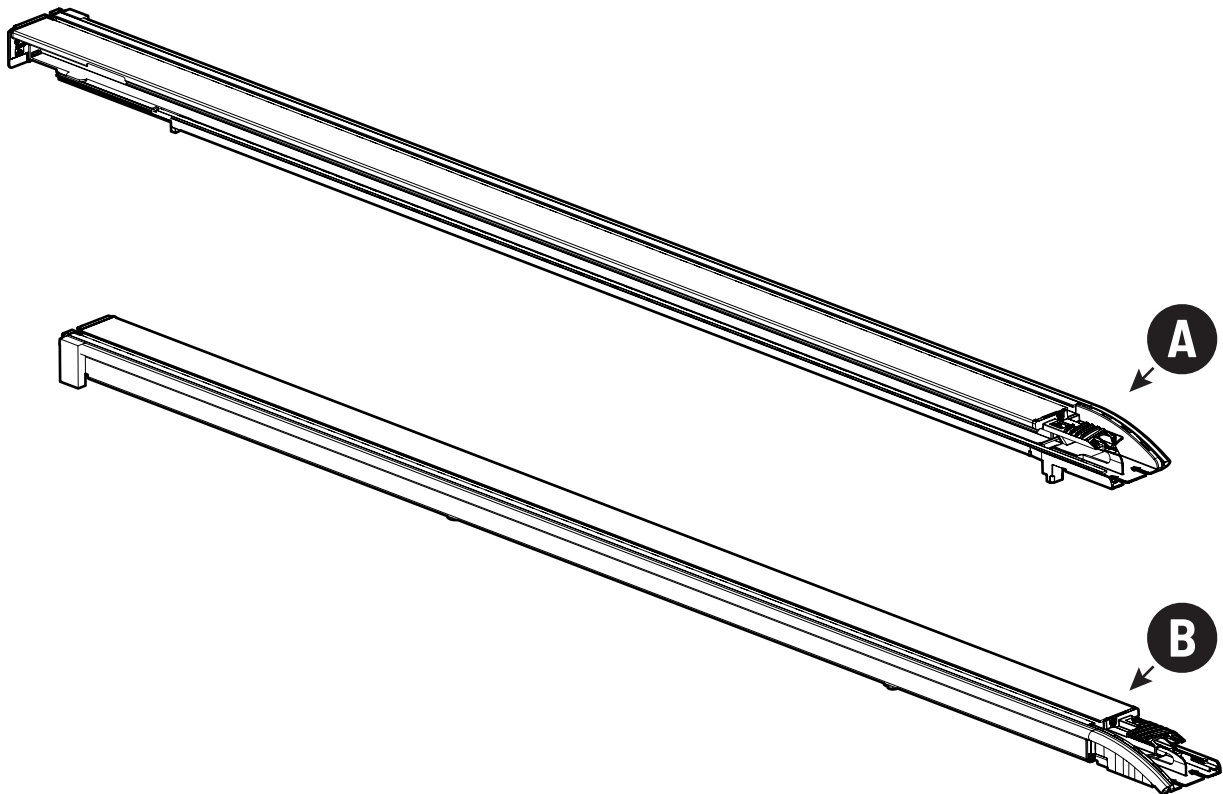


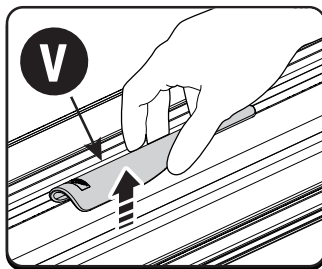
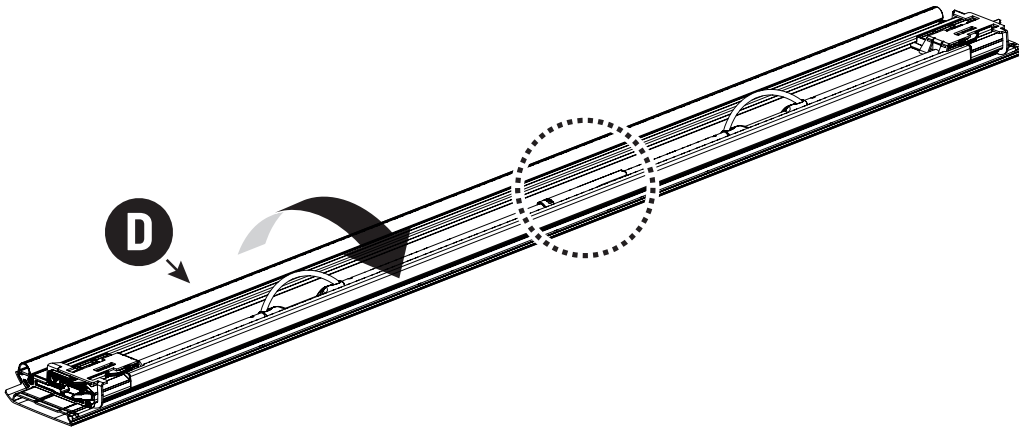




 **LOCTITE 243**

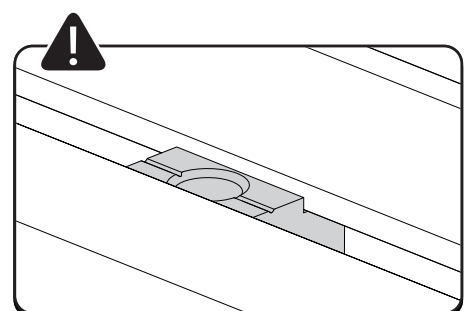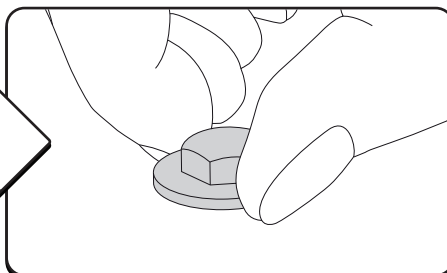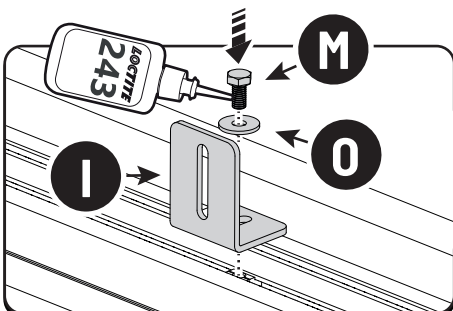
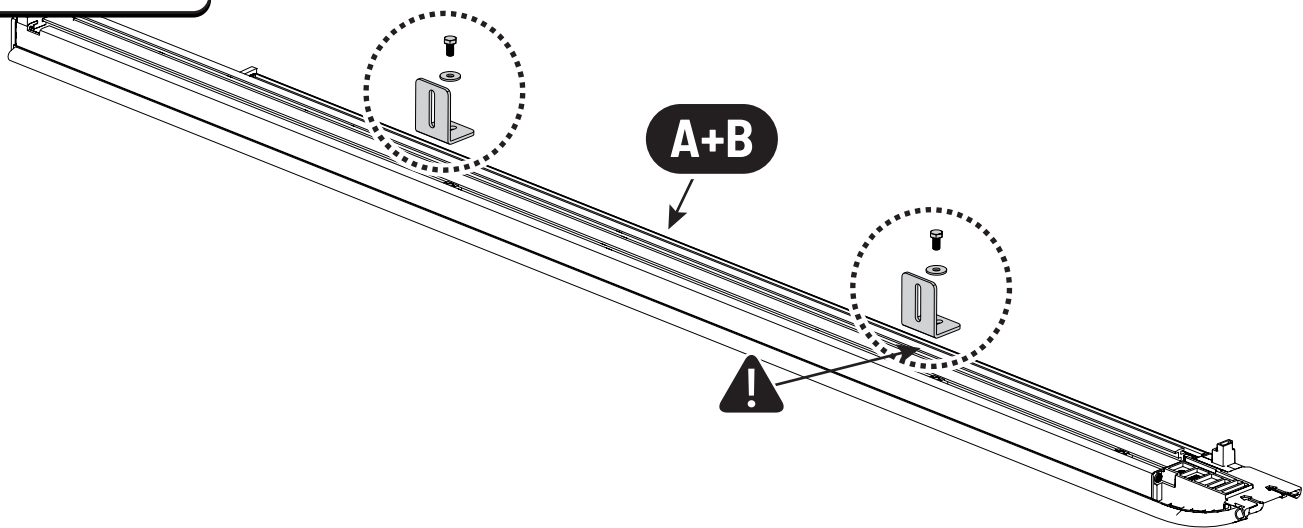


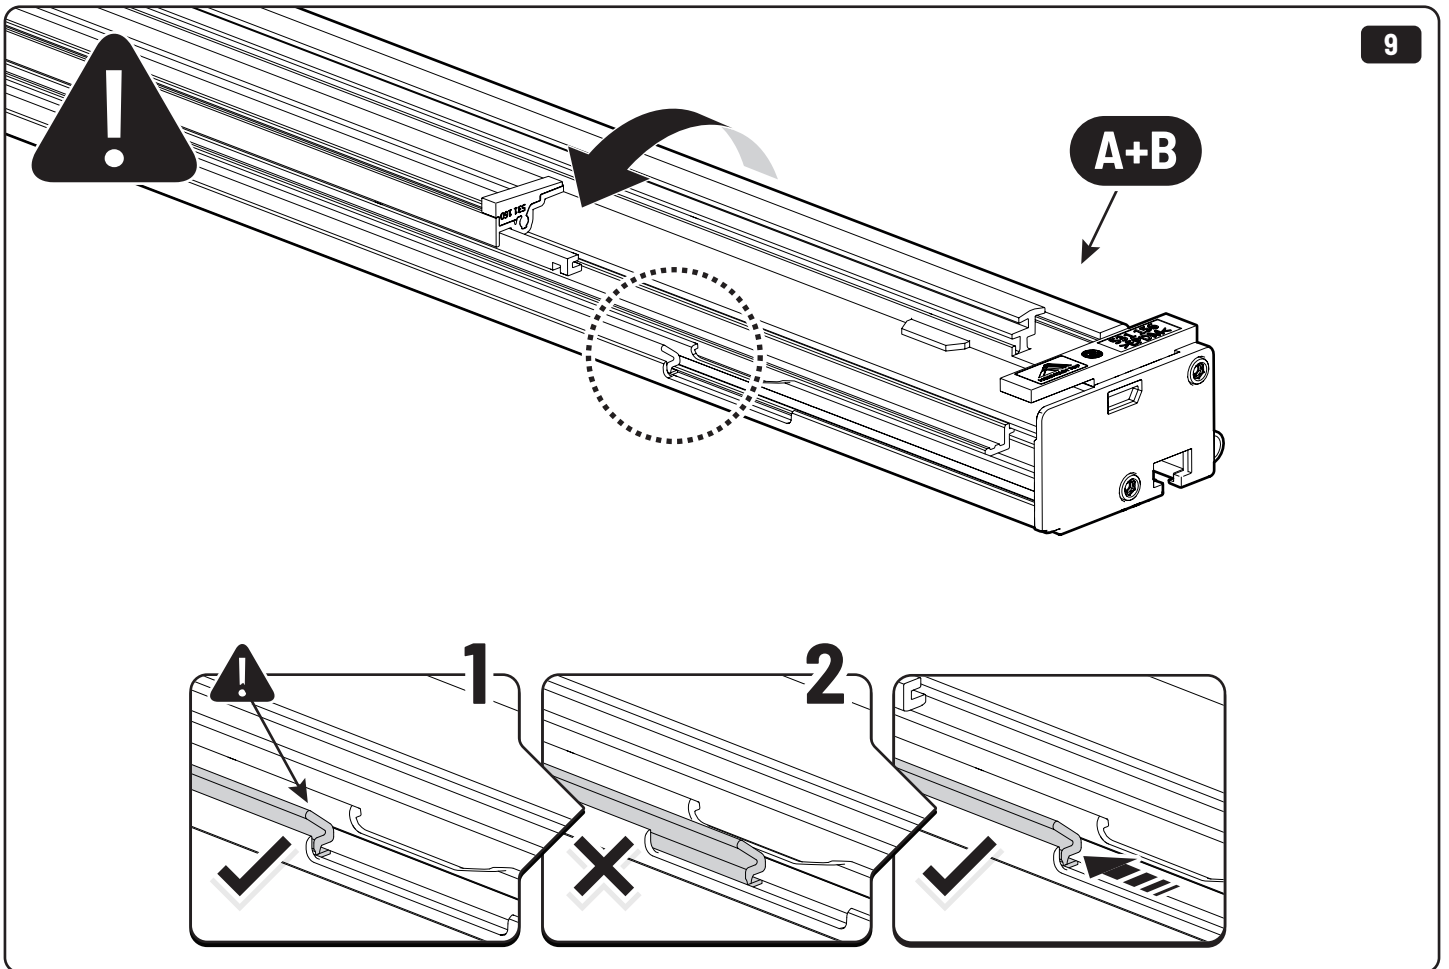
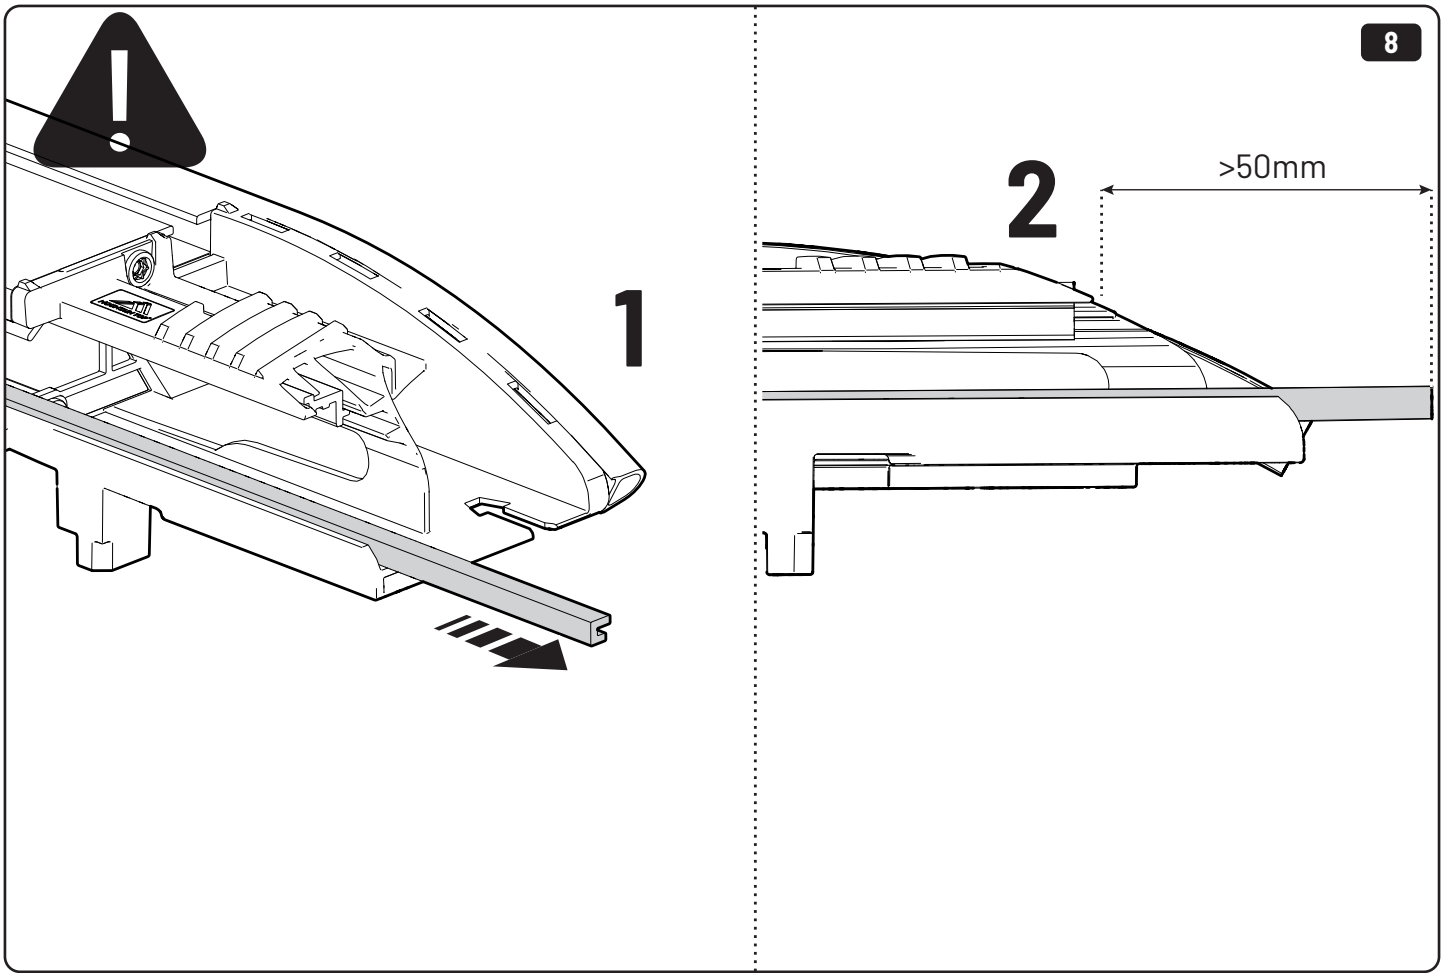







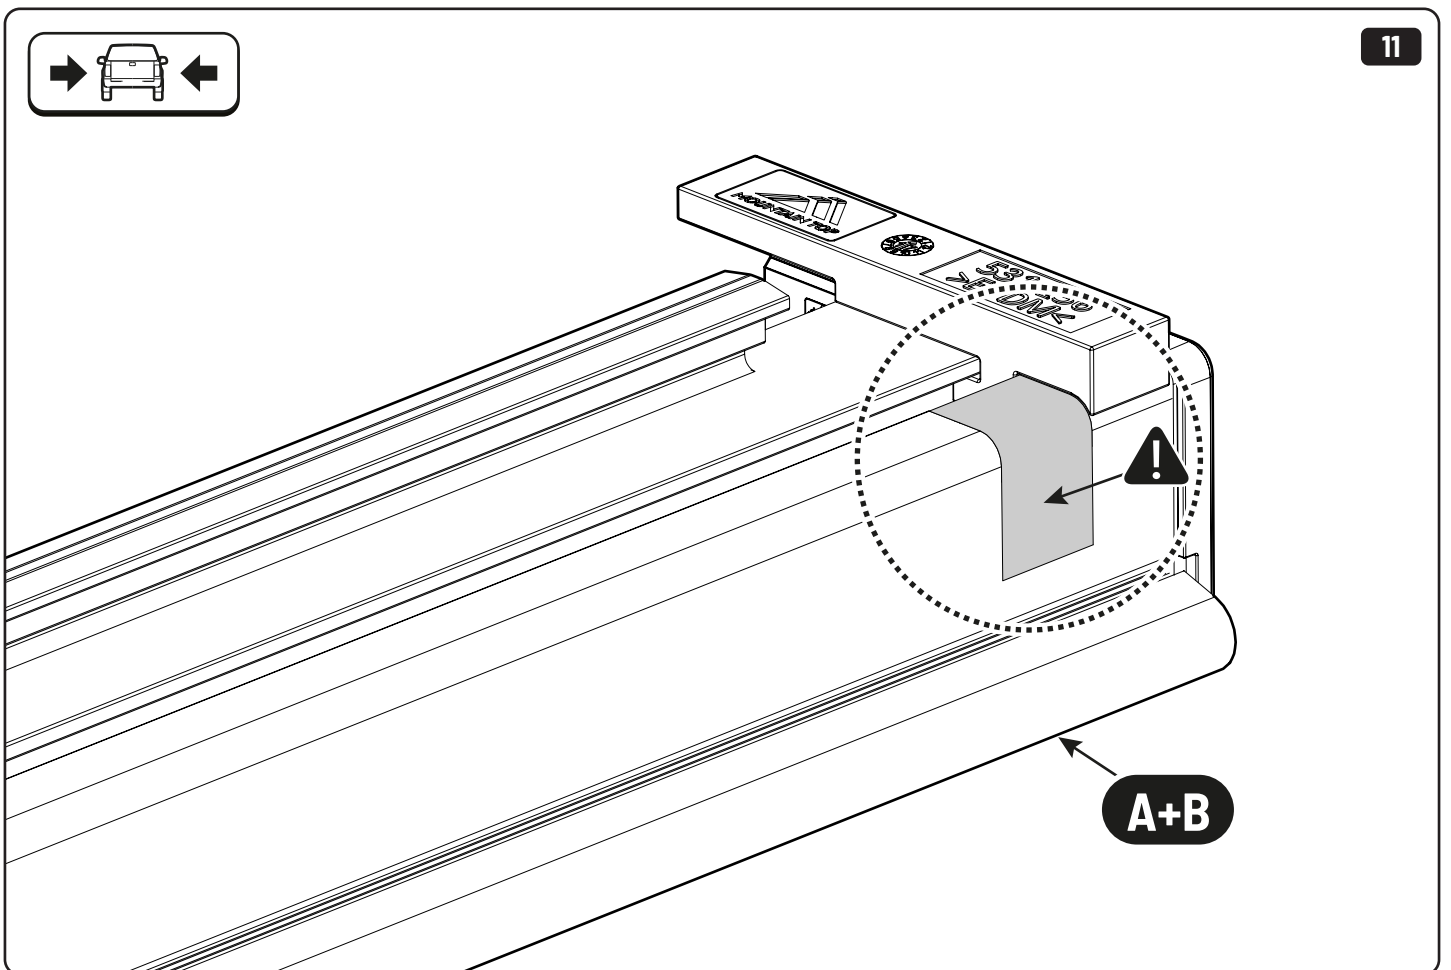
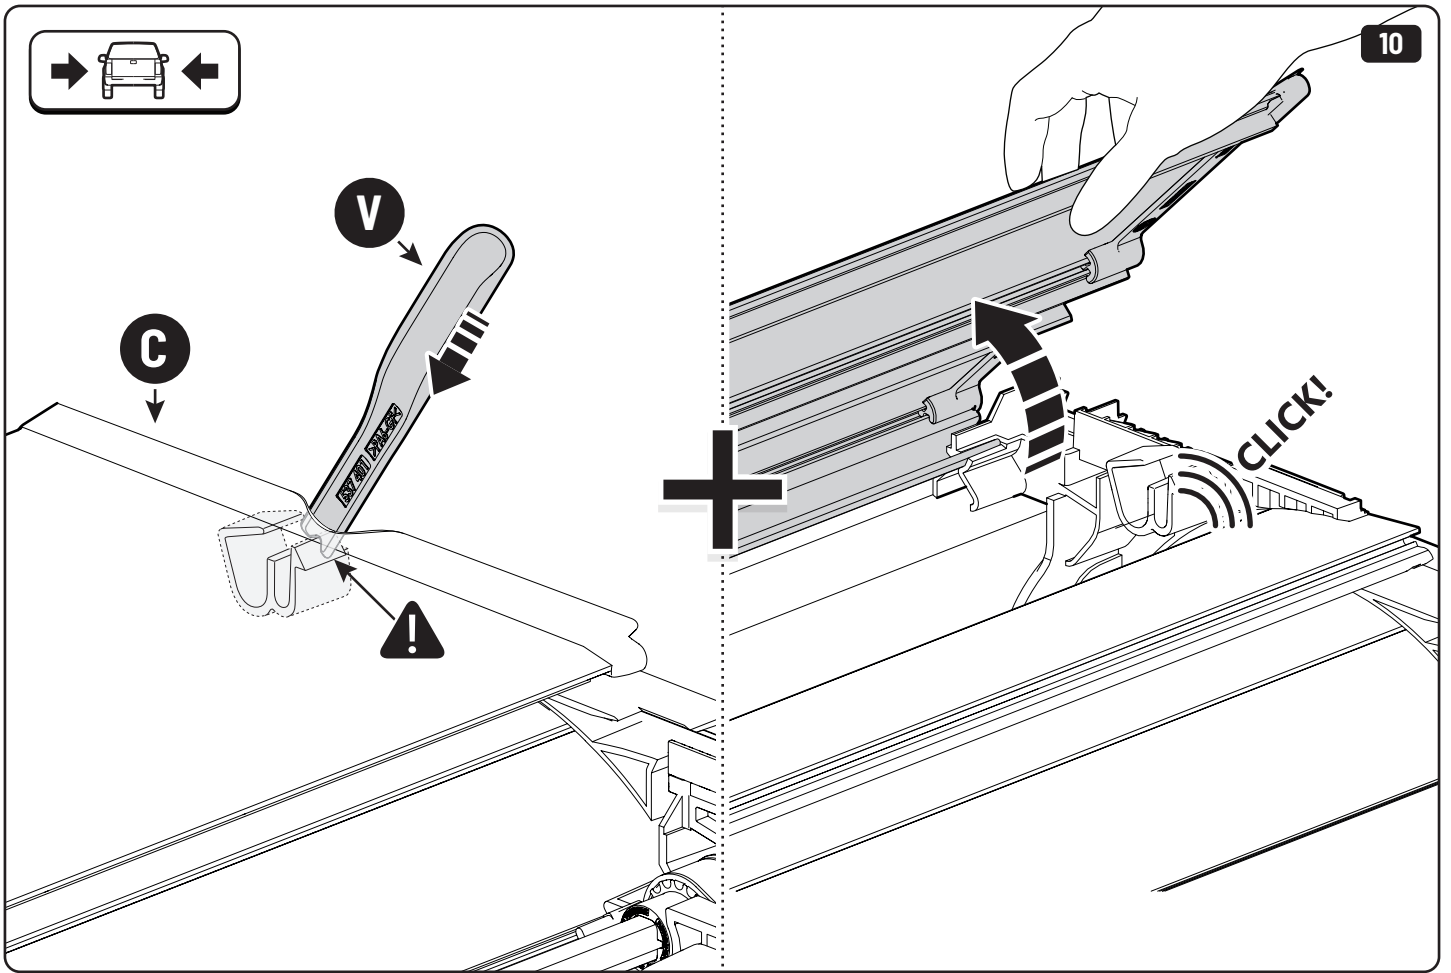


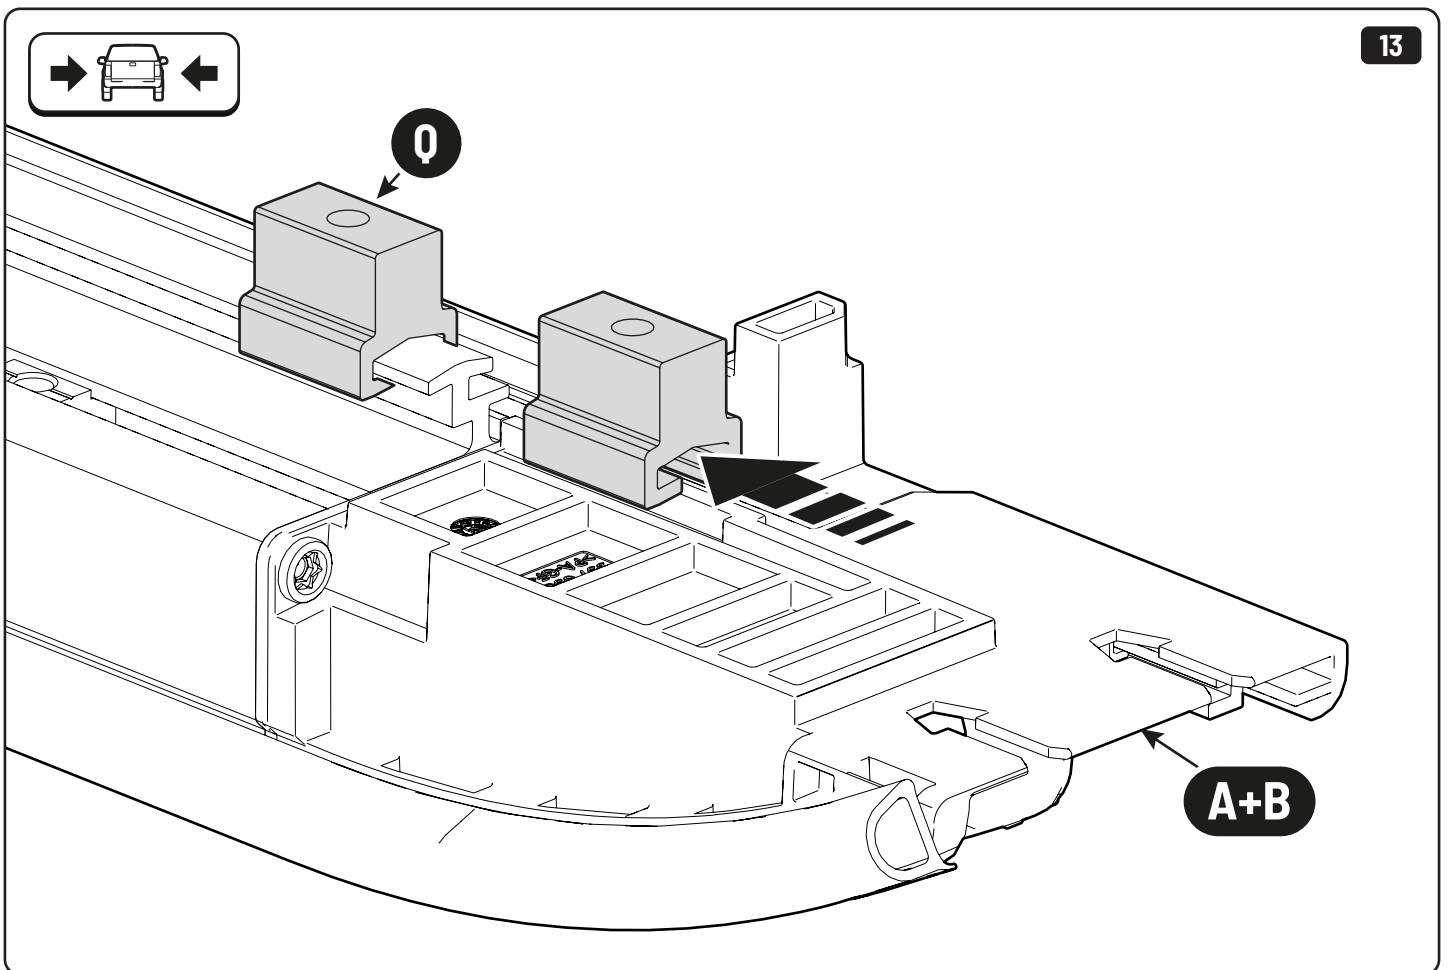
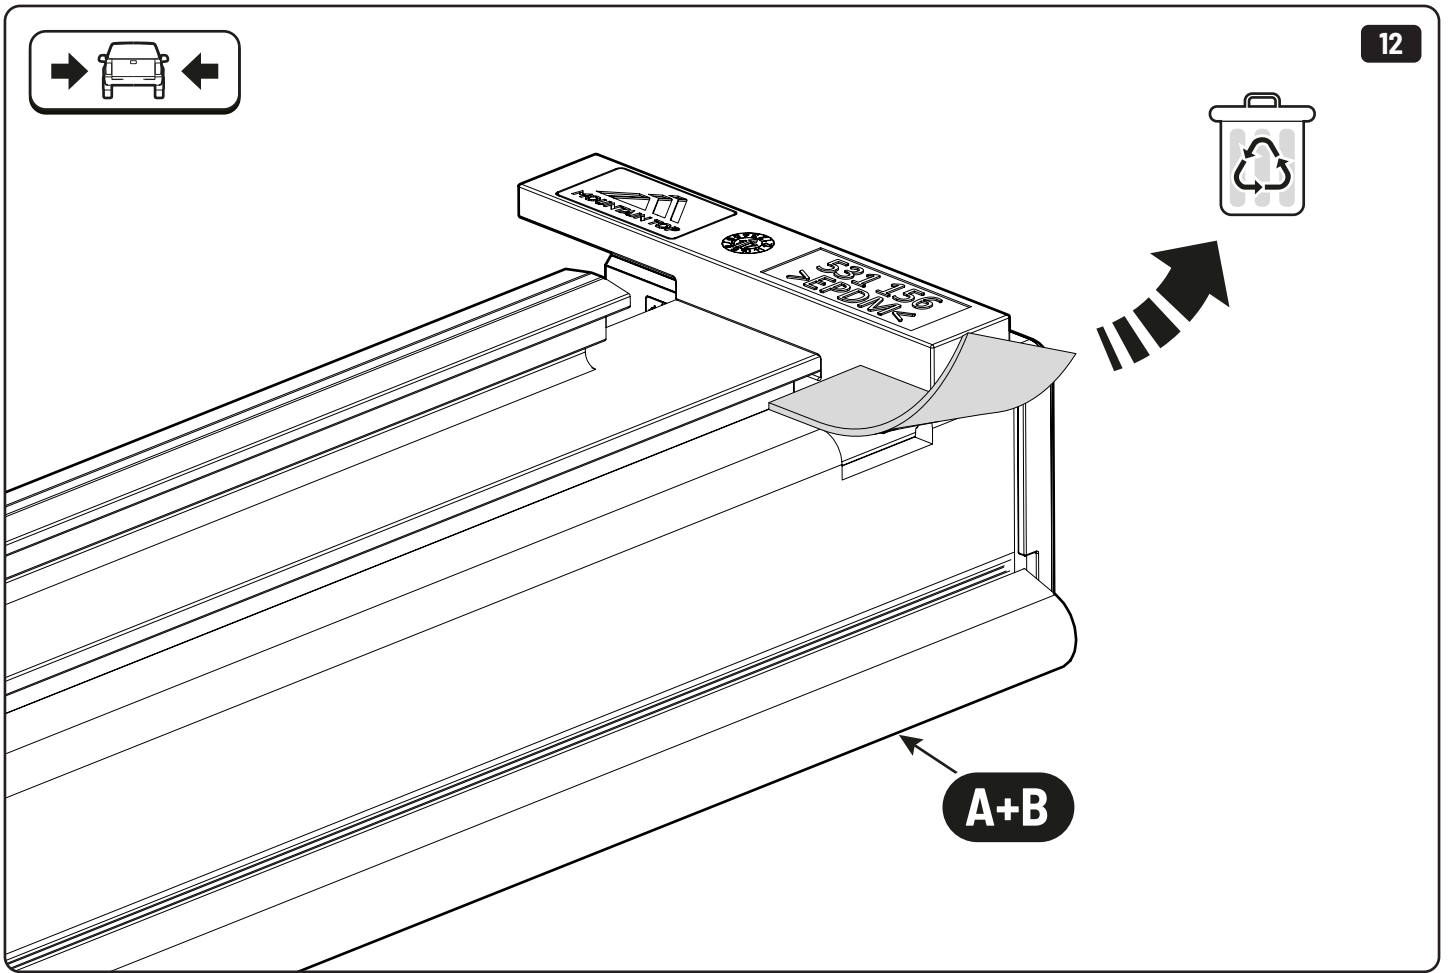


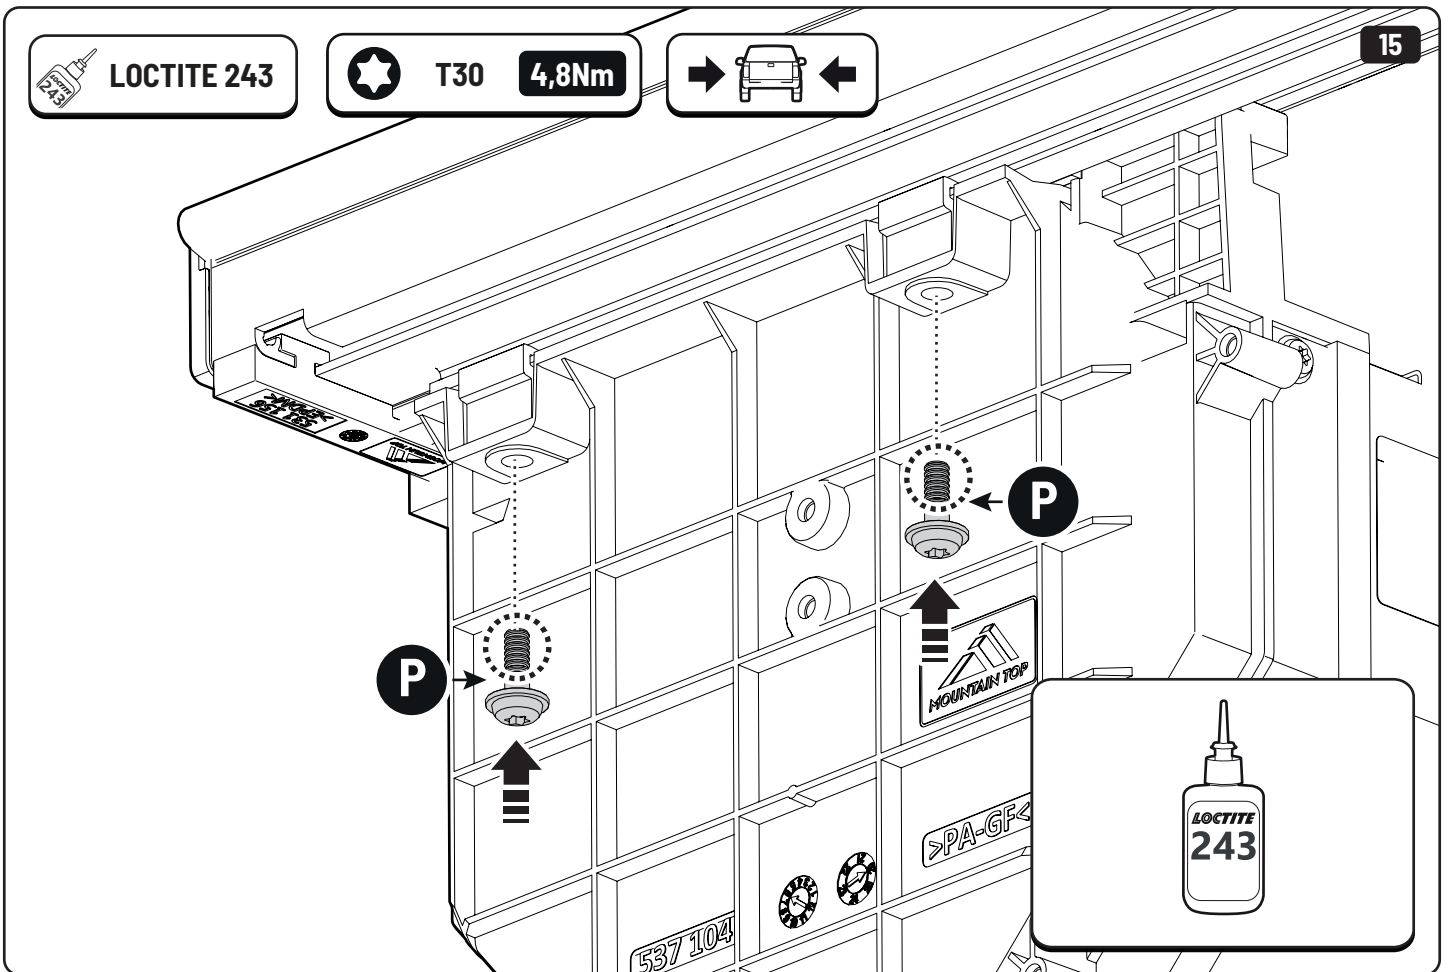
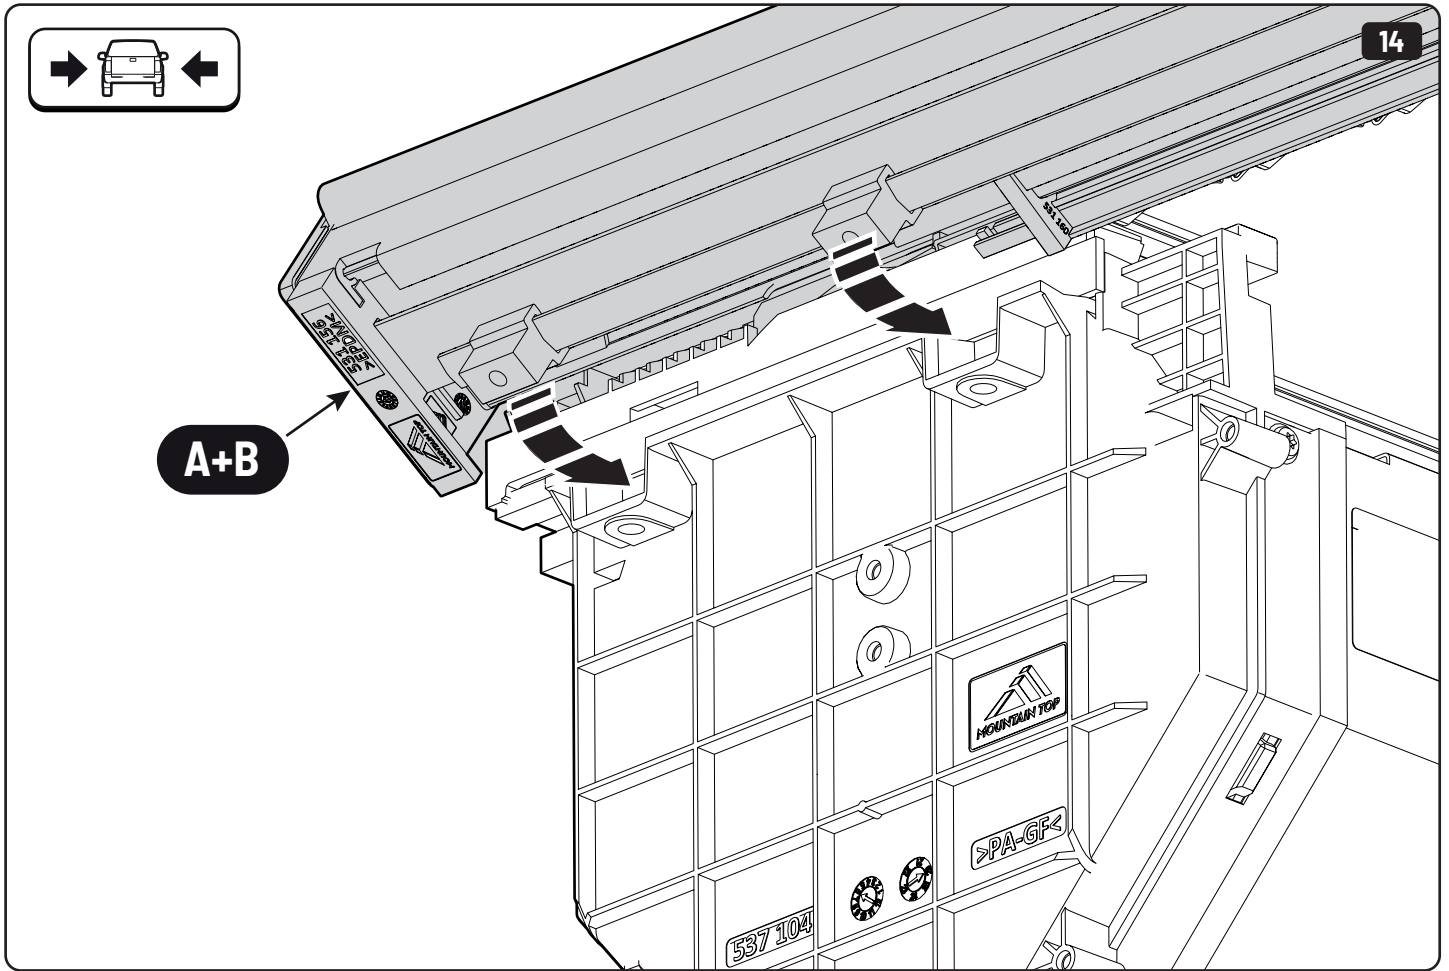


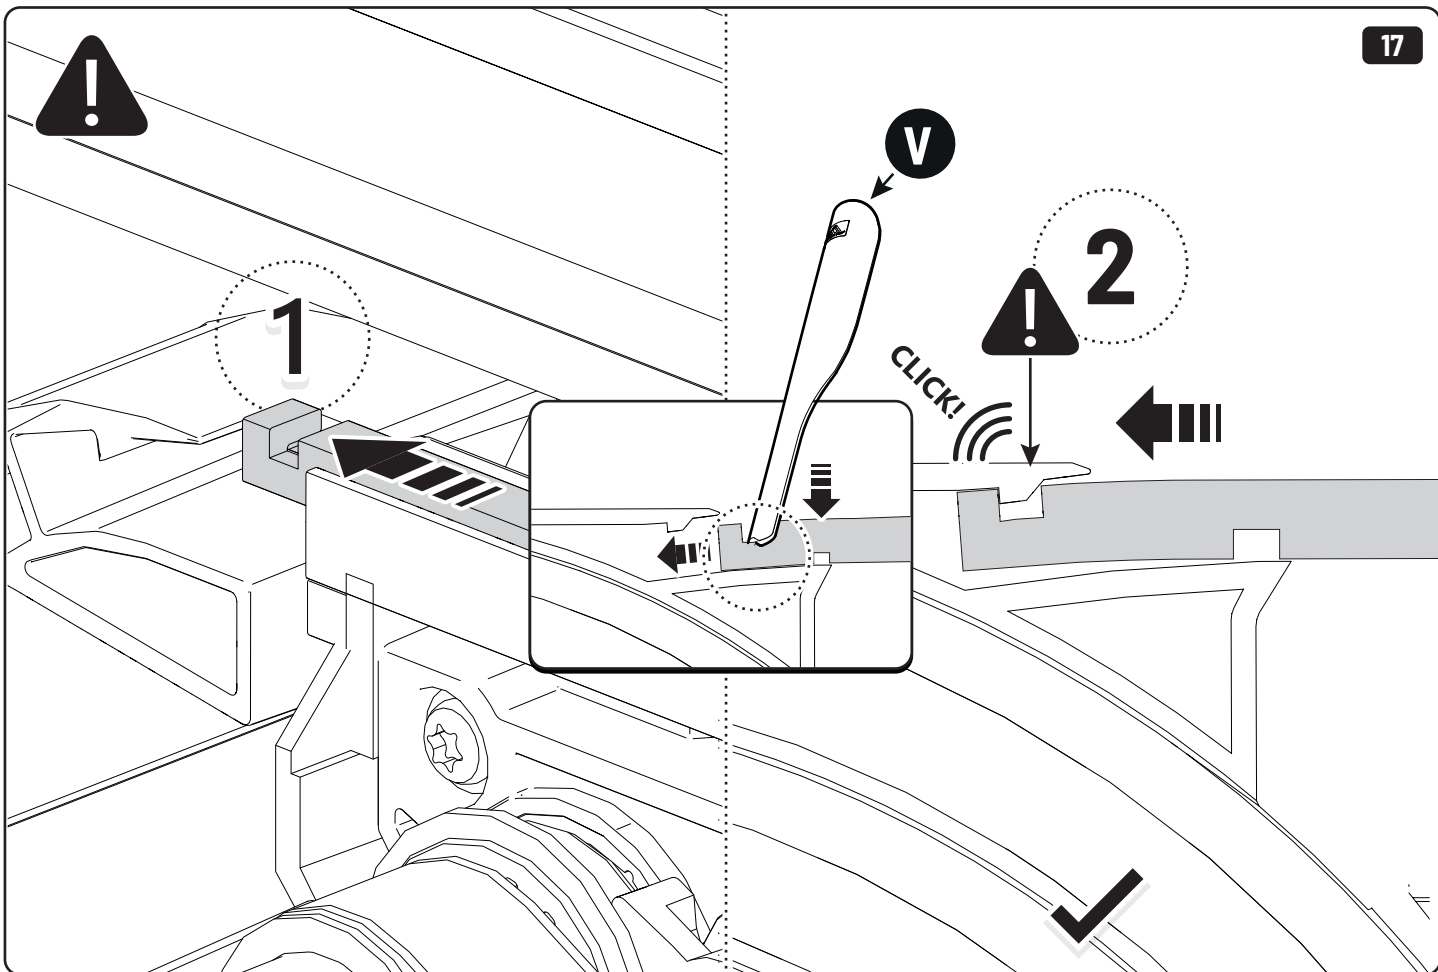
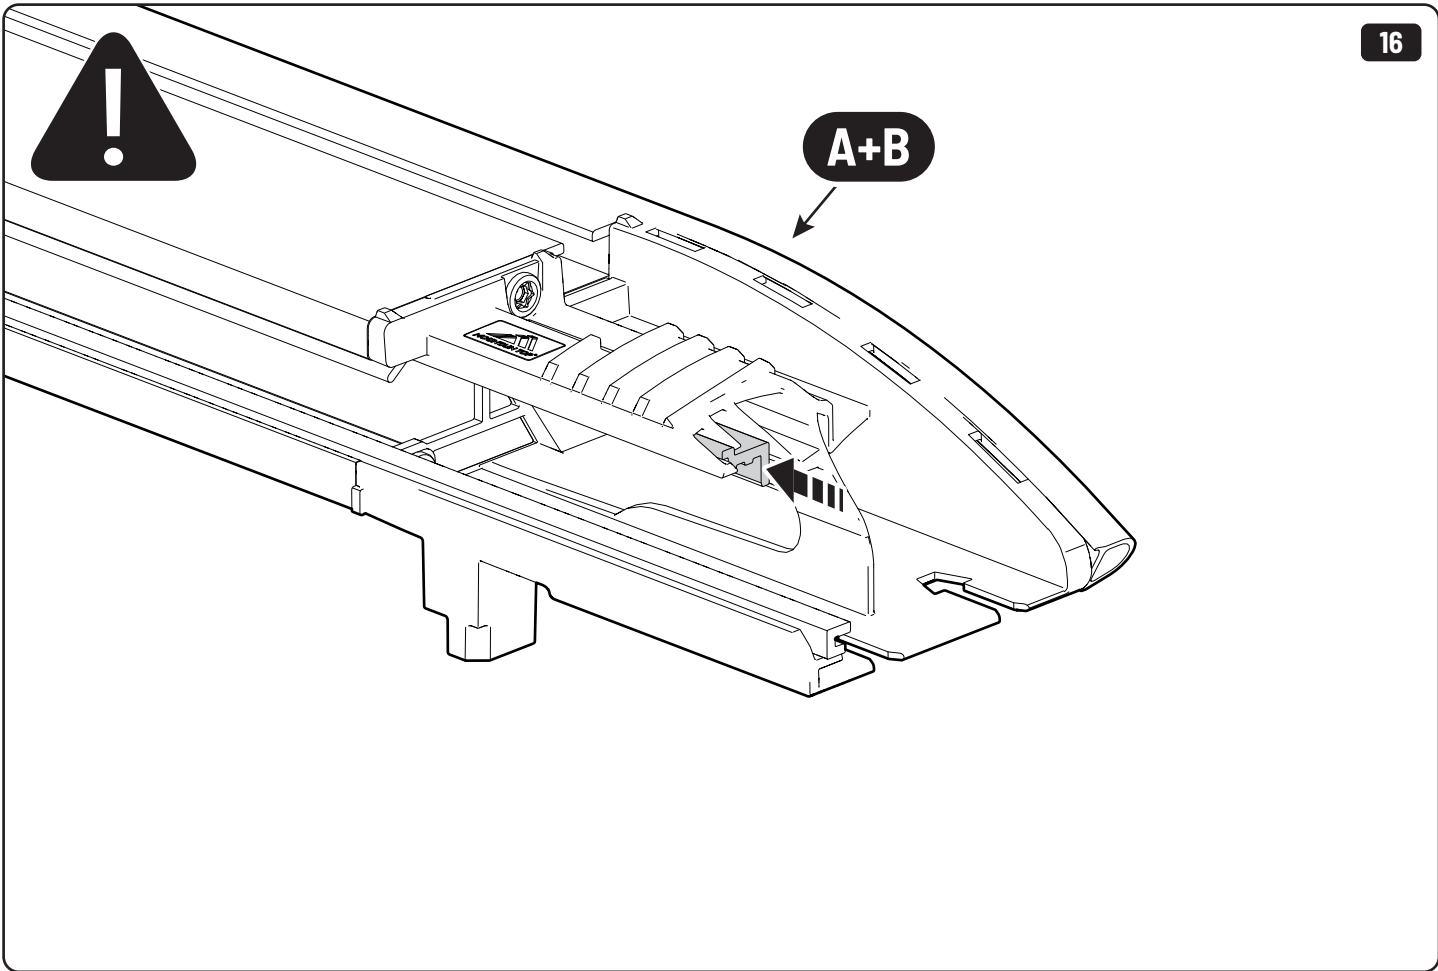





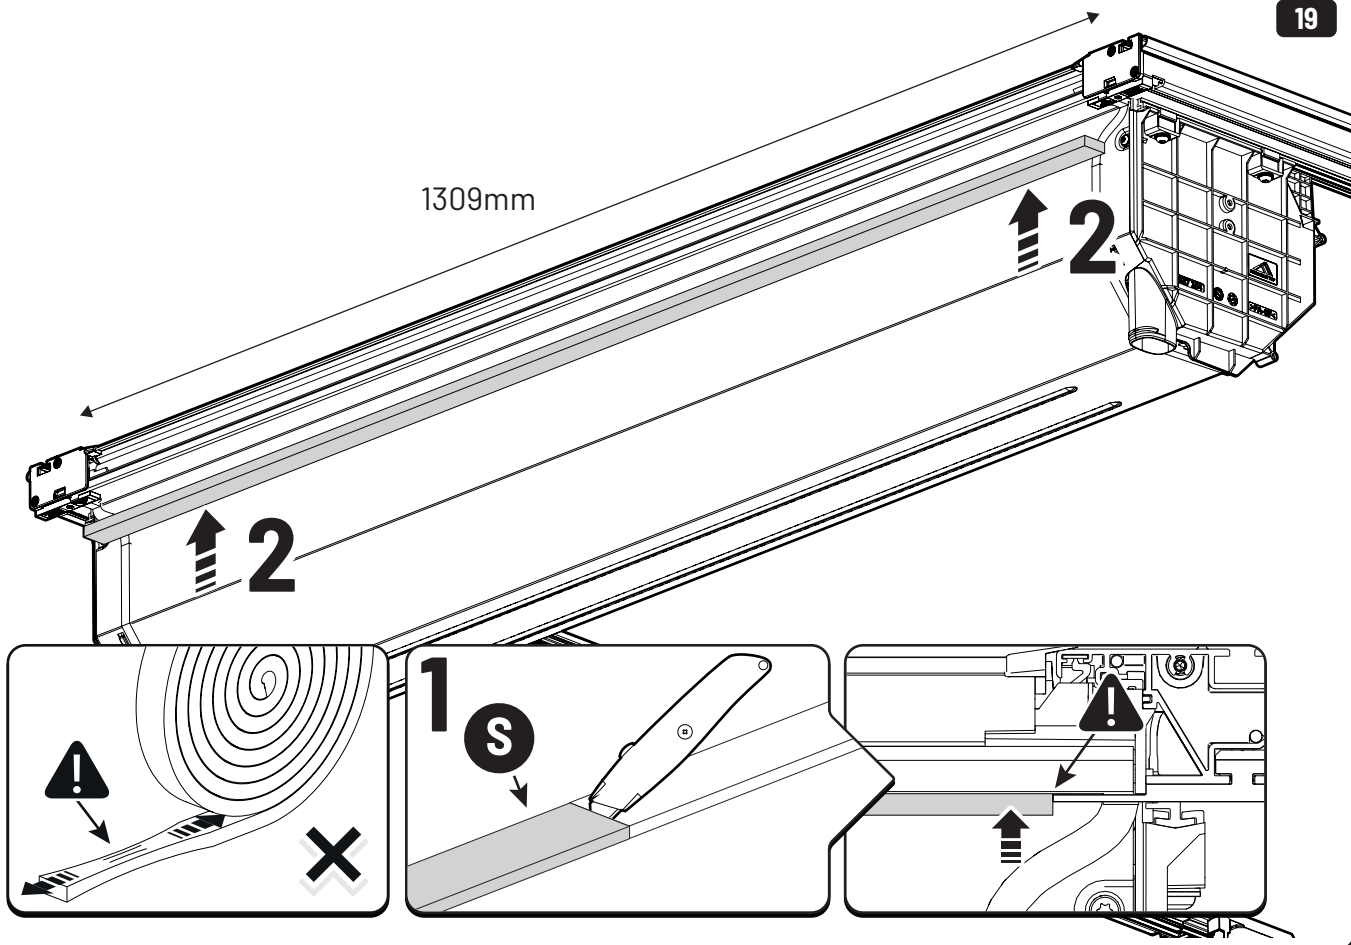
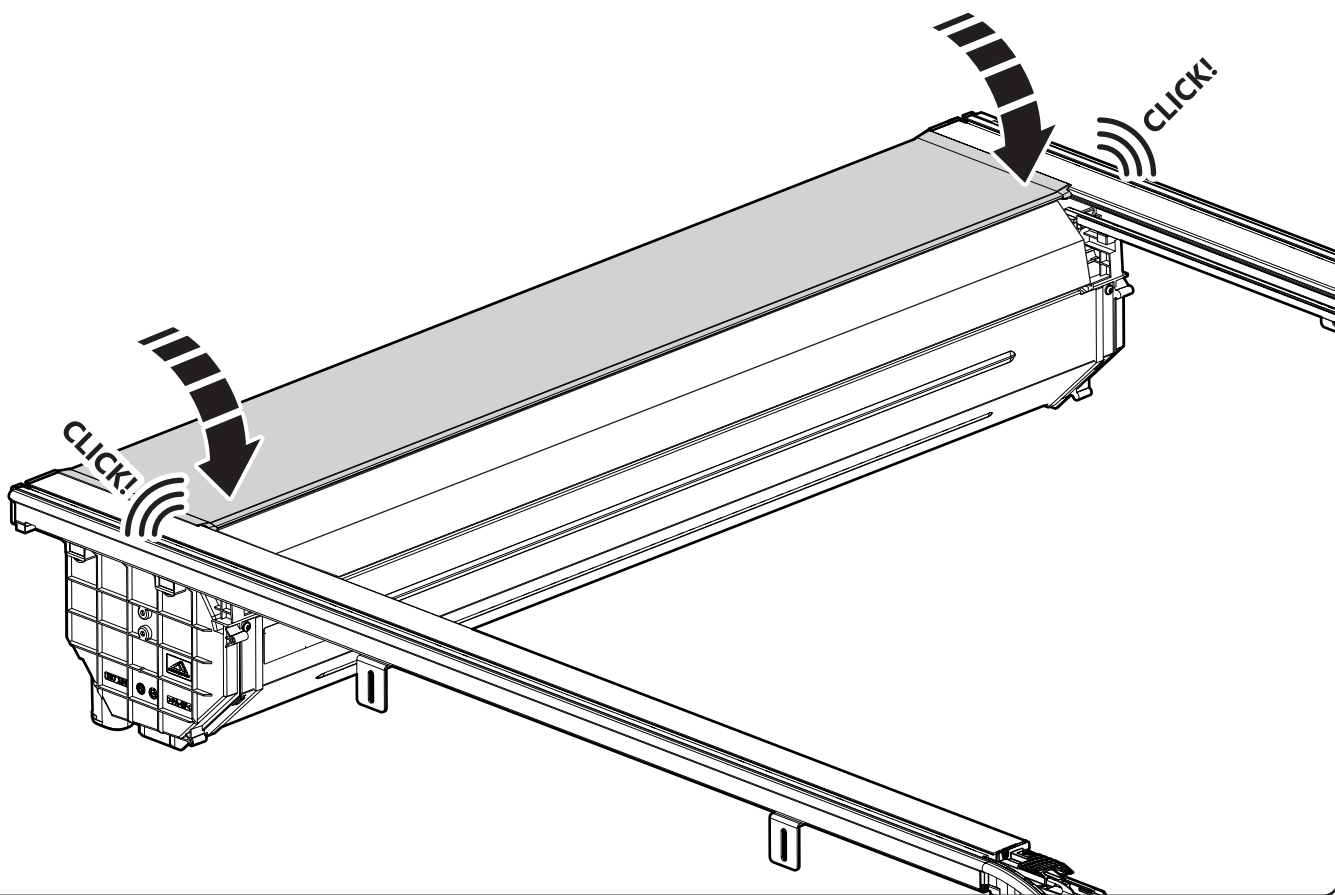


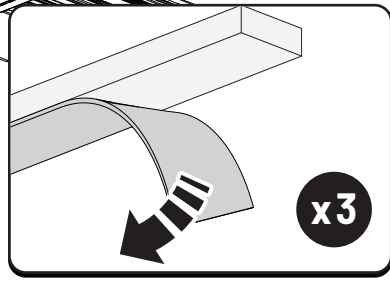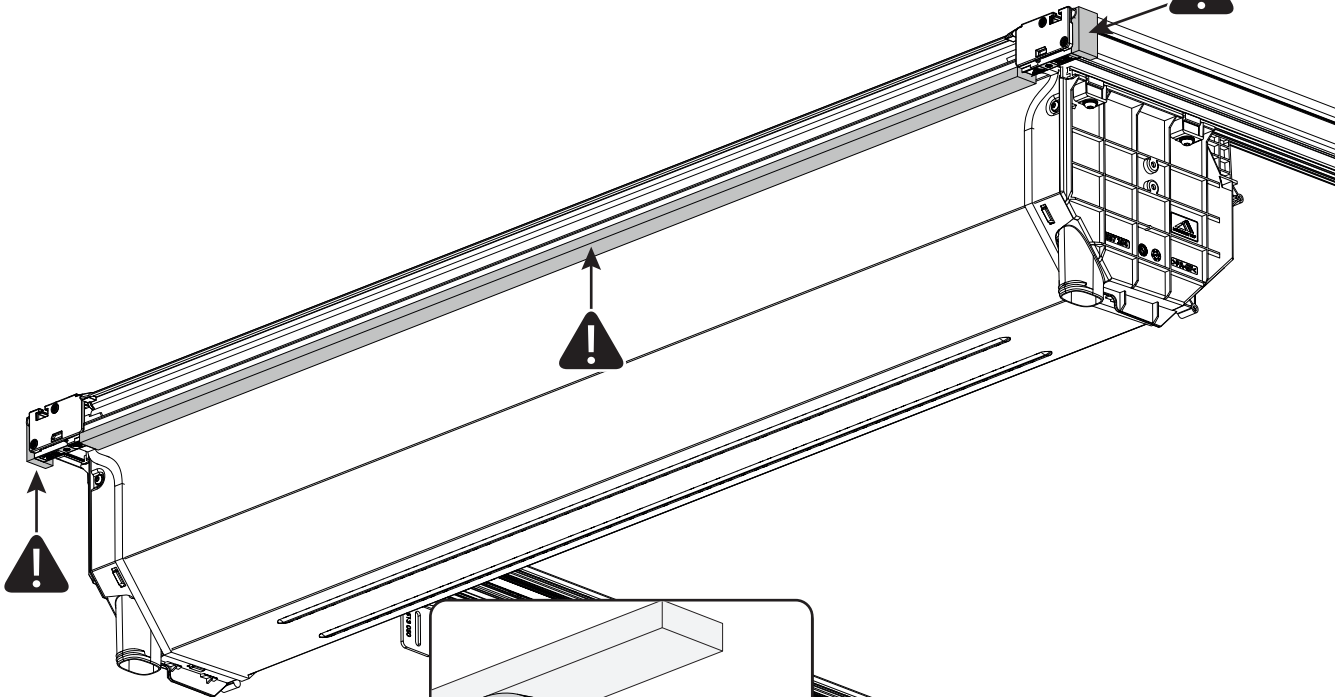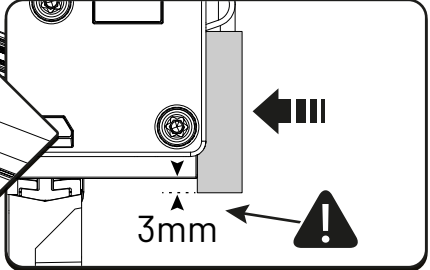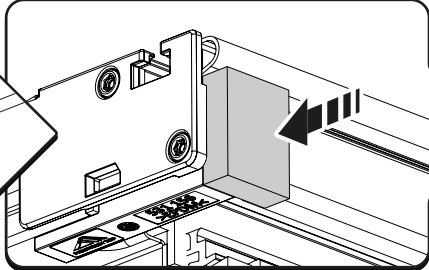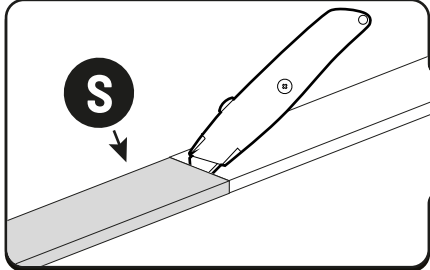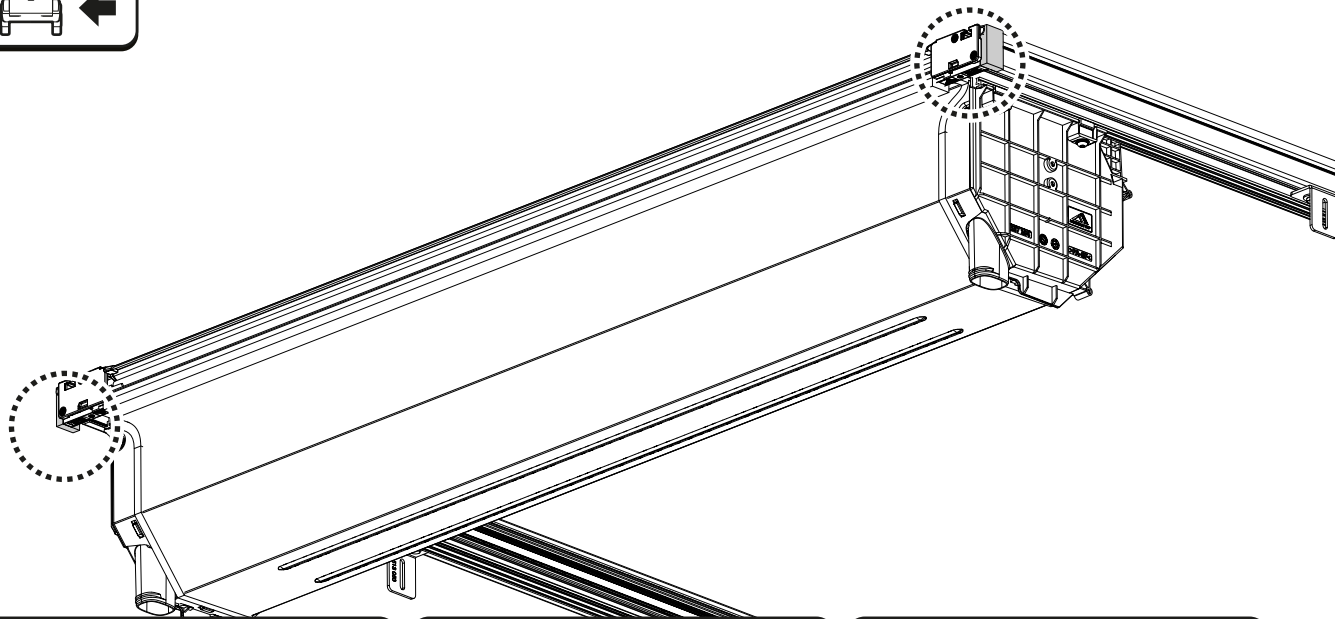

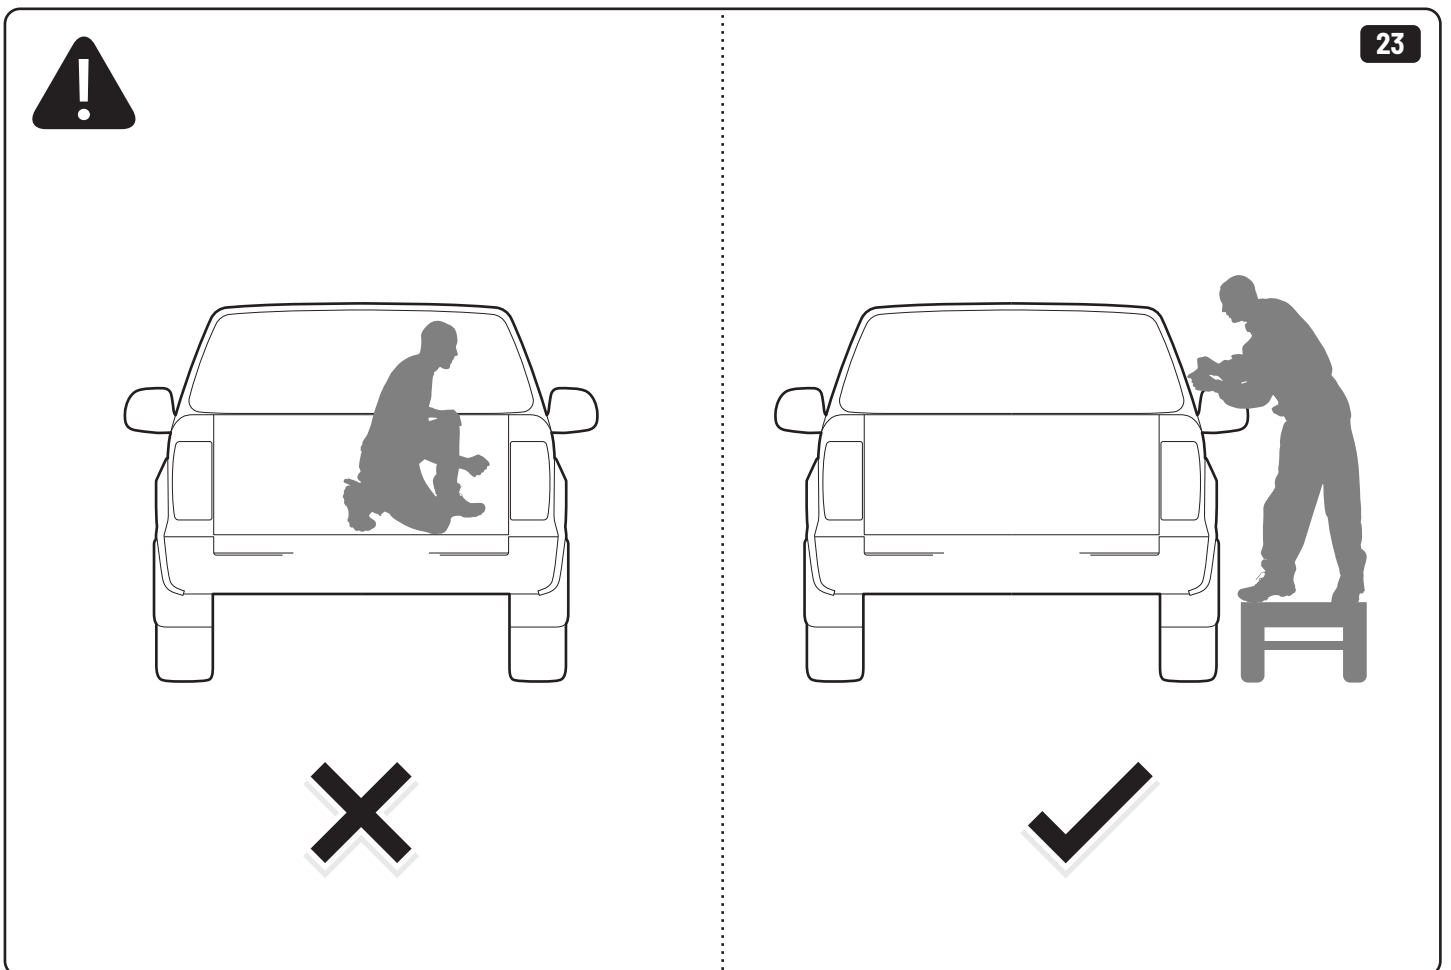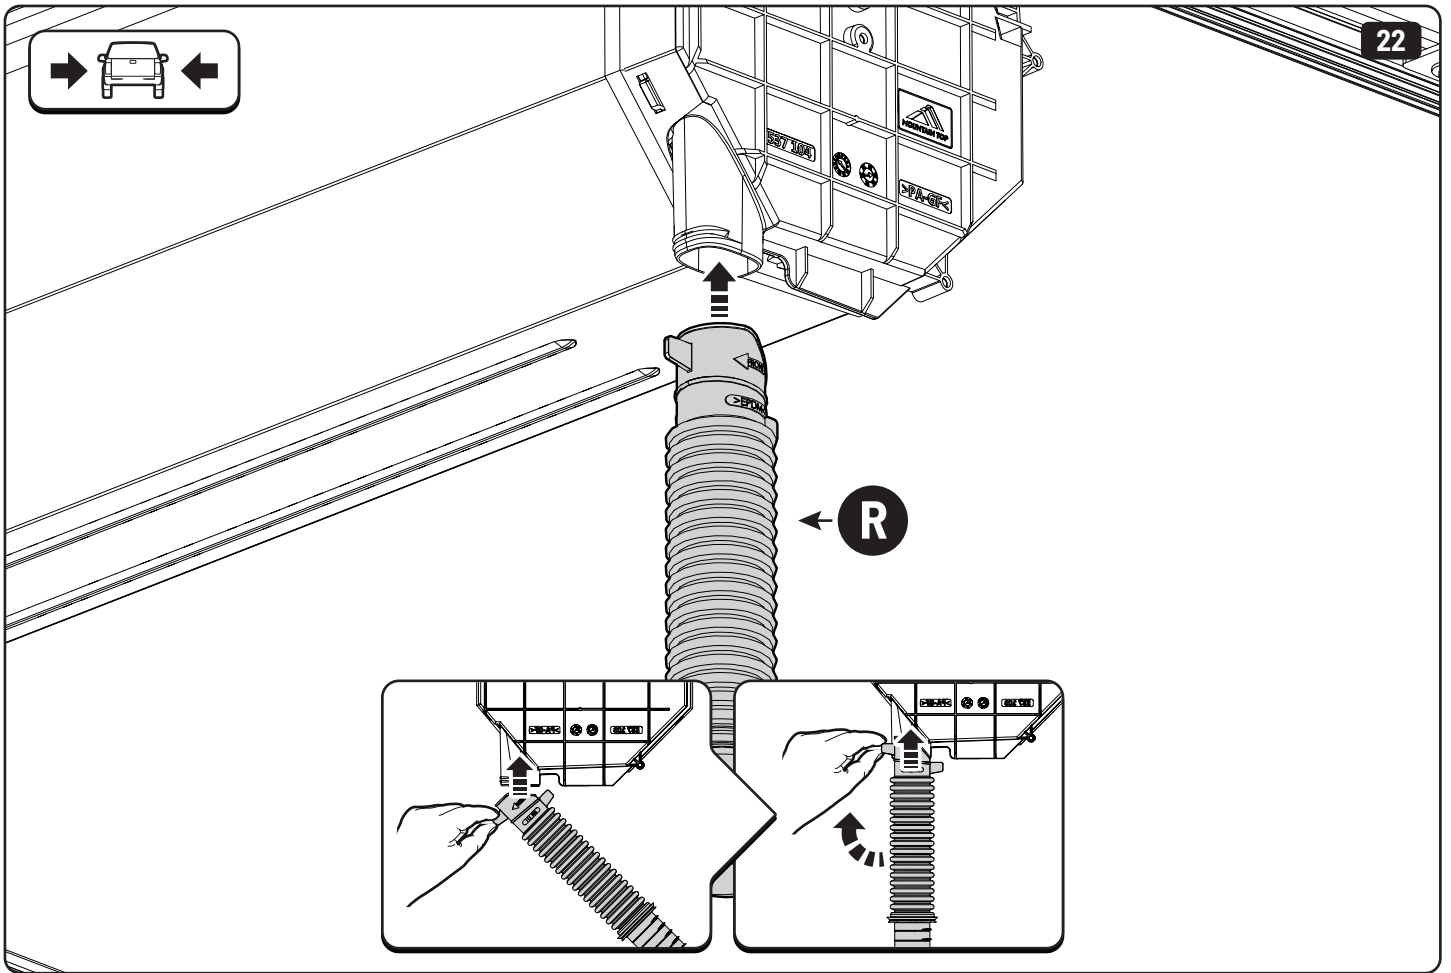


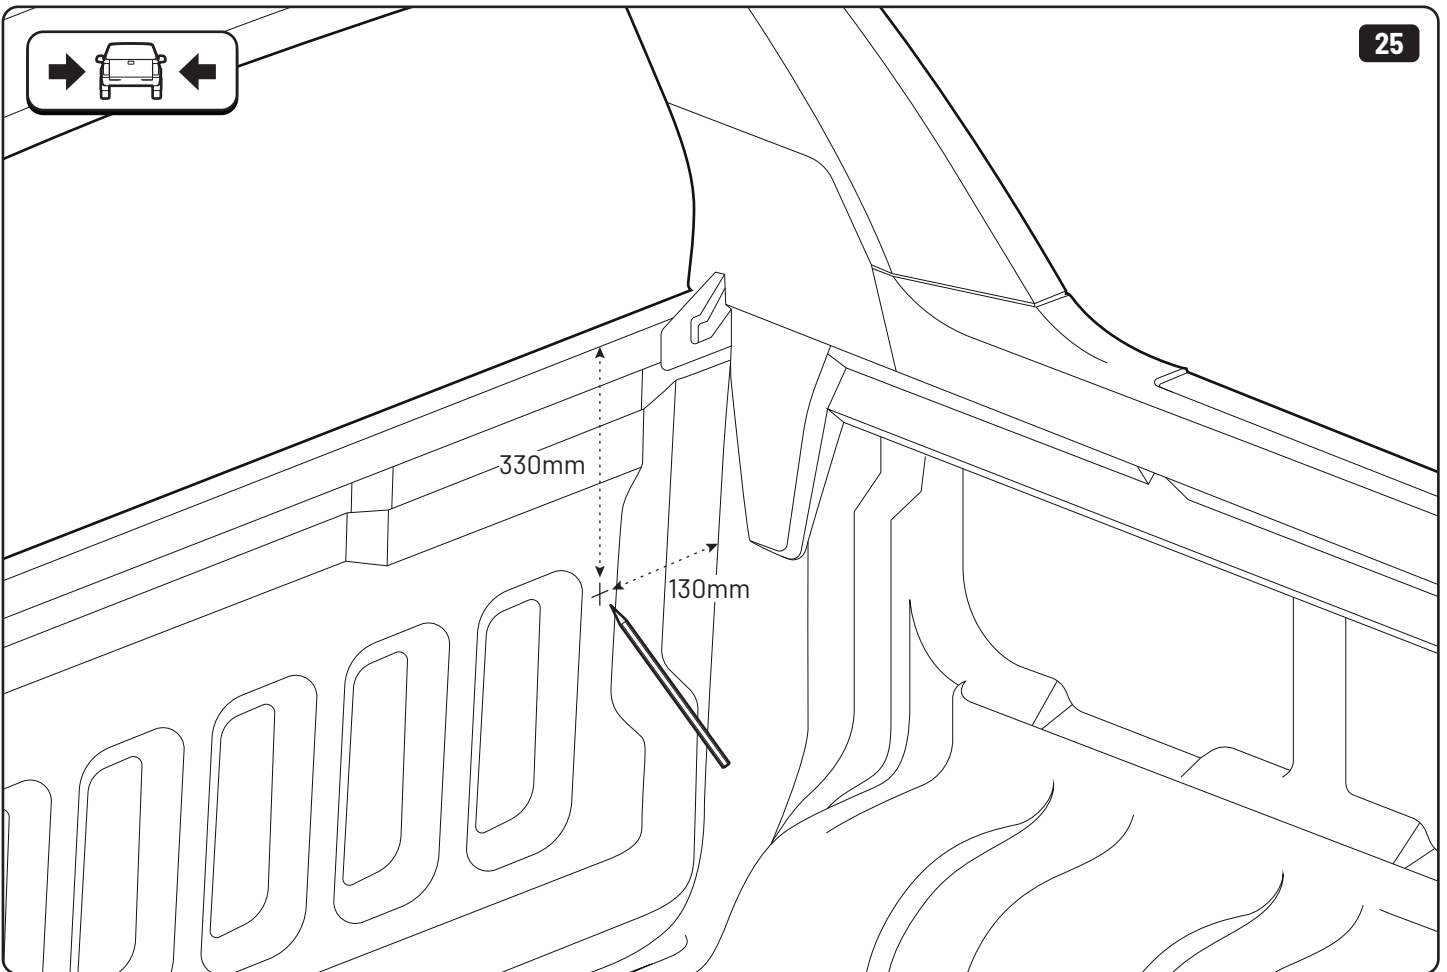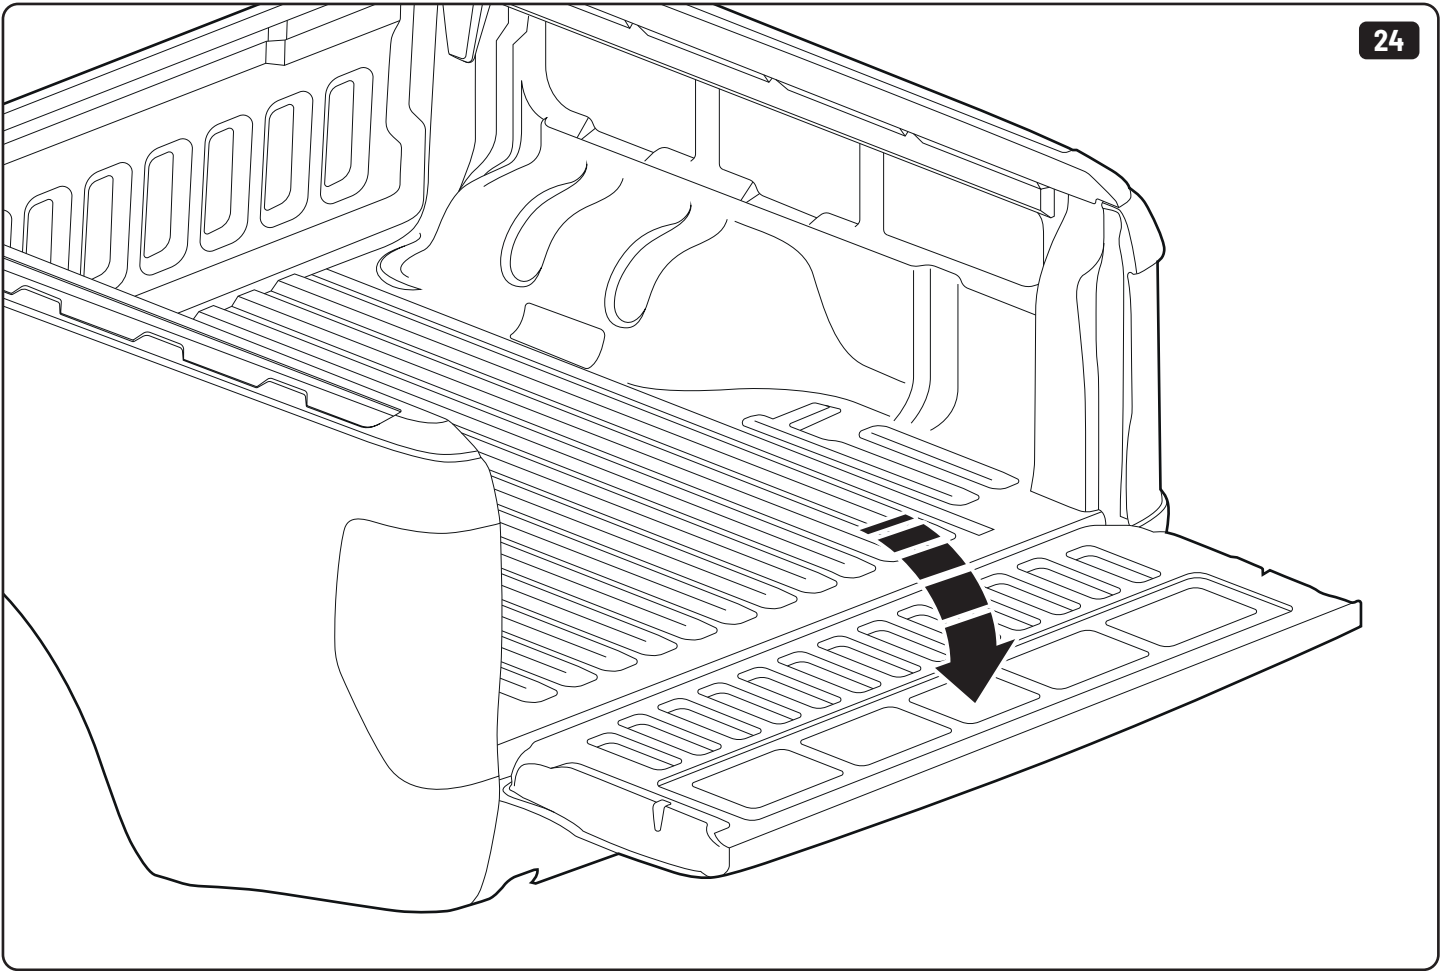

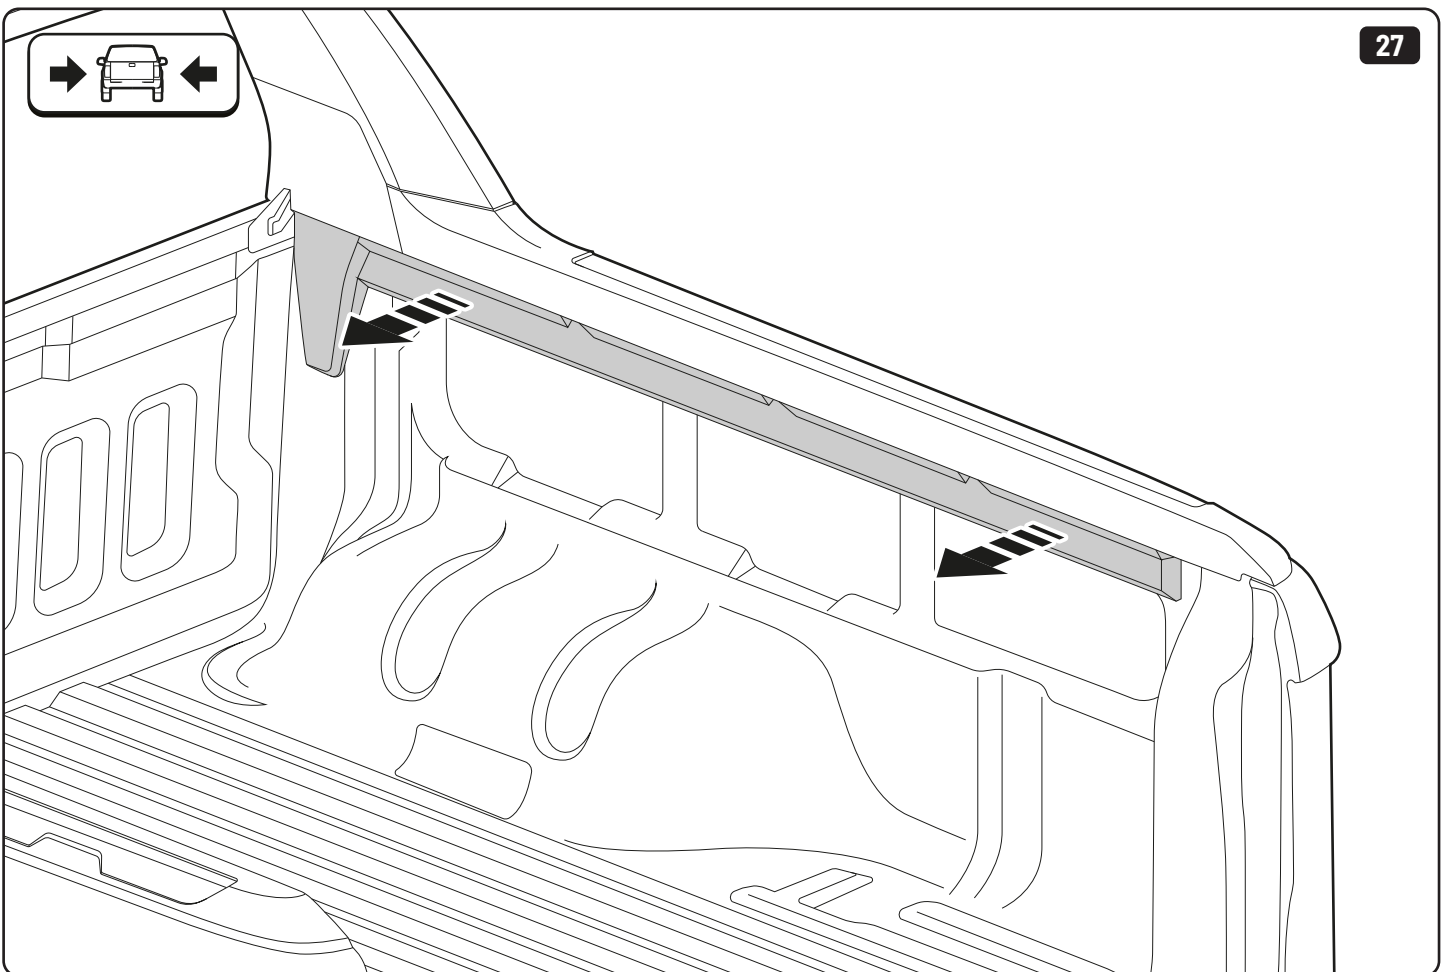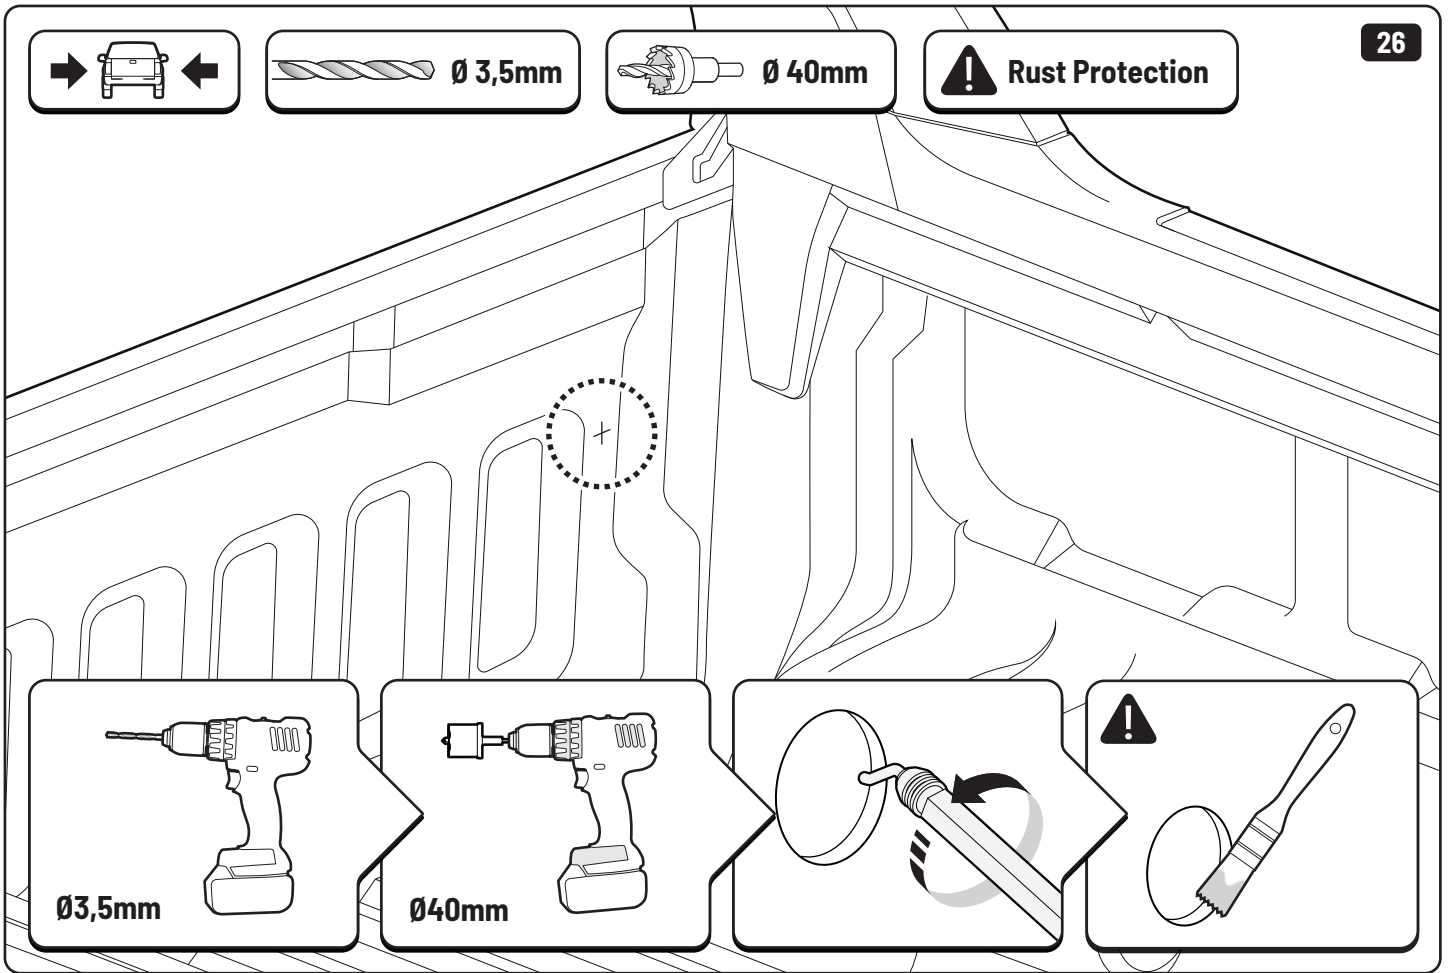

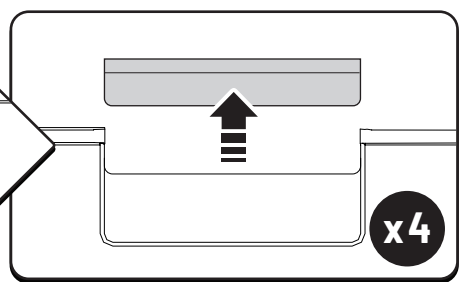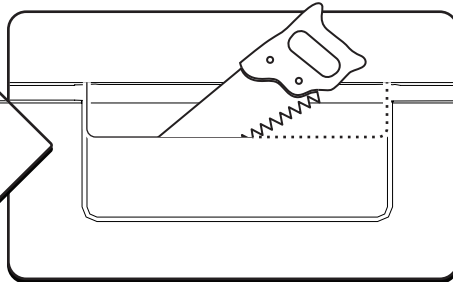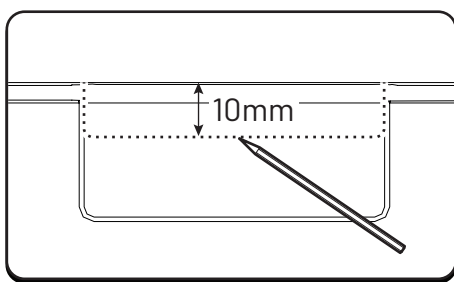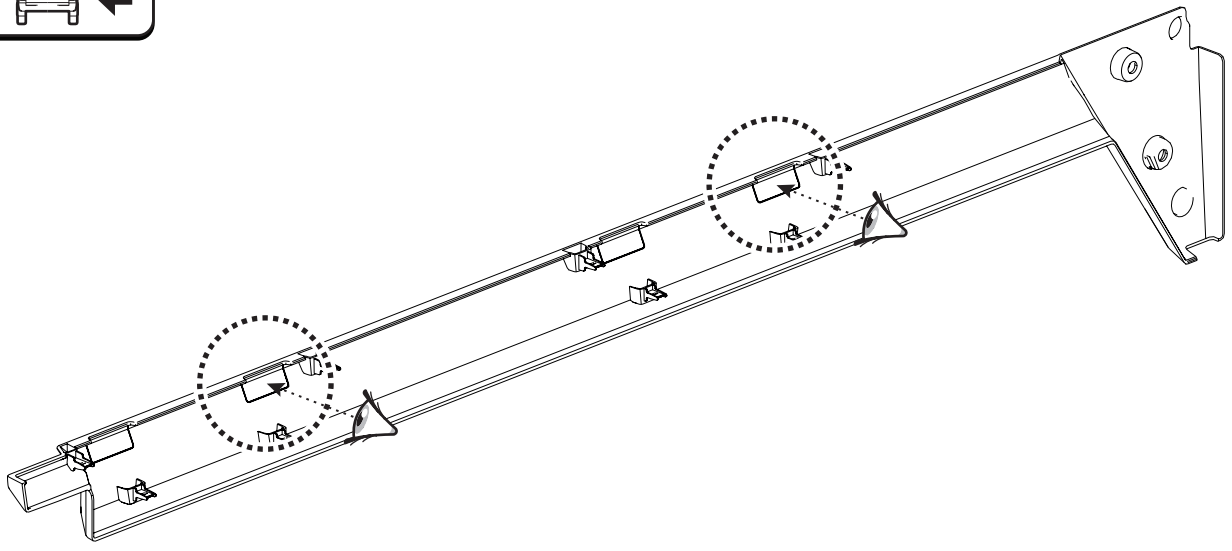






x4







LOCTITE 243




T30 10Nm

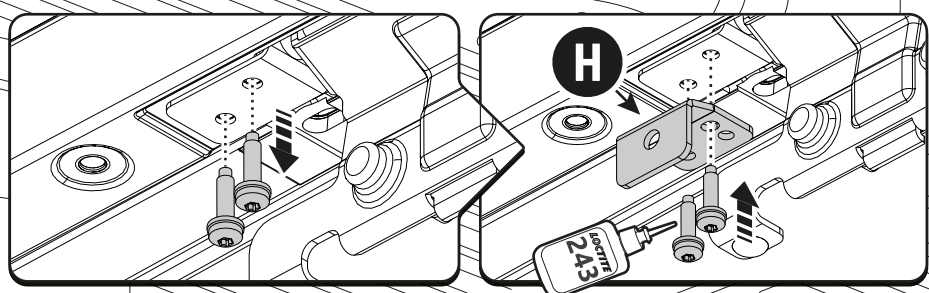
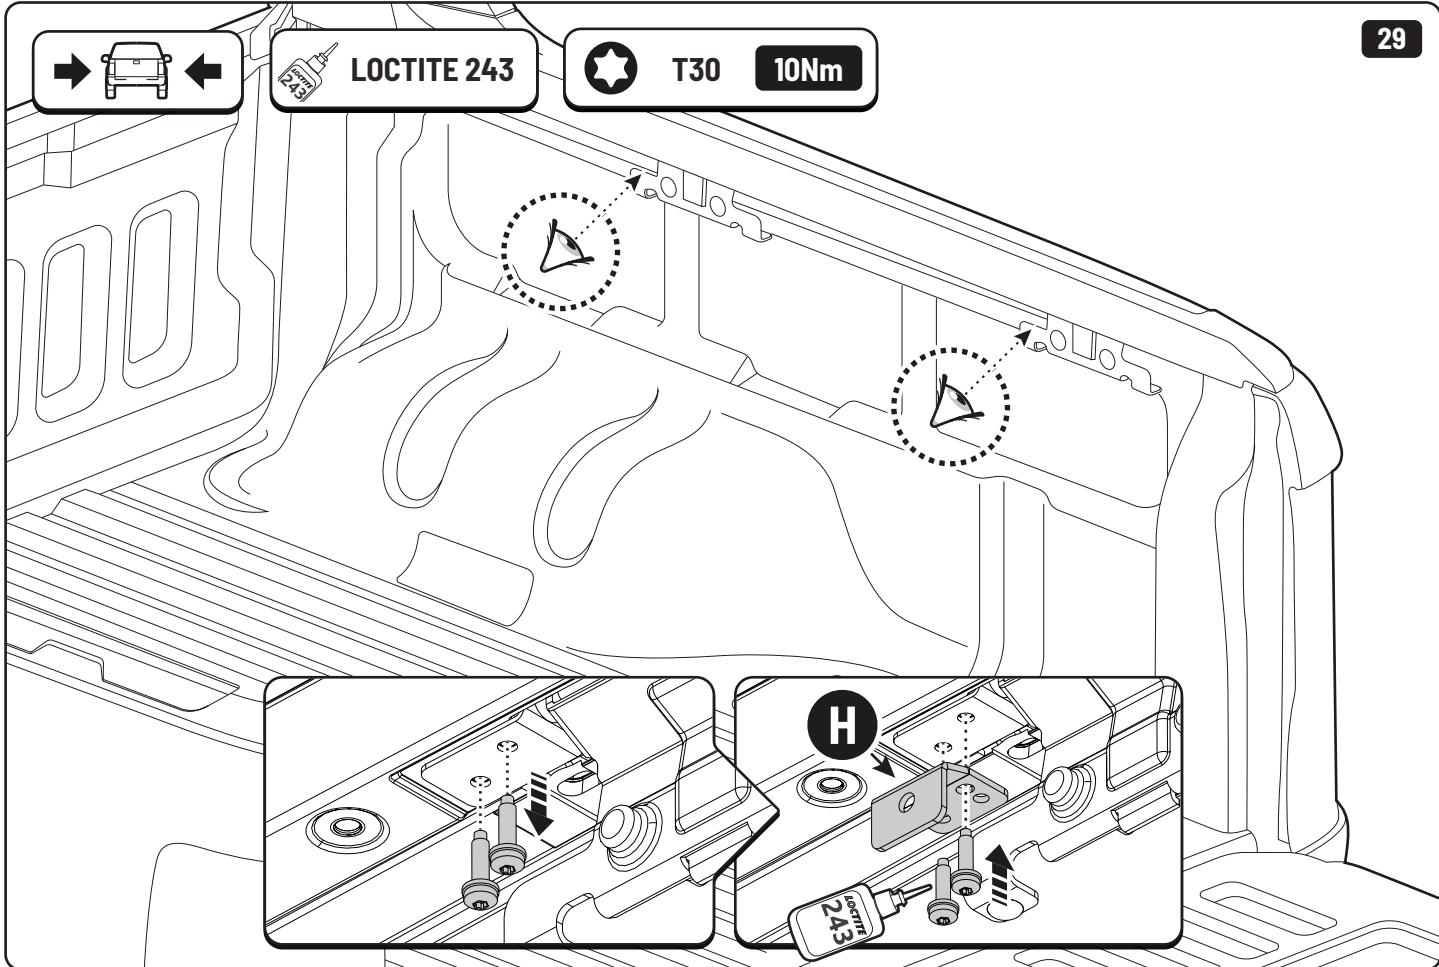


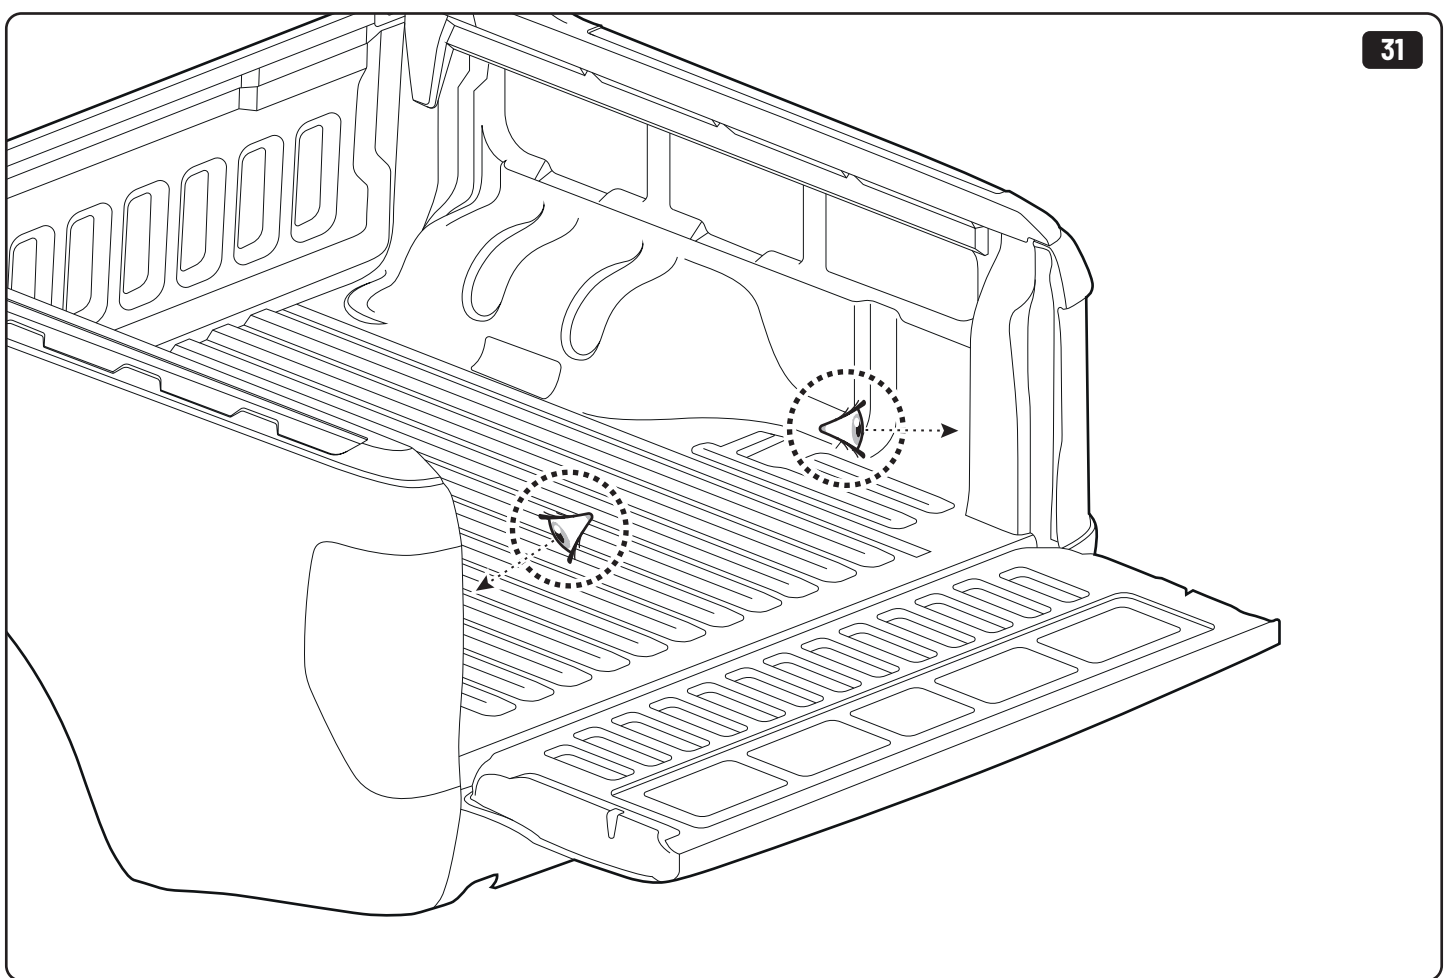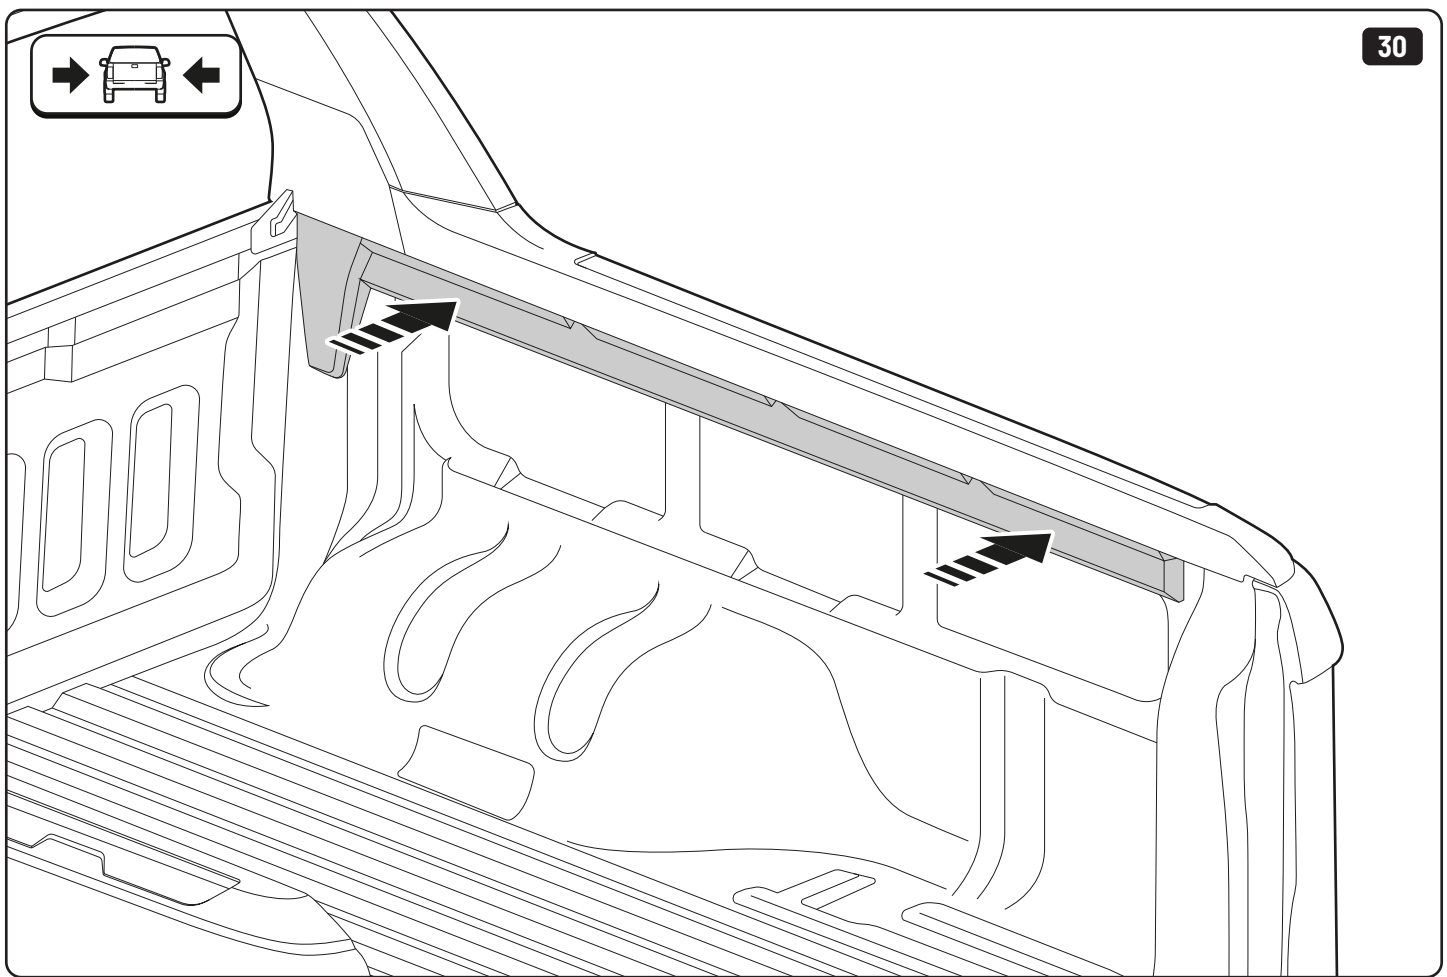



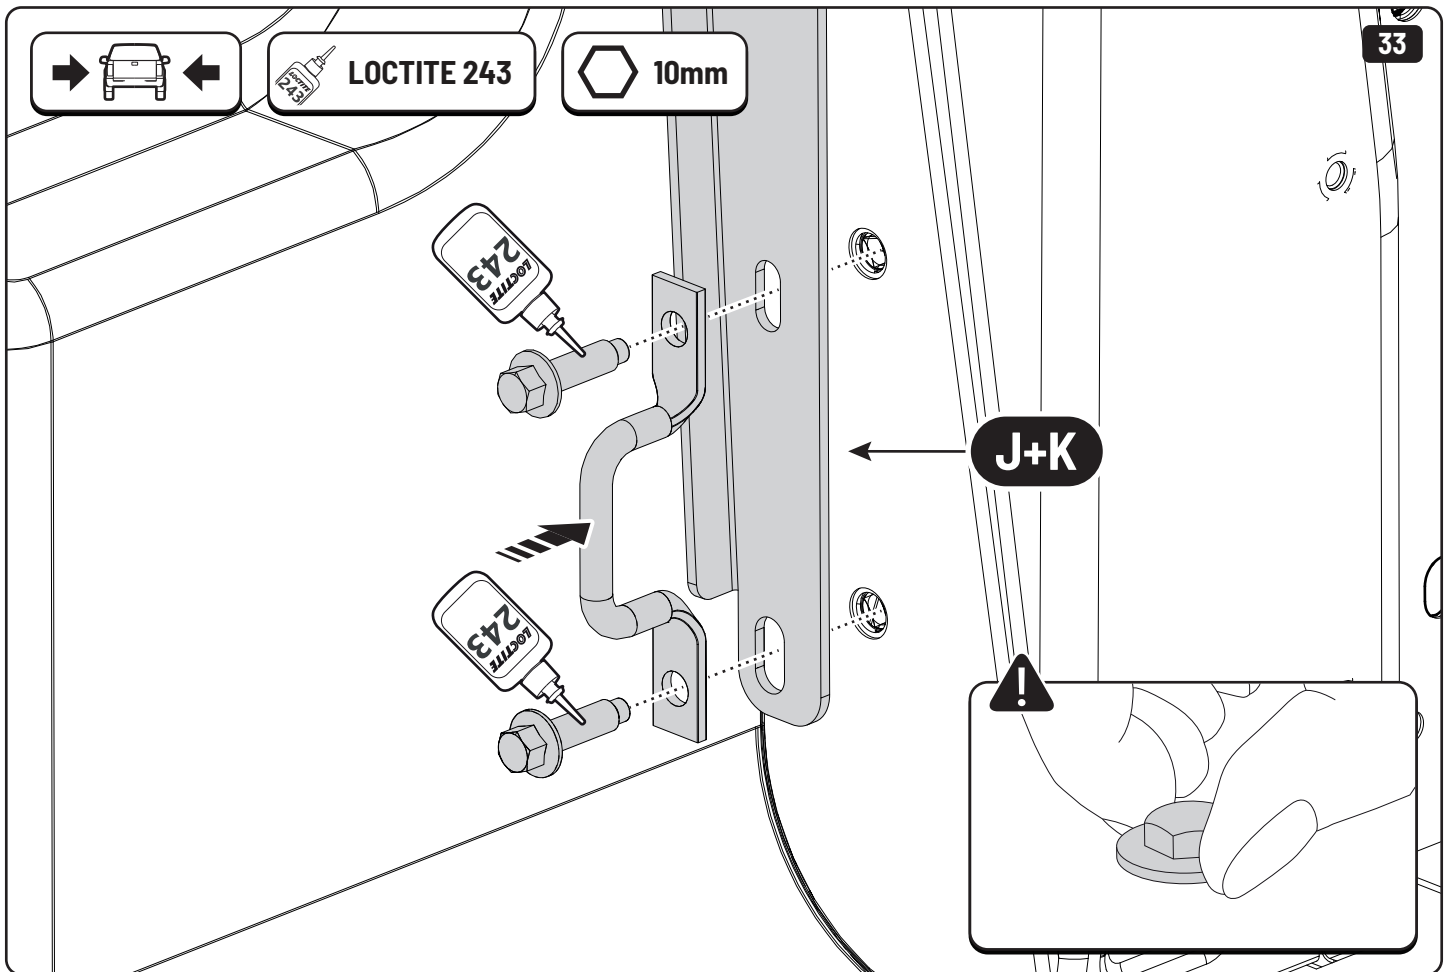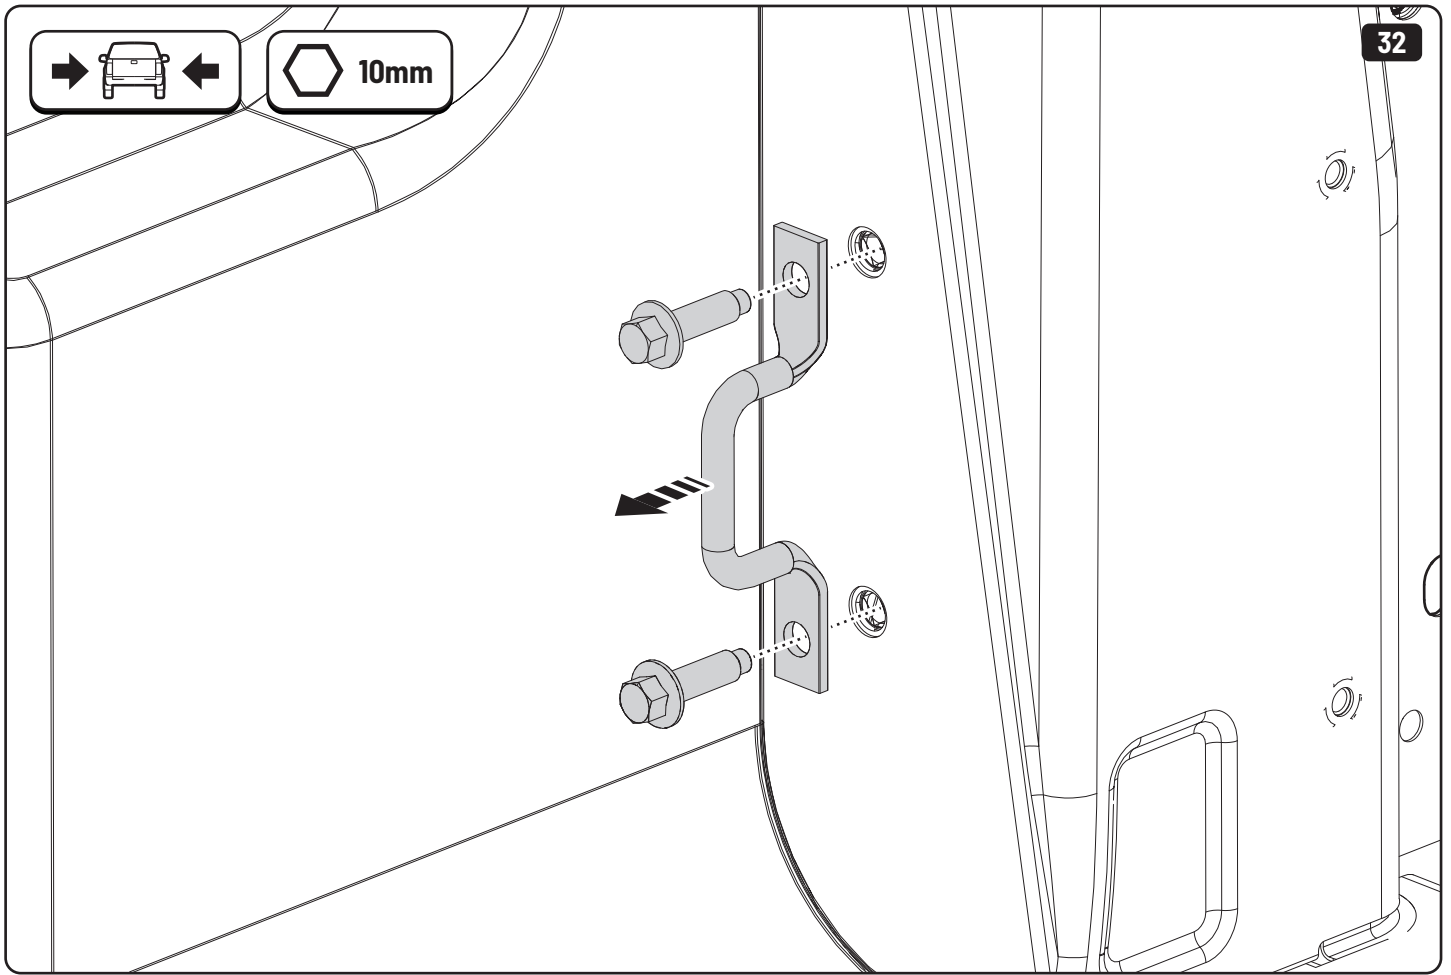

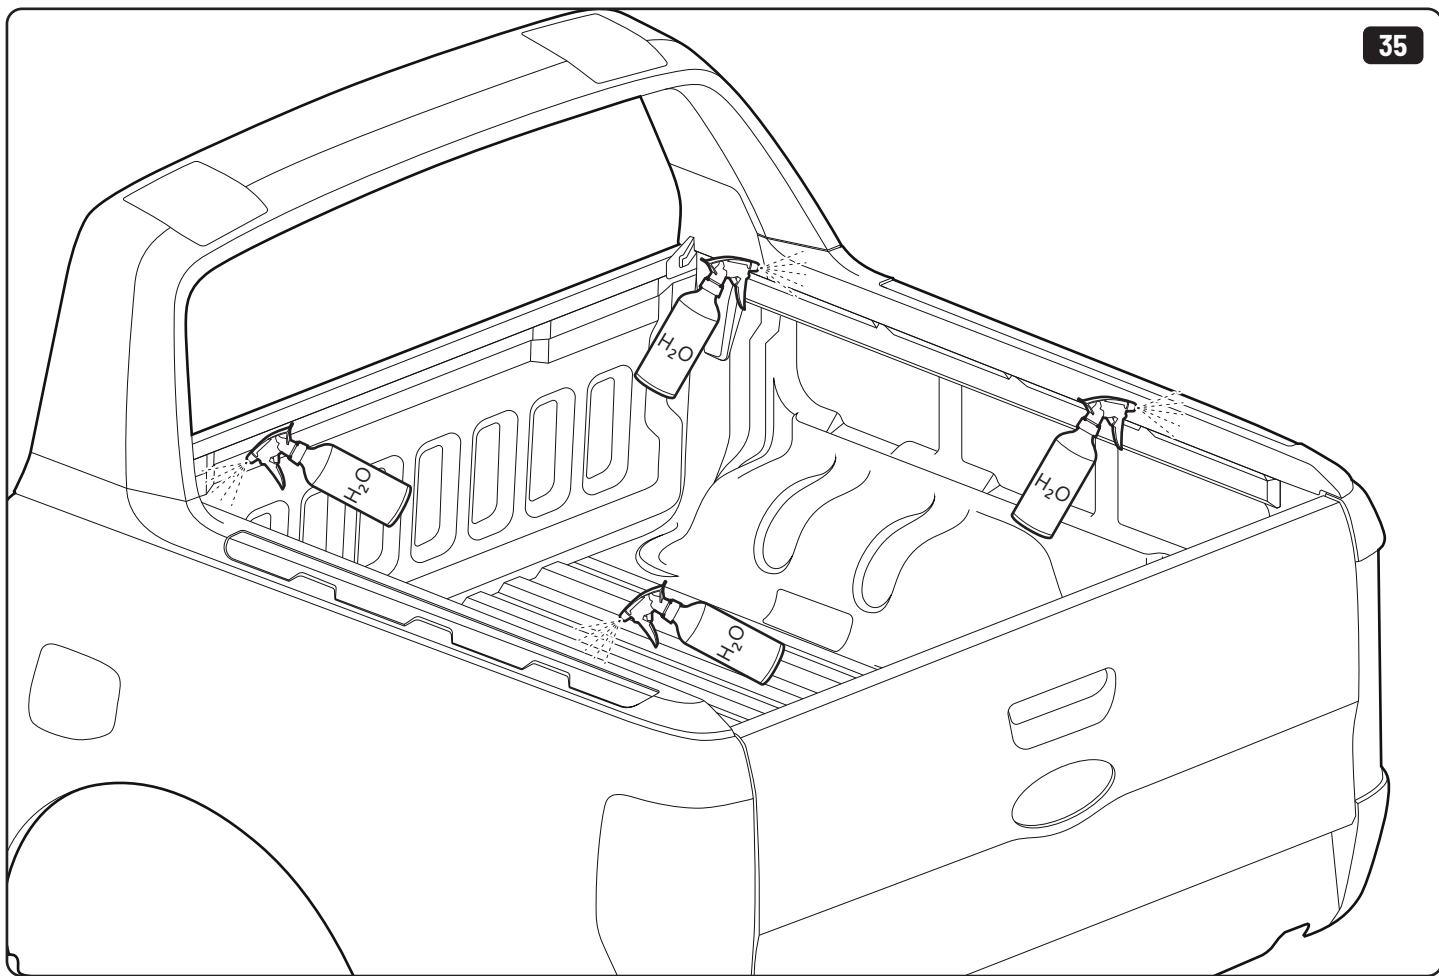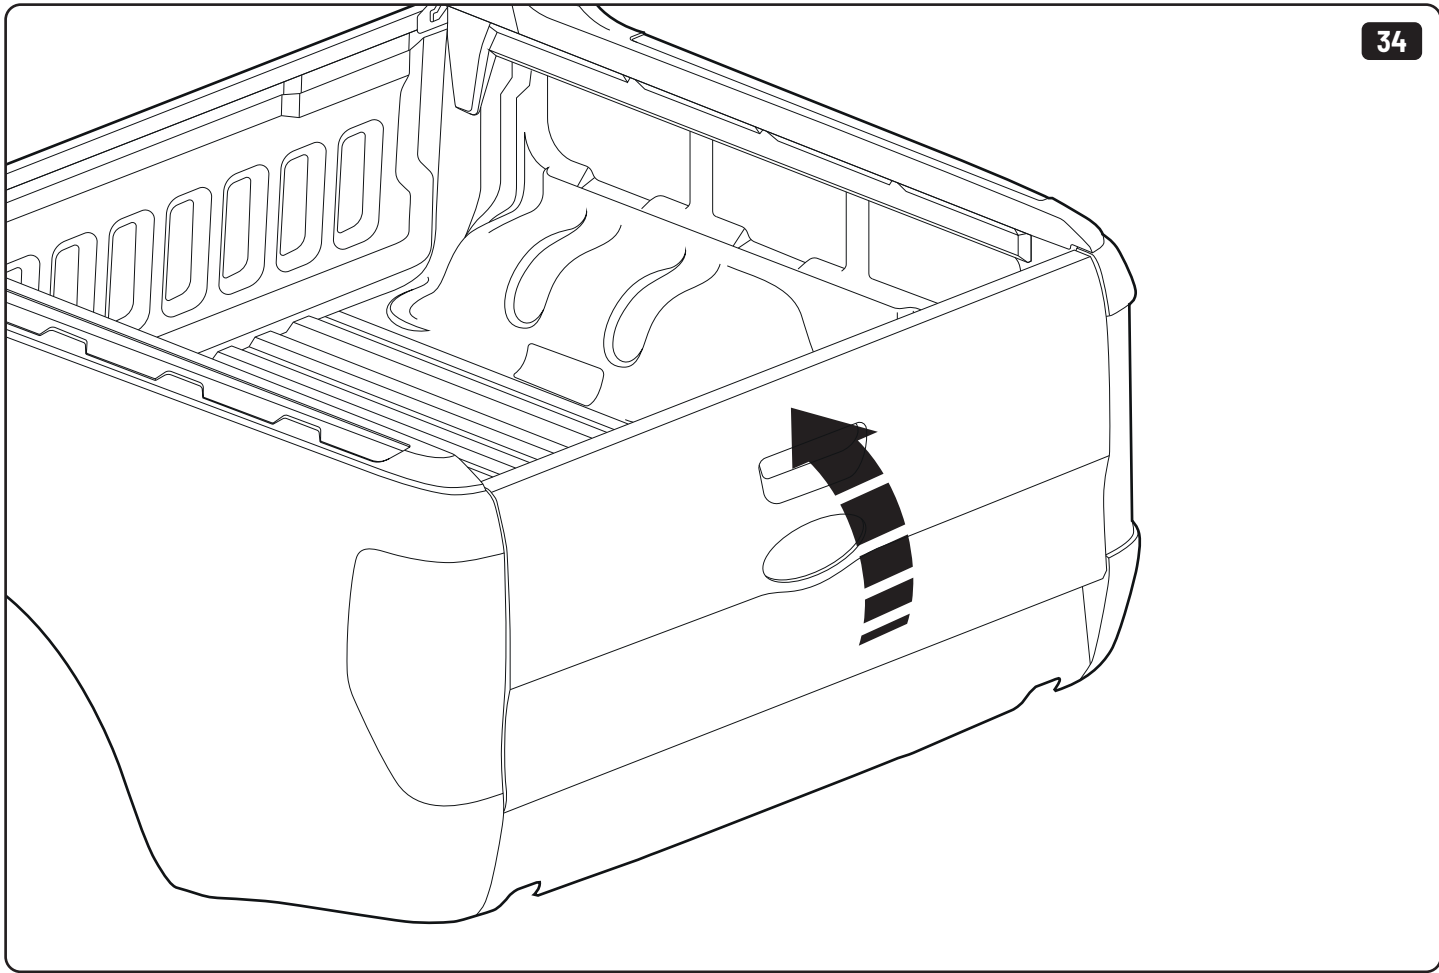

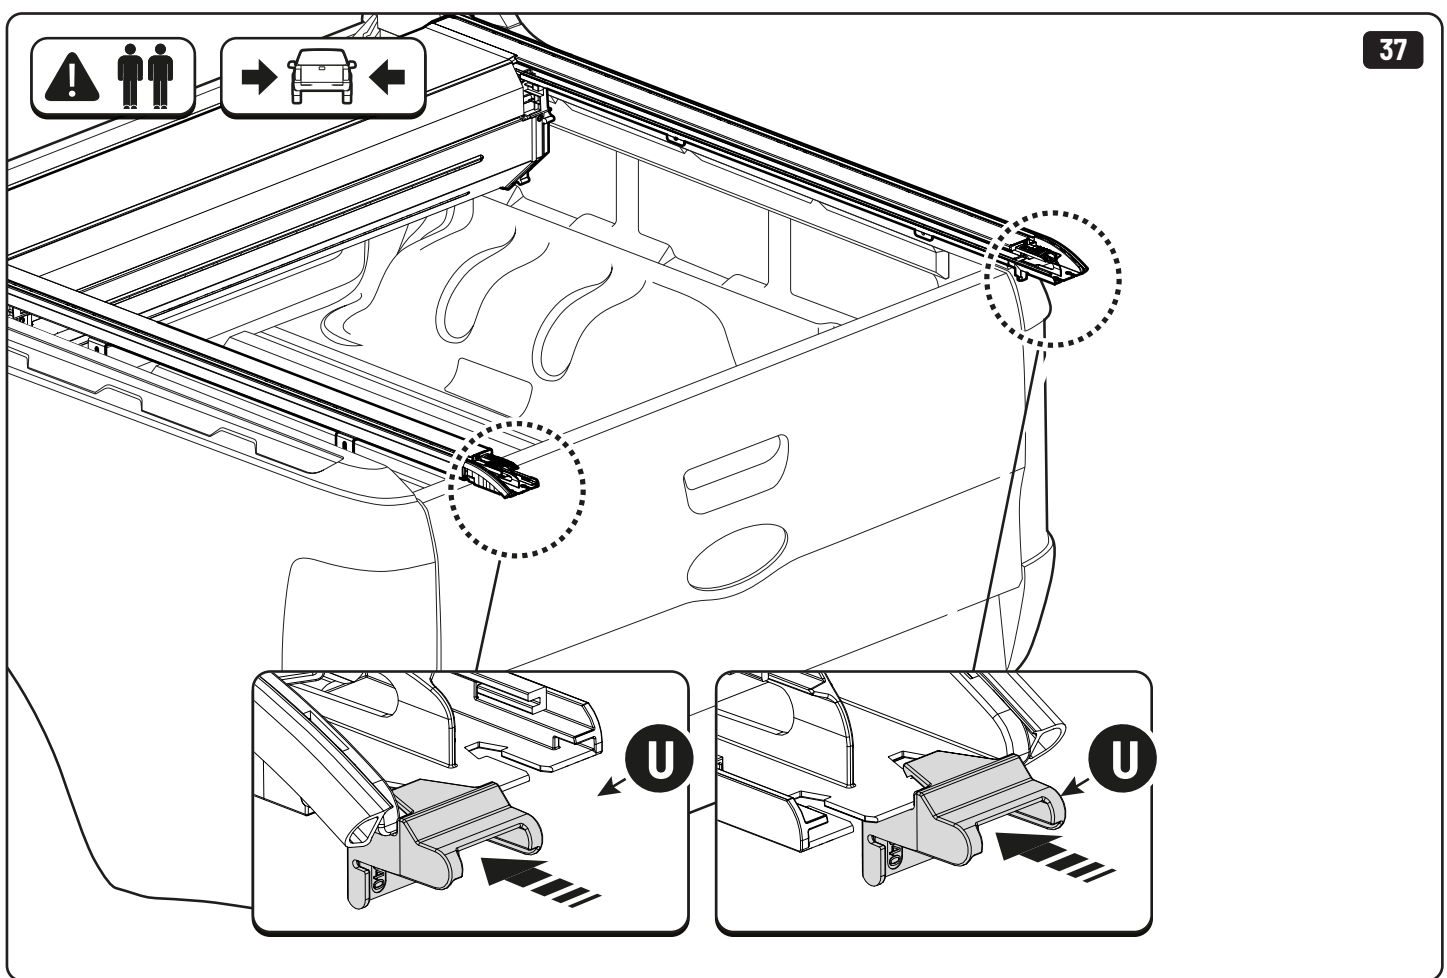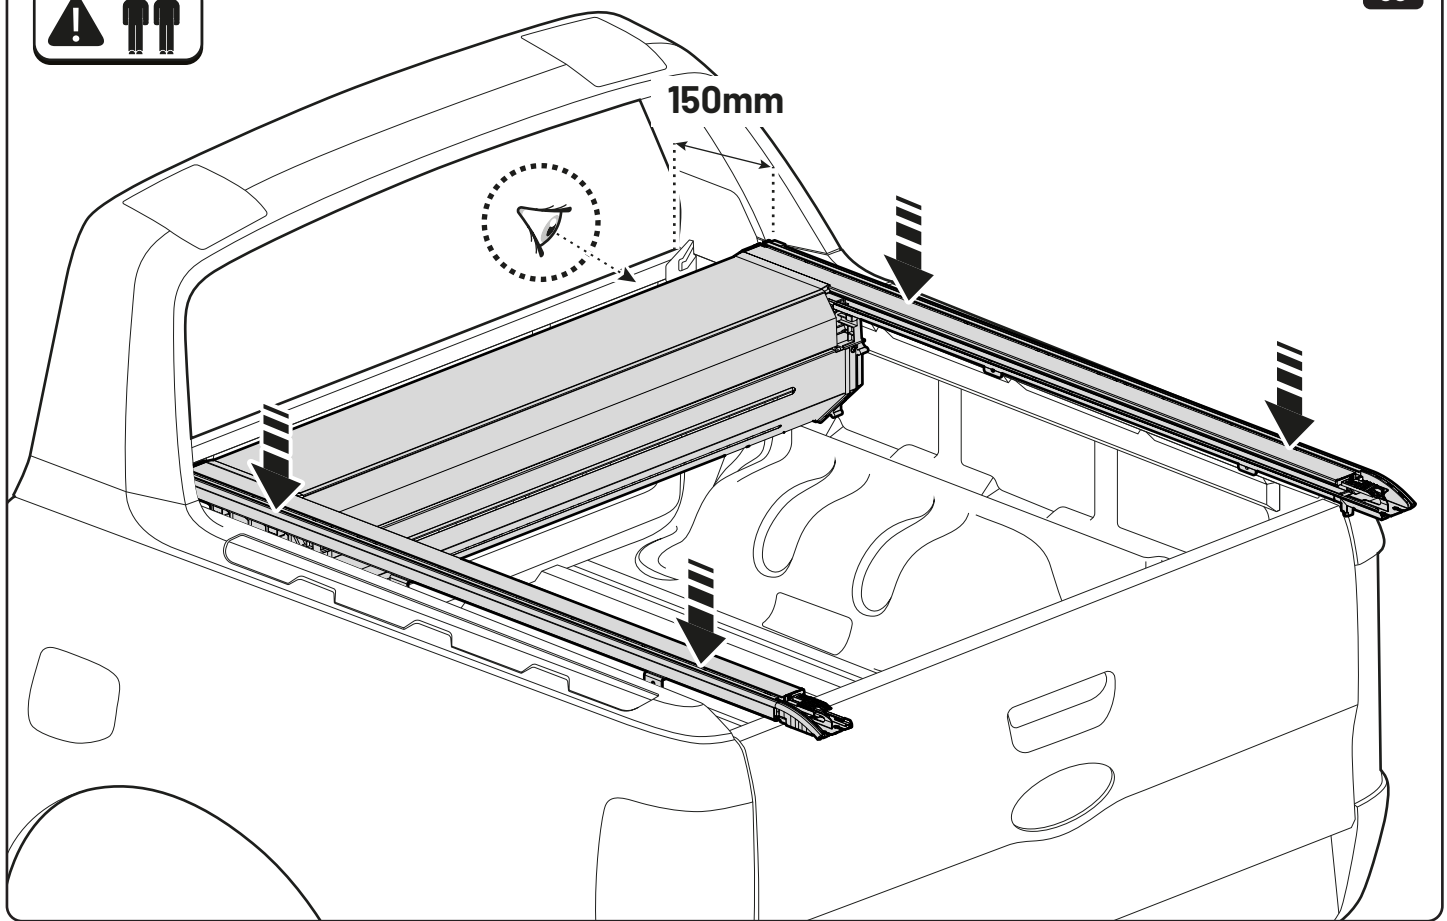

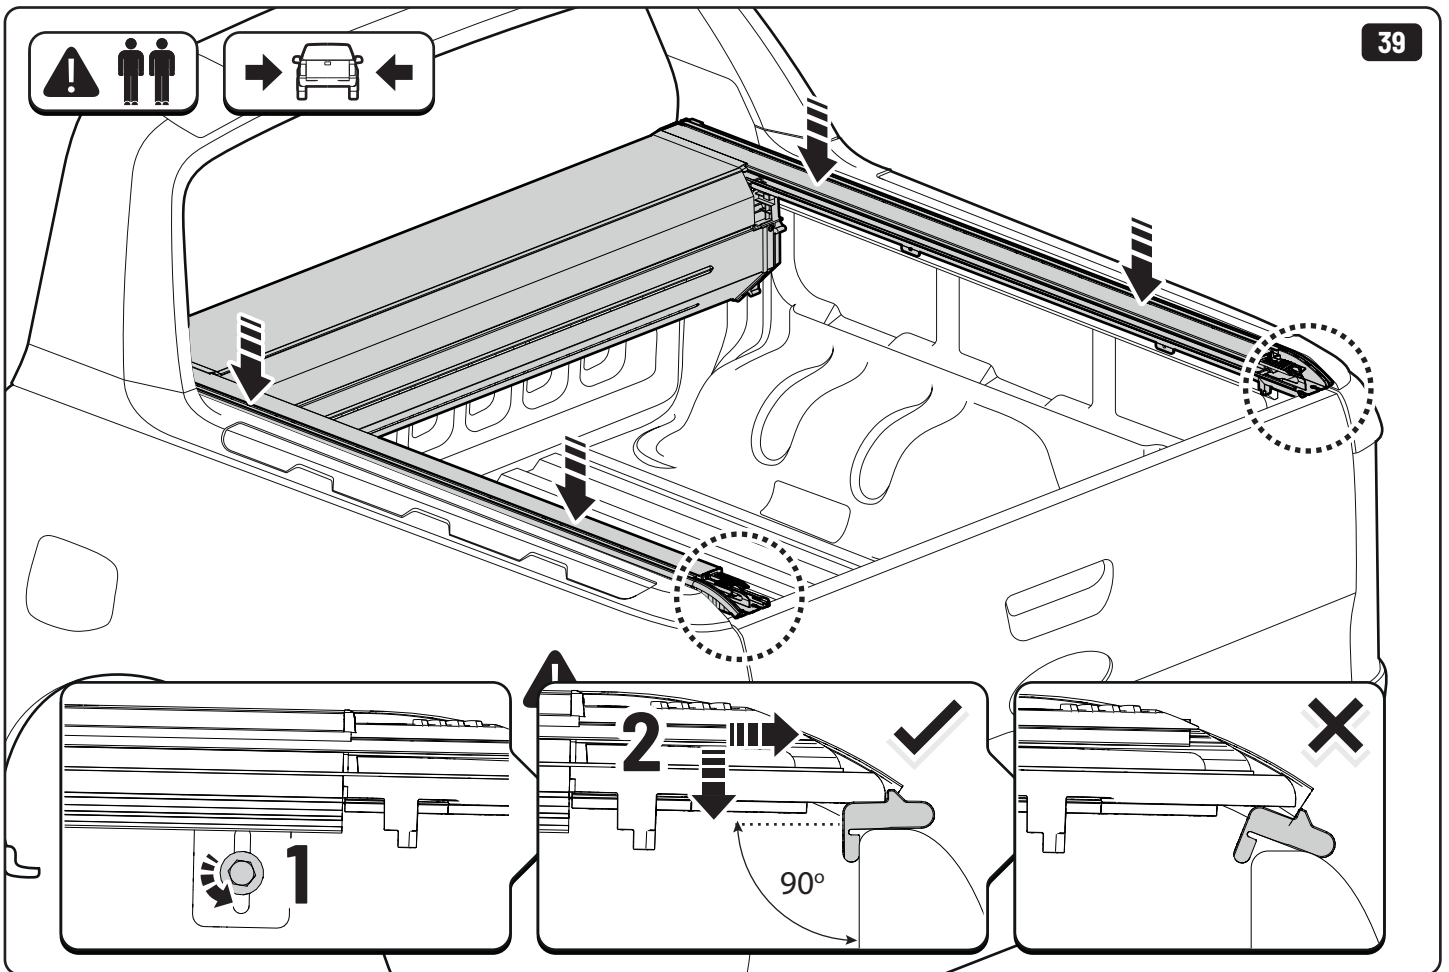
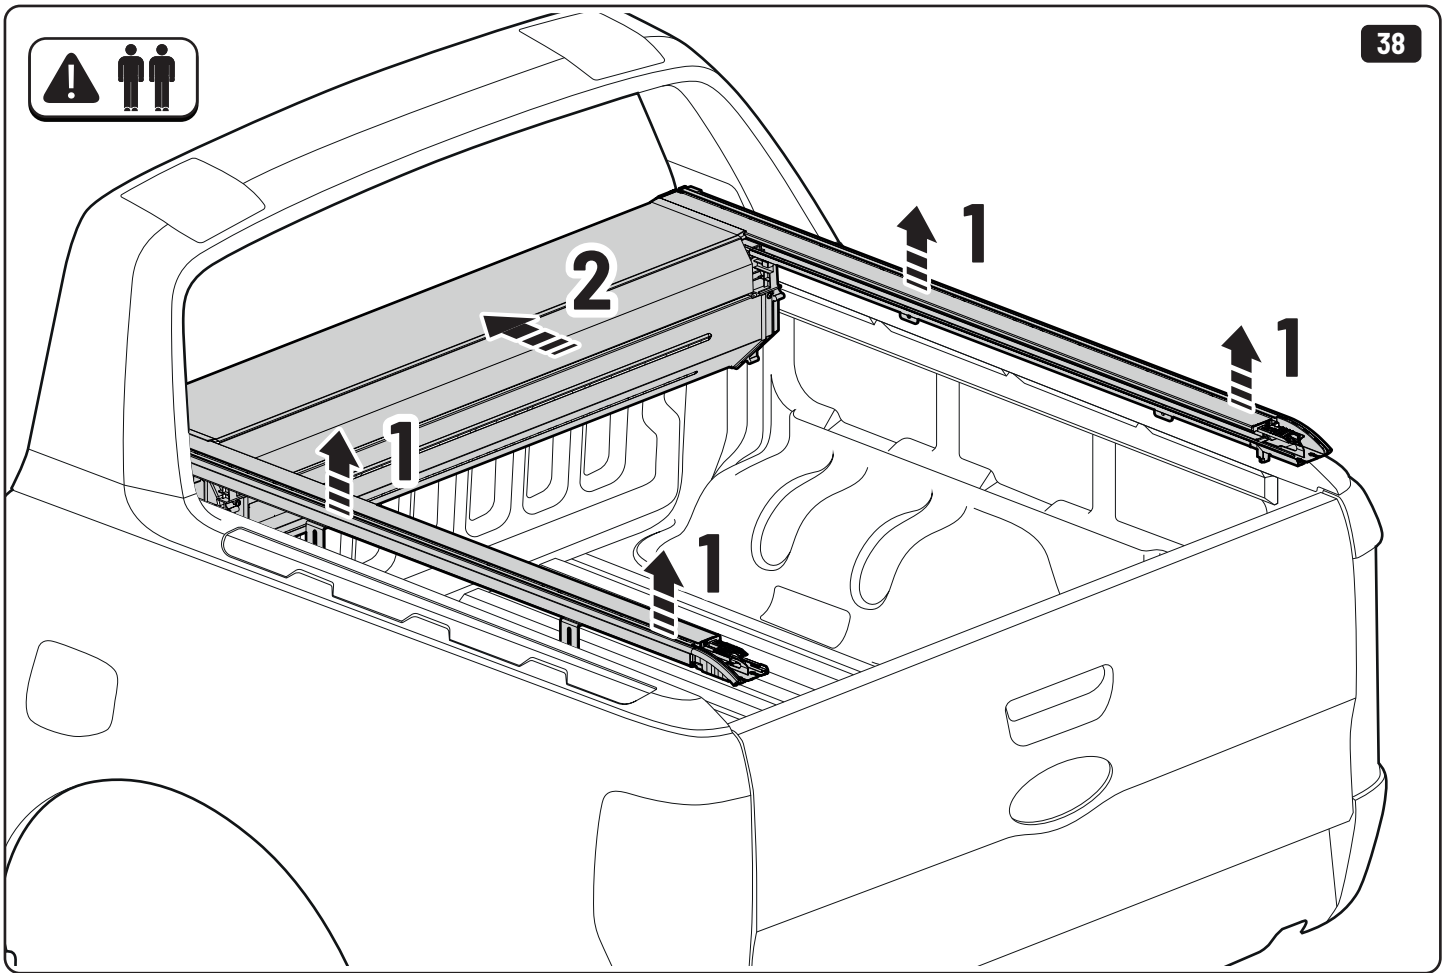


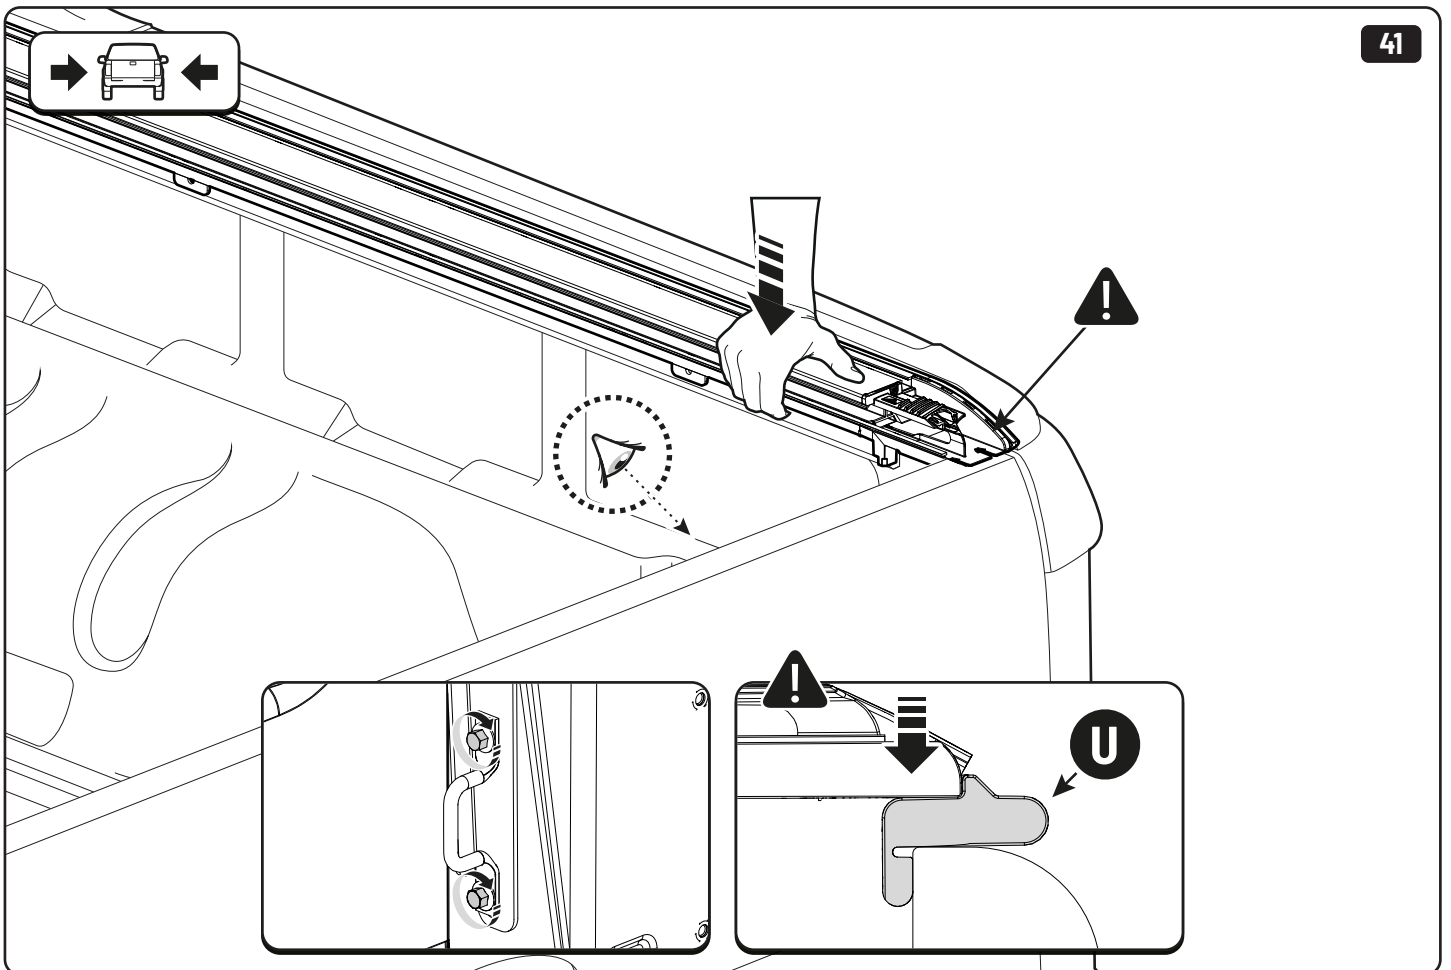
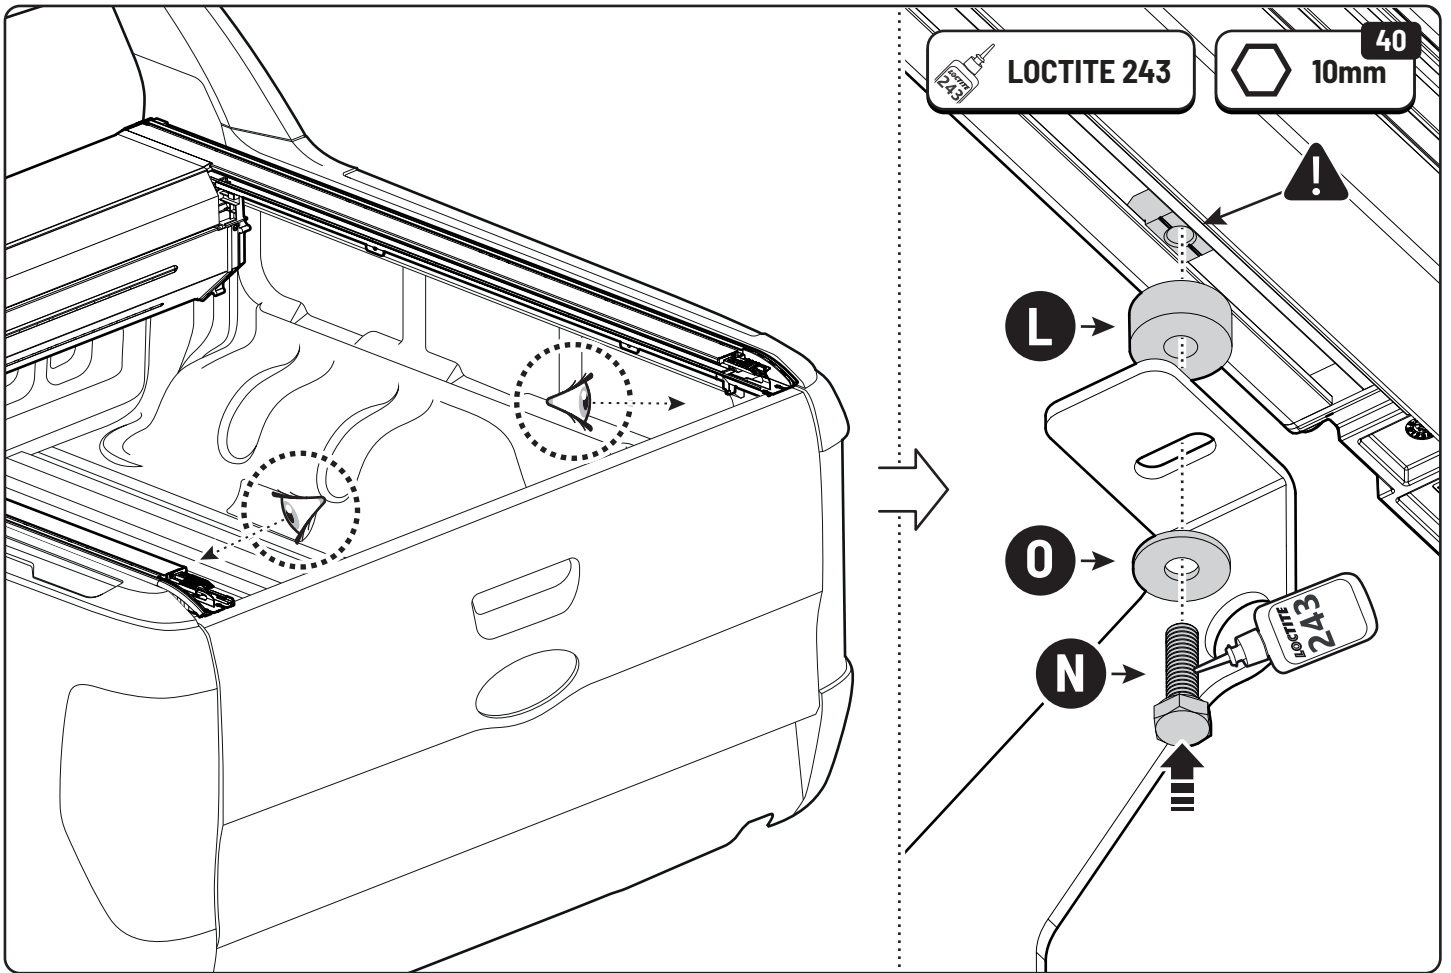








LOCTITE 243

10mm

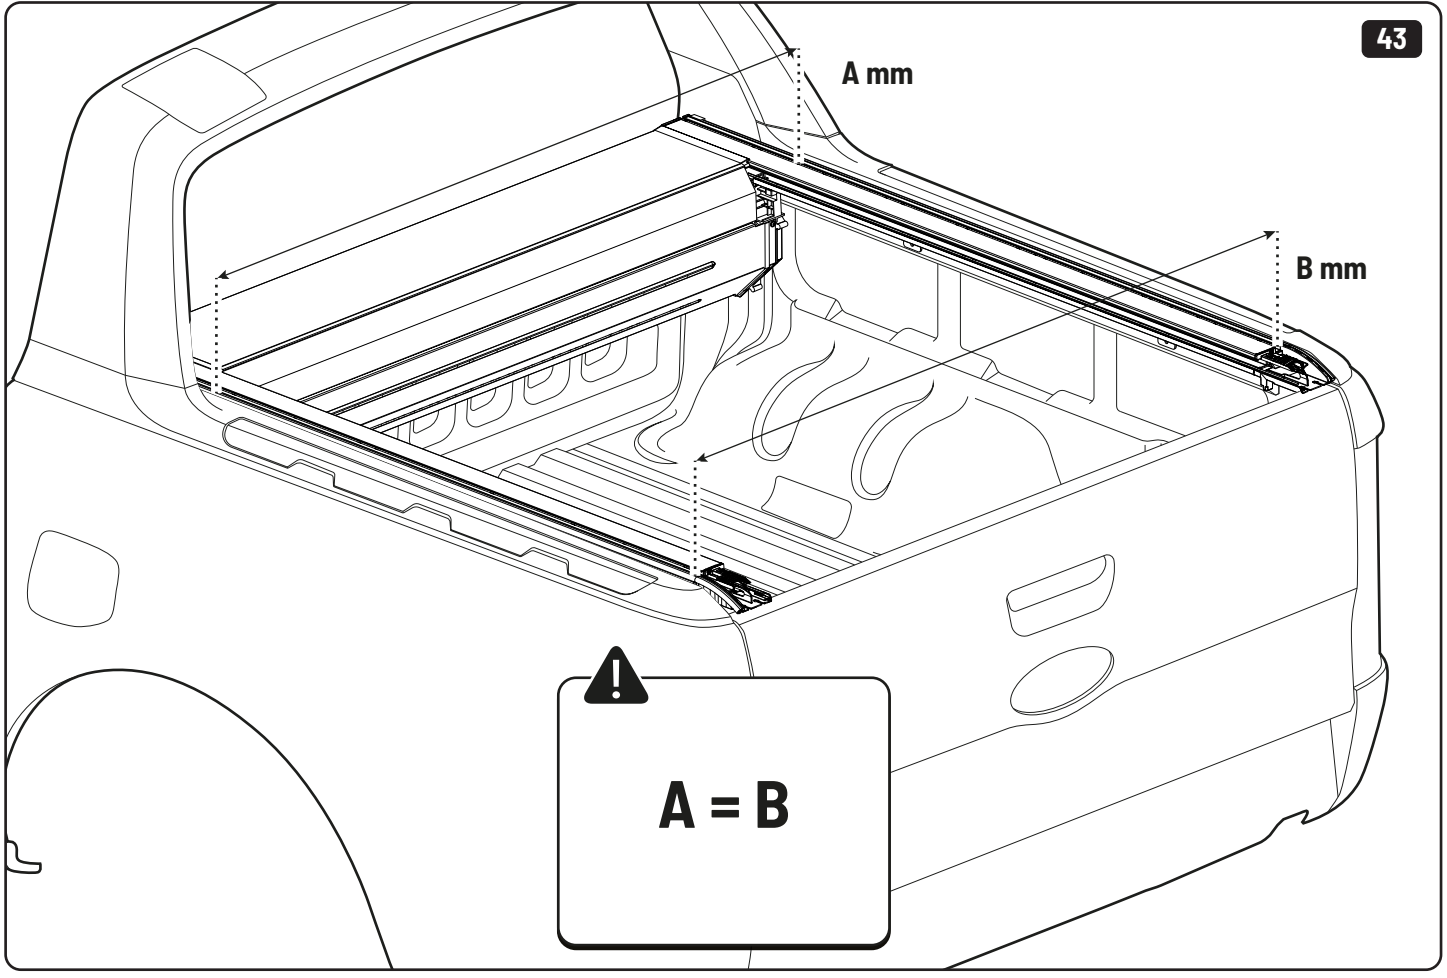
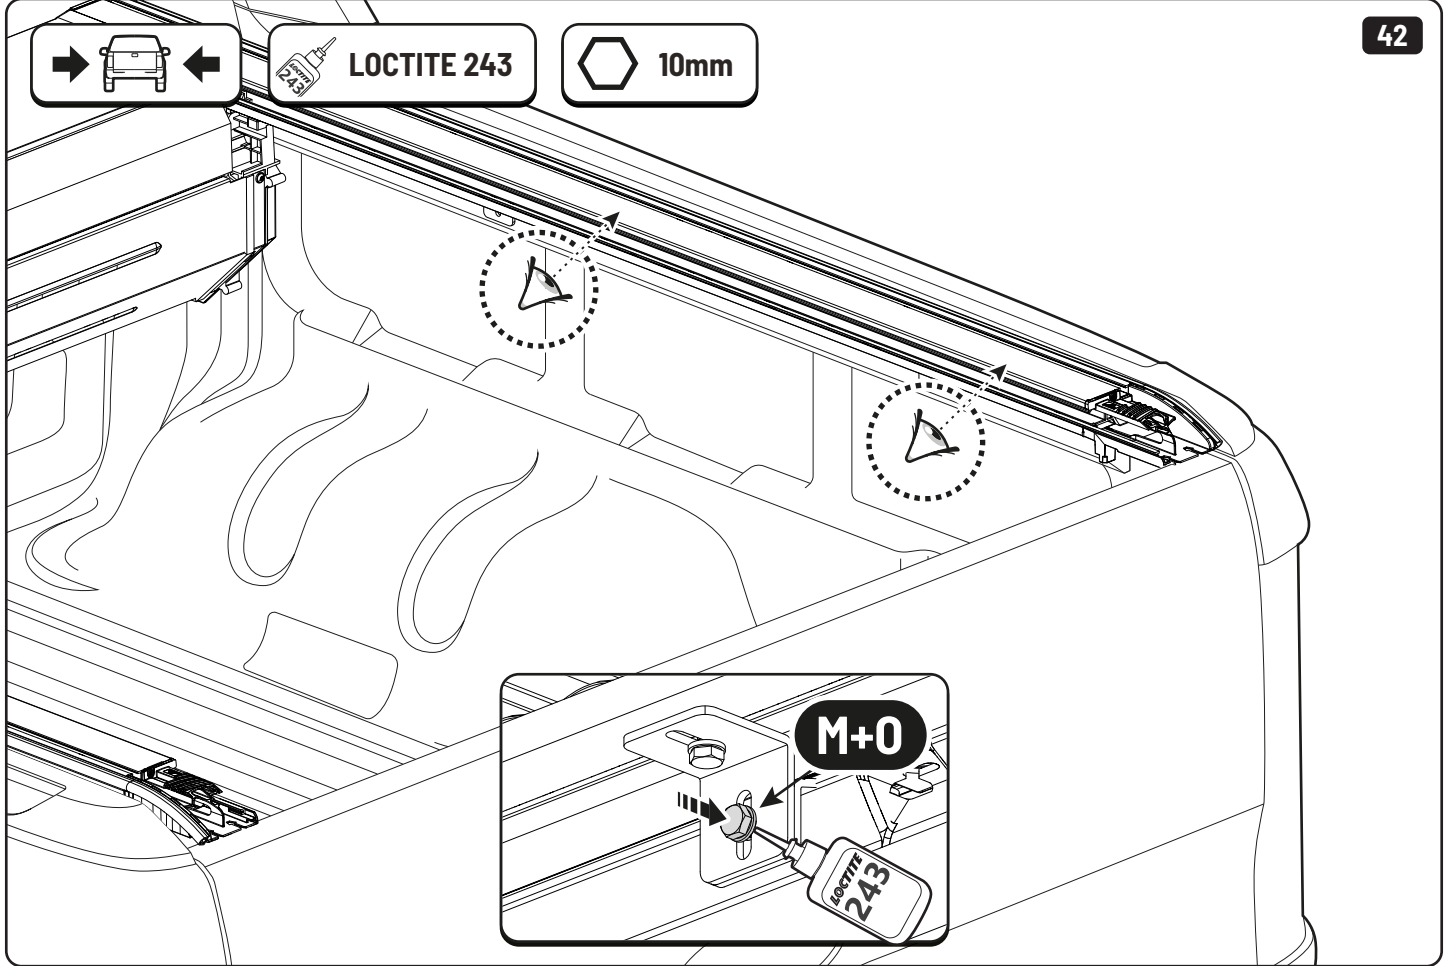


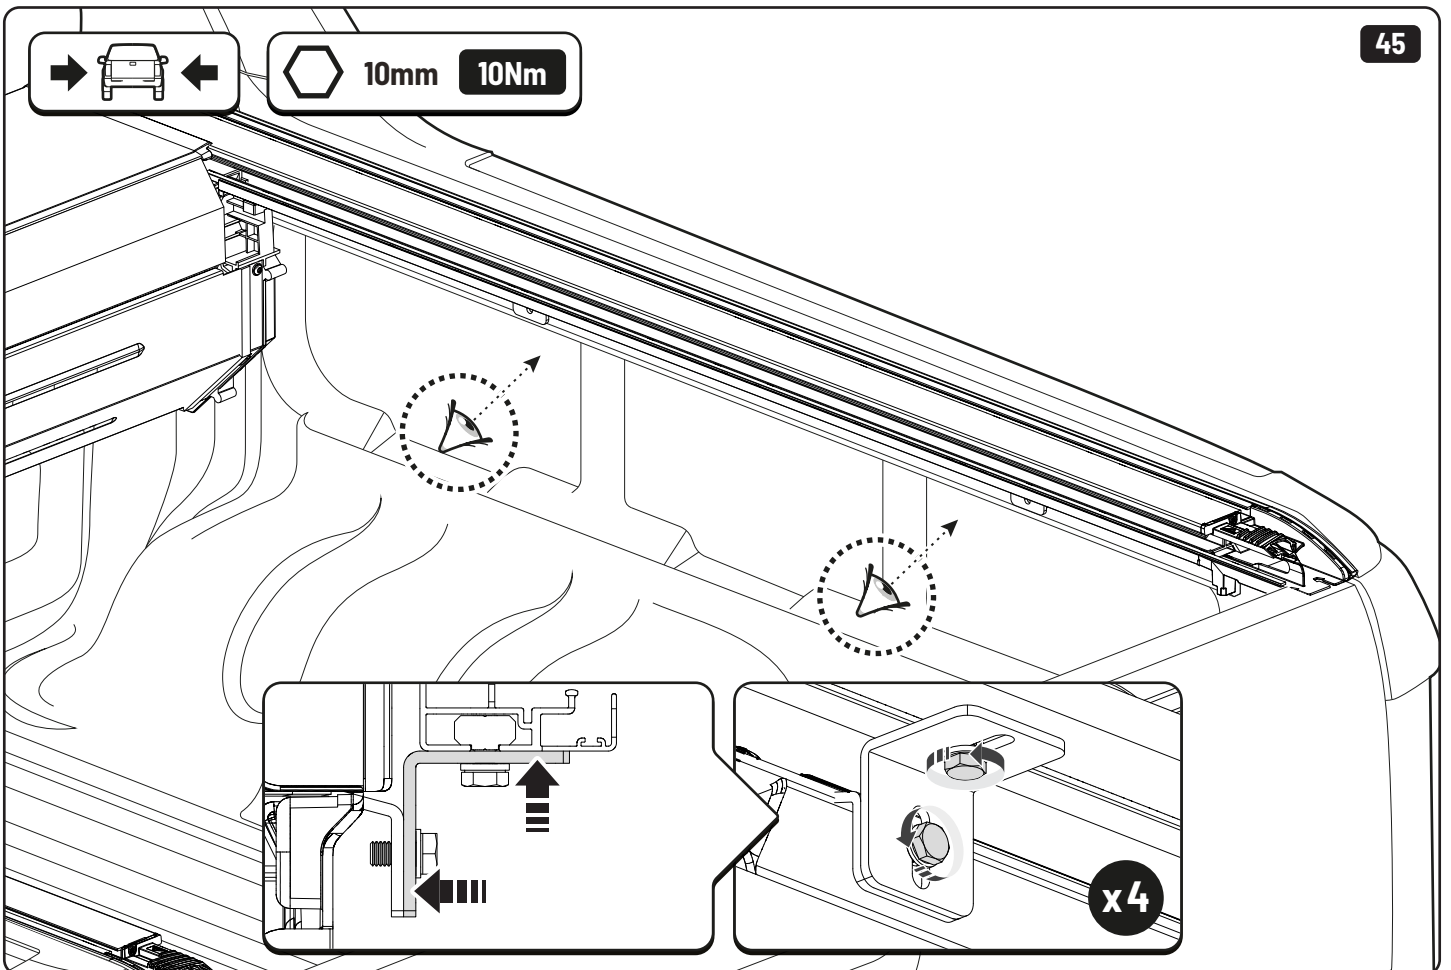
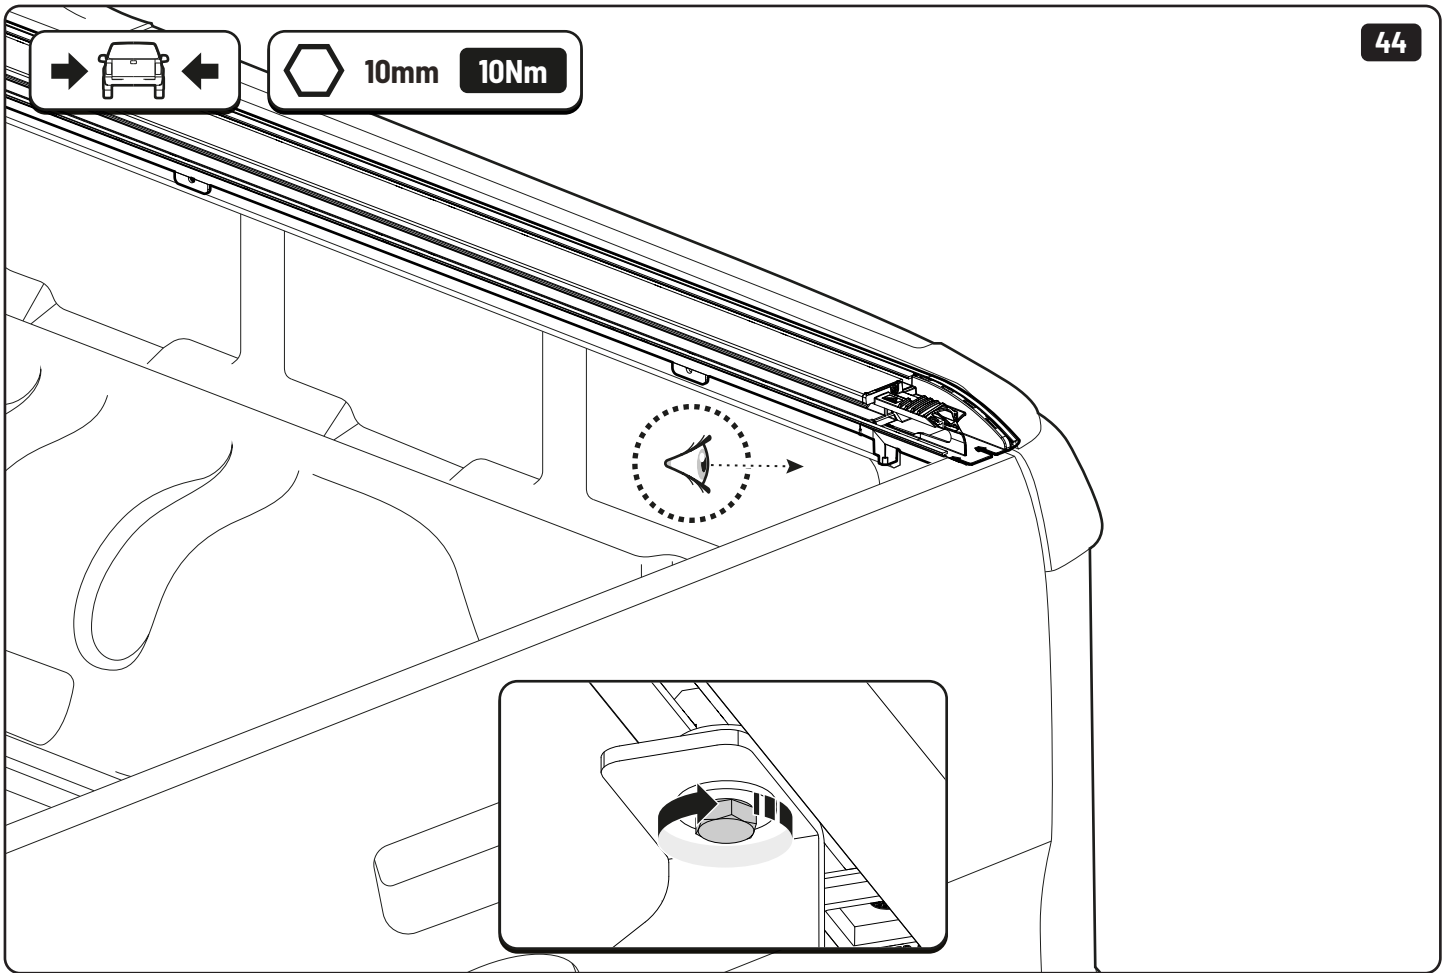


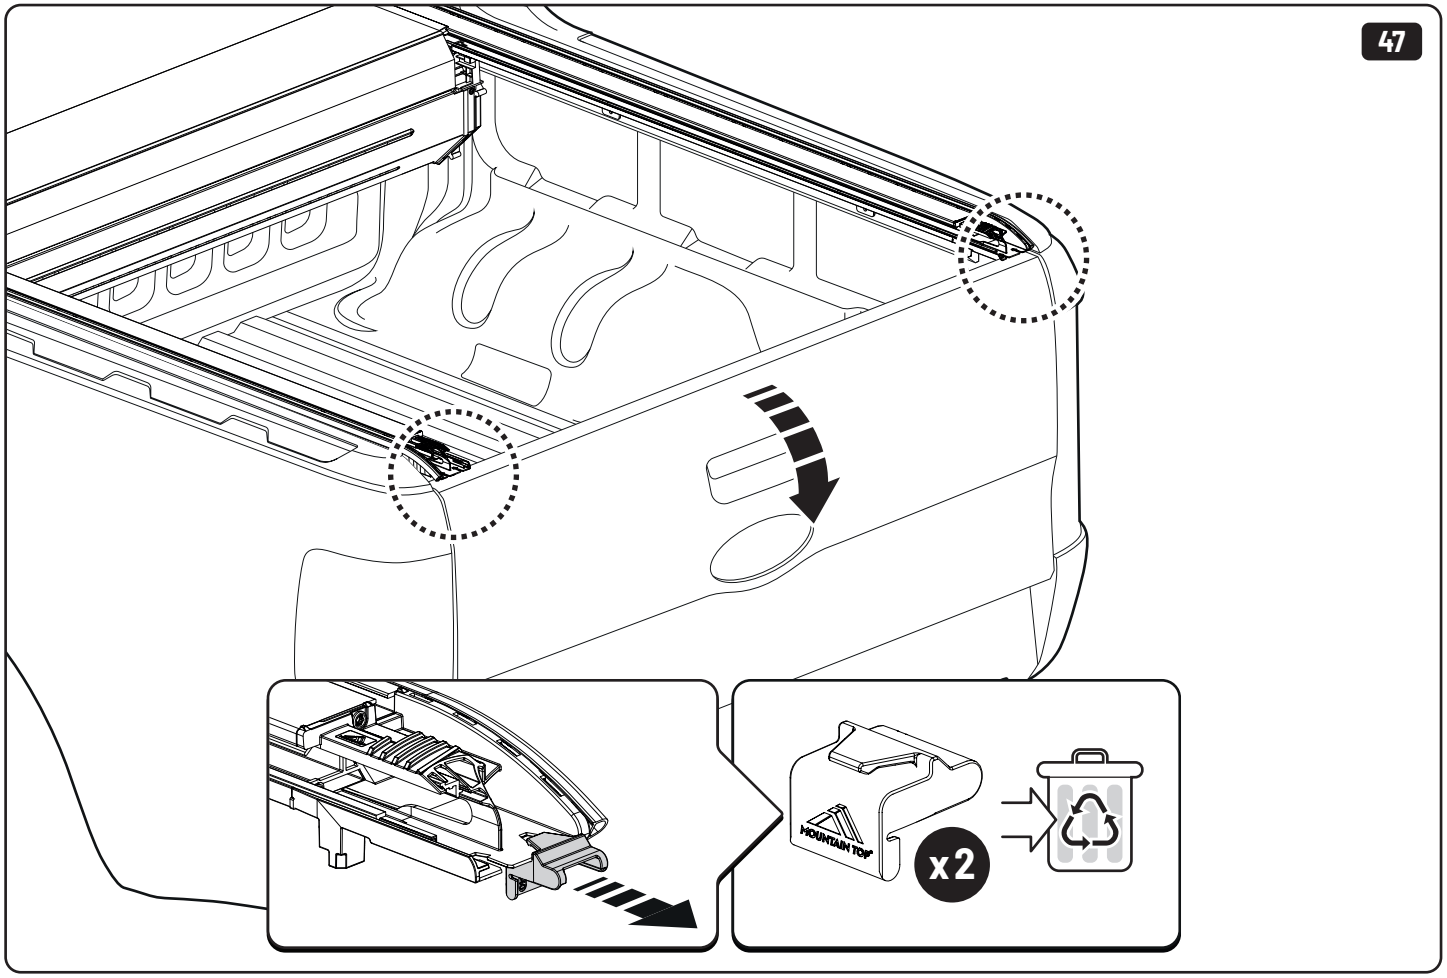
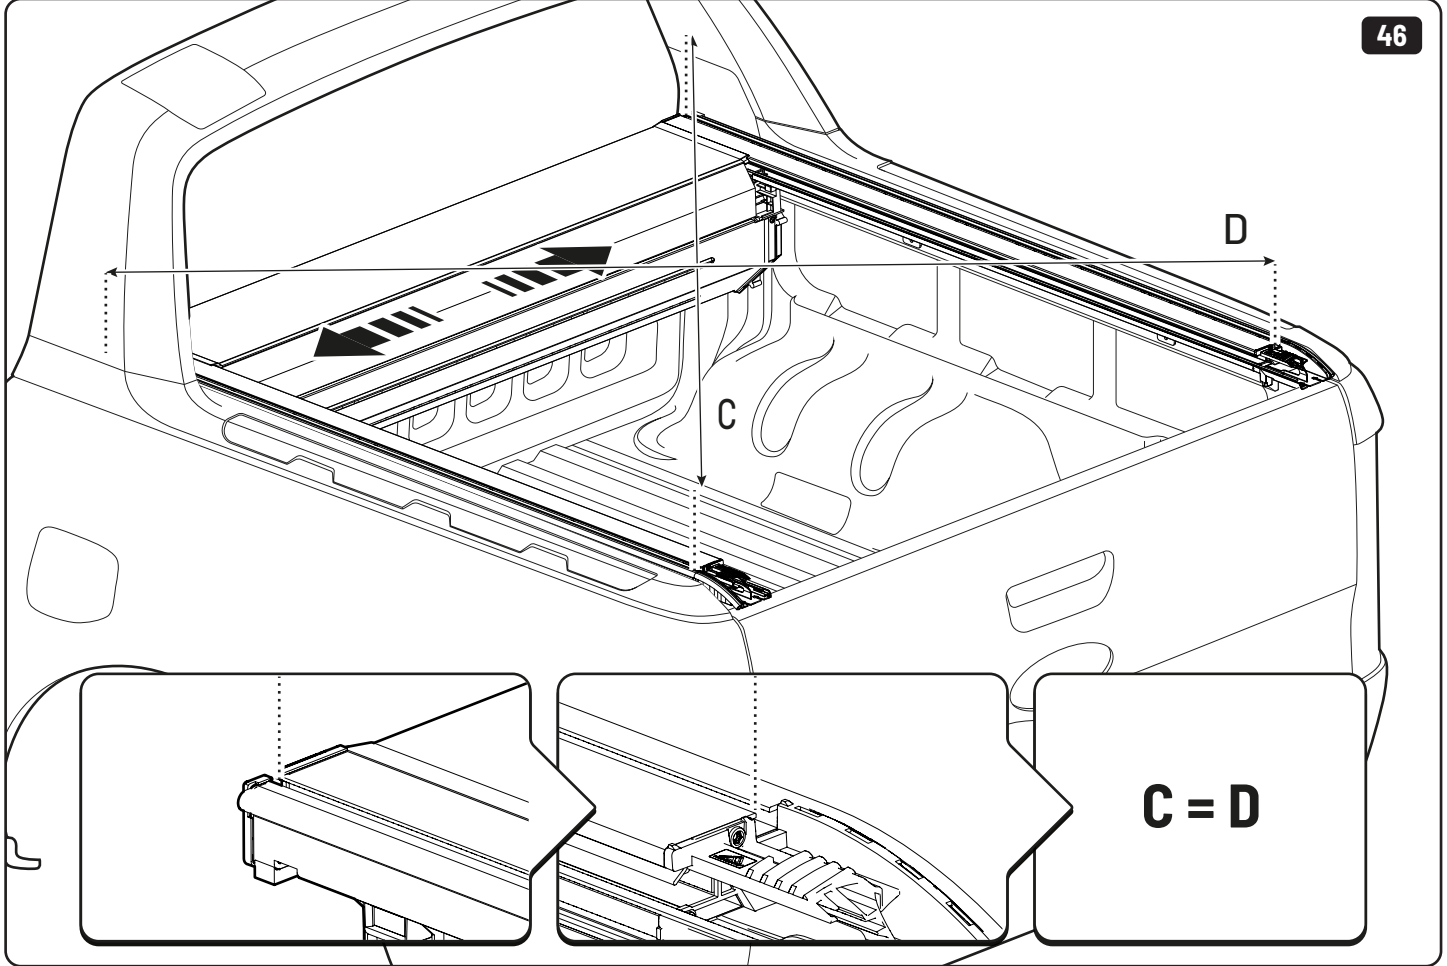


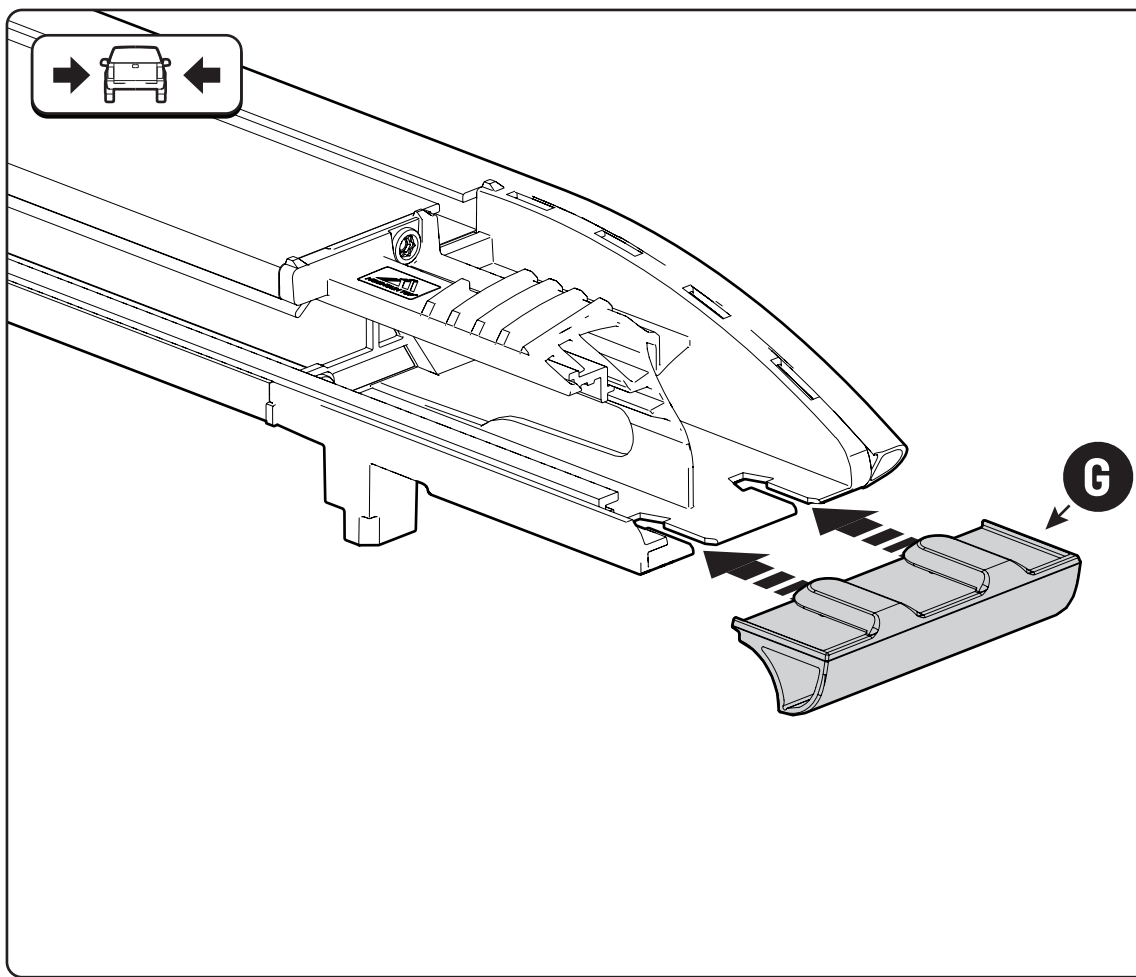





x2


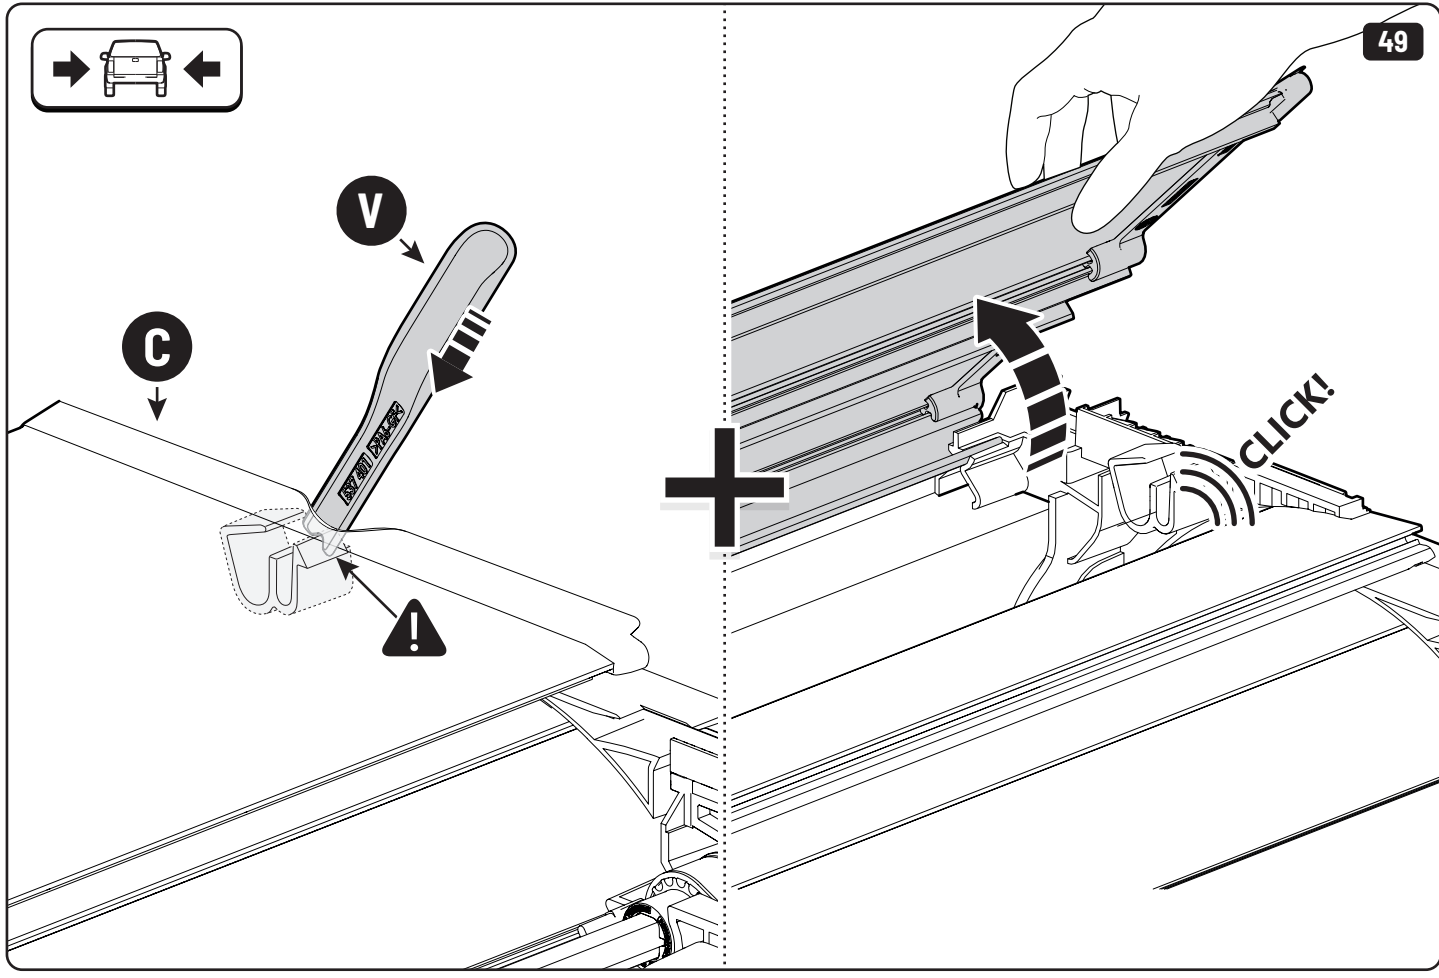



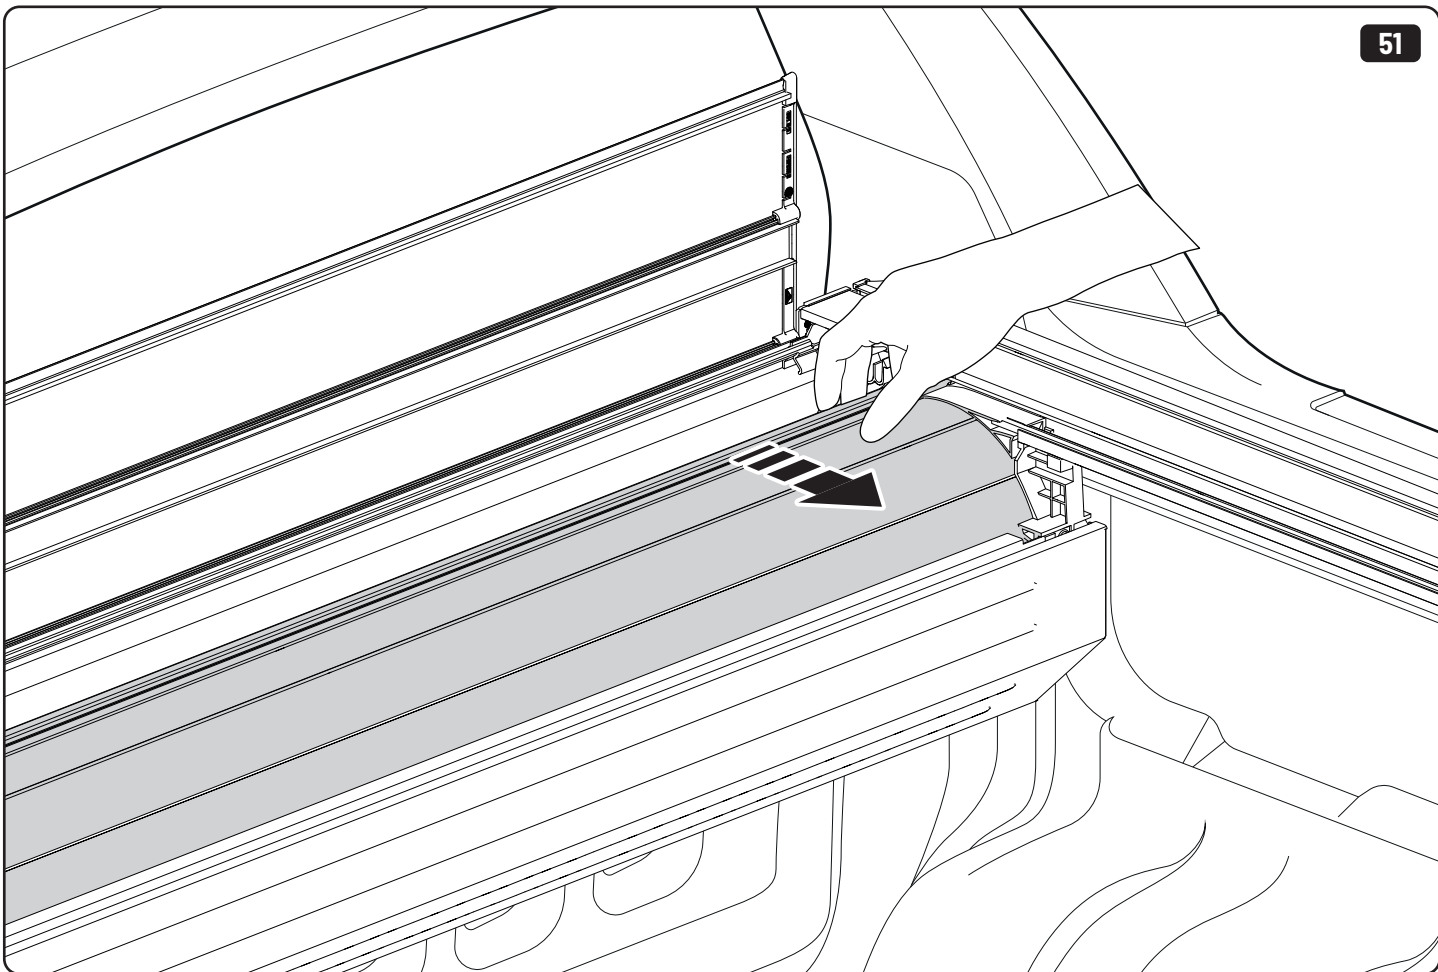
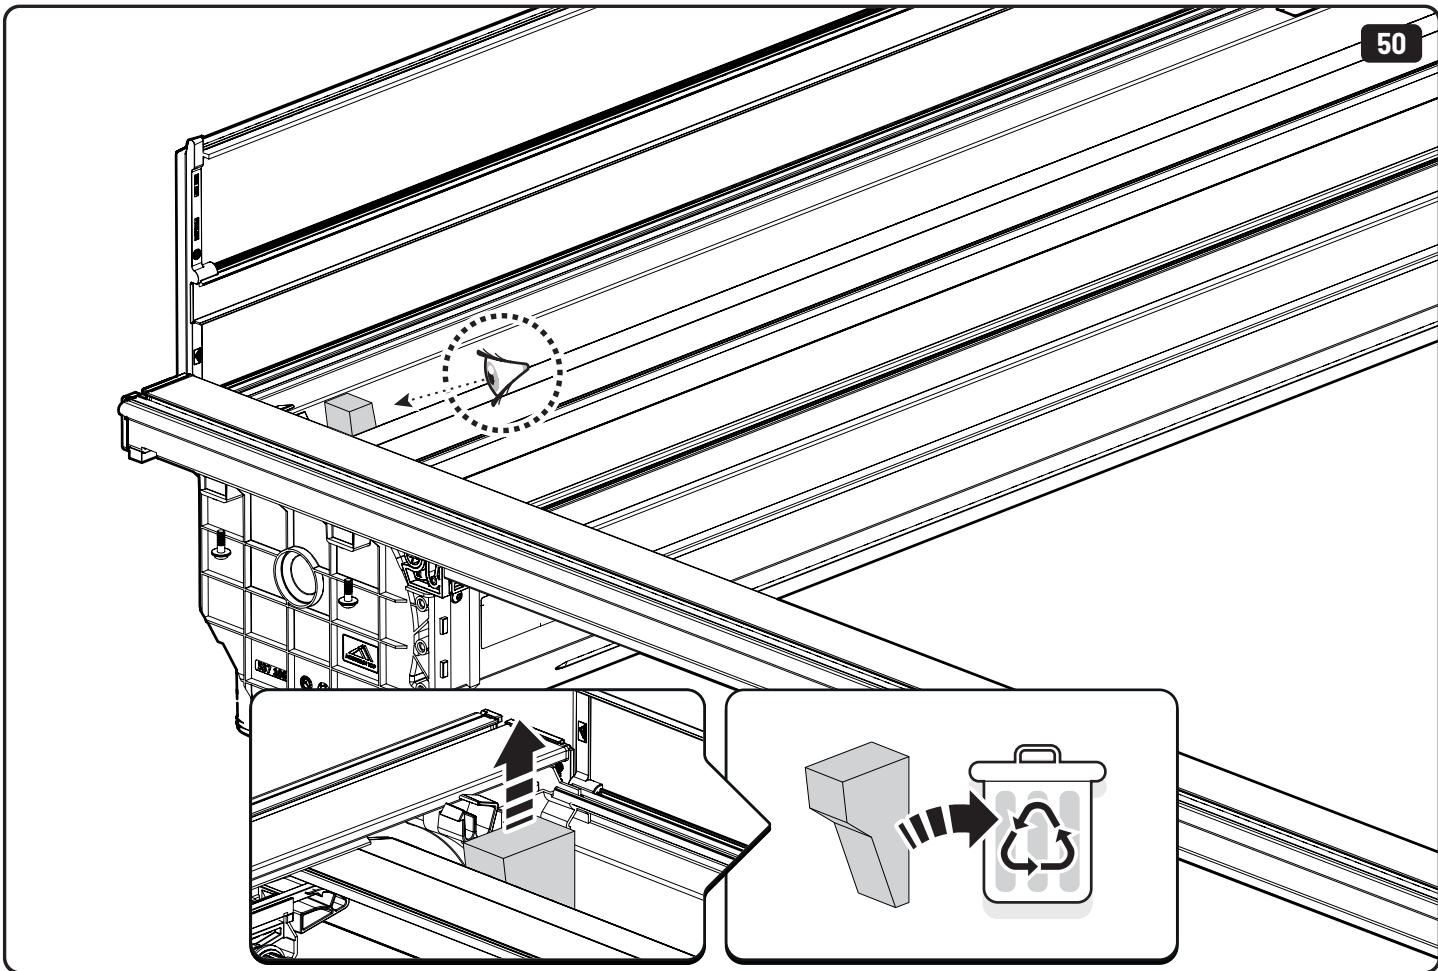


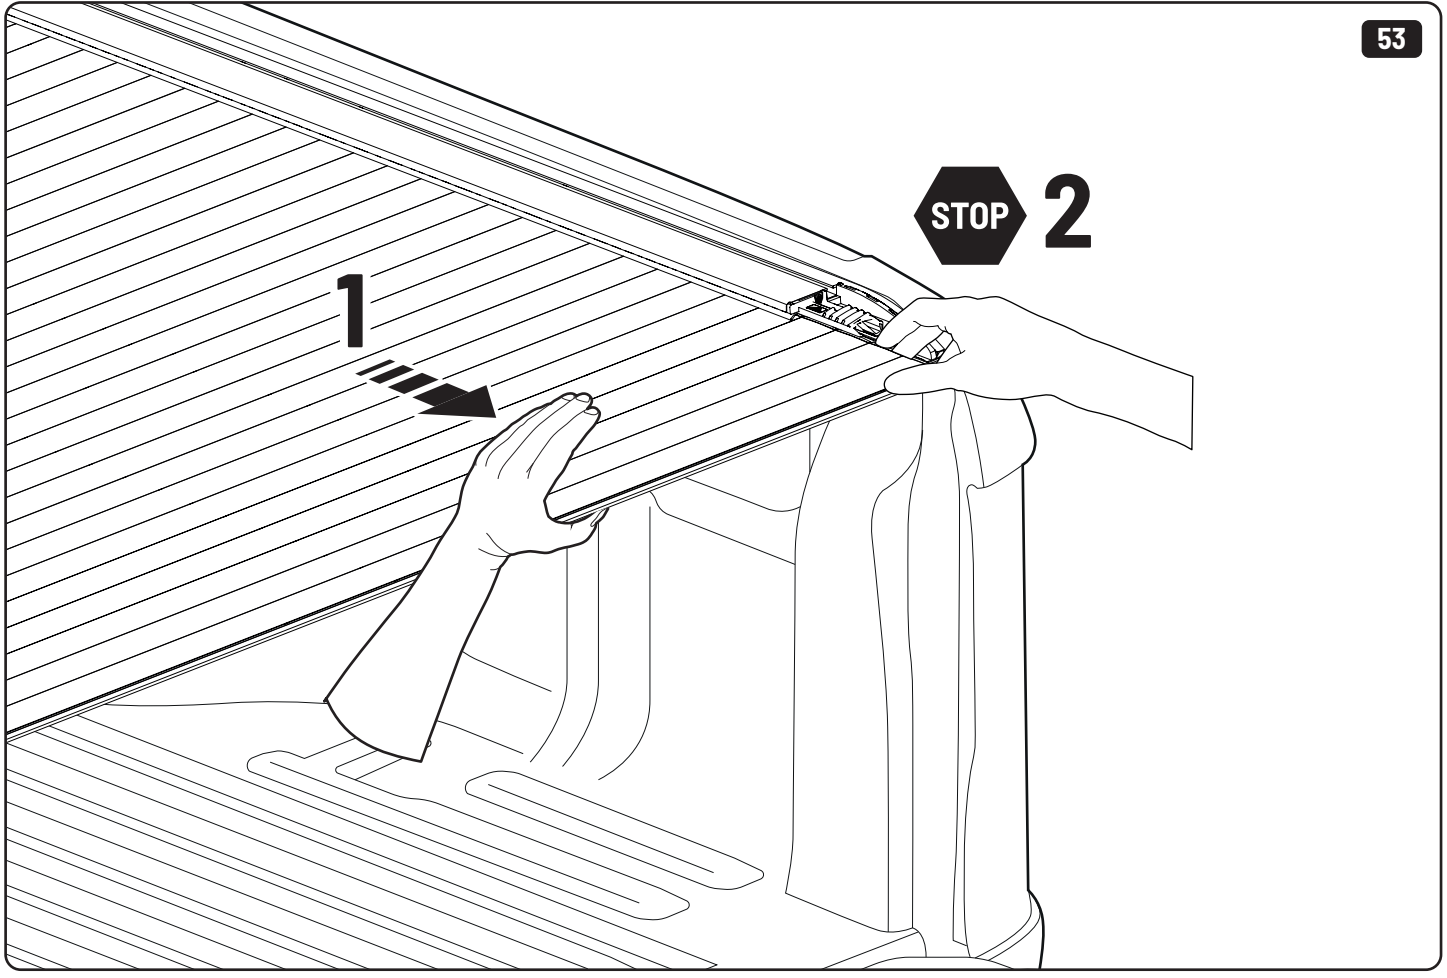
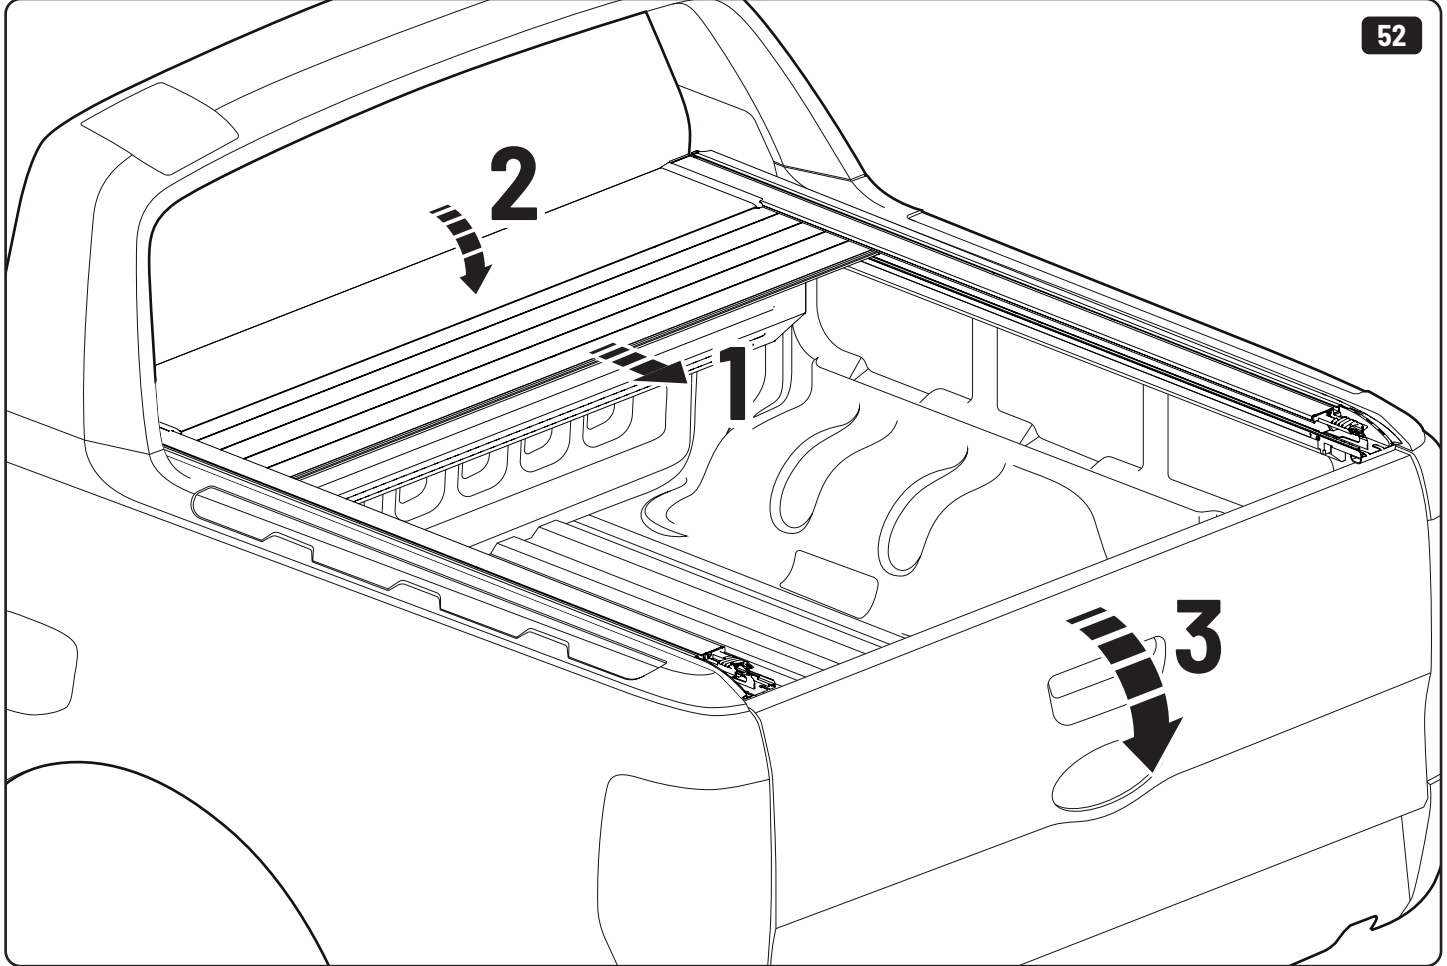


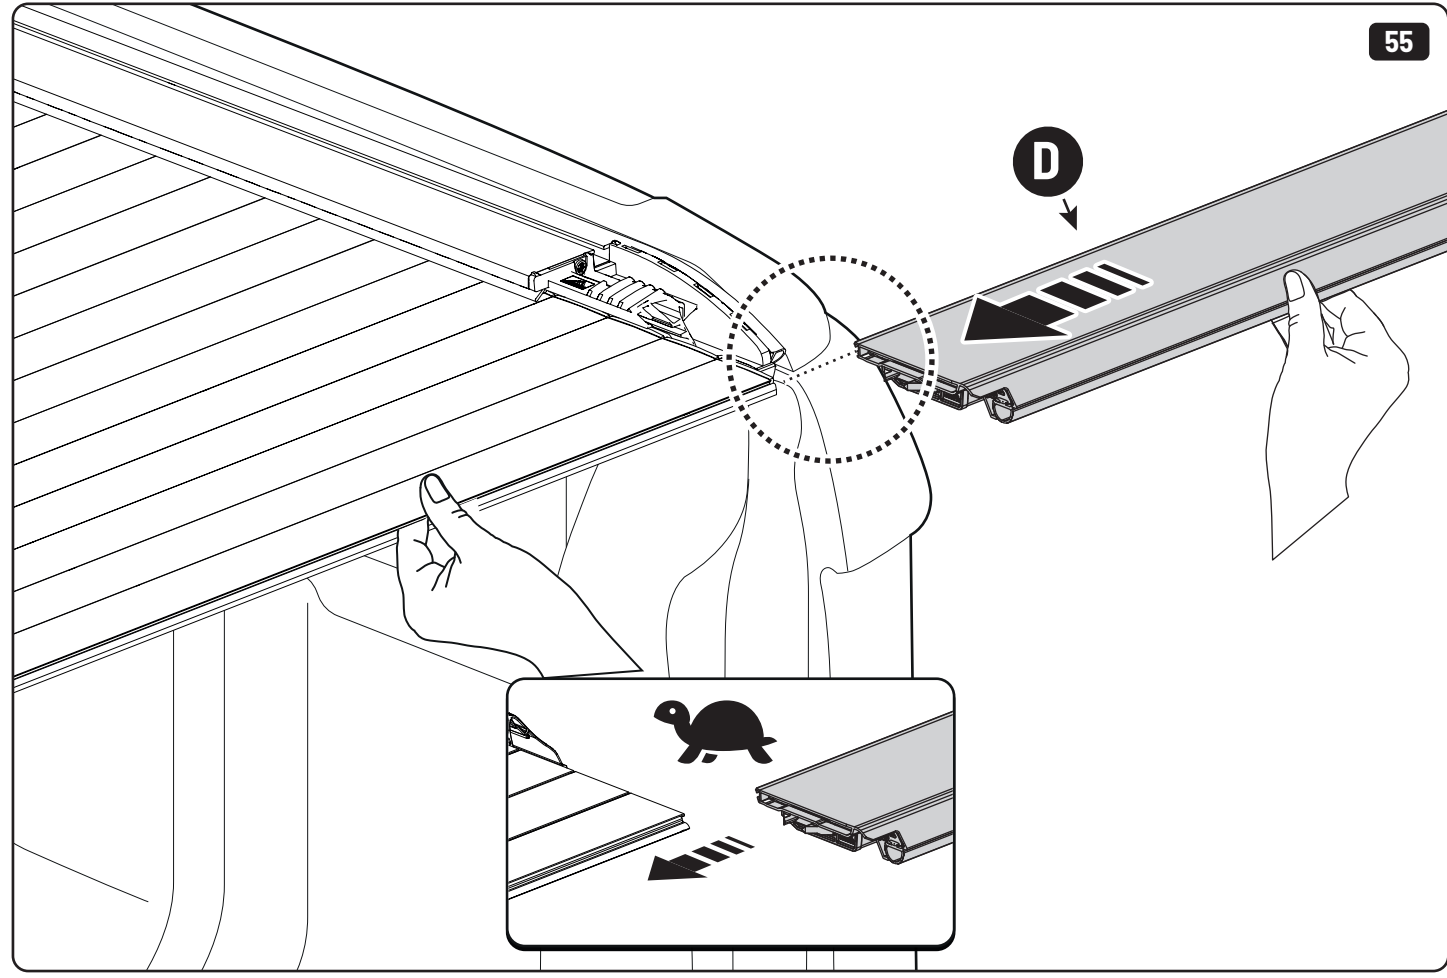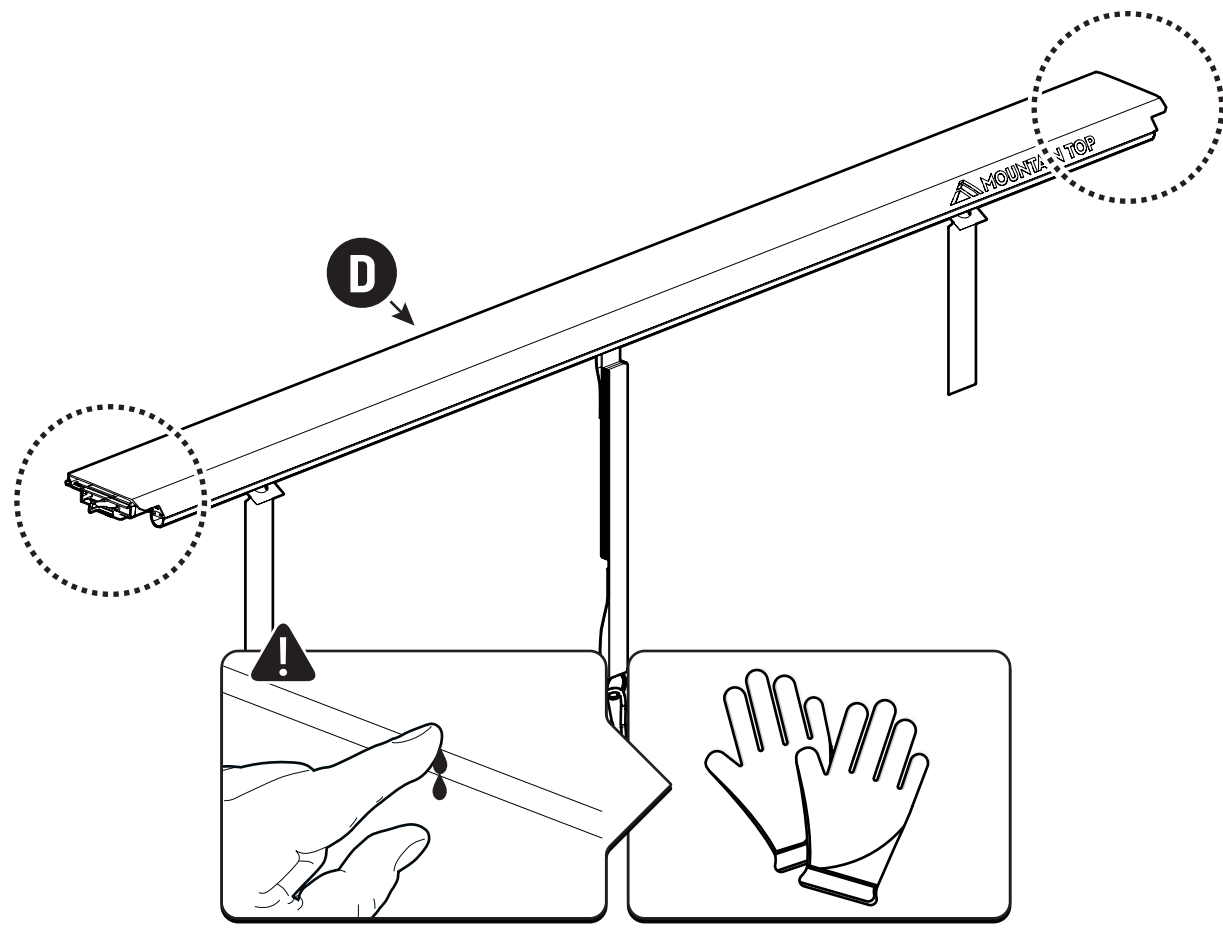



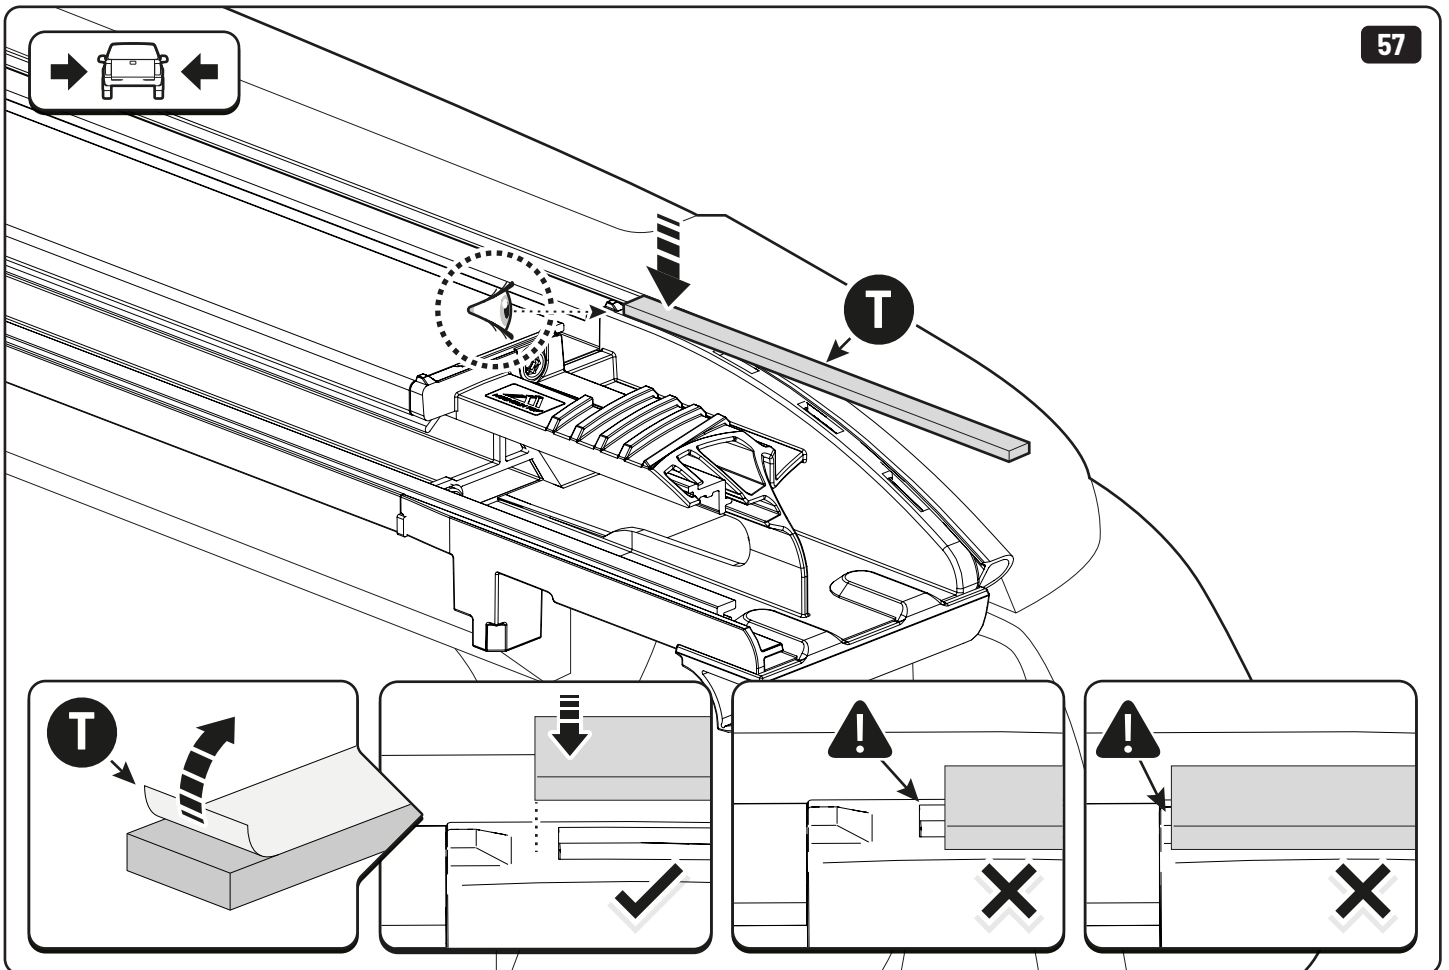
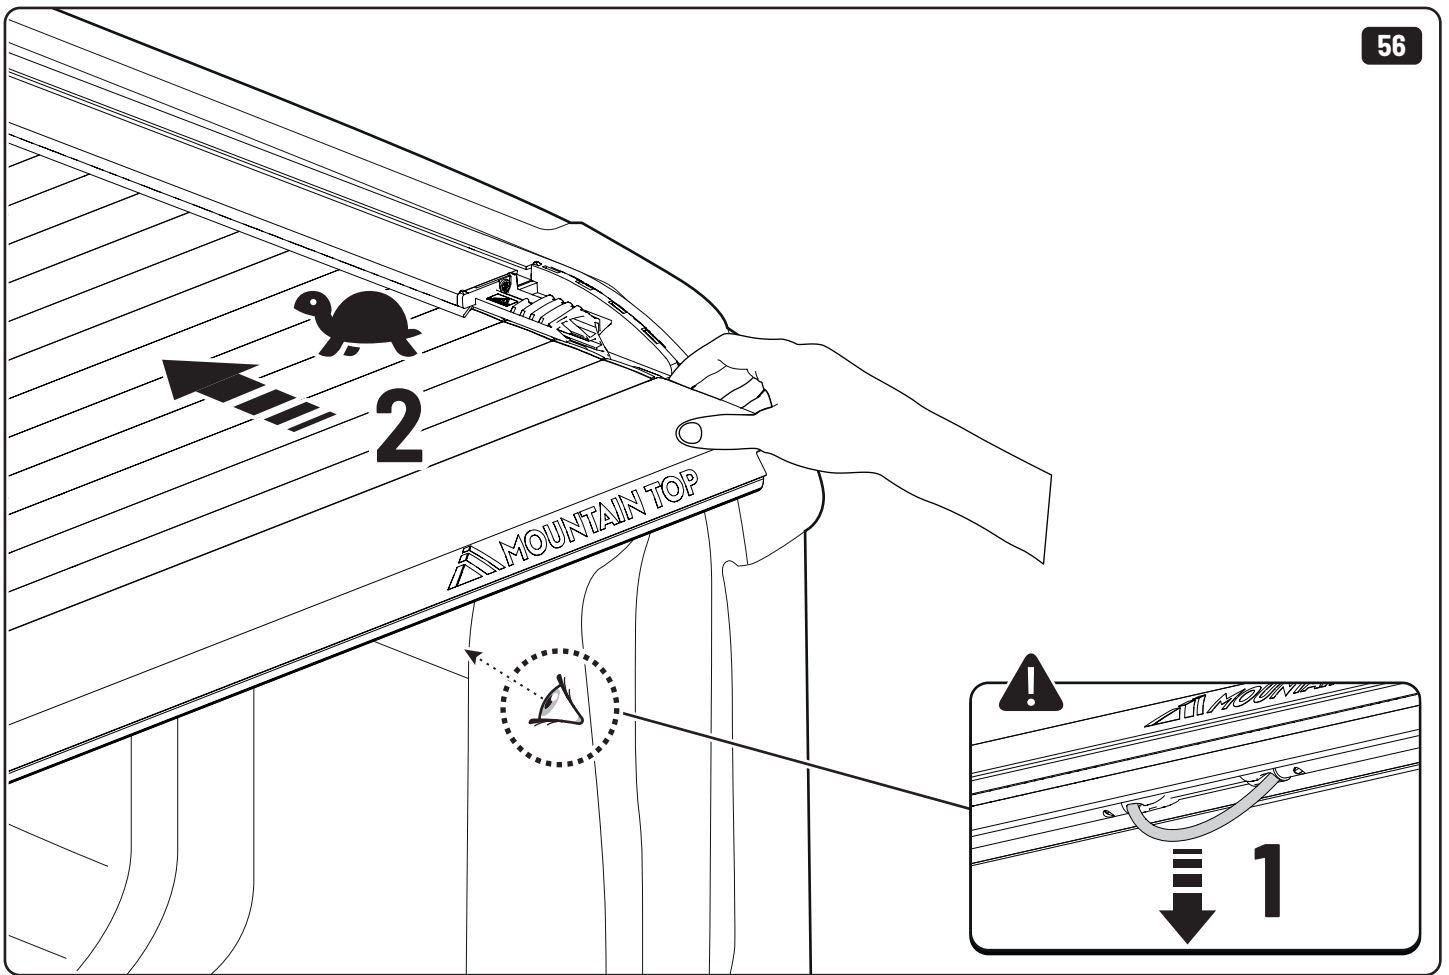


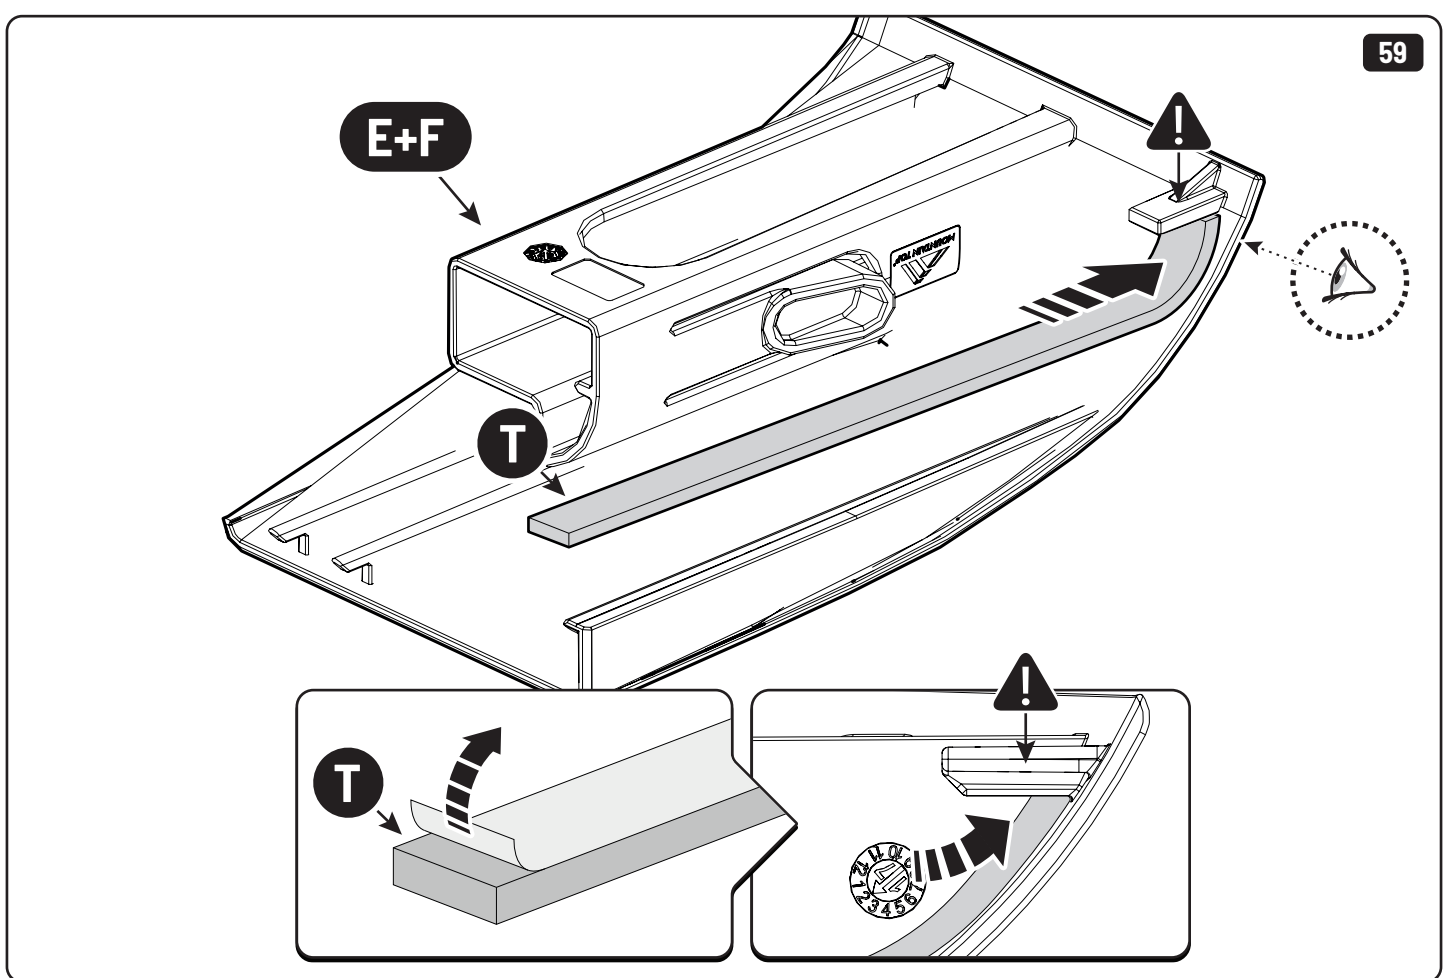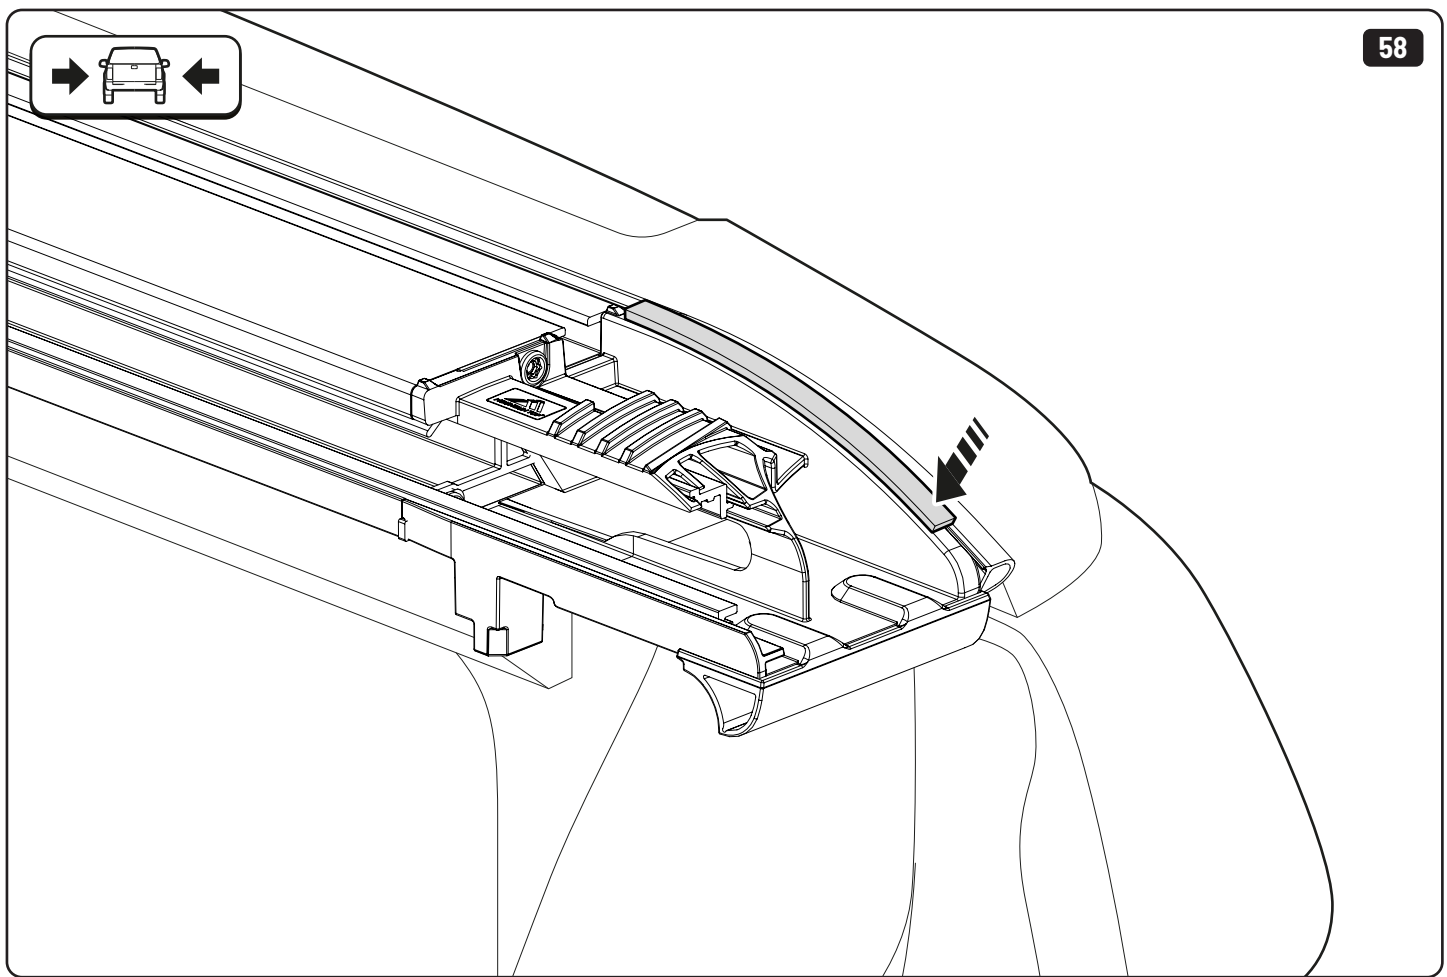



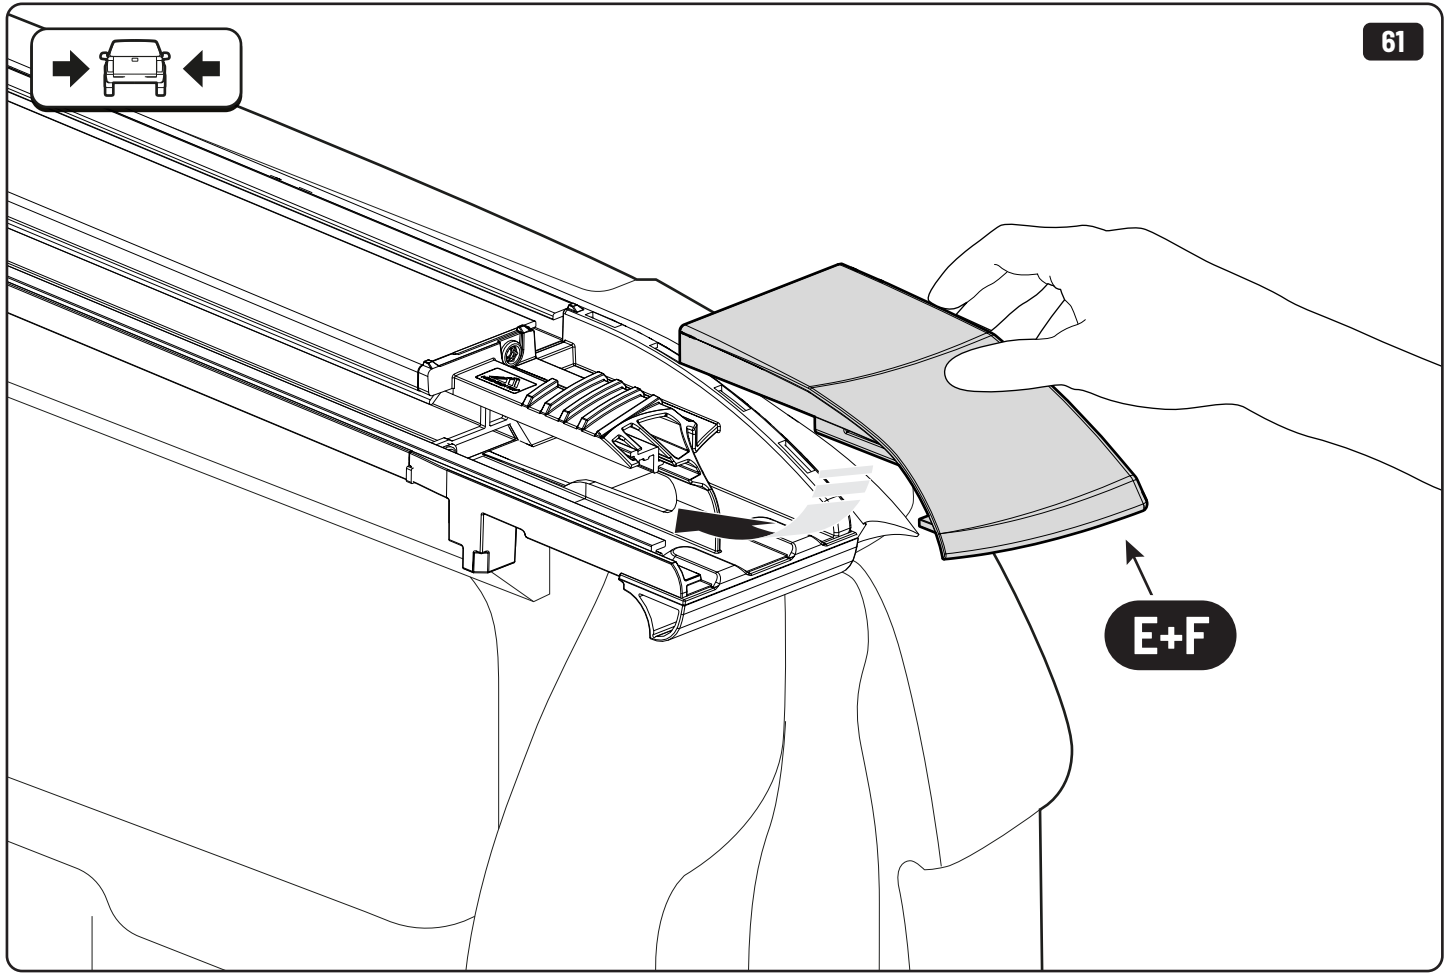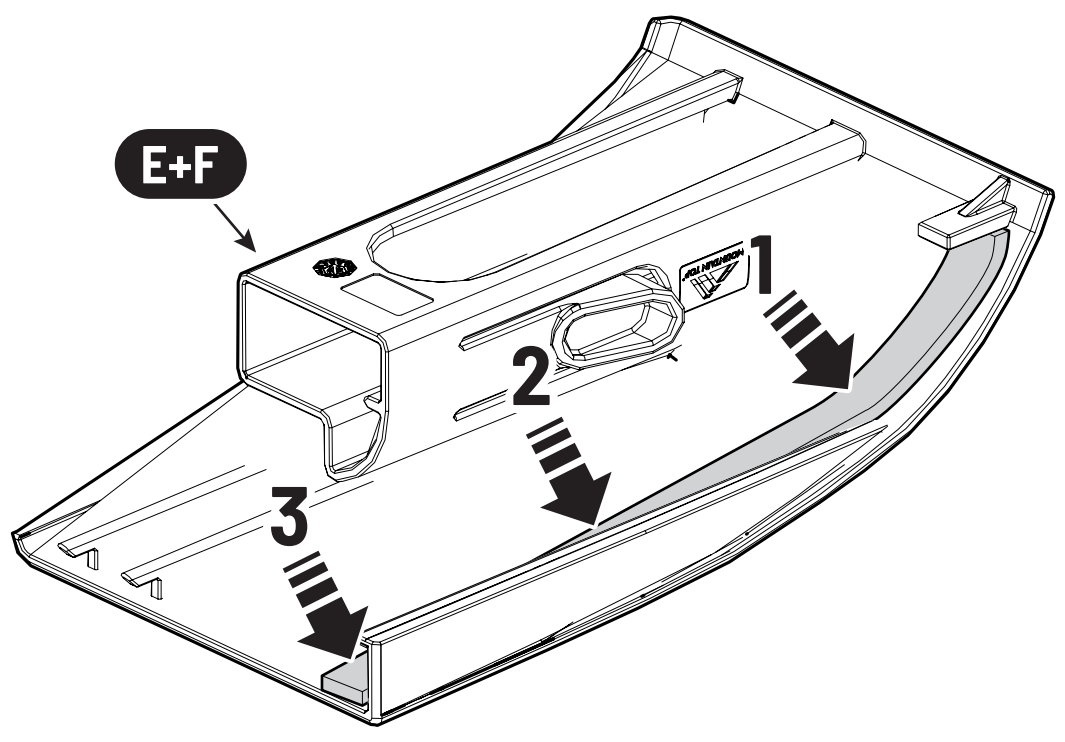

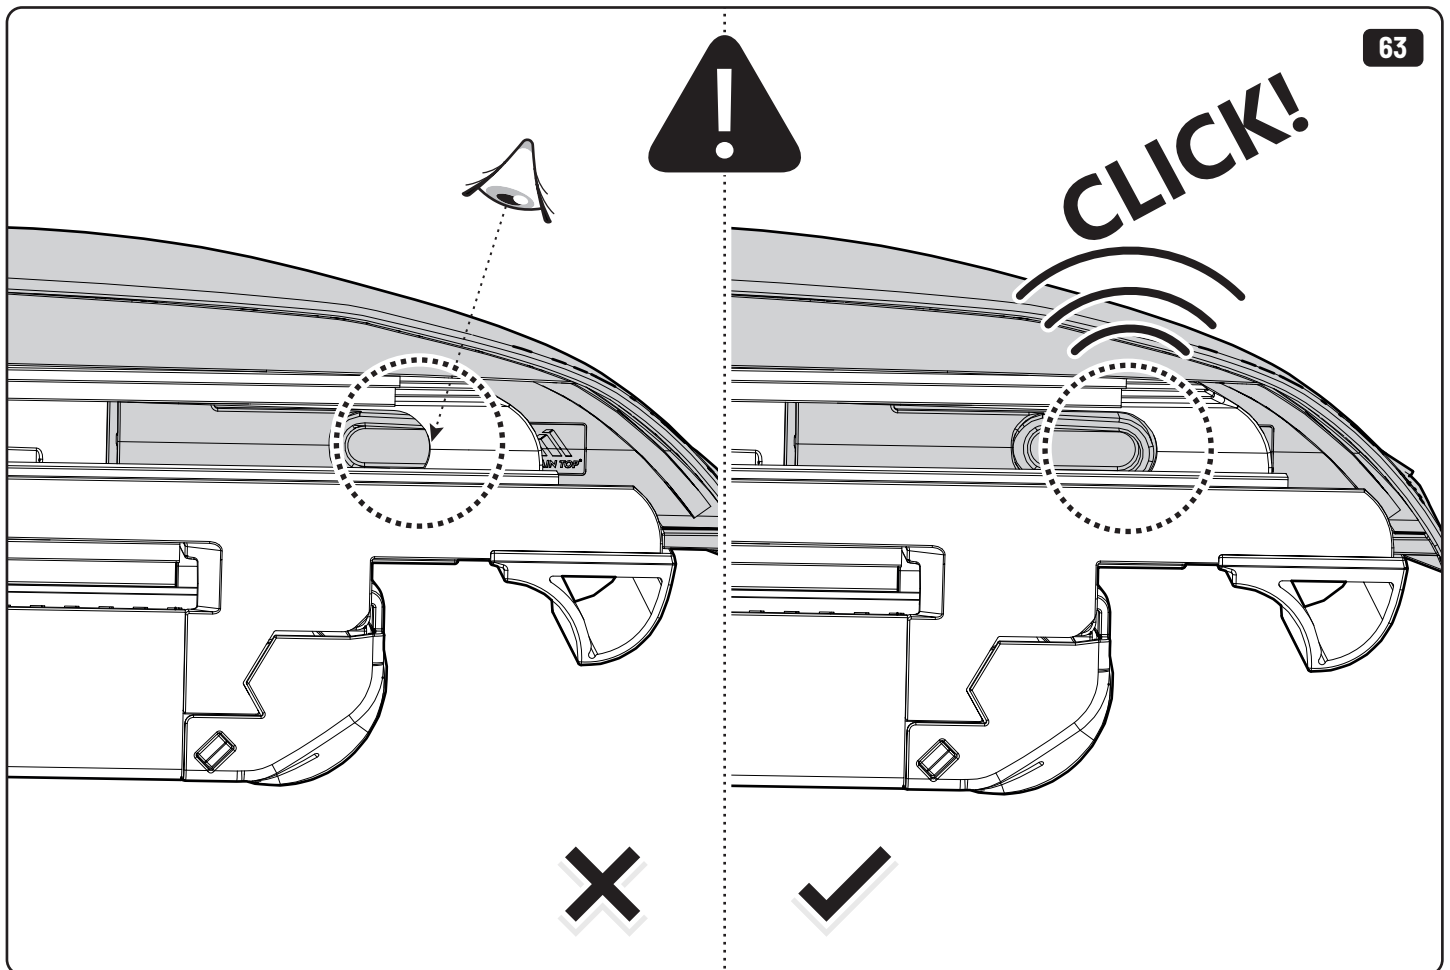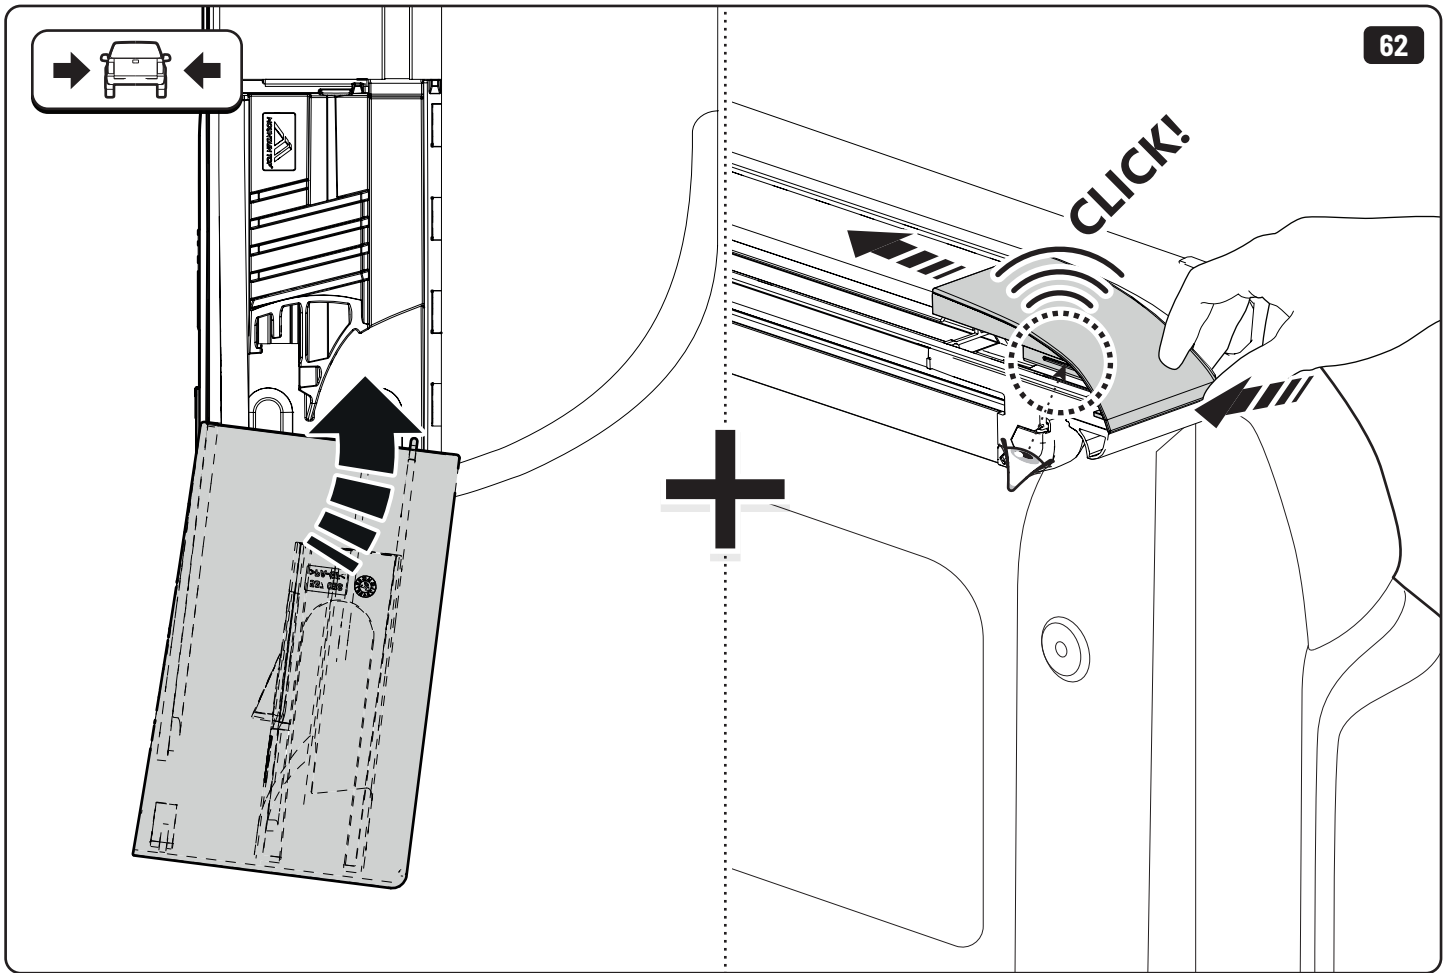

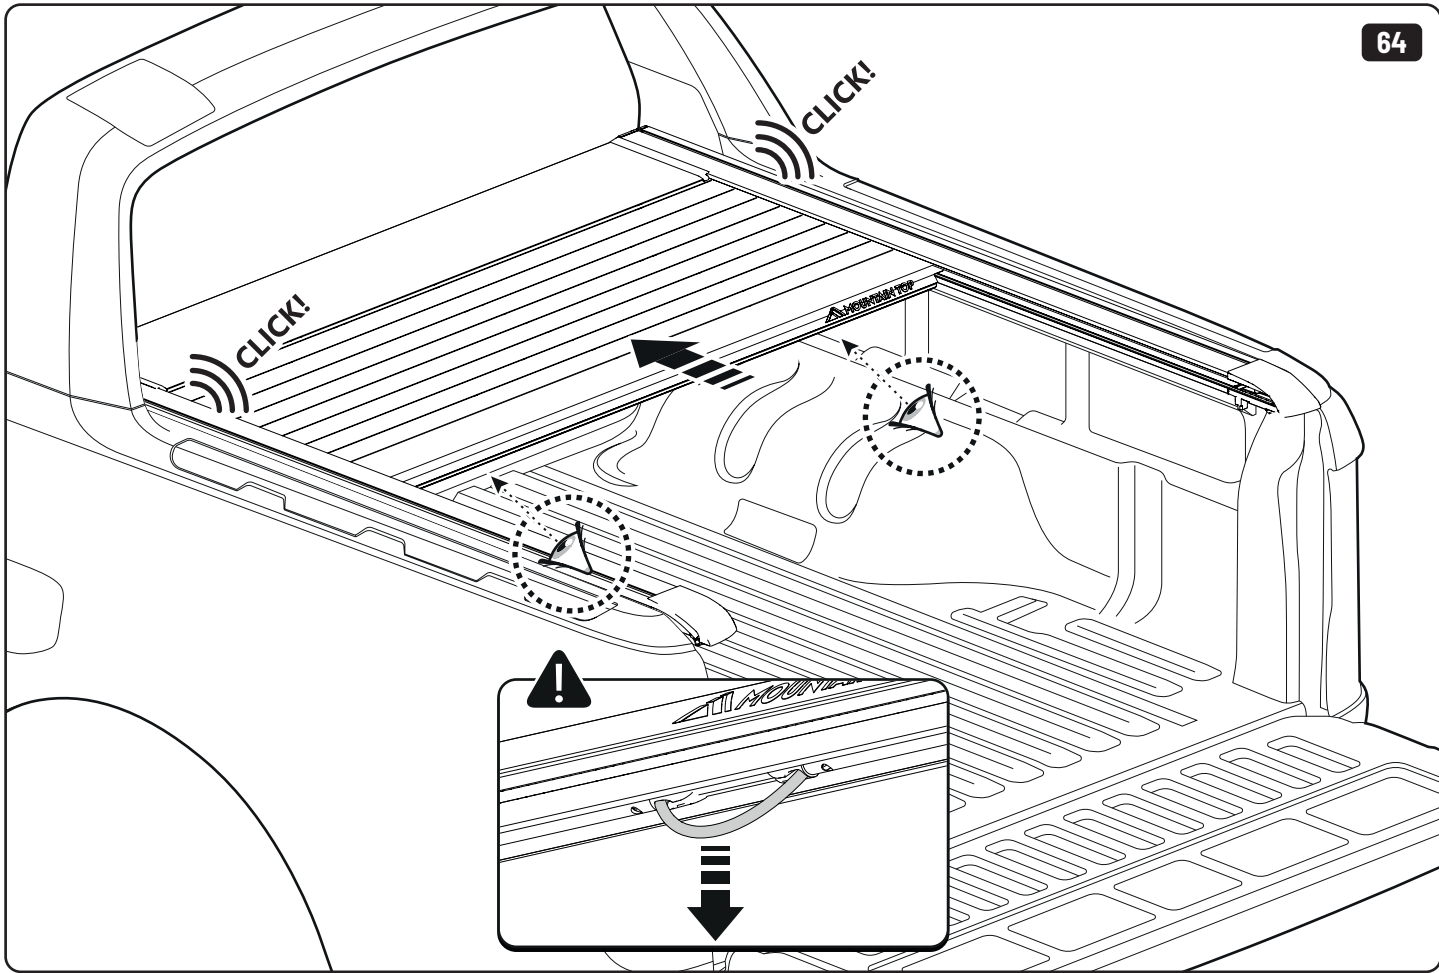

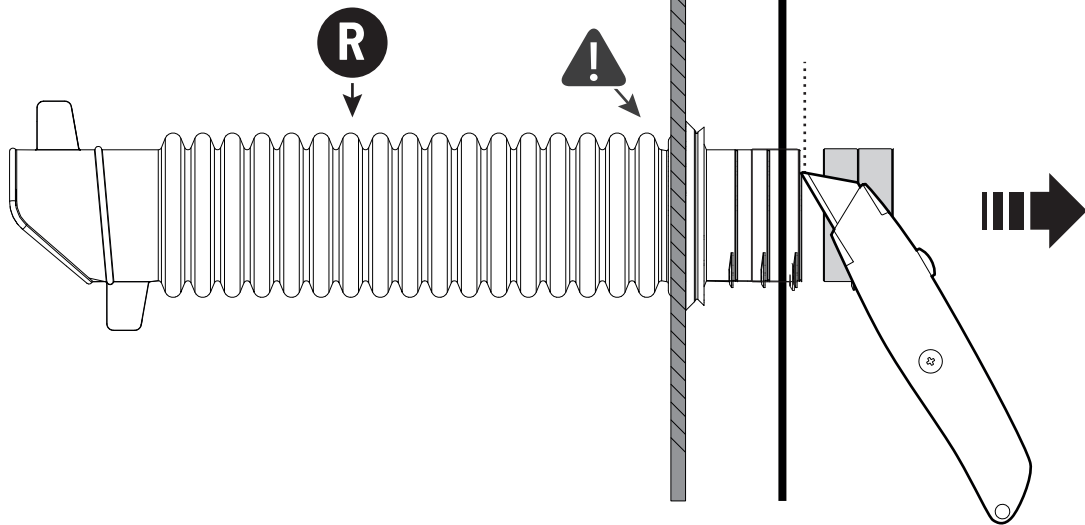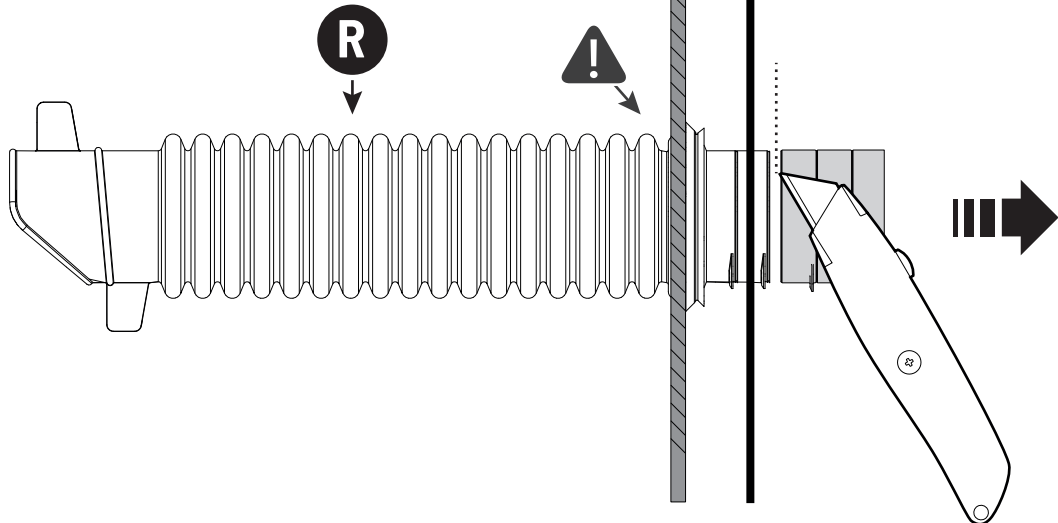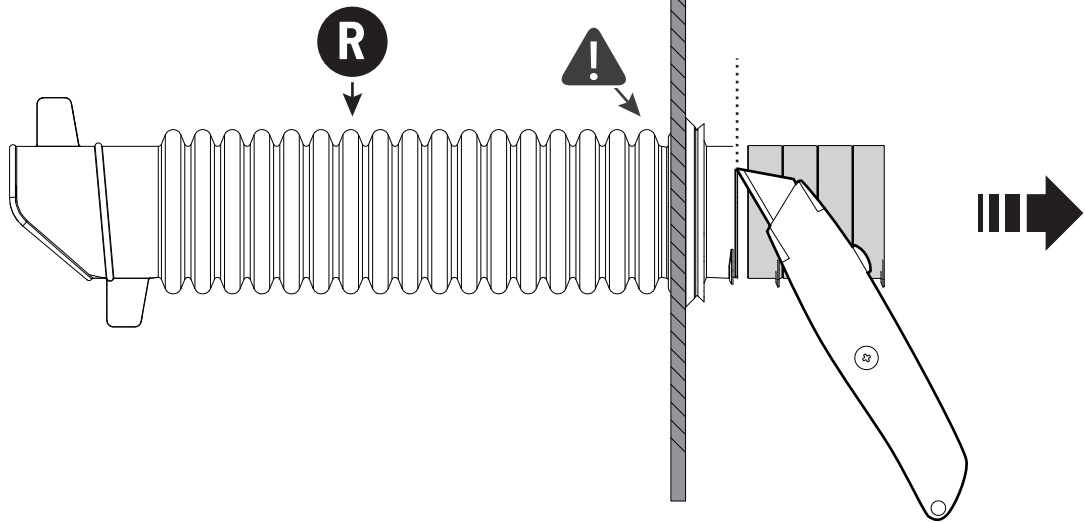

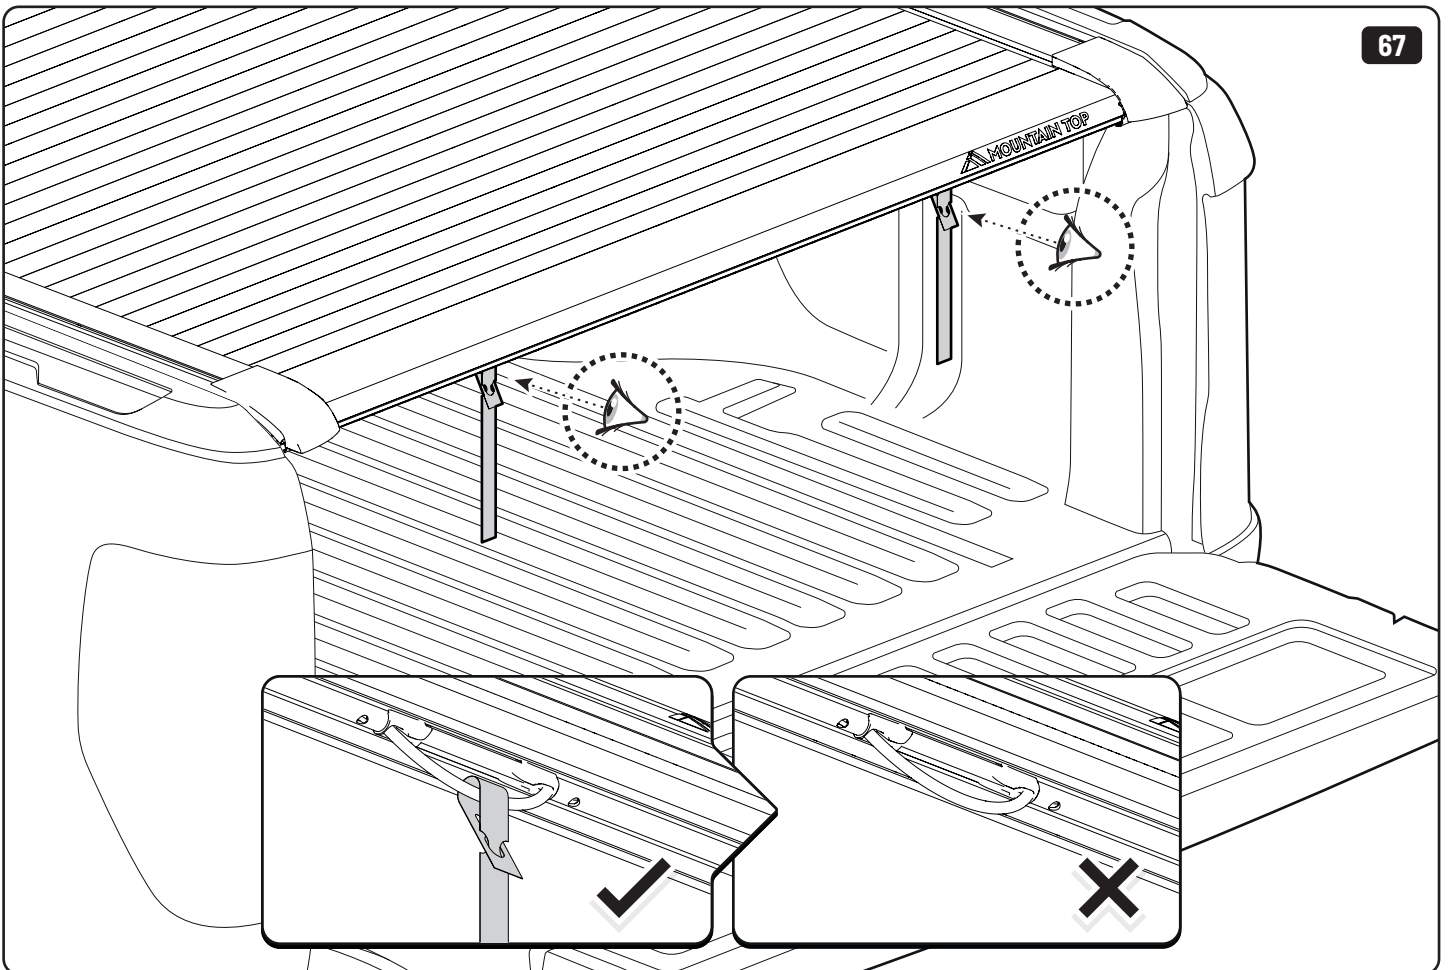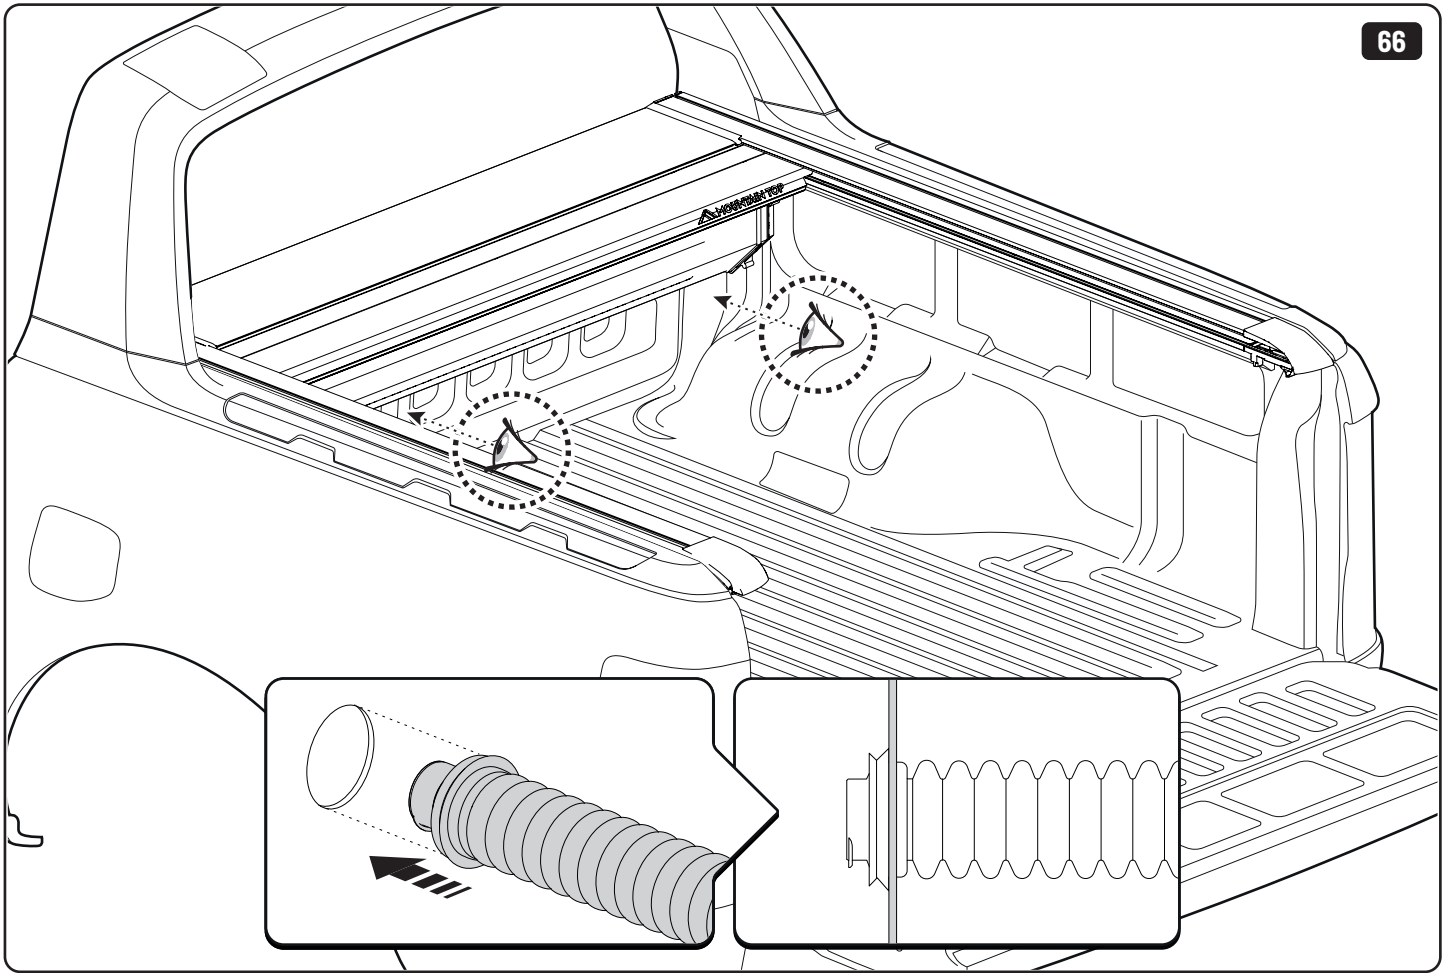



Steps	Page	Done by
Mounting gliding rail in canister	13	
Holes for drain	17-18	
Width + Cross measurement	26+28	
Tightening the bracket	19+27	
Mounting drain	38	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab type (s)	Installation time	Weight
EV0m F090 HB01	Wildtrak / 2011 ->	Double Cab	1 hour (s)	27 kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni di montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare