






MOUNTAIN TOP® EV0m

Installation manual
















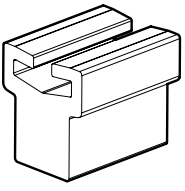








DOWNLOAD PDF

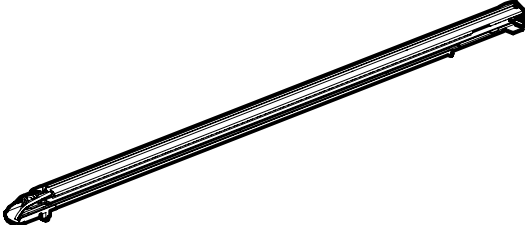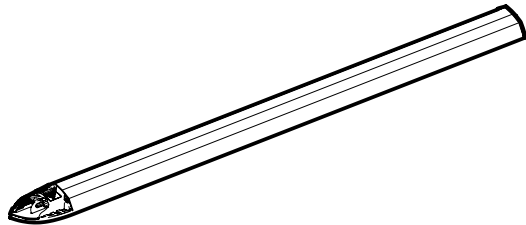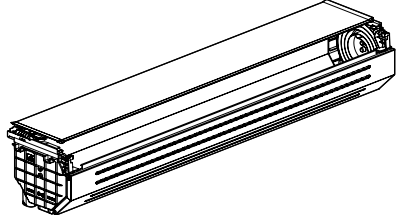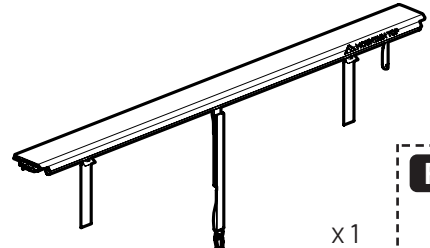


Parts

<p>A</p>  <p>x1</p>	<p>B</p>  <p>x1</p>
<p>C</p>  <p>x1</p>	<p>D</p>  <p>x1</p> <div style="border: 1px dashed black; padding: 2px; display: inline-block;"> <p>R2</p>  <p>x1</p> </div>

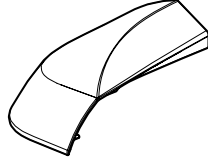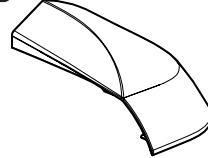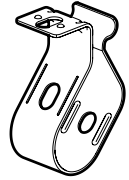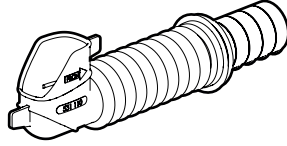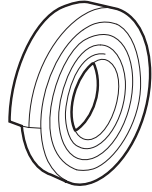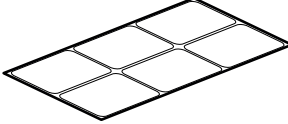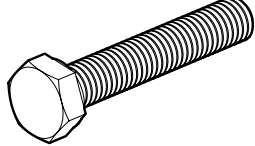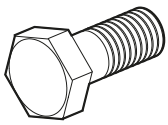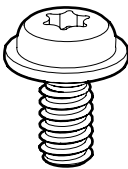
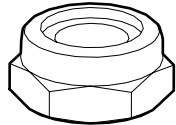

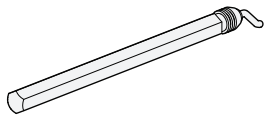

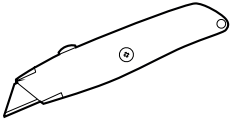


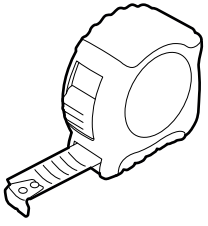
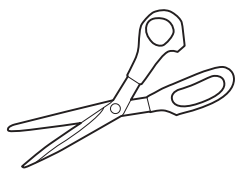



Kit
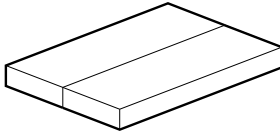
<p>E</p>  <p>LEFT x1</p>	<p>F</p>  <p>RIGHT x1</p>	<p>G</p>  <p>x12</p>	<p>H</p>  <p>x6</p>
<p>I</p>  <p>x2</p>	<p>J</p>  <p>x1</p>	<p>K</p>  <p>x1</p>	<p>L</p>  <p>x6</p>
<p>M</p>  <p>x6</p>	<p>N</p>  <p>x4</p>	<p>O</p>  <p>x6</p>	<p>P</p>  <p>x6</p>
<p>R</p>  <p>x6</p>	<p>S</p>  <p>x1</p>	<p>T</p>  <p>x2</p>	<p>U</p>  <p>x4</p>

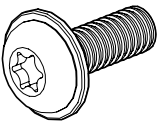
<p>H1</p>  <p>x1</p>	<p>I1</p>  <p>x1</p>	<p>J1</p>  <p>M8 x 20</p> <p>x 4</p>
<p>K1</p>  <p>M6 x 20</p> <p>x 2</p>	<p>L1</p>  <p>M6</p> <p>x 2</p>	<p>M1</p>  <p>x 2</p>


Kit		
 <p>Manual</p> <p>x1</p>	 <p>TÜV</p> <p>x1</p>	 <p>Owners Manual</p> <p>x1</p>



Tools needed

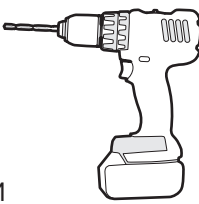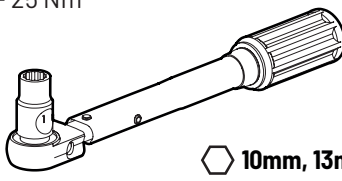 <p>Ø3.5 + Ø10 MM</p>	<p>1- 25 Nm</p>  <p>10mm, 13mm ★ T30, T40</p>	 <p>Rust protection Rostschutzmittel Anti-rouille Anti roest</p>		
				 <p>H₂O</p>
				 <p>LOCTITE 243</p>


Applying rust protection

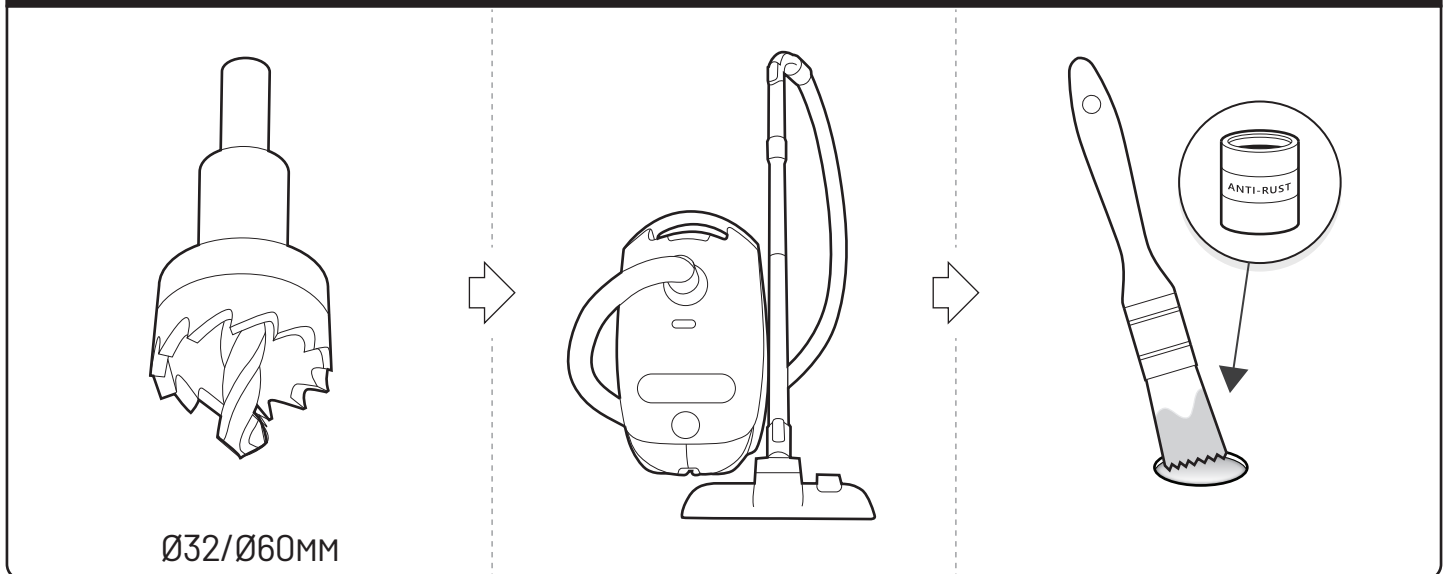

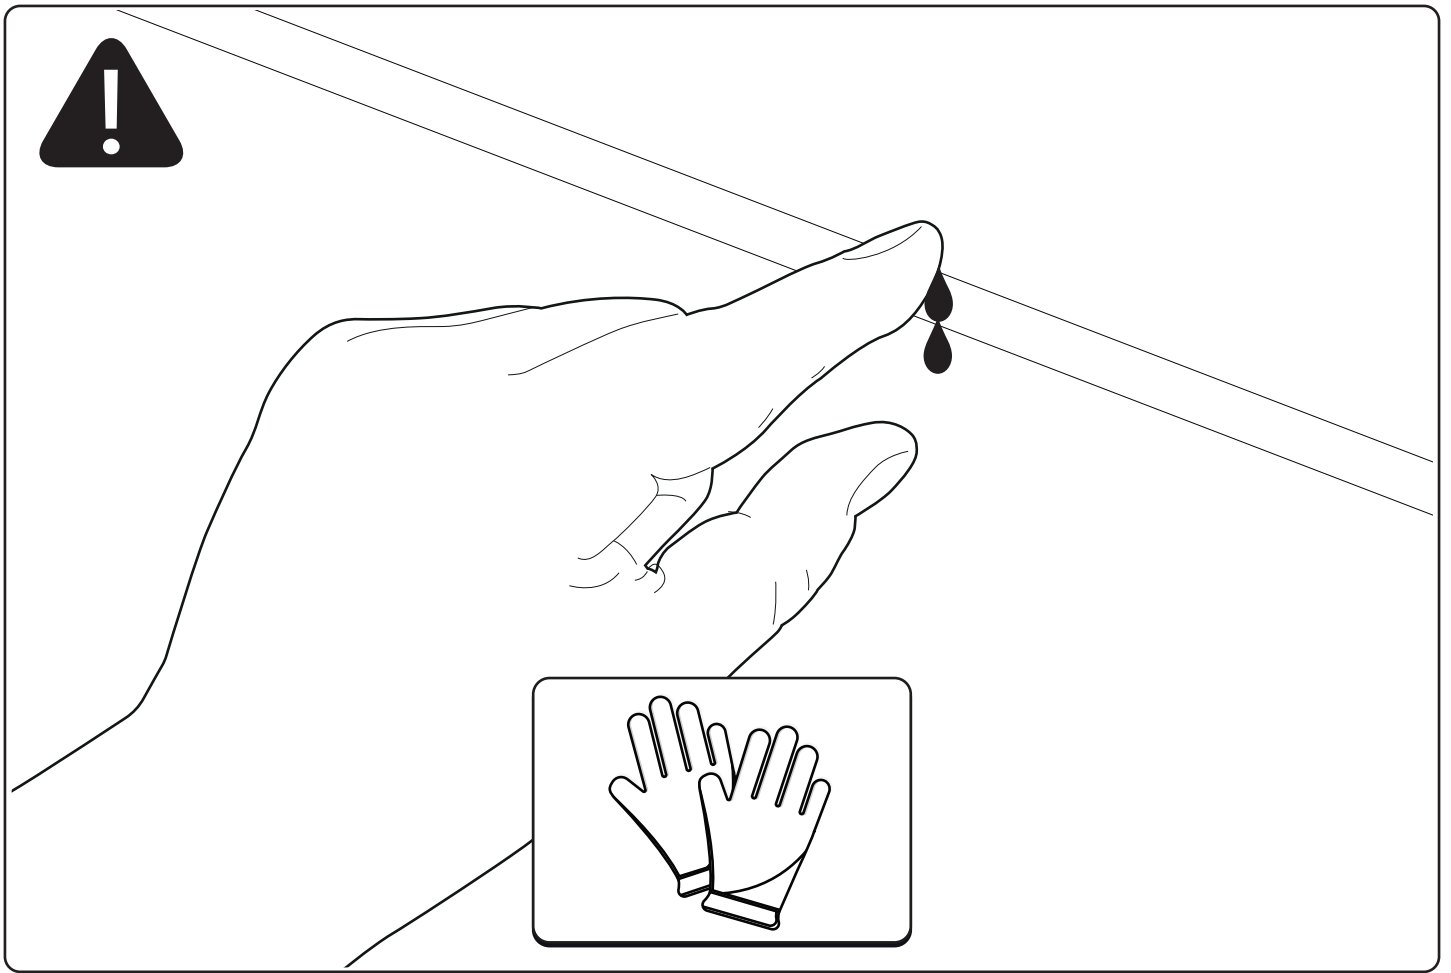


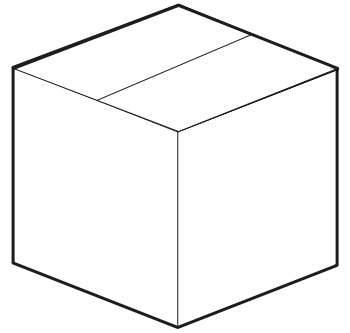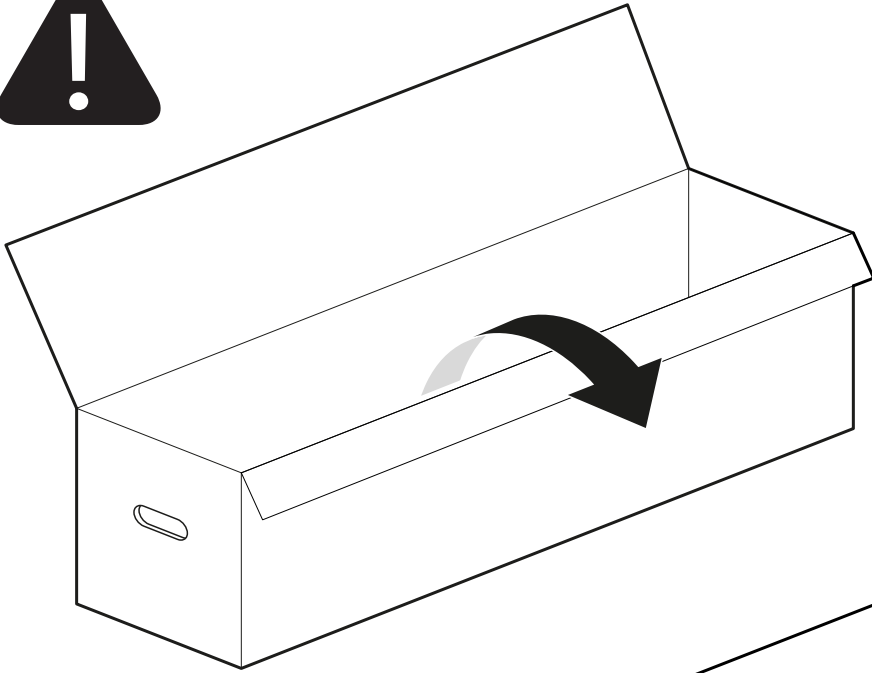


C

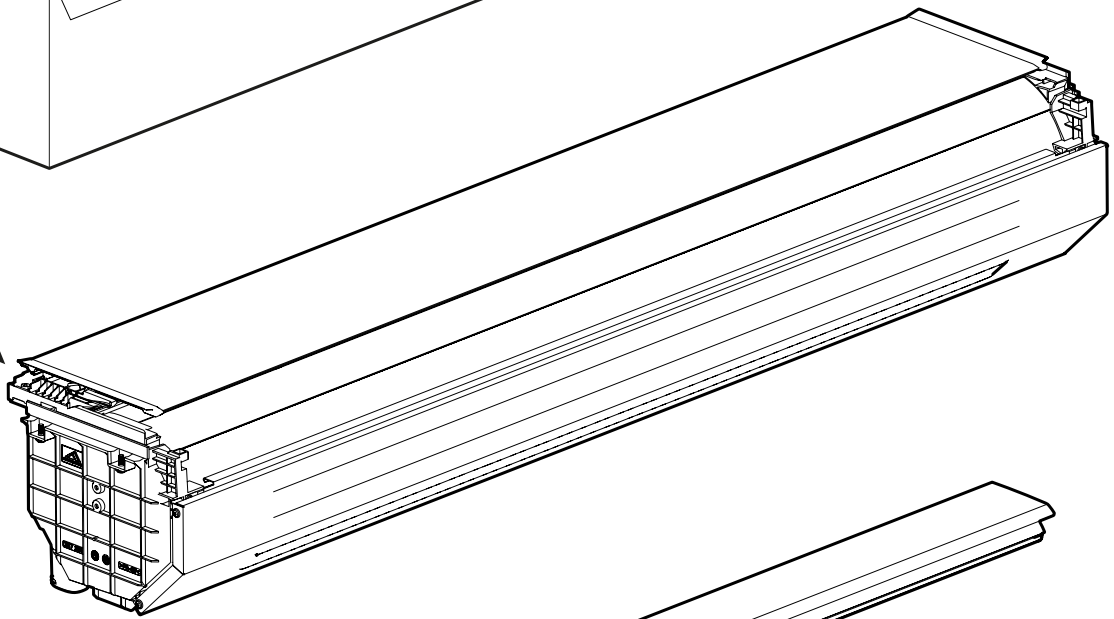

D

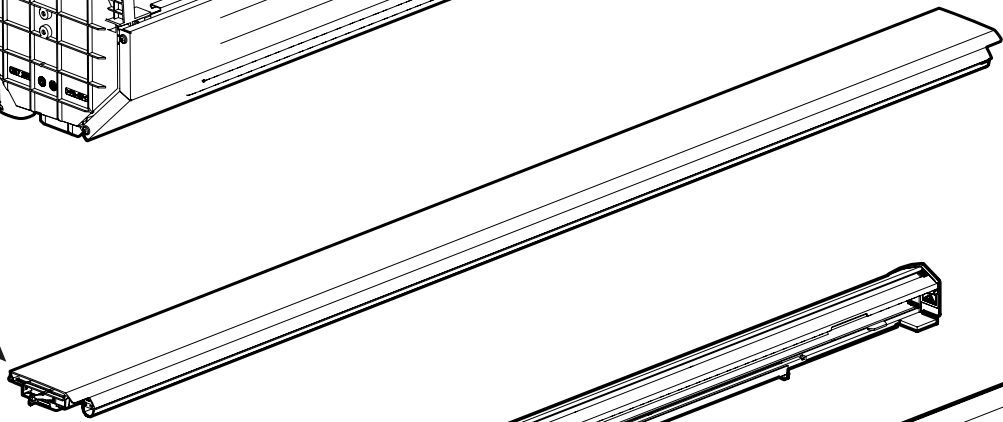

A

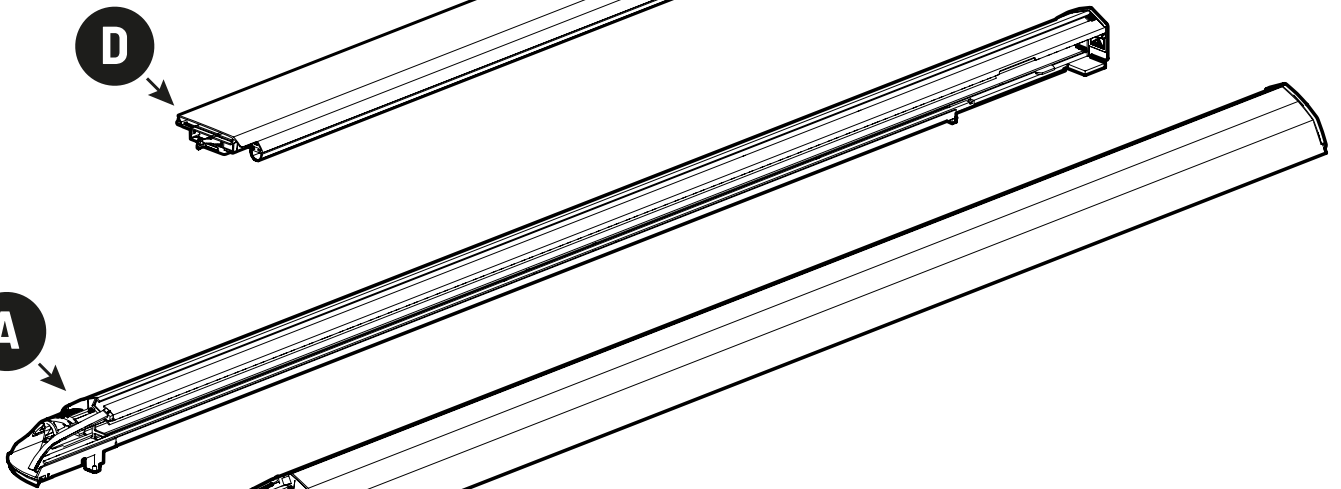


B






Water & sponge


2

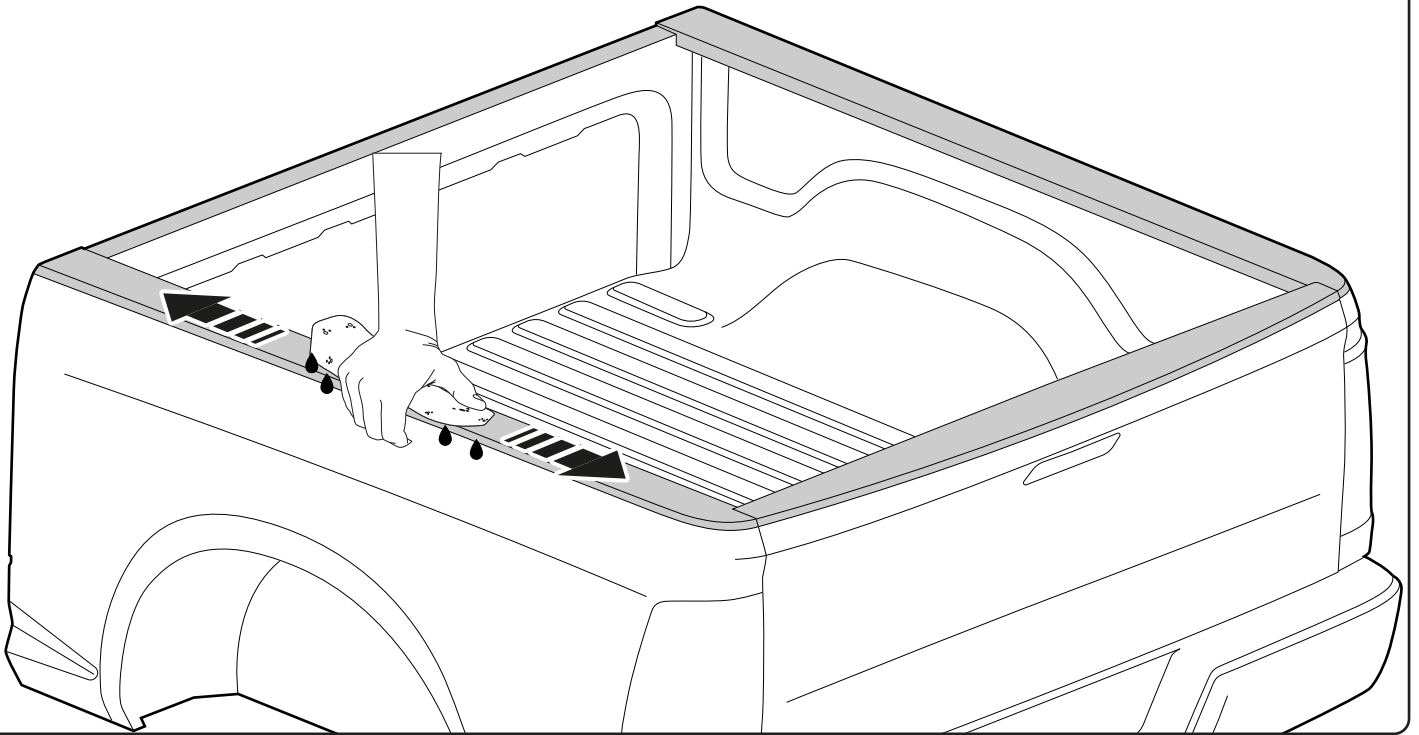


3

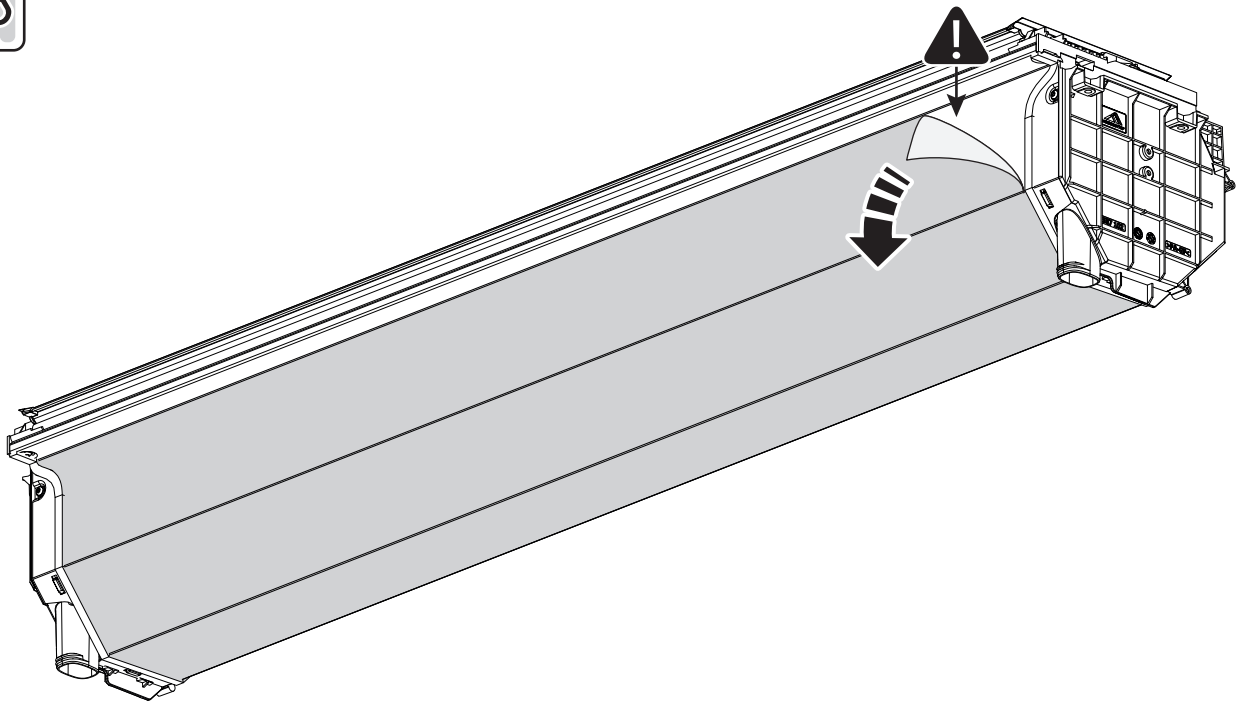


4

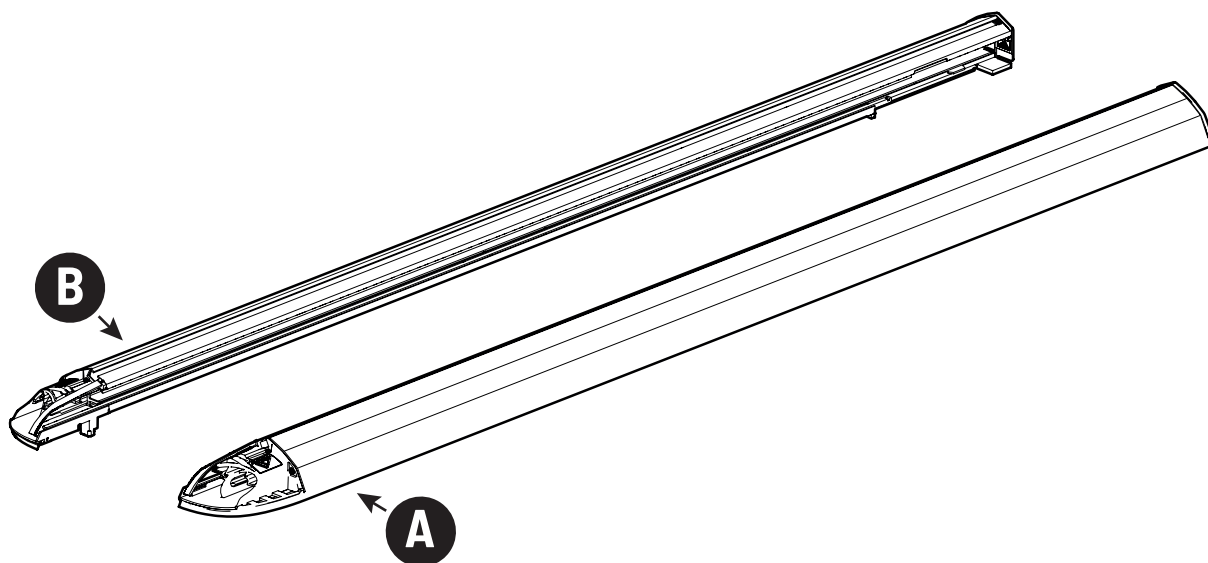



5


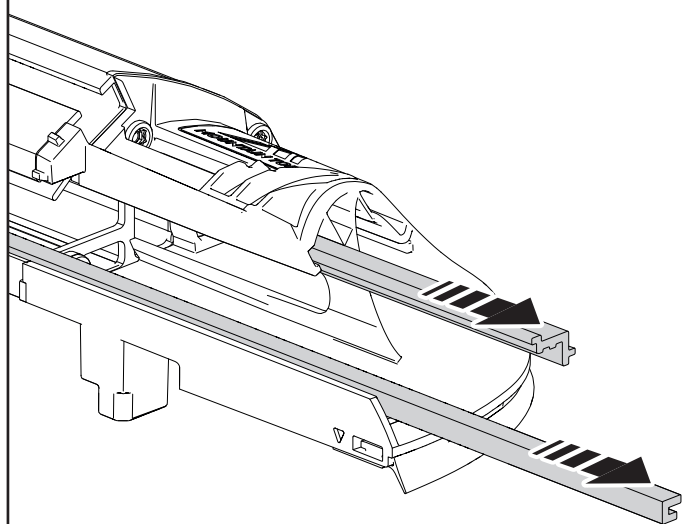




1


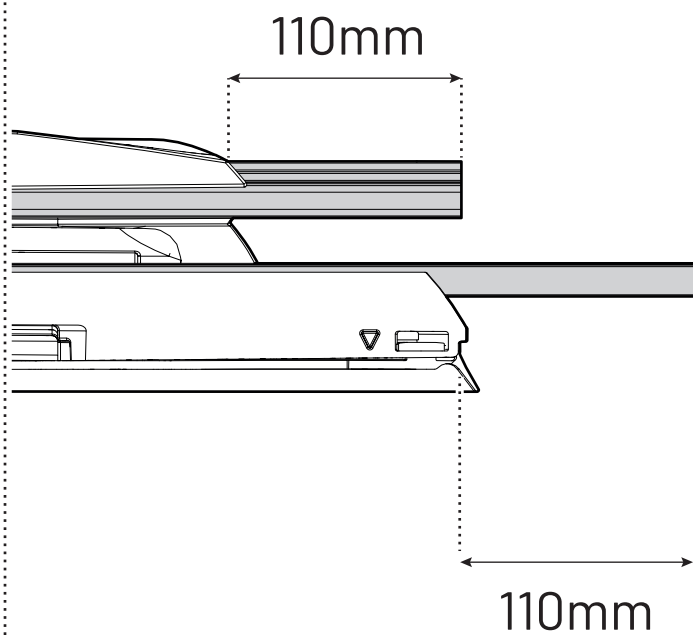




2

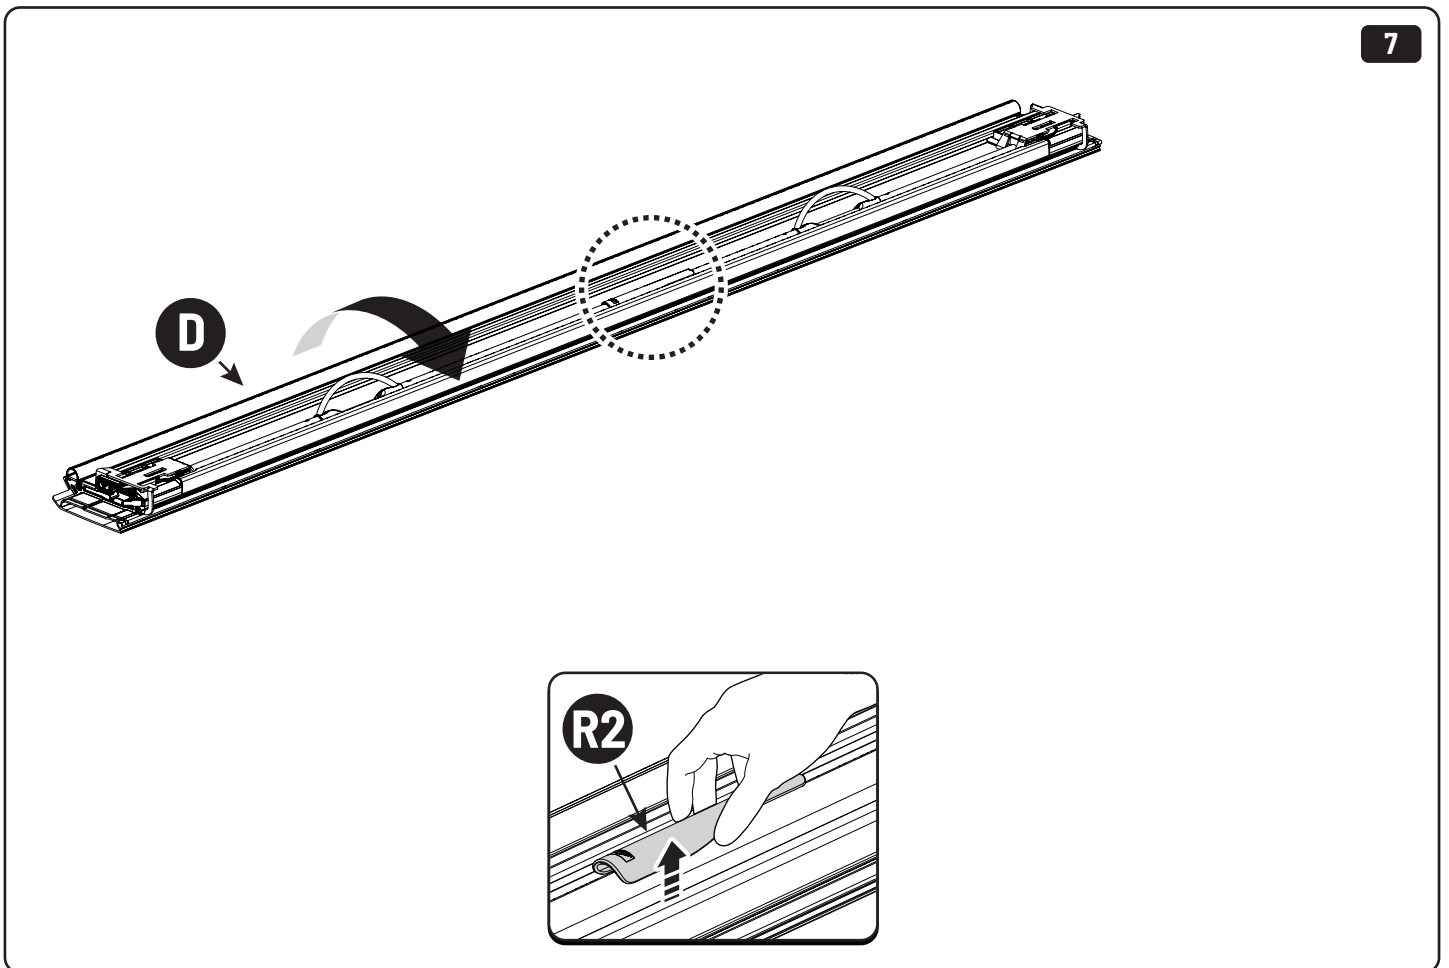
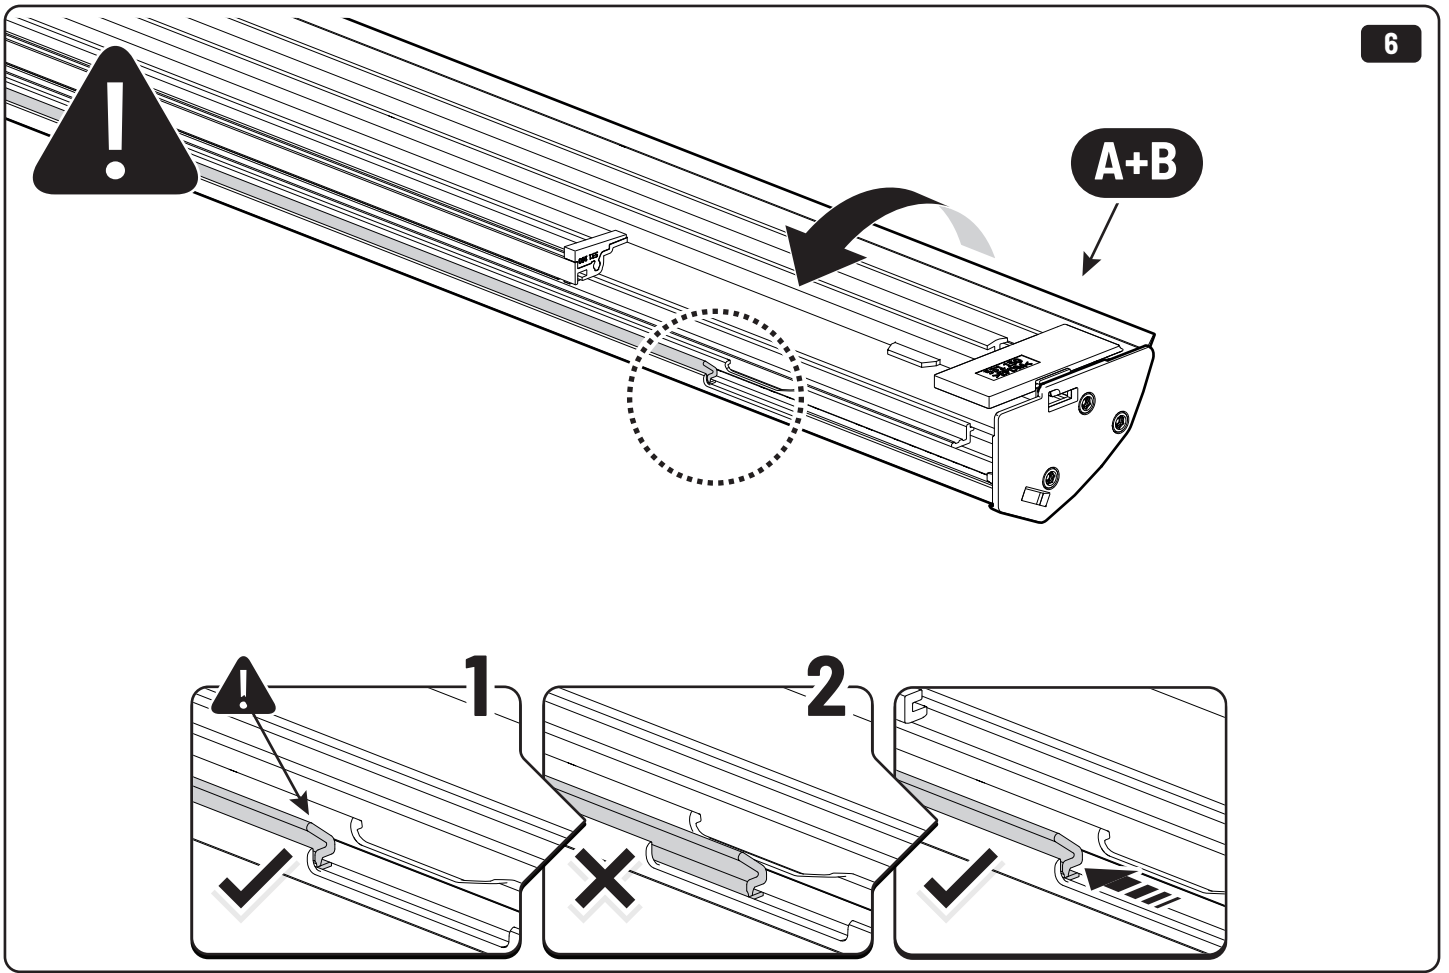


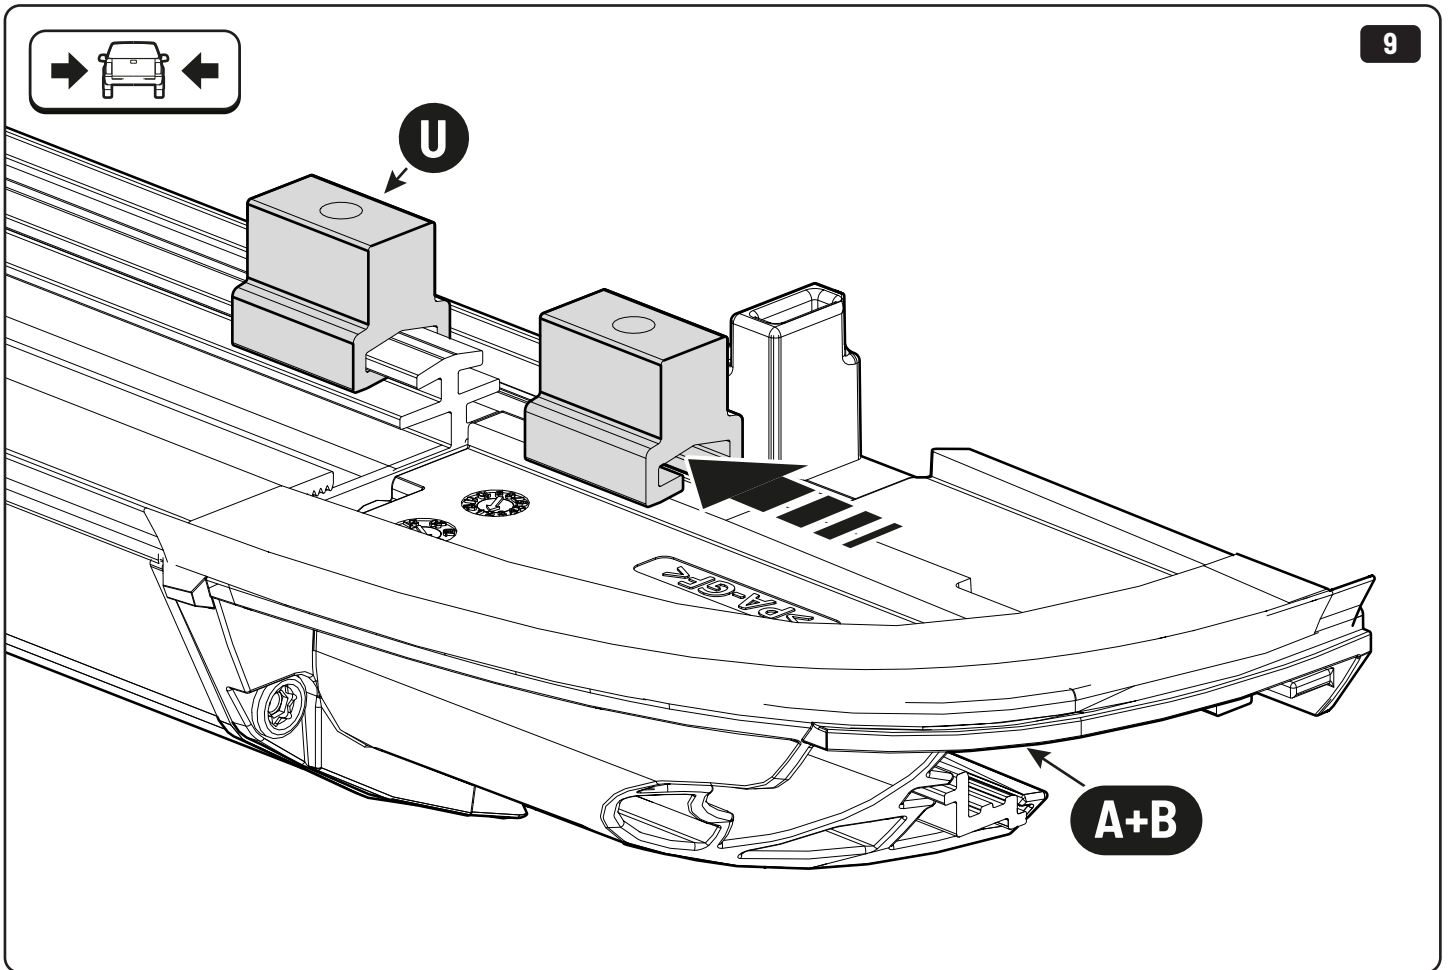
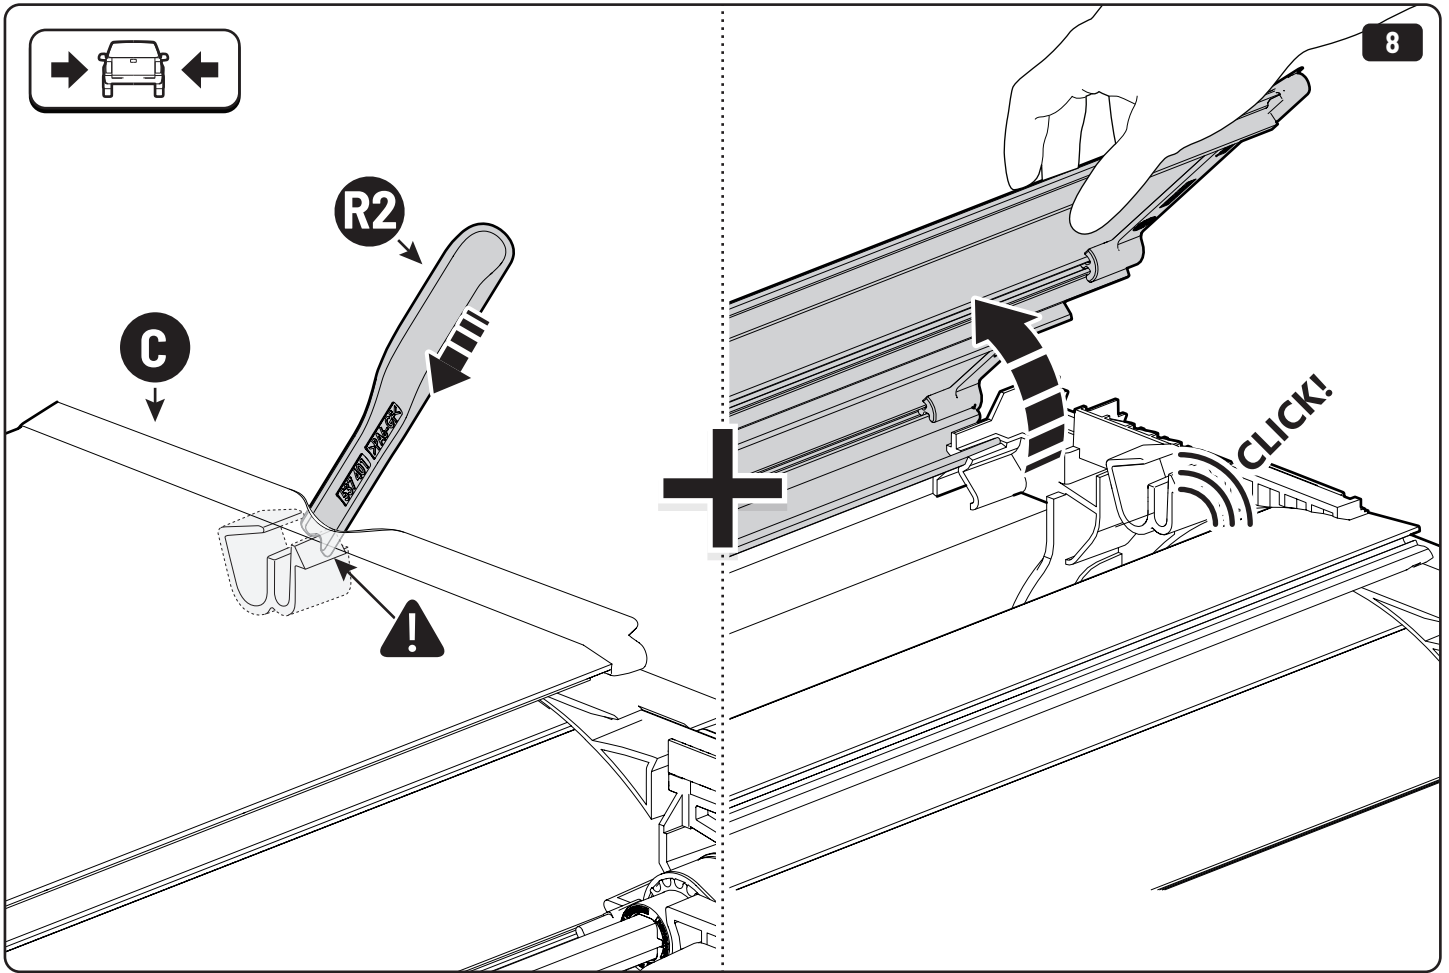


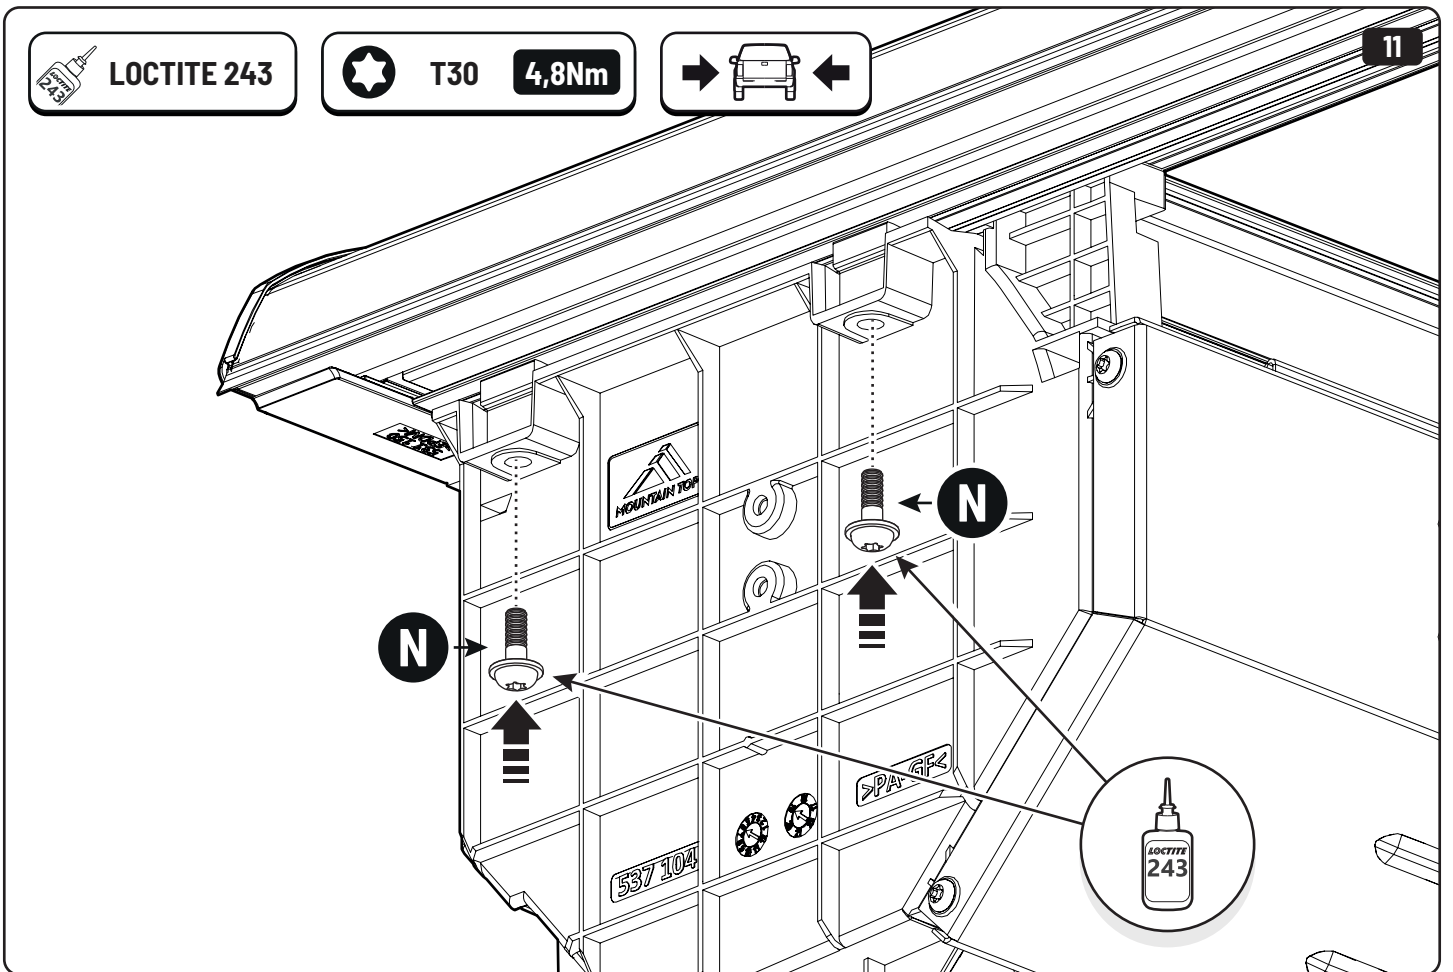
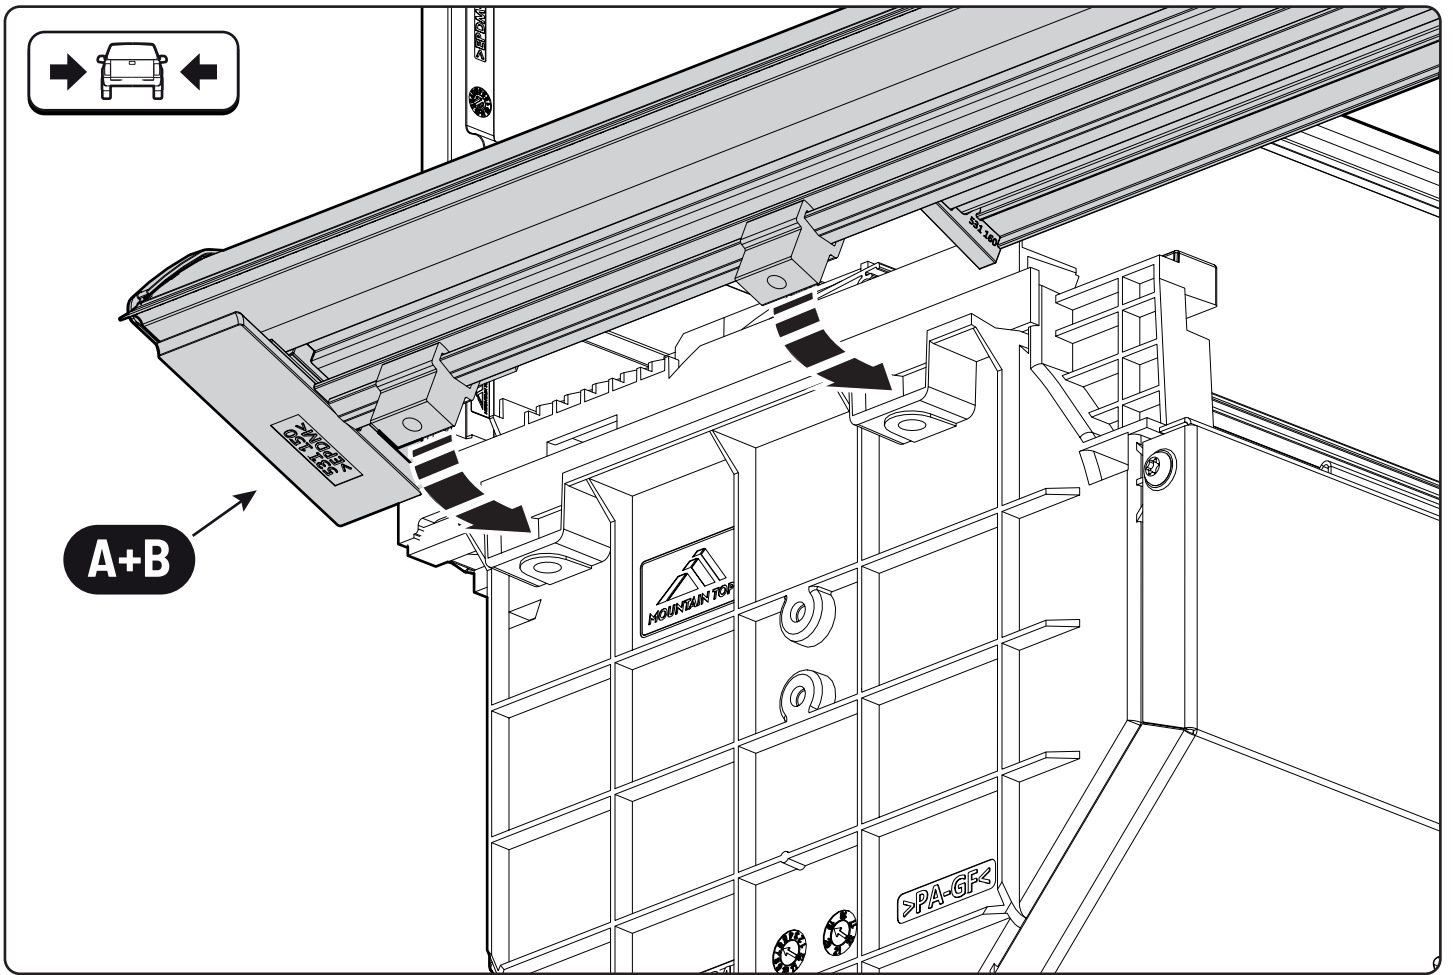


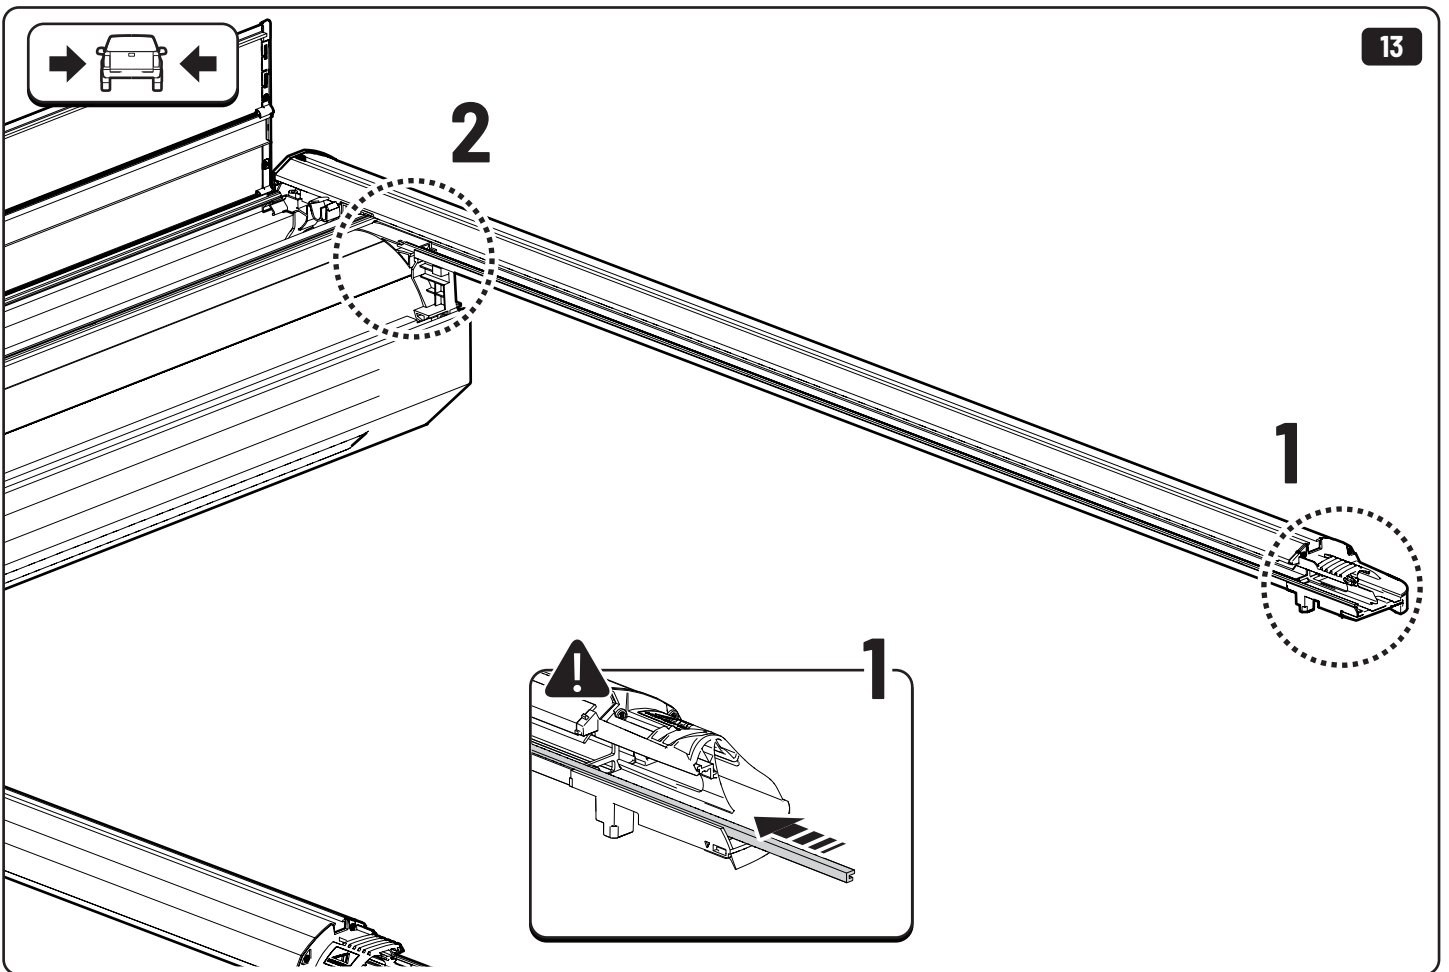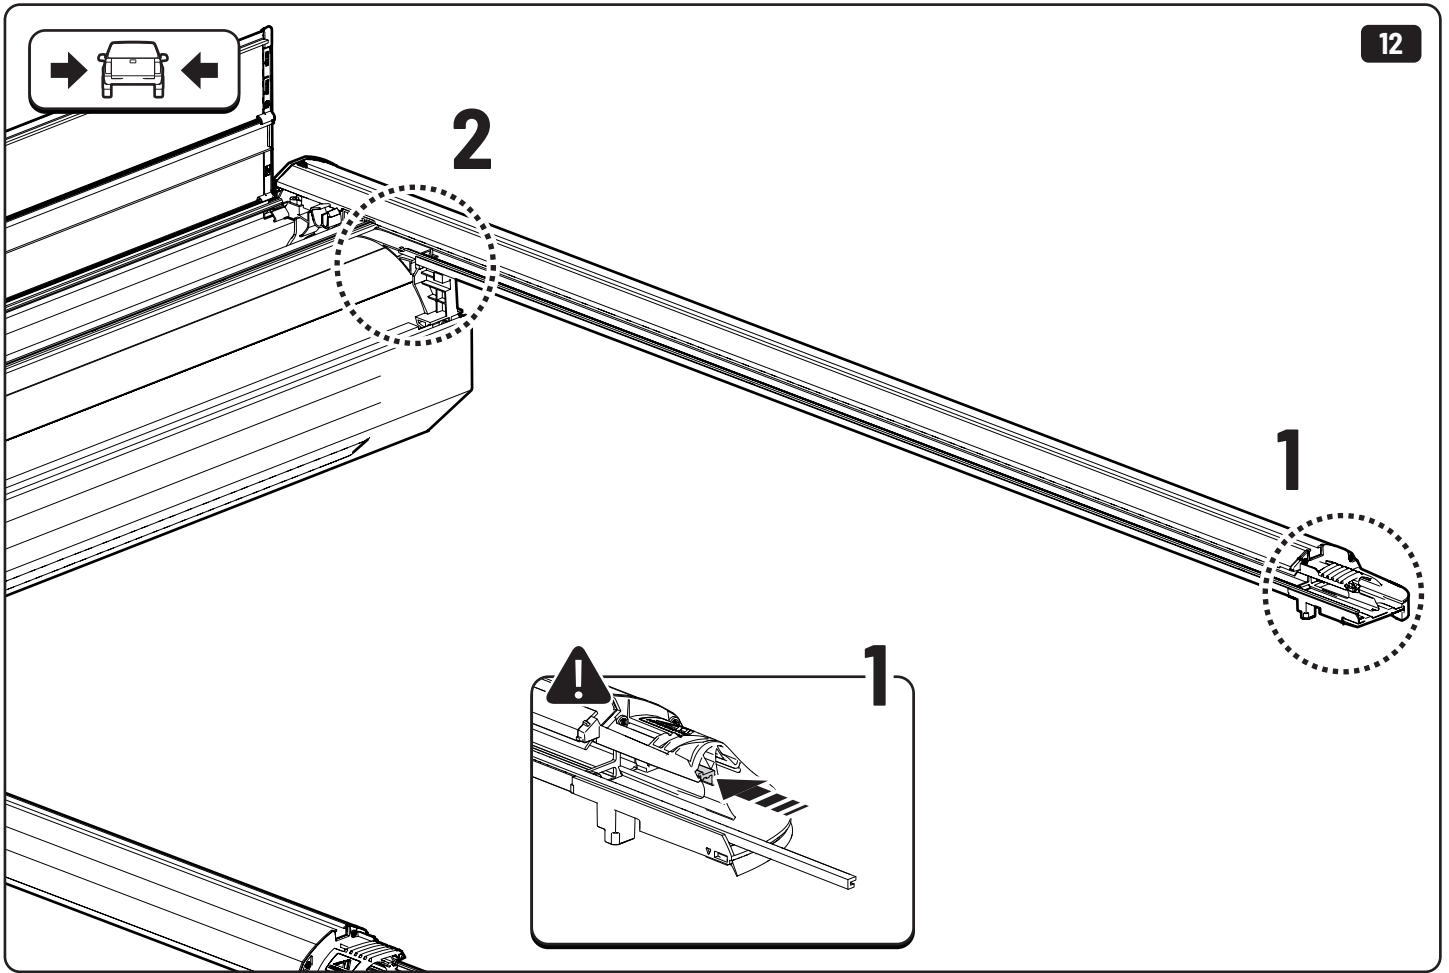

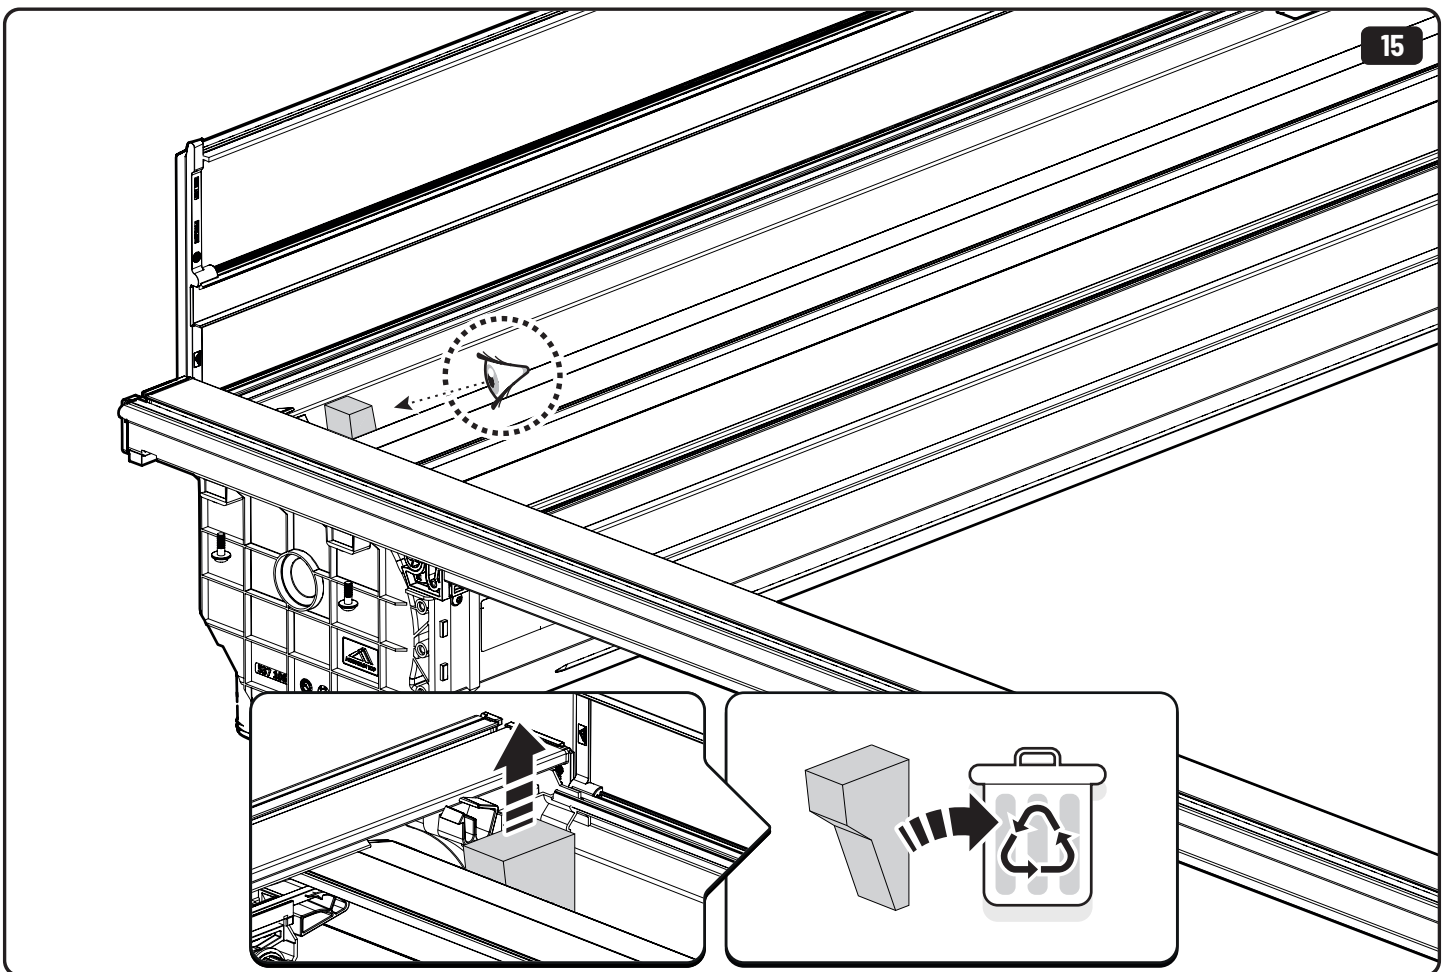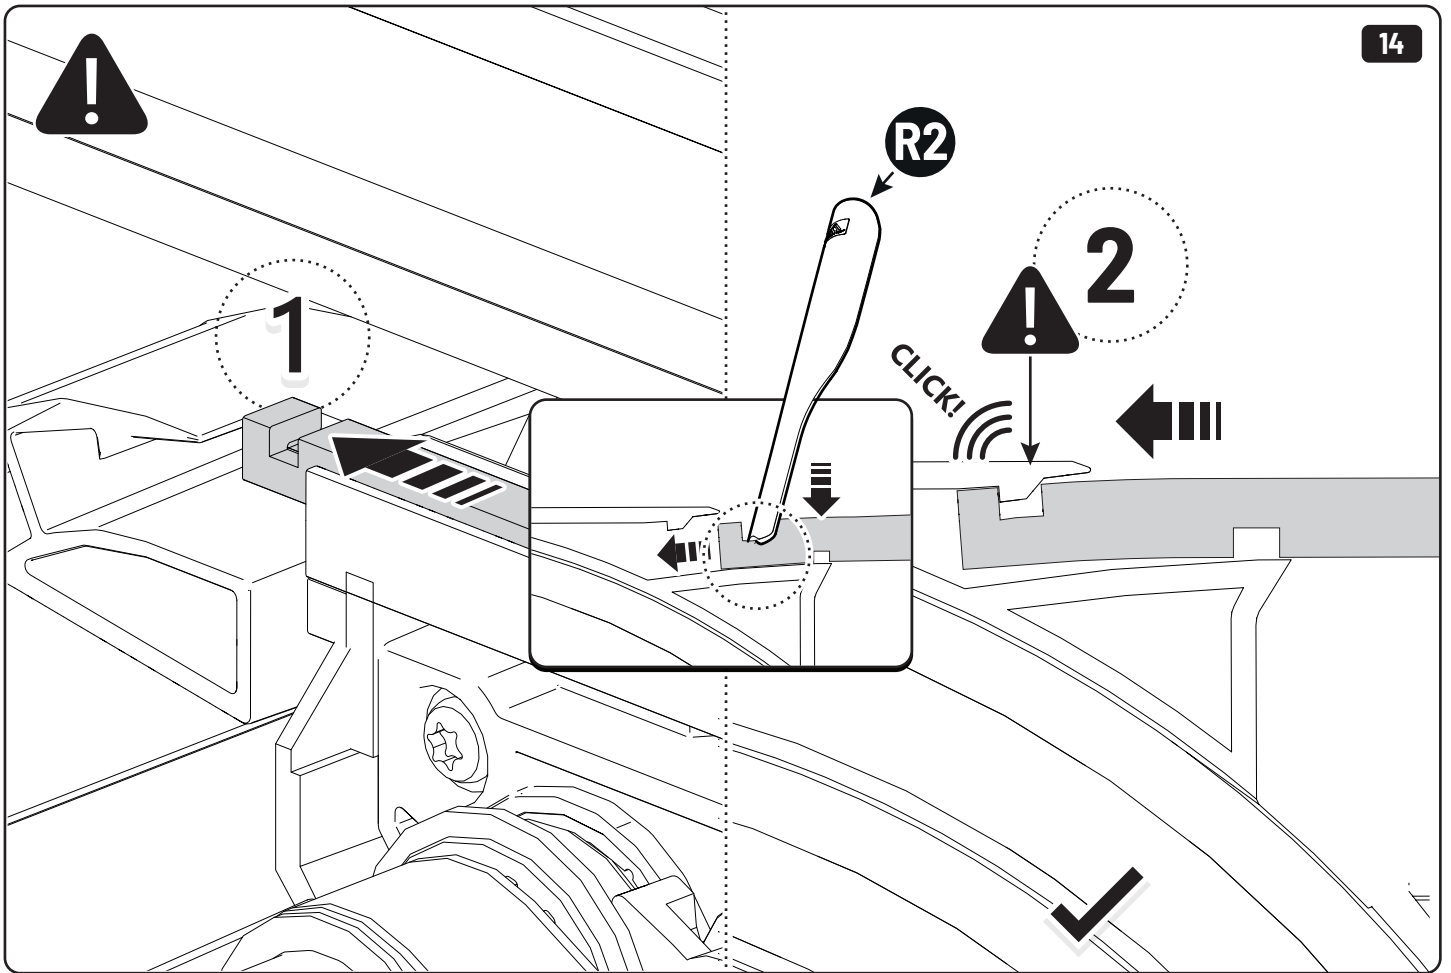


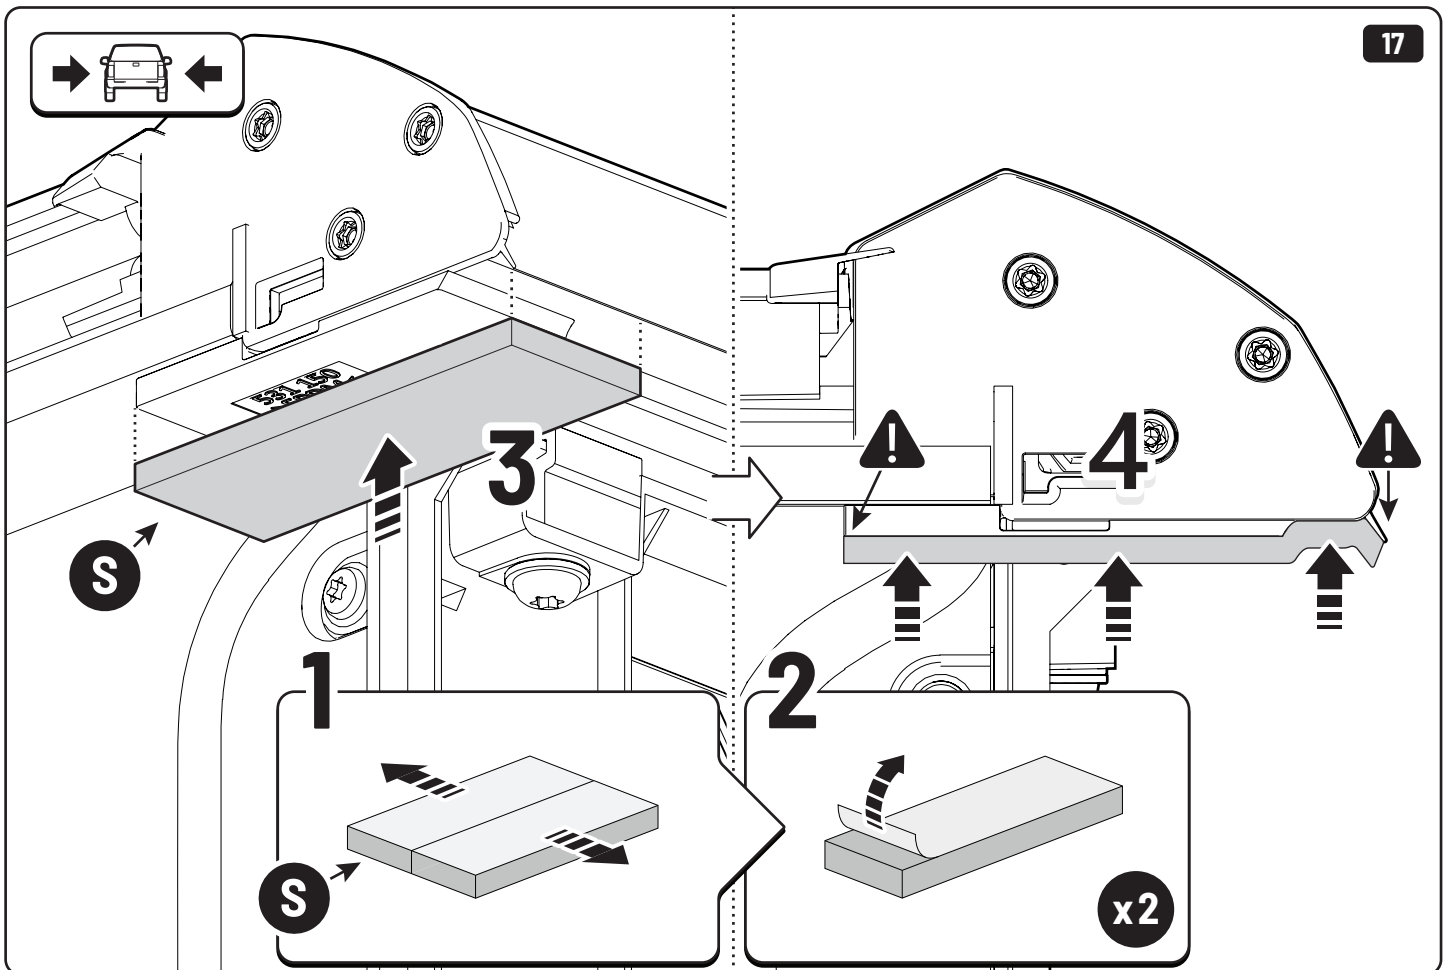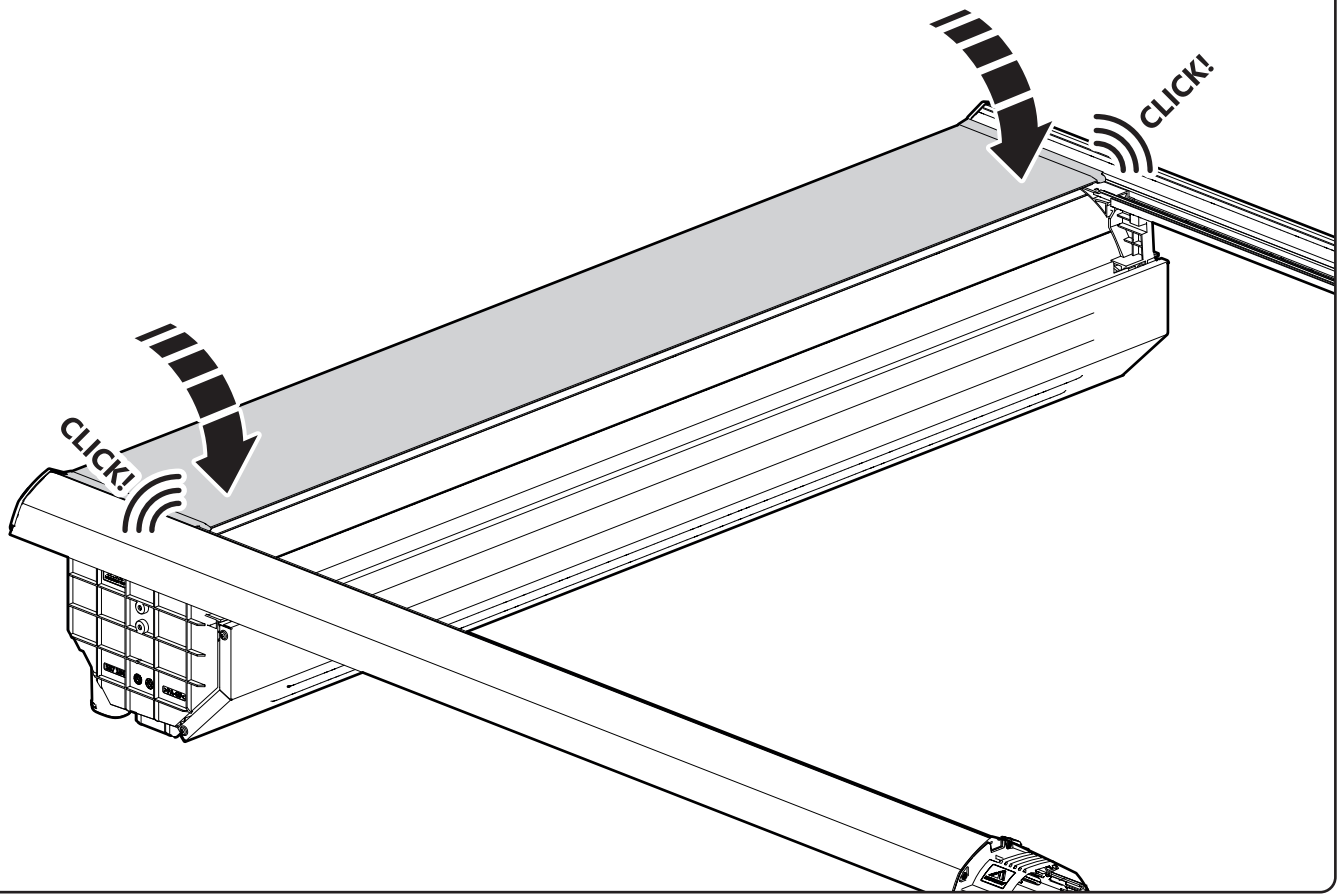

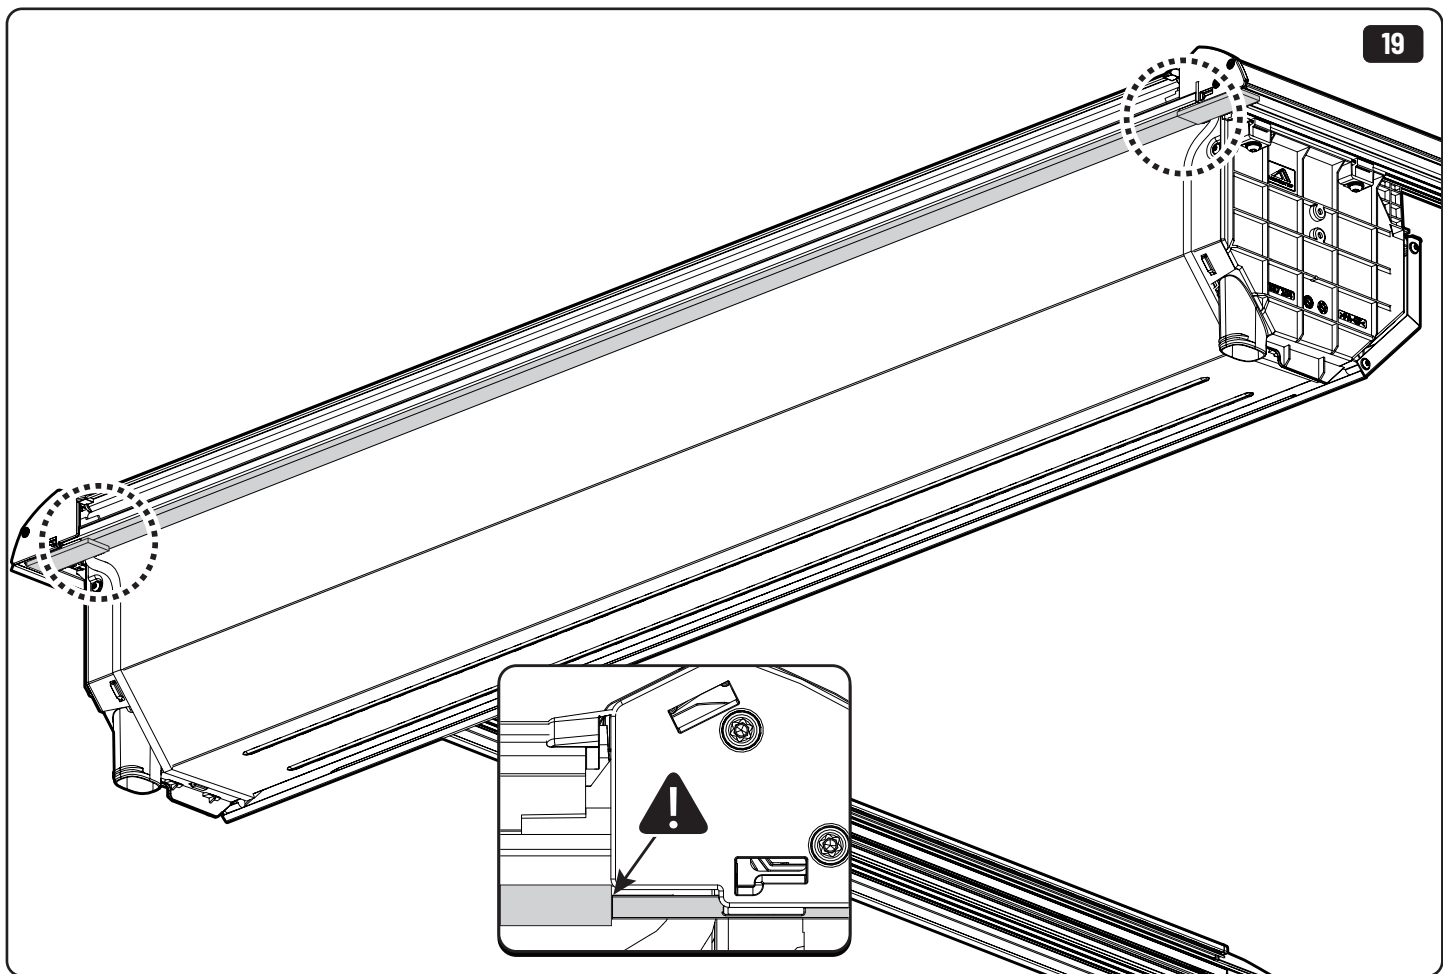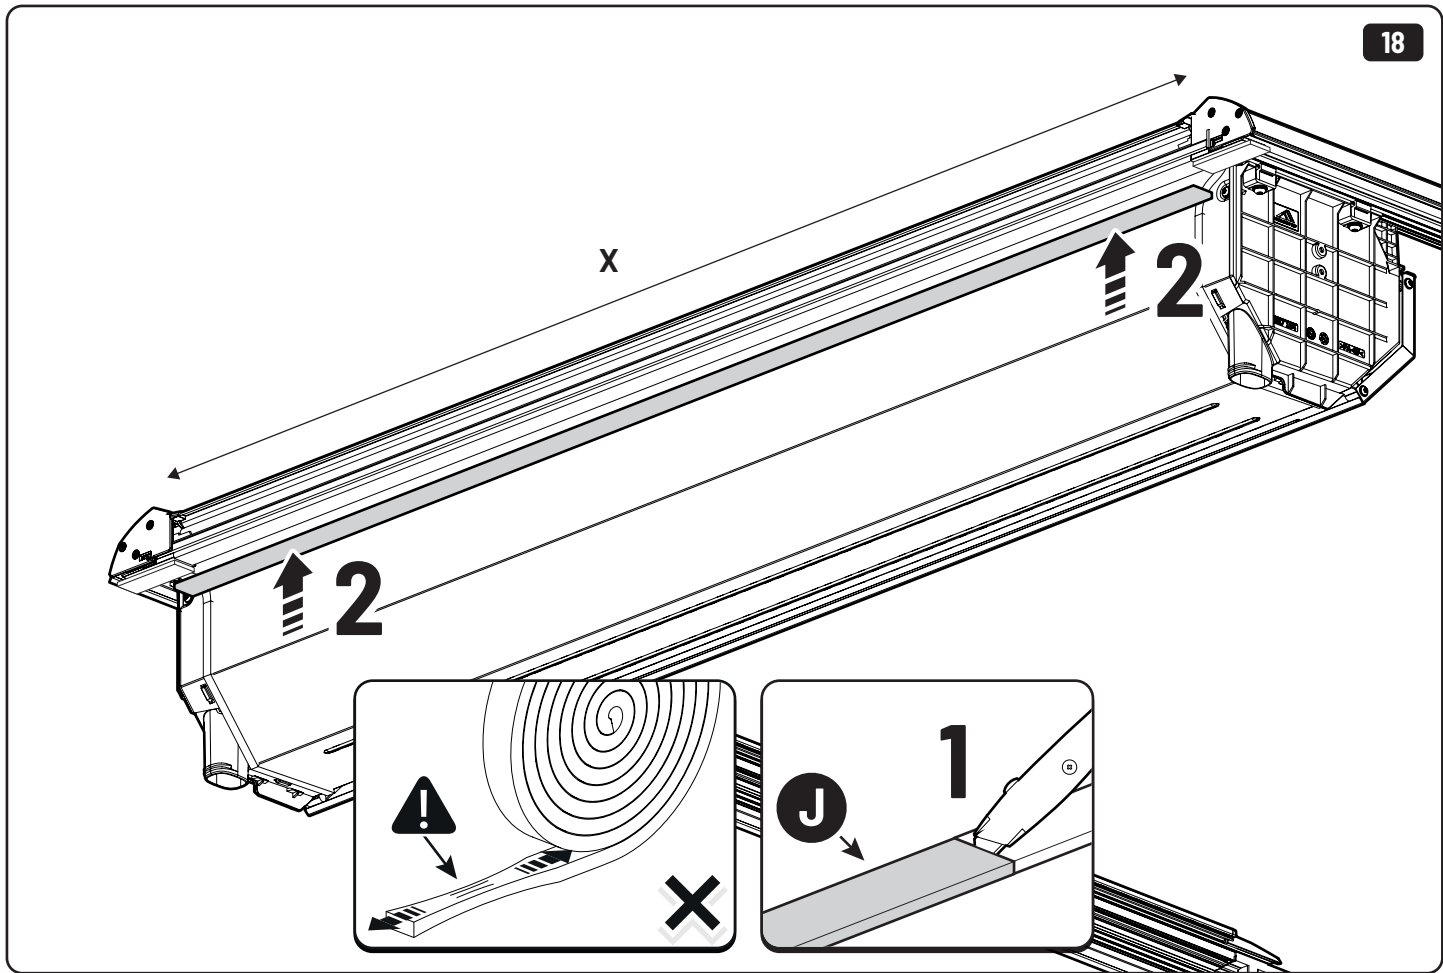

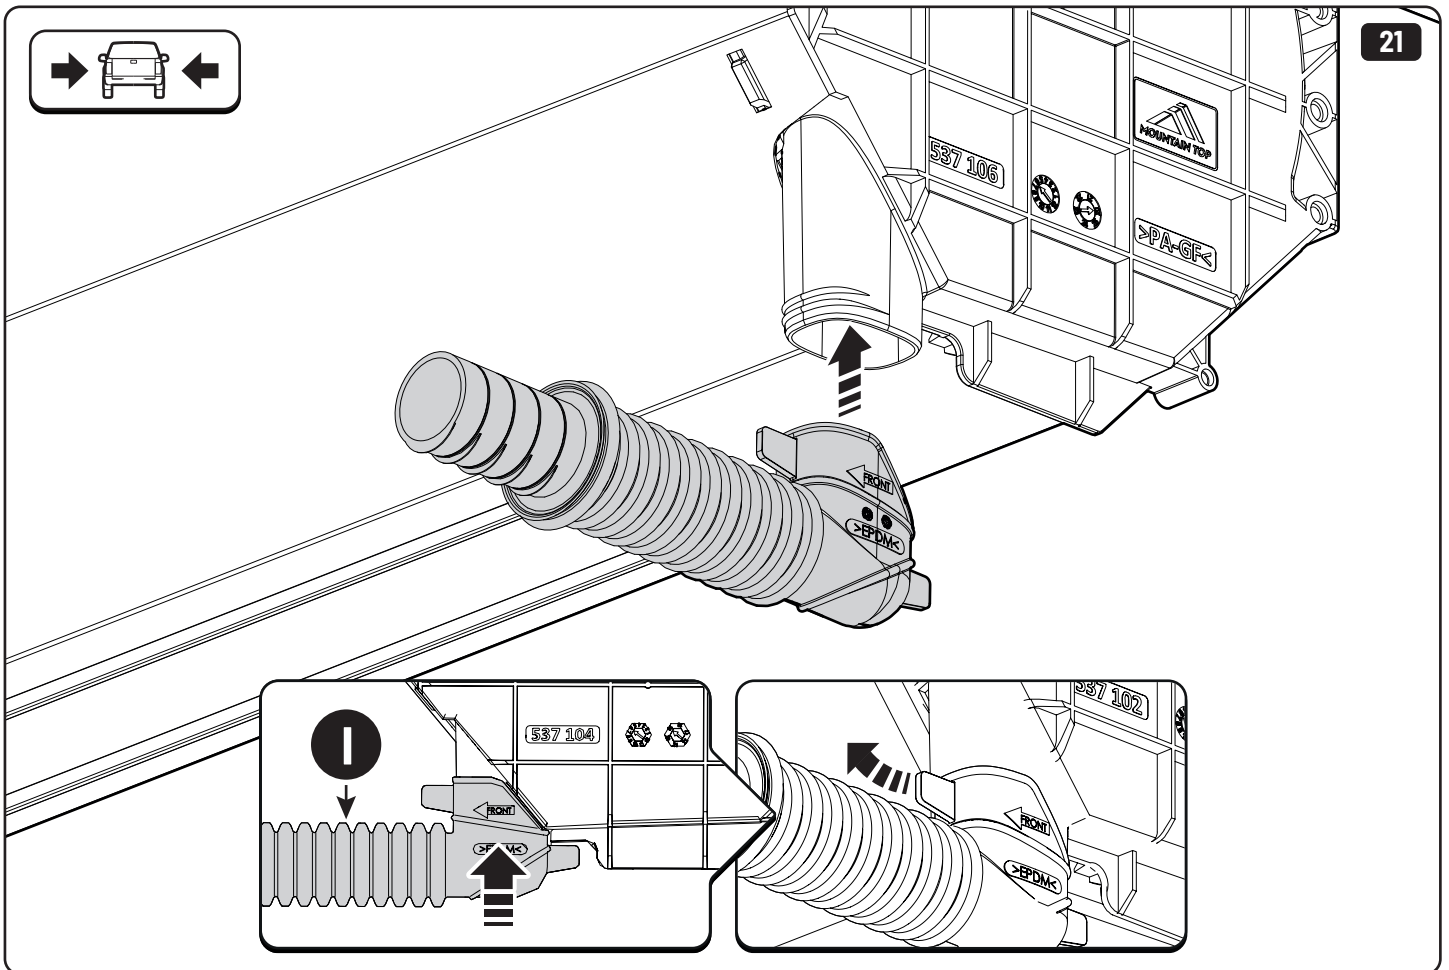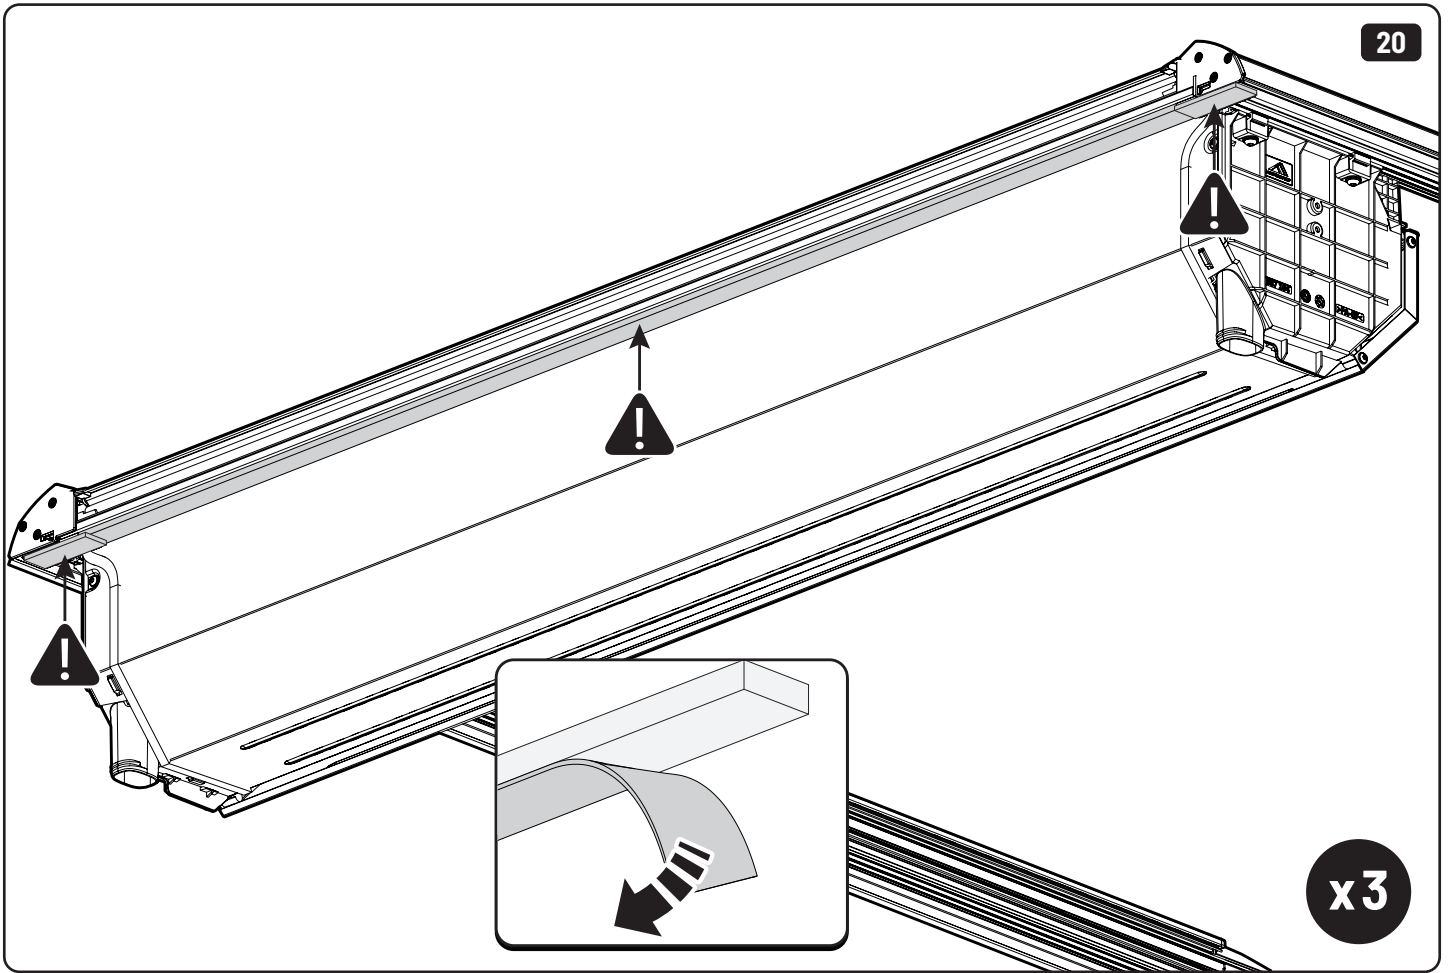


X: 660mm Y: 260mm

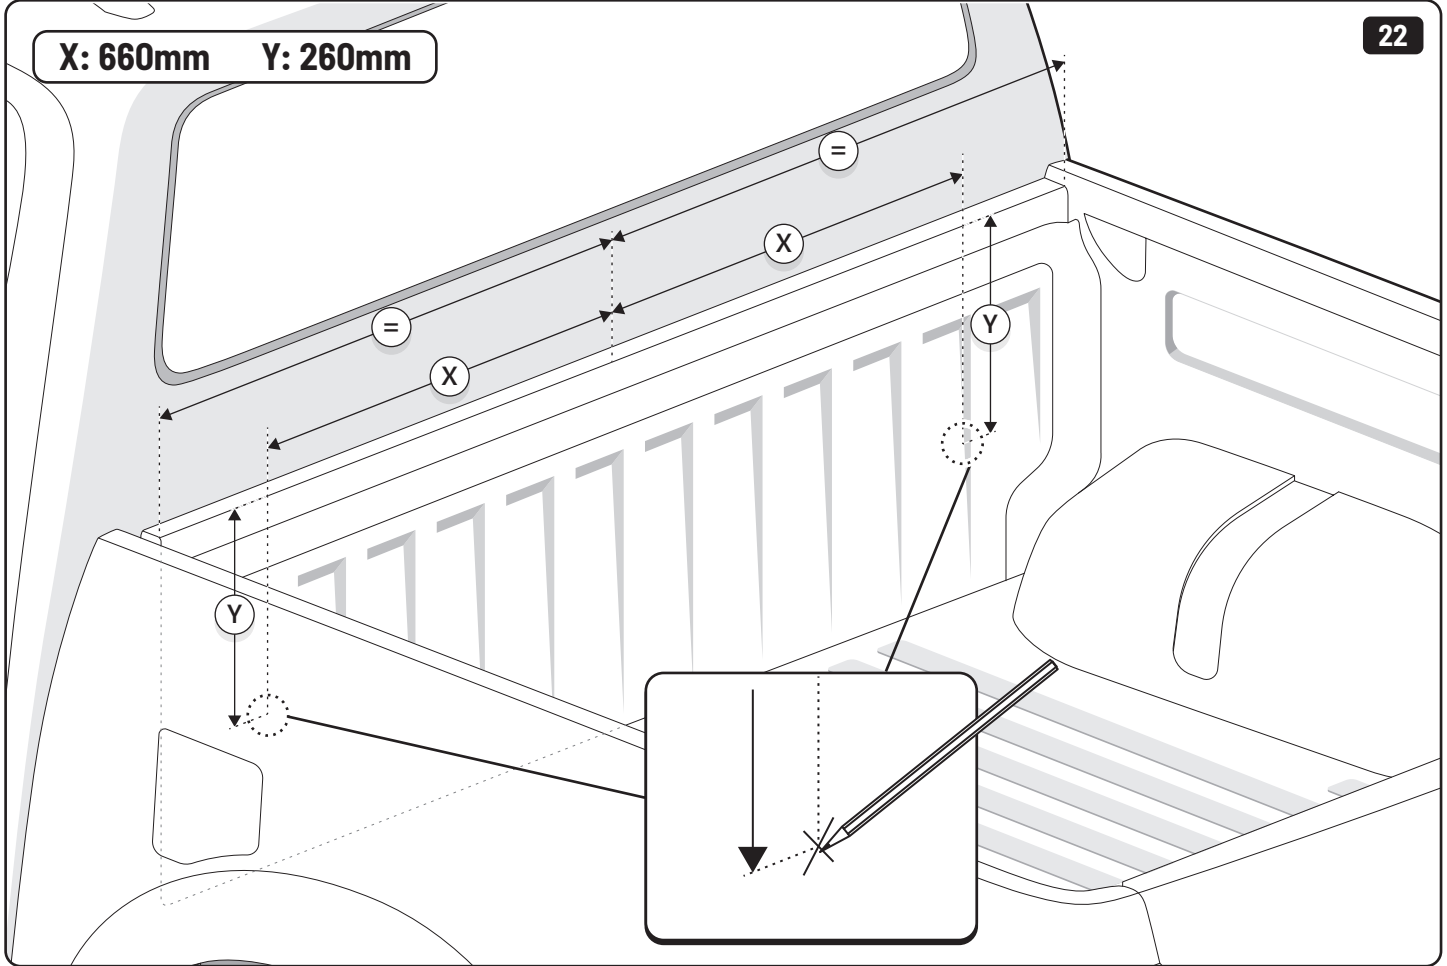

Ø 3,5mm



Ø 32mm



! Rust Protection

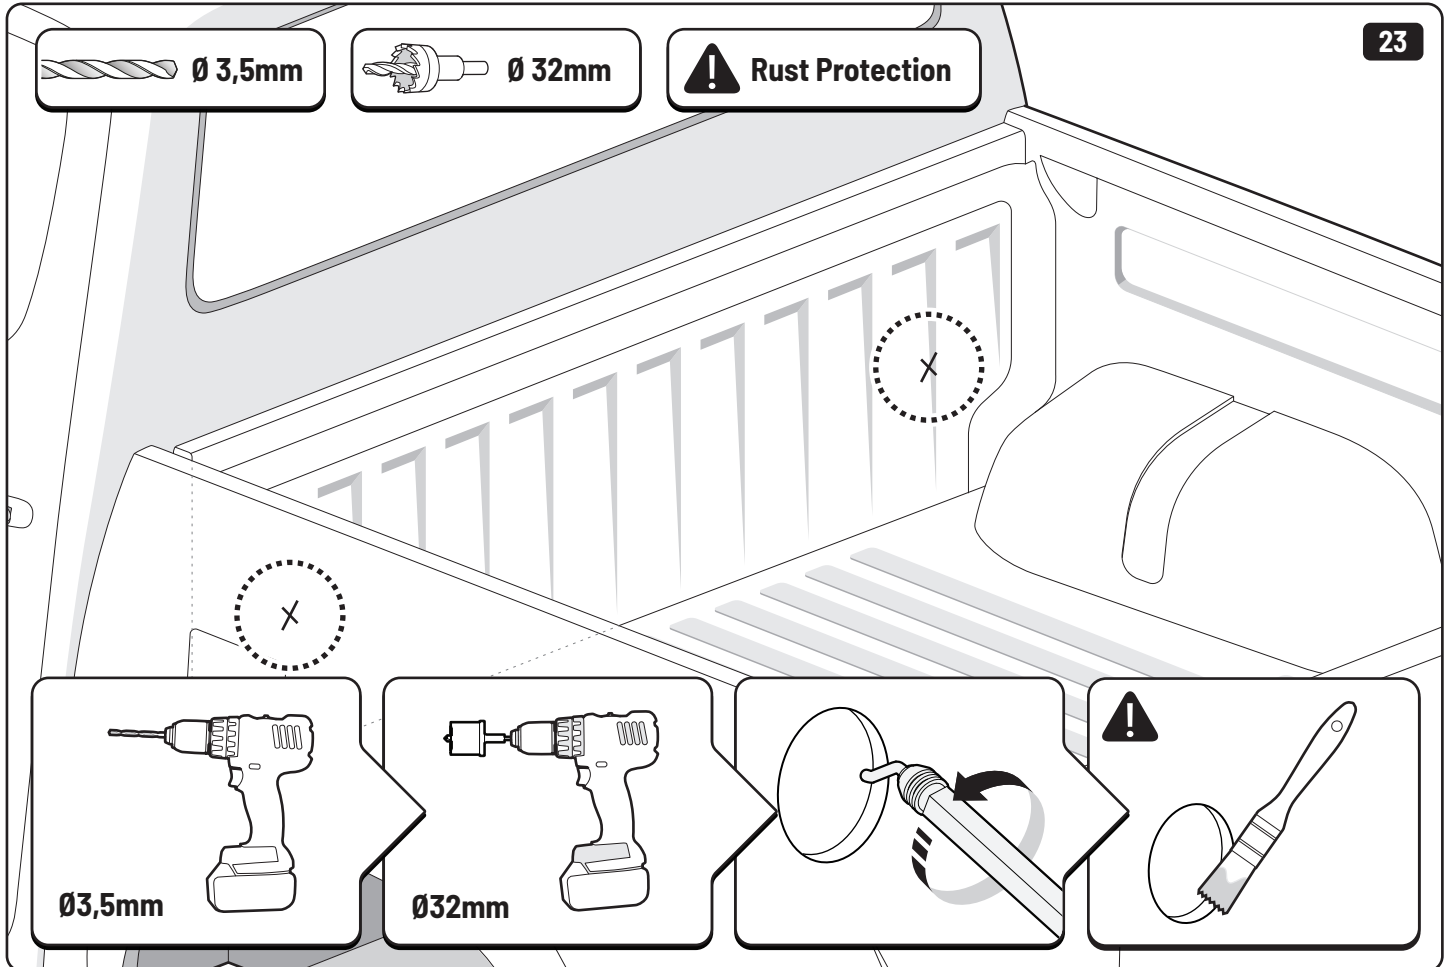

Ø3,5mm


Ø32mm

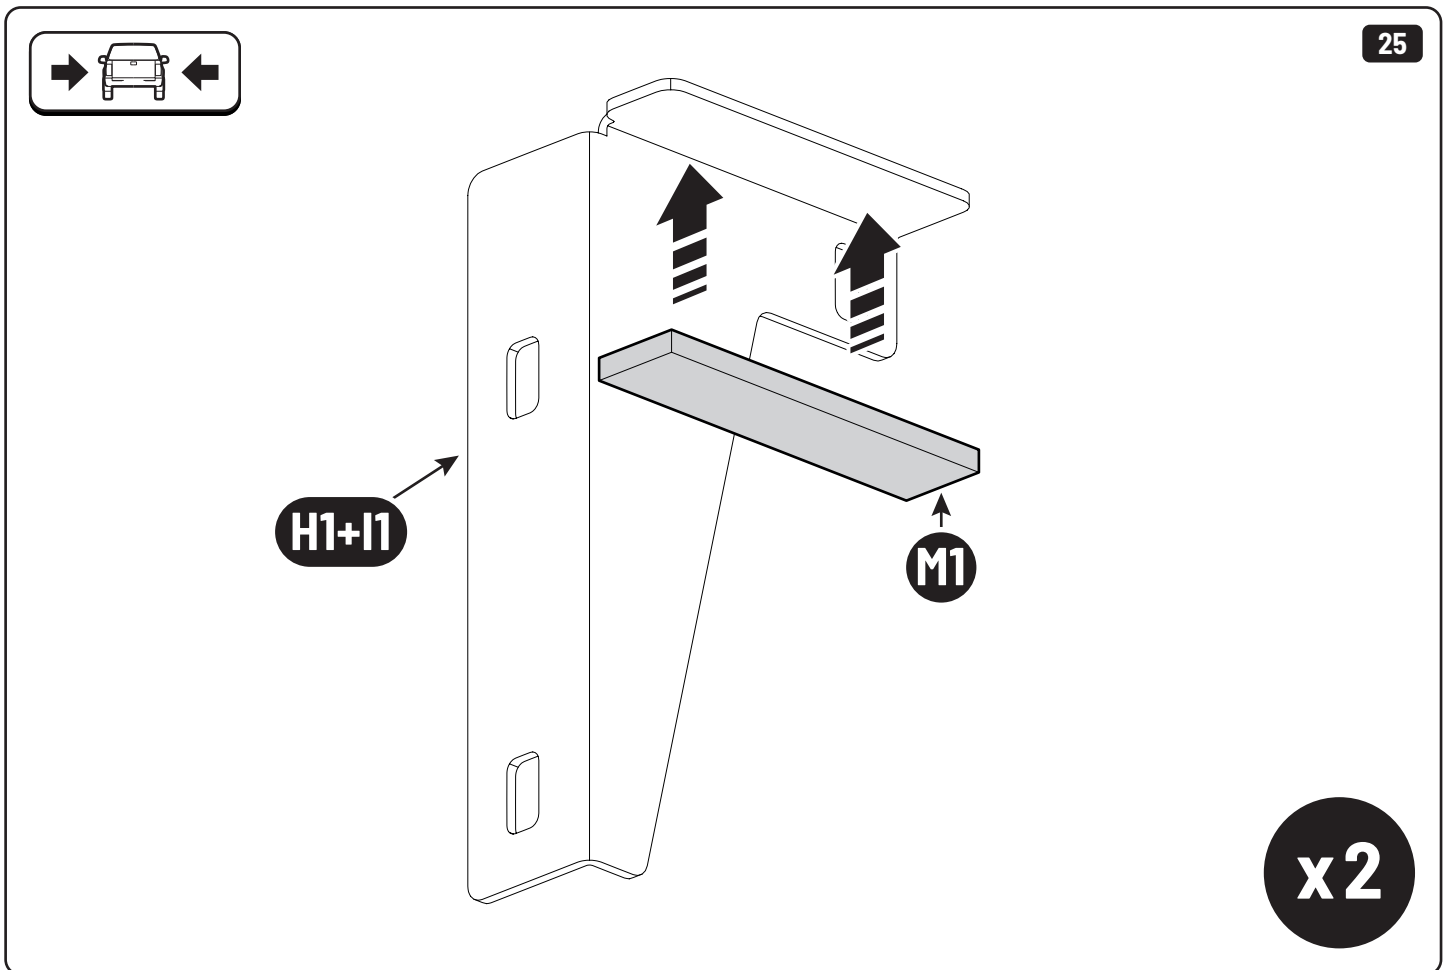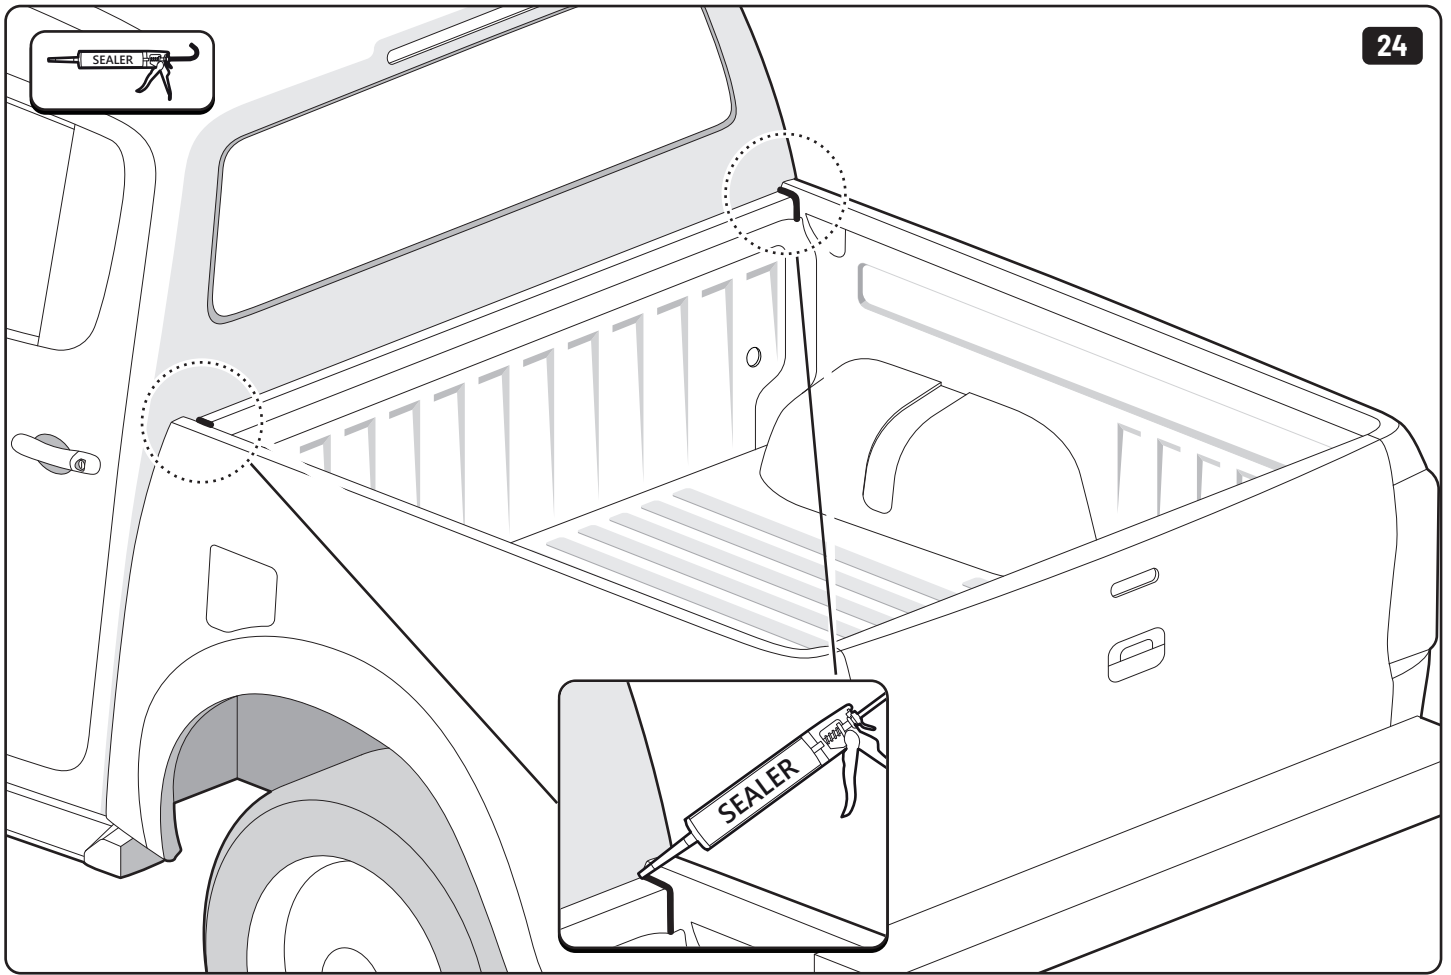


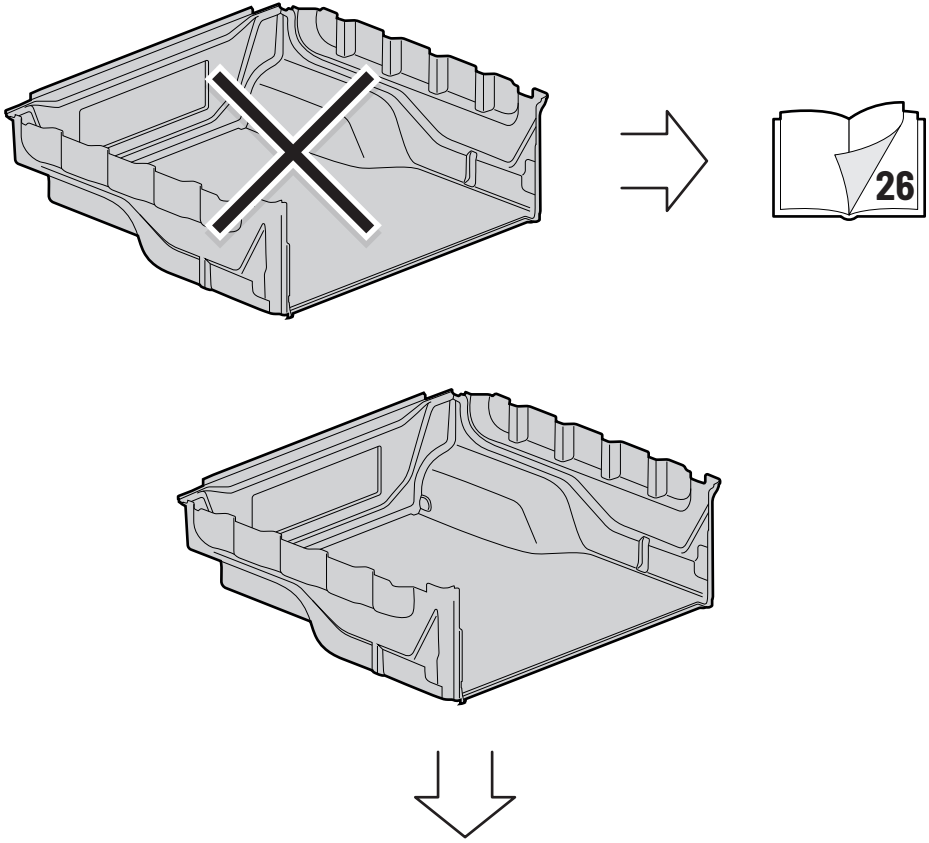

X: 660mm Y: 260mm



! ONLY WITH LINER

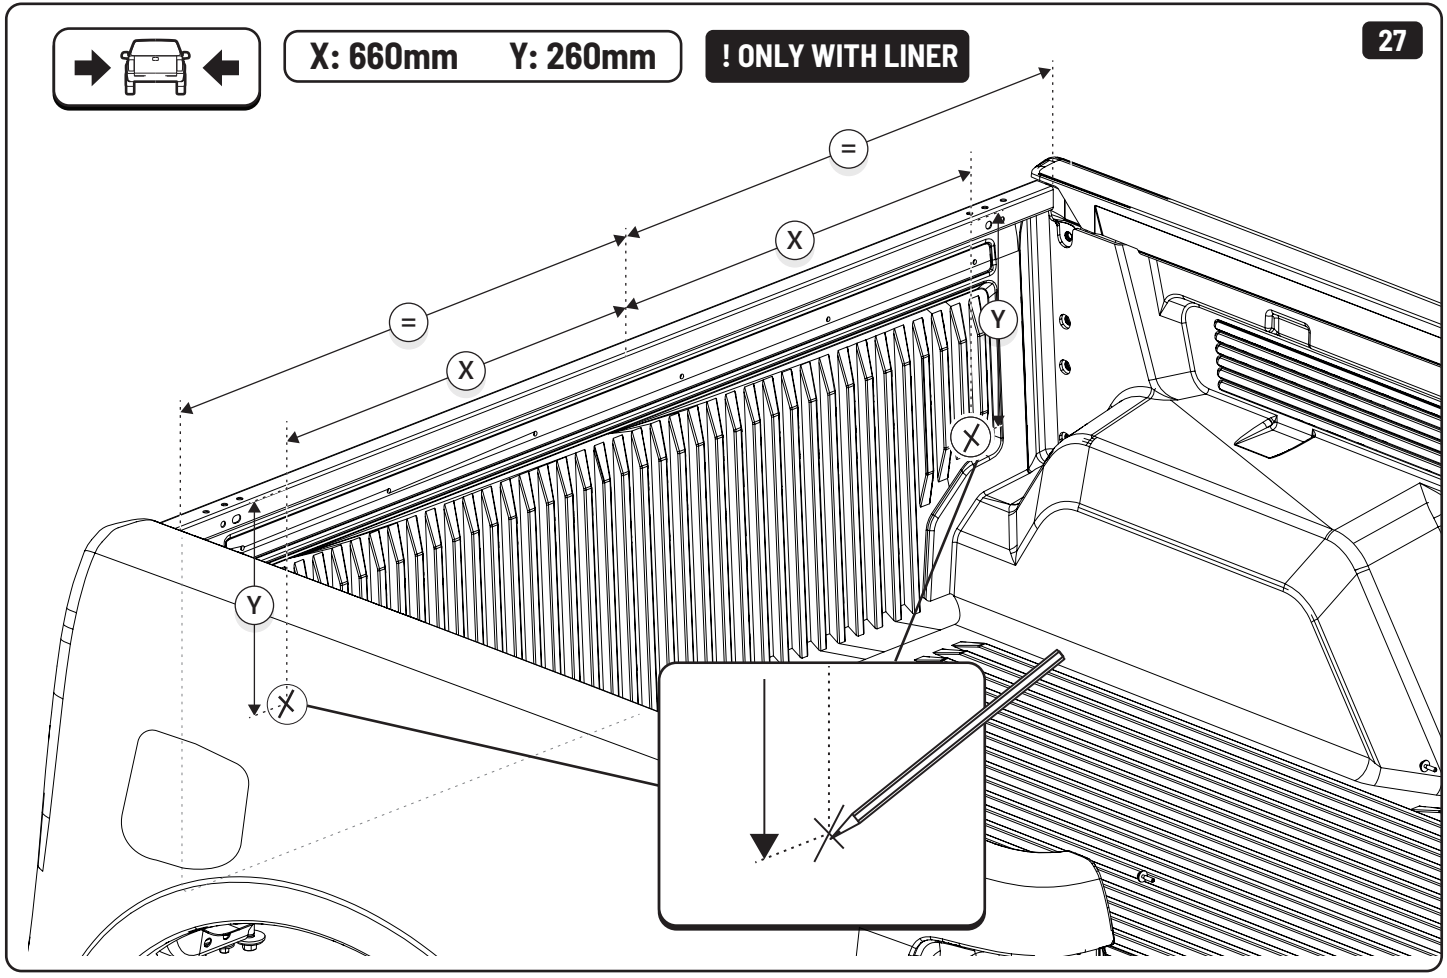




! ONLY WITH LINER

28

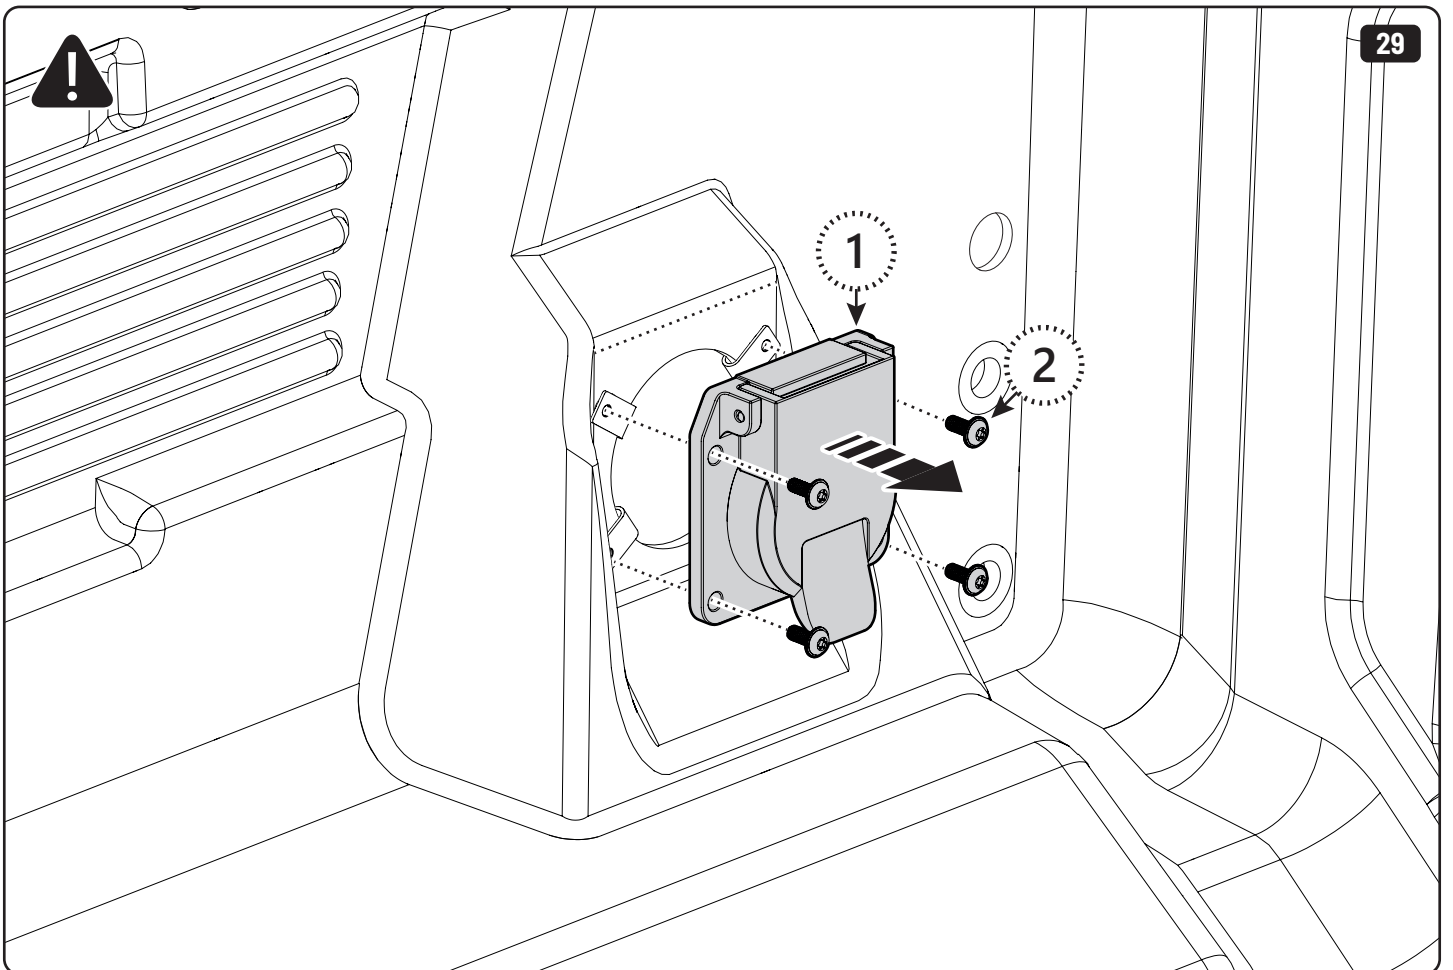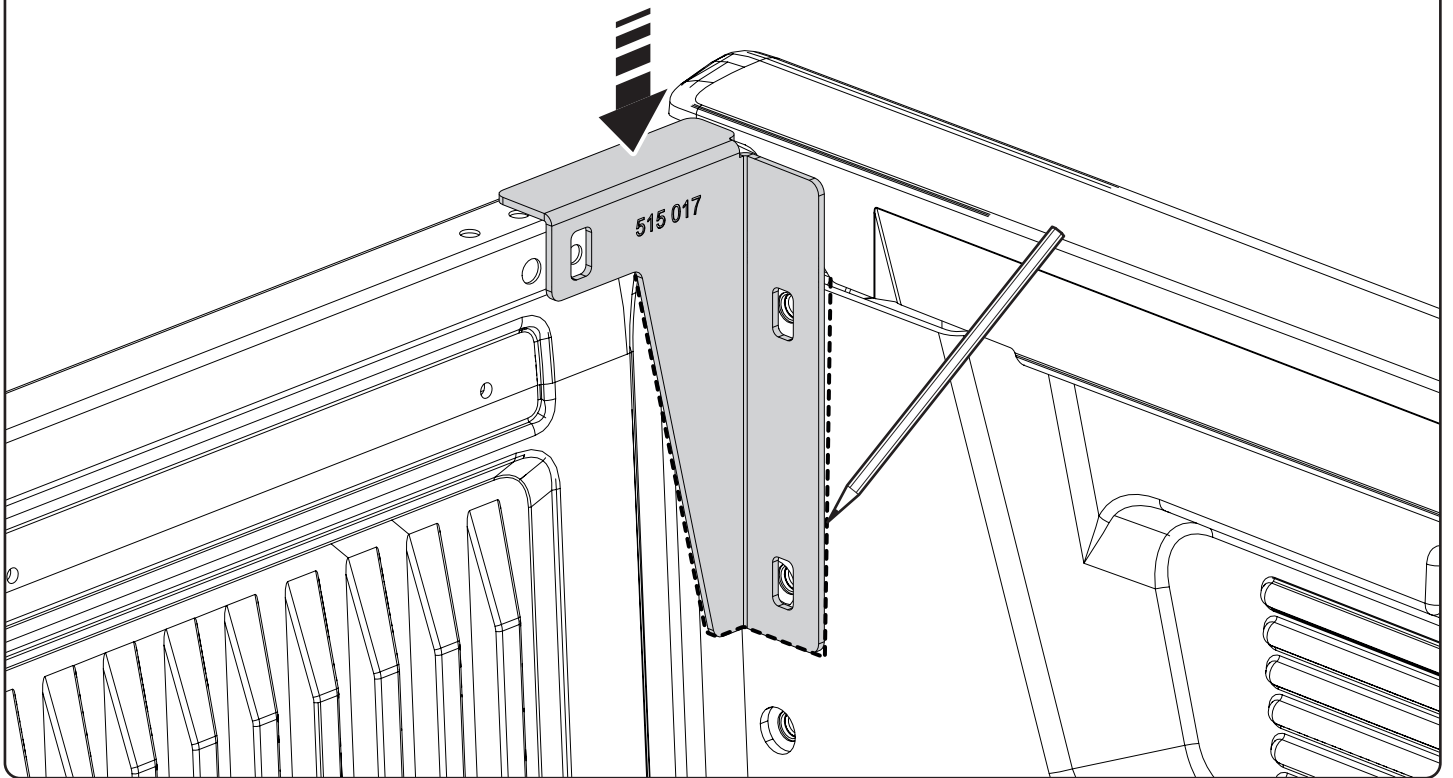


29







! ONLY WITH LINER

30



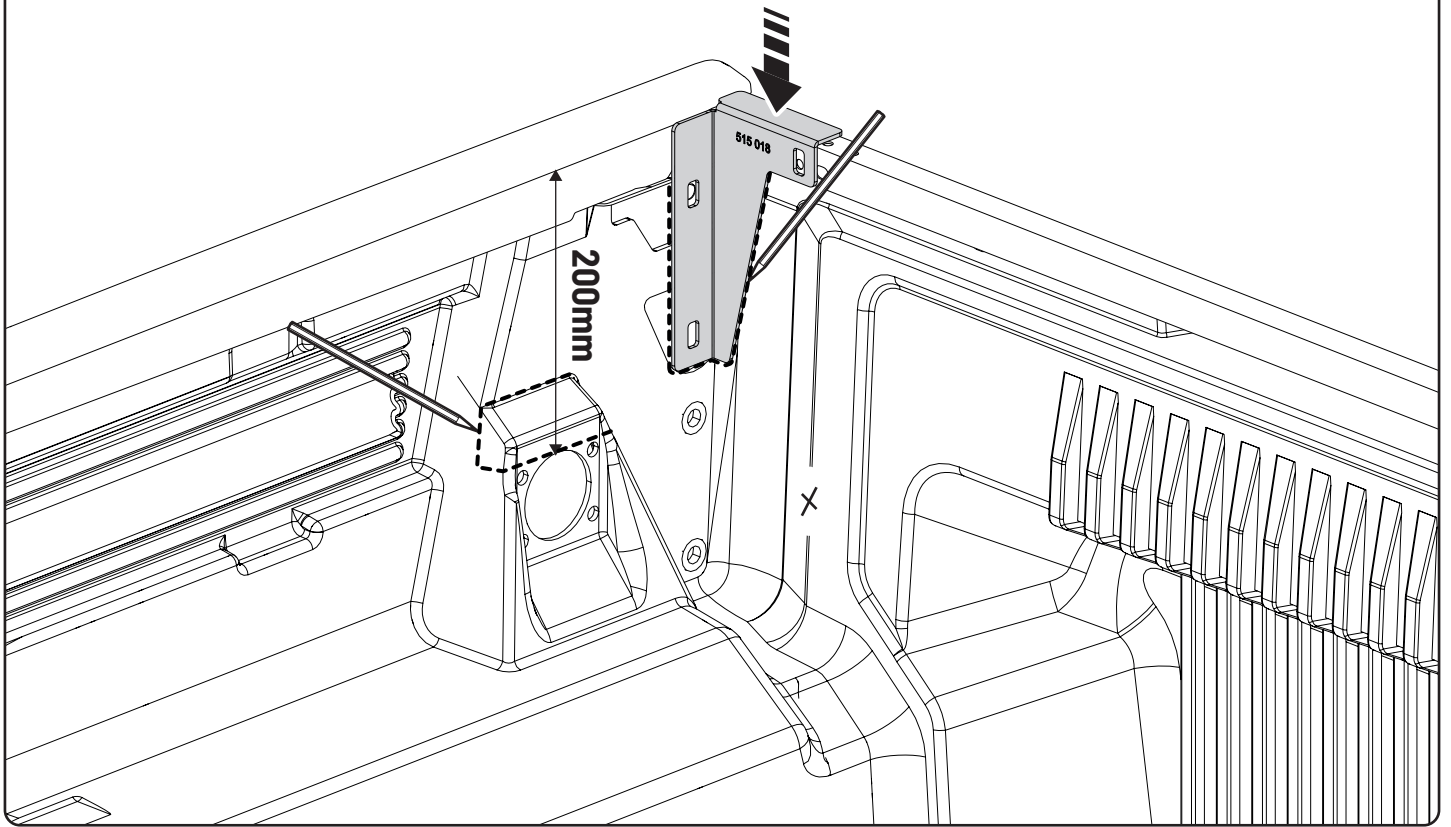


31

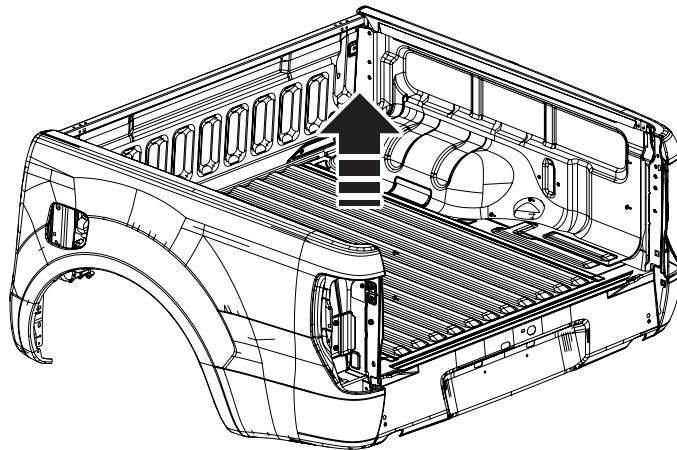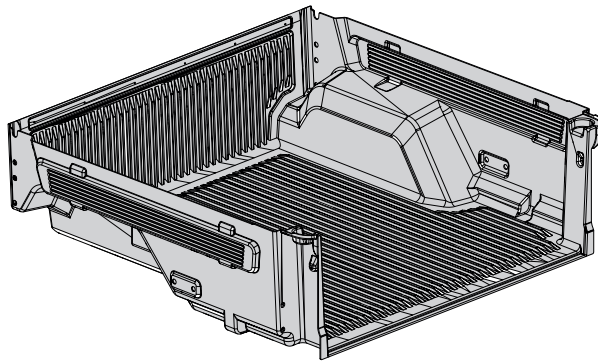






! ONLY WITH LINER

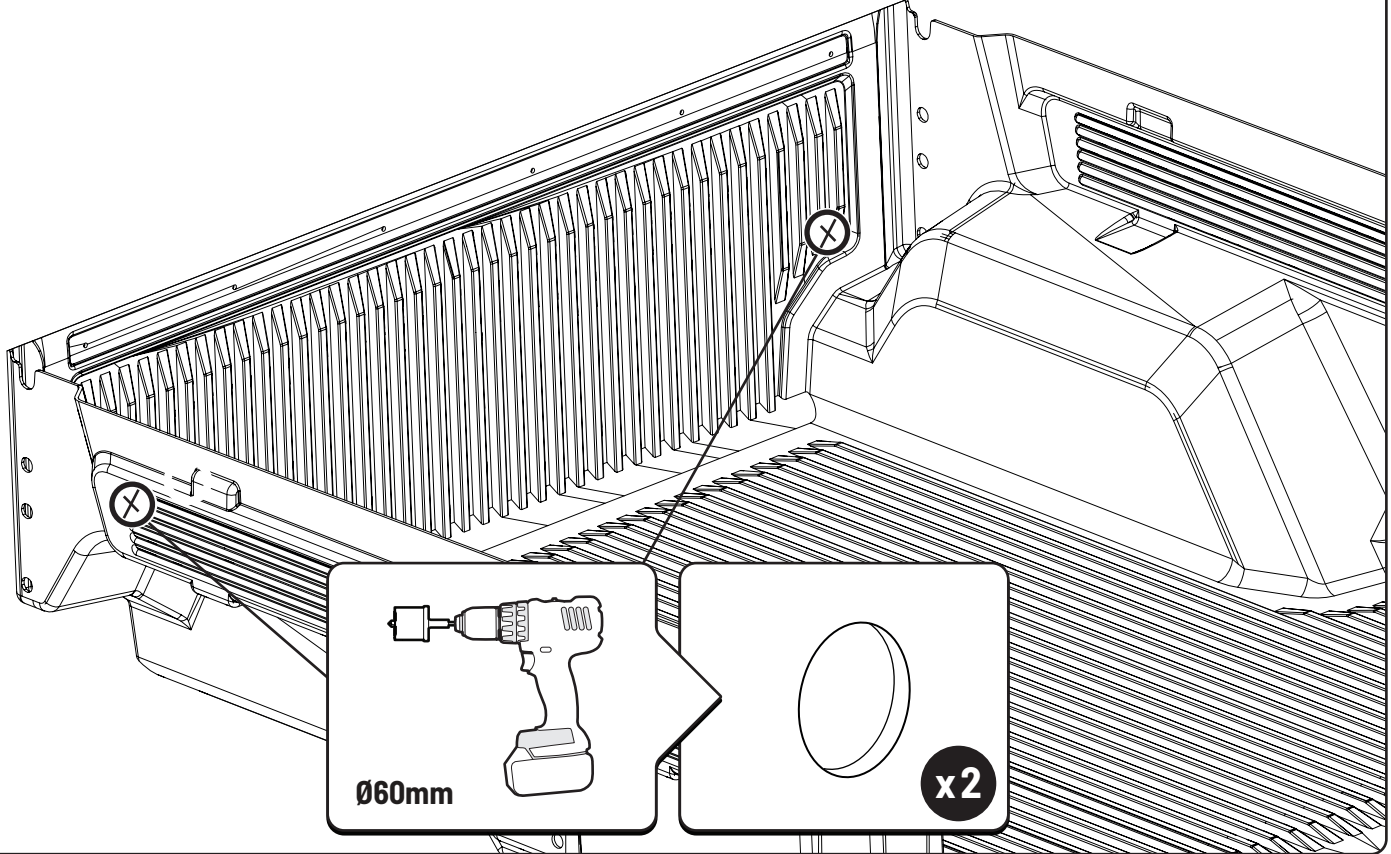


! ONLY WITH LINER

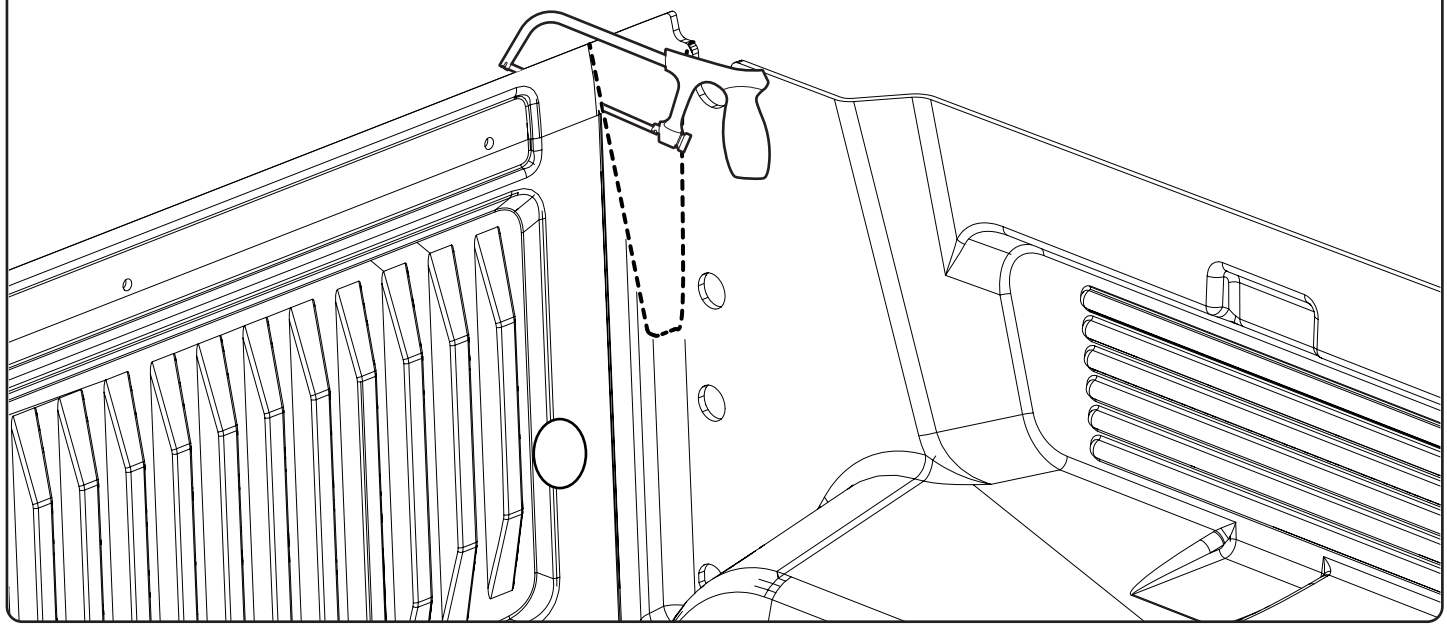







! ONLY WITH LINER

34


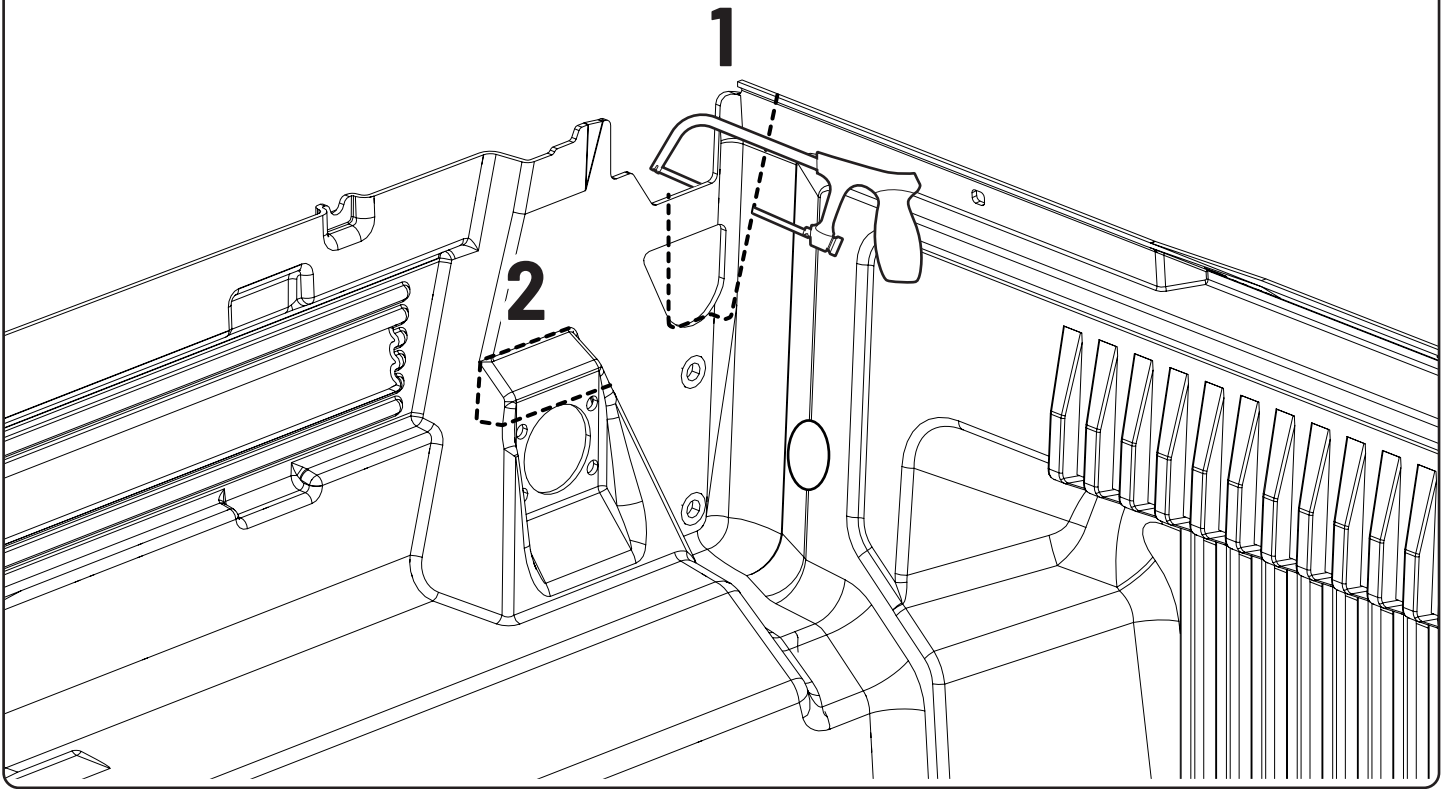




35

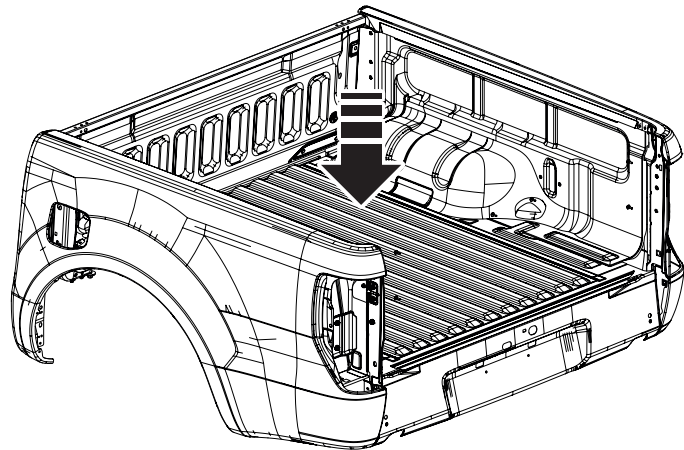
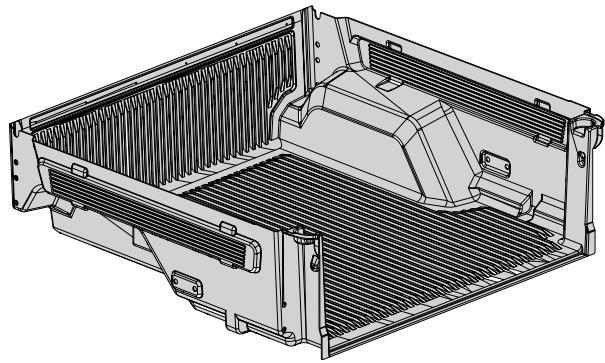


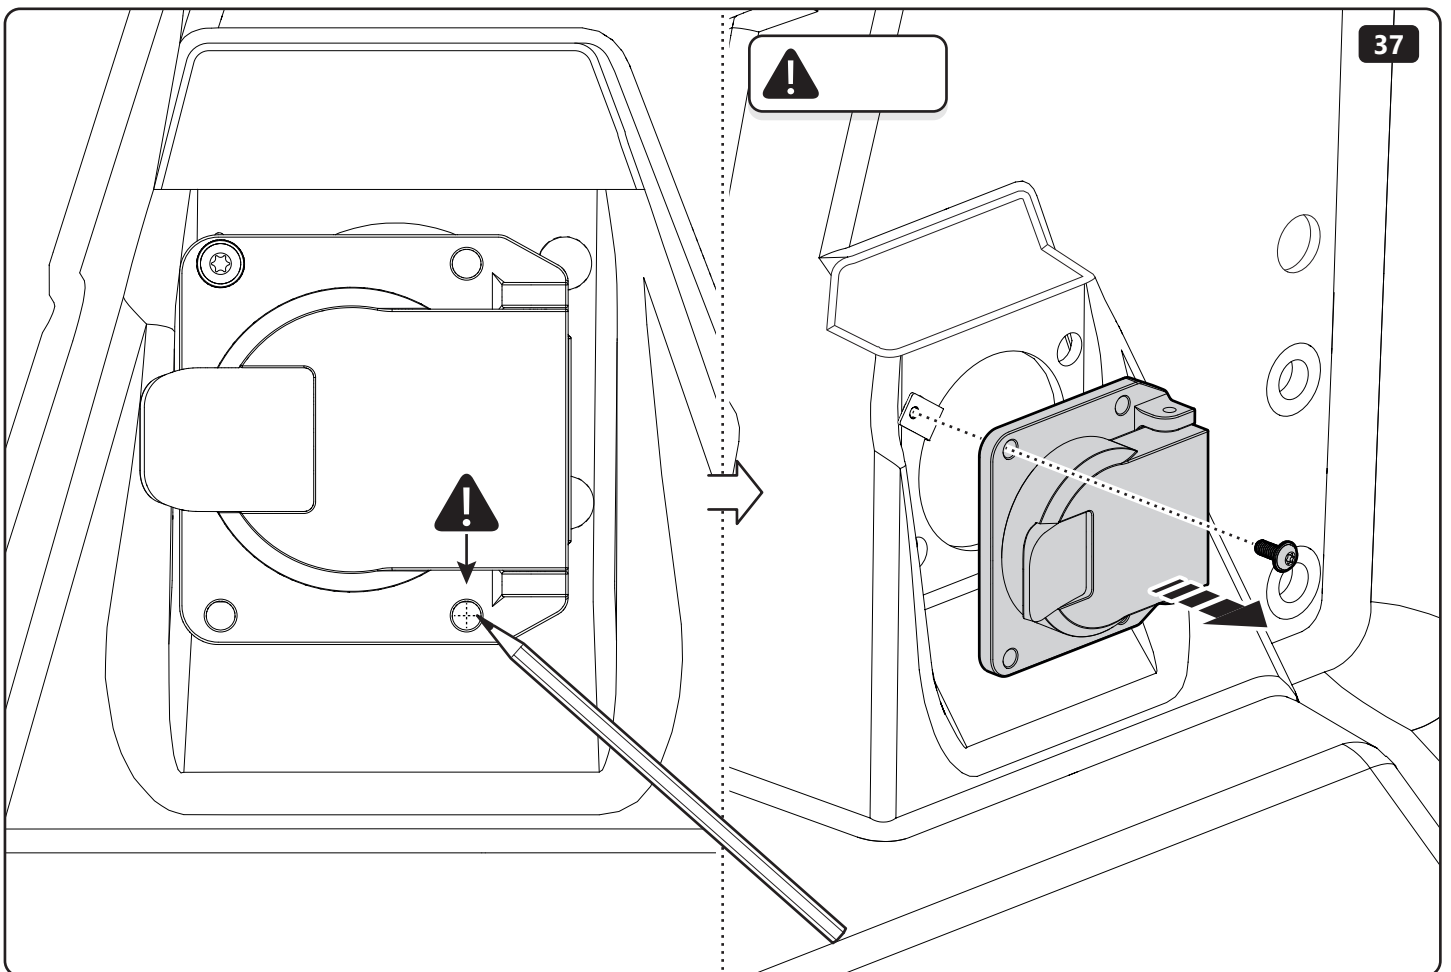
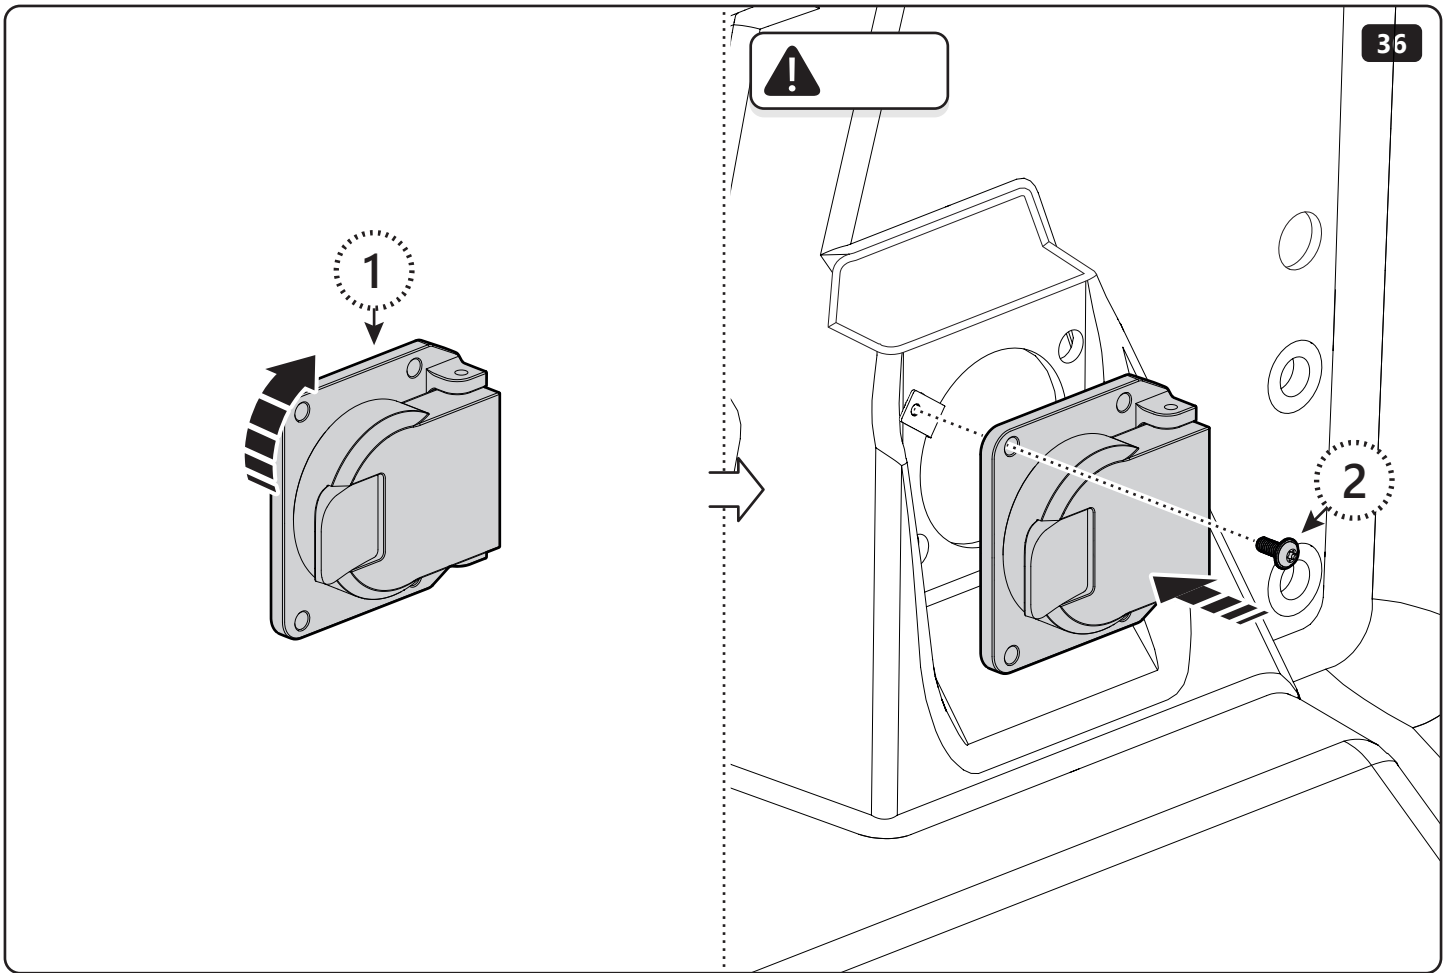




Ø 10mm


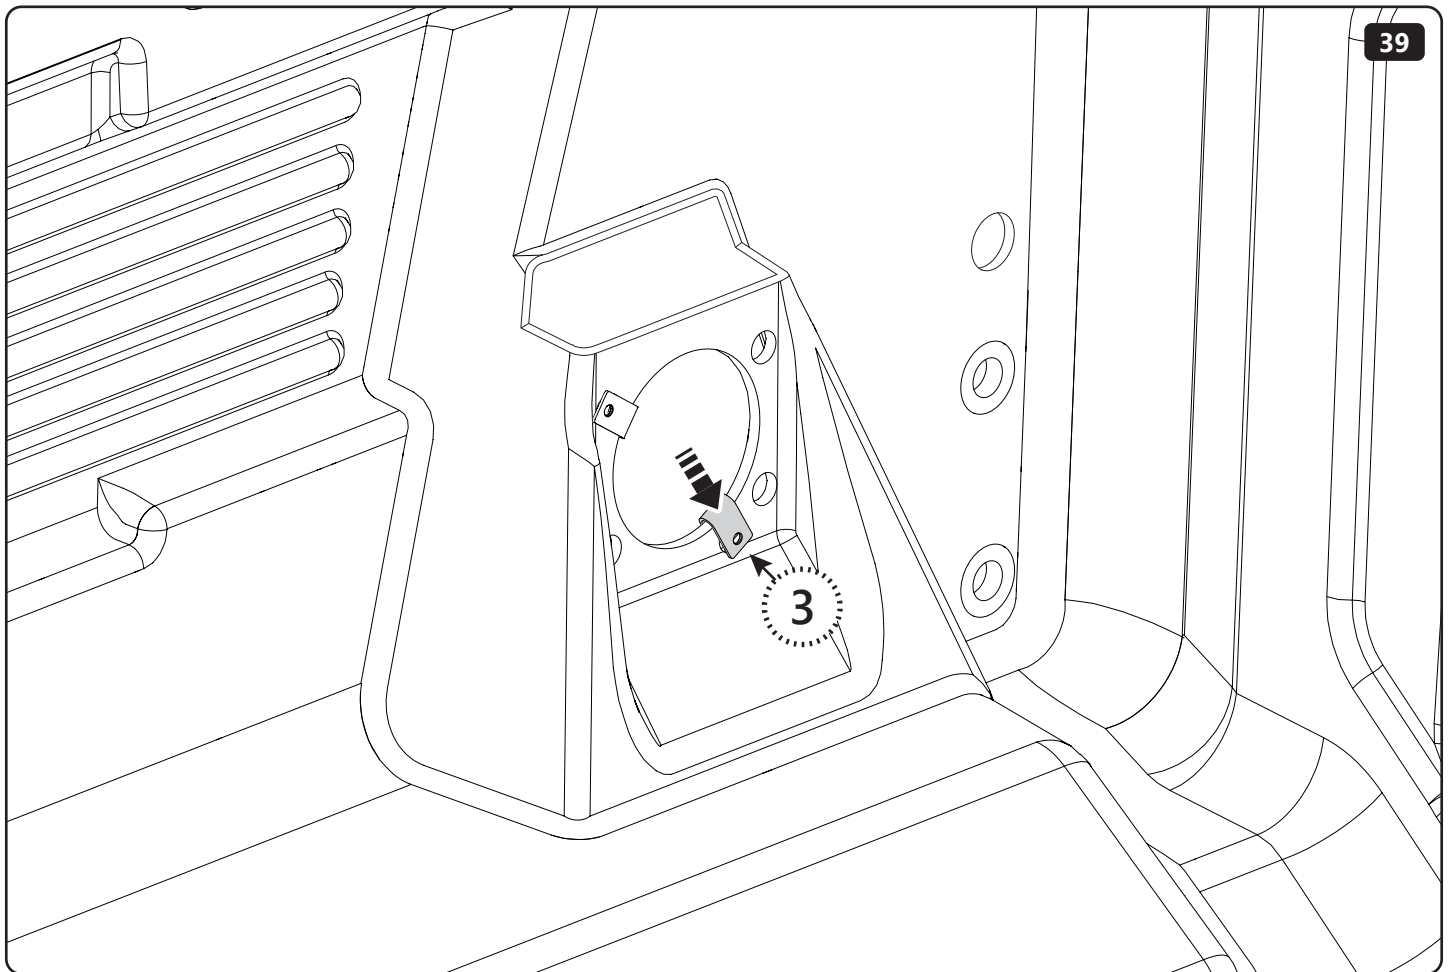
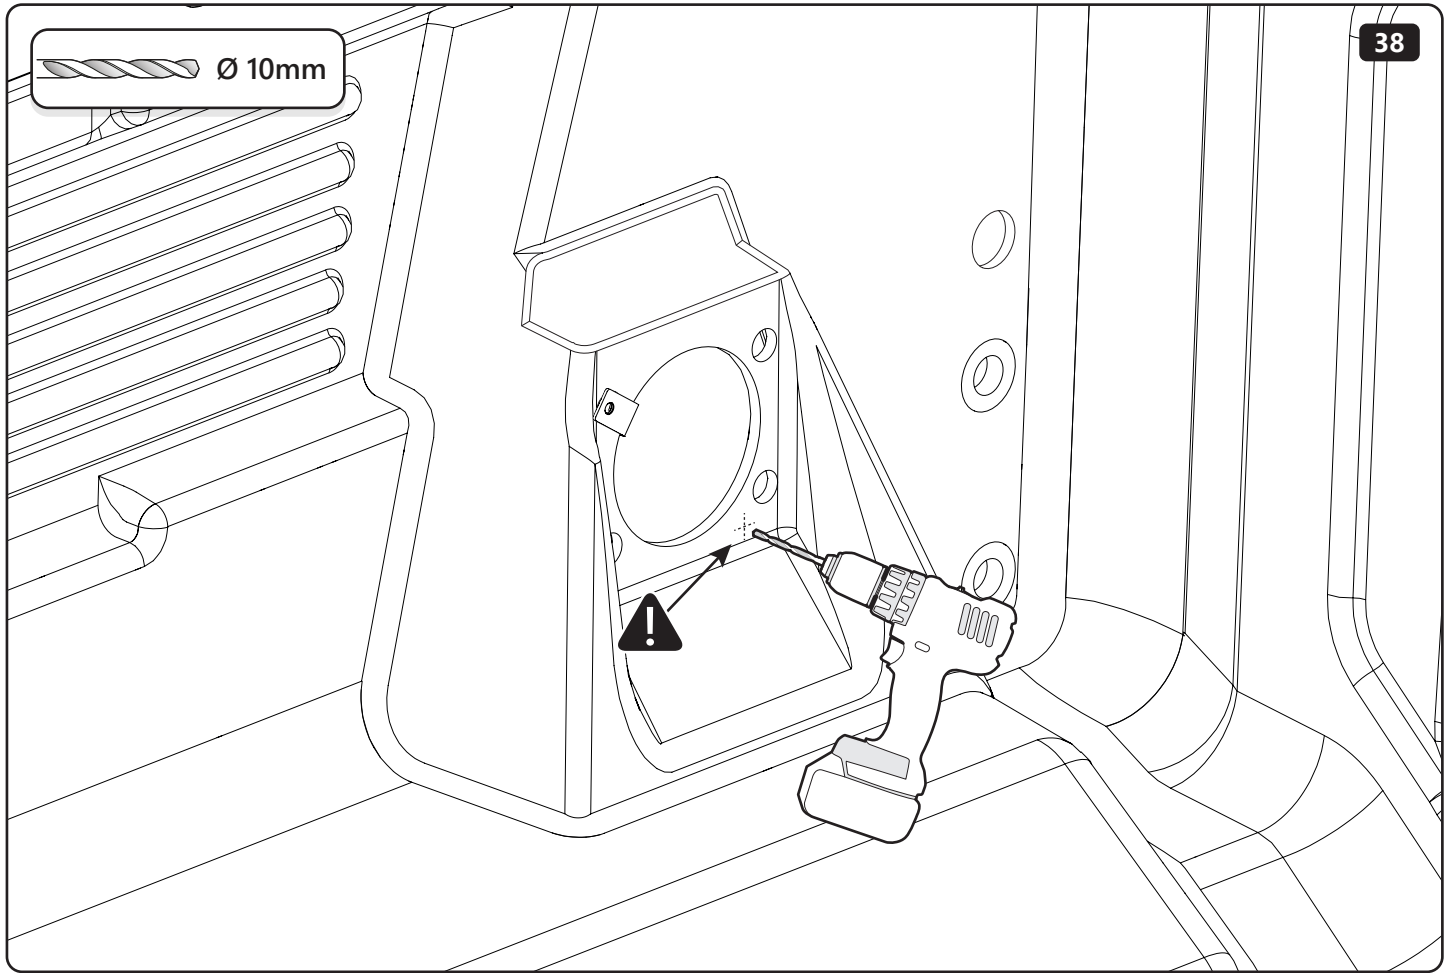


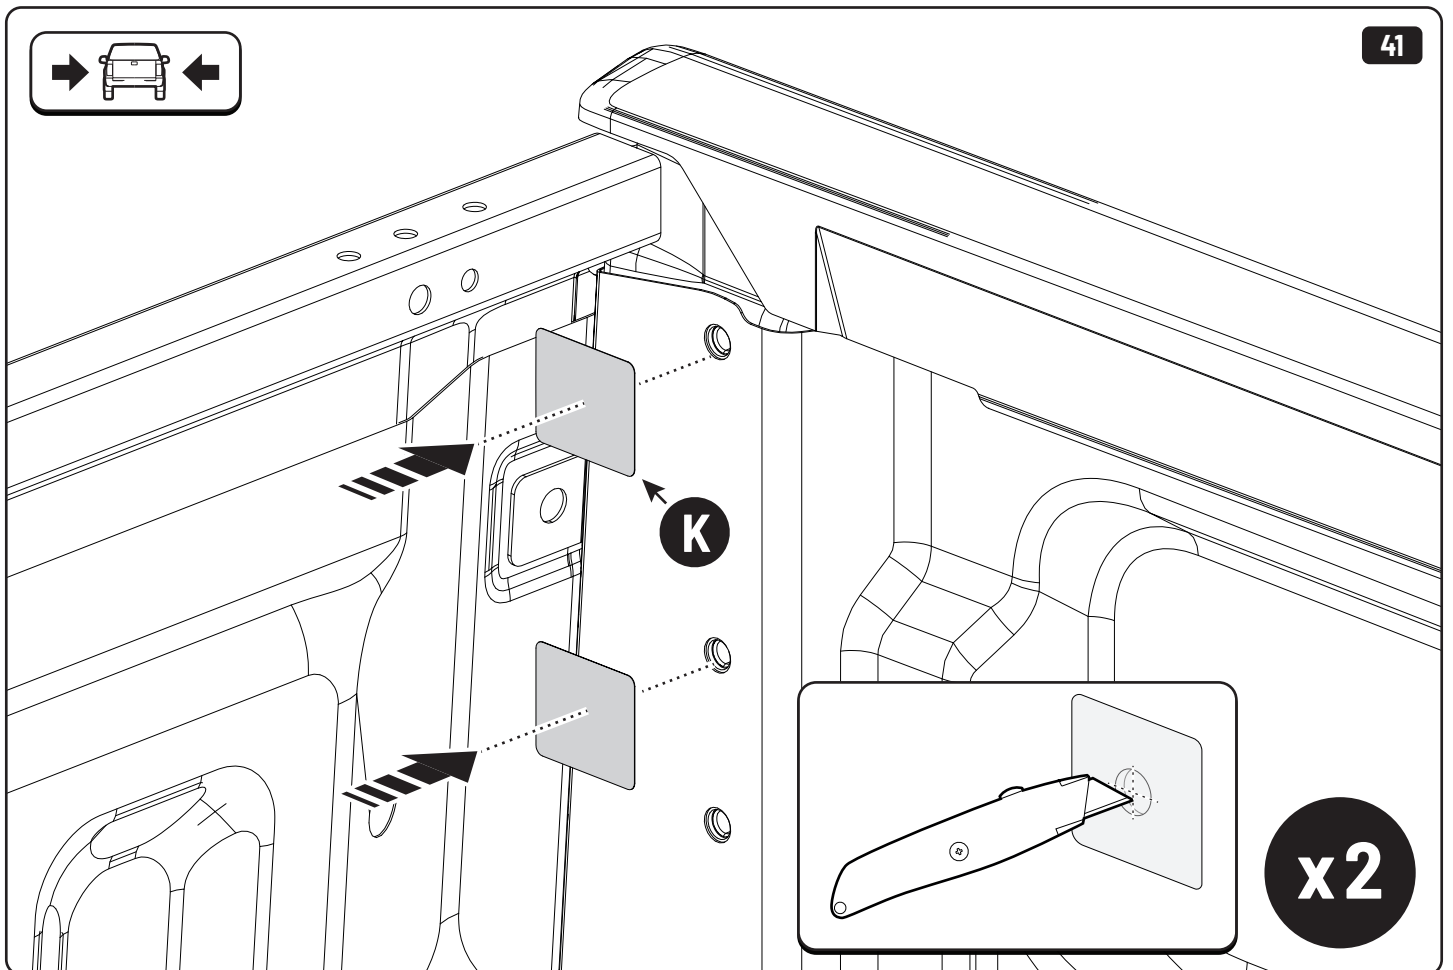
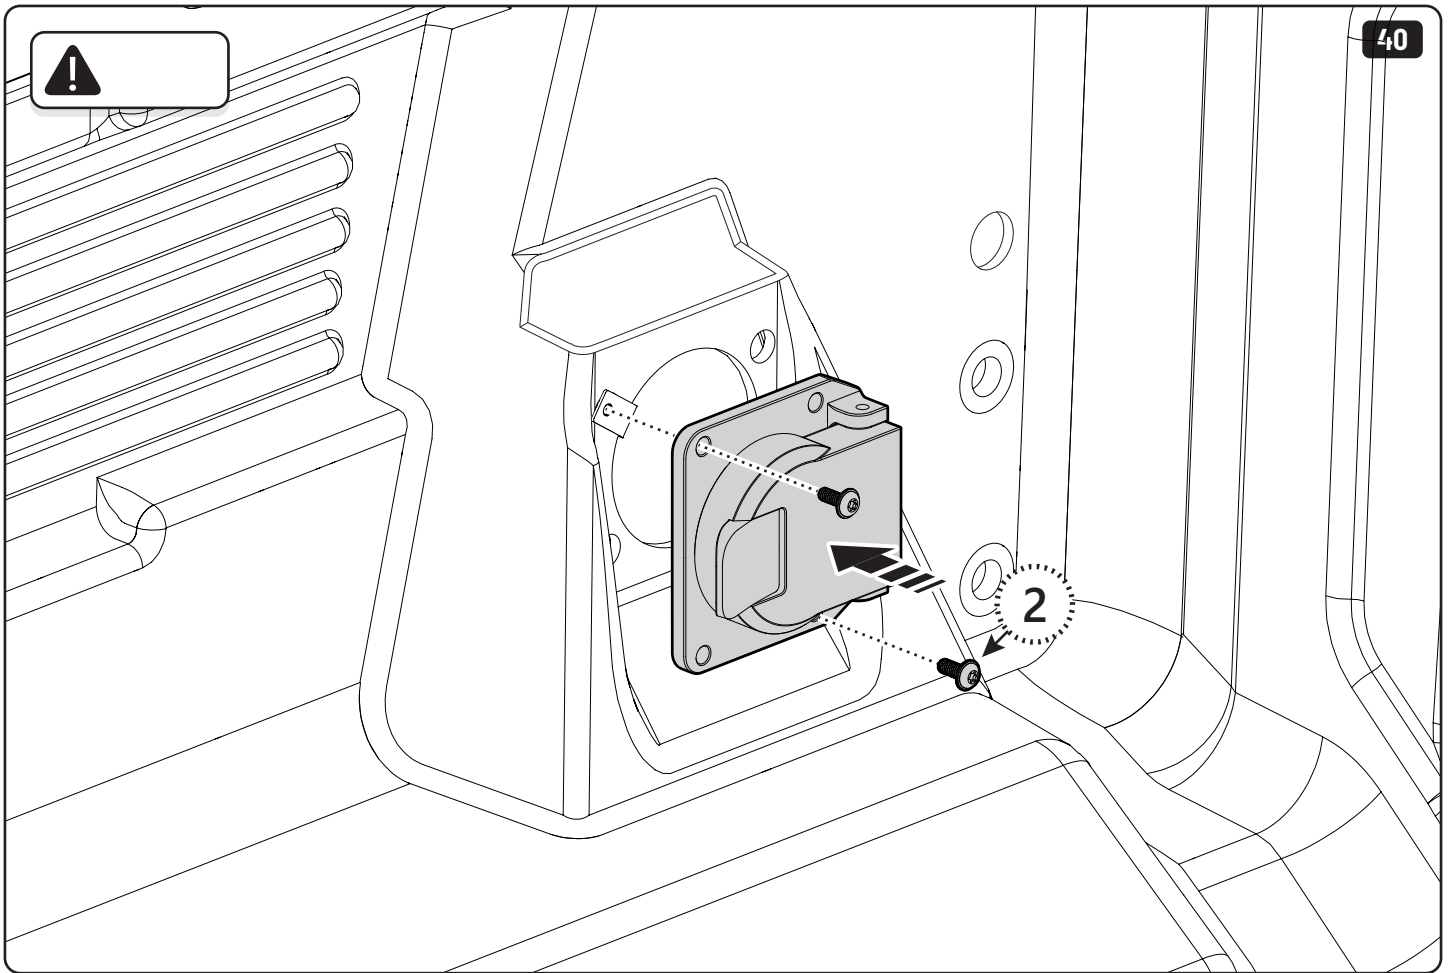


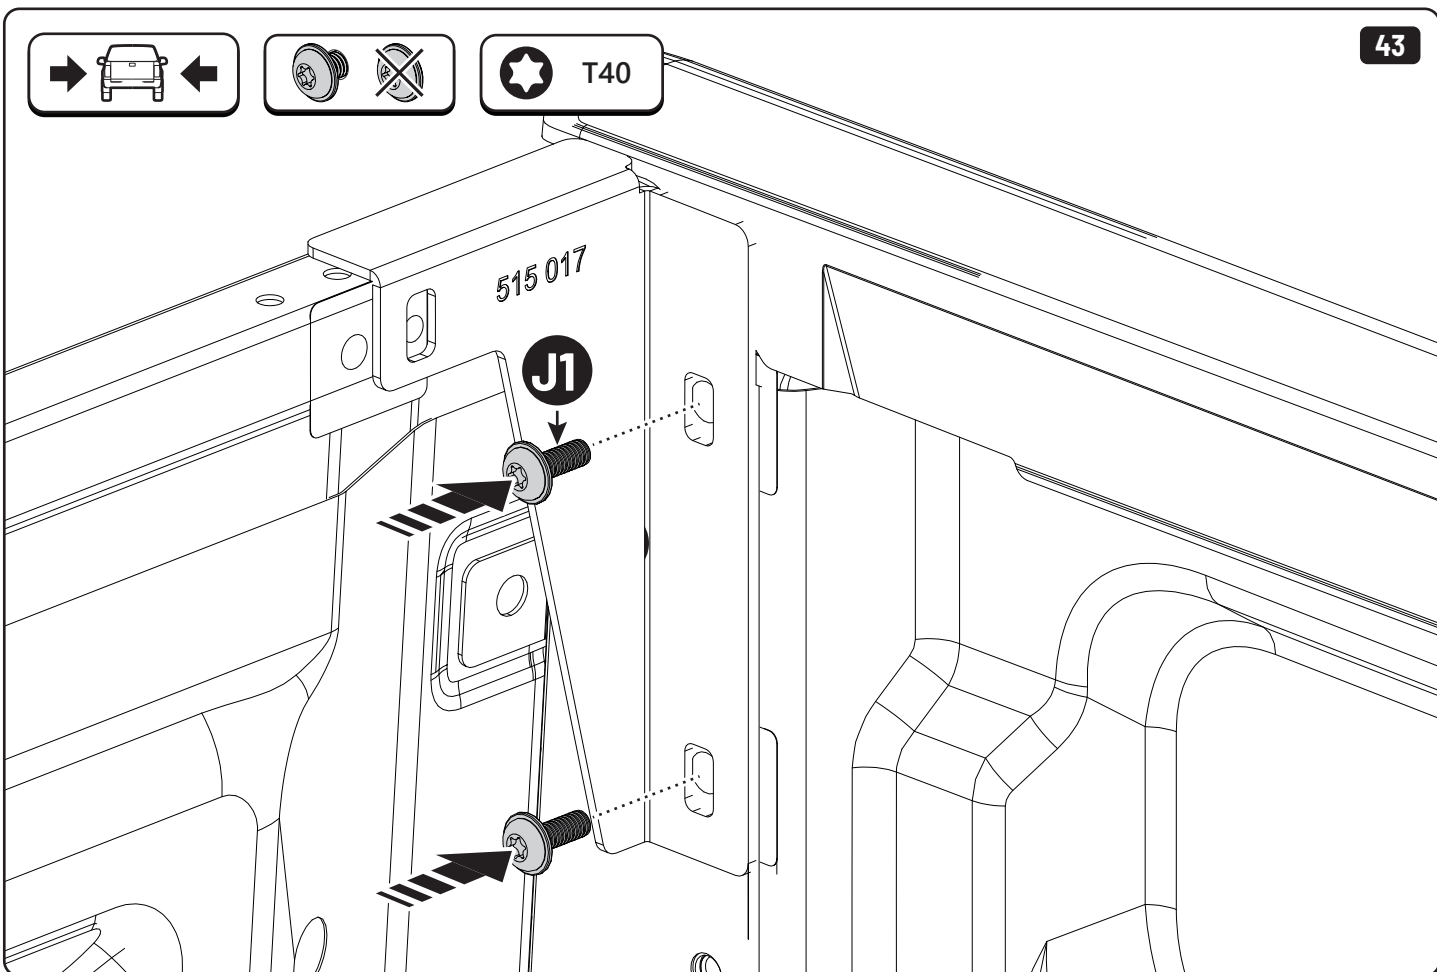
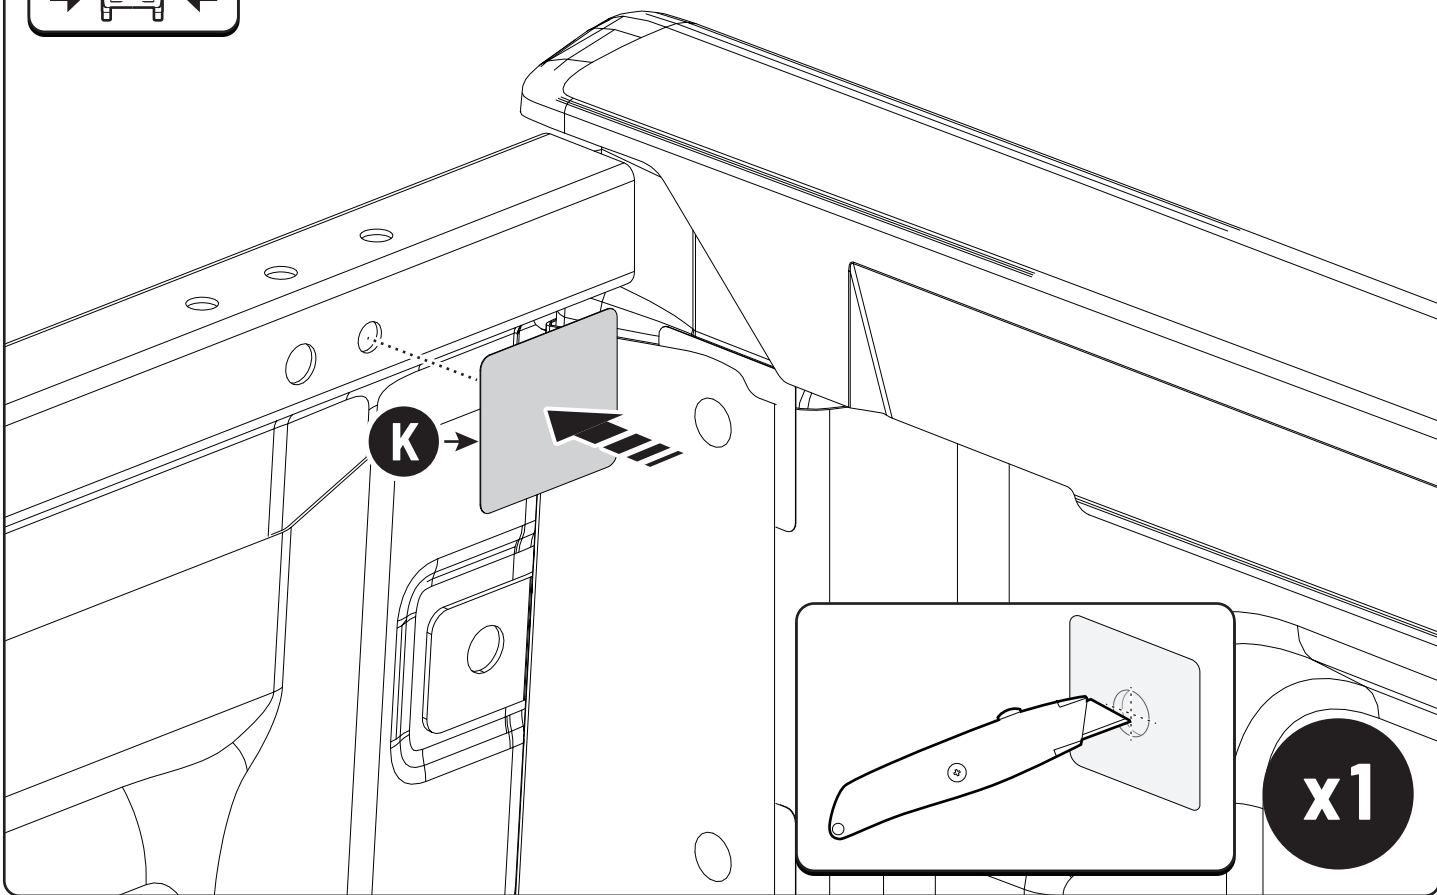


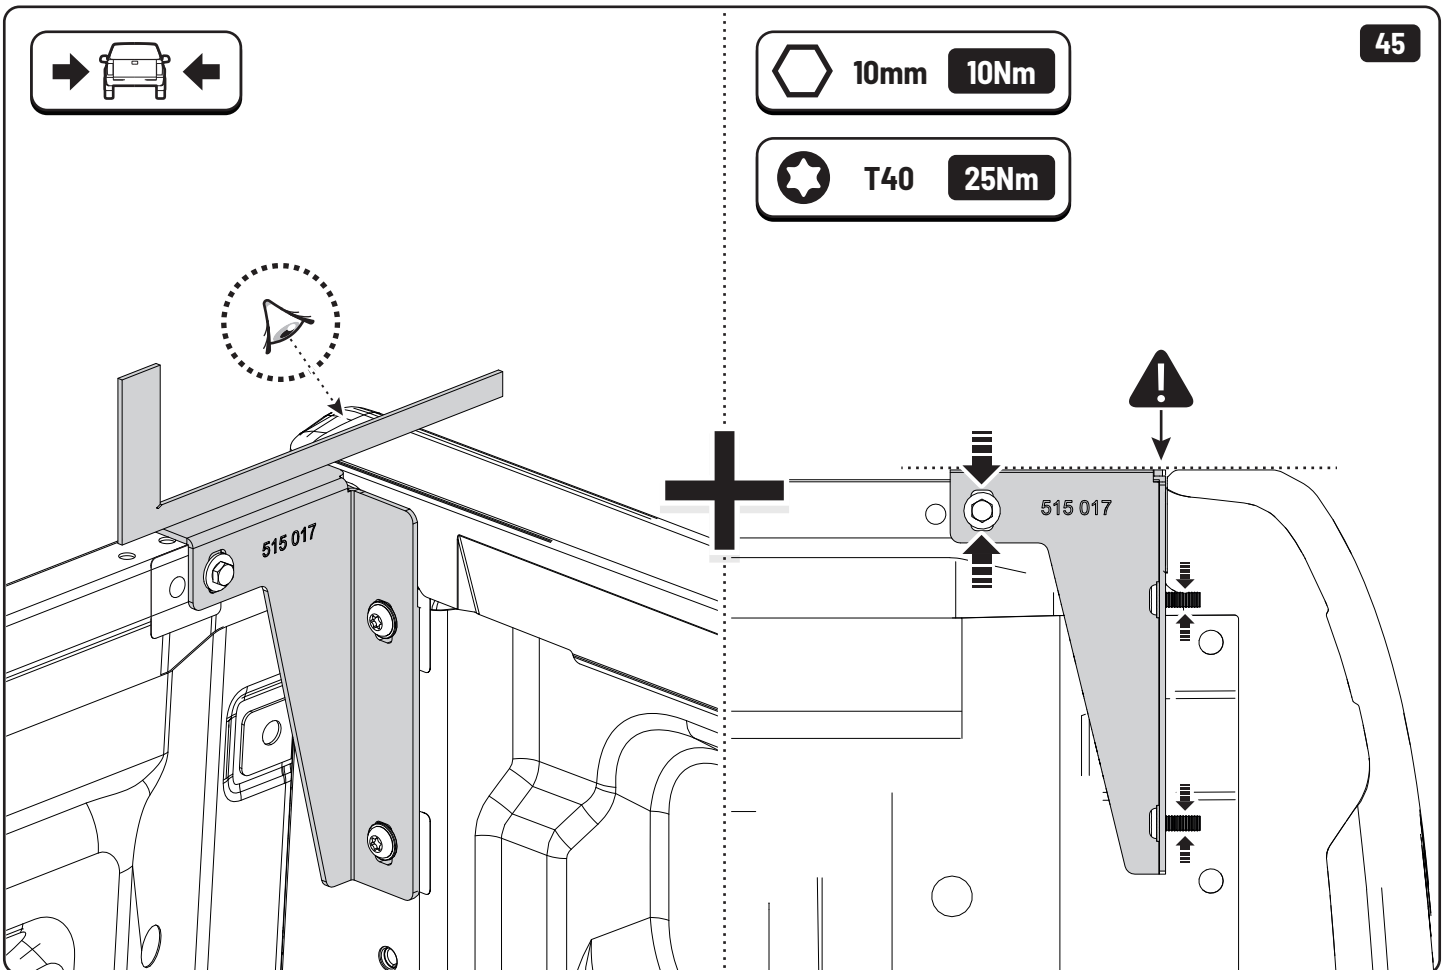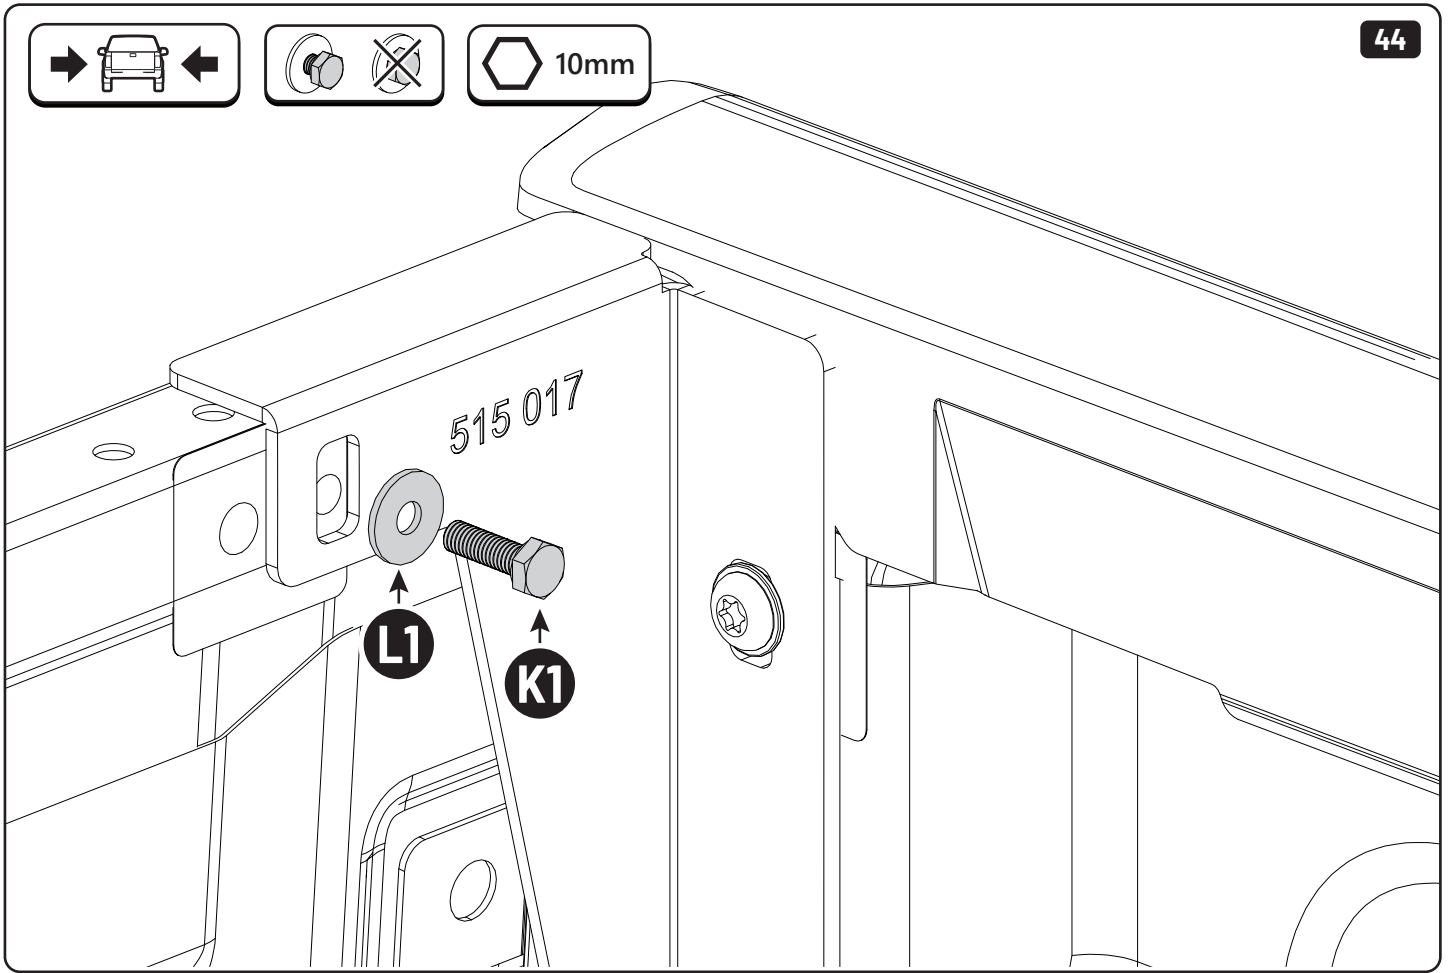

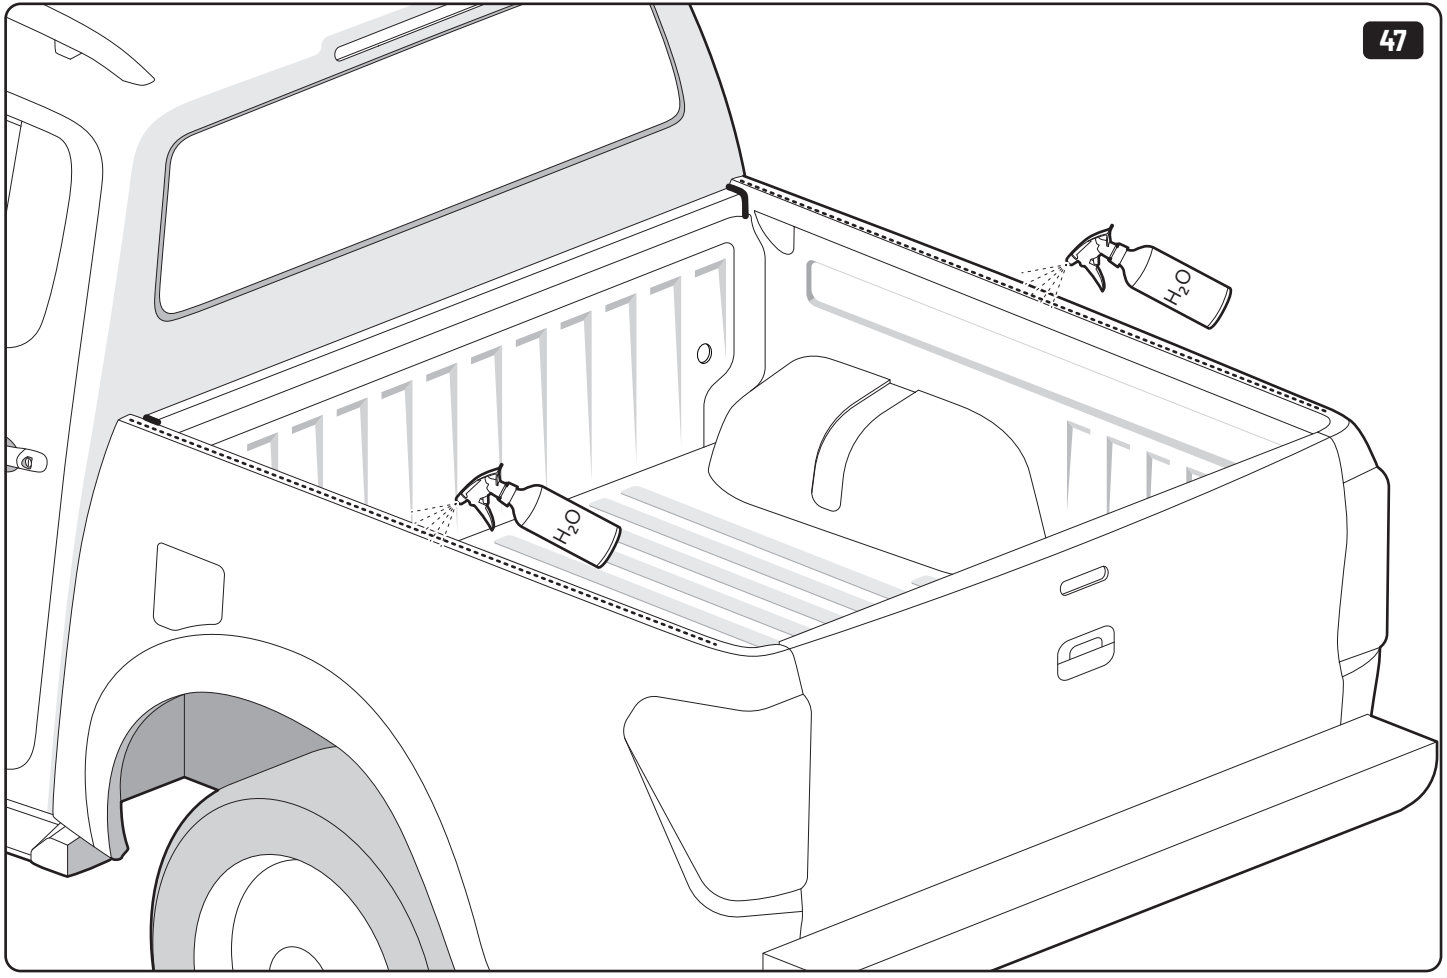
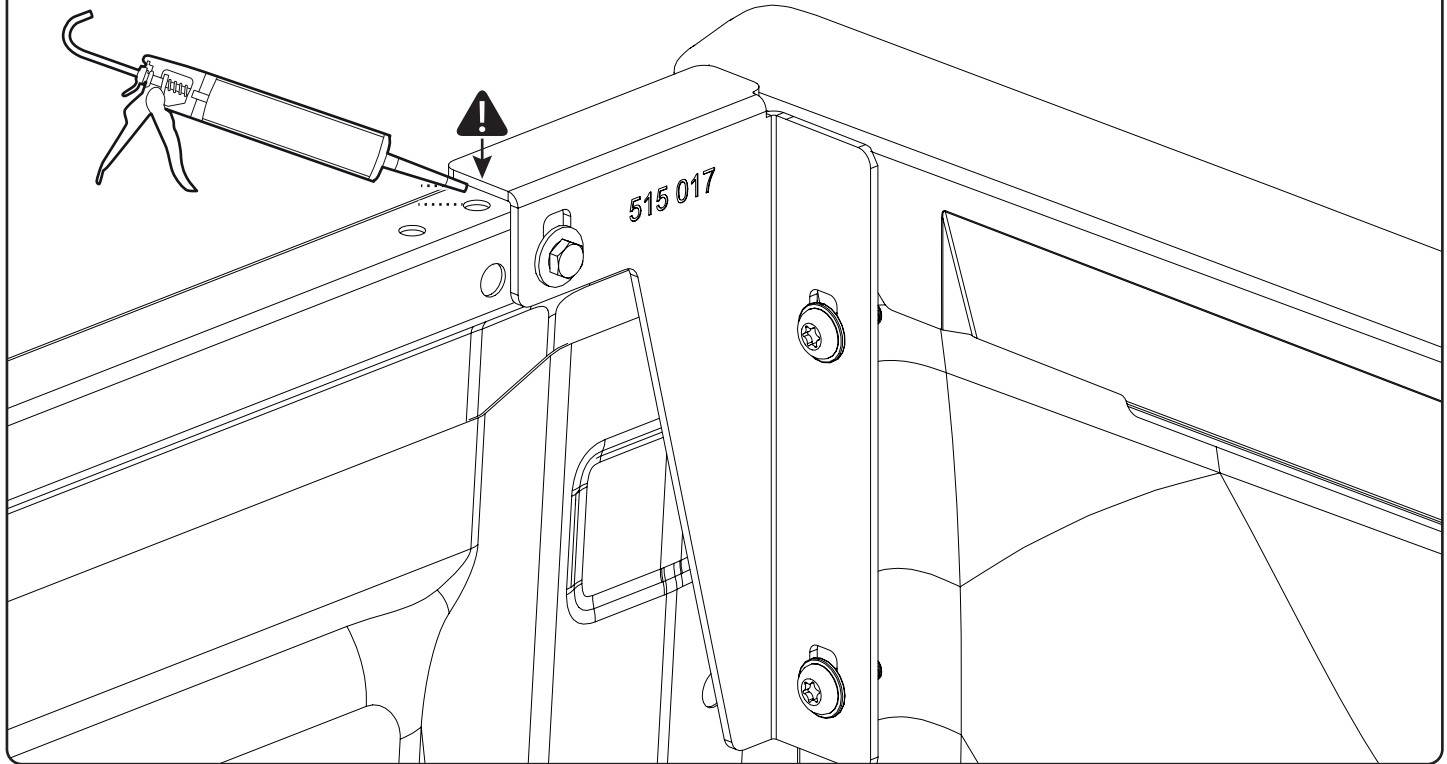


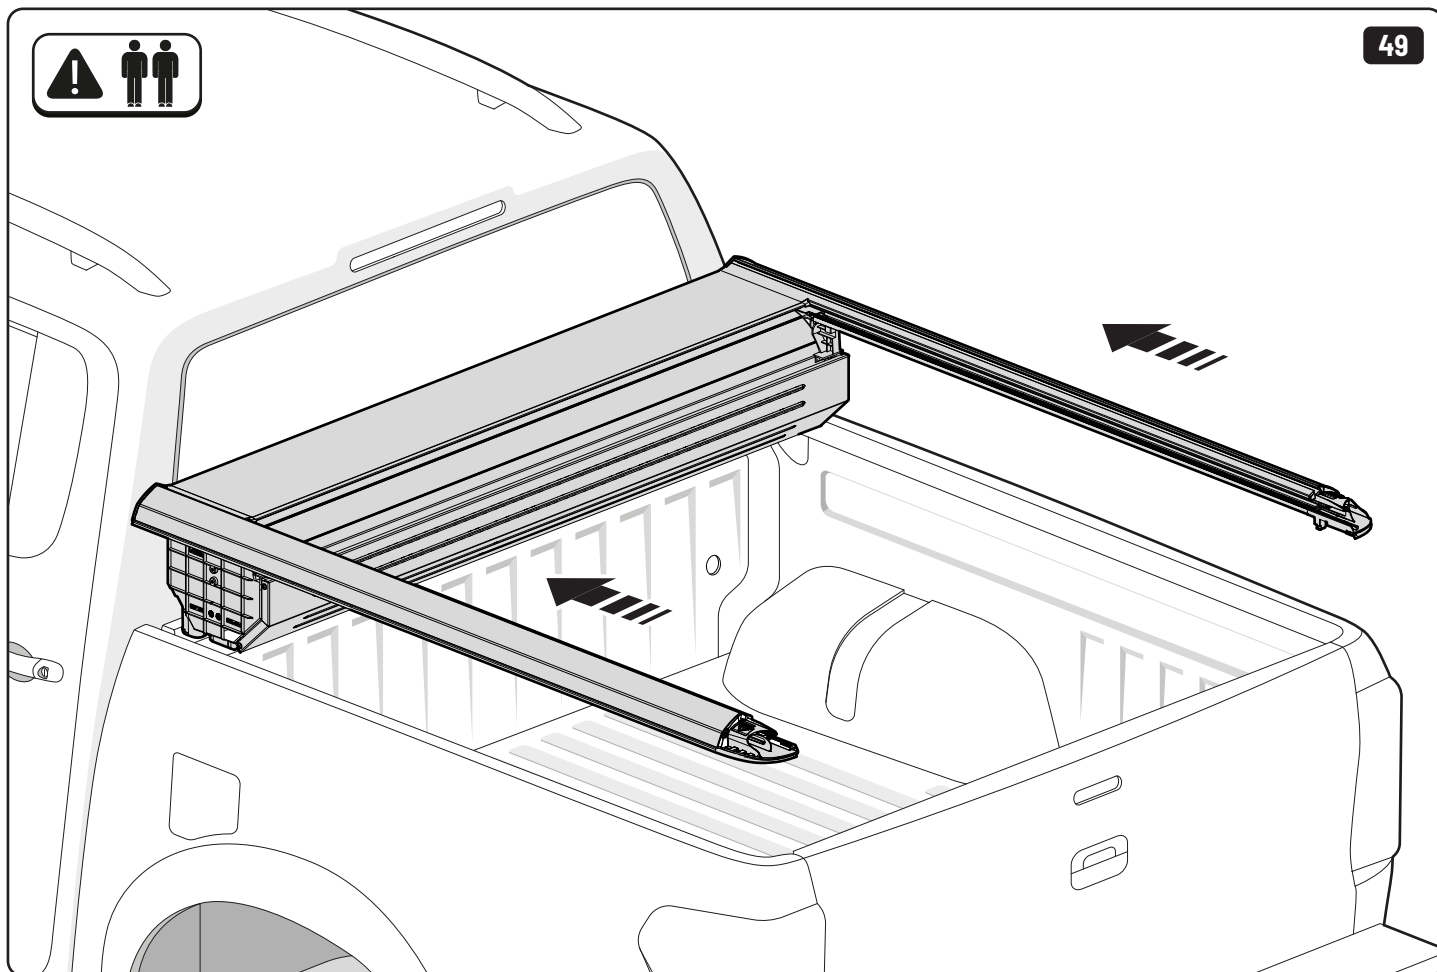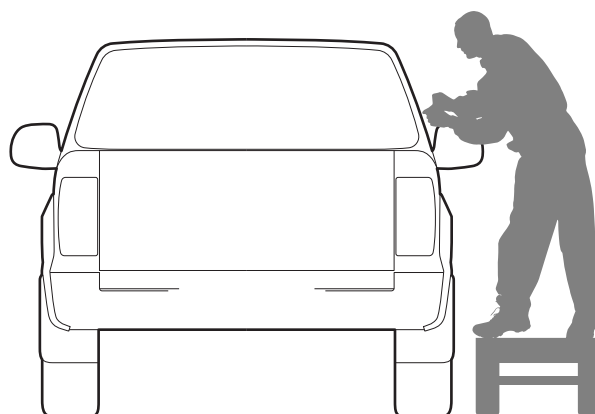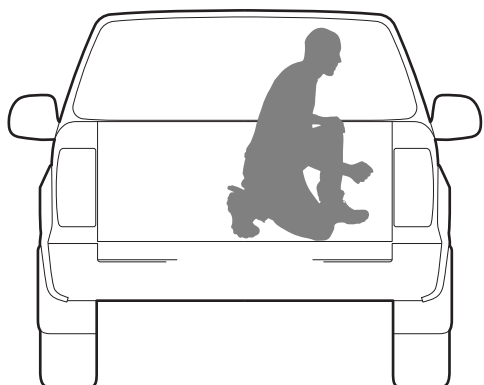


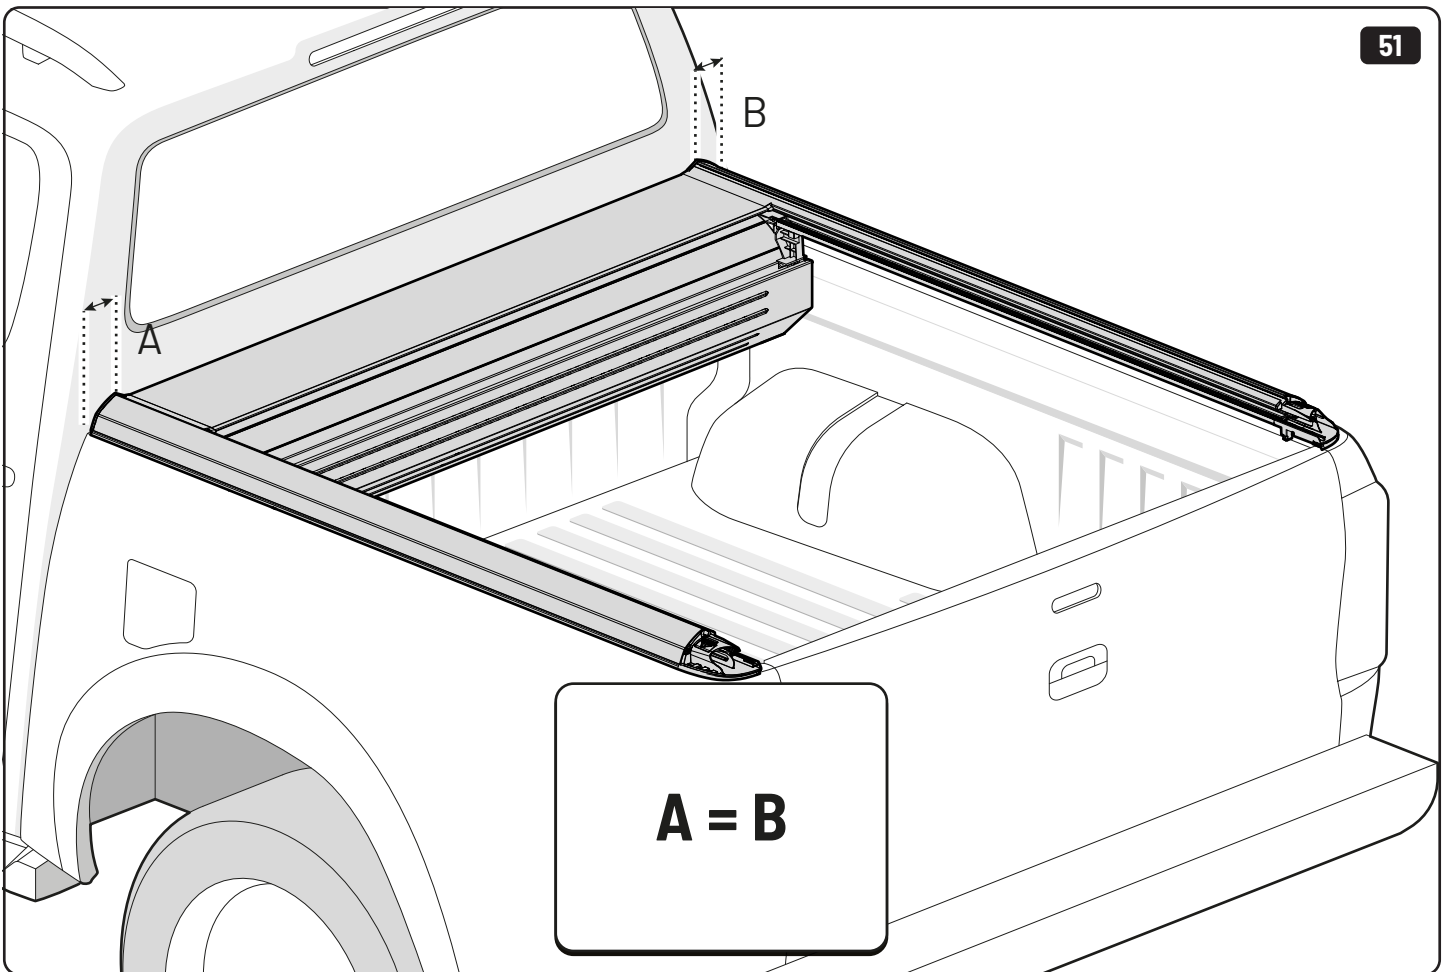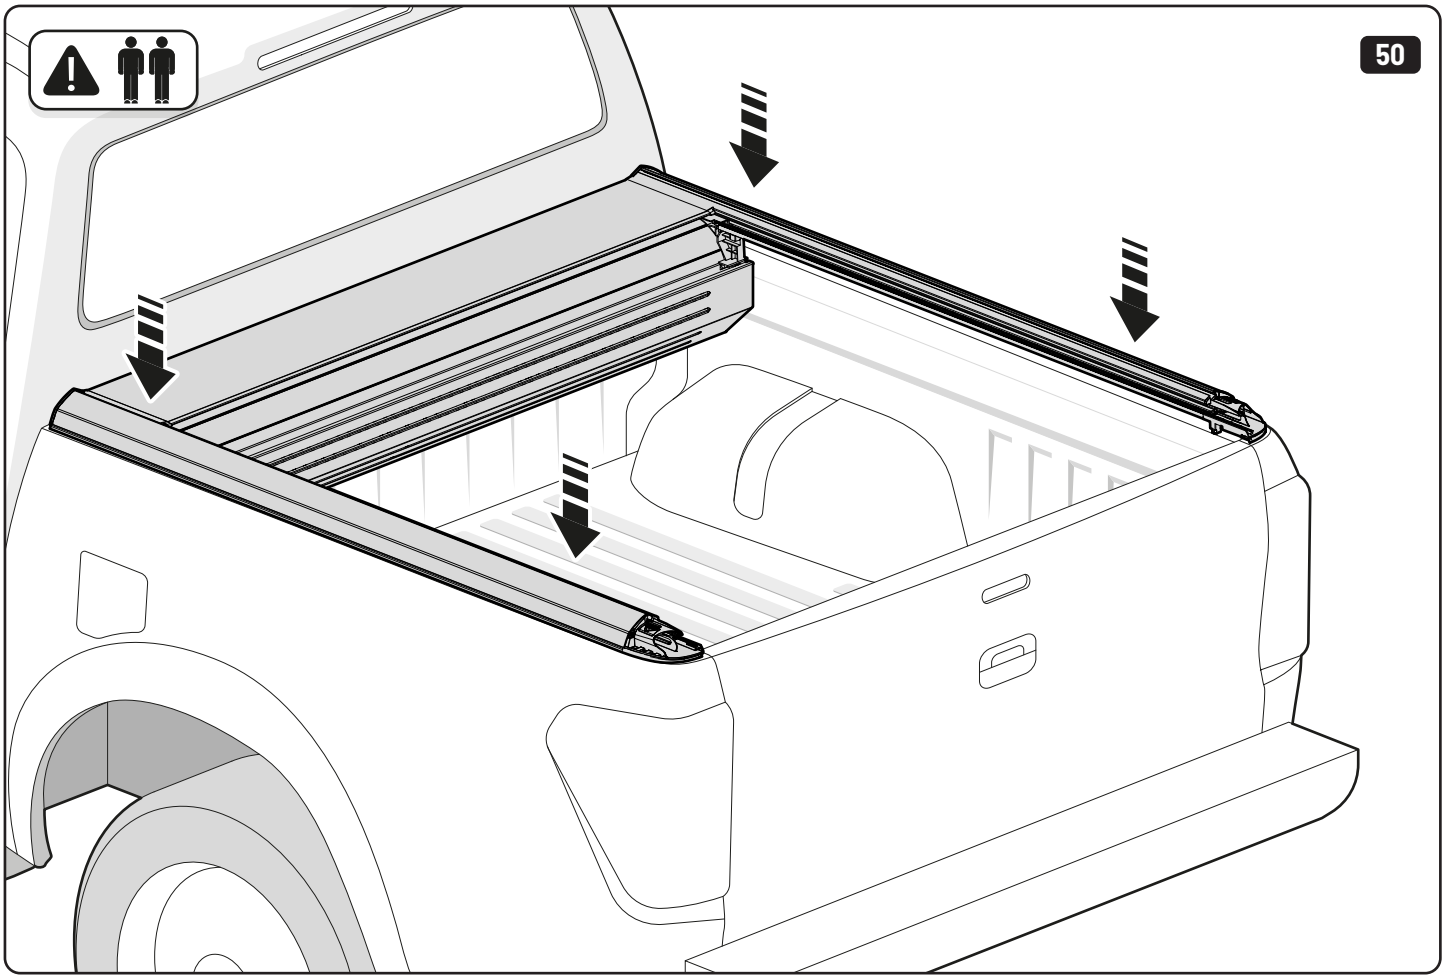

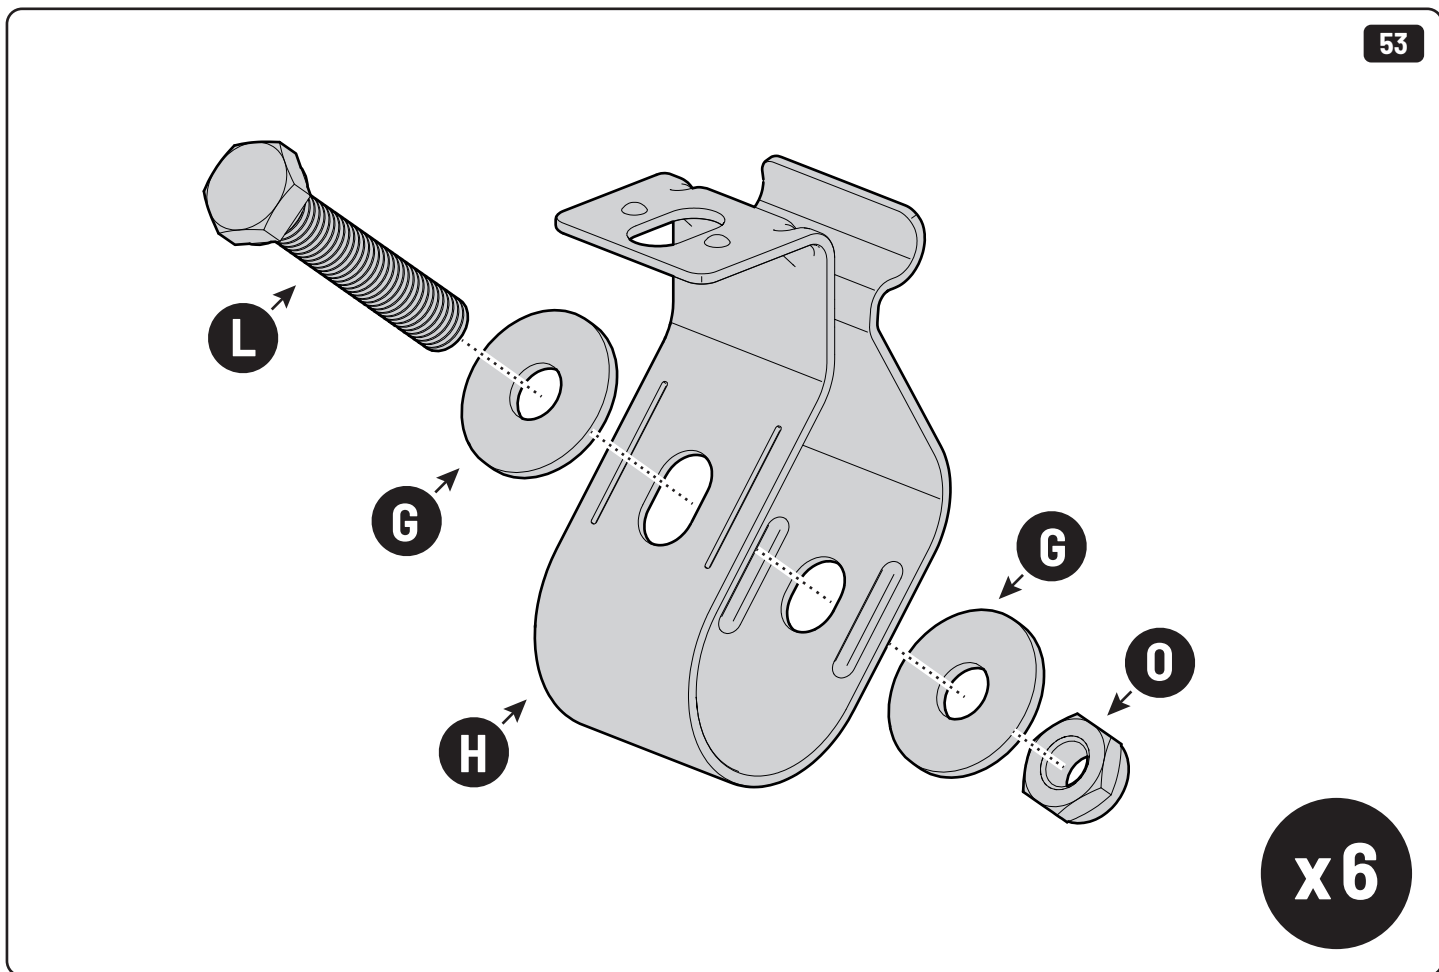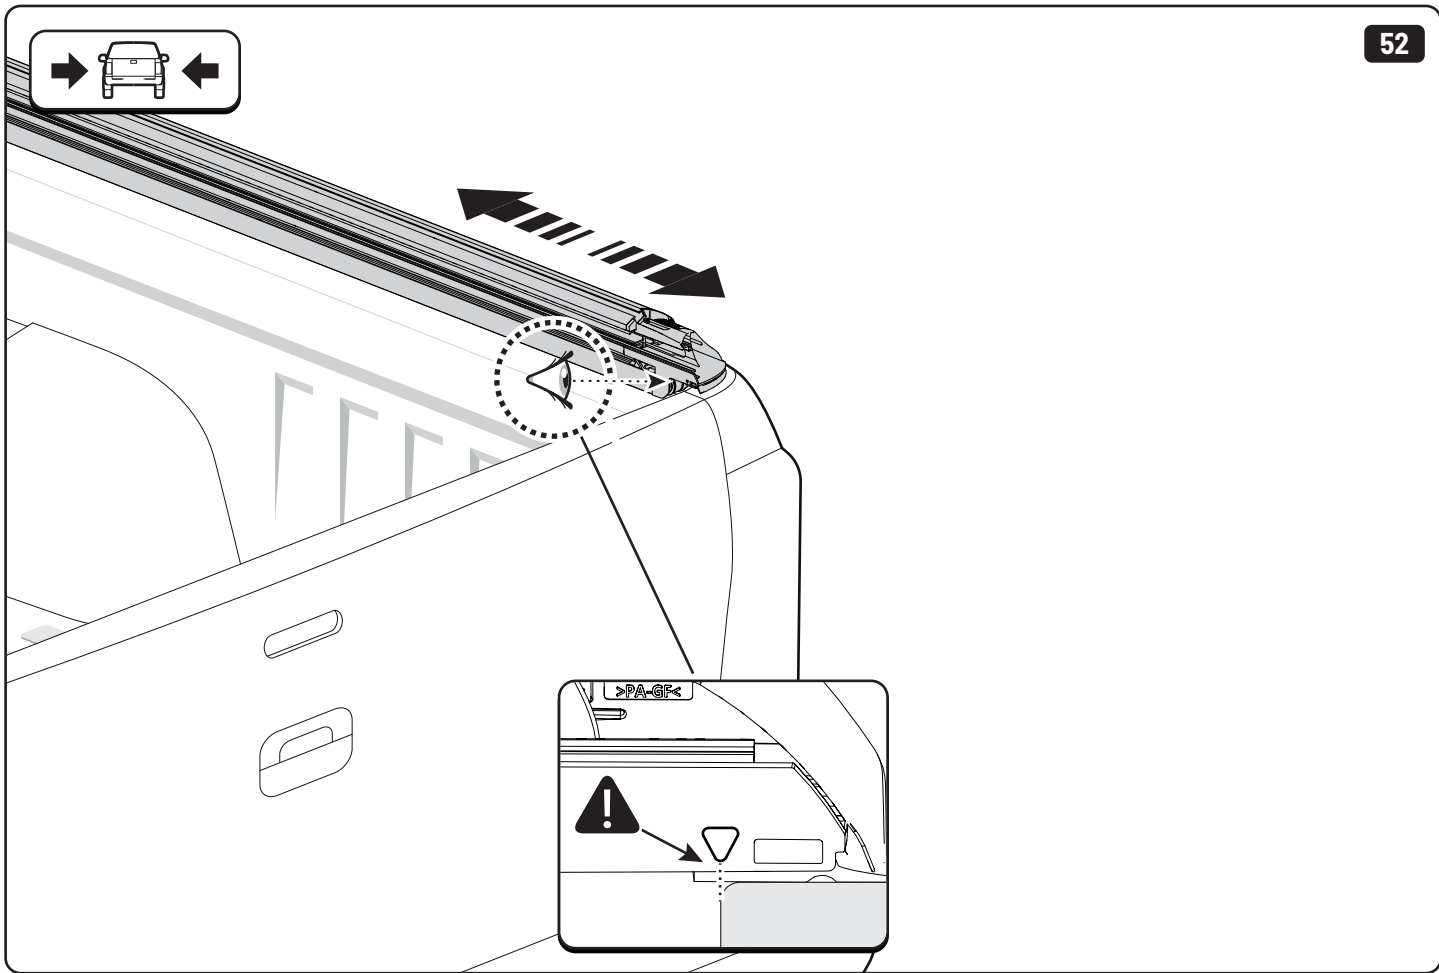

x6



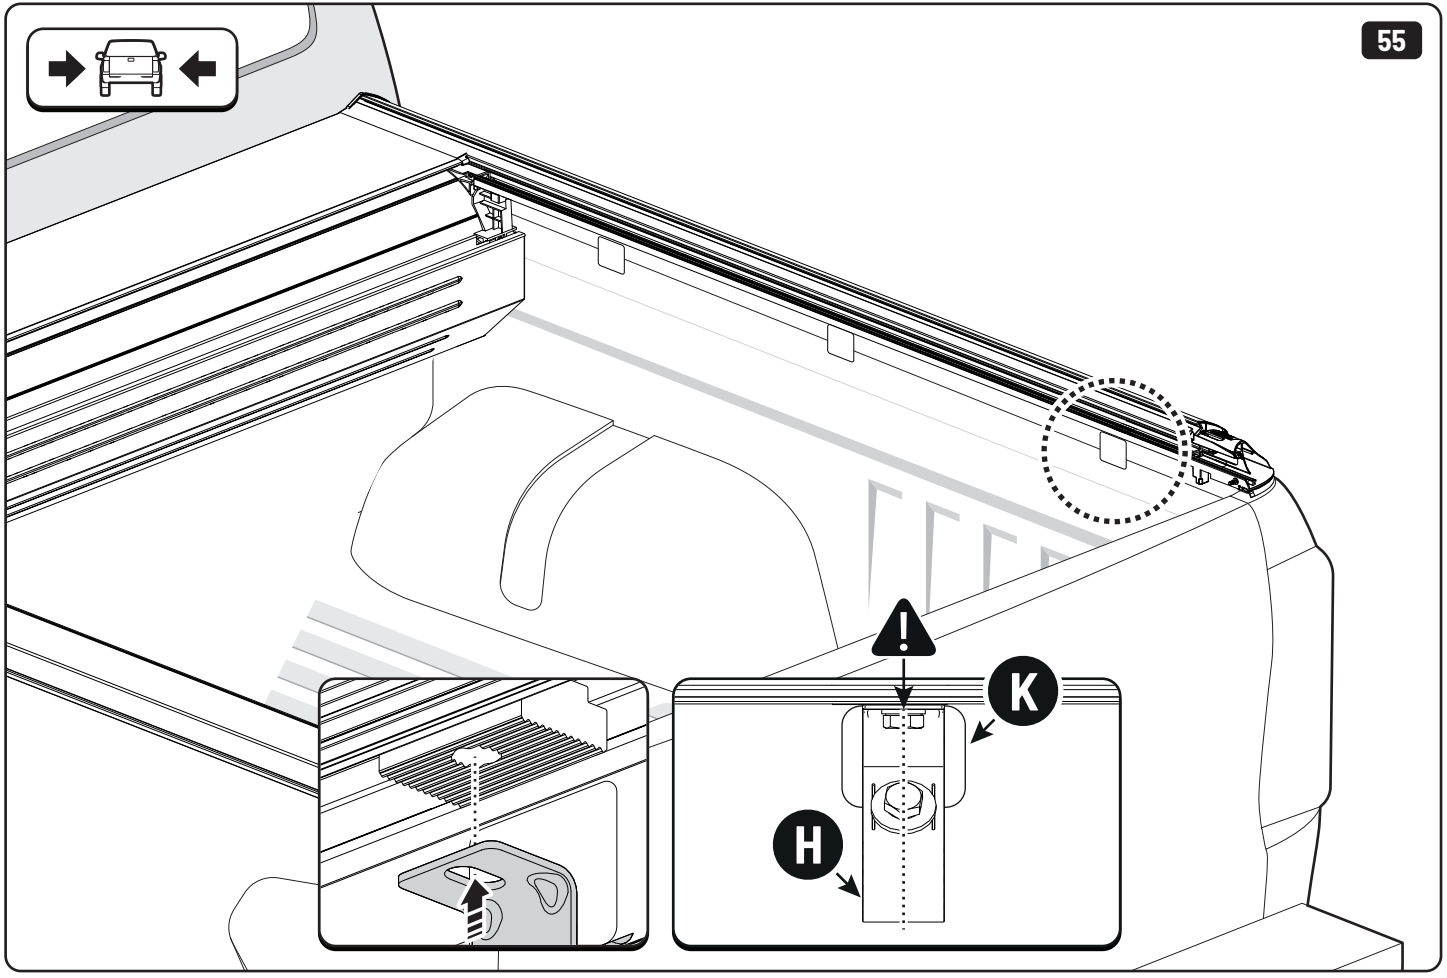
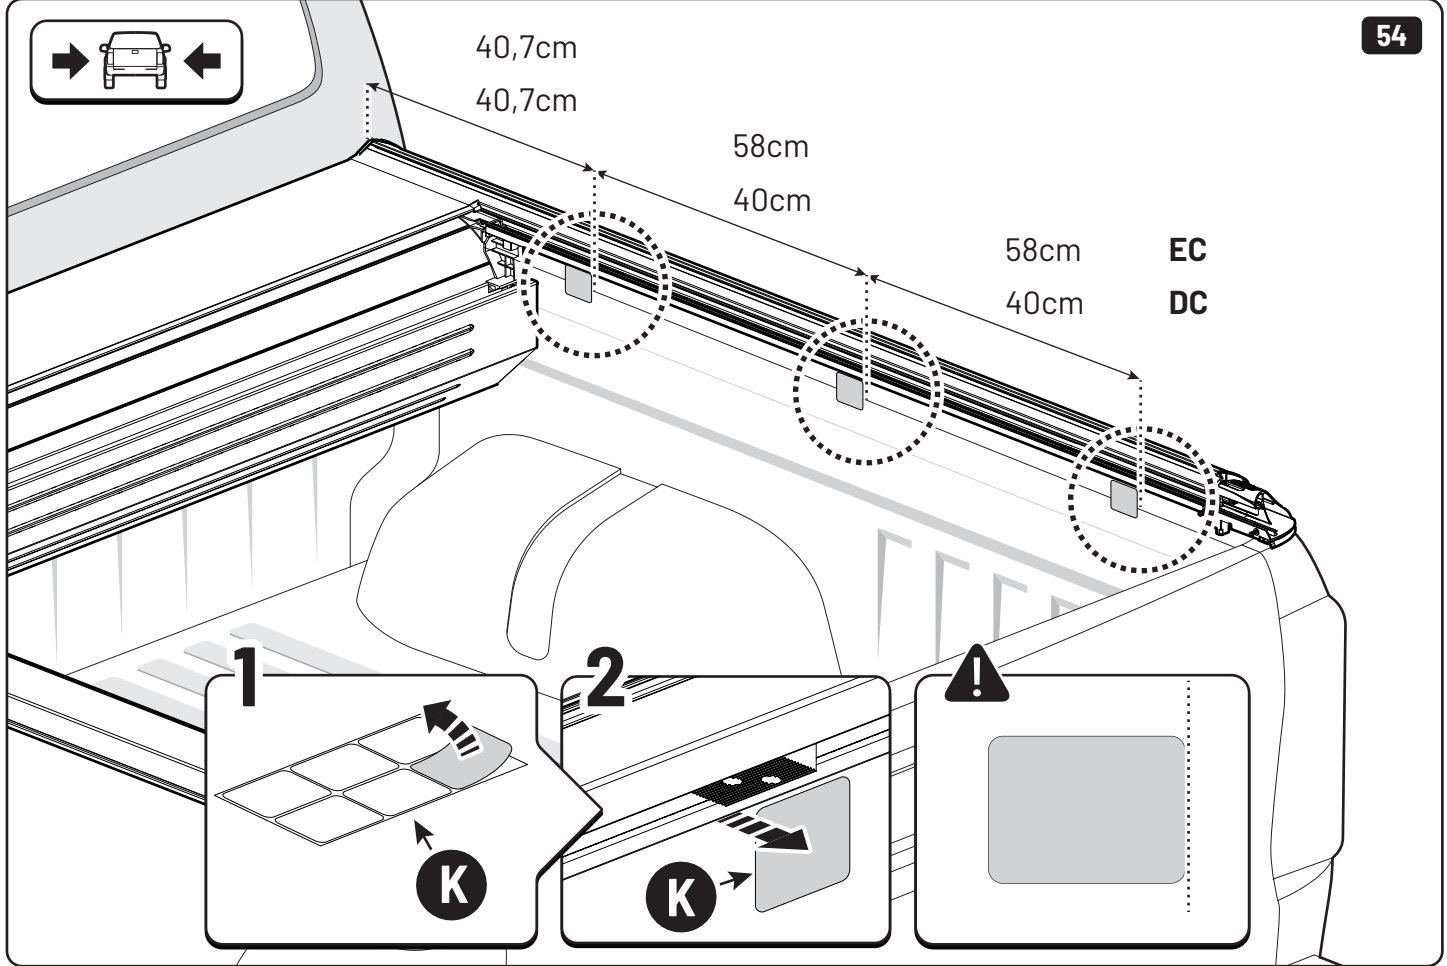








LOCTITE 243




x2

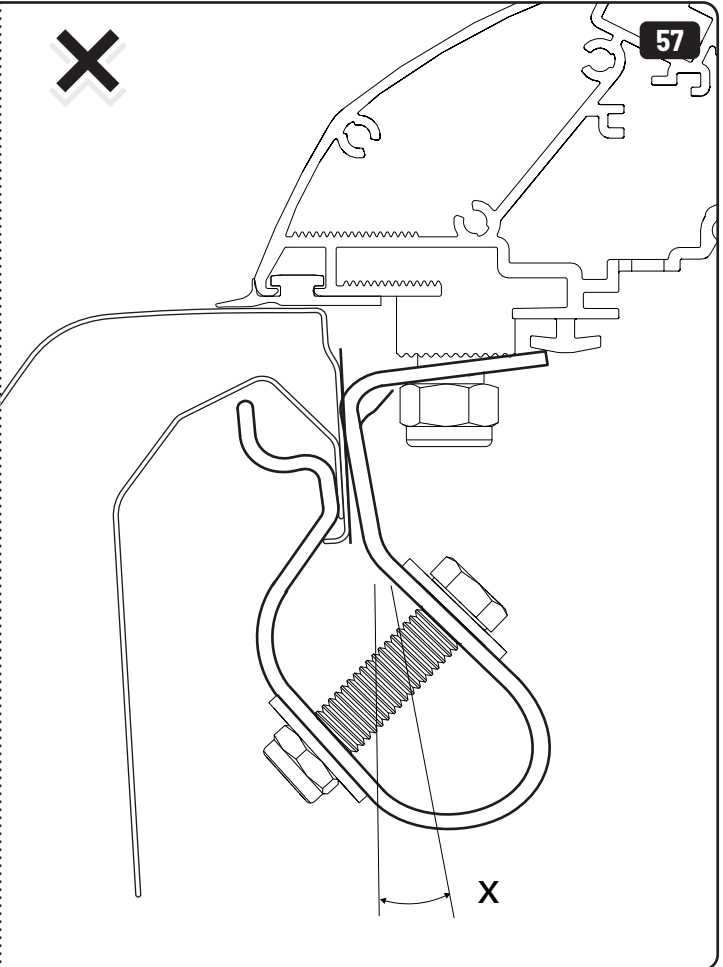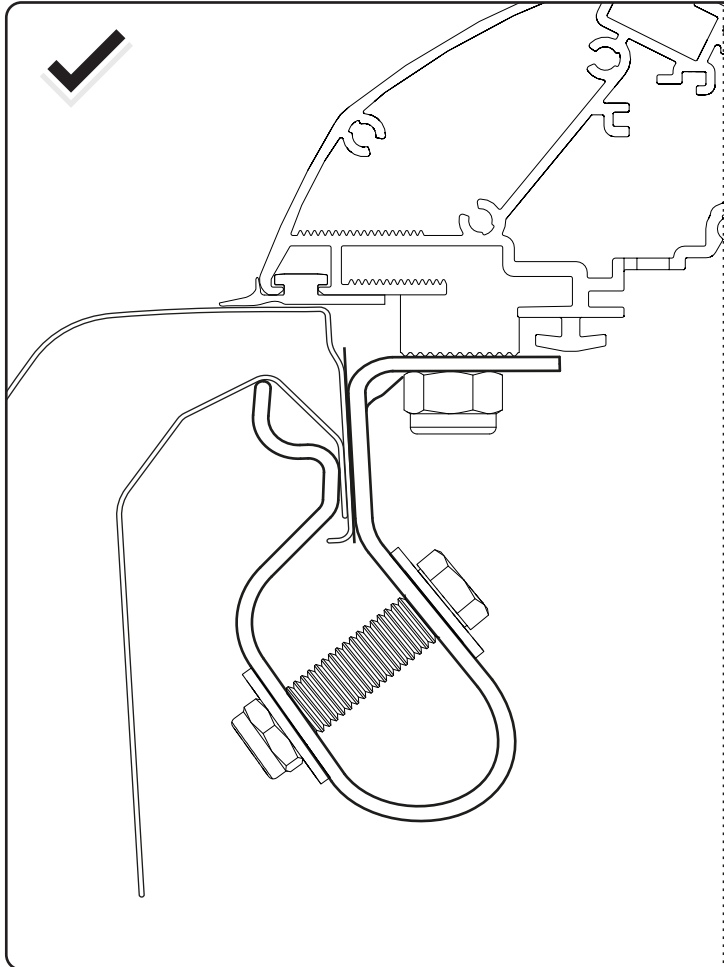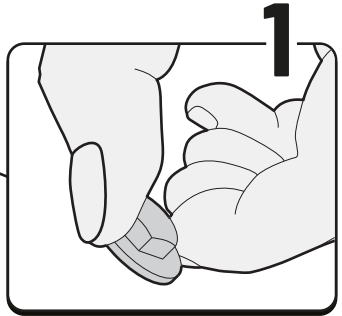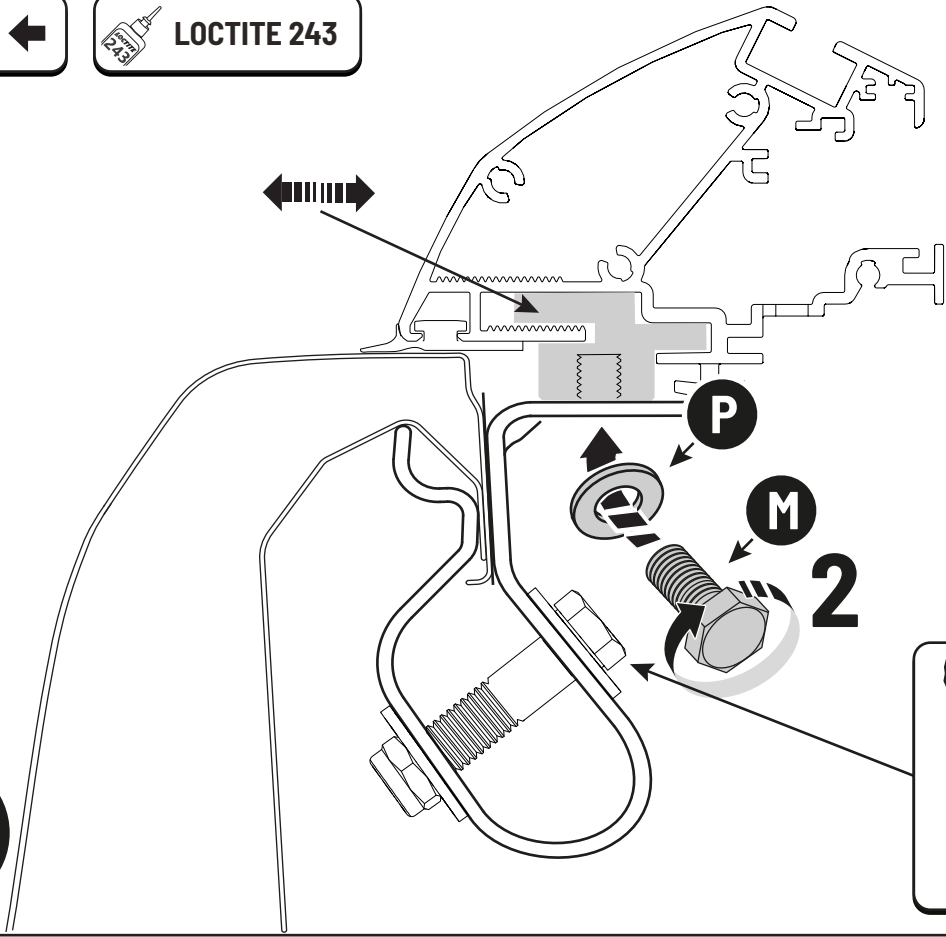

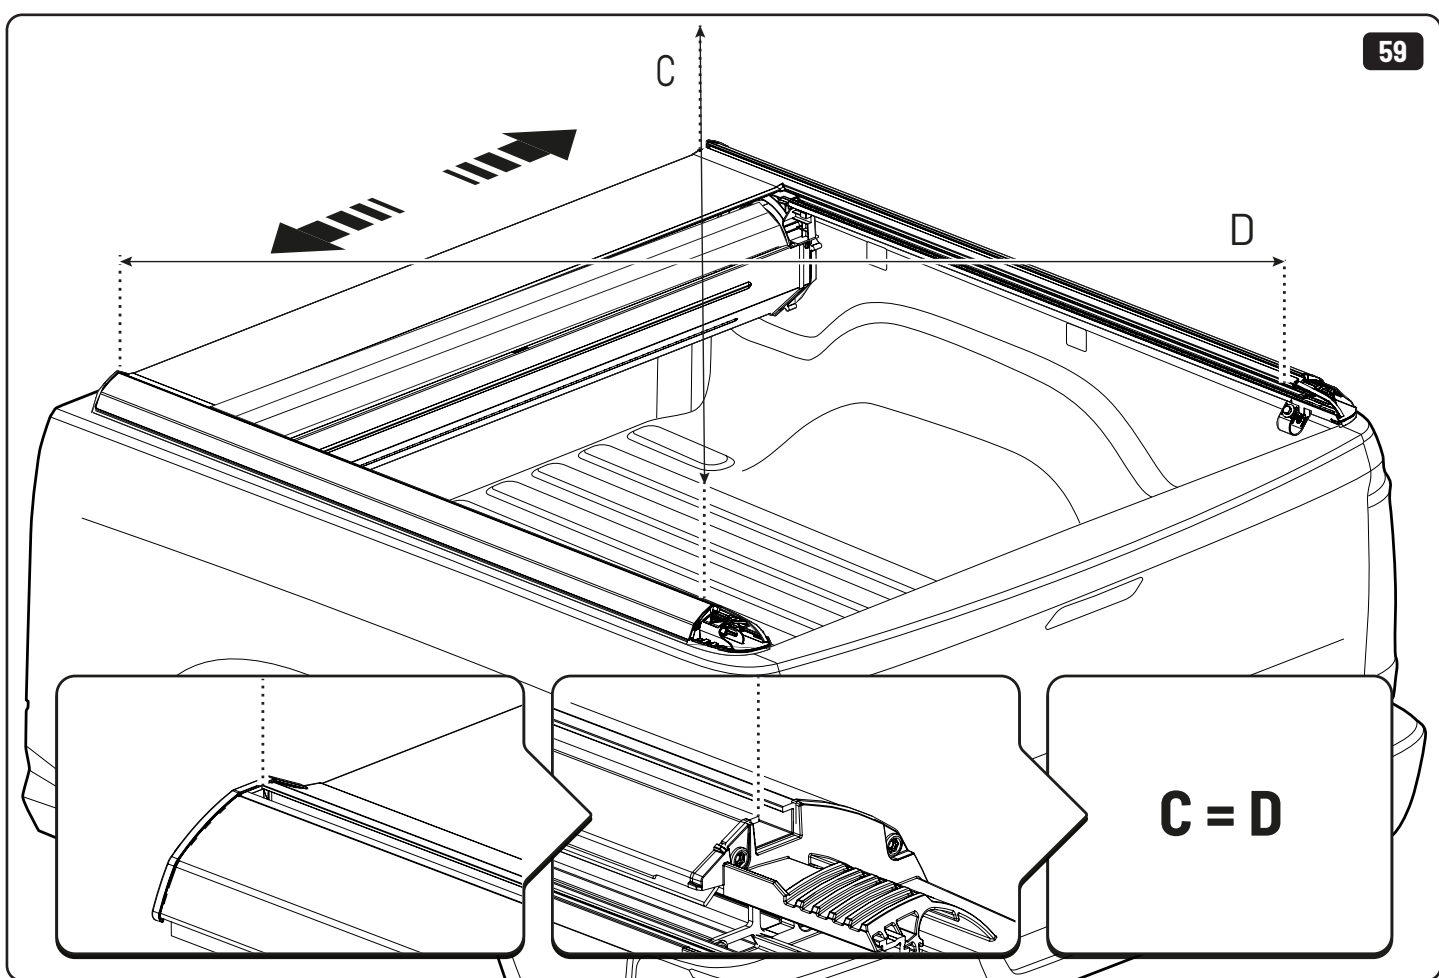
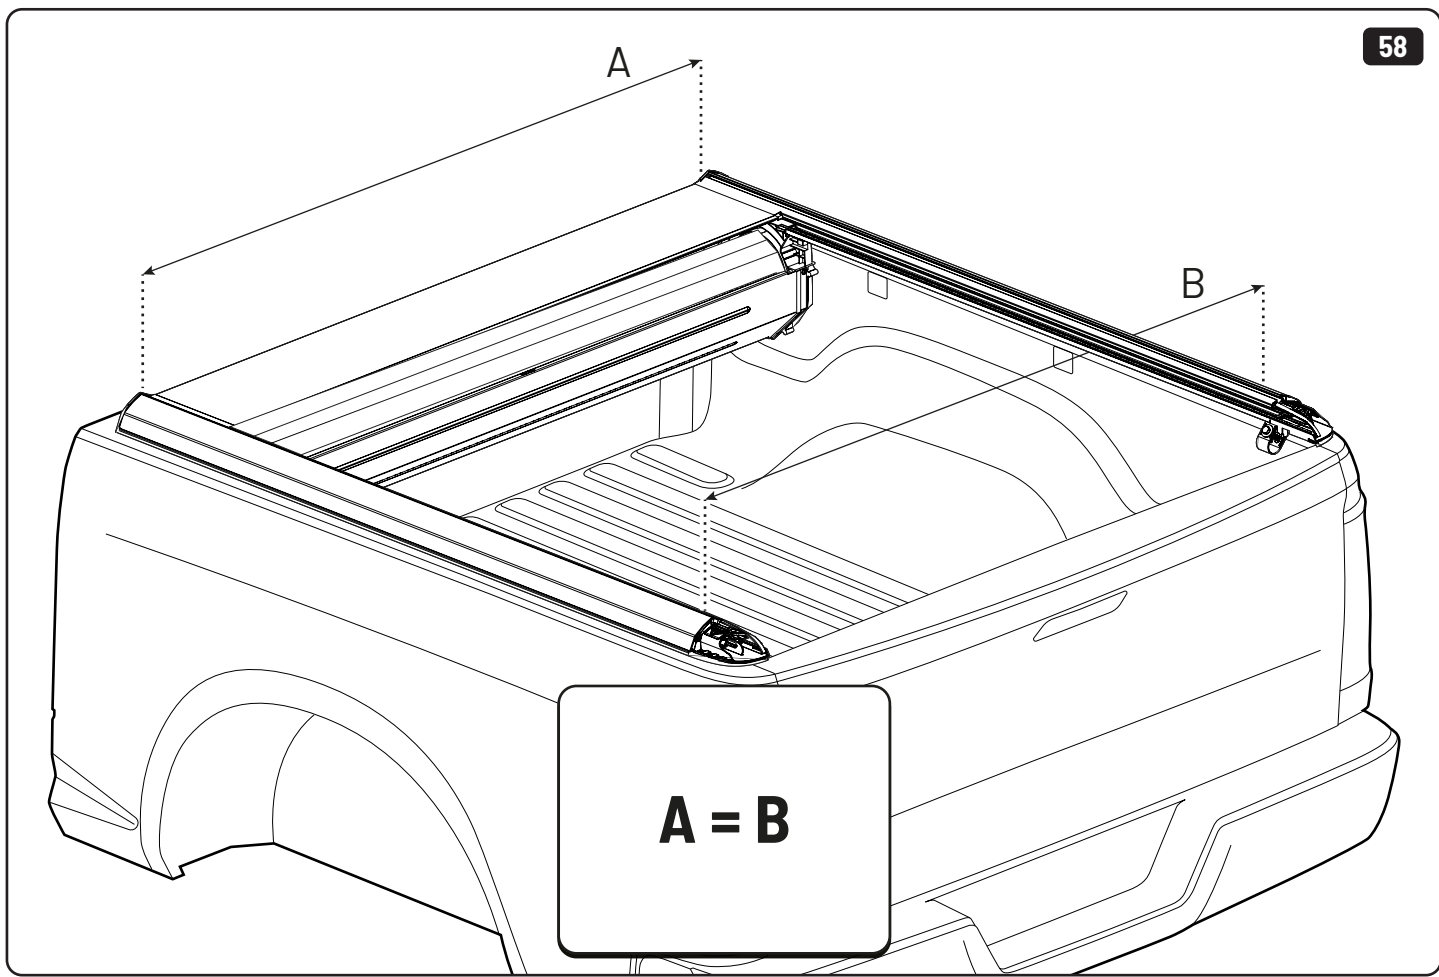



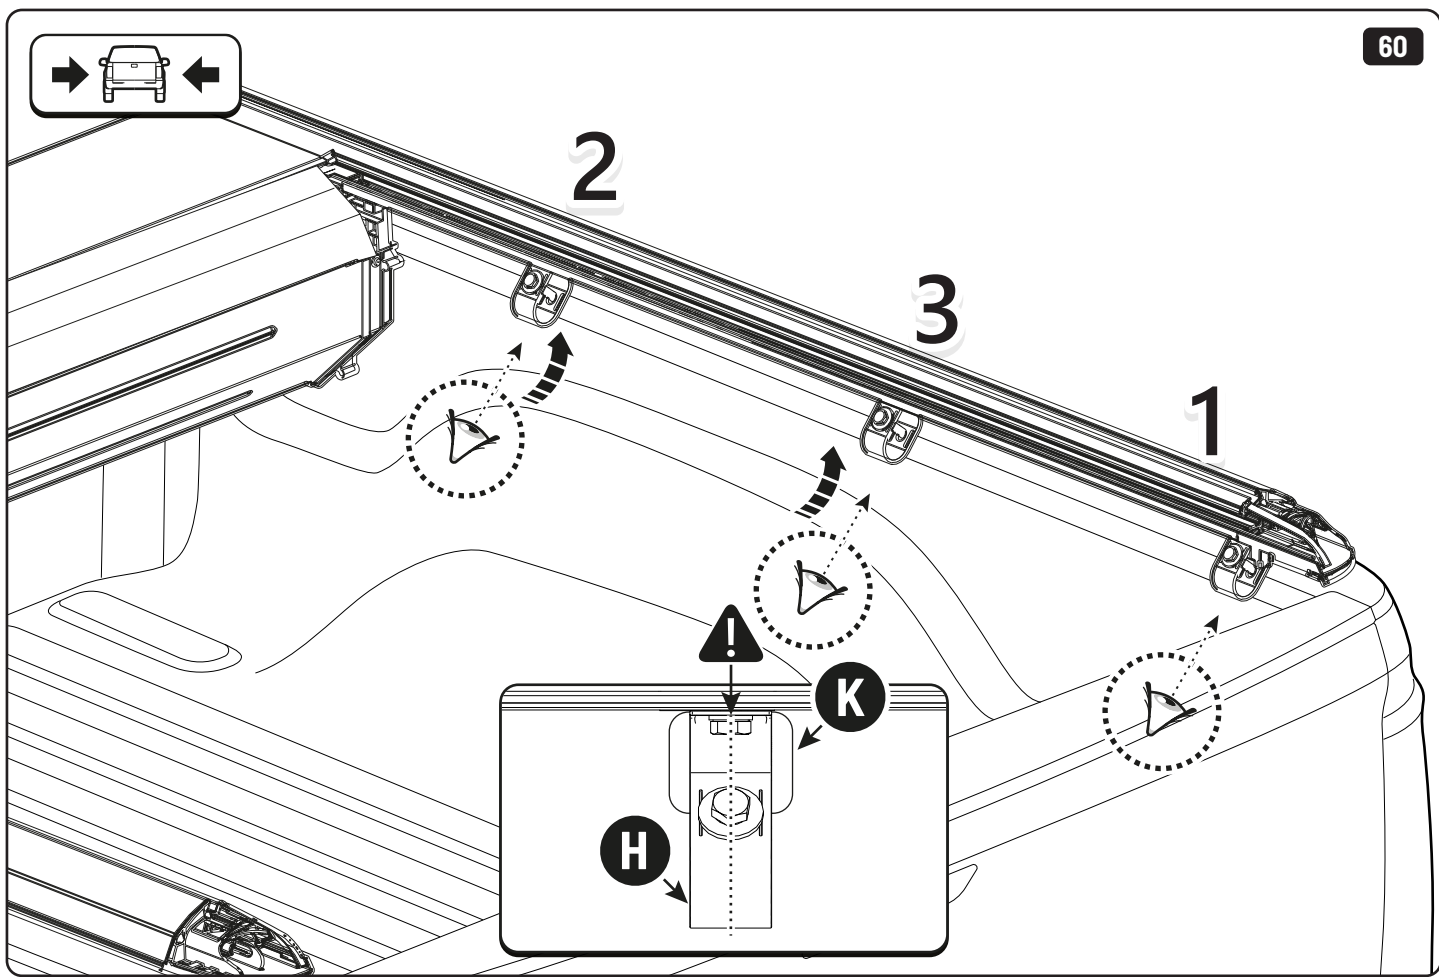




13mm 10Nm


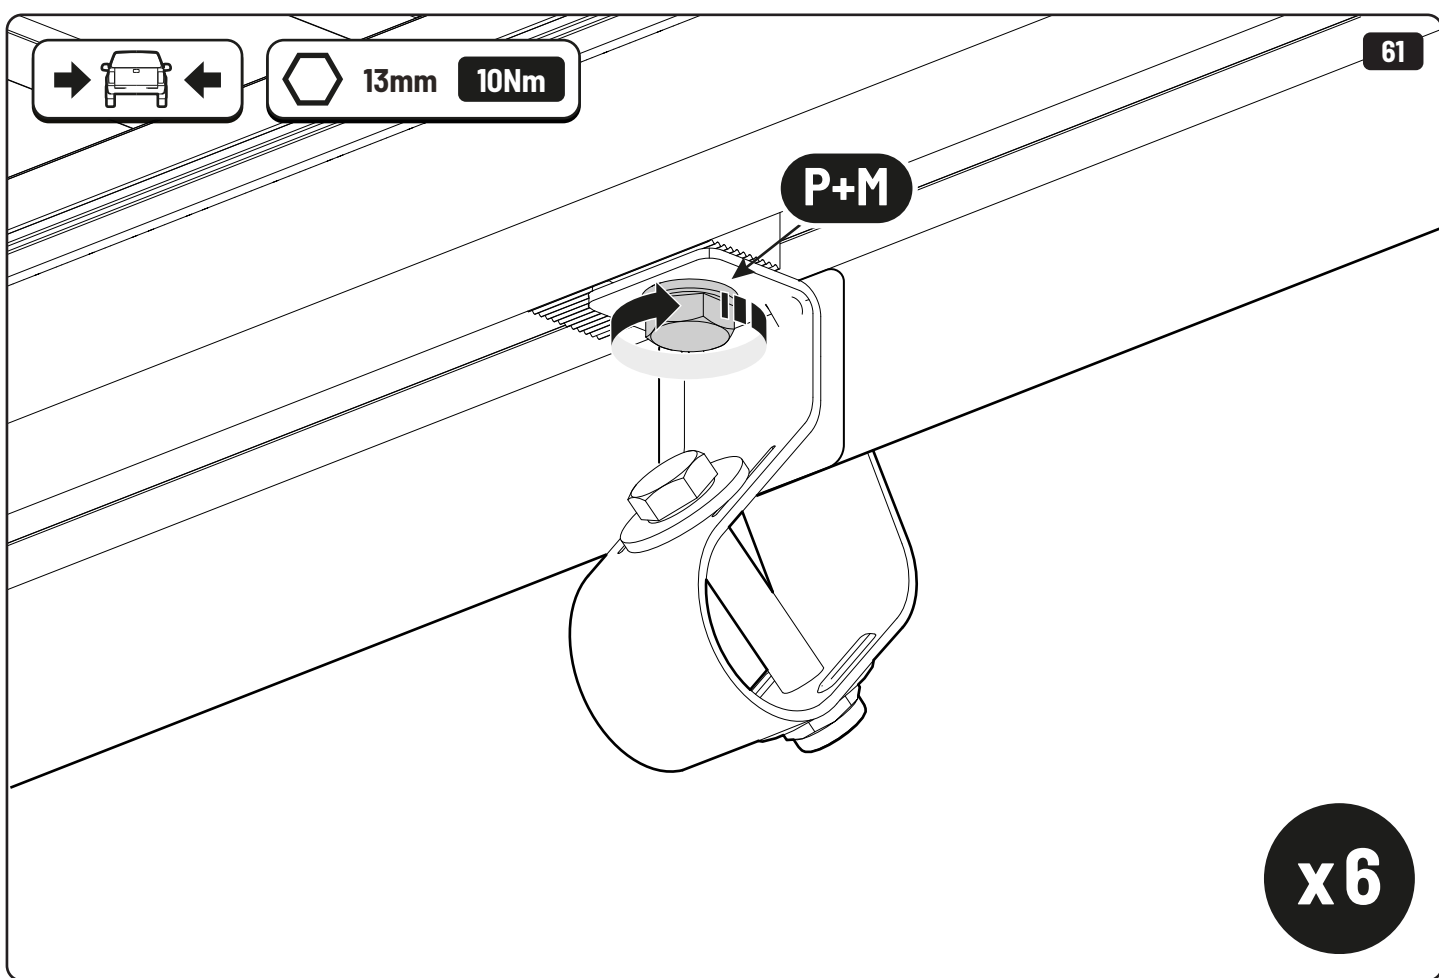





x6

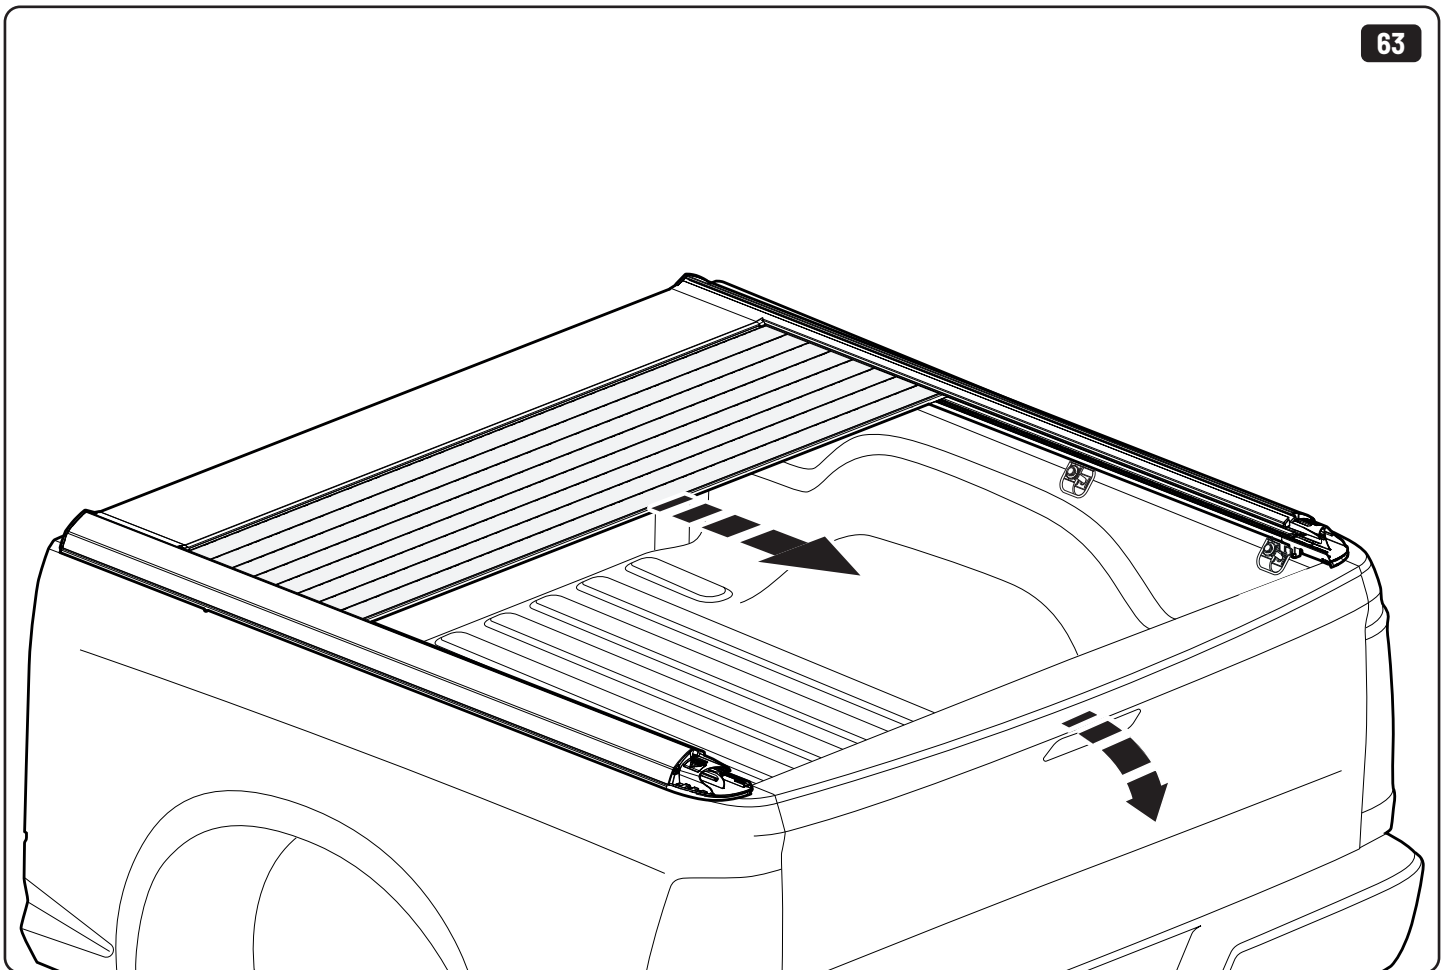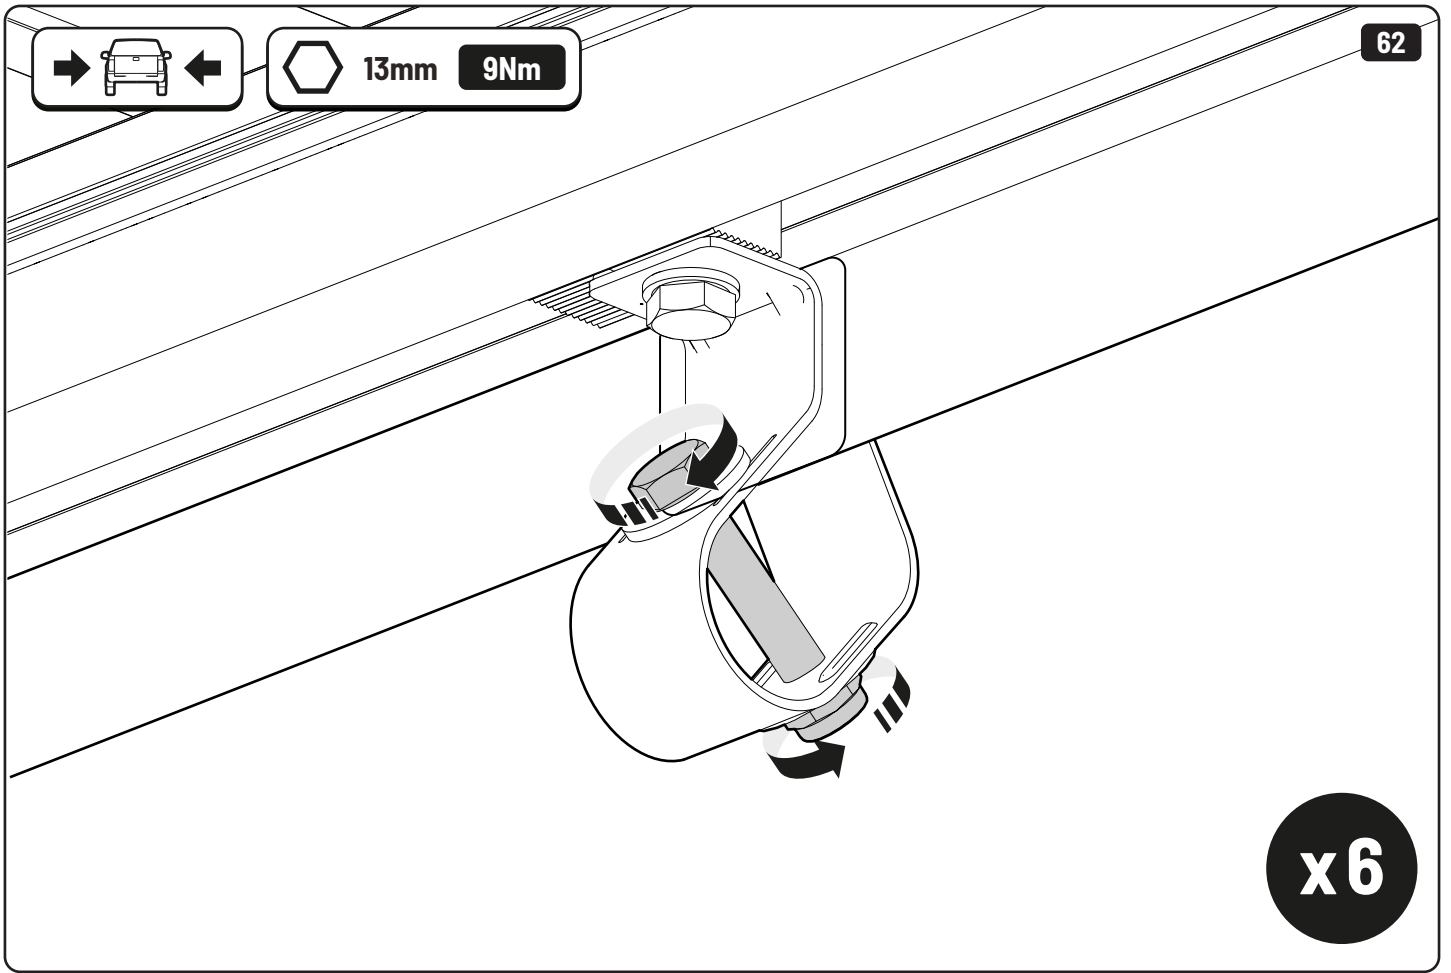


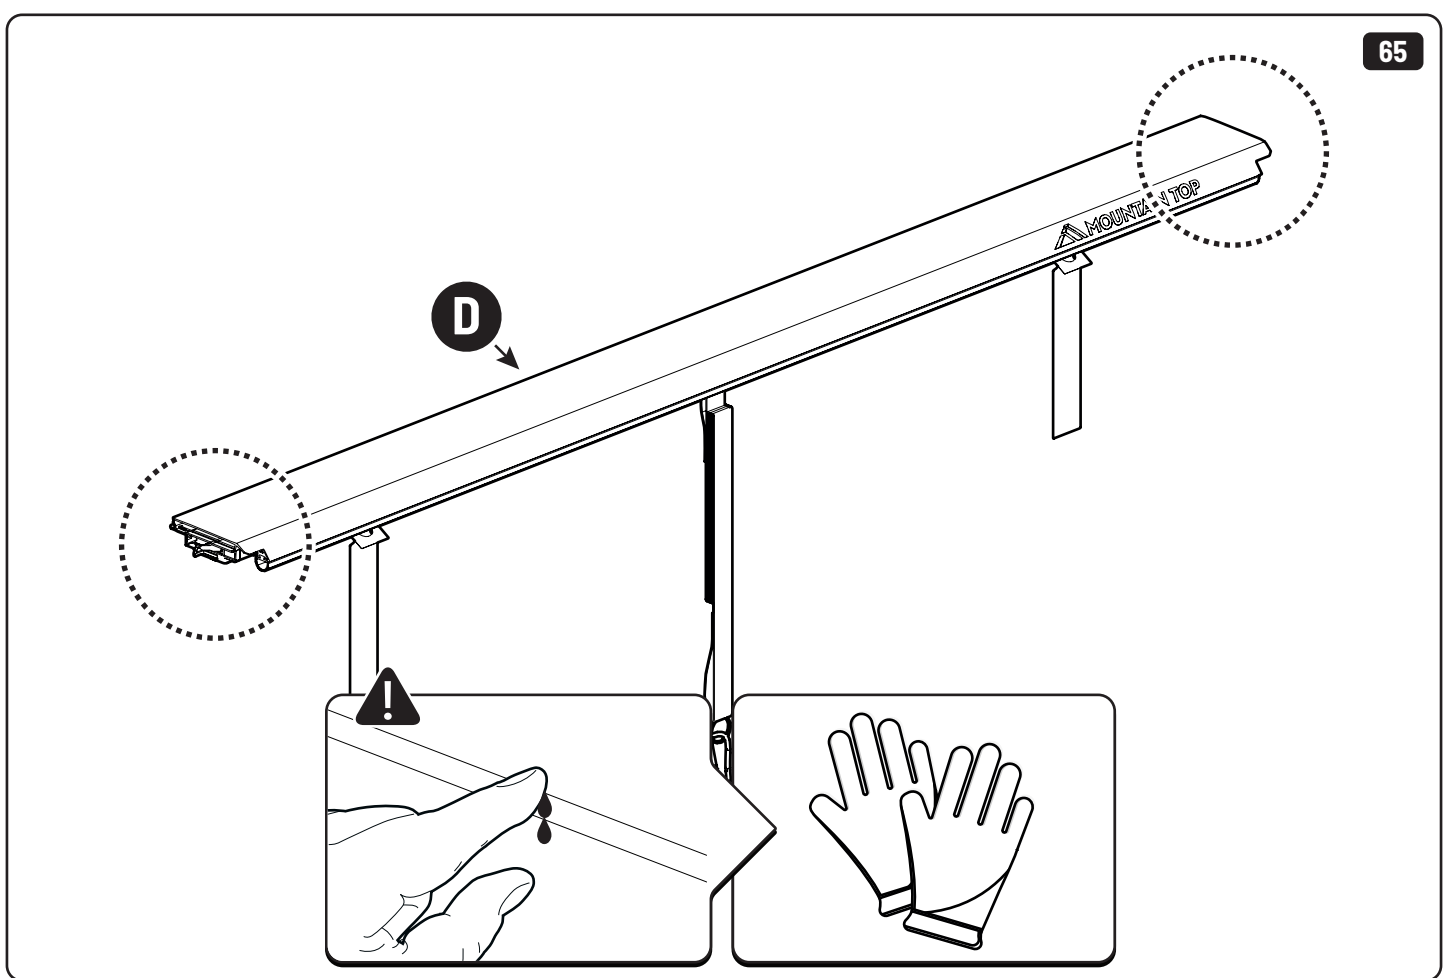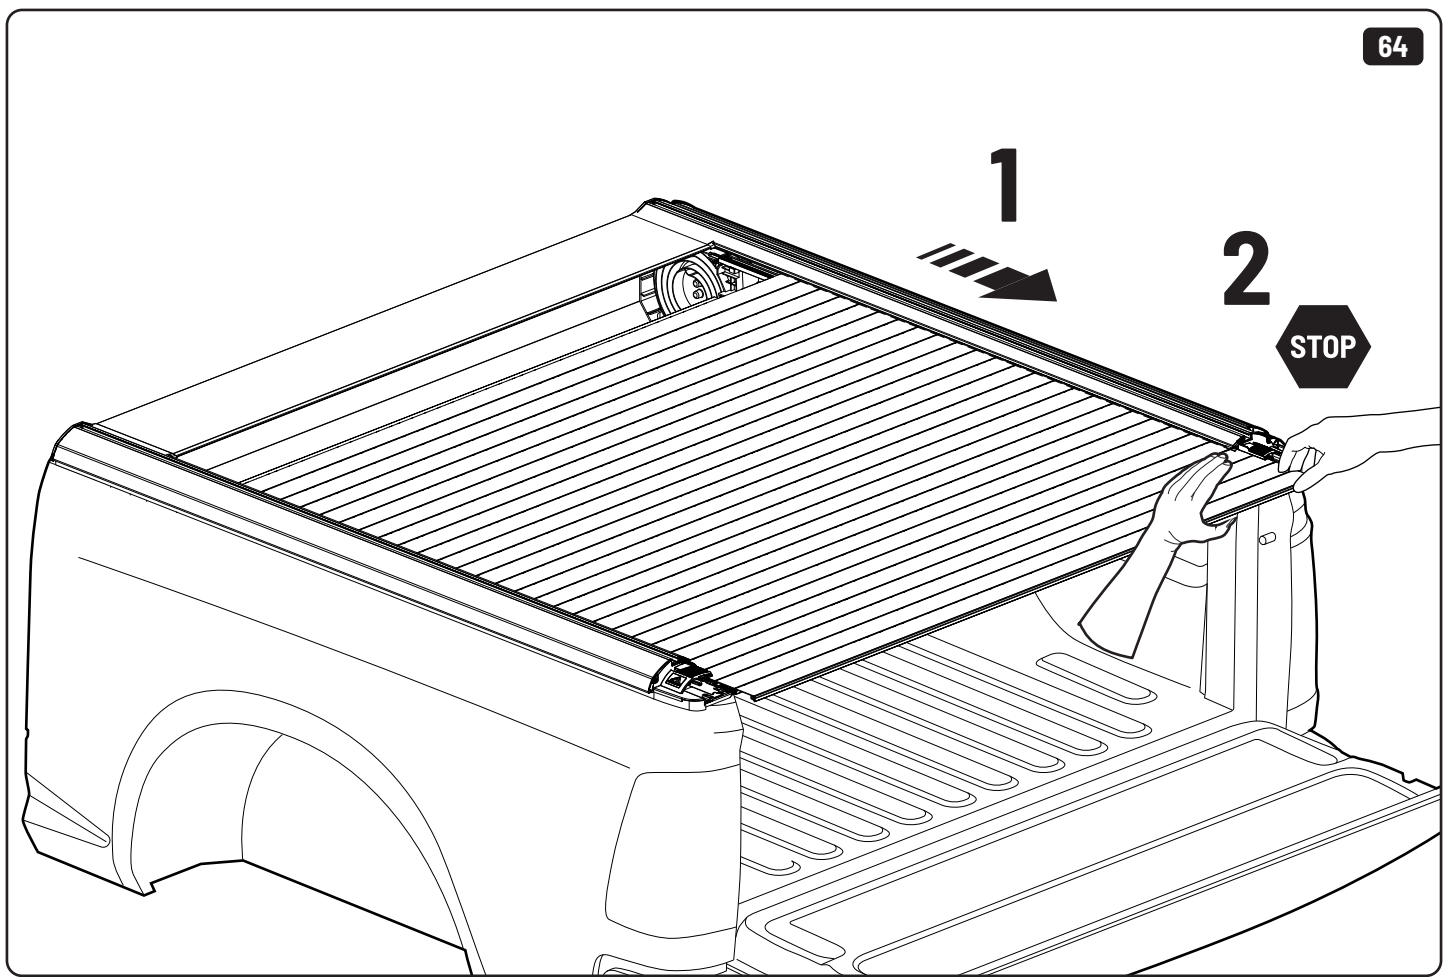


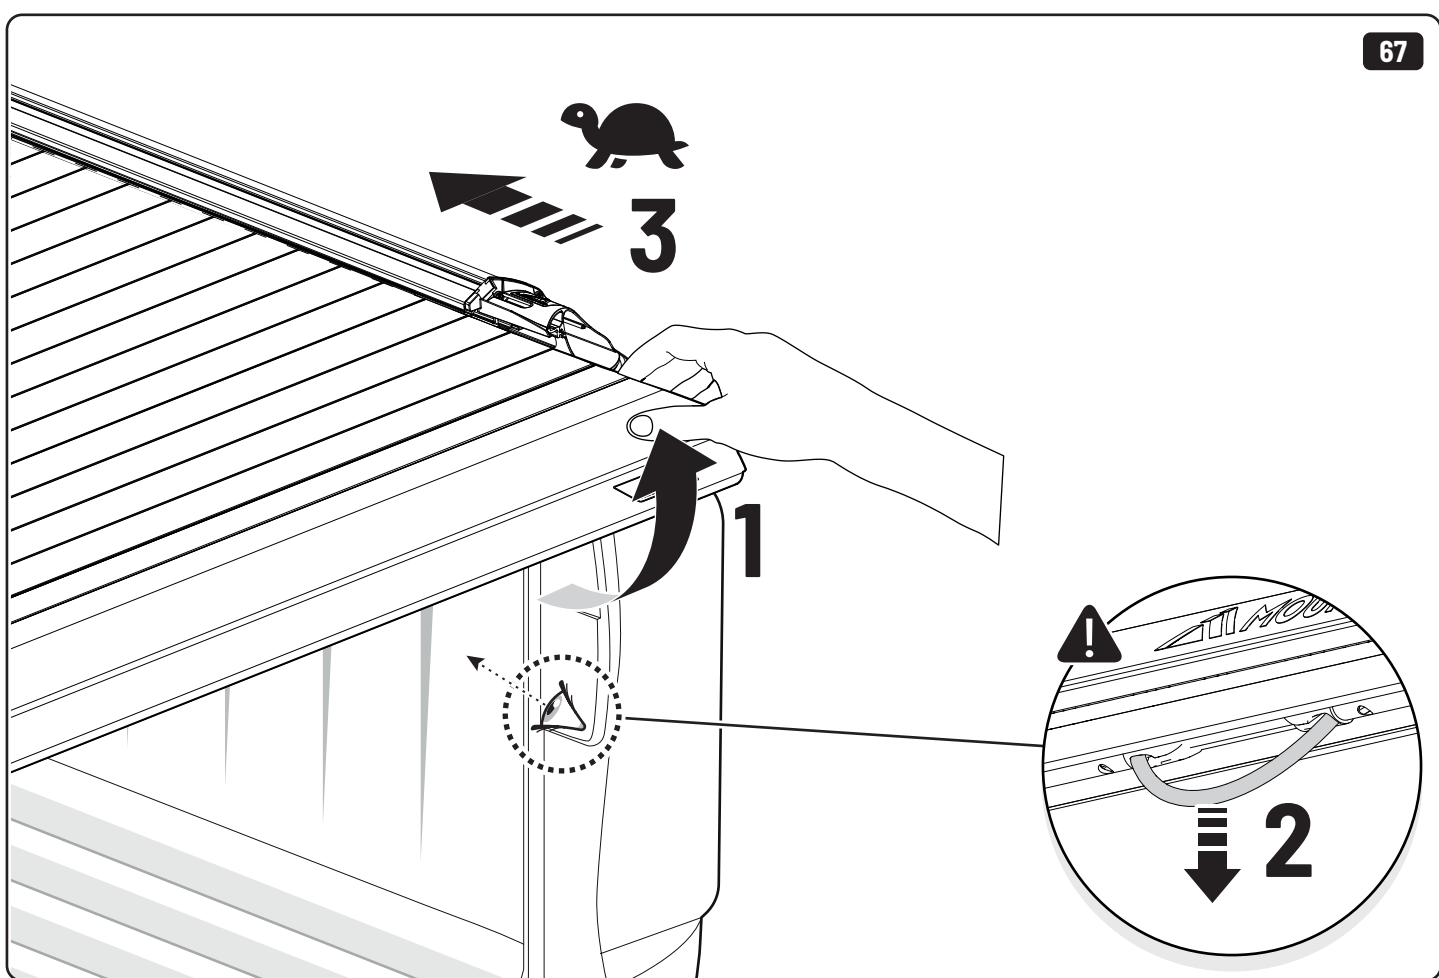
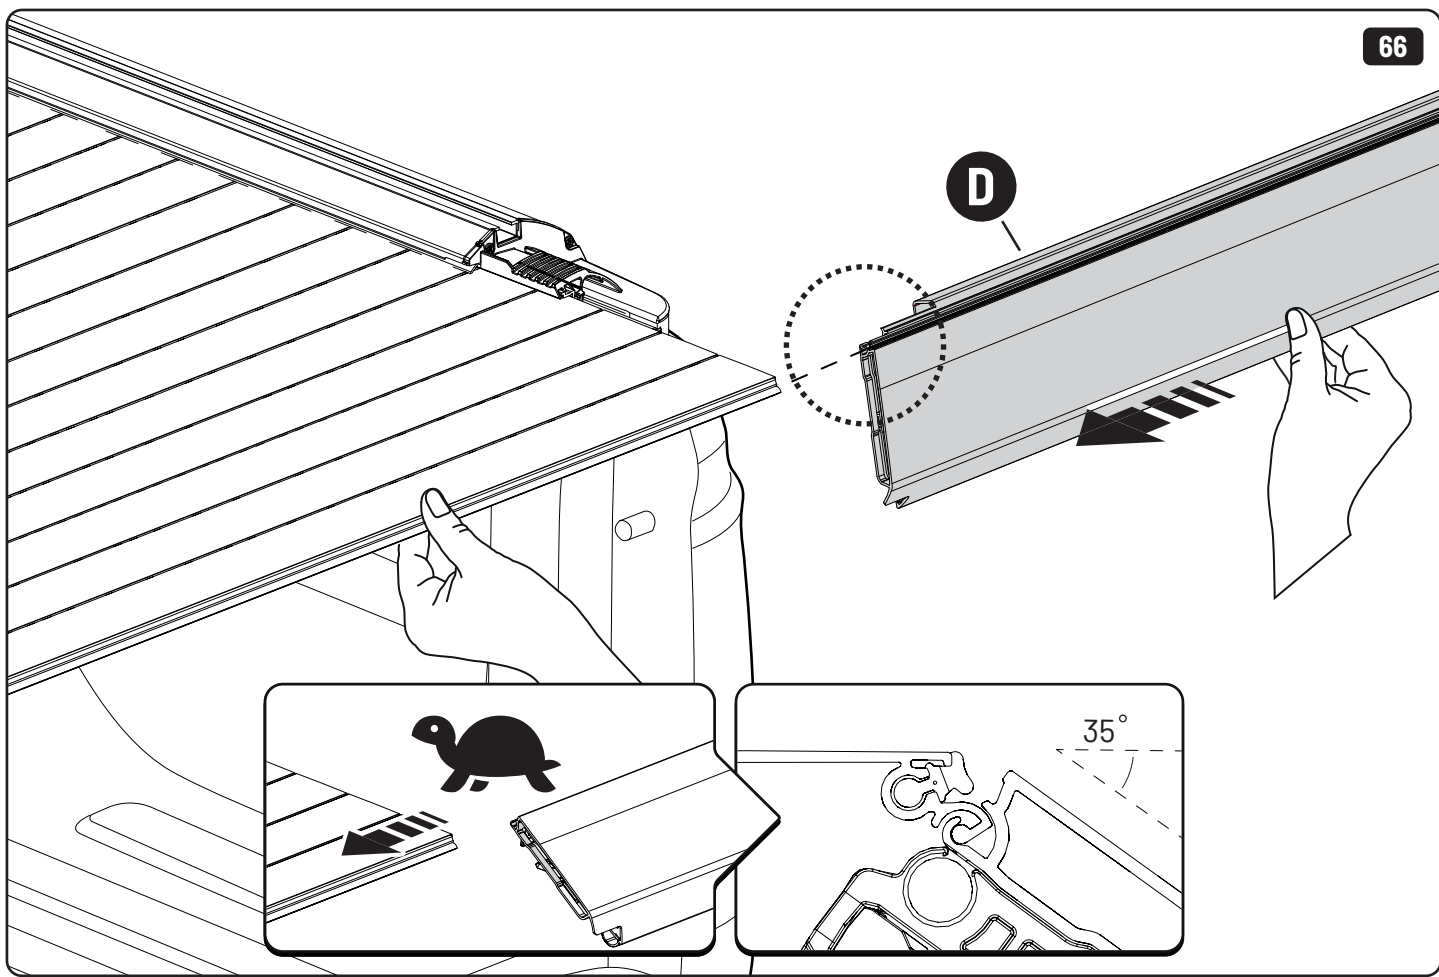


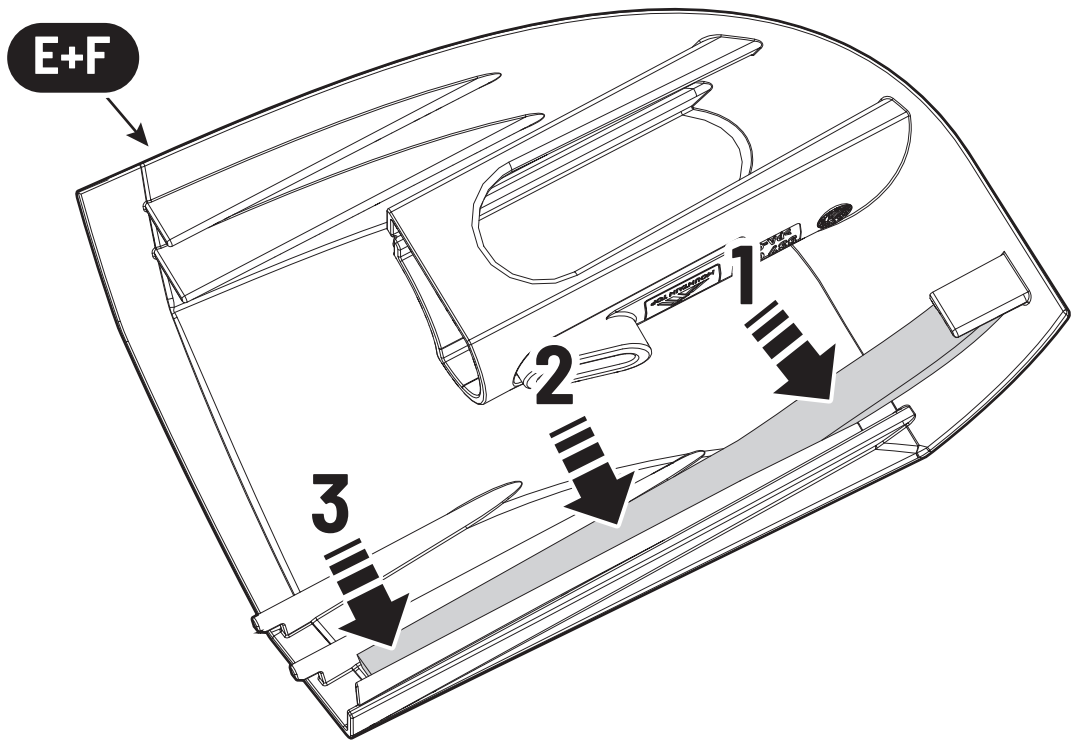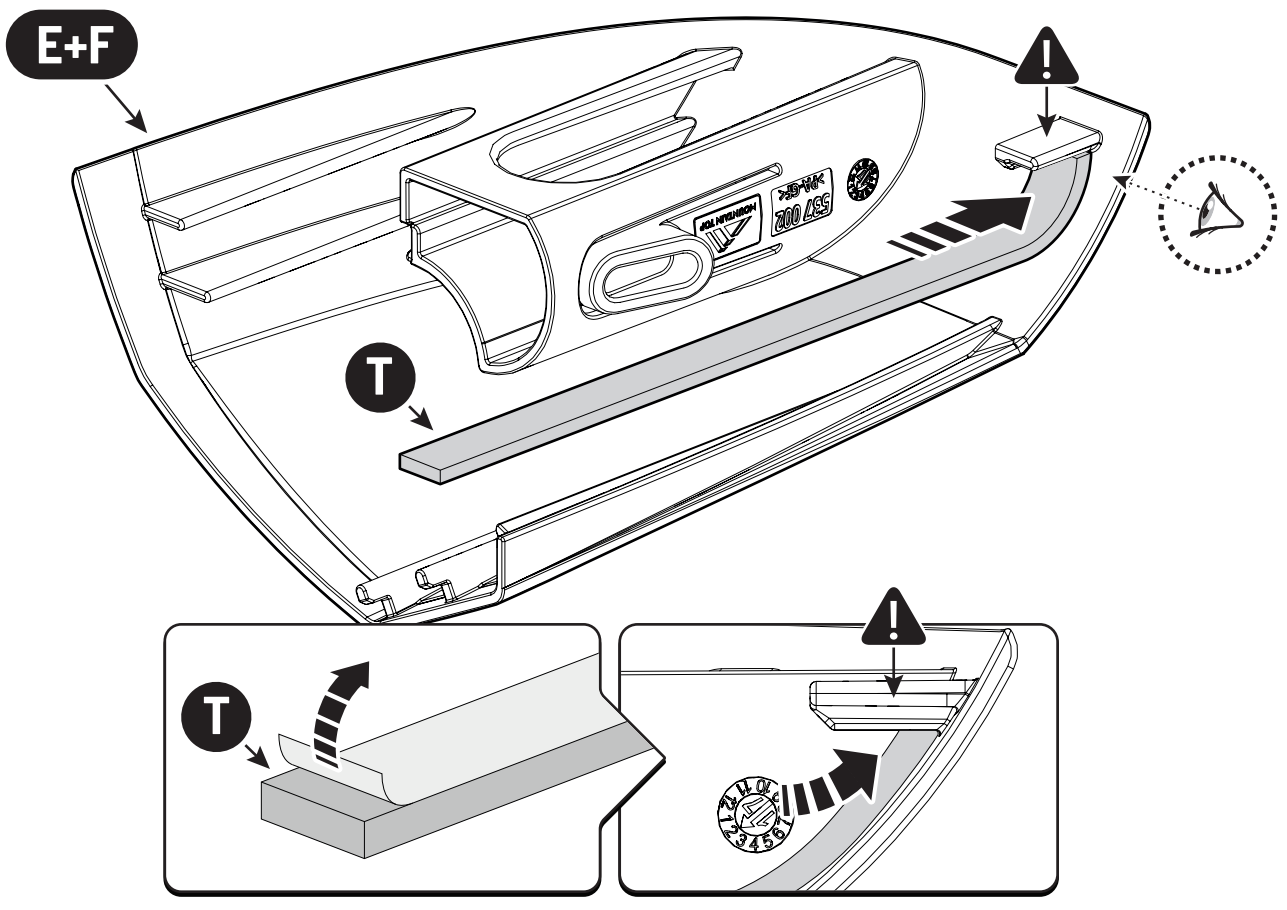


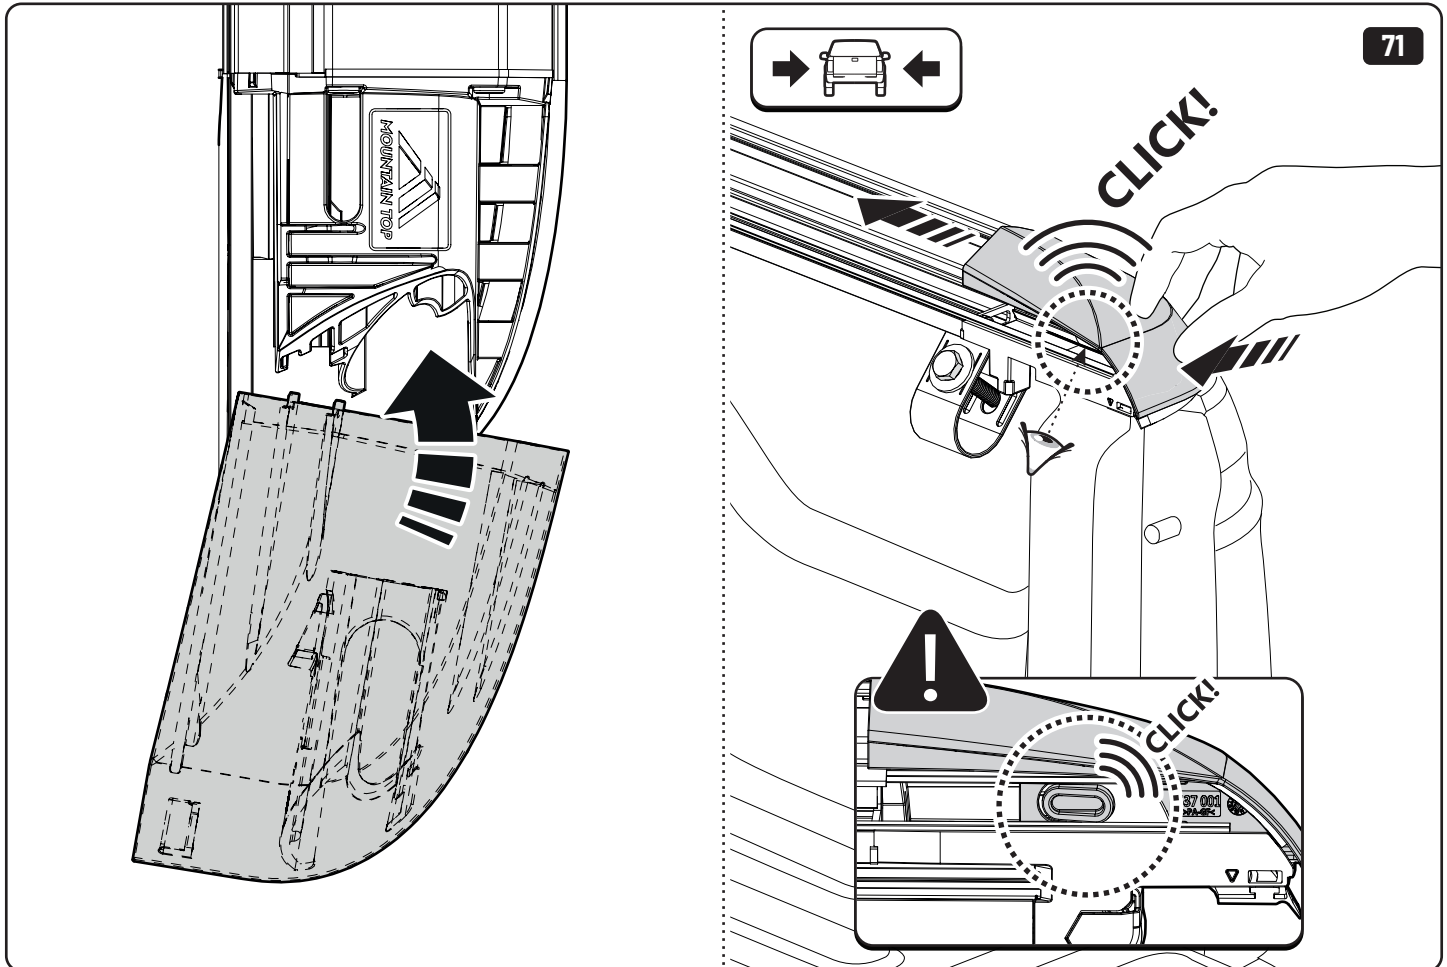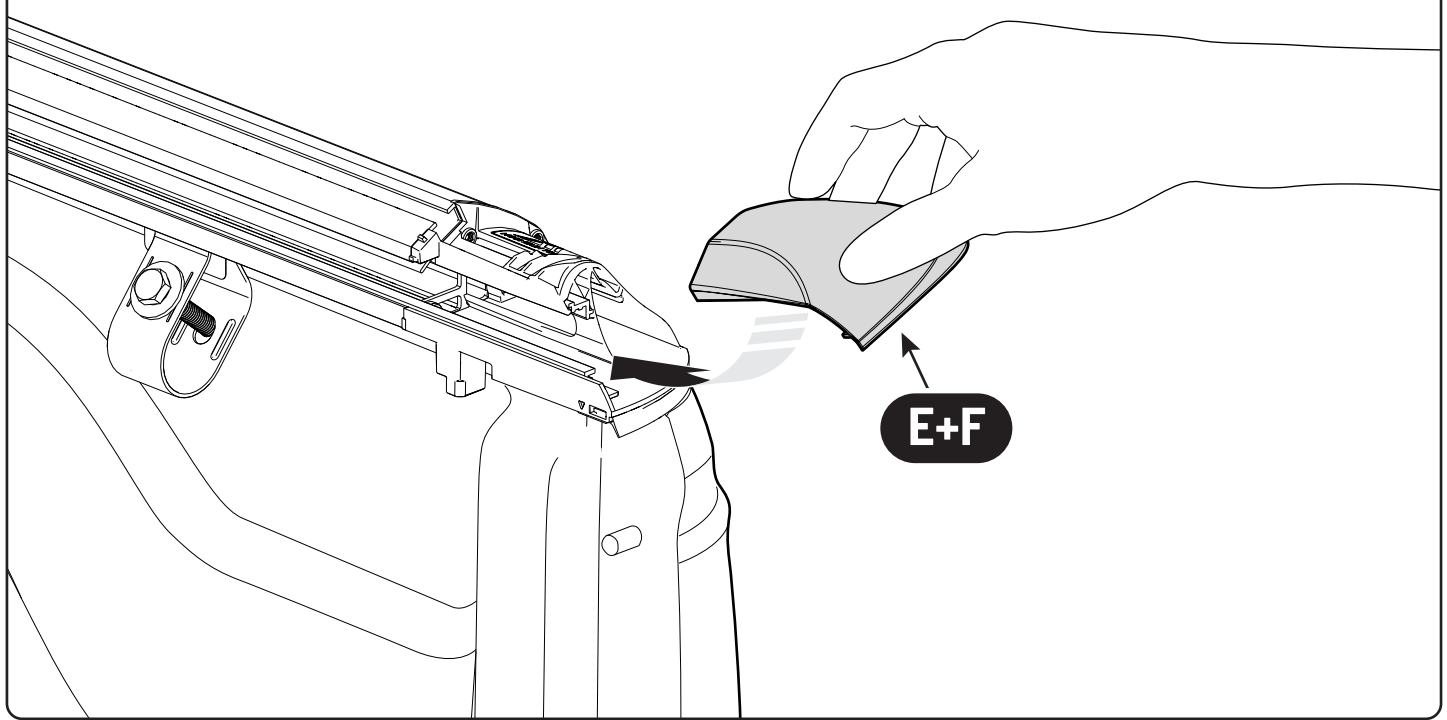

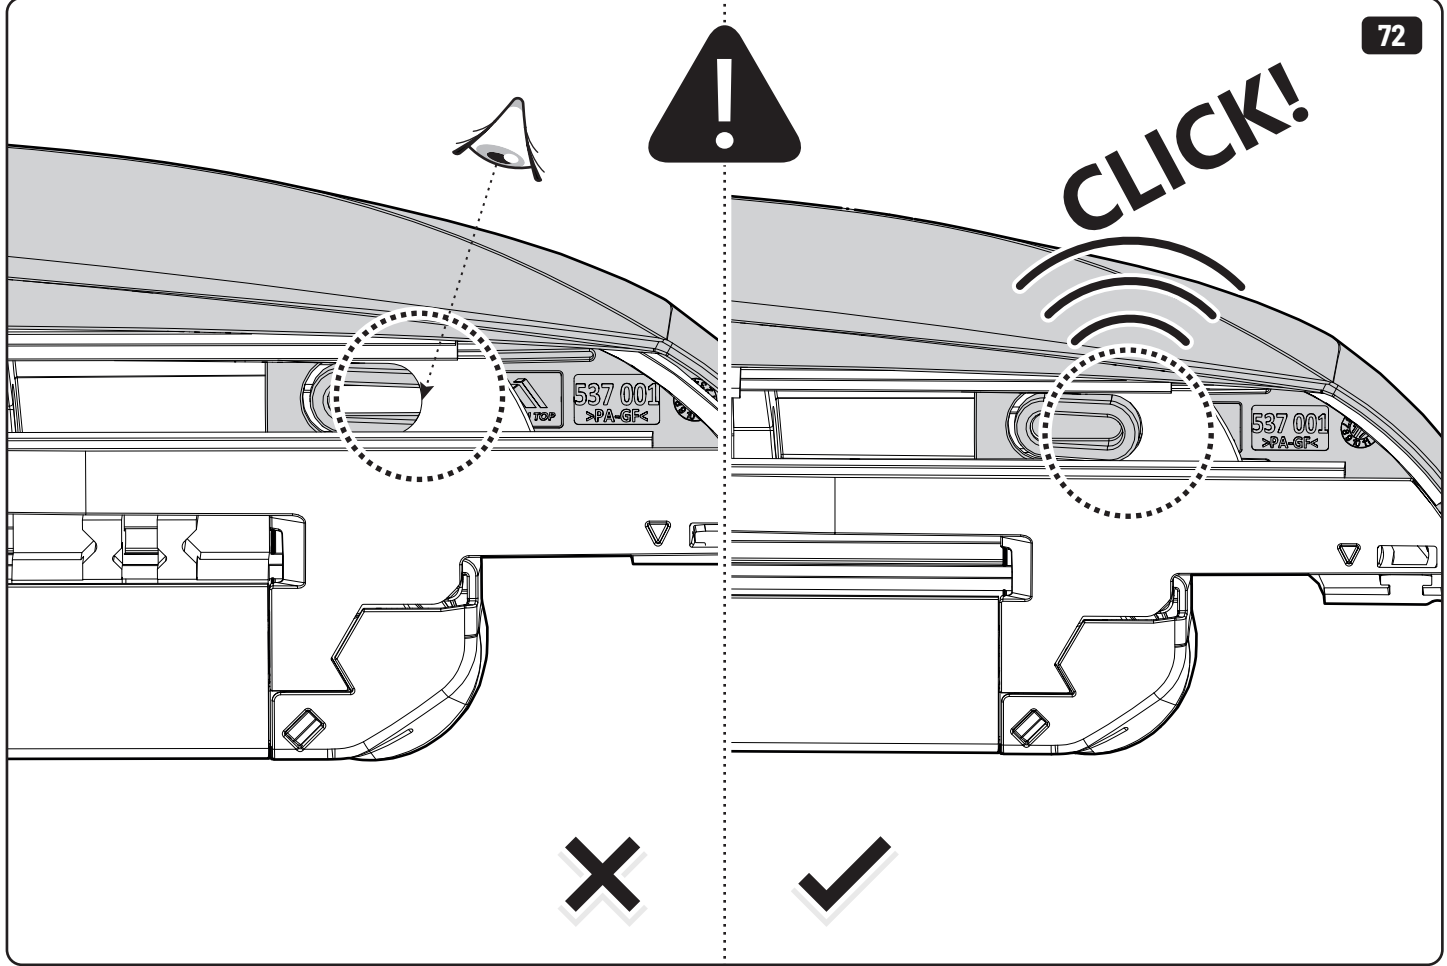

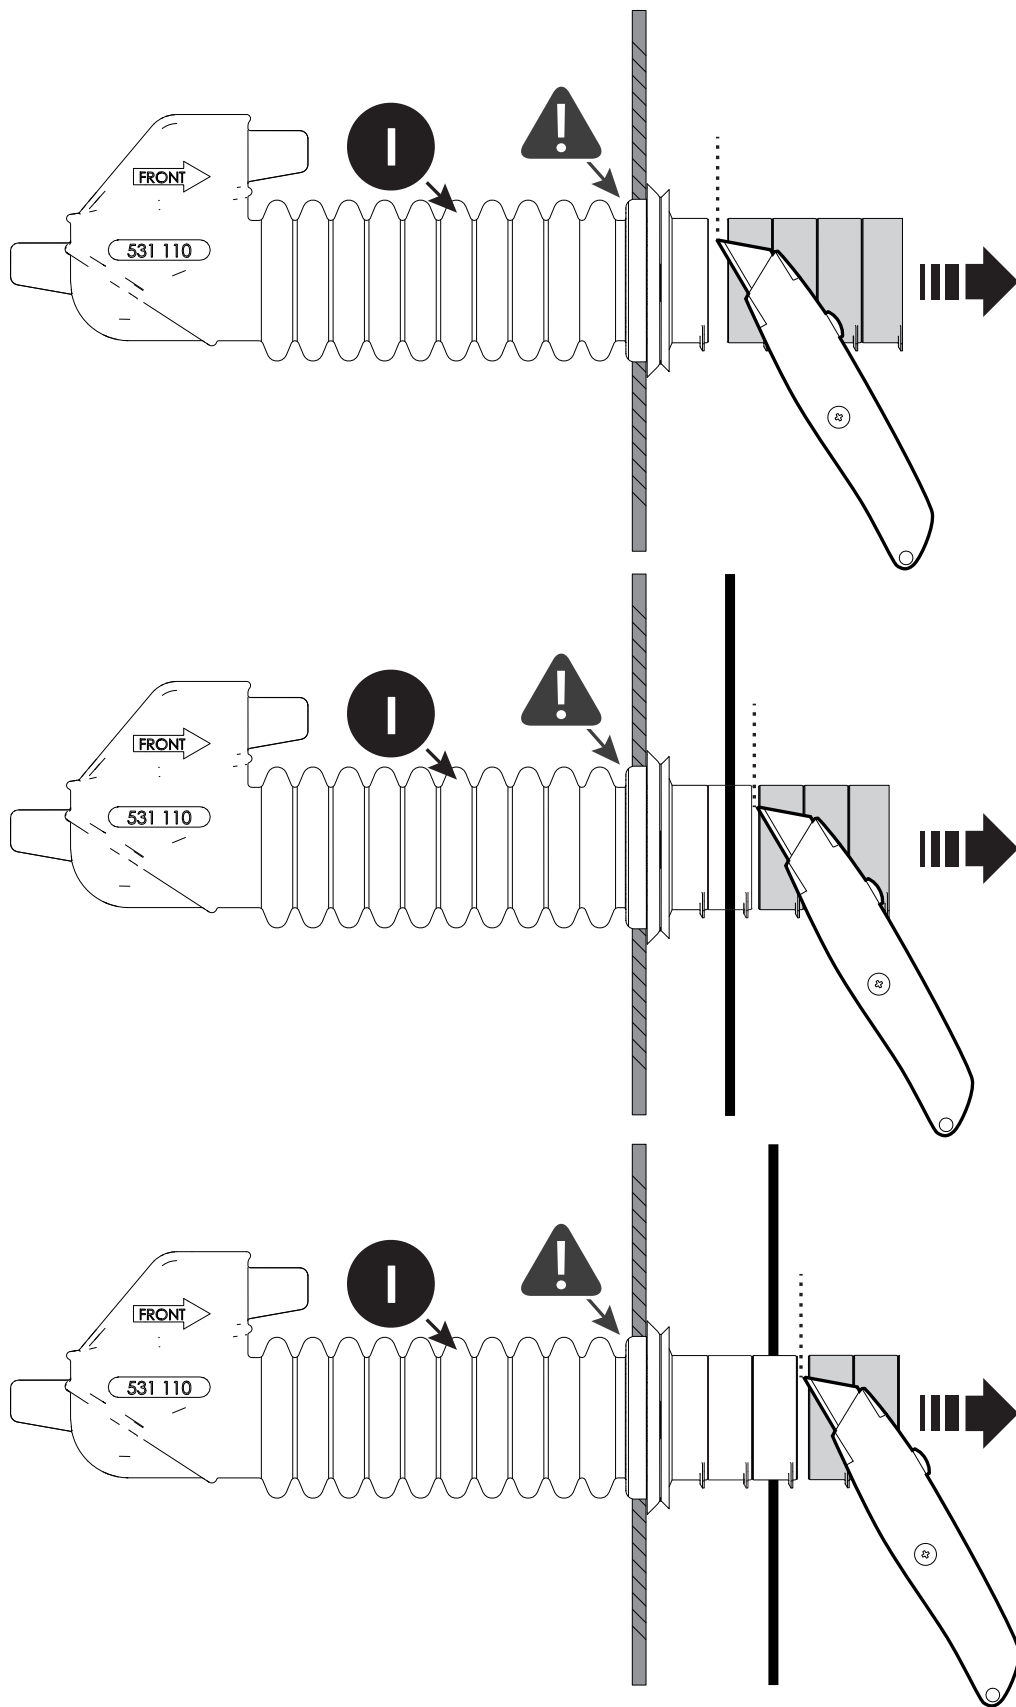

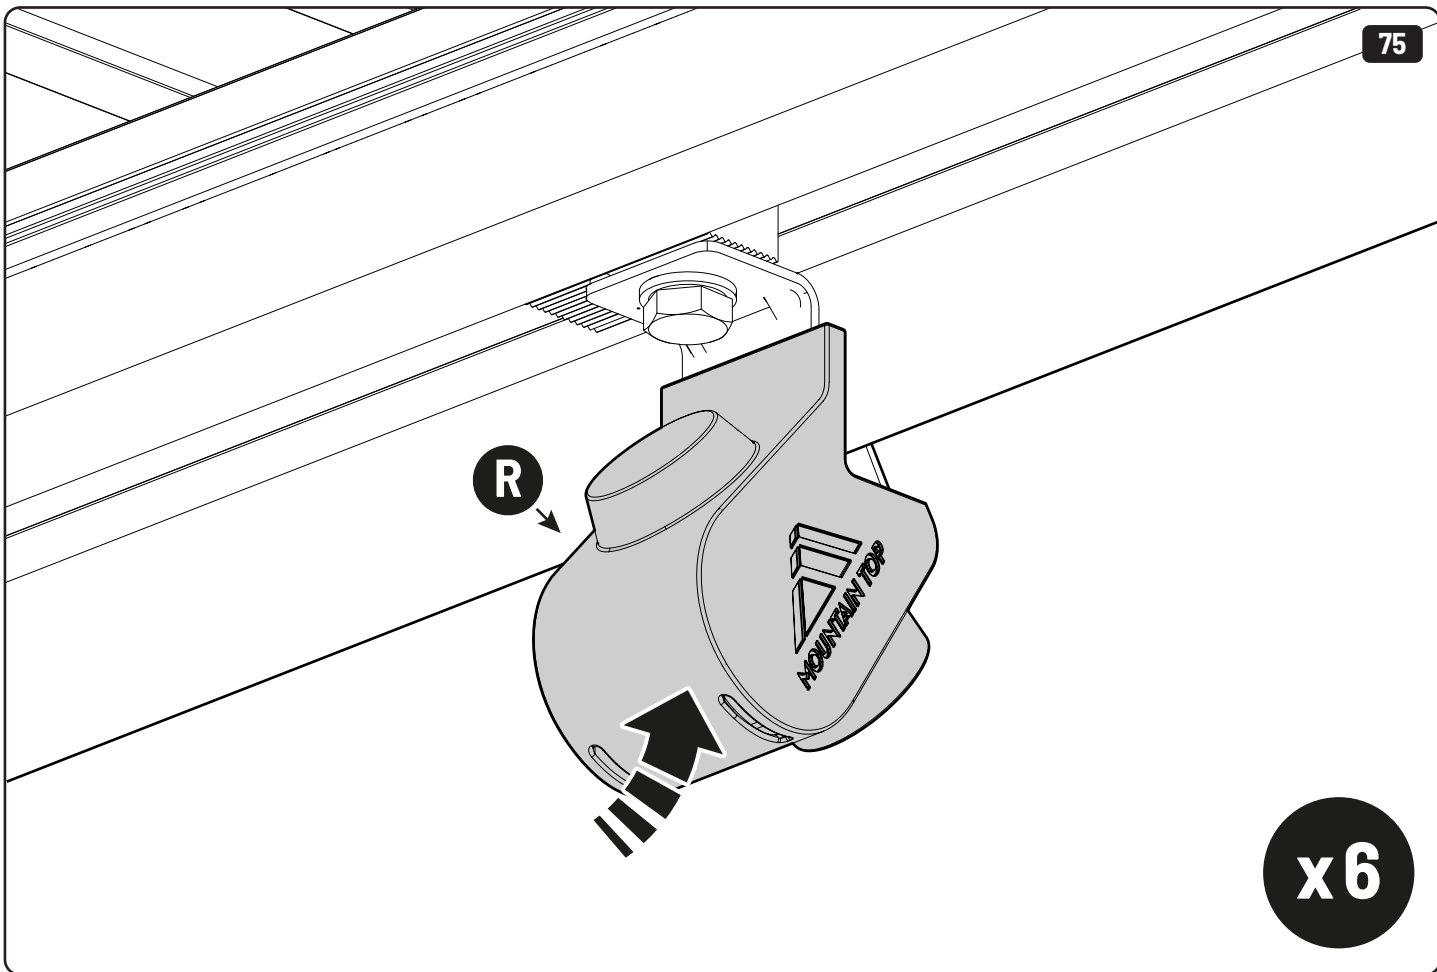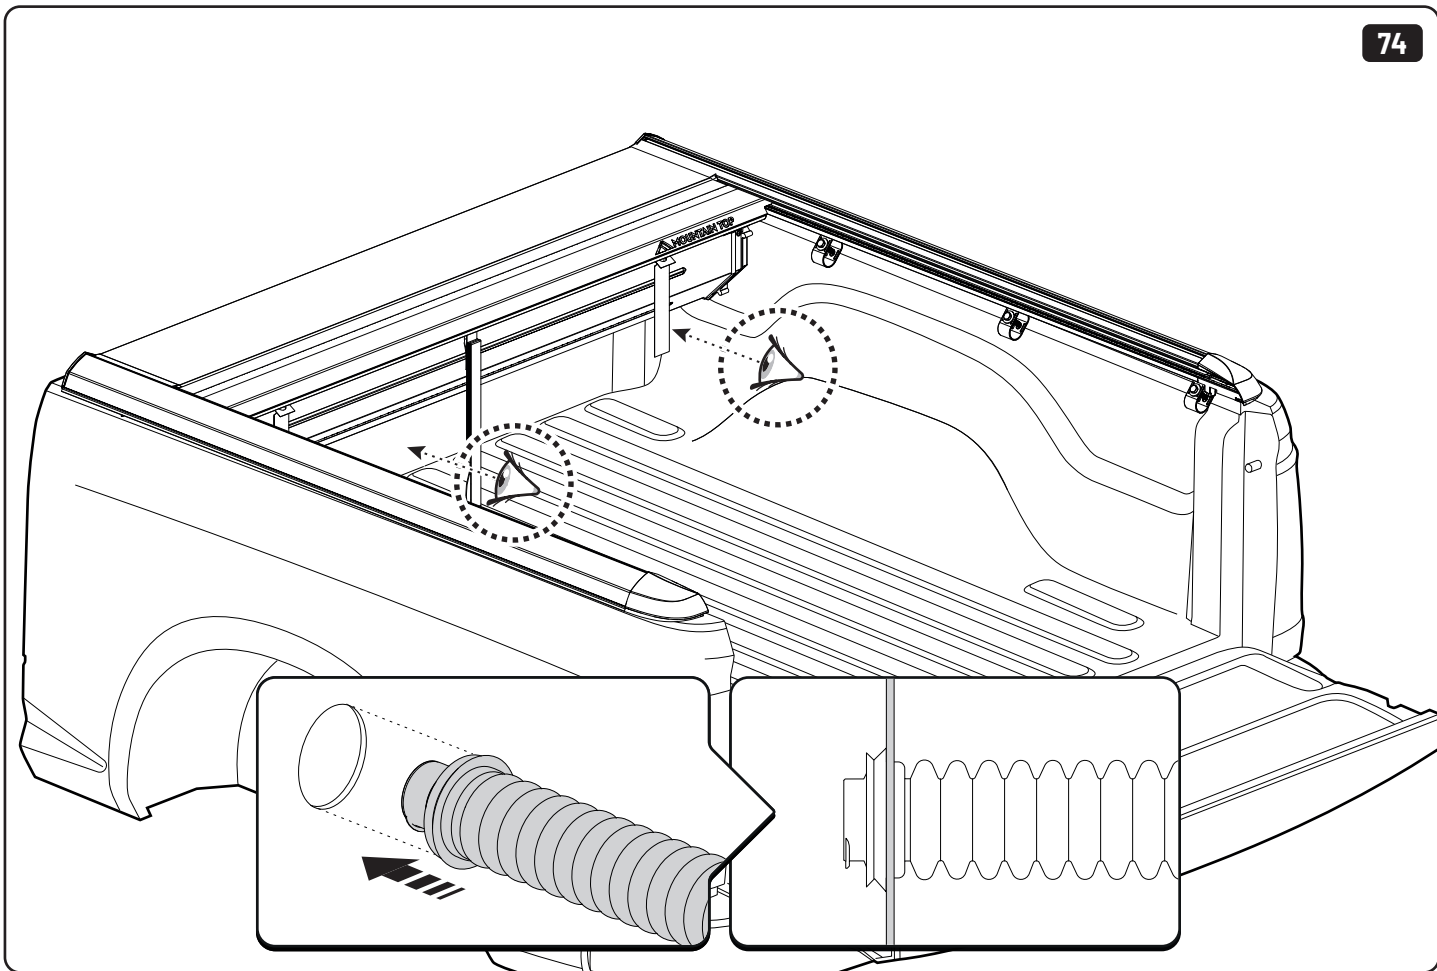

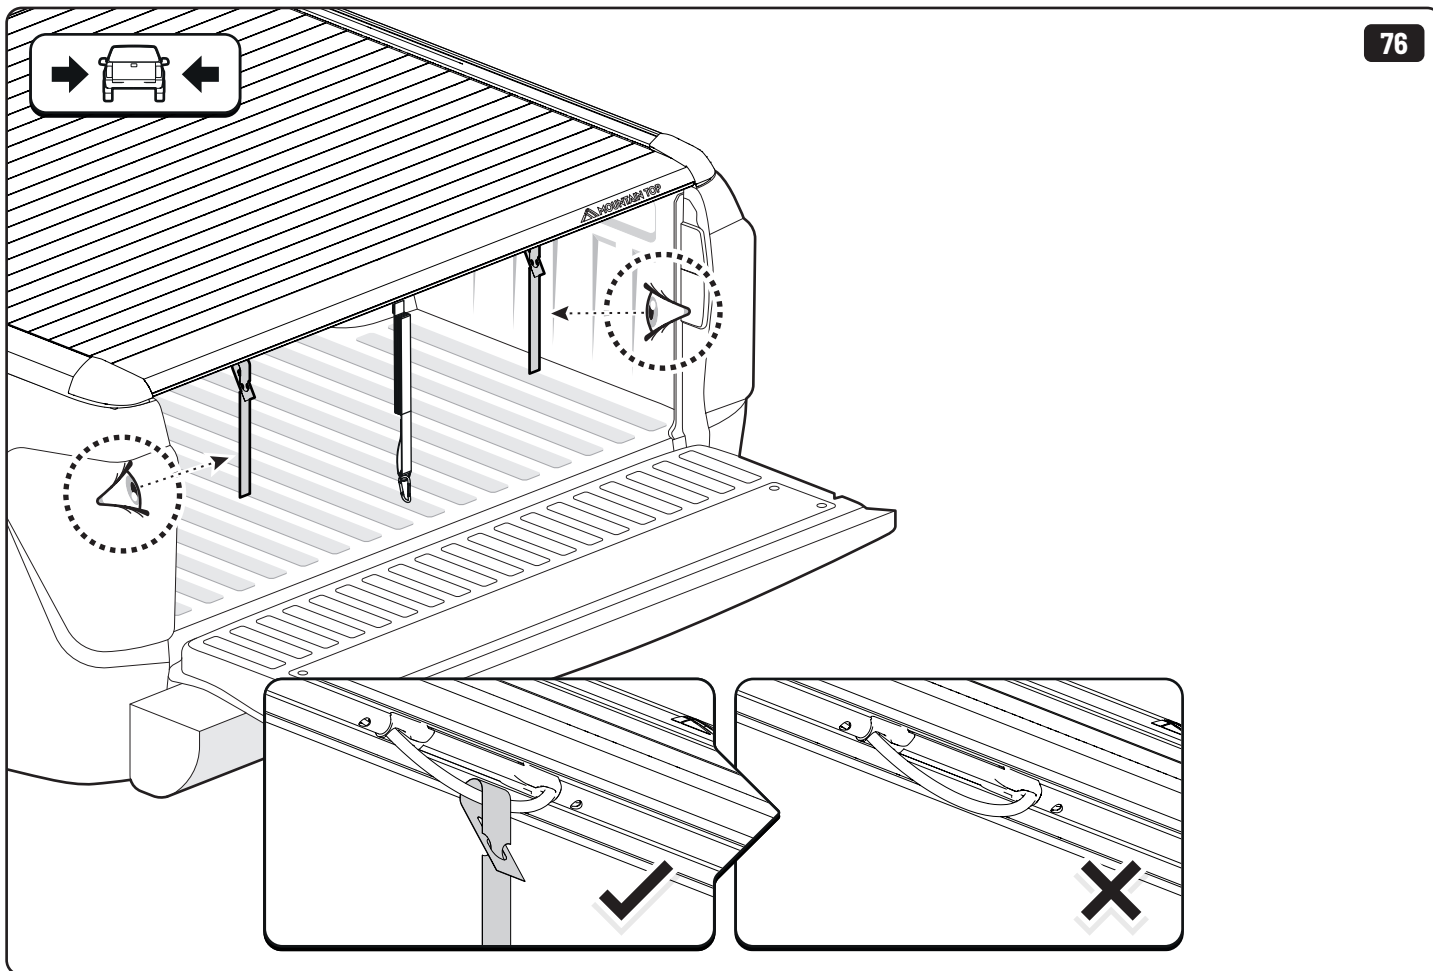



Steps	Page	Done by
Mounting gliding rail in canister	12-13	
Holes for drain	17	
Width + Cross measurement	35	
Tightening the clamp screw	36-37	
Mounting drain	42-43	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab type (s)	Installation time	Weight
EV0m F090 AB02	Ford Ranger/ 2011 ->	Double Cab	1 hour (s)	29 kg
EV0m F091 AB02	Ford Ranger/ 2011 ->	Extra Cab	1 hour (s)	33 kg
EV0m F090 AB02	Ford Raptor/ 2018 ->	Double Cab	1 hour (s)	29 kg
EV0m F091 AB02	Ford Raptor/ 2018 ->	Extra Cab	1 hour (s)	33 kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni di montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare