






MOUNTAIN TOP® EV0m

Installation manual













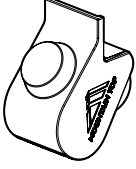
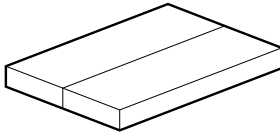

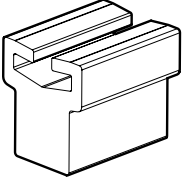






DOWNLOAD PDF


Parts

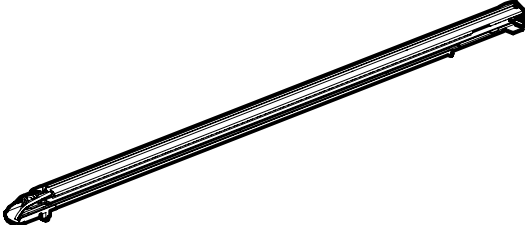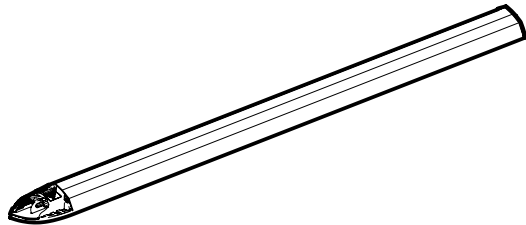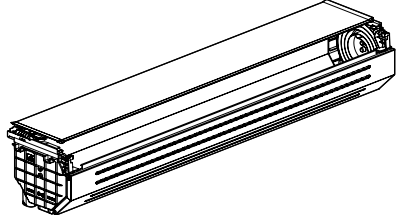
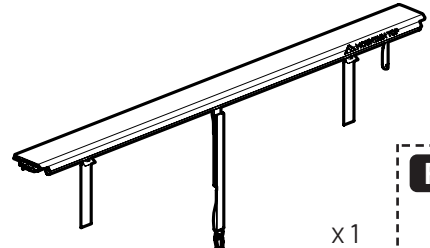
<p>A</p>  <p>x1</p>	<p>B</p>  <p>x1</p>
<p>C</p>  <p>x1</p>	<p>D</p>  <p>x1</p> <div style="border: 1px dashed black; padding: 2px; display: inline-block;"> <p>R2</p>  <p>x1</p> </div>

Kit

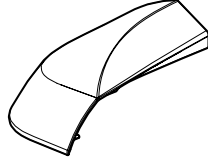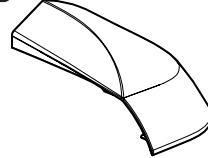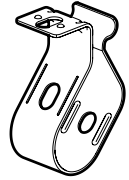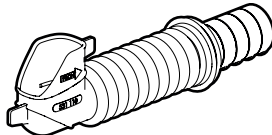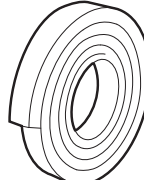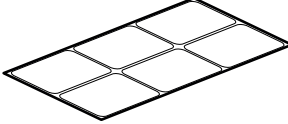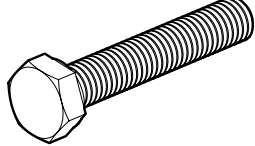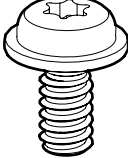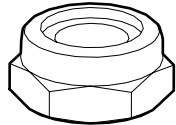
<p>E</p>  <p>LEFT x1</p>	<p>F</p>  <p>RIGHT x1</p>	<p>G</p>  <p>x12</p>	<p>H</p>  <p>x6</p>
<p>I</p>  <p>x2</p>	<p>J</p>  <p>x1</p>	<p>K</p>  <p>x1</p>	<p>L</p>  <p>x6</p>
<p>M</p>  <p>x6</p>	<p>N</p>  <p>x4</p>	<p>O</p>  <p>x6</p>	<p>P</p>  <p>x6</p>
<p>R</p>  <p>x6</p>	<p>S</p>  <p>x1</p>	<p>T</p>  <p>x2</p>	<p>U</p>  <p>x4</p>

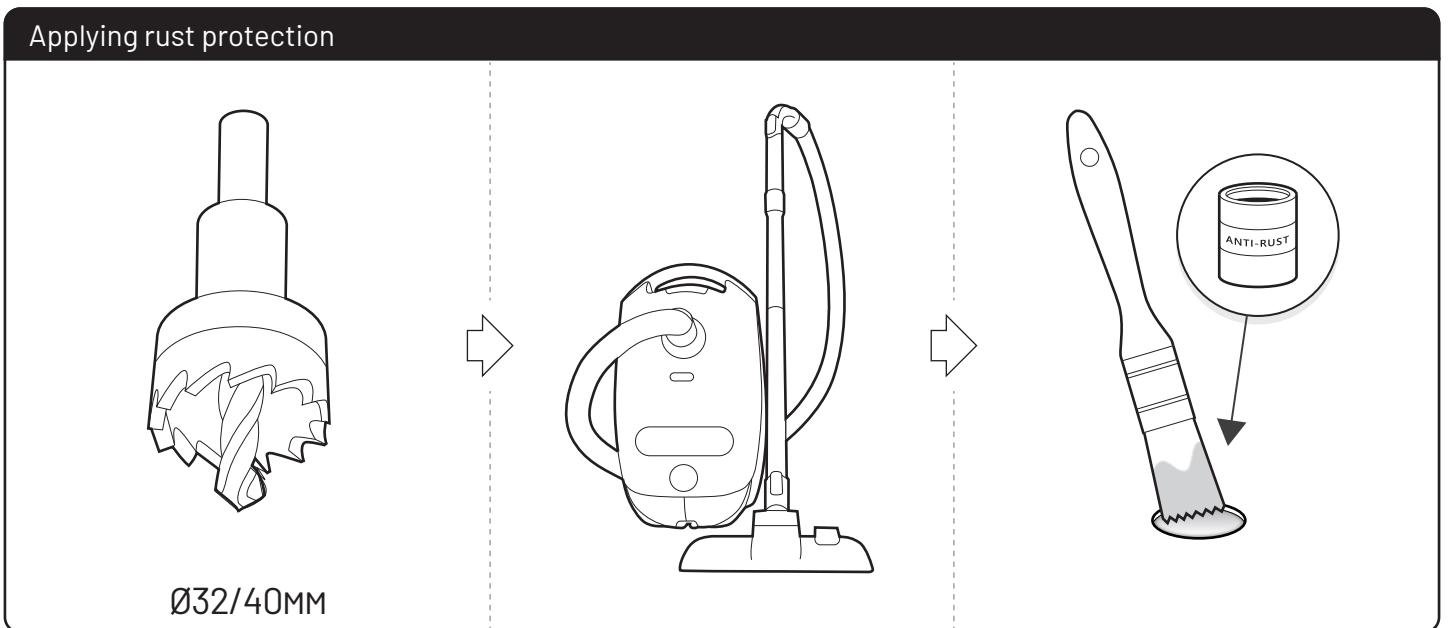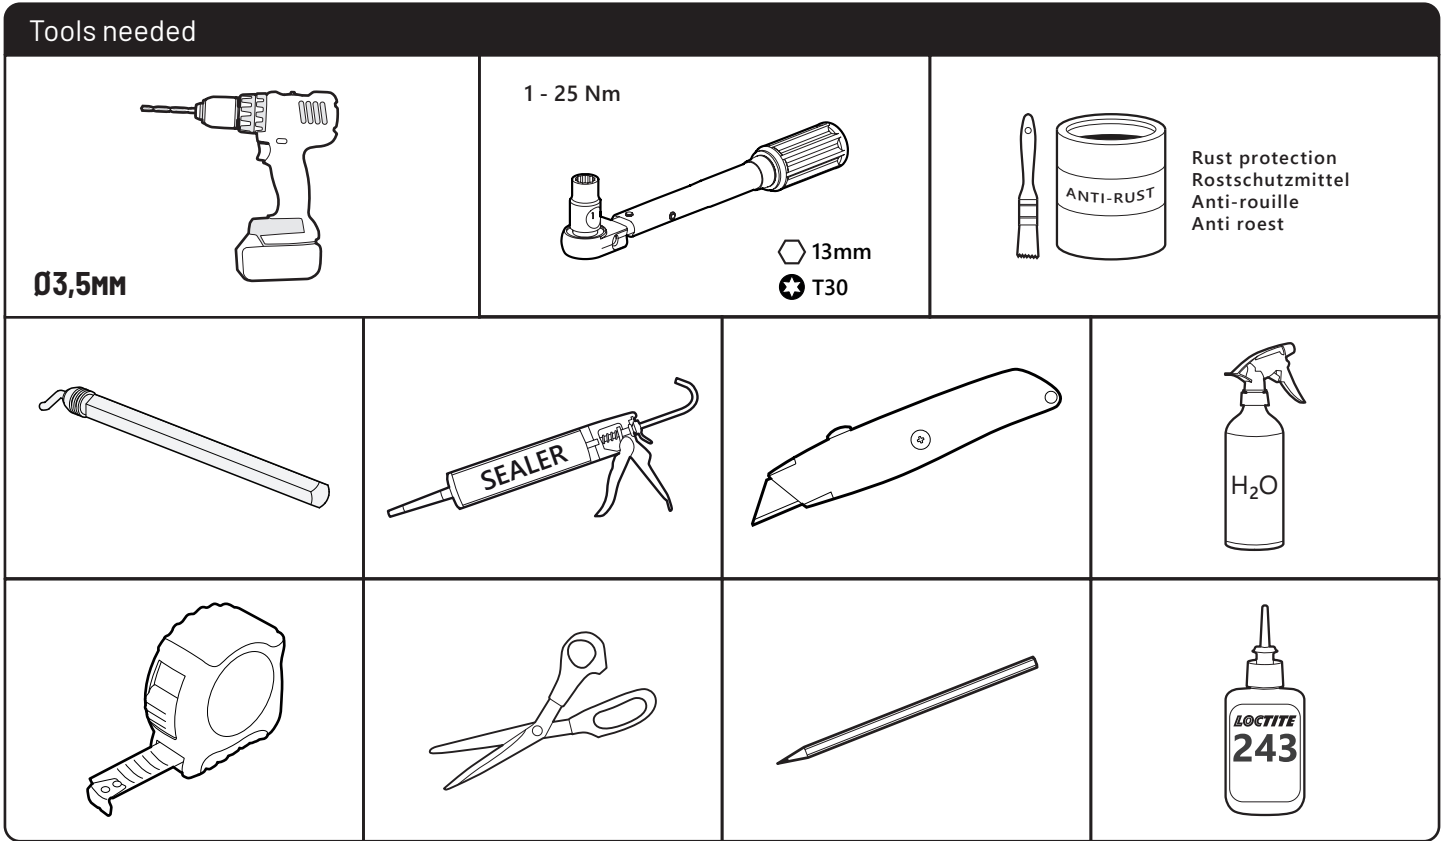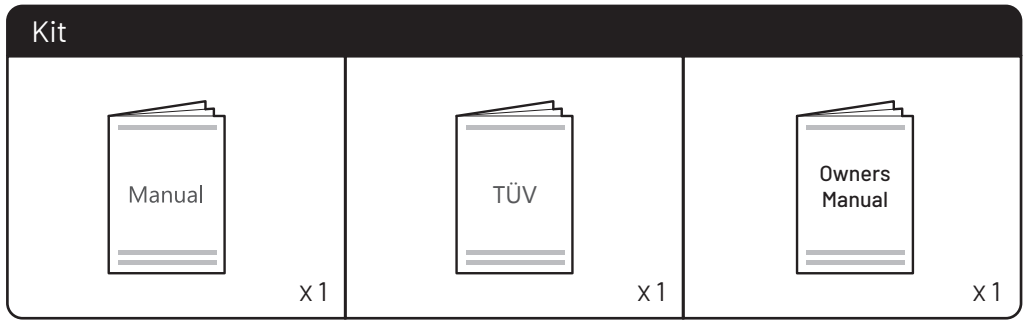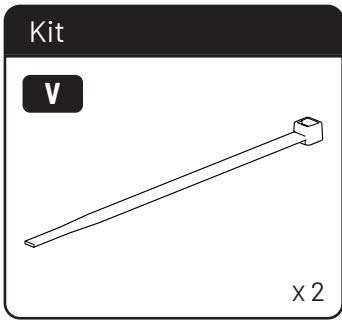

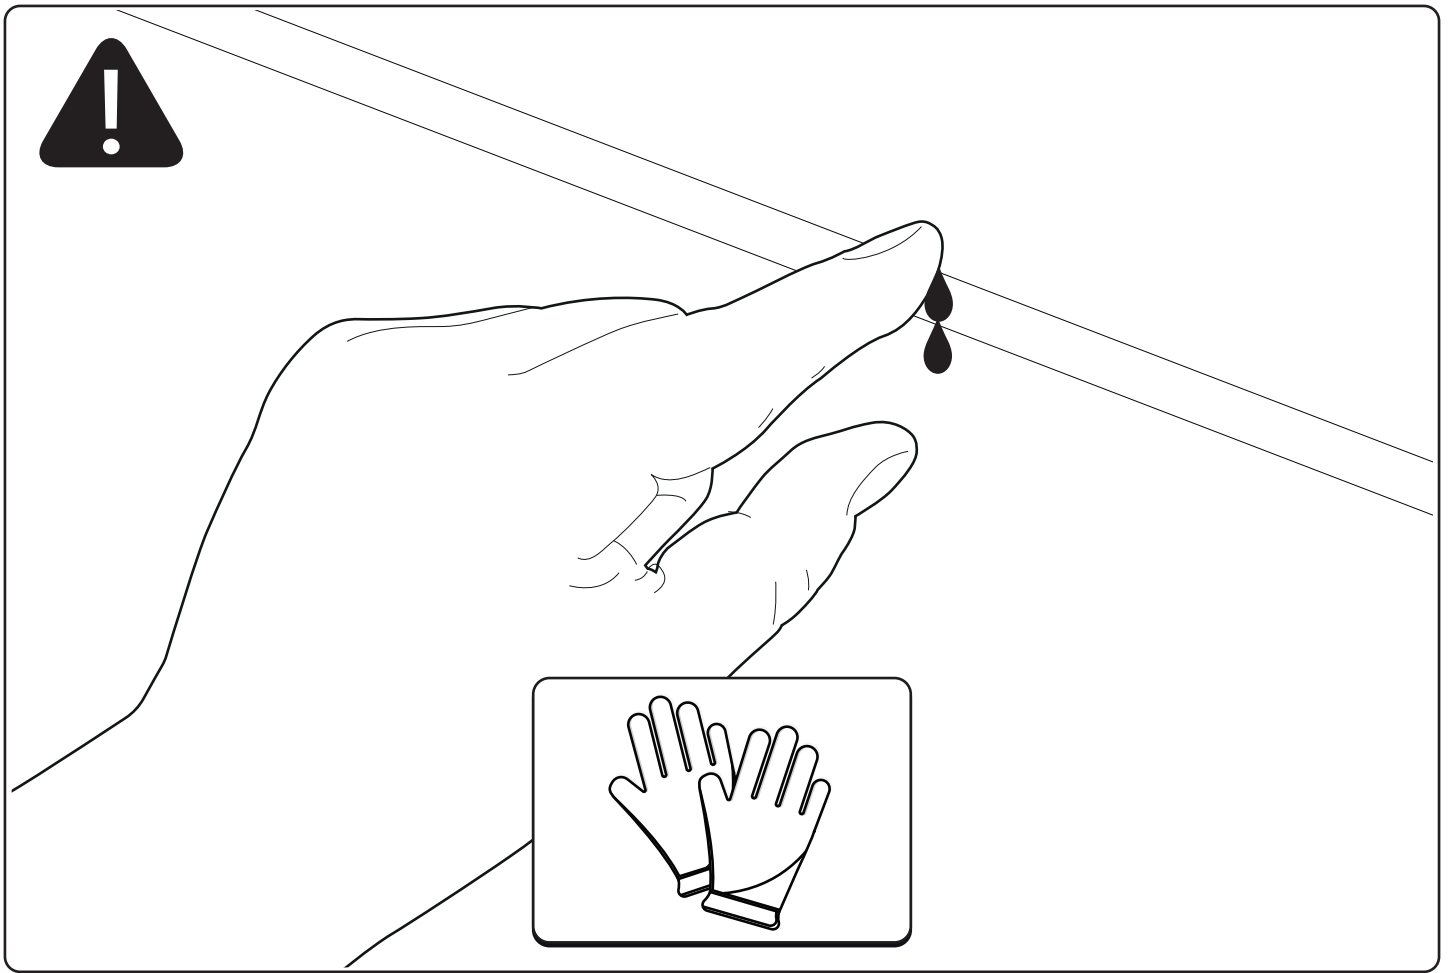


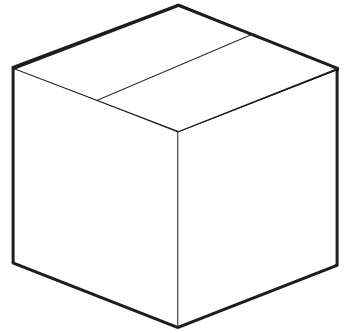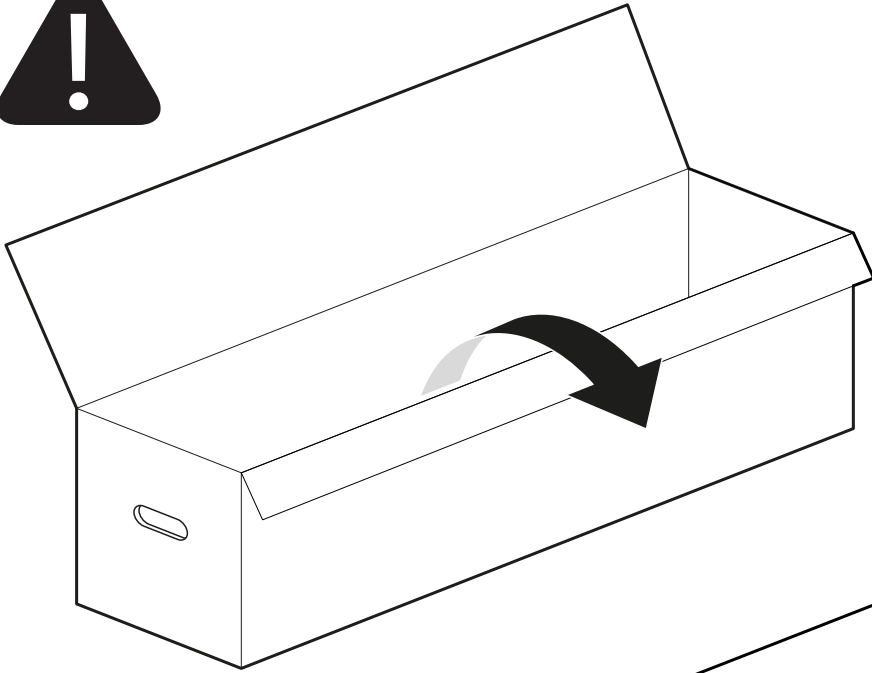


C

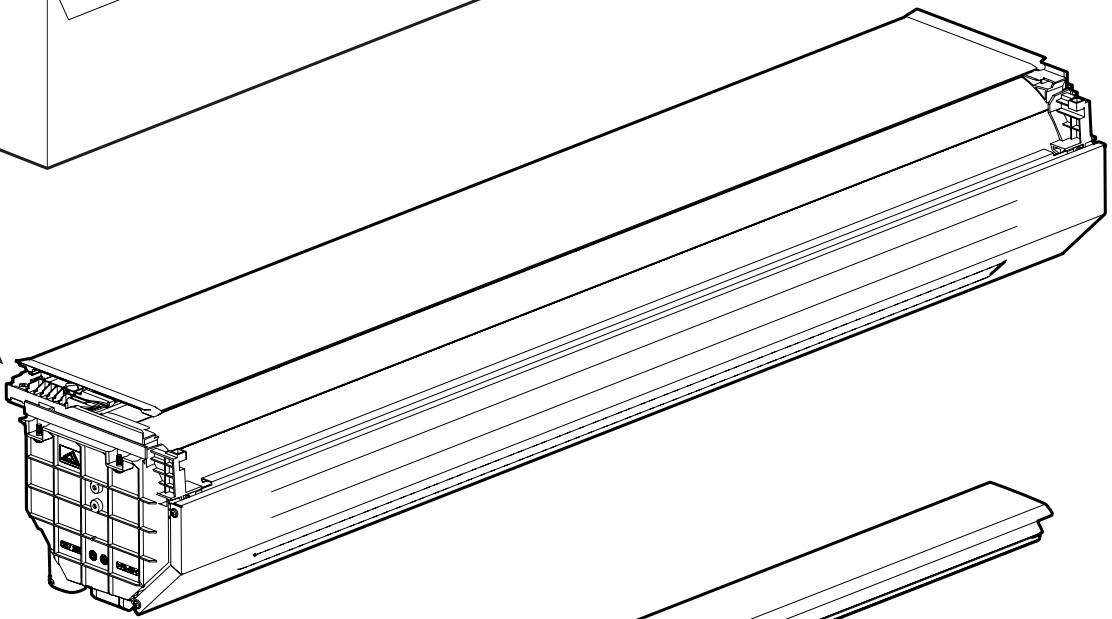

D

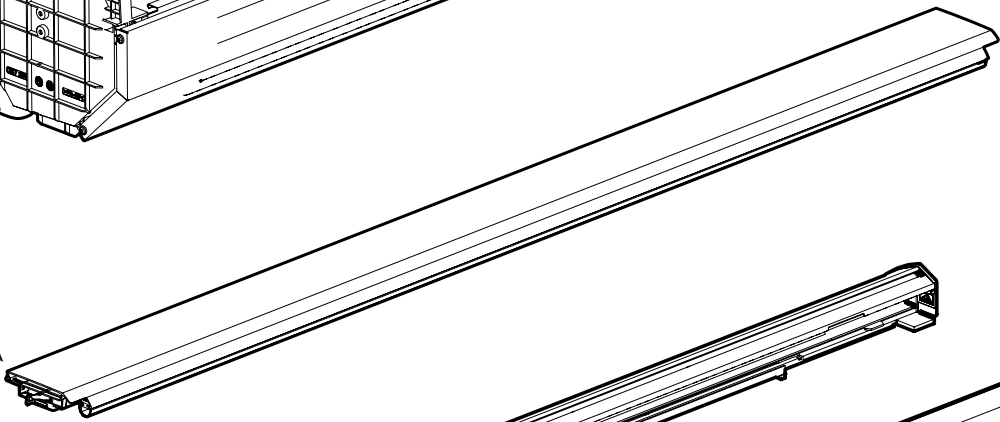

A

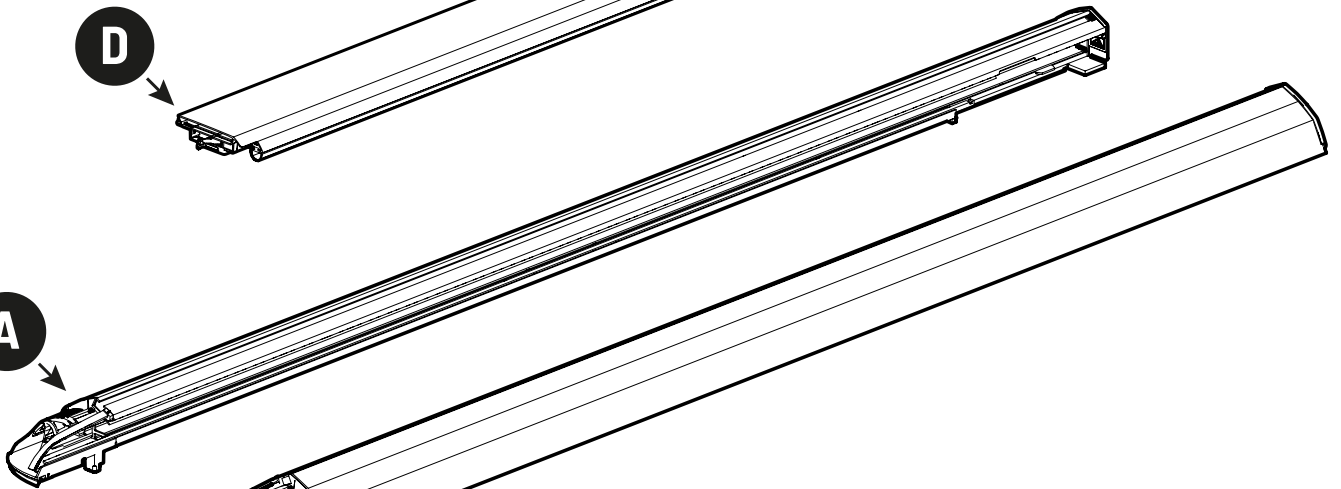


B








Water & sponge

2

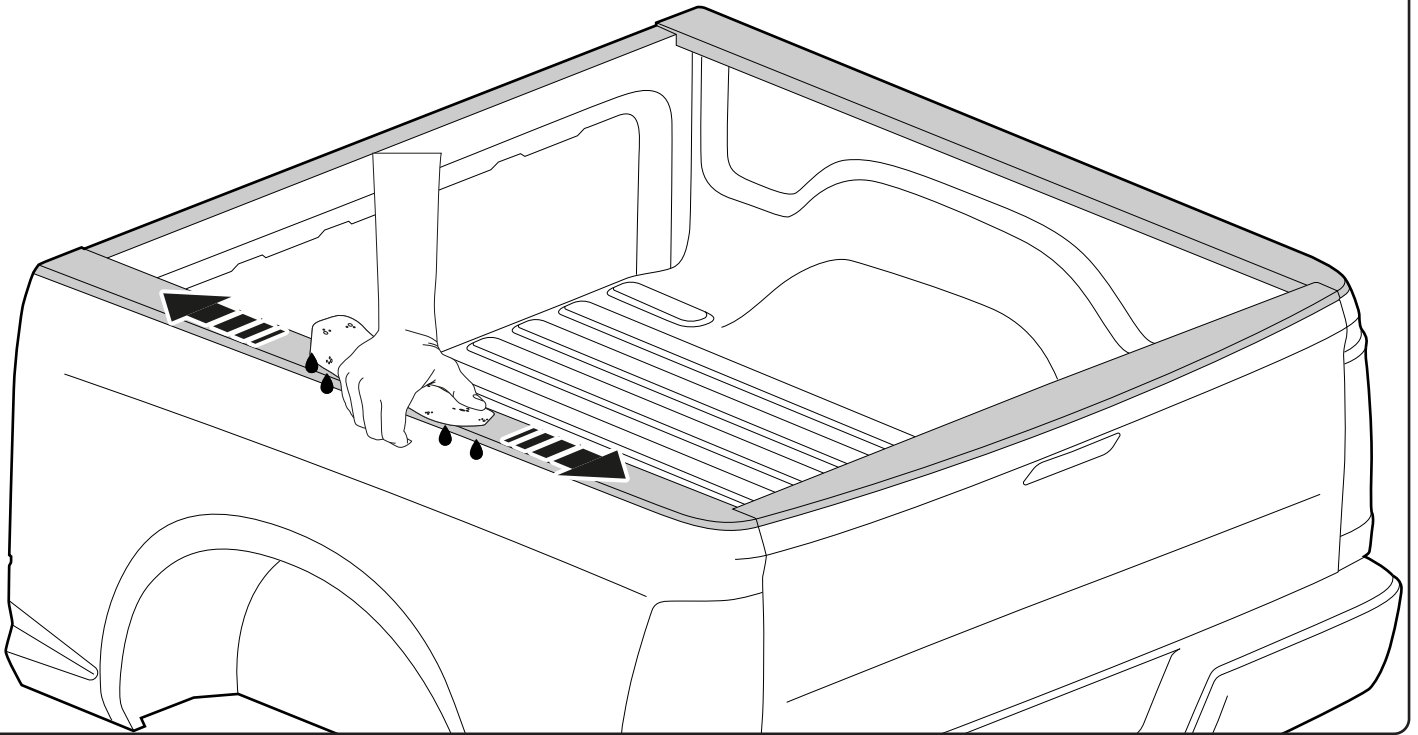


3


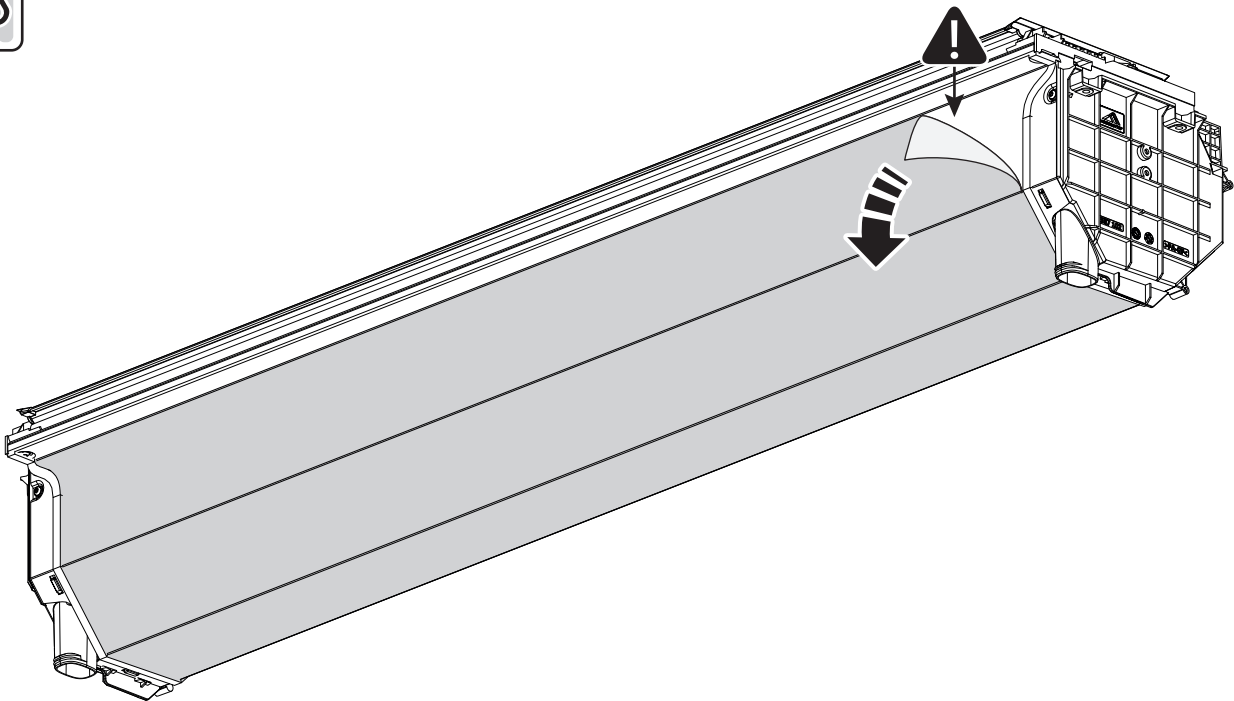


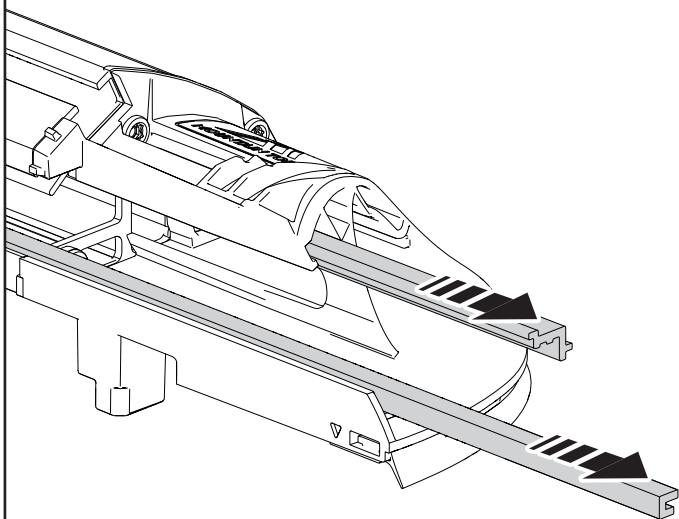
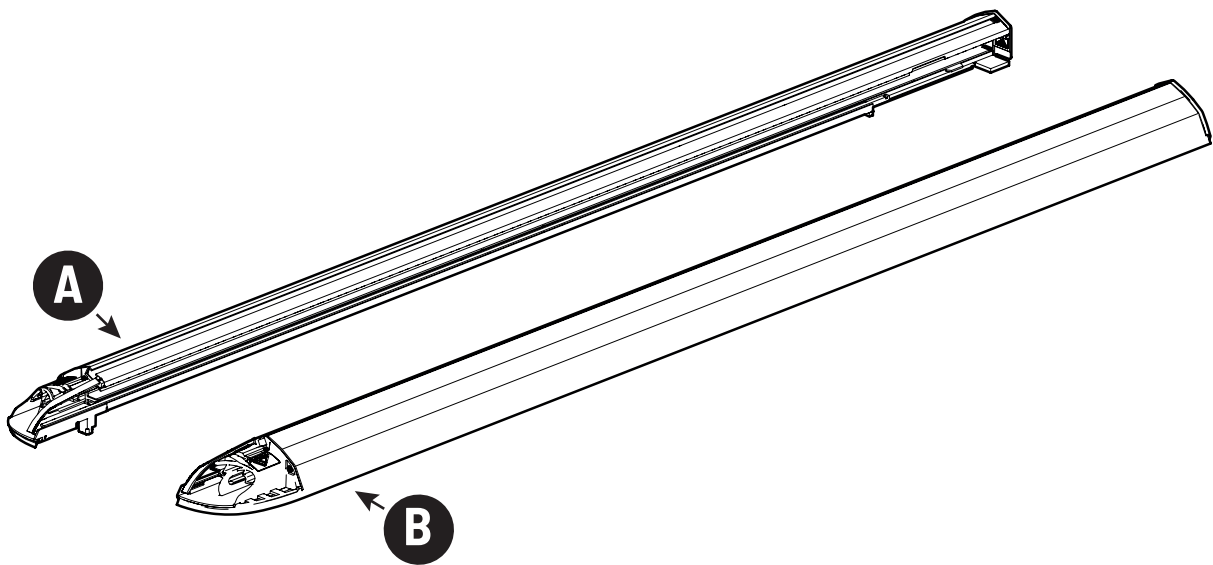




1


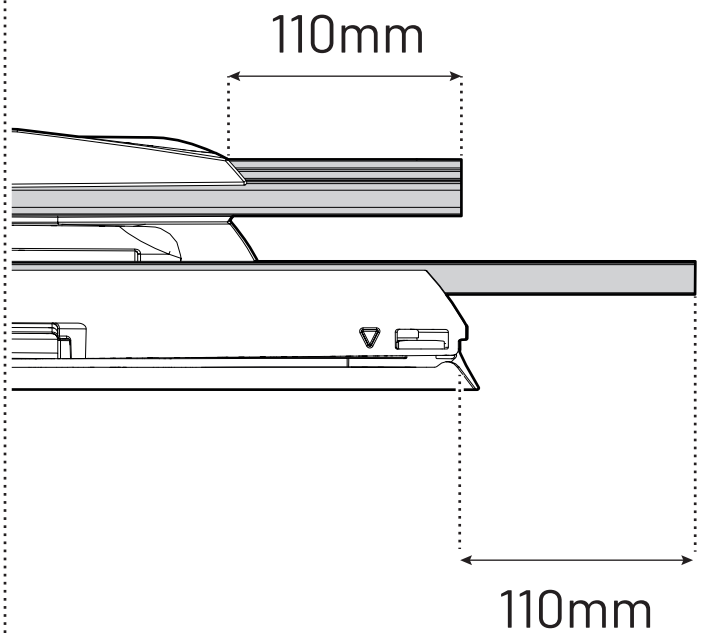




2

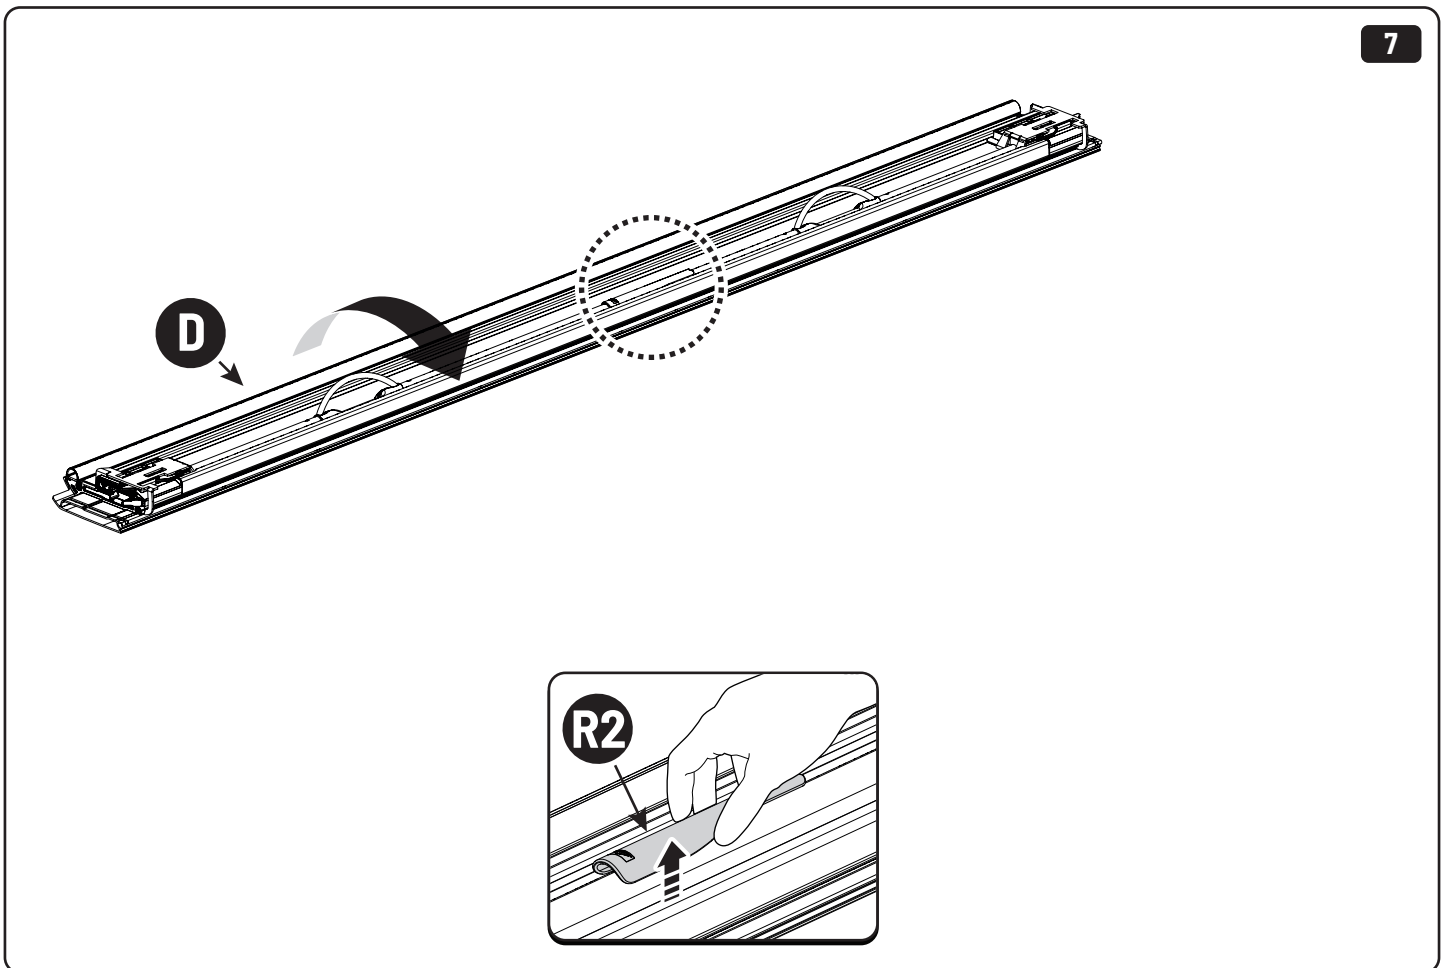
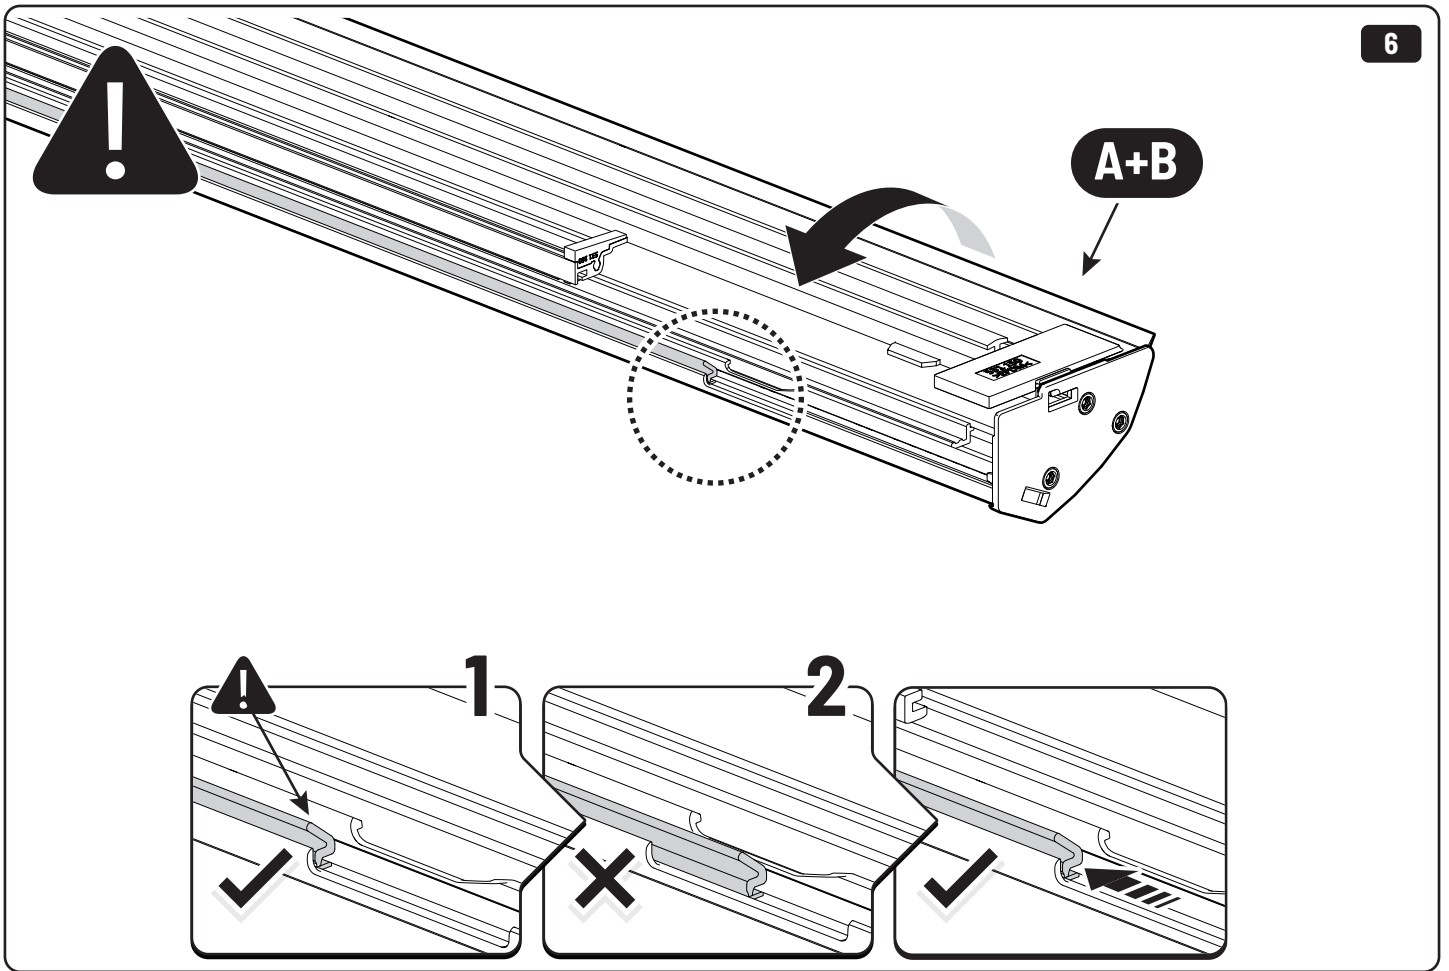


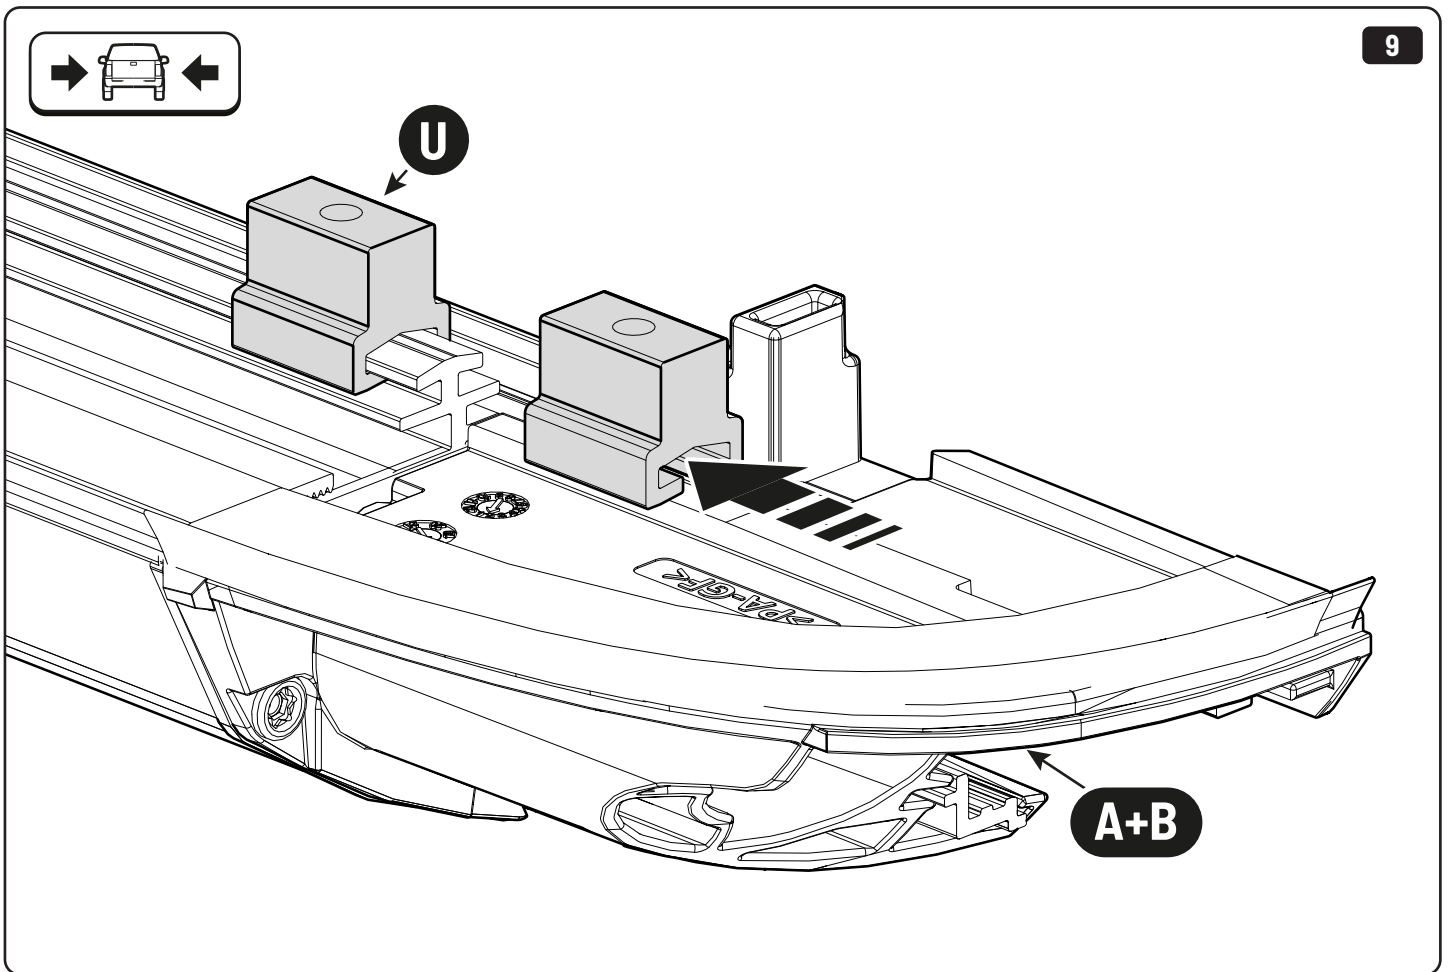
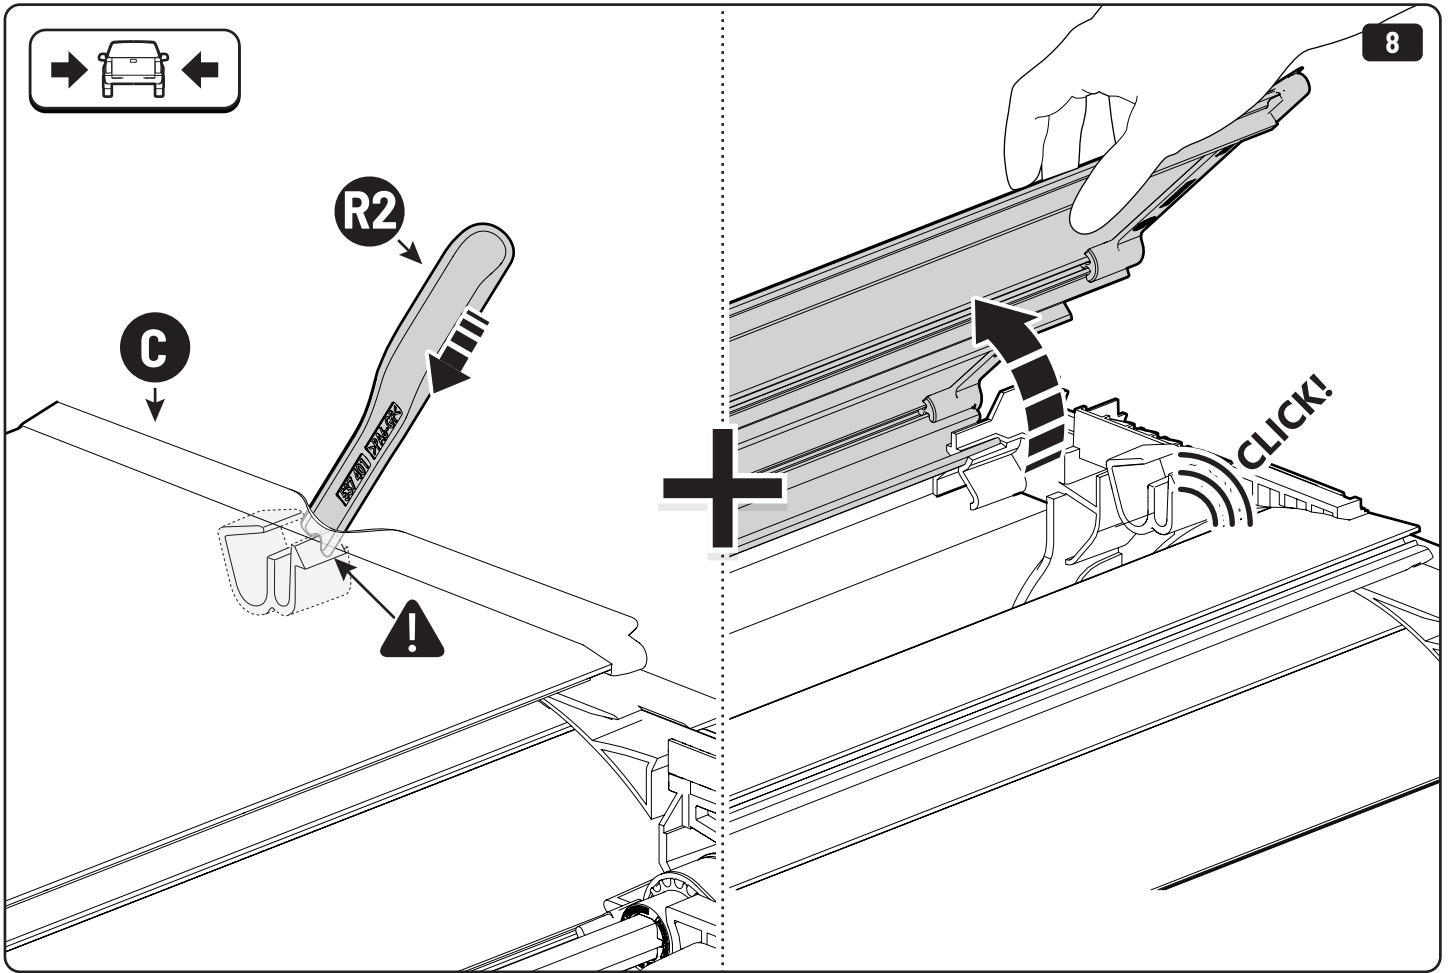


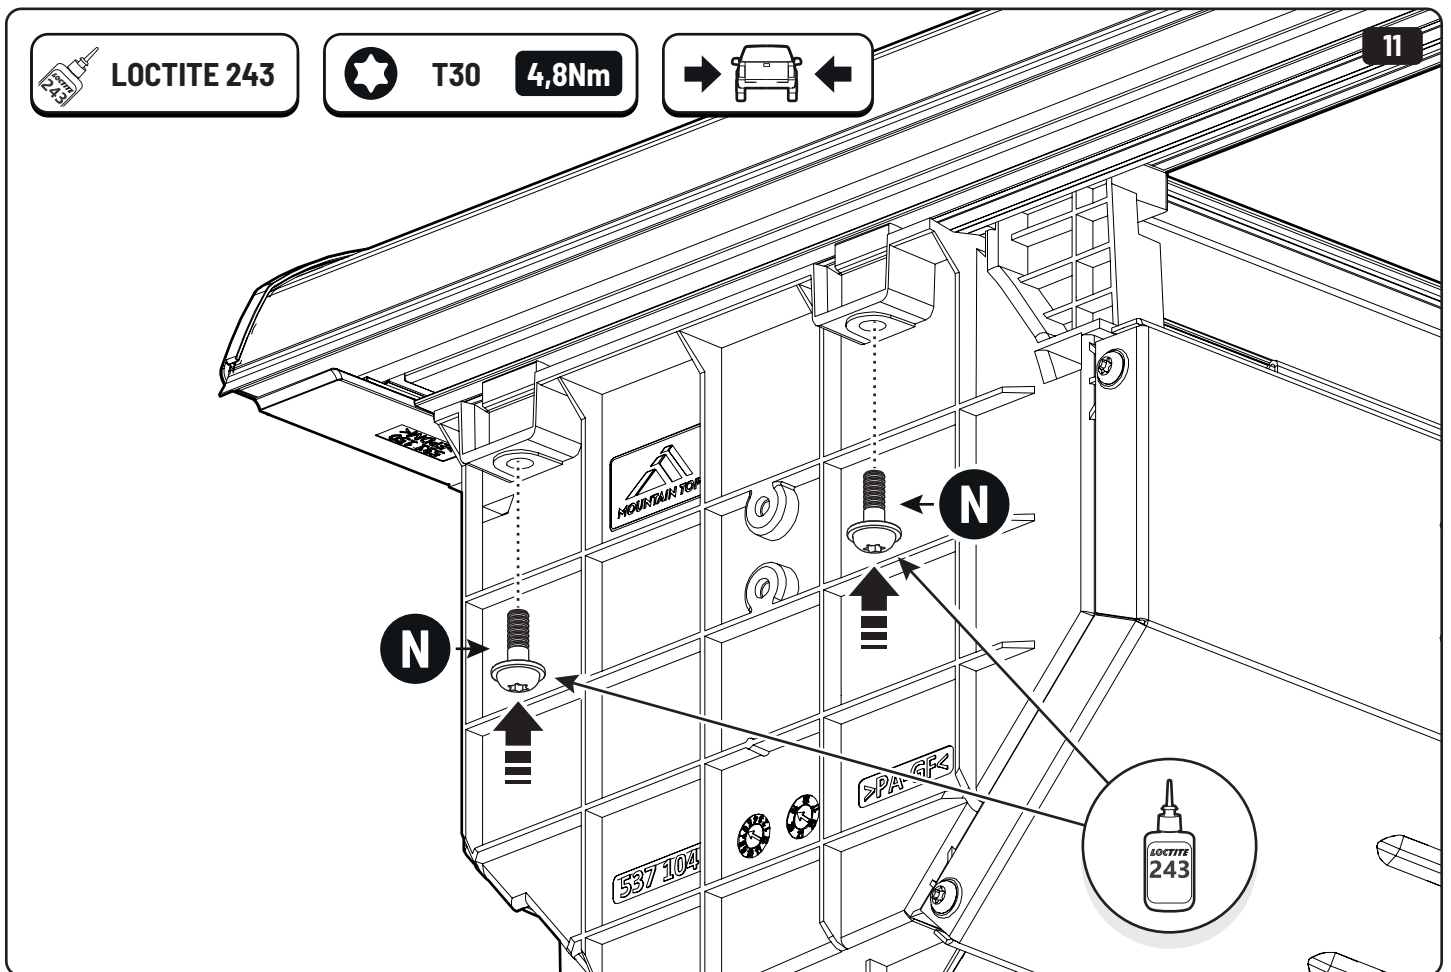
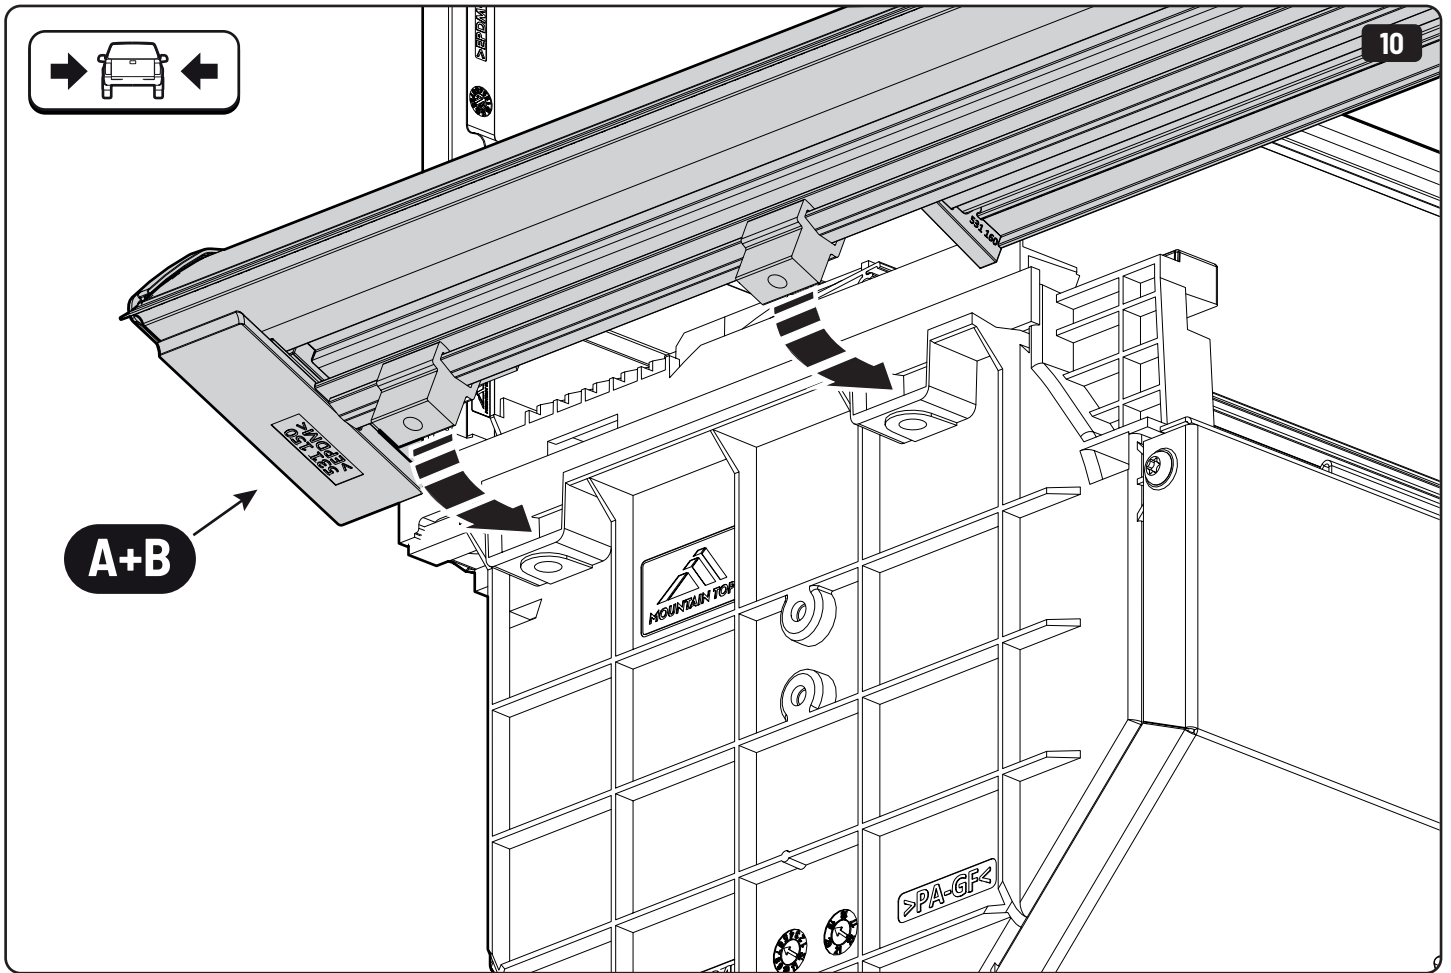


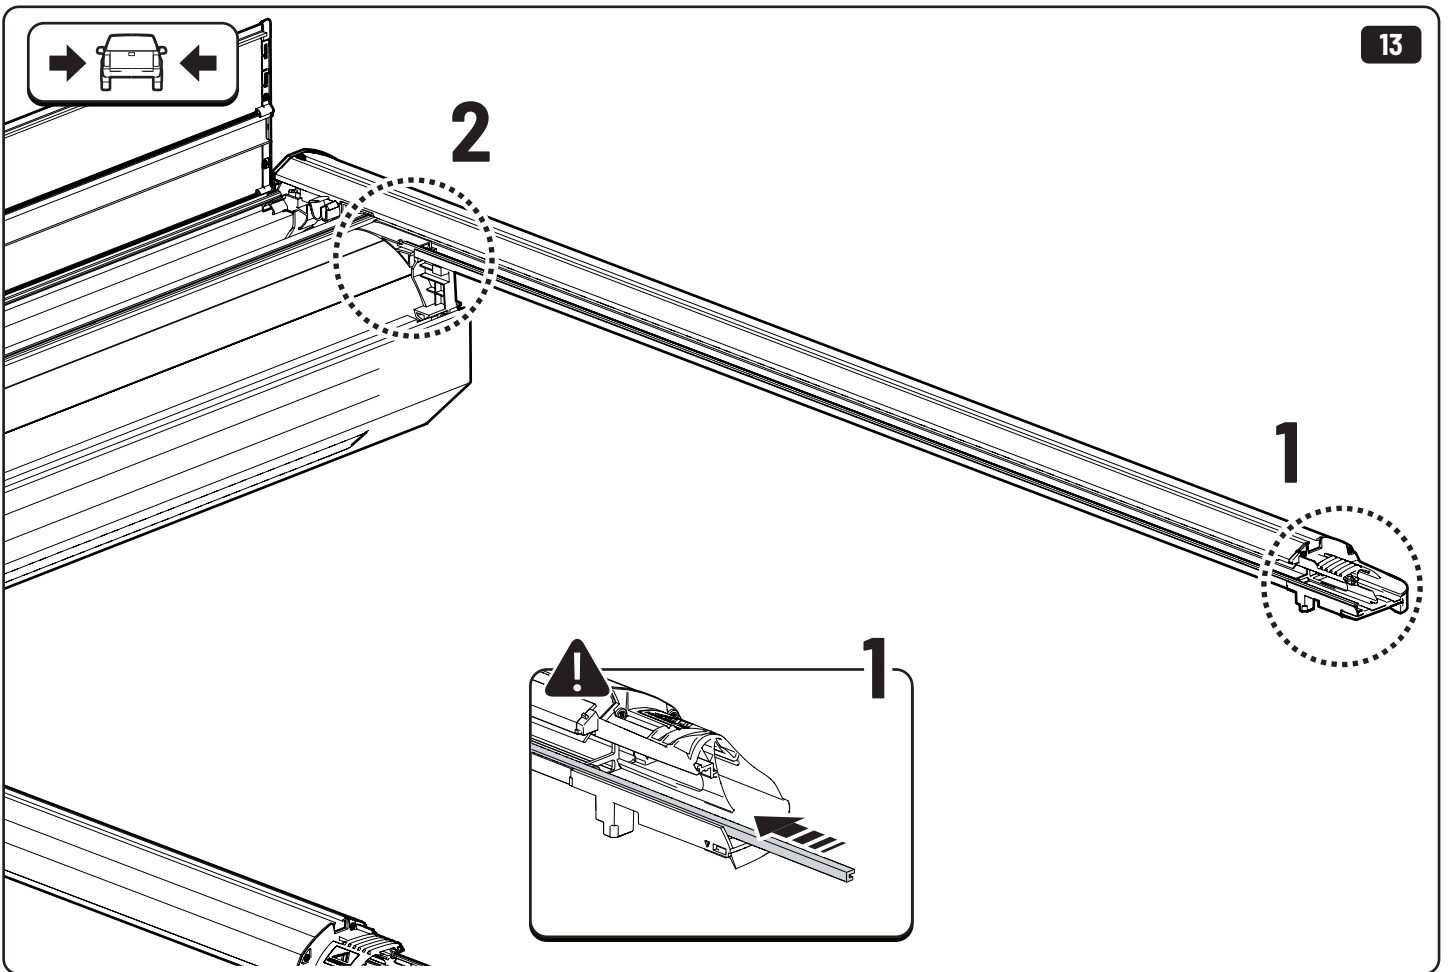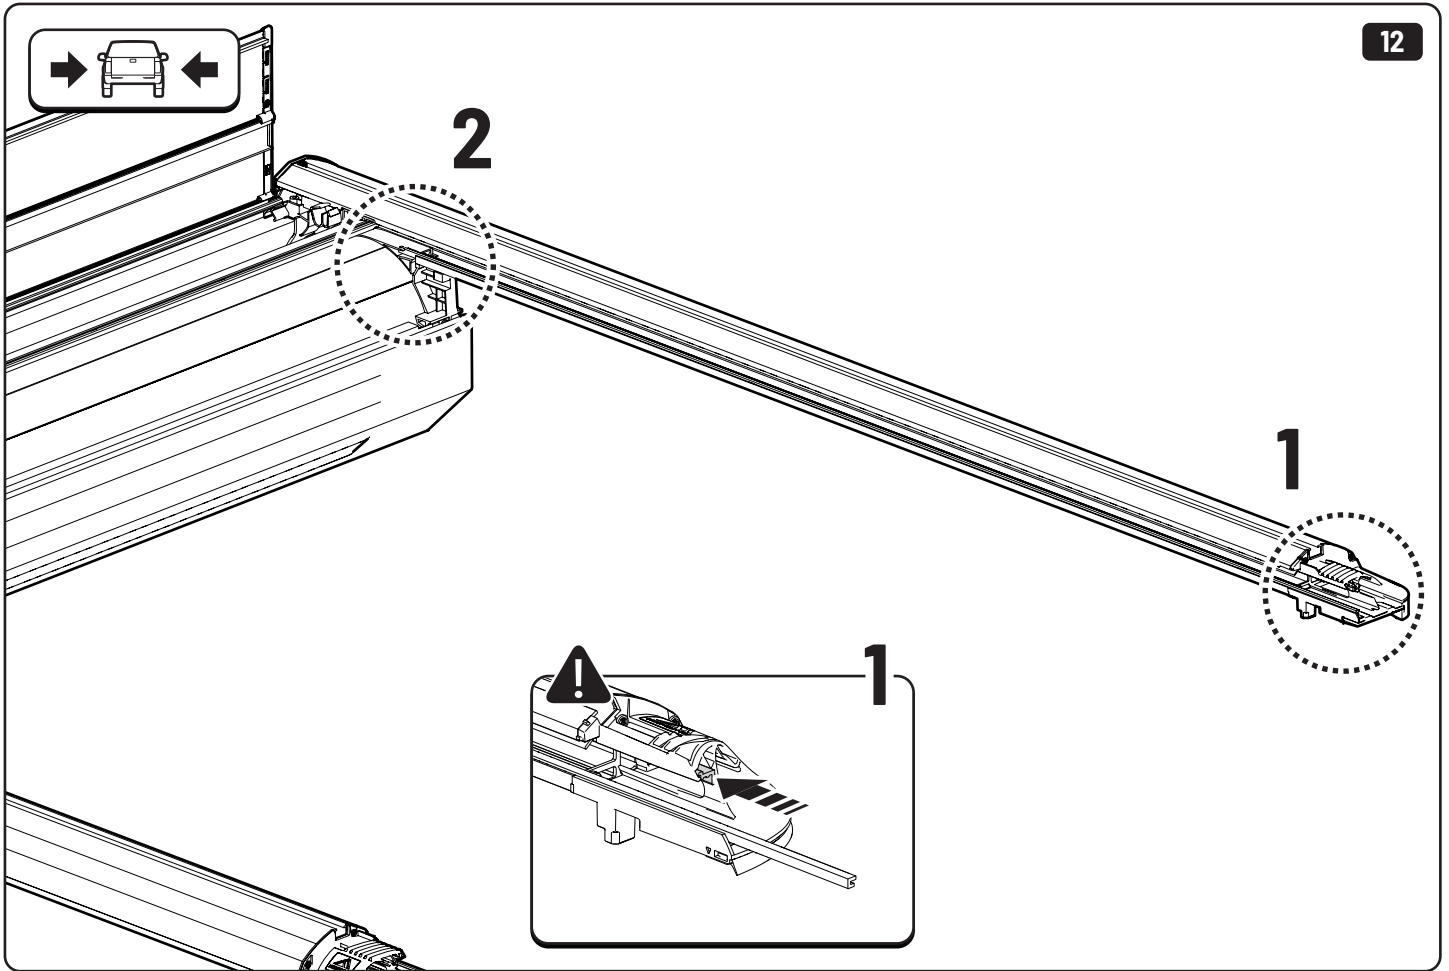



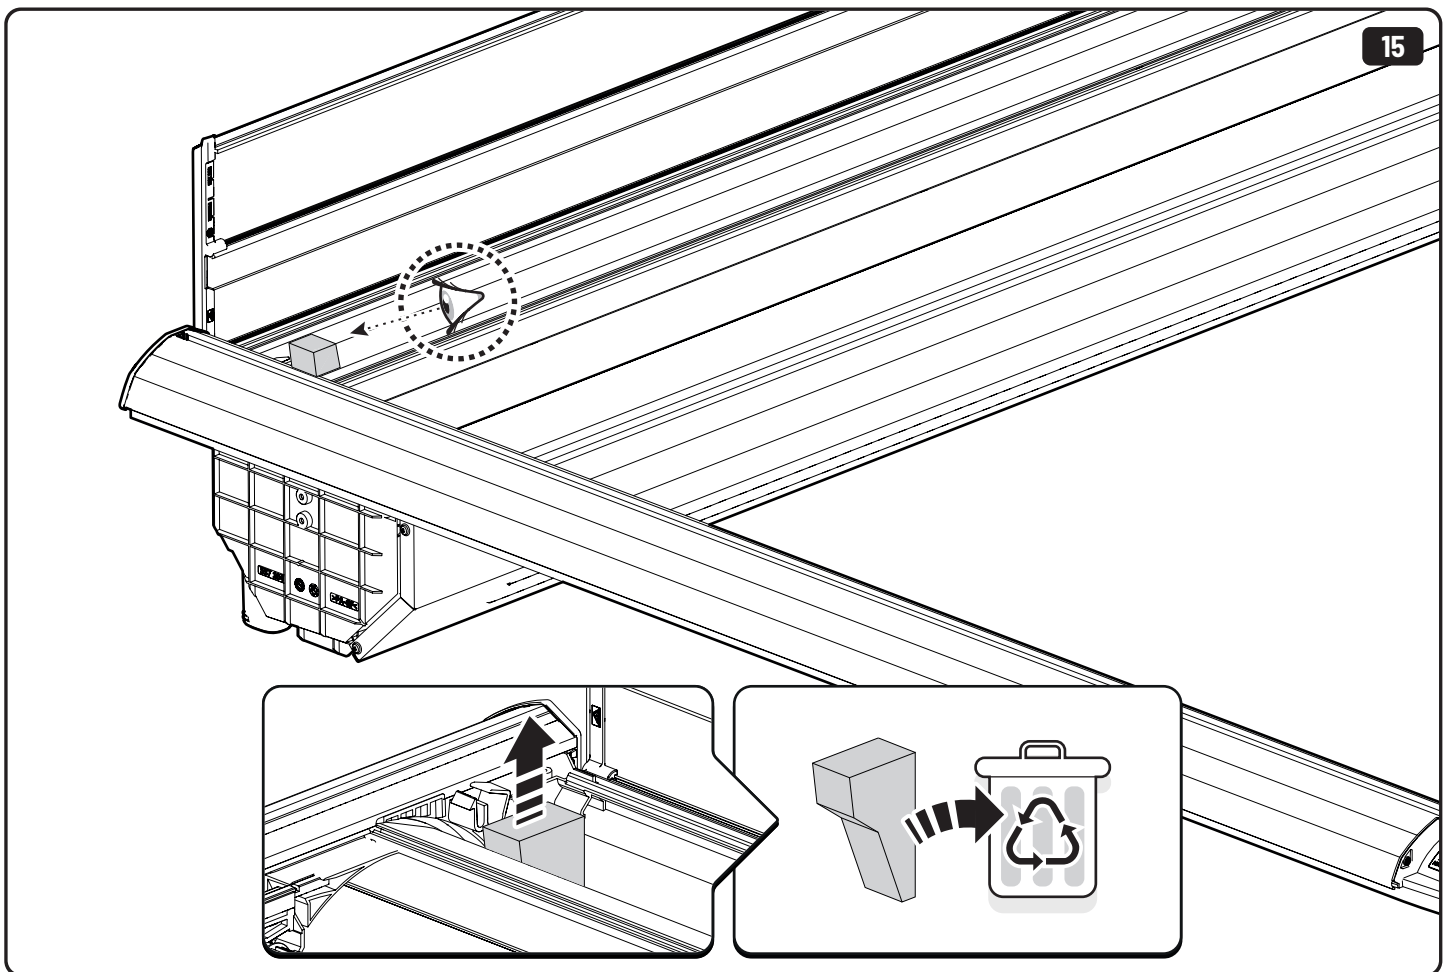
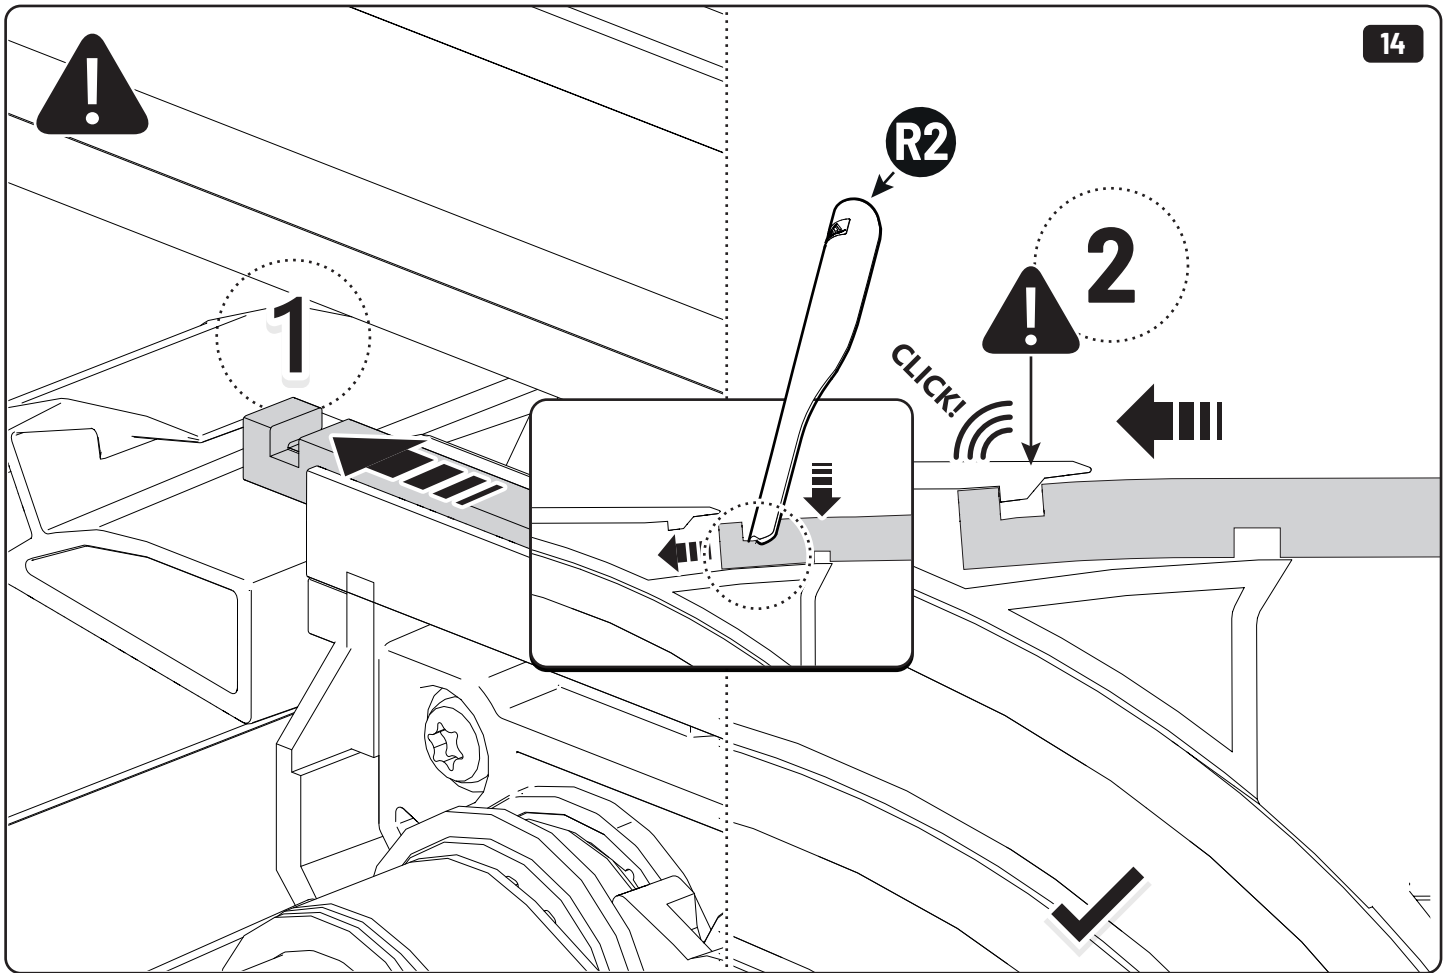







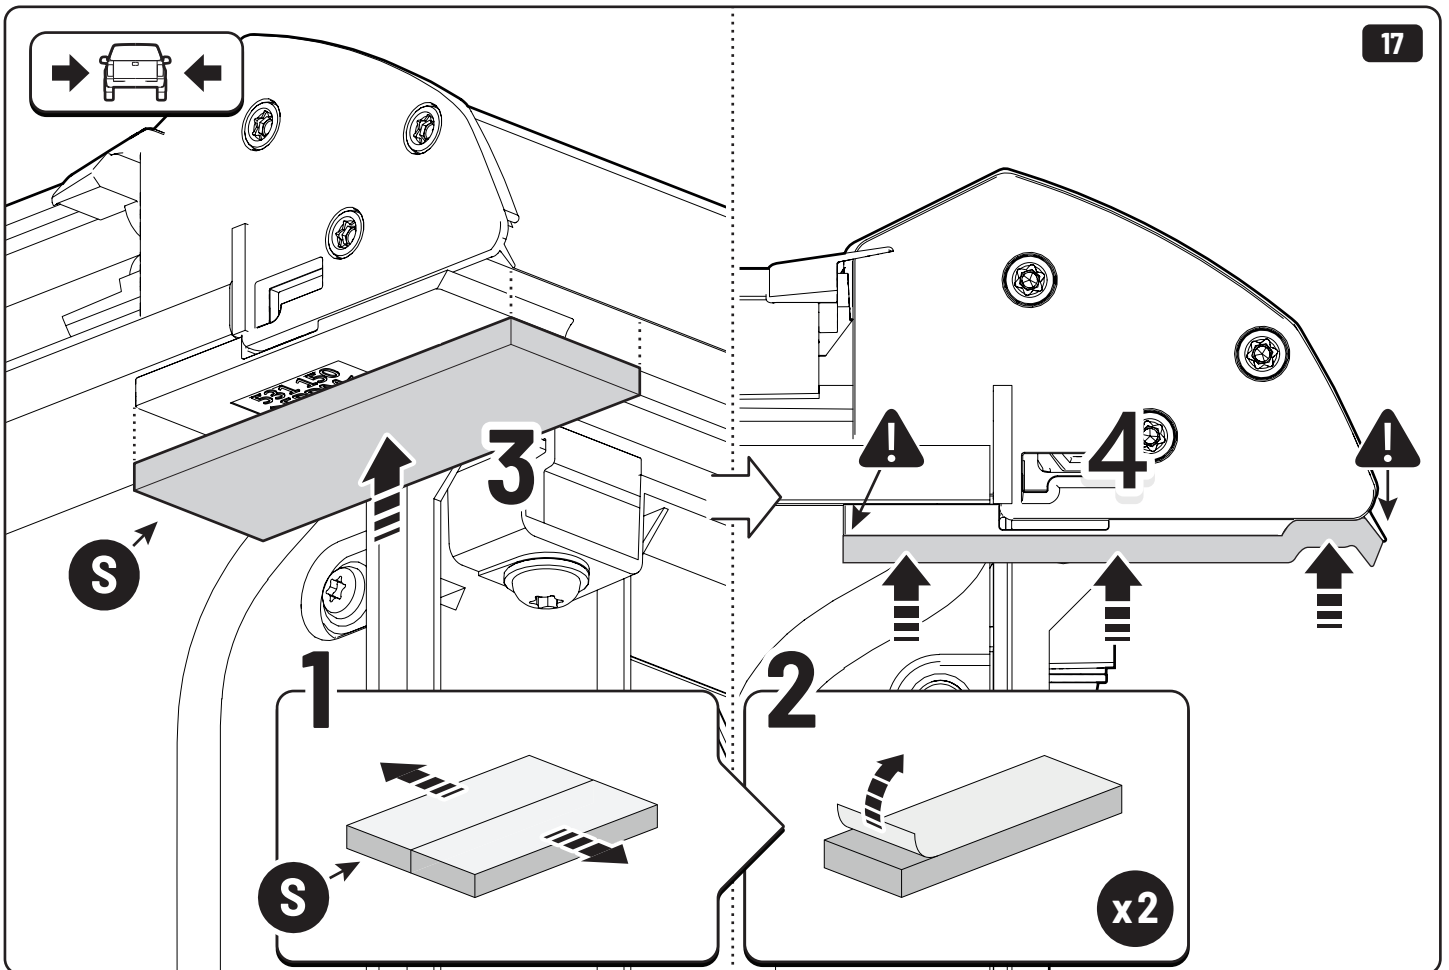
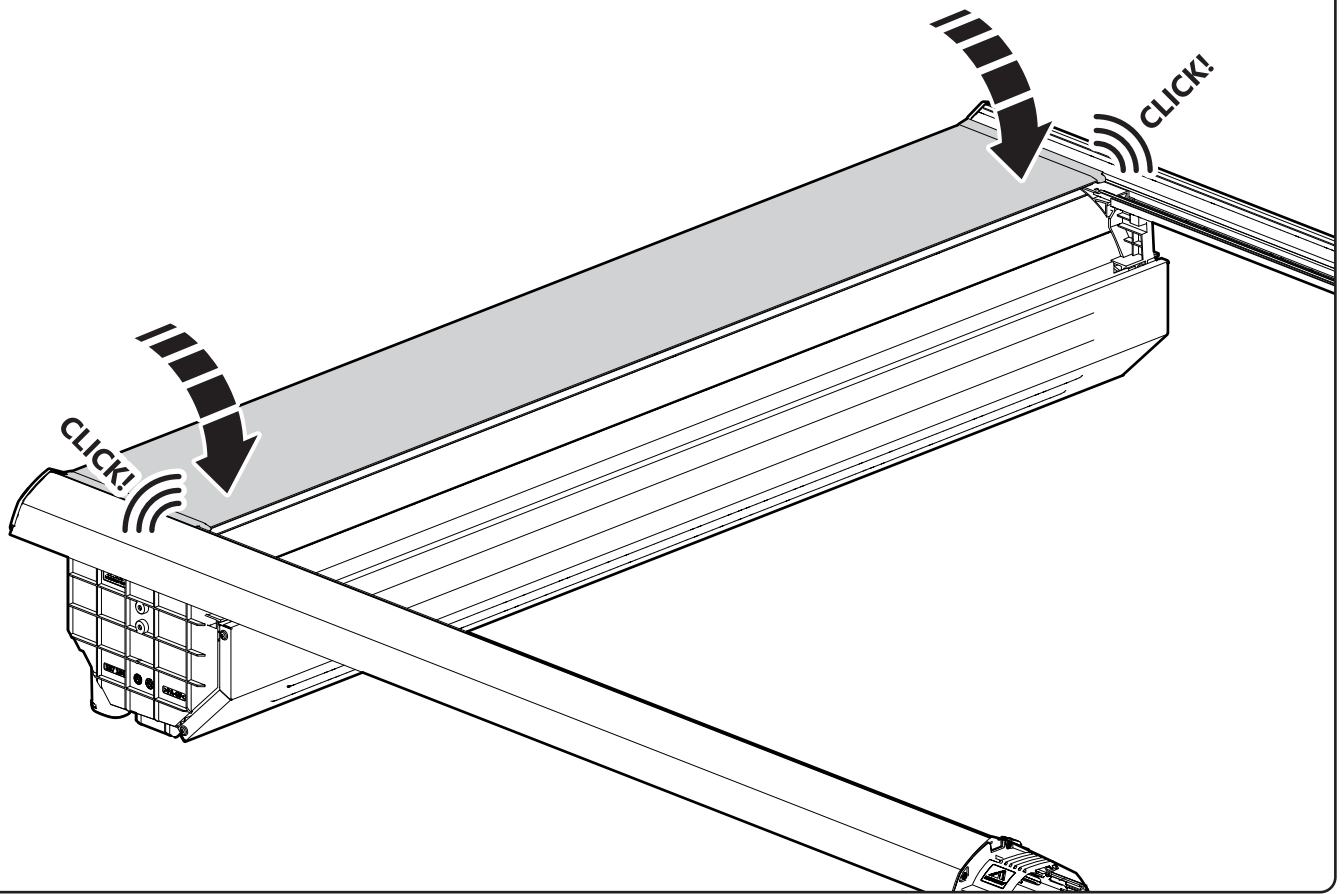


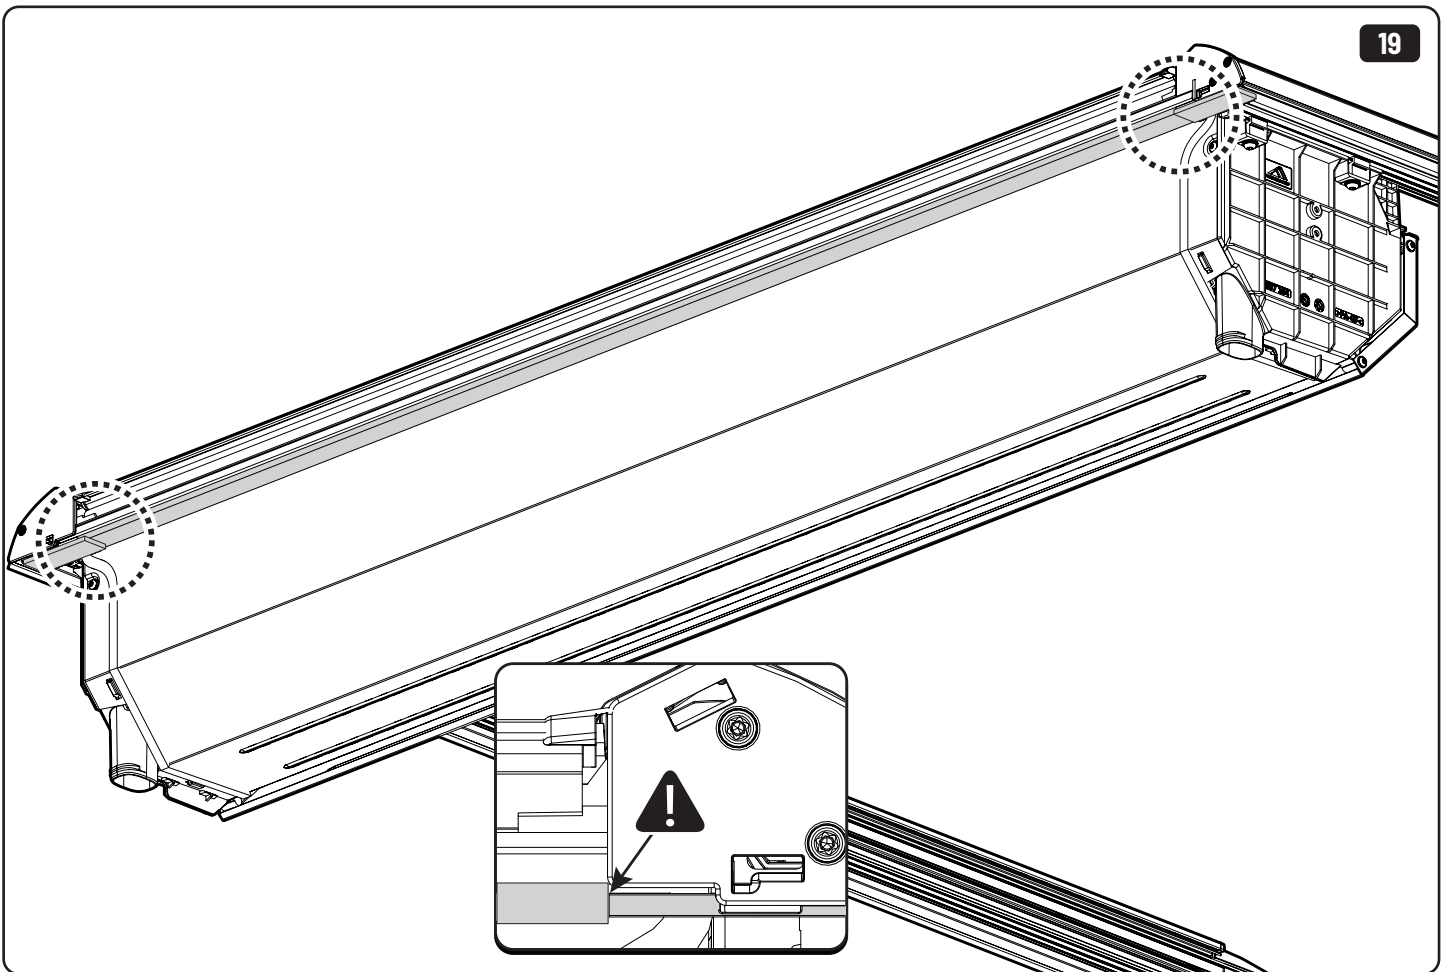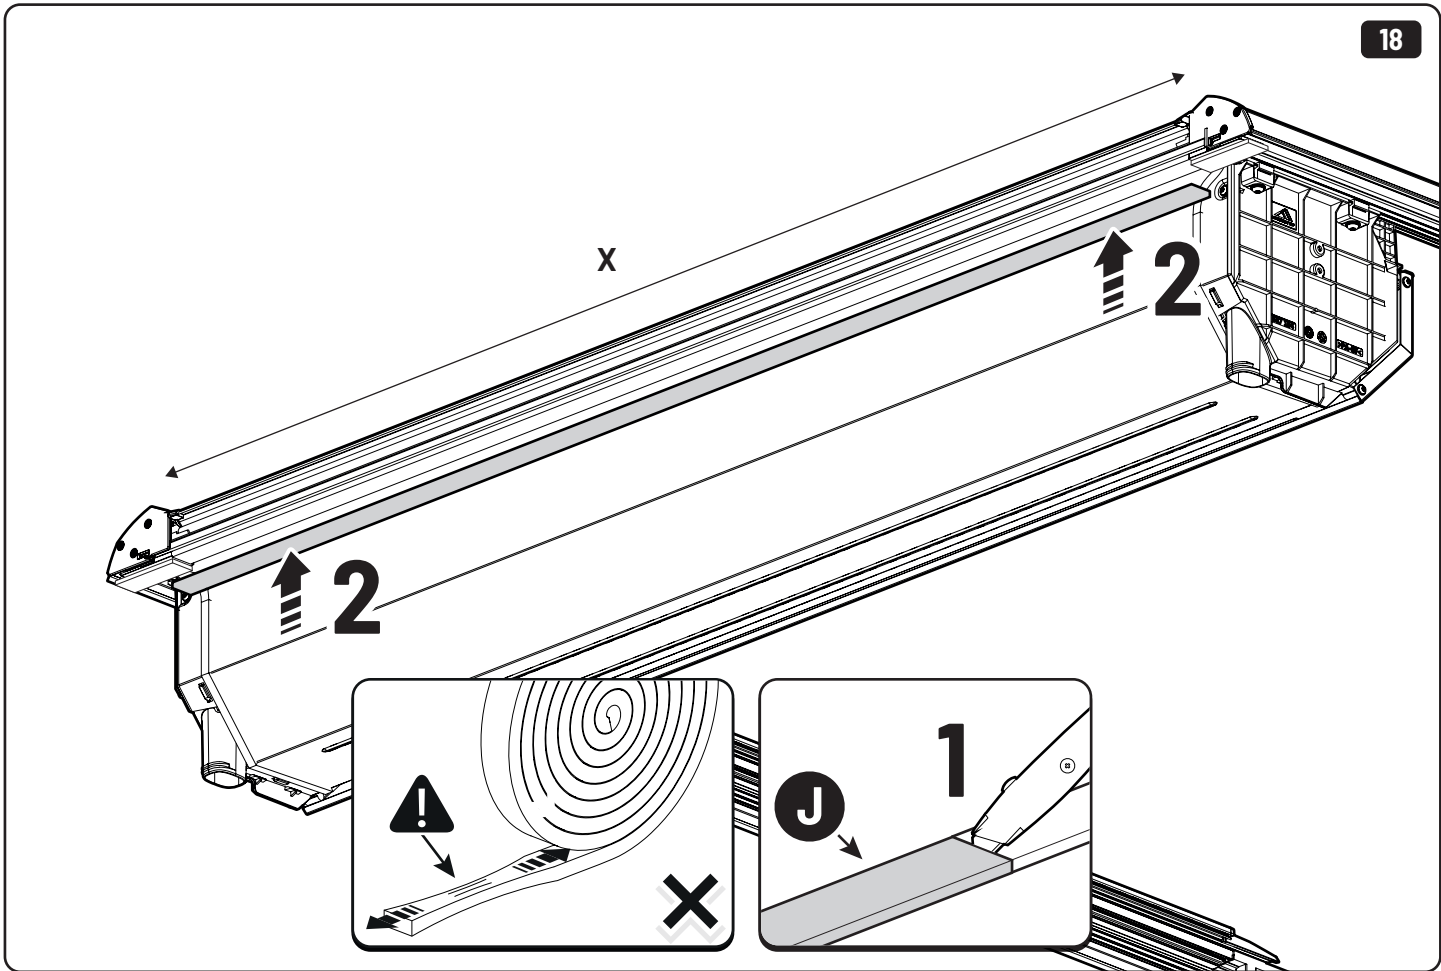


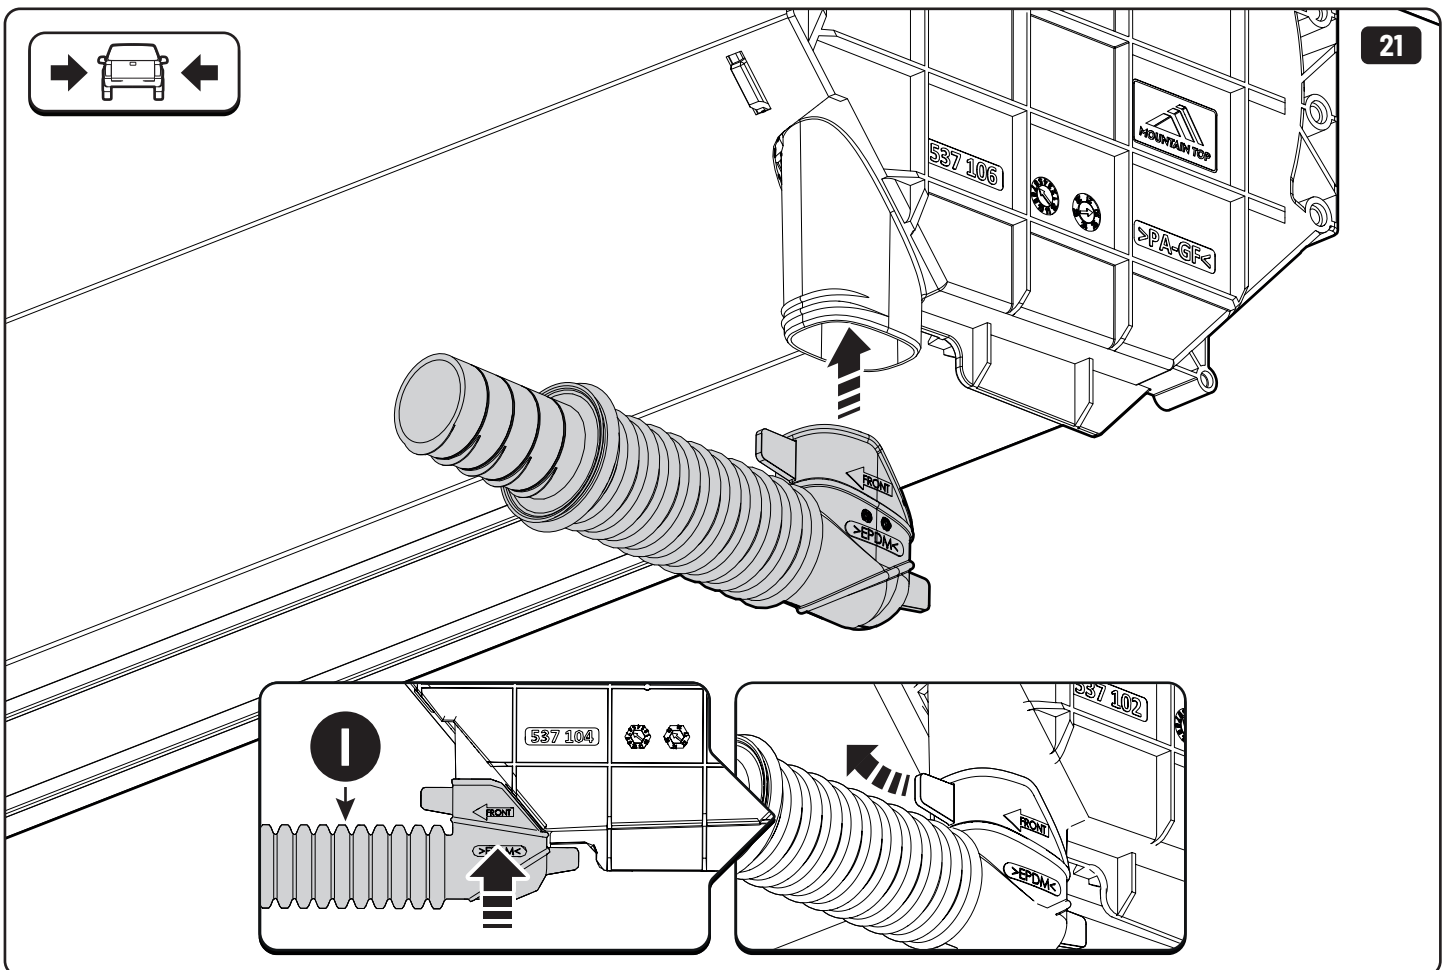
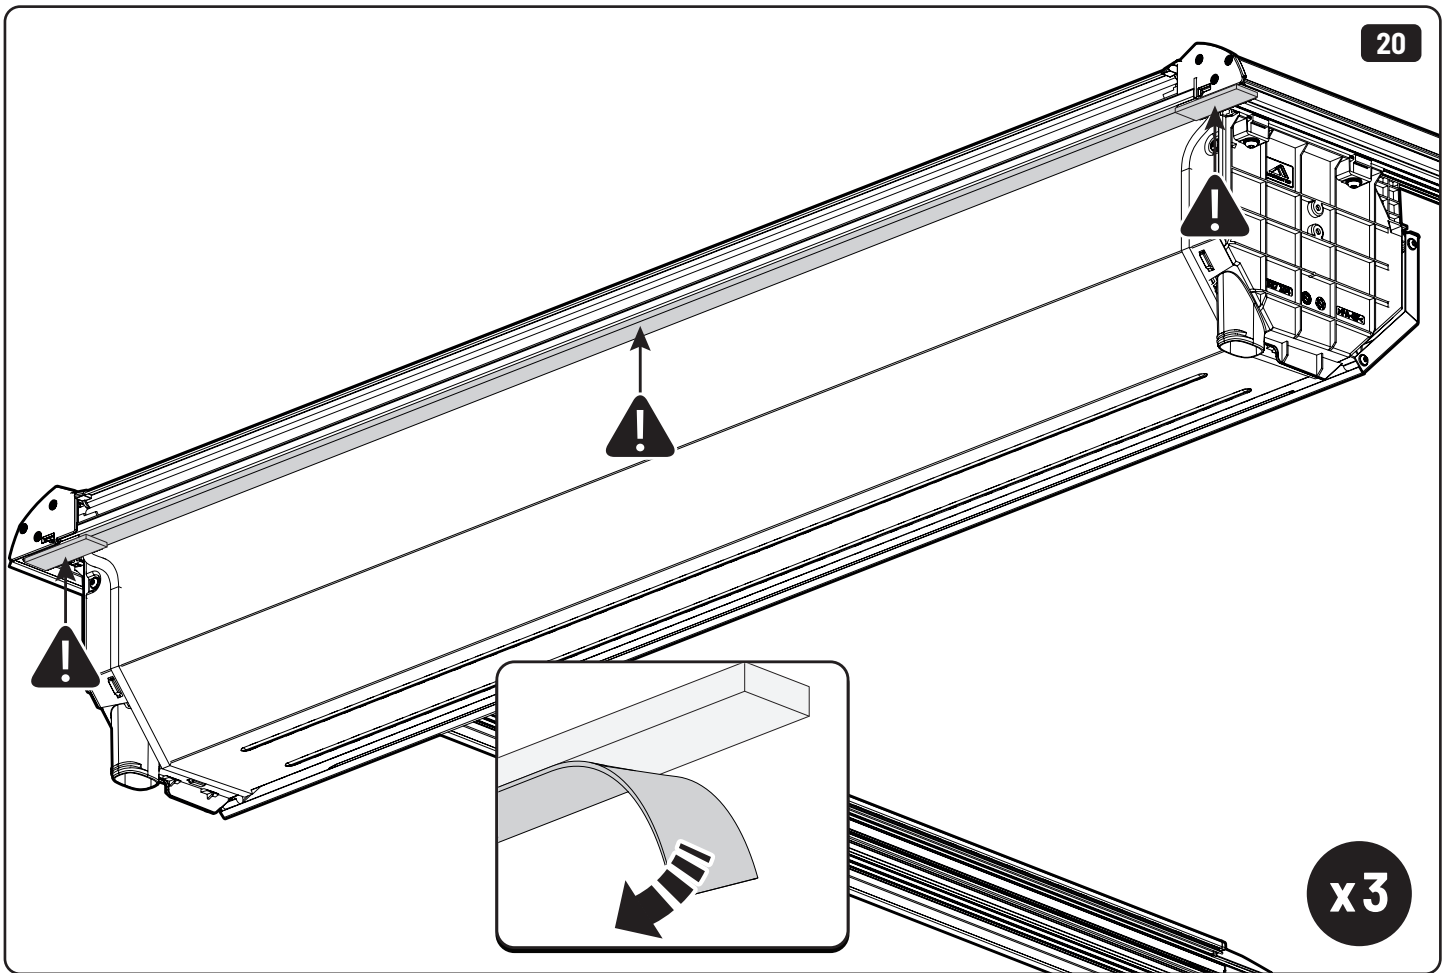


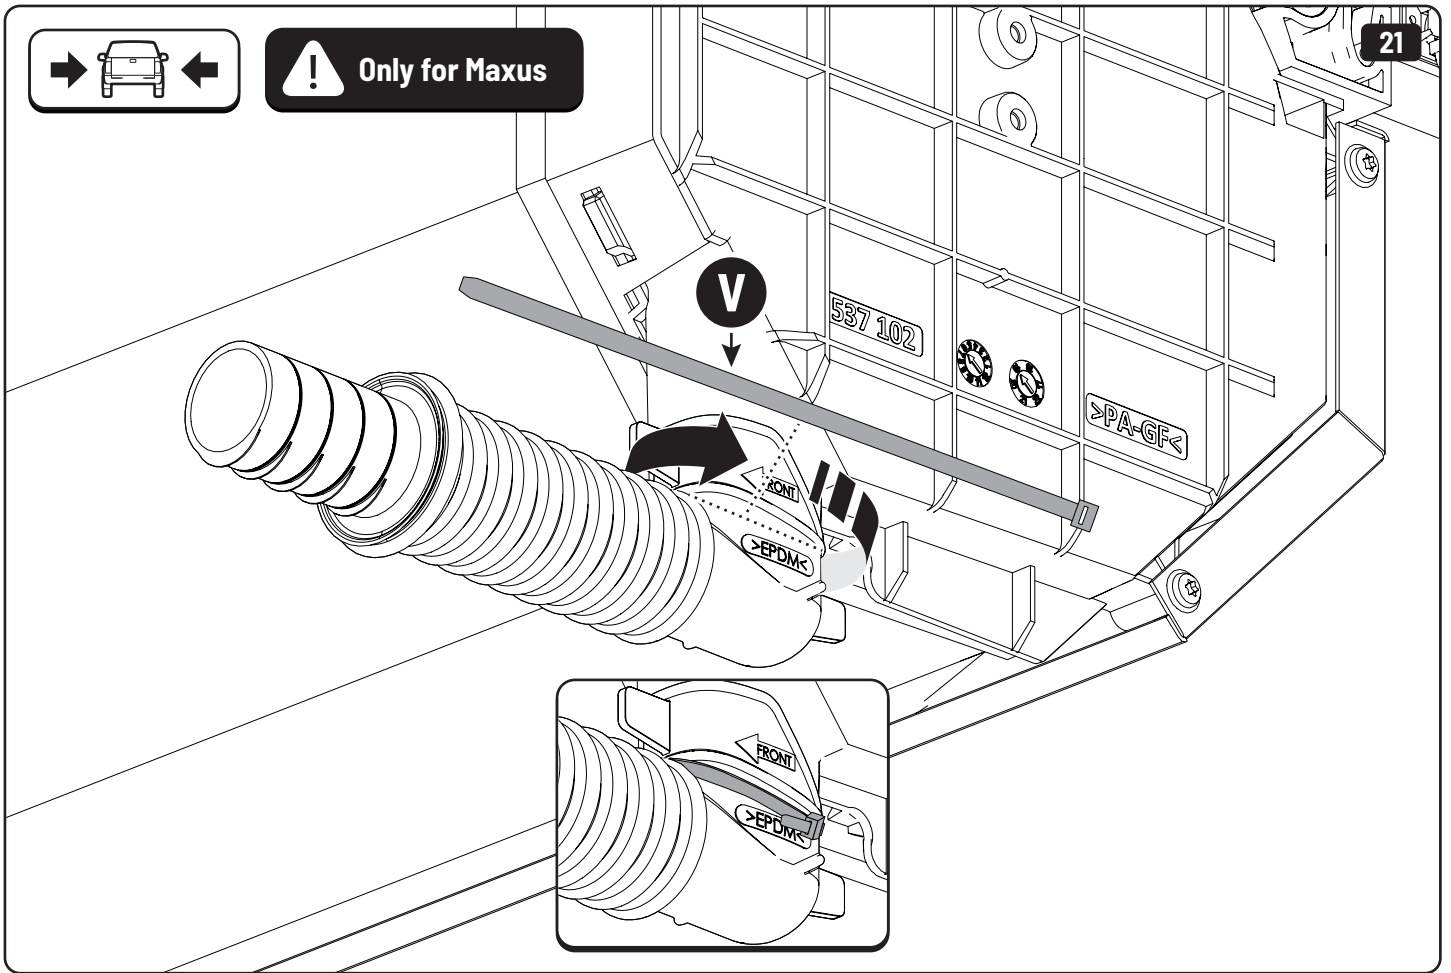

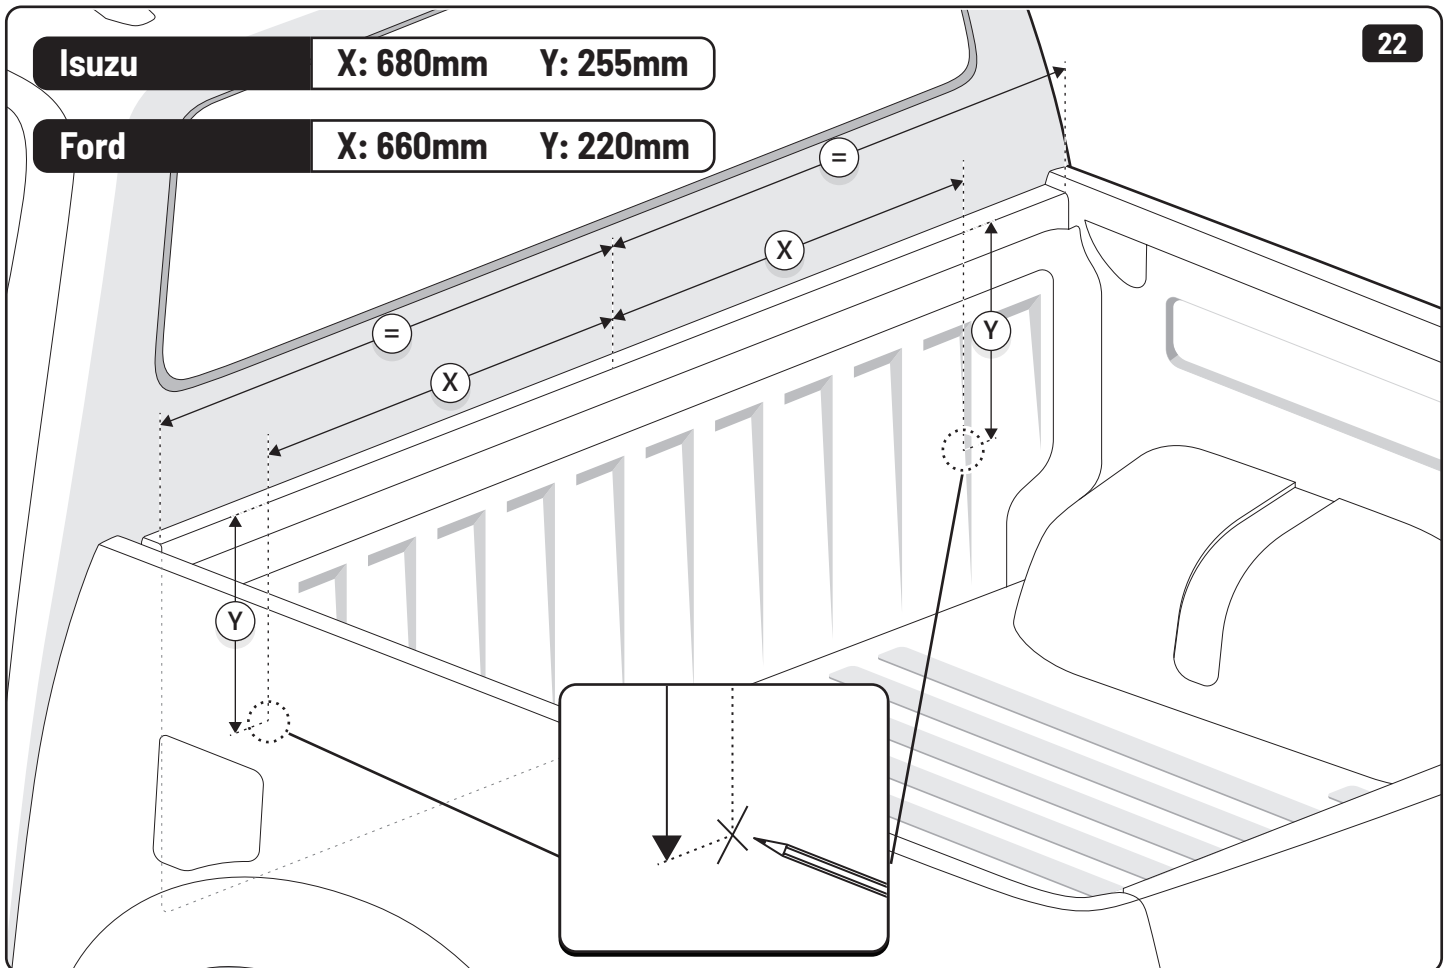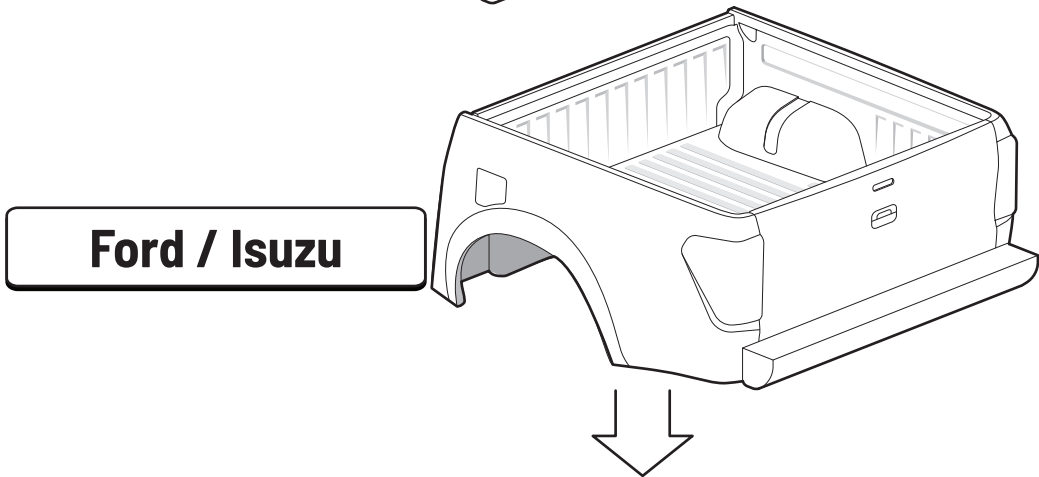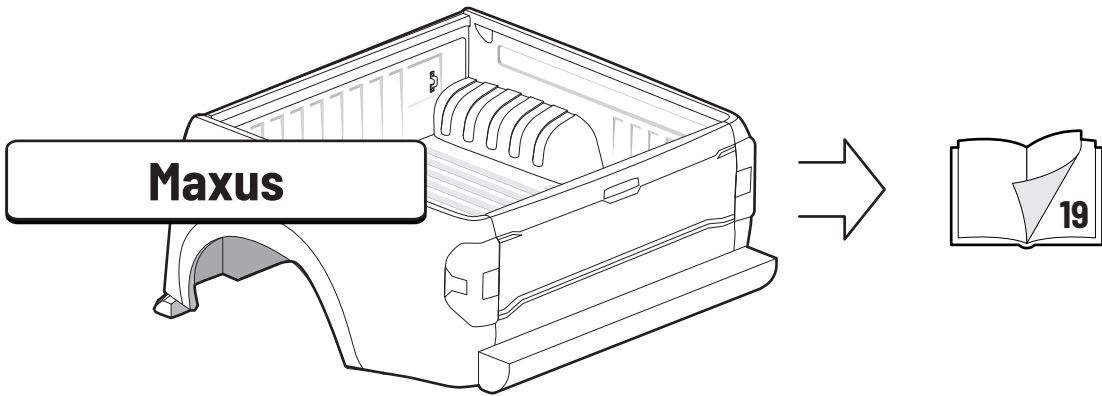

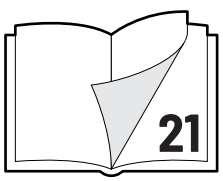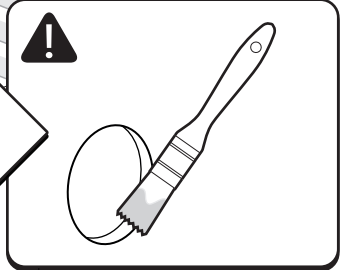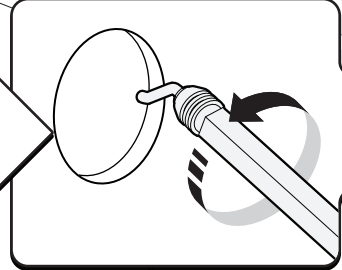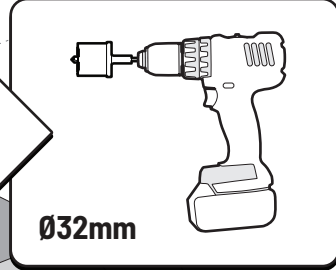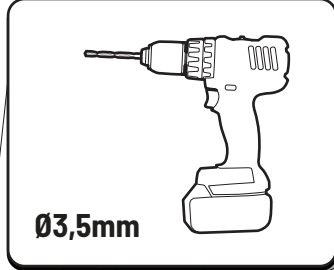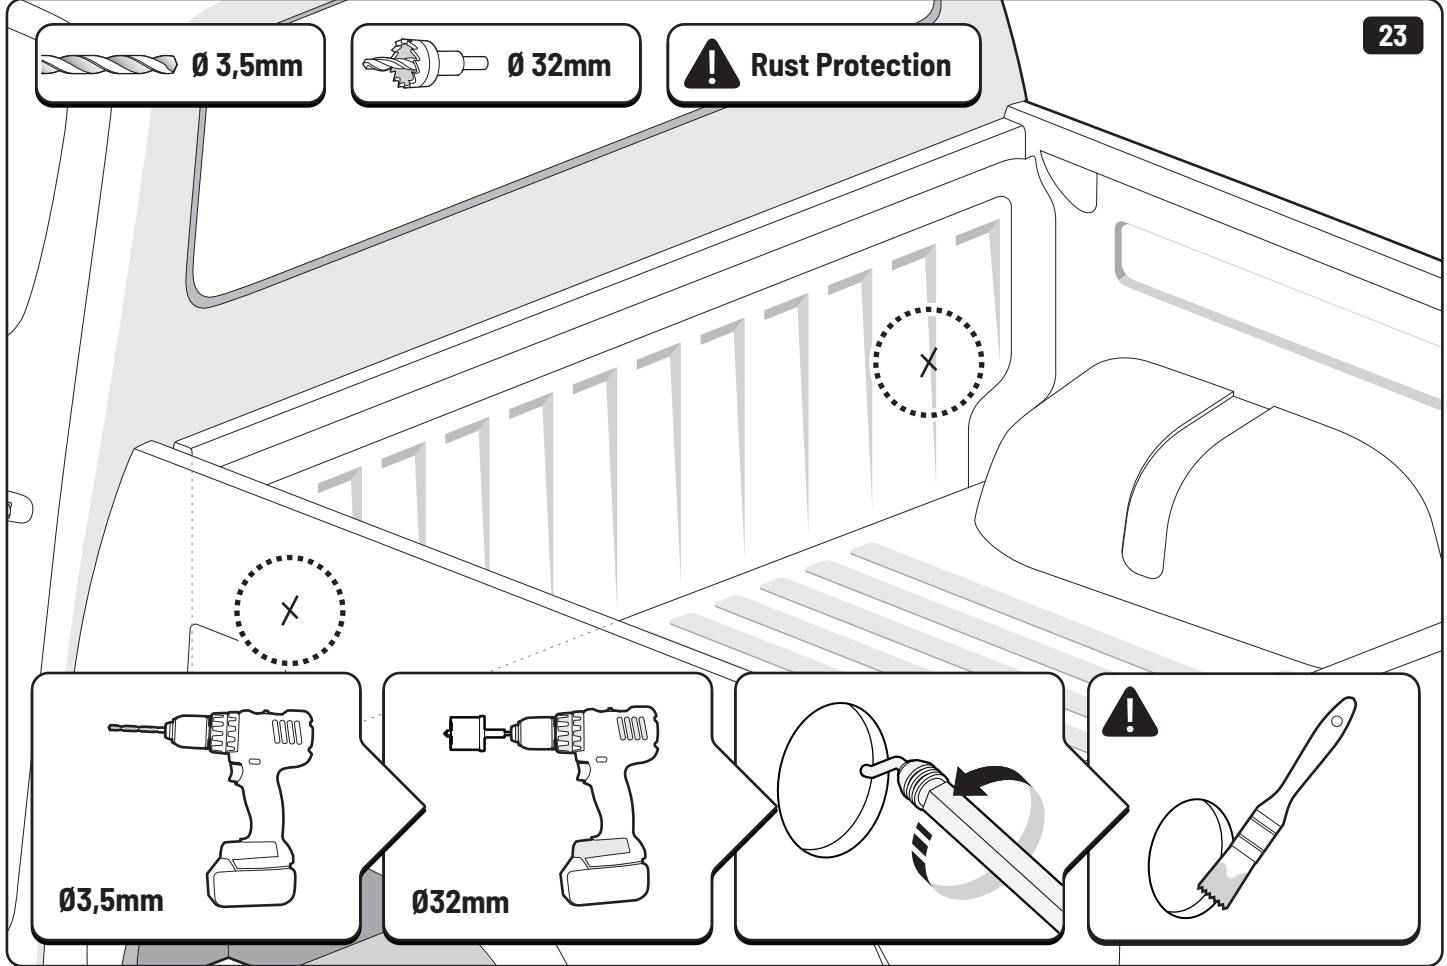


Maxus

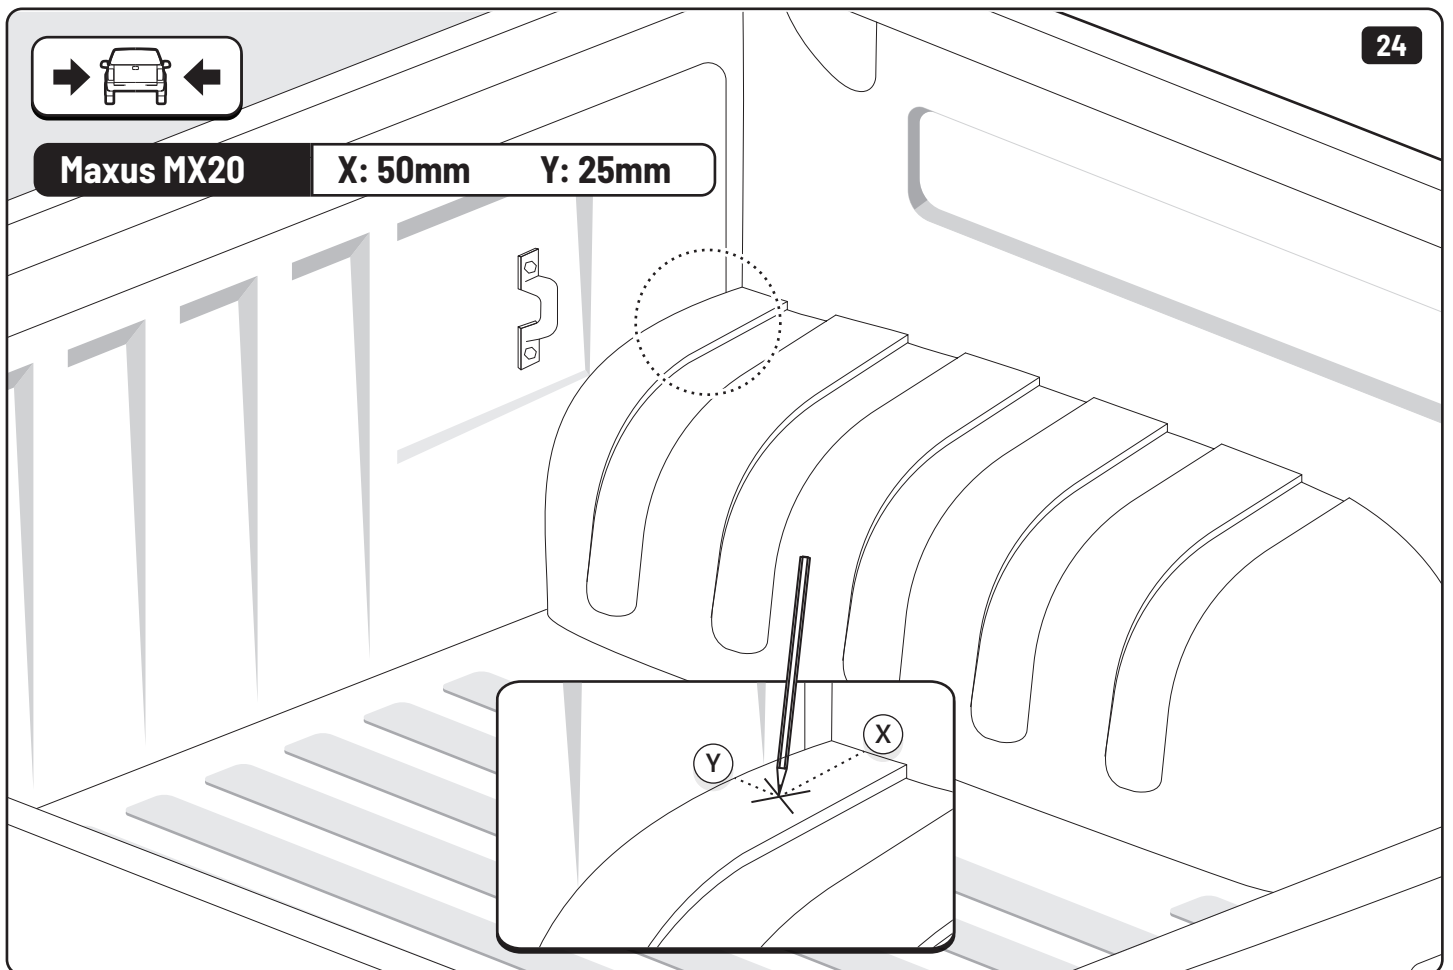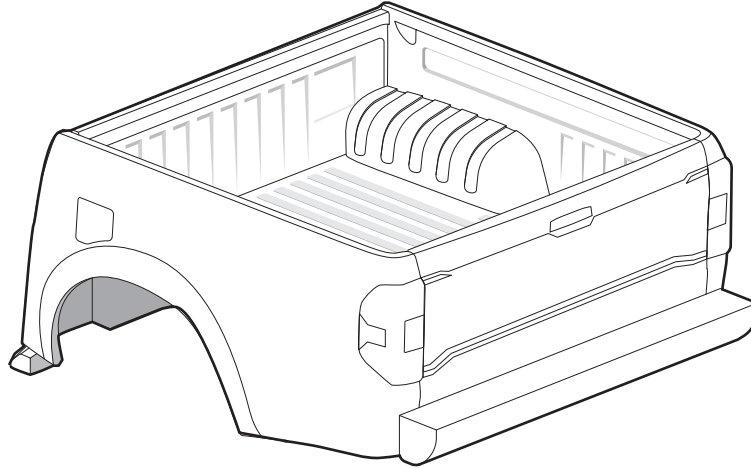

Ø 3,5mm


Ø 32mm



 Rust Protection



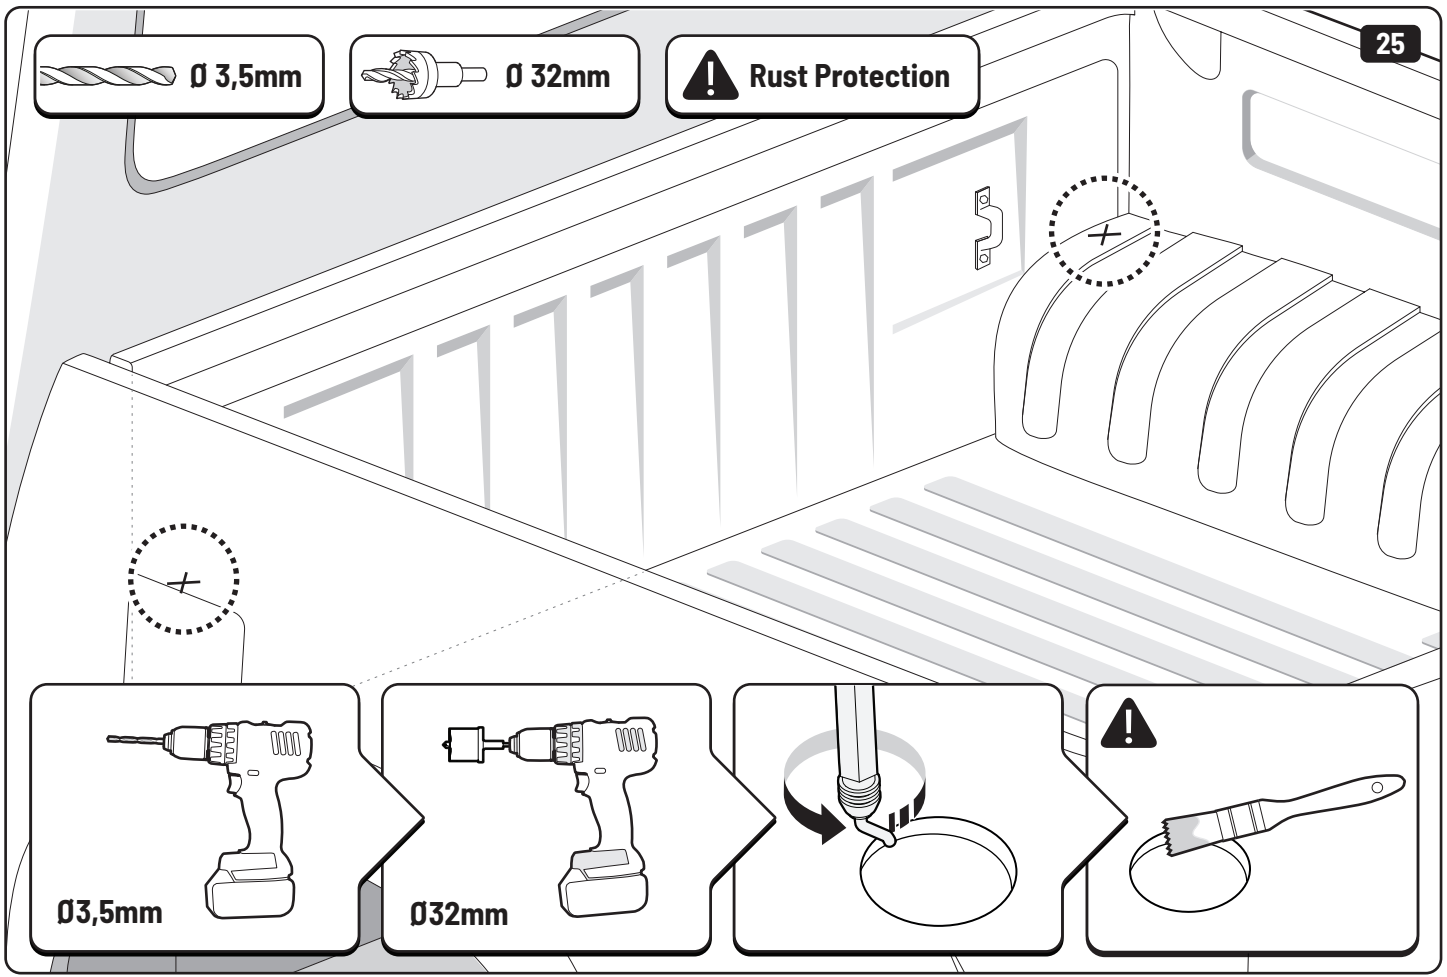




Ø3,5mm



Ø32mm


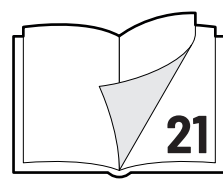


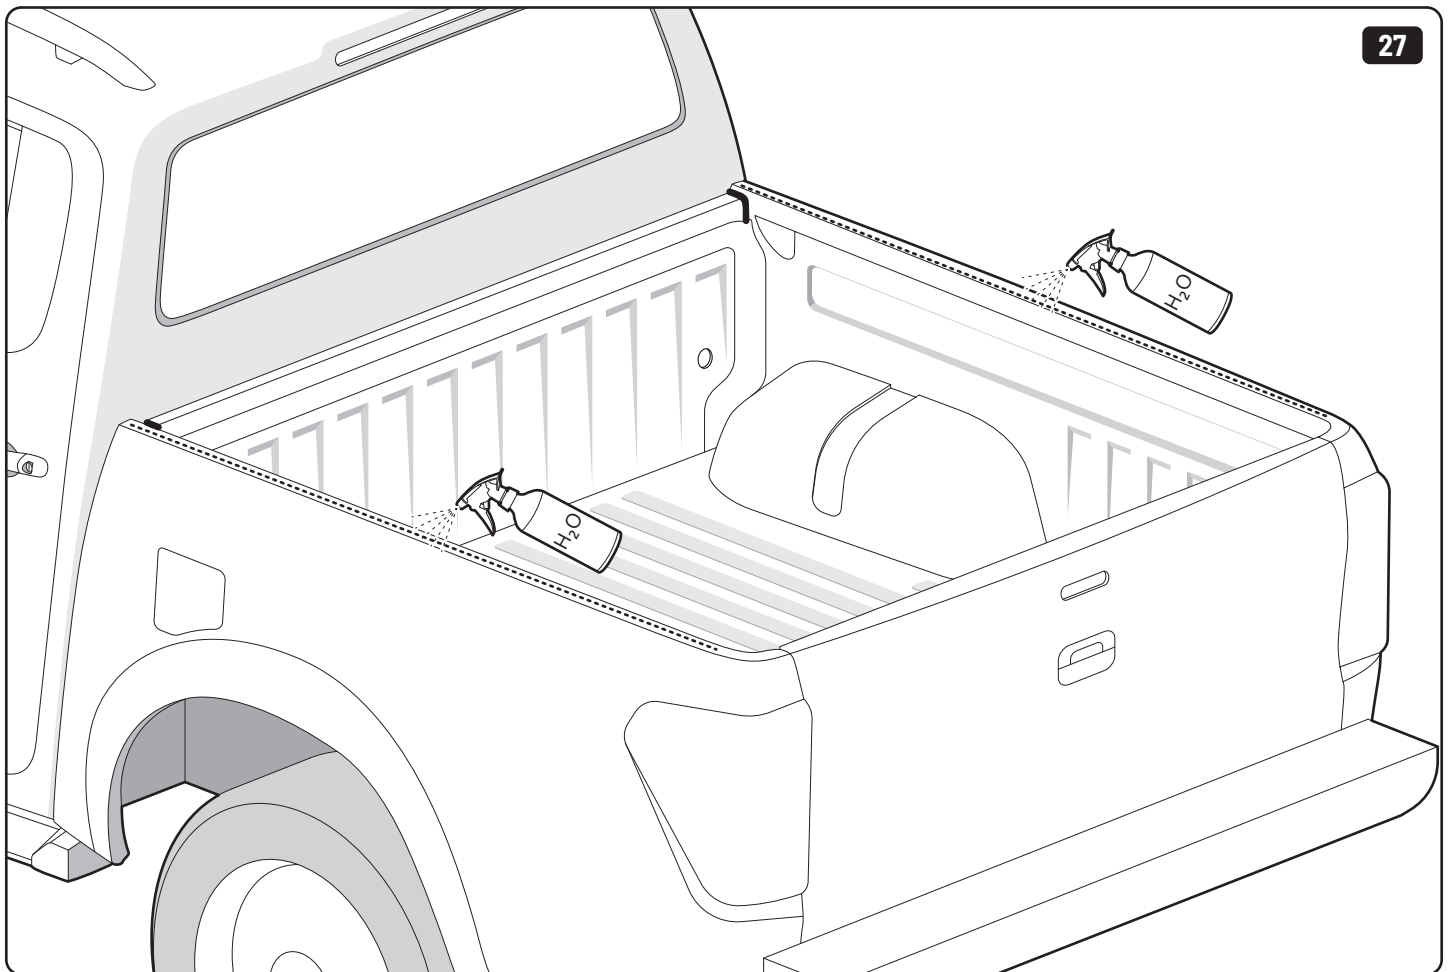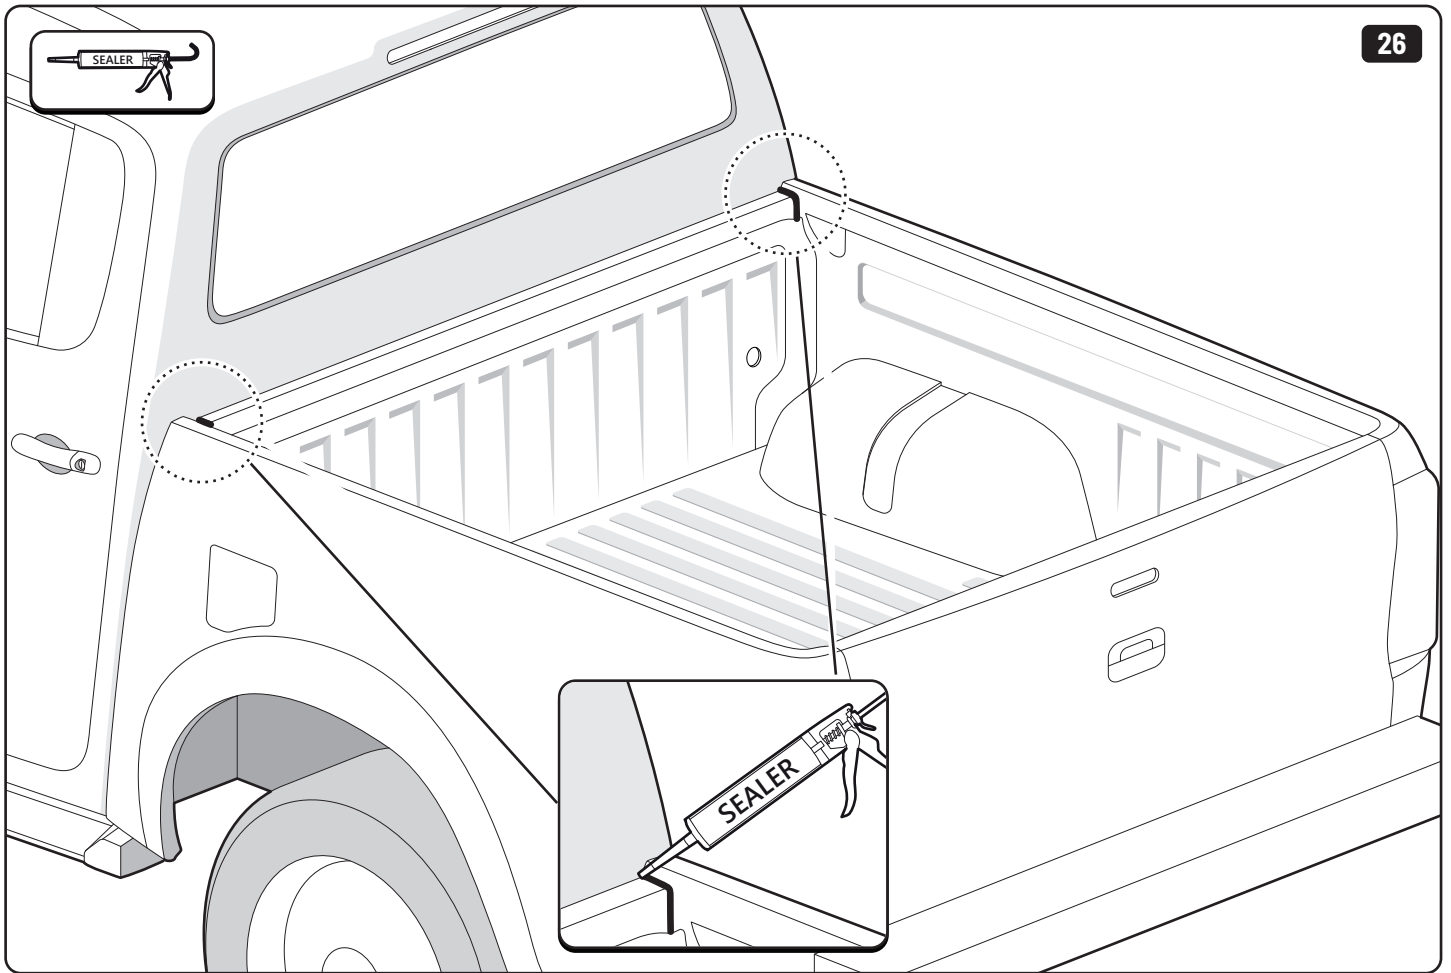


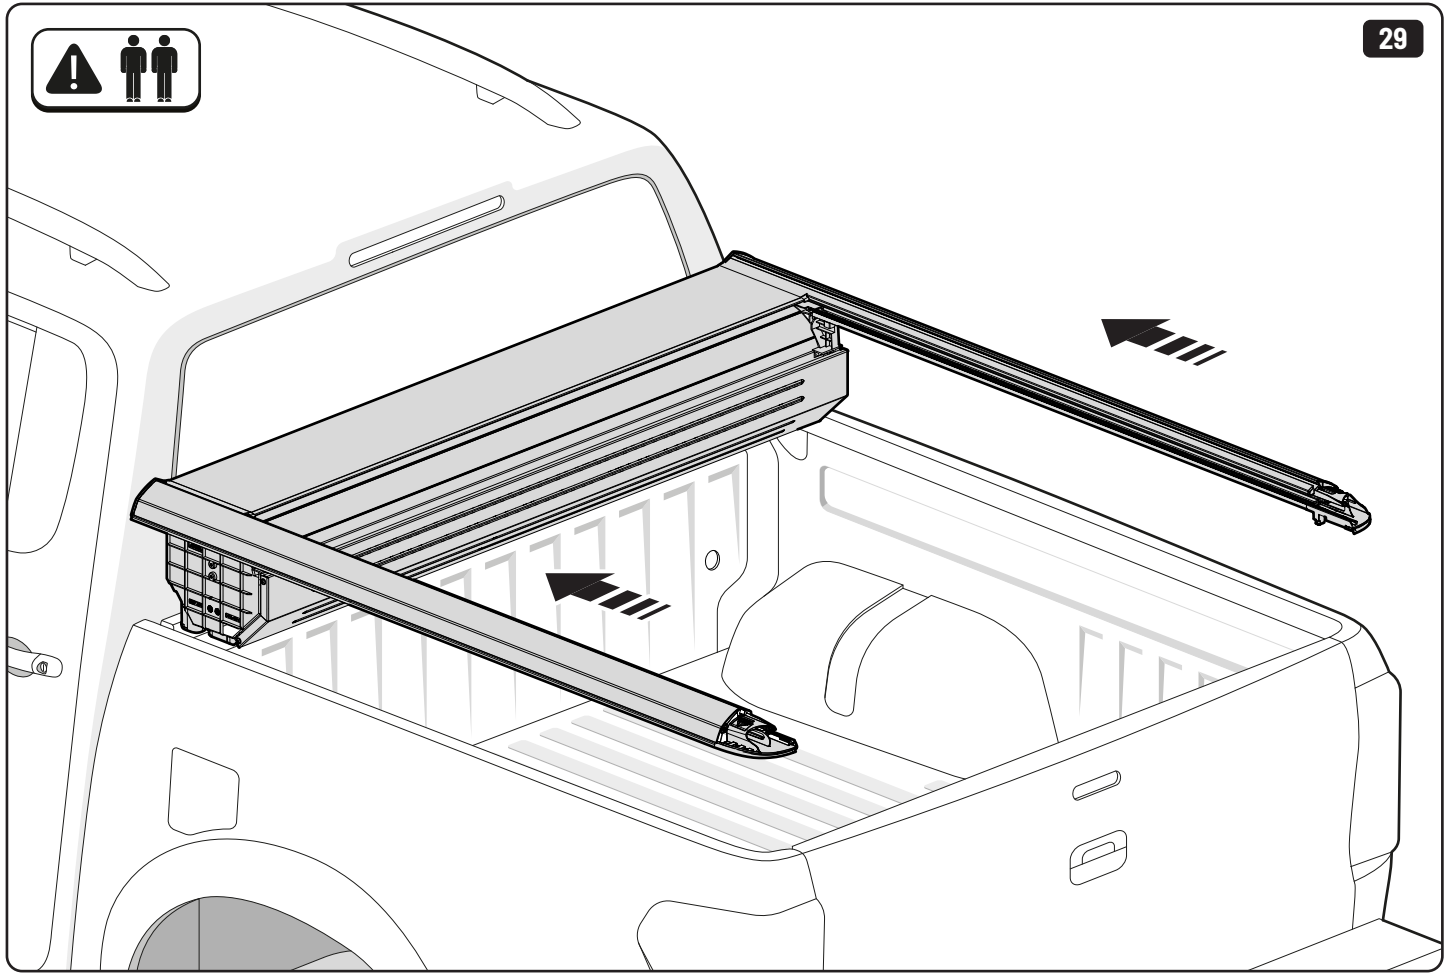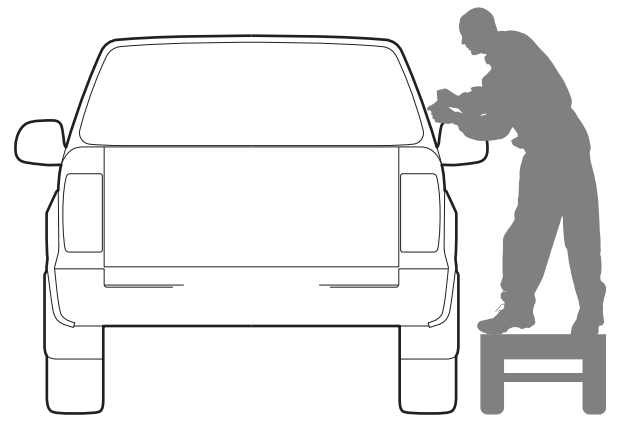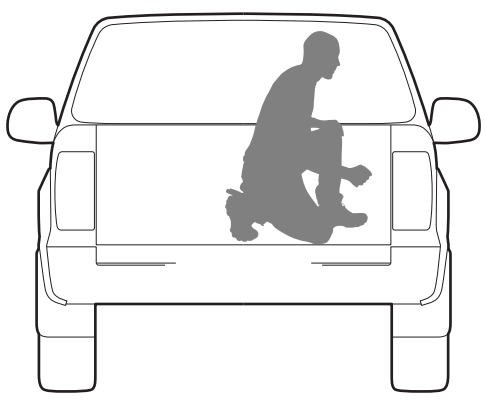

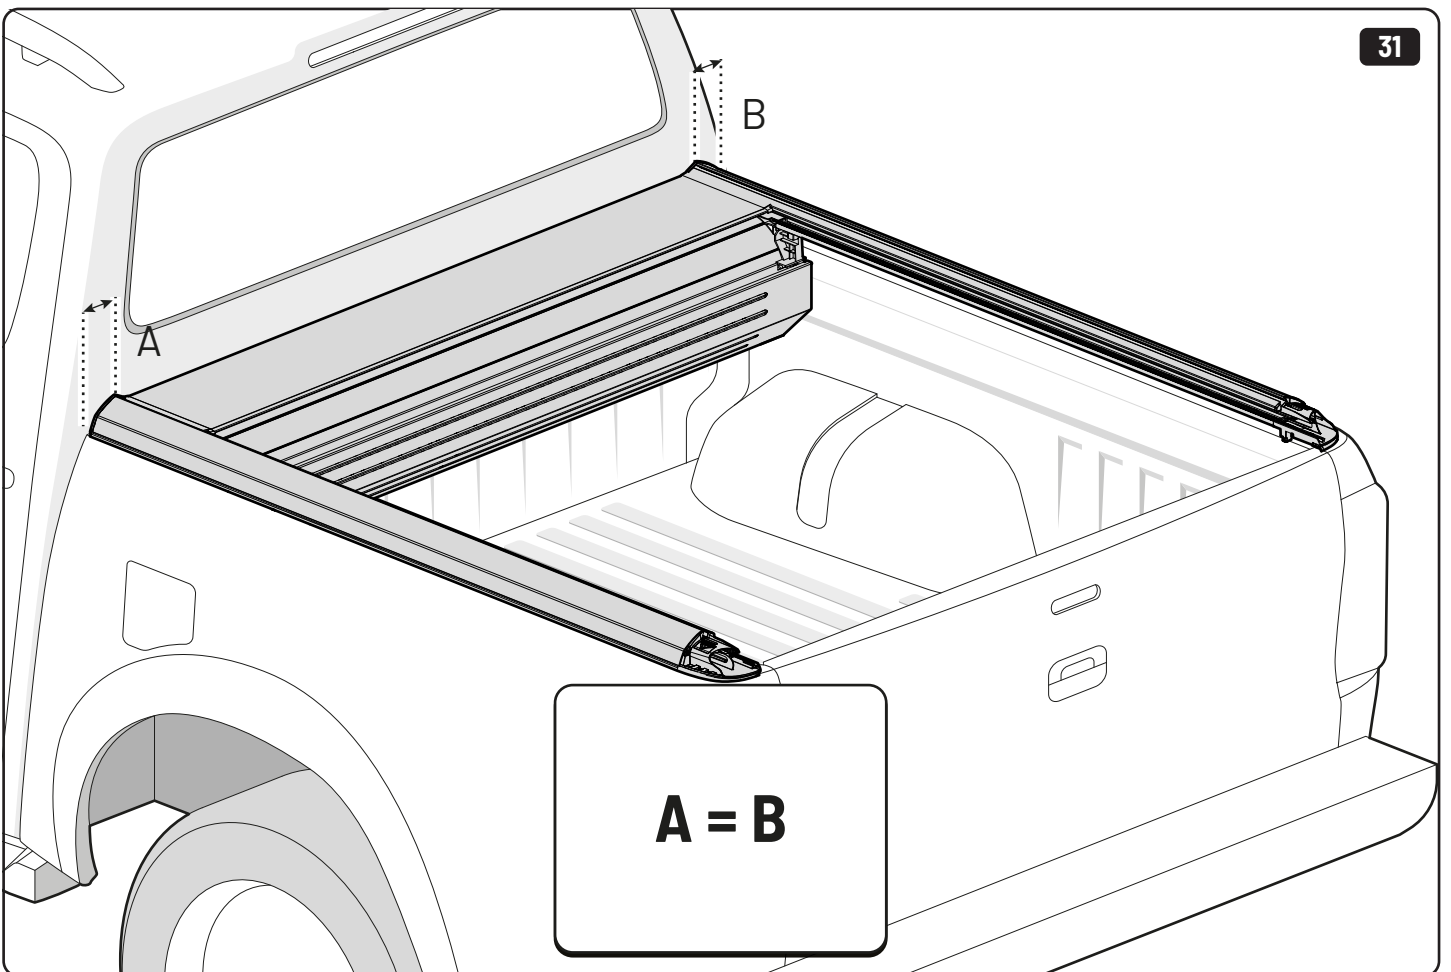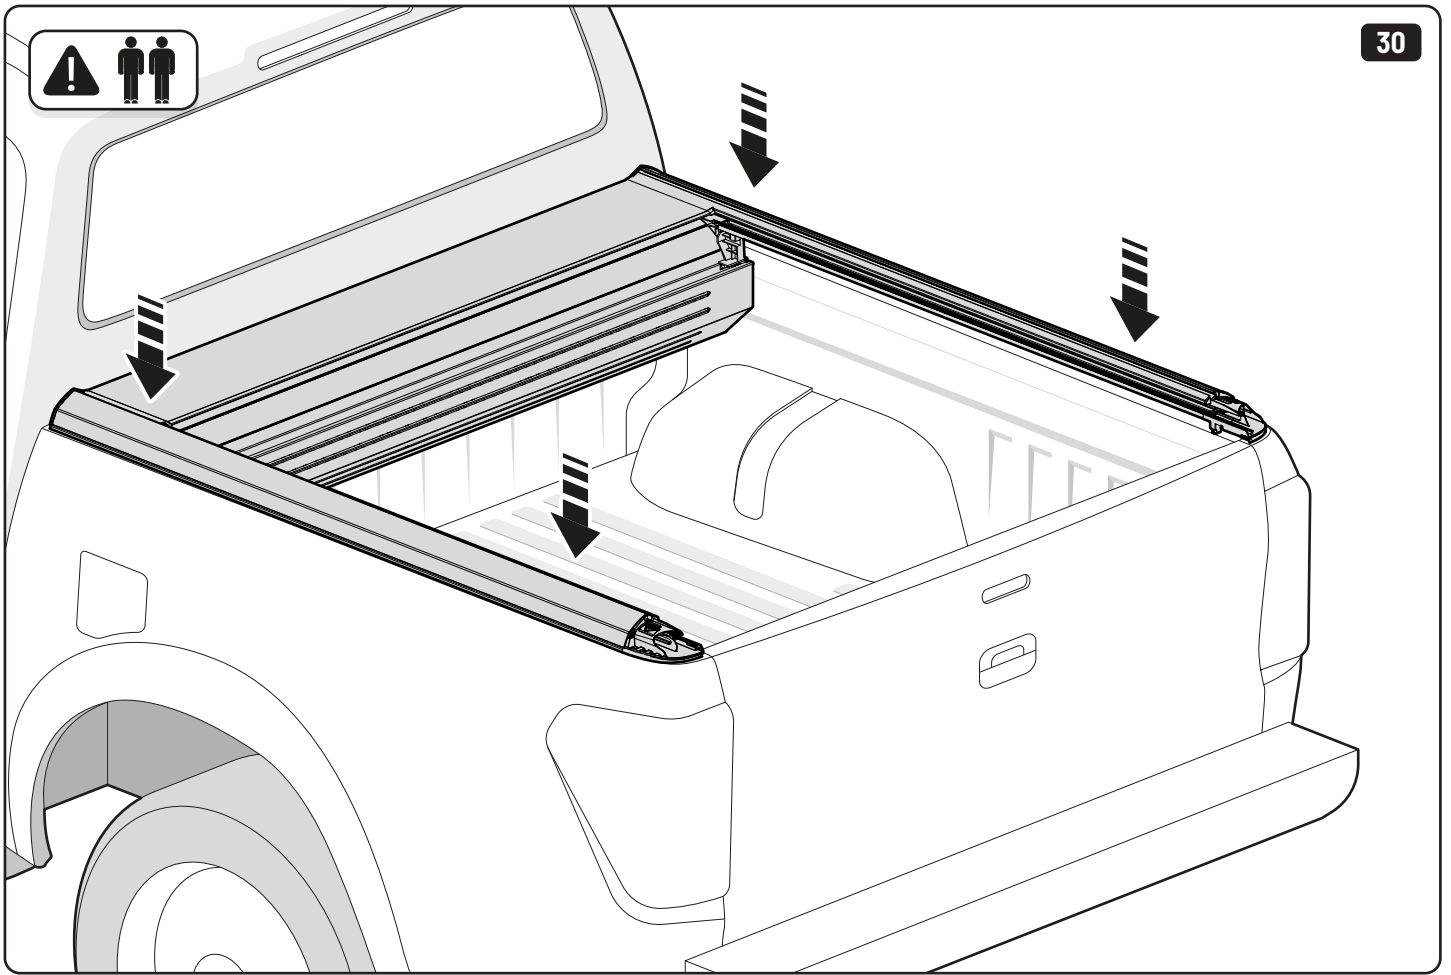


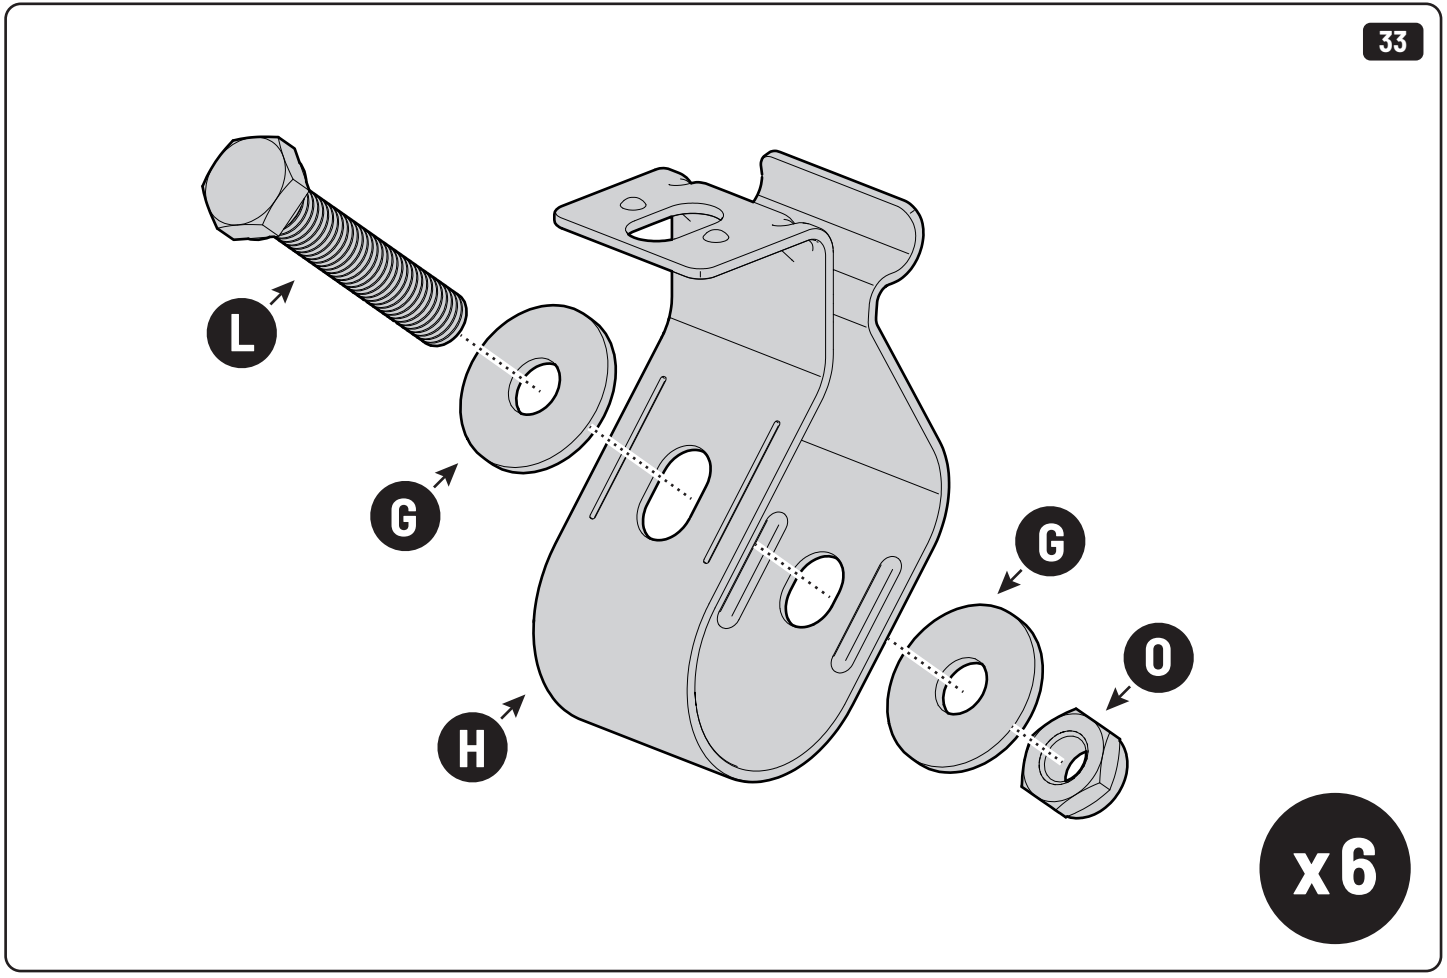
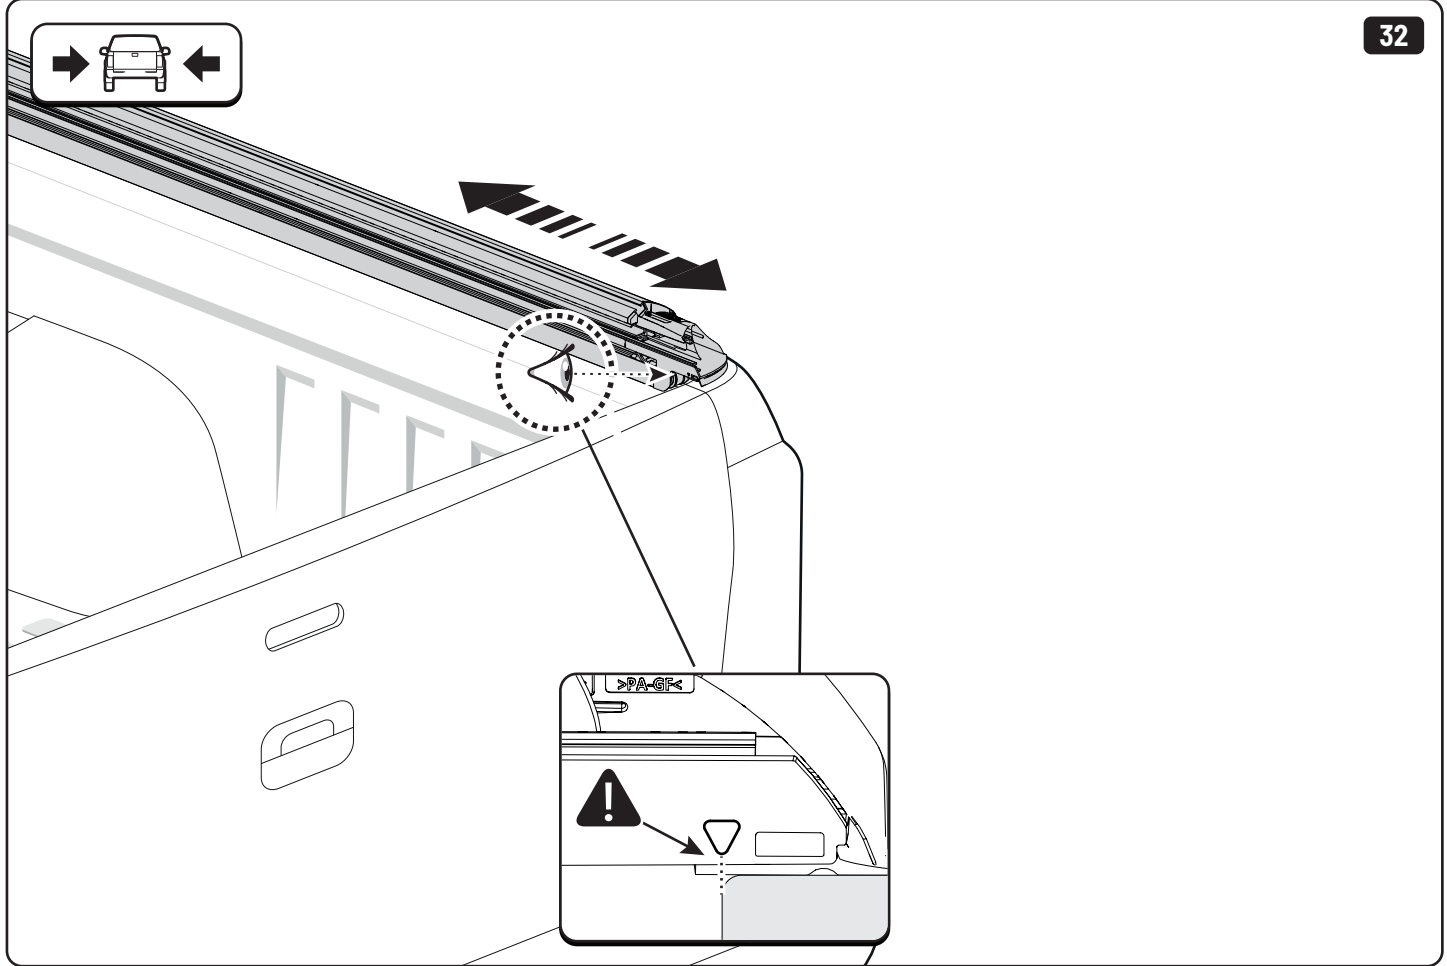


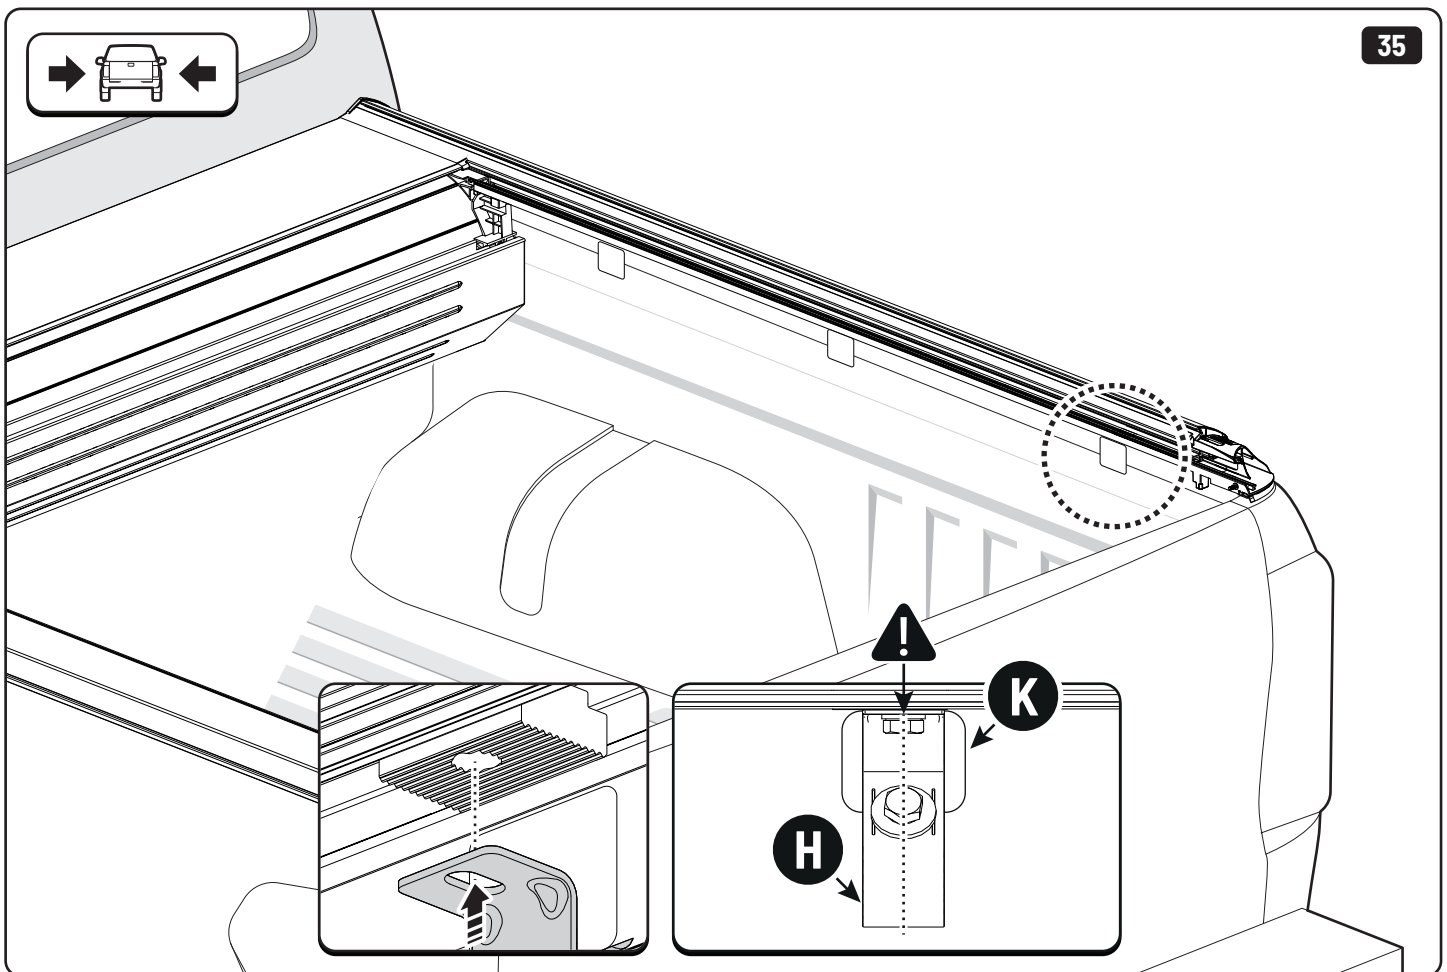
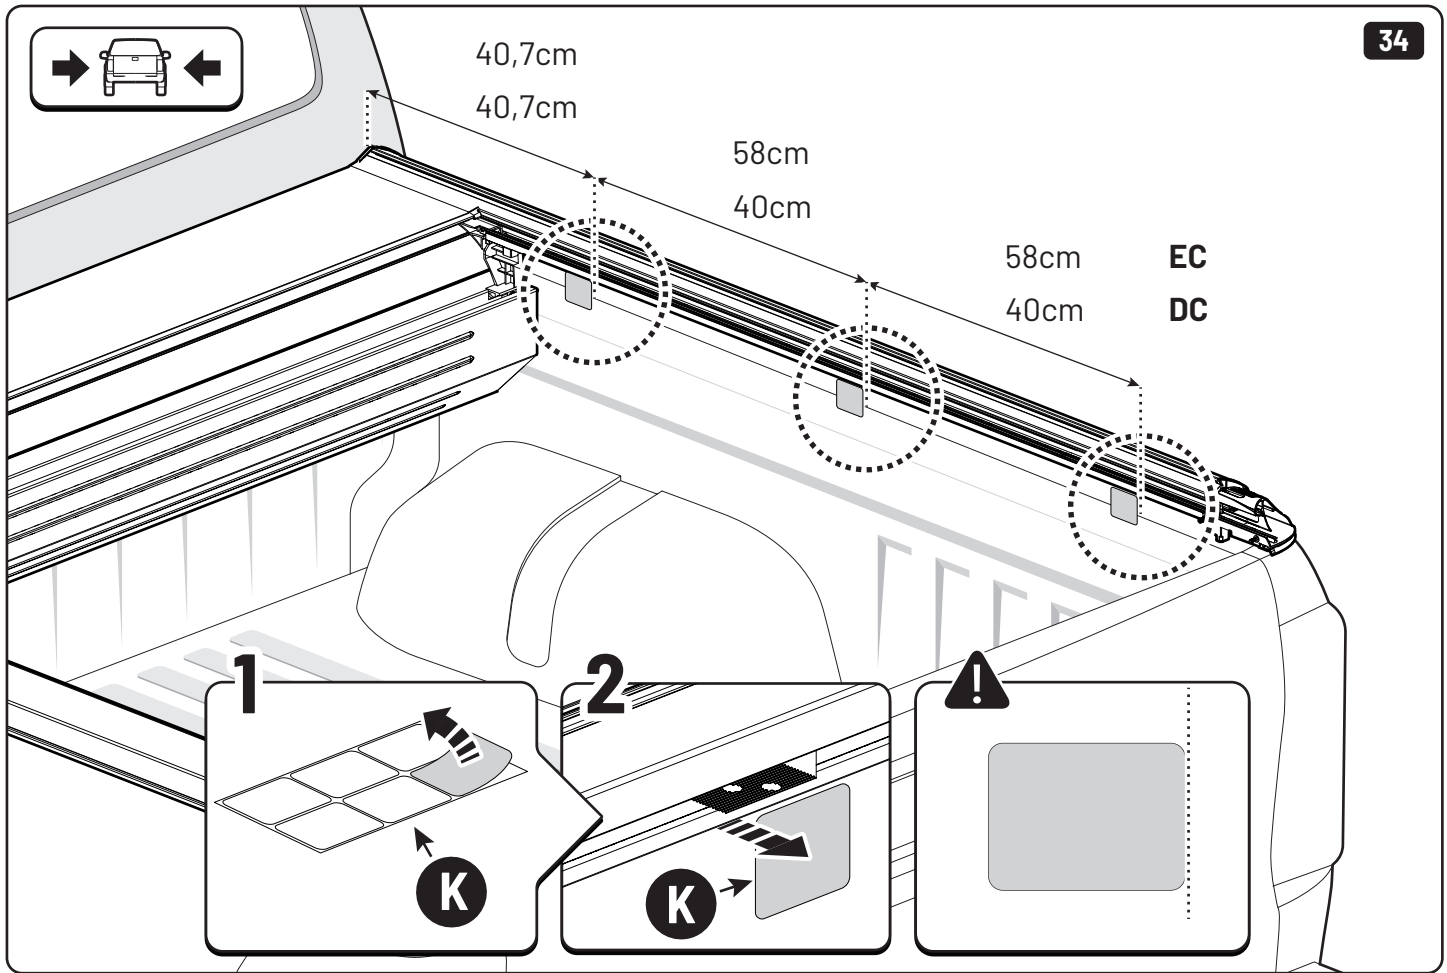







LOCTITE 243


x2

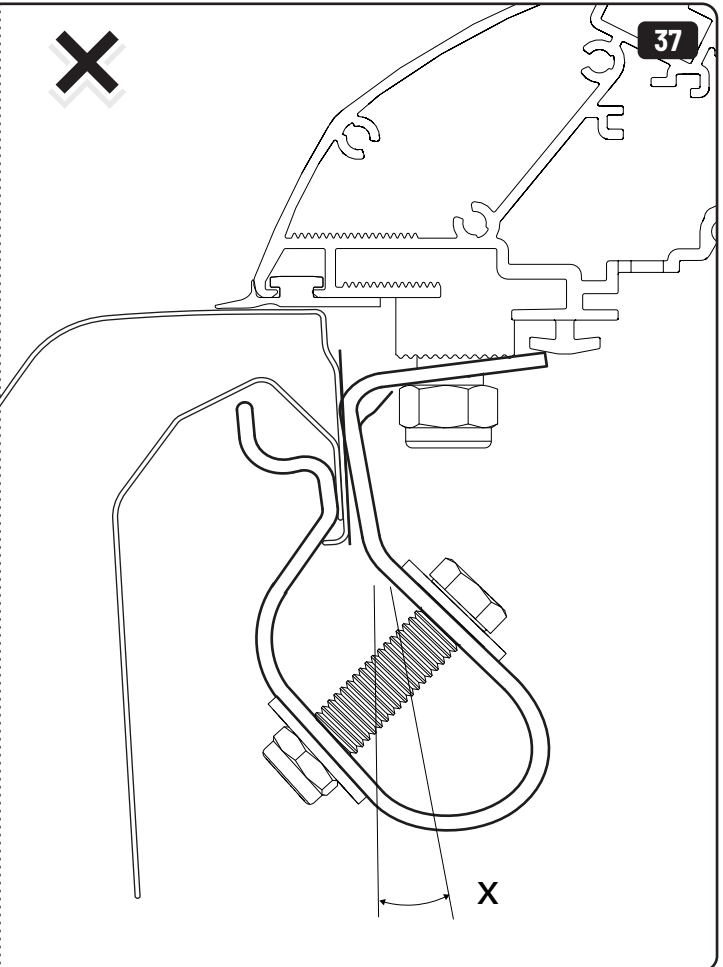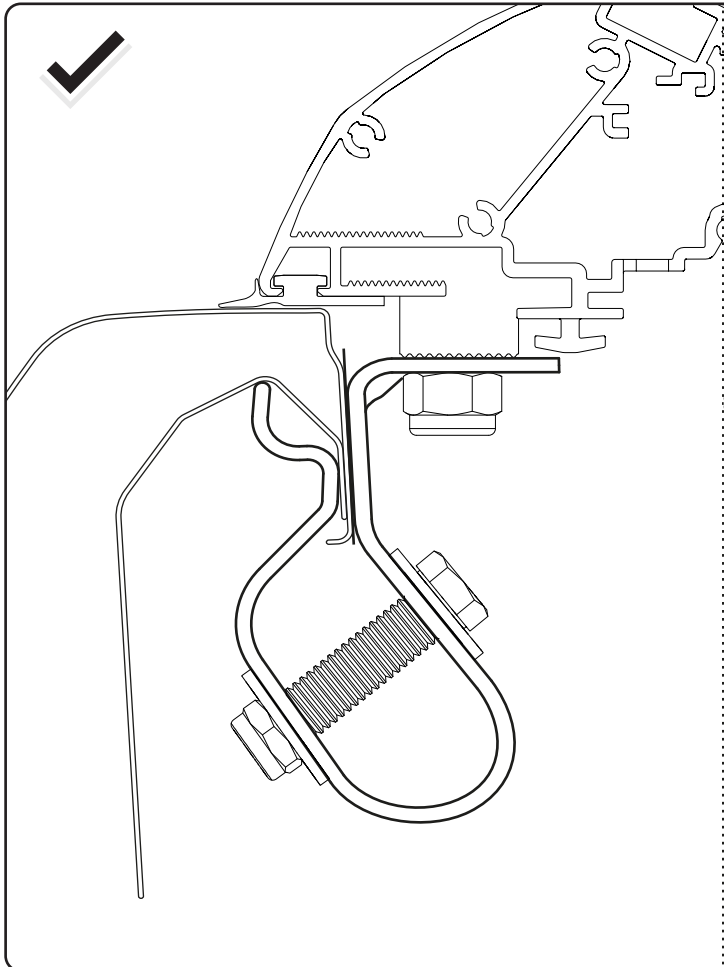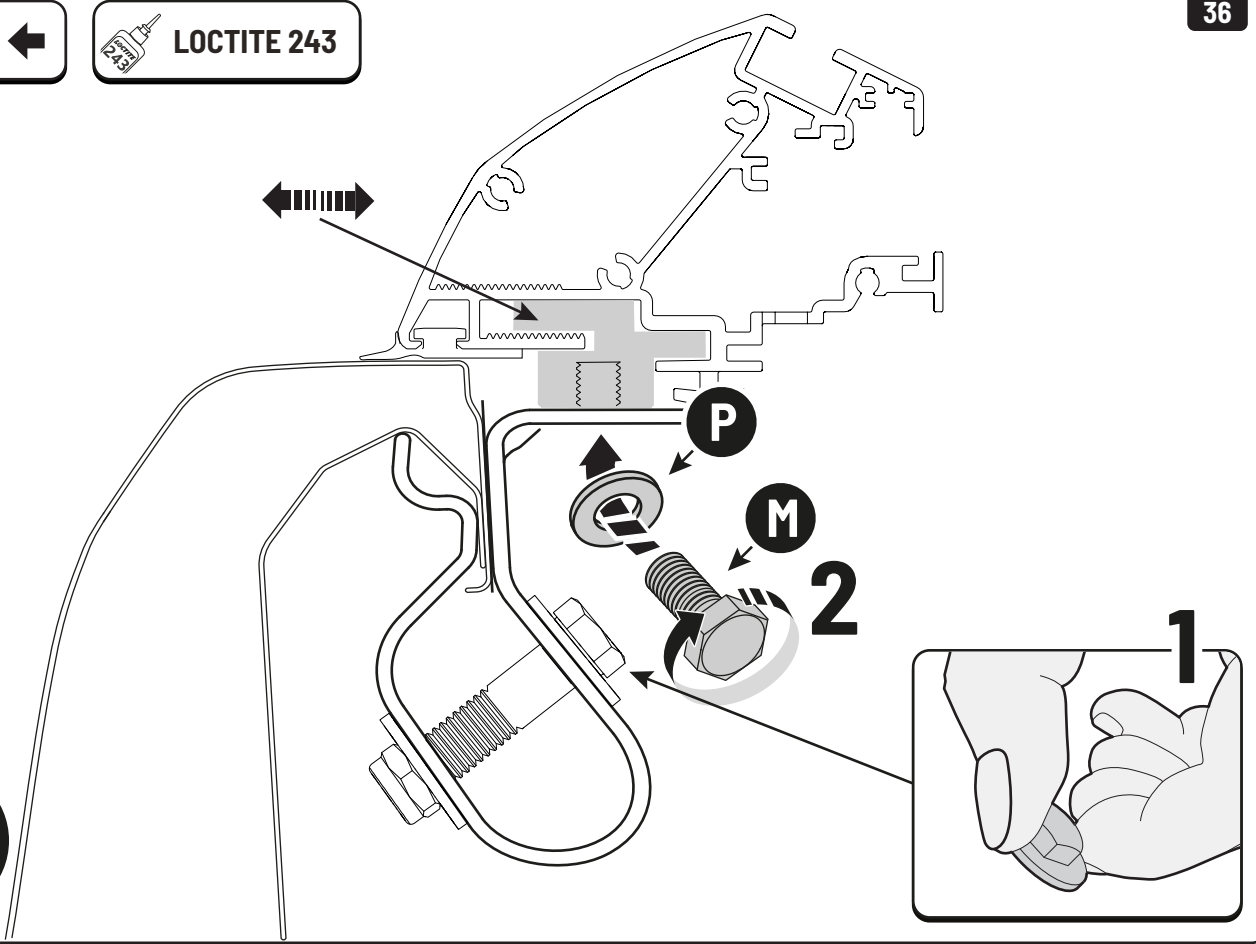

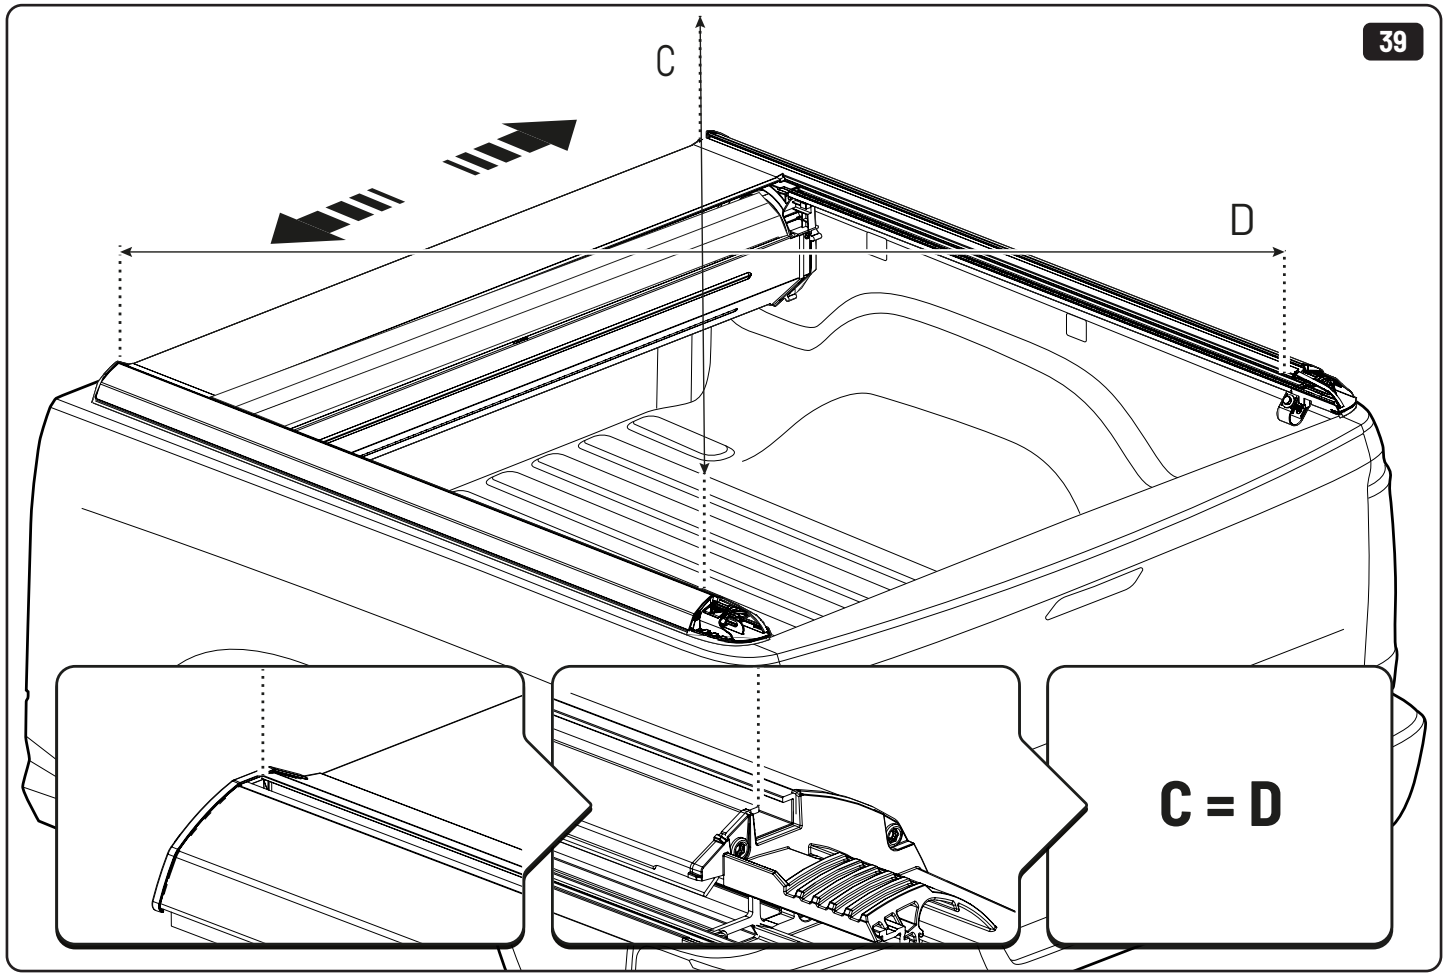
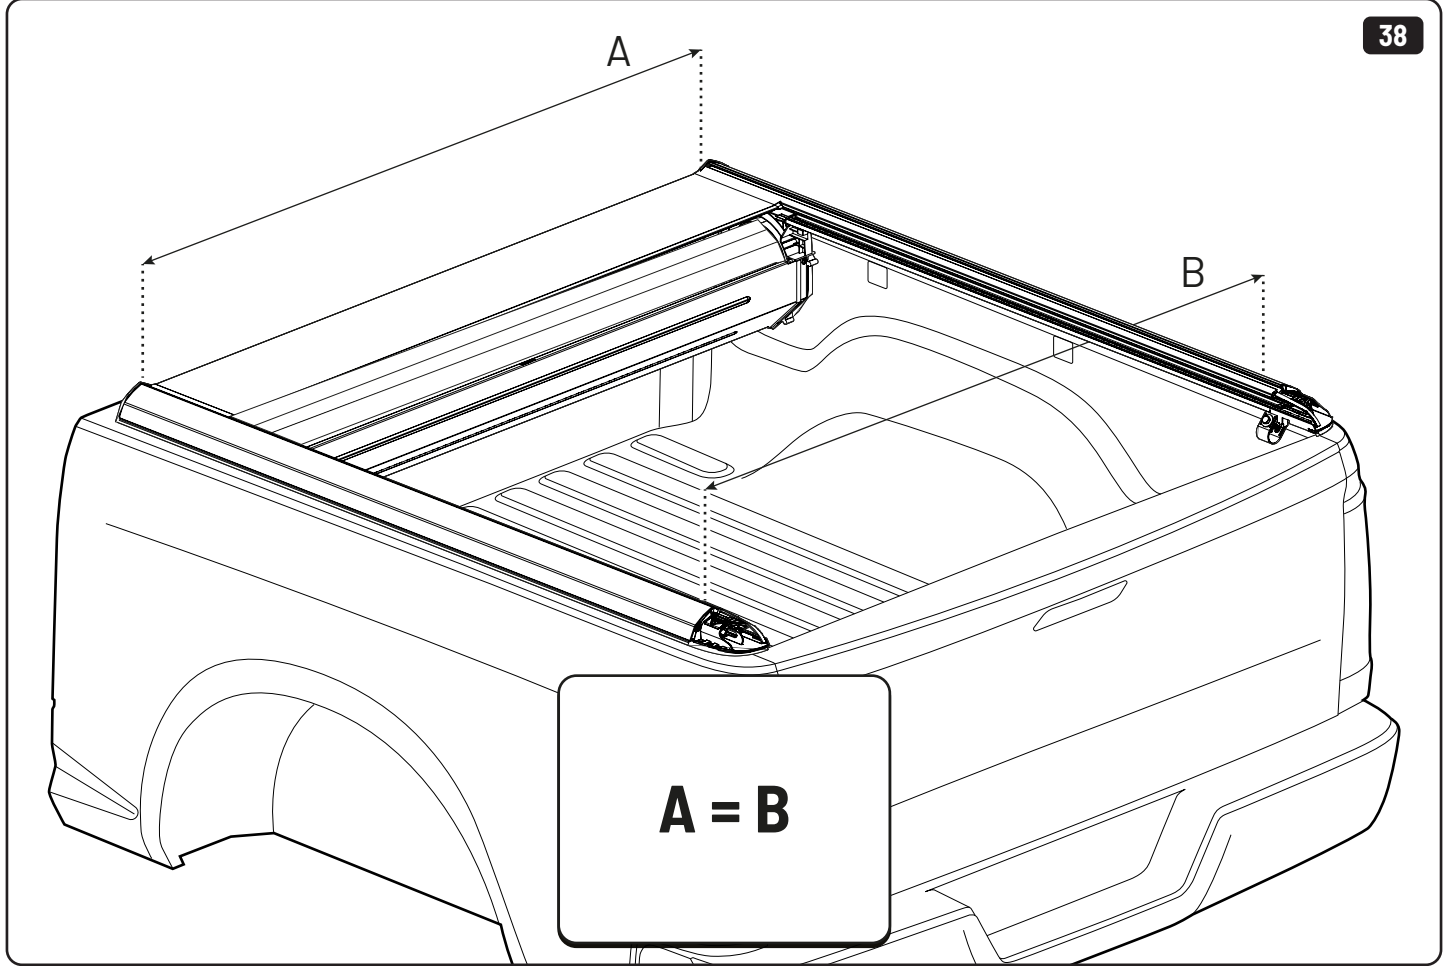


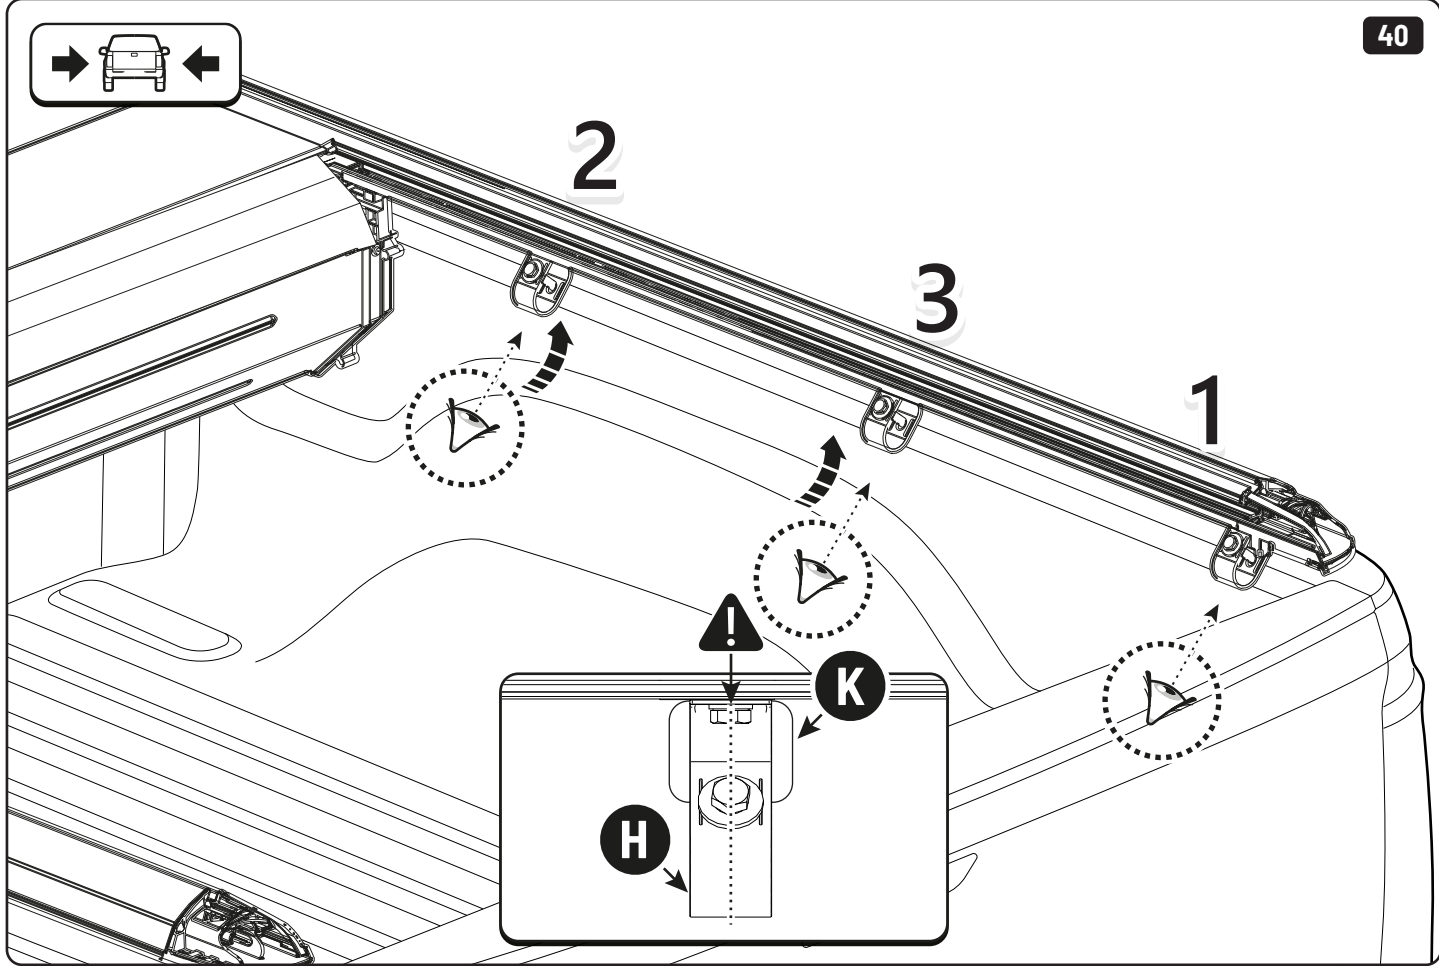





13mm 10Nm


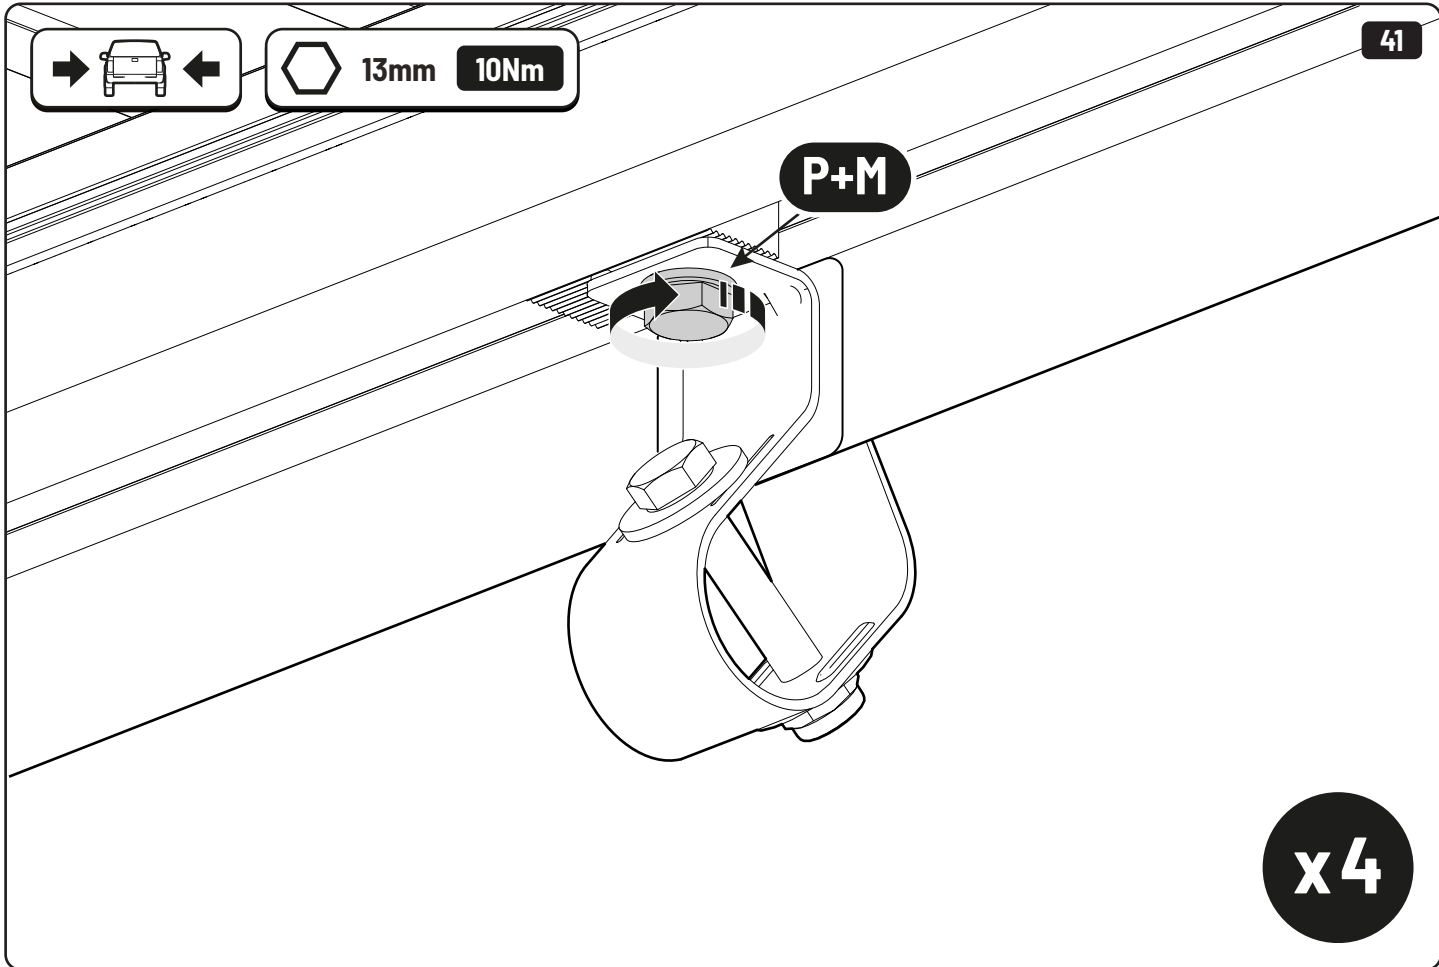




x4

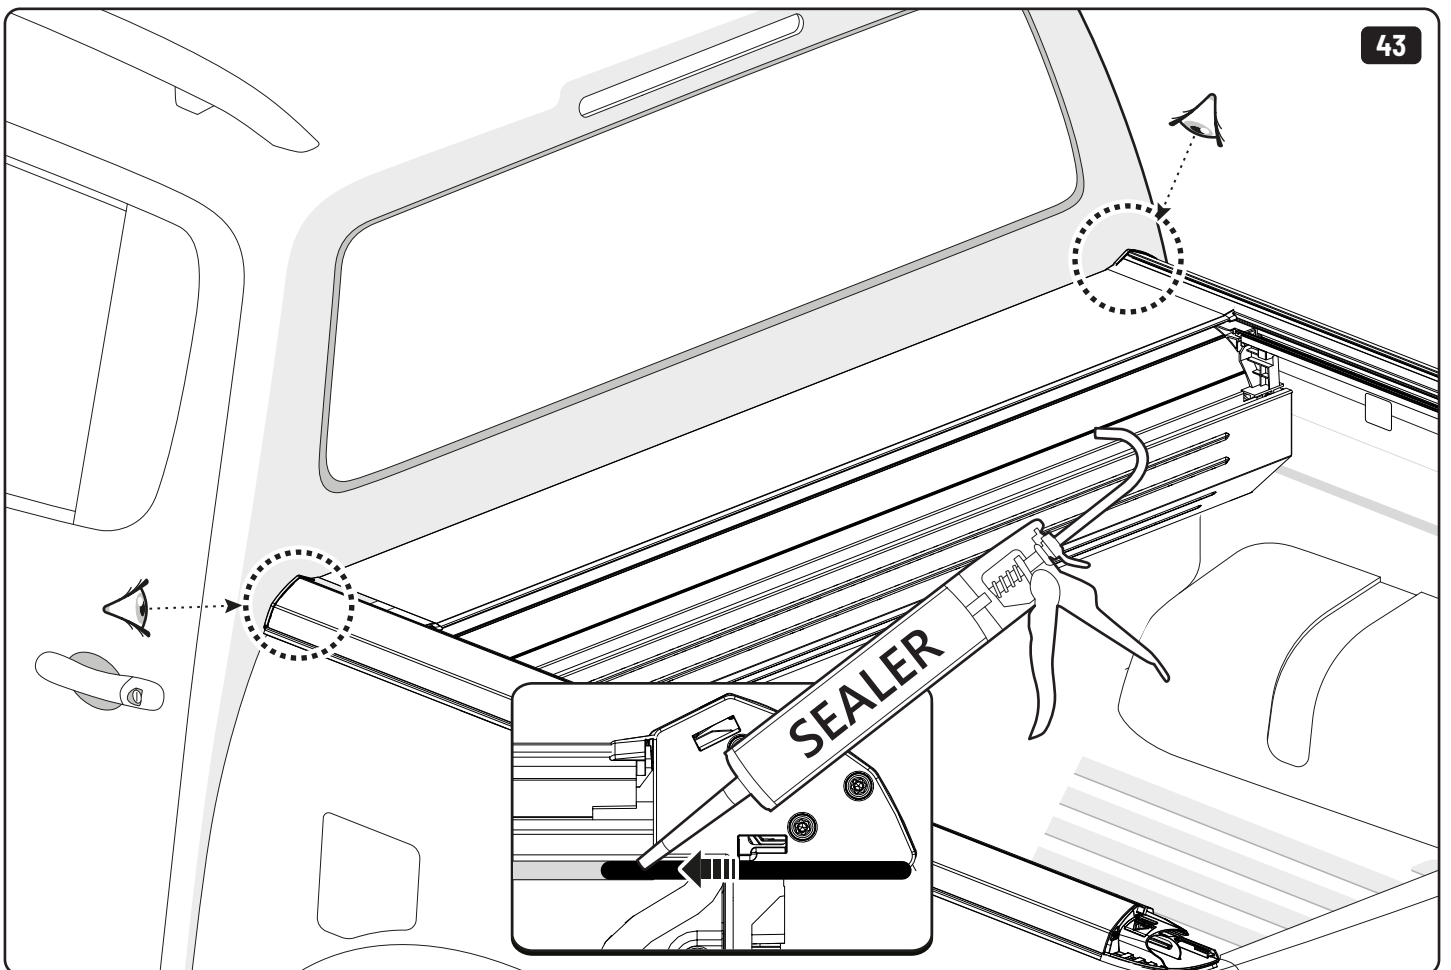
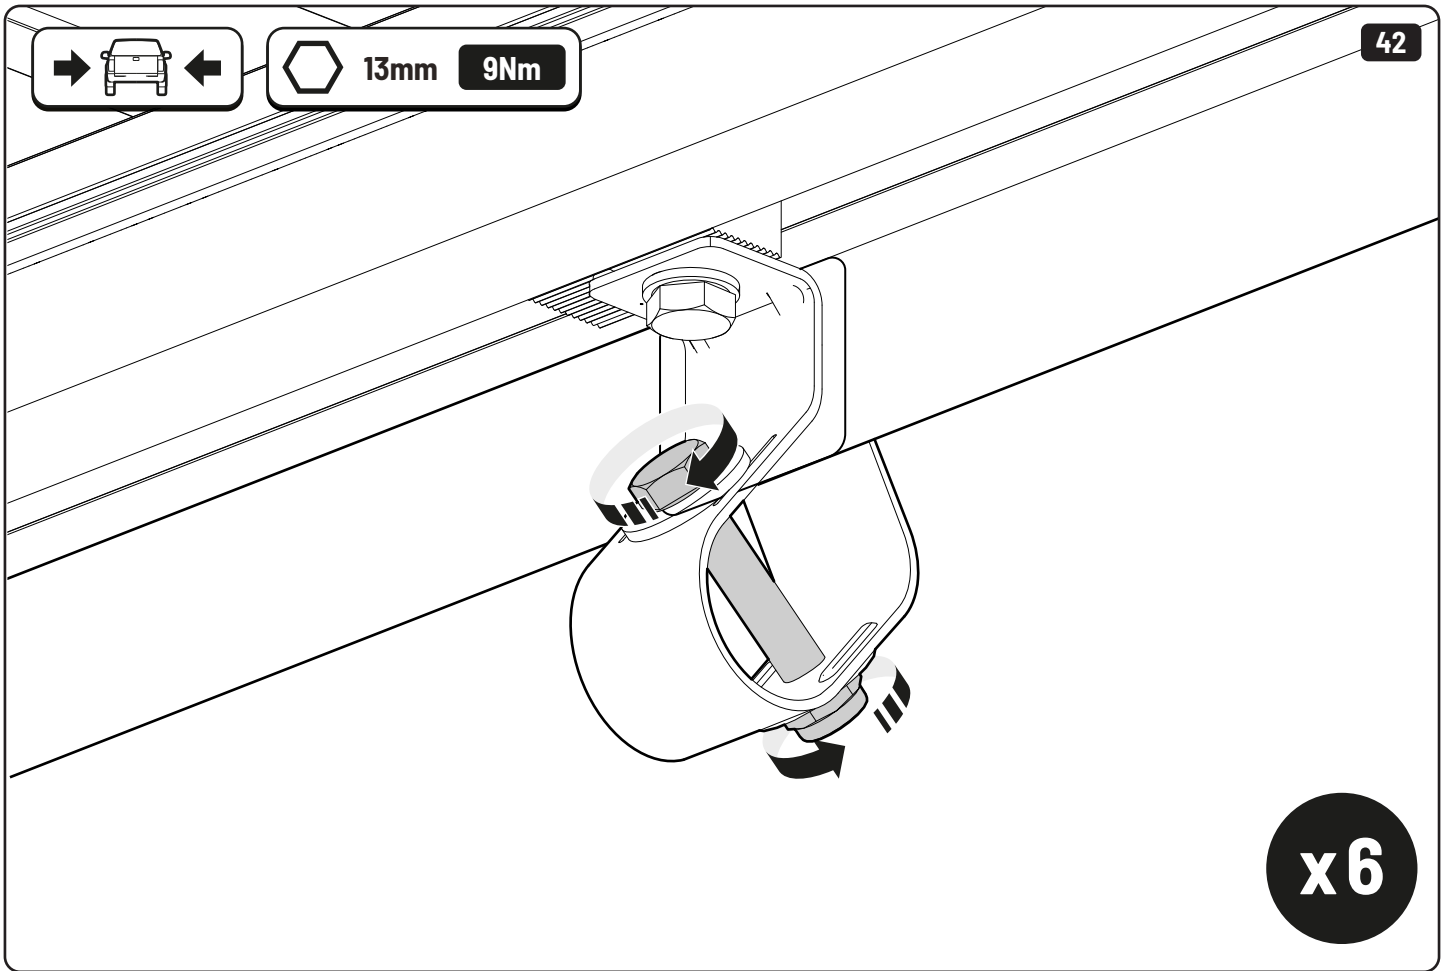


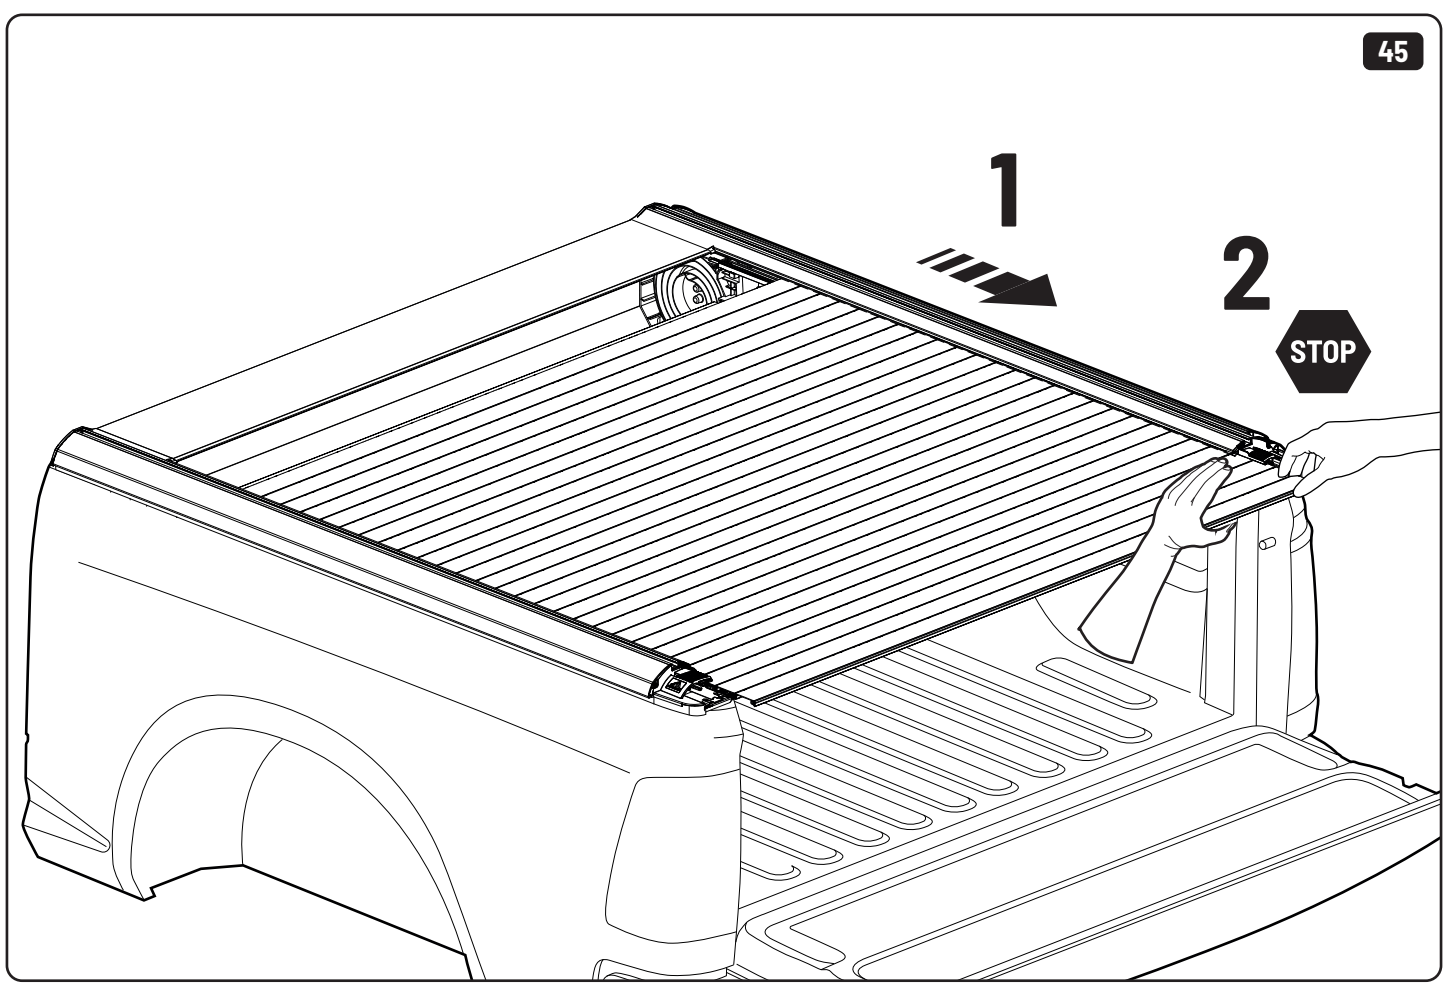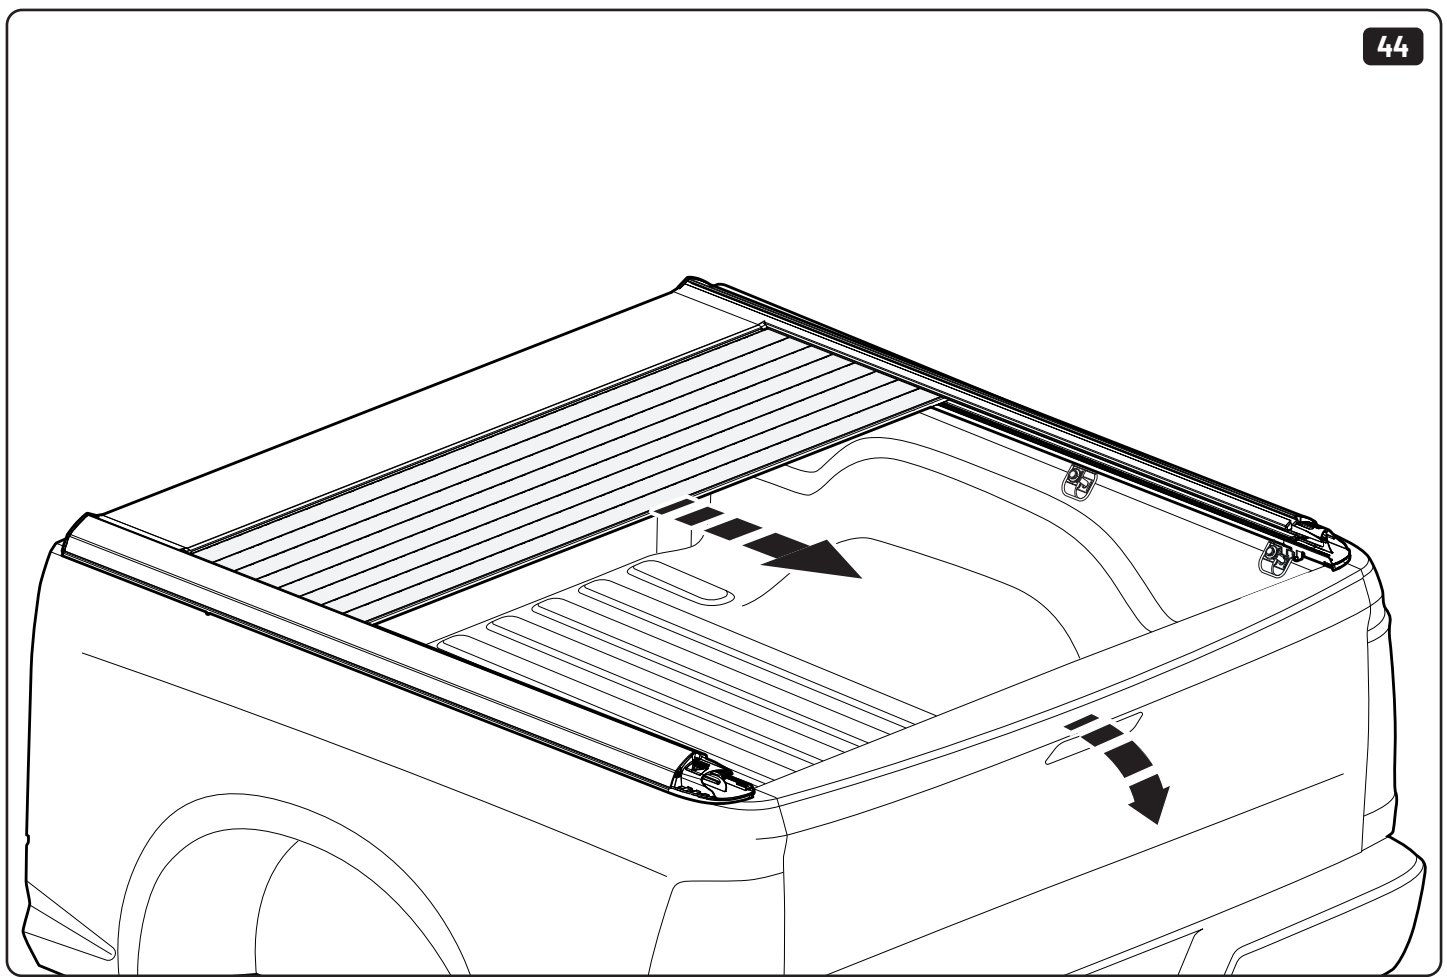


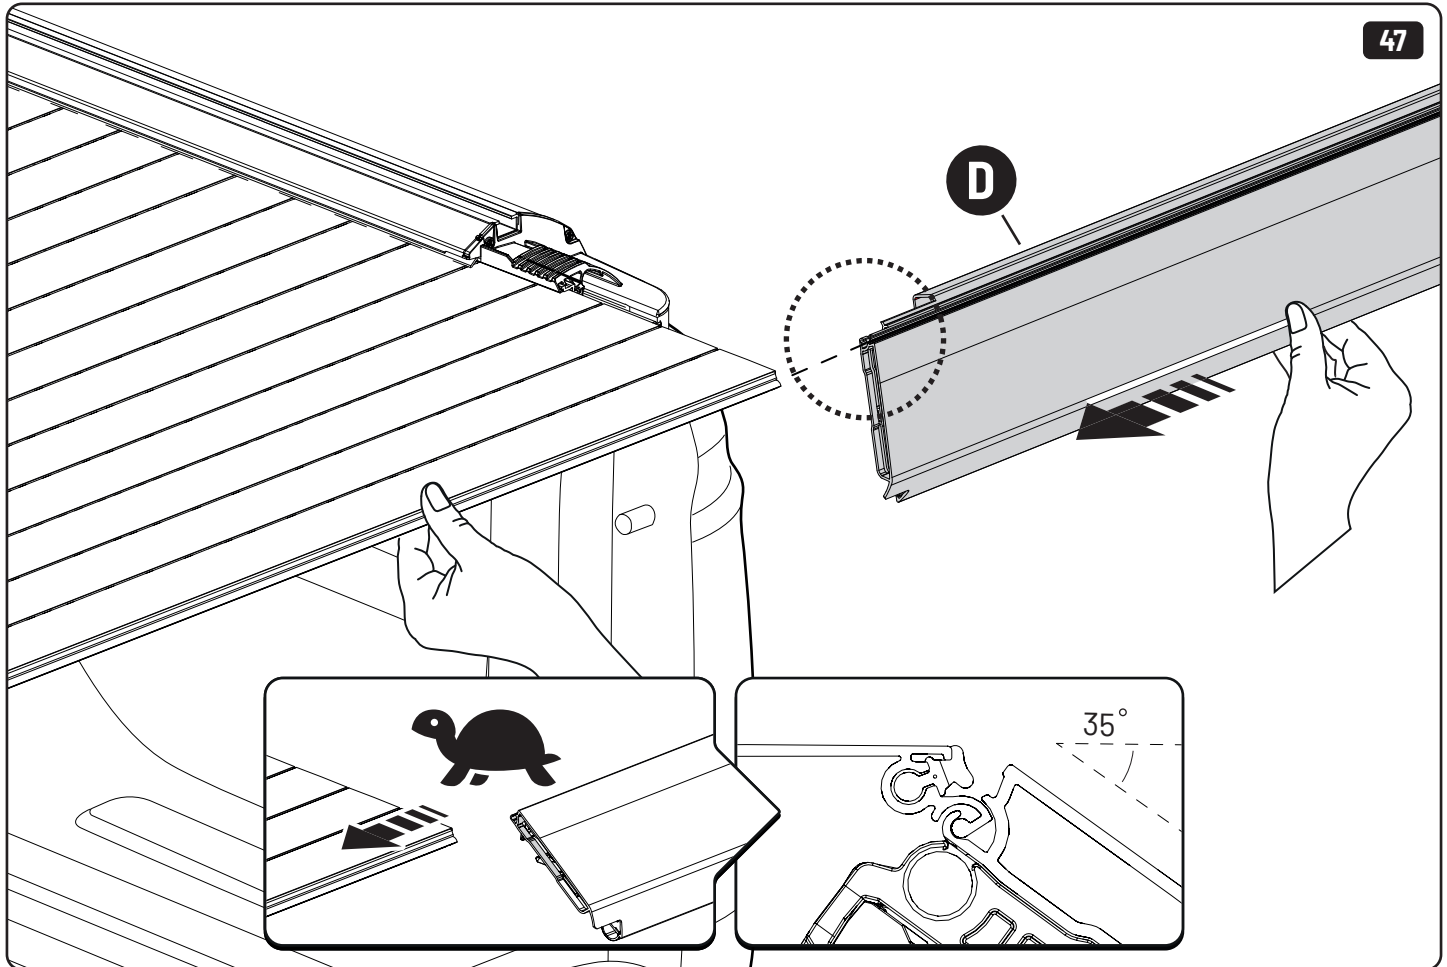
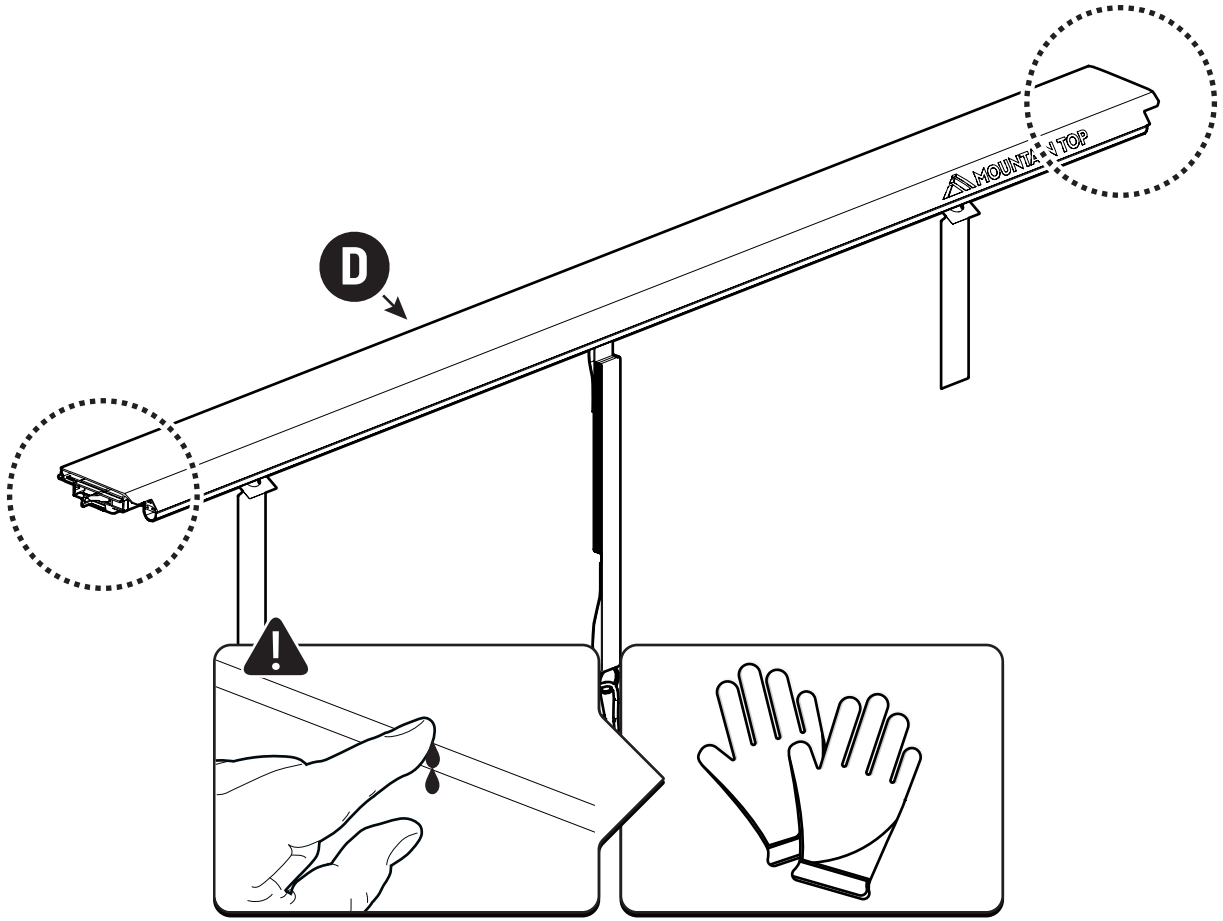


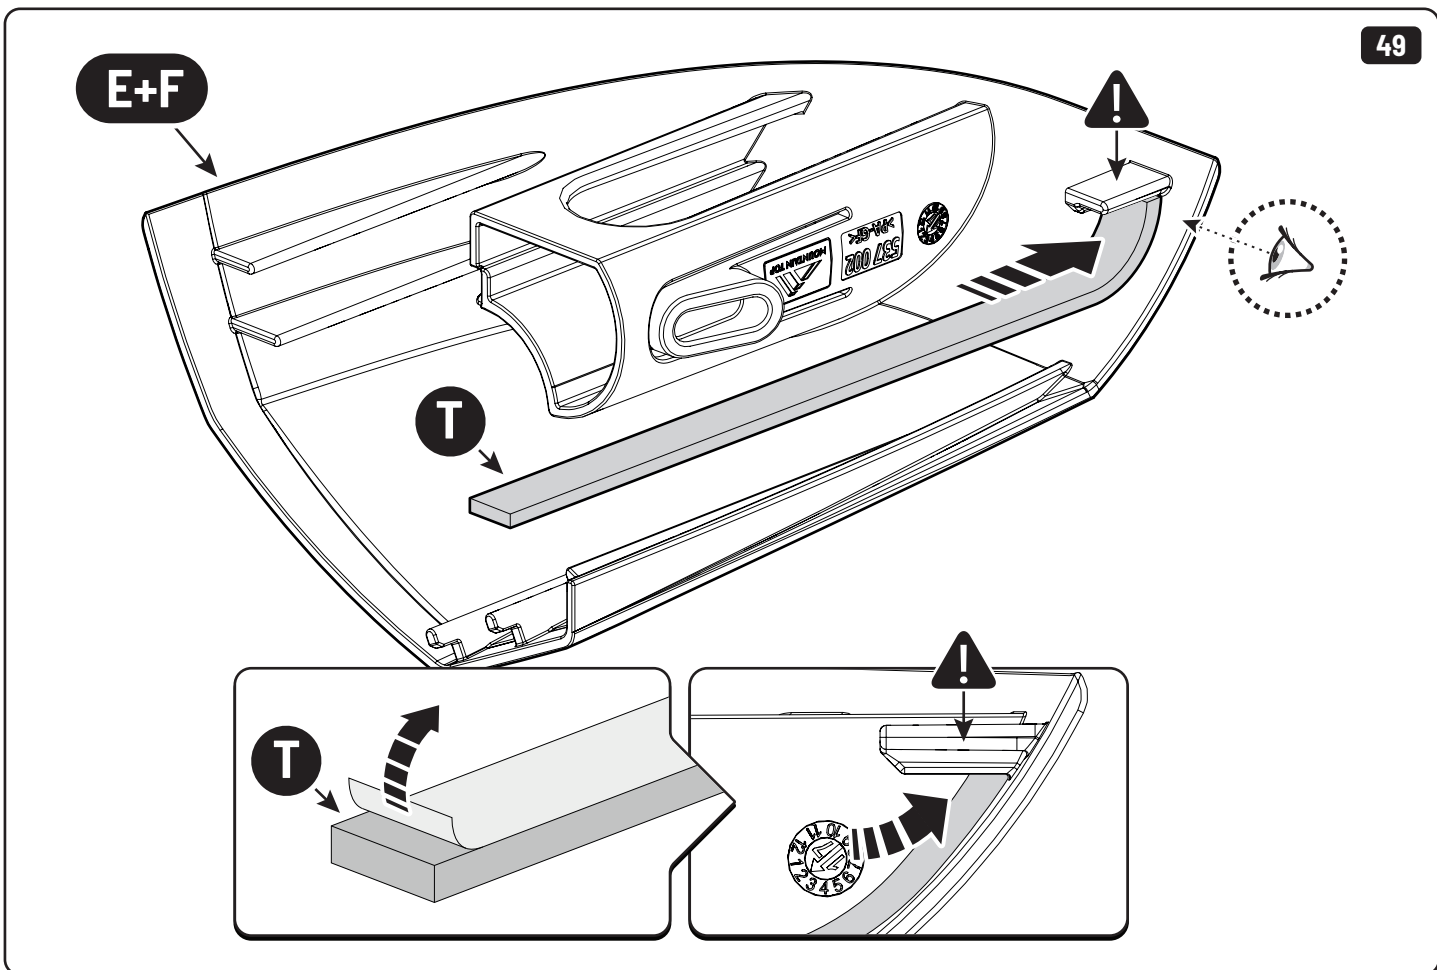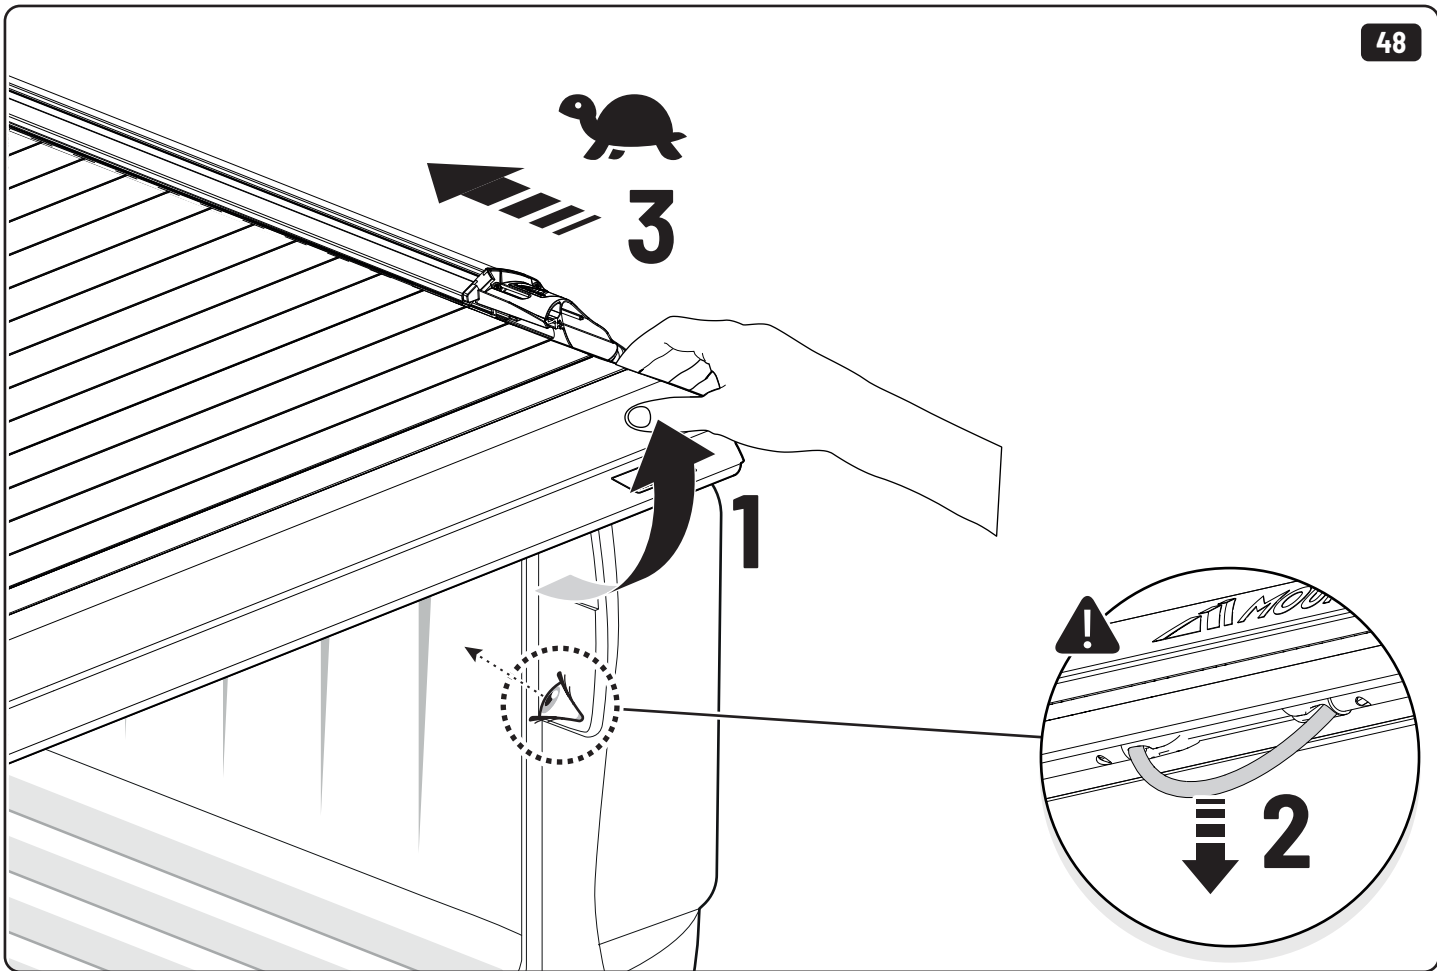


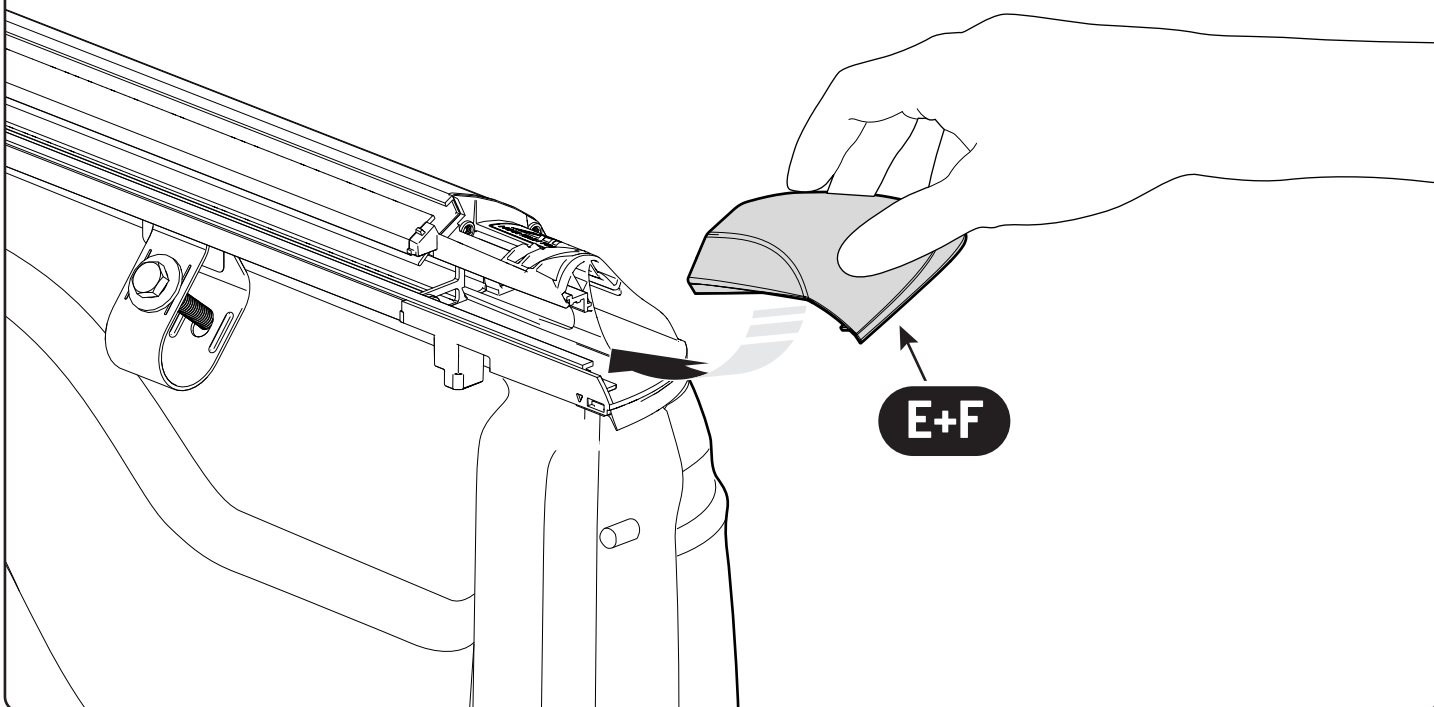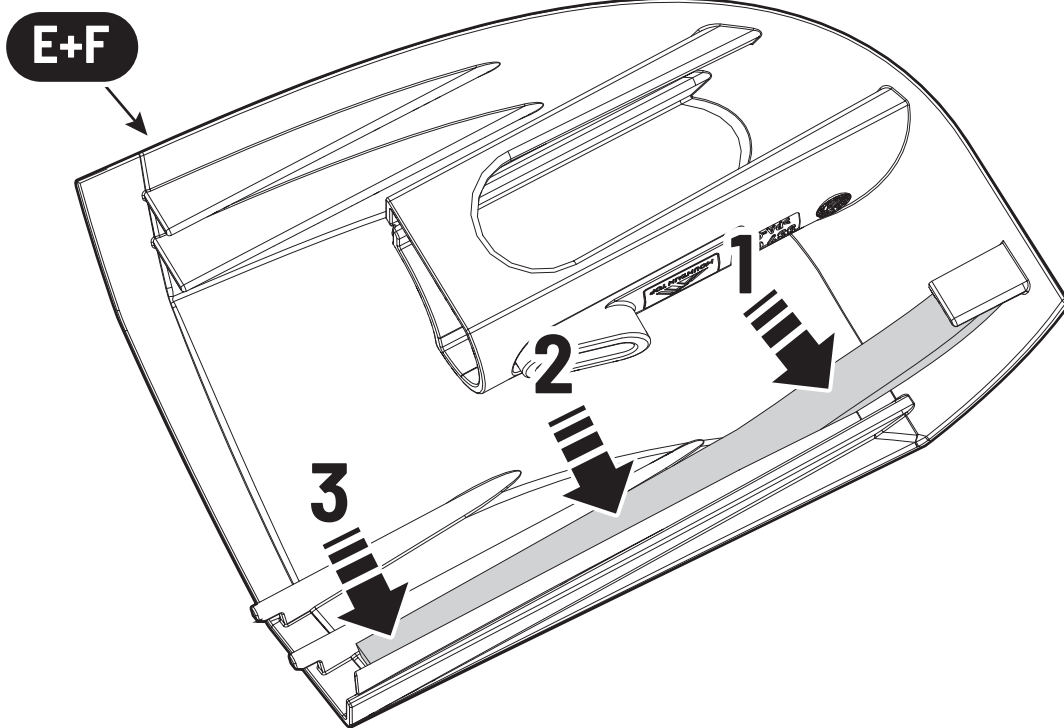

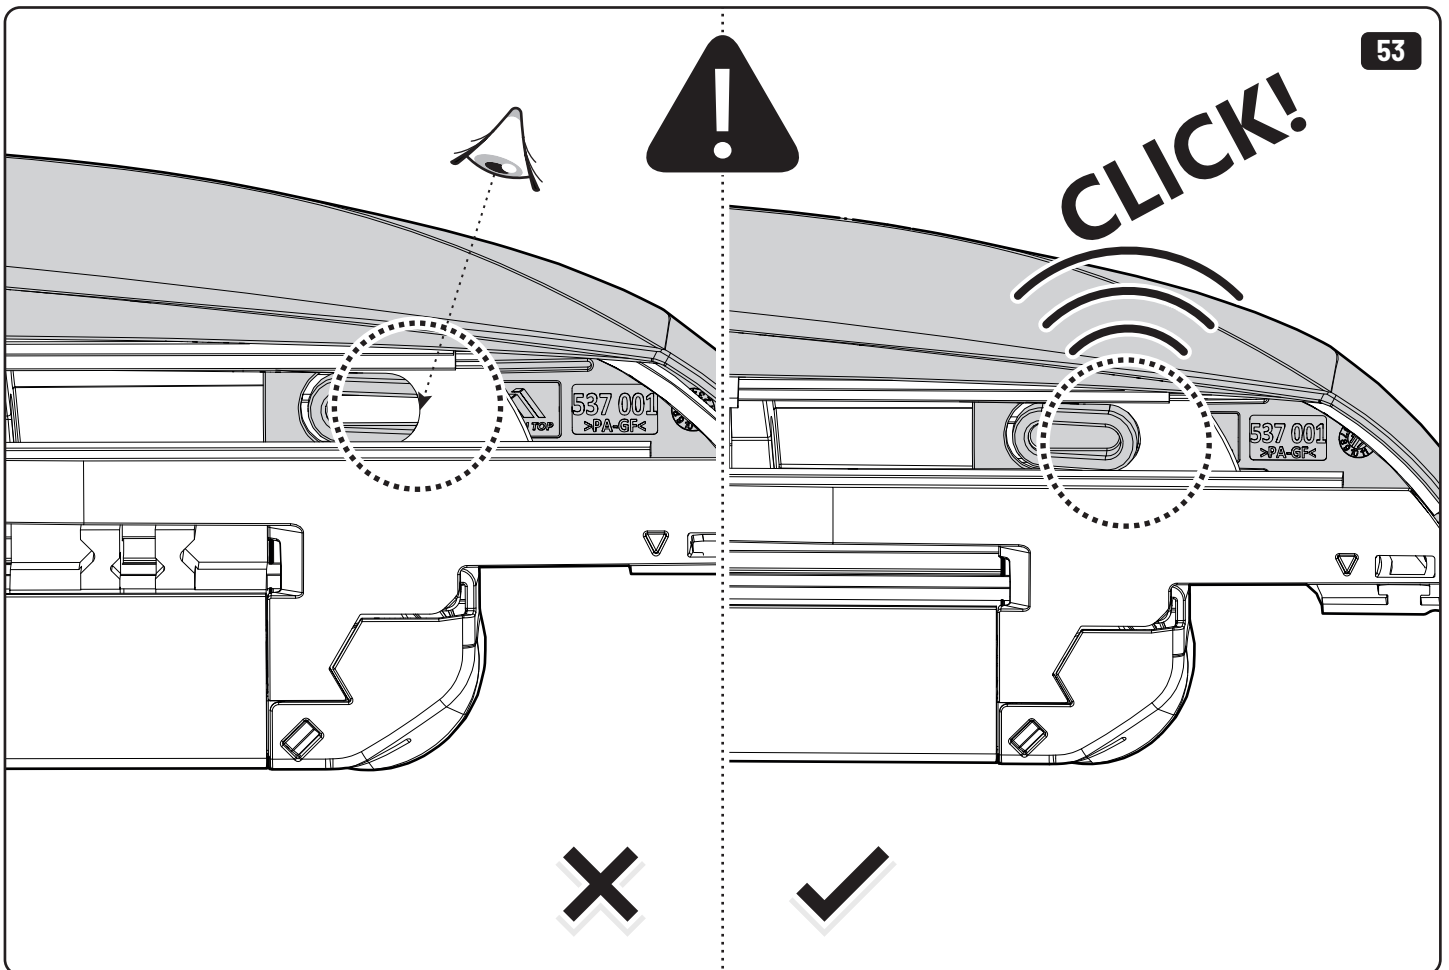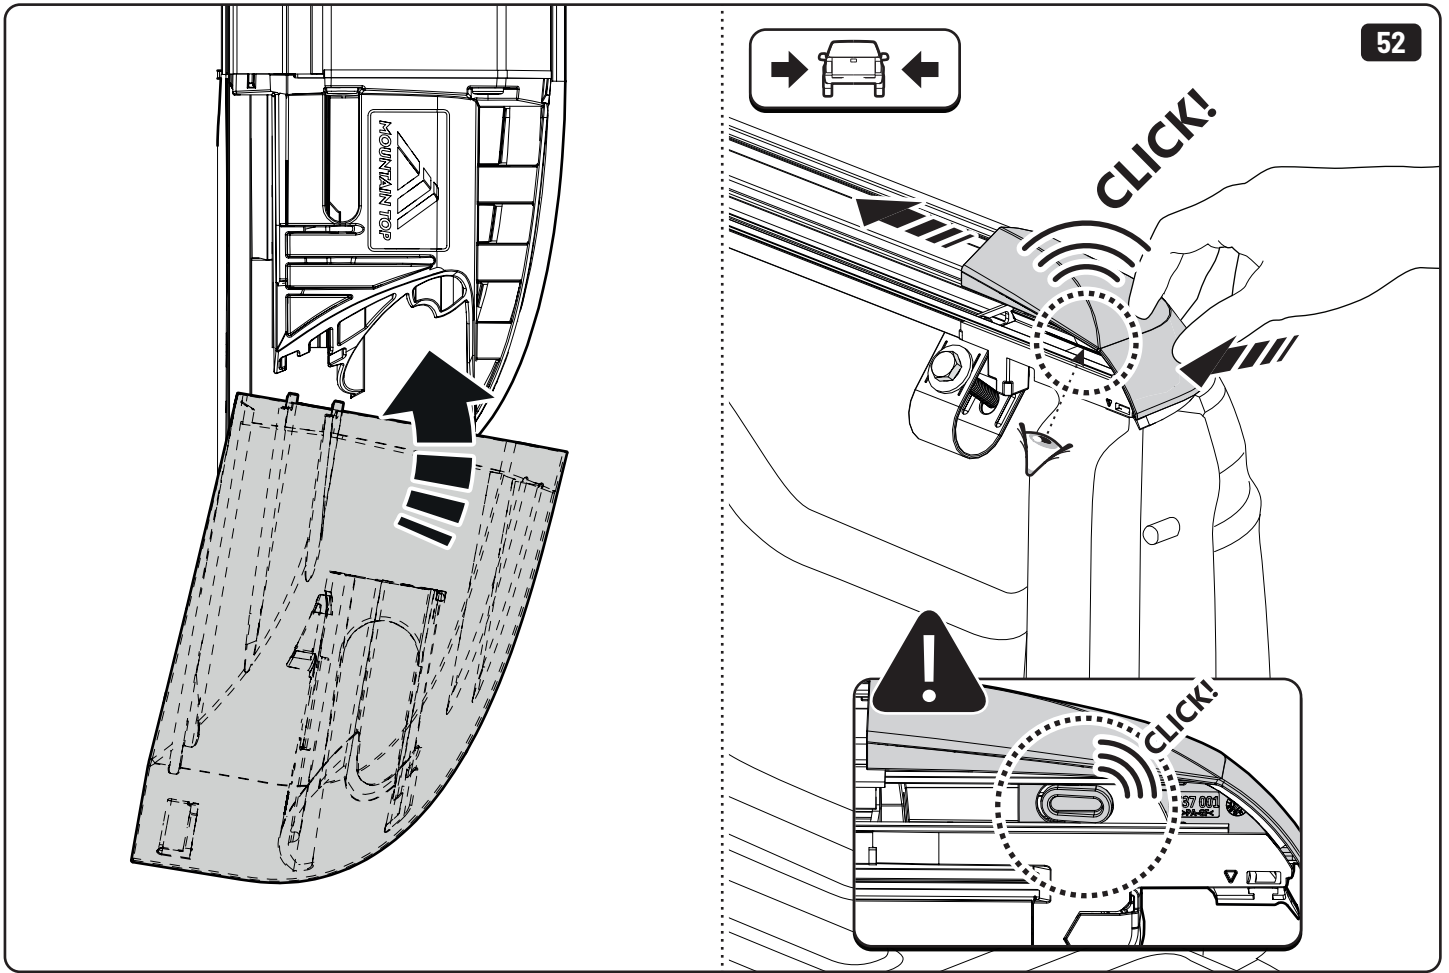

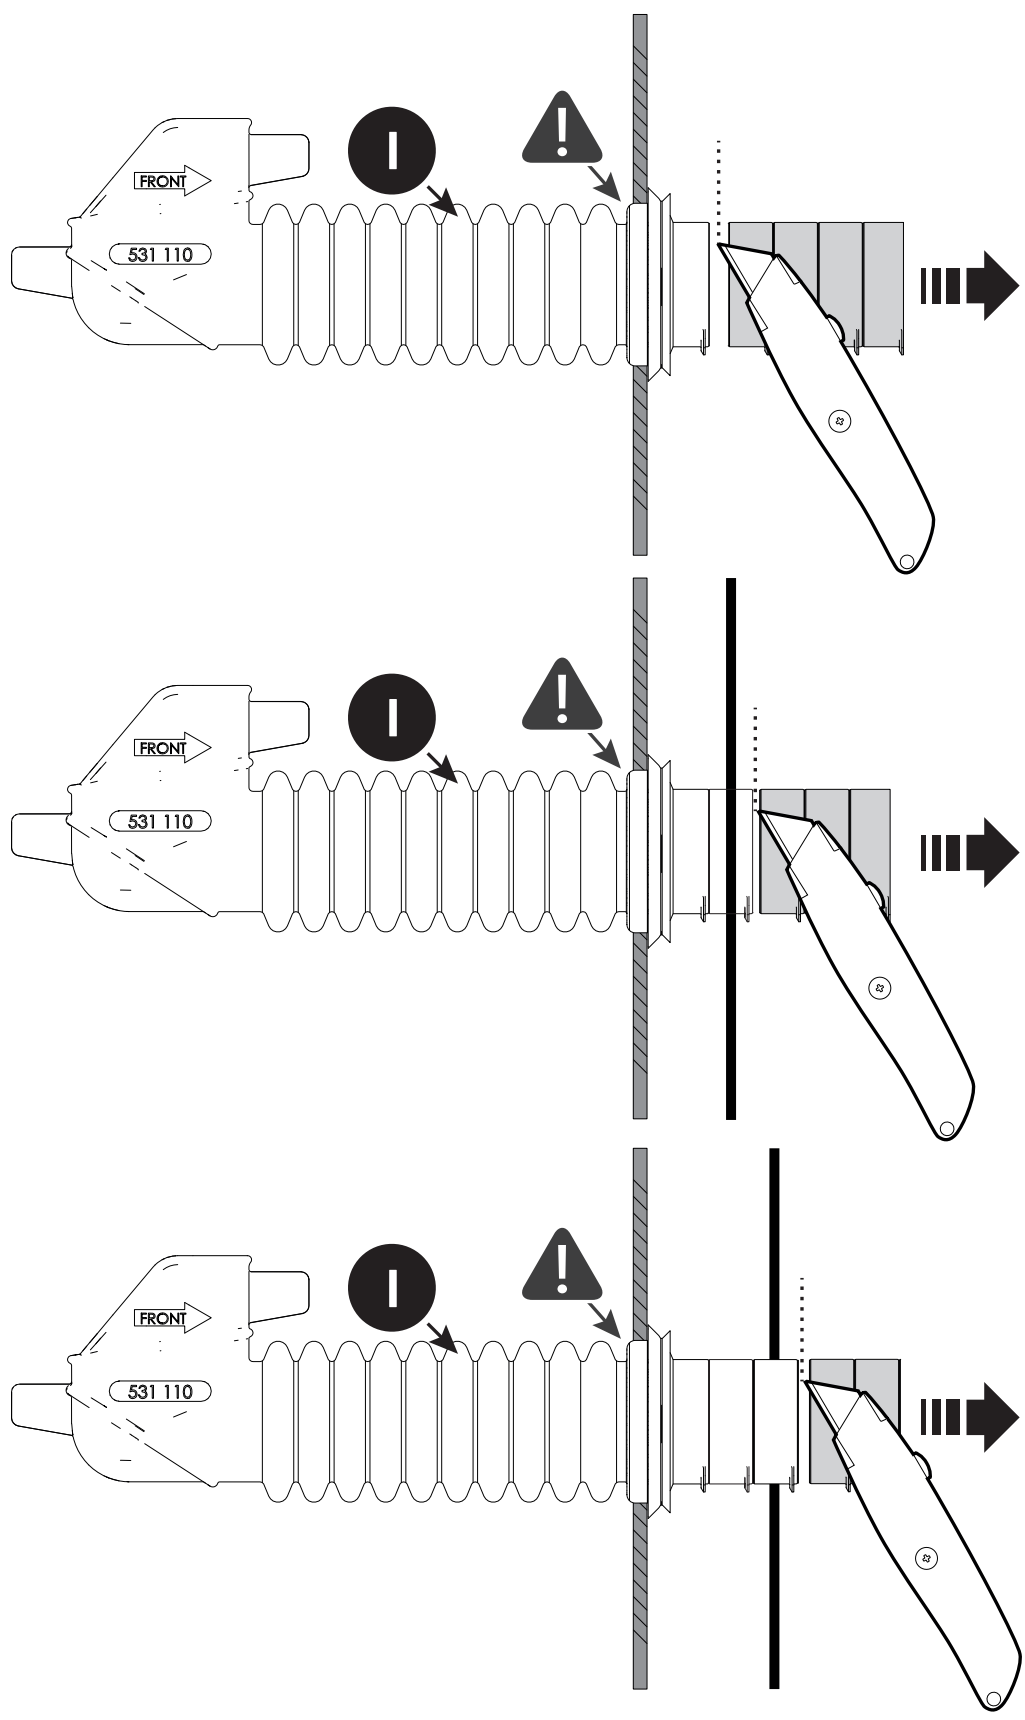

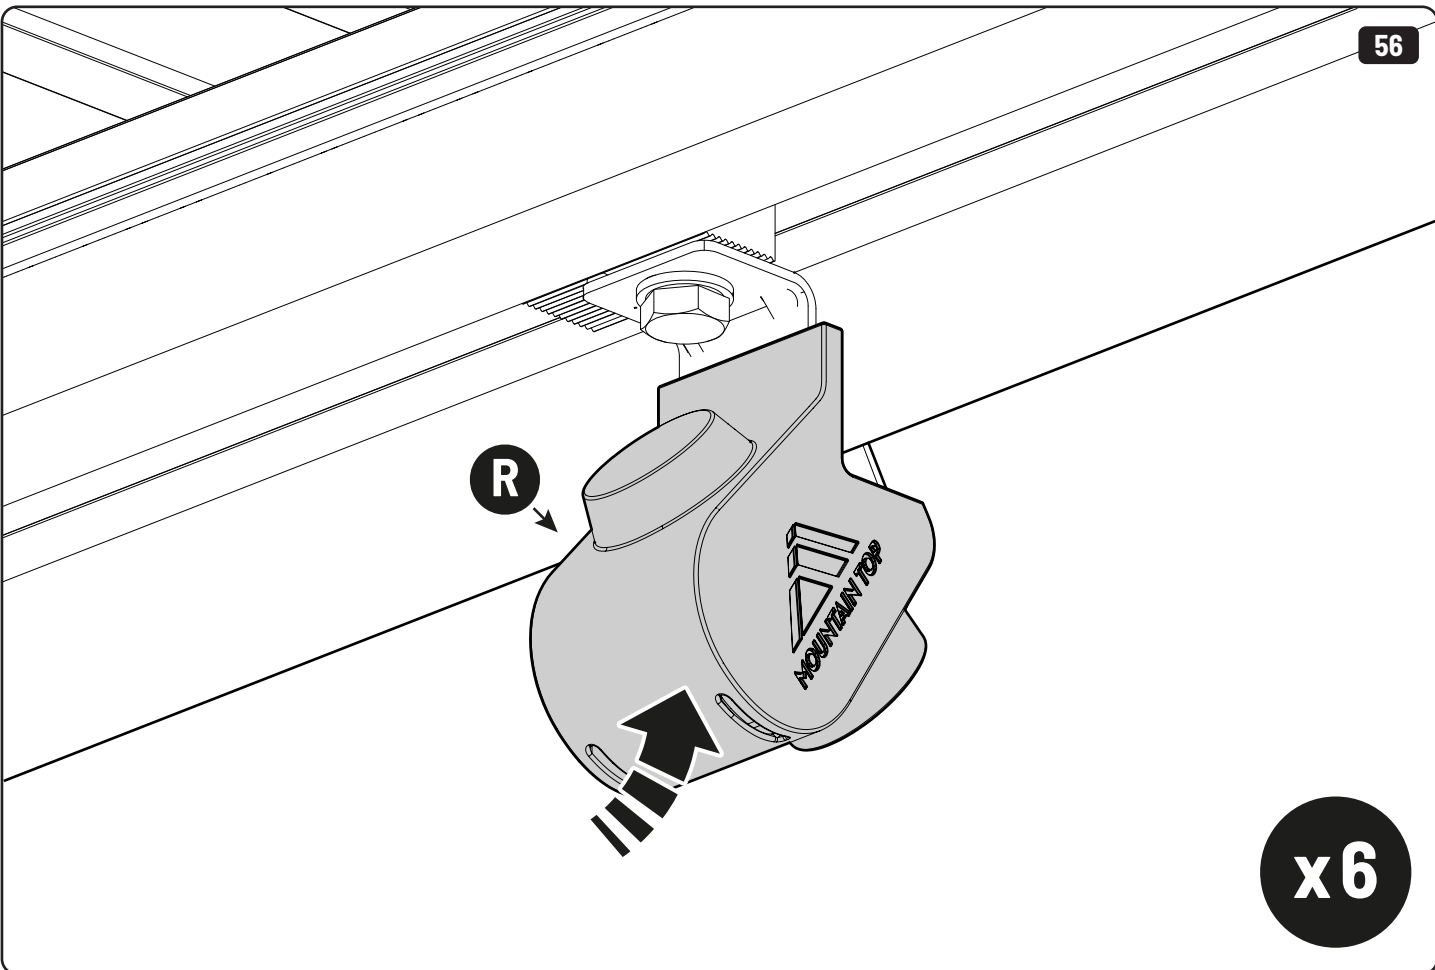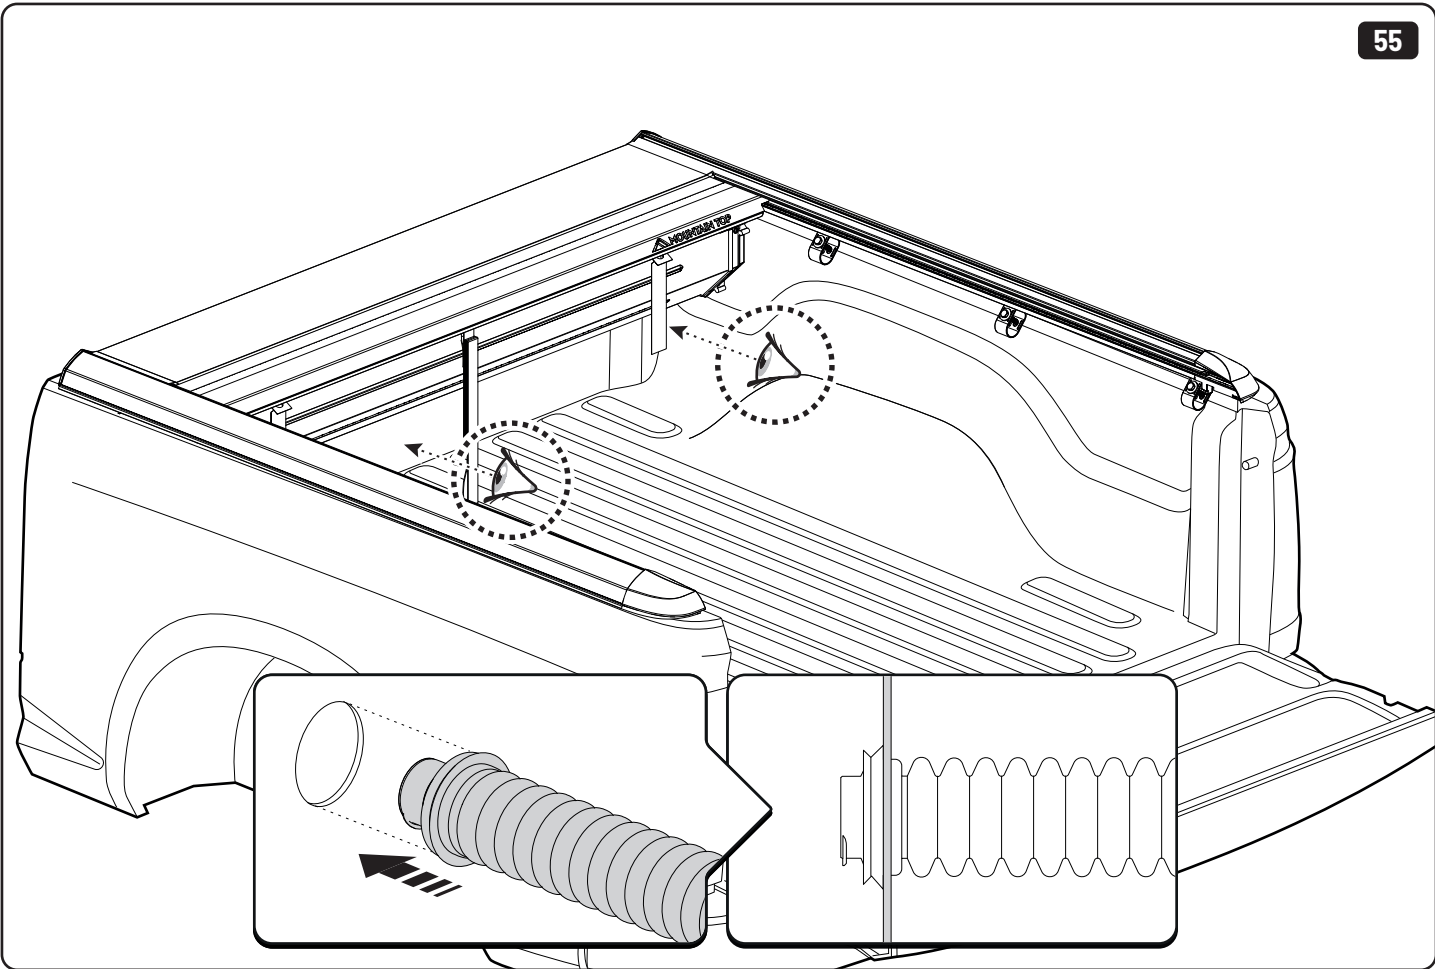

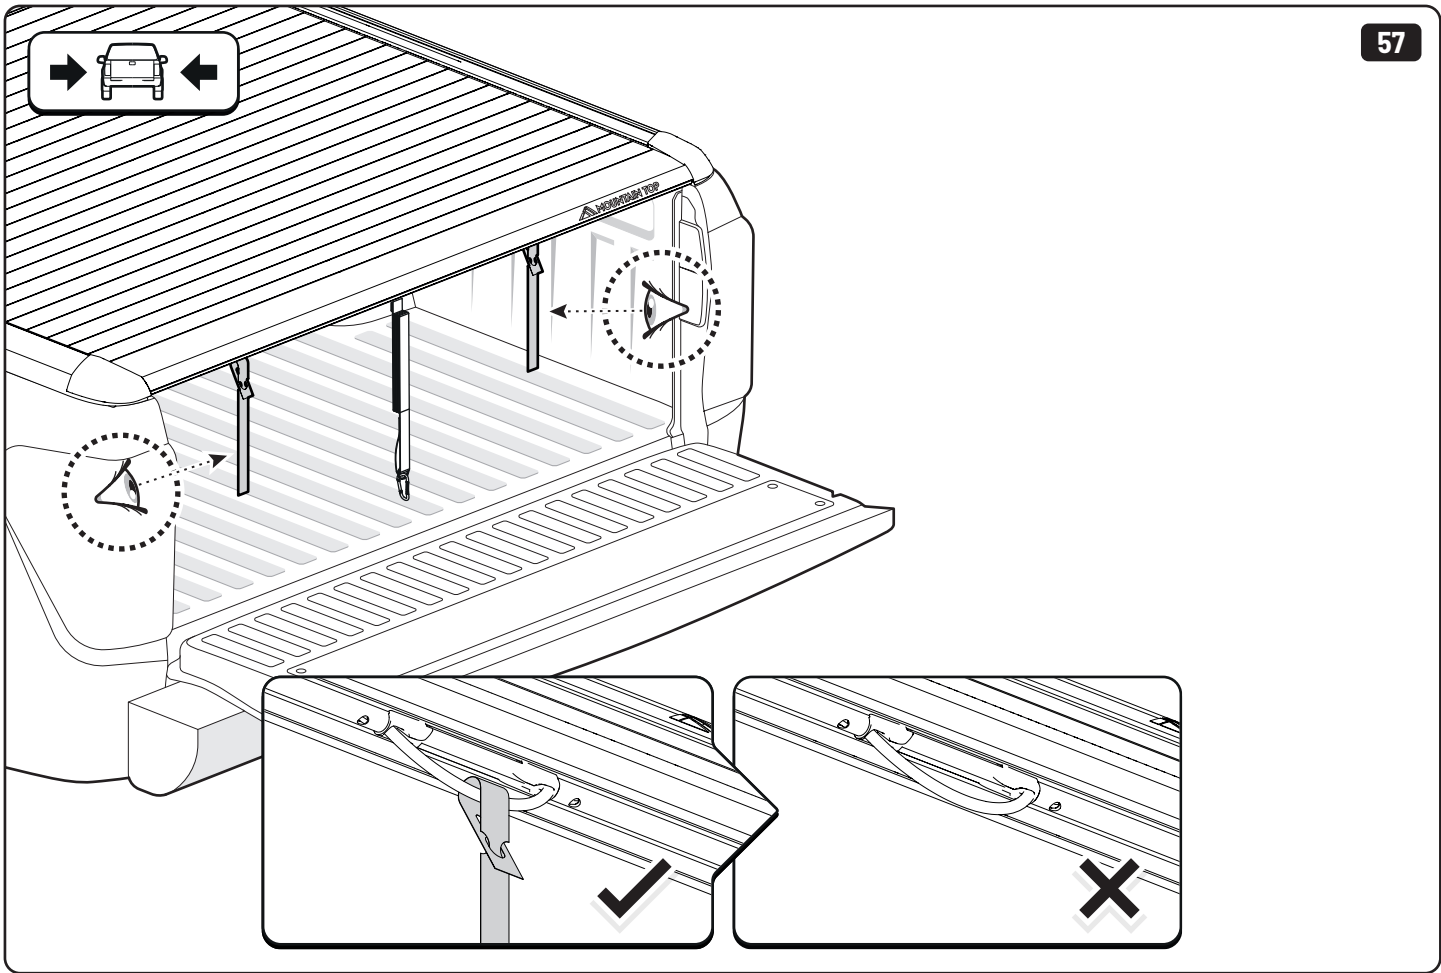



Steps	Page	Done by
Mounting gliding rail in canister	12	
Holes for drain	17-20	
Width + Cross measurement	27	
Tightening the clamp screw	28-29	
Mounting drain	36	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab type (s)	Installation time	Weight
EV0m IS10 AB01	Isuzu / 2020->	Double Cab	1 hour (s)	29 kg
EV0m IS11 AB01	Isuzu / 2020->	Extra Cab	1 hour (s)	33 kg
EV0m F090 AB01	Ranger / 2011->	Double Cab	1 hour (s)	29 kg
EV0m F091 AB01	Ranger / 2011->	Extra Cab	1 hour (s)	33 kg
EV0m MX20 AB01	Maxus / 2022->	Crew Cab	1 hour (s)	29 kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni di montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare