




# Ford Wildtrak

## Mountain Top Roll

### Installation Instructions

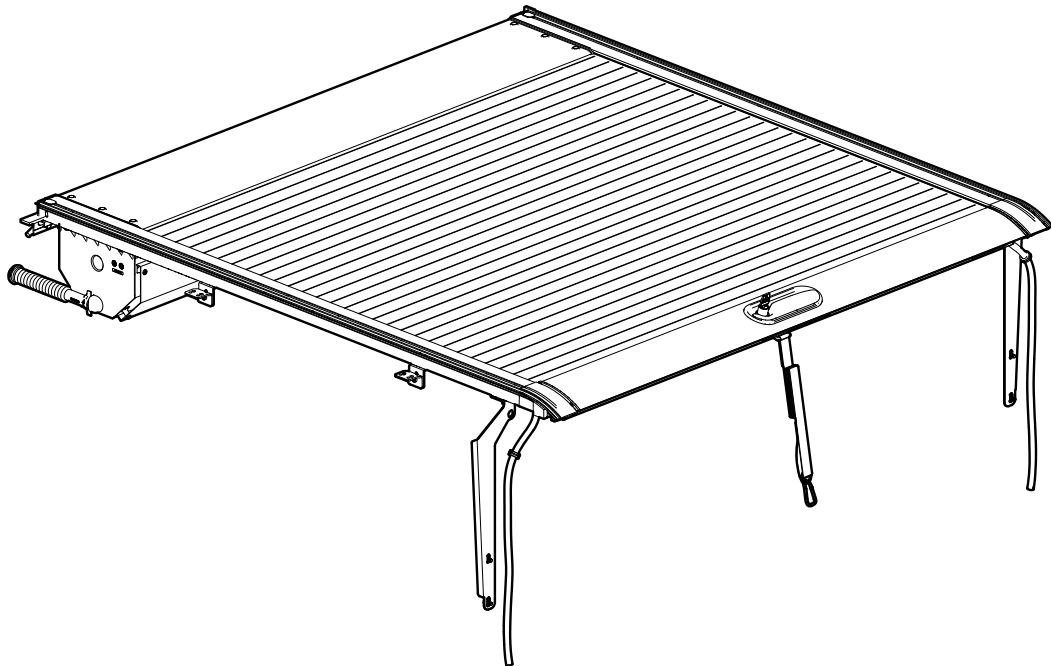




























GR	Installation instruction Mountain Top Roll	S	Monteringsanvisning Mountain Top Roll
D	Einbauanleitung Mountain Top Roll	SF	Asennusohje Mountain Top Roll
E	Instrucciones de montaje Mountain Top Roll	CZ	Návod k instalaci Mountain Top Roll
F	Notice de montage Mountain Top Roll	H	Szerelési utasítás Mountain Top Roll
I	Istruzioni de montaggio Mountain Top Roll	PL	Instrukcja montażu Mountain Top Roll
P	Instruções de instalação Mountain Top Roll	GR	Οδηγίες Εγκατάστασης Mountain Top Roll
NL	Installatie-instructies Mountain Top Roll	RUS	Инструкция по установке Mountain Top Roll
DK	Monteringsvejledning Mountain Top Roll	TR	Montaj Talimatı Mountain Top Roll
N	Monteringsveiledning Mountain Top Roll	RO	Instructiuni de instalare Mountain Top Roll

Model Year:	2011 →
Part Number:	MTR FO90 H03    Double cab (DC) MTR FO90 H08    Double cab (DC) MTR FO91 H08    Super cab (SC)
 Weight:	31 / 36 kg
 Installation Time:	2 hr

# Ford Wildtrak

## Mountain Top Roll














### Installation Instructions

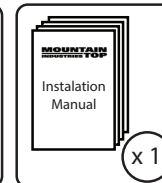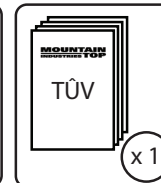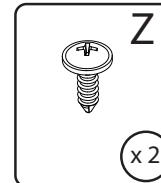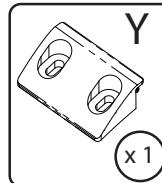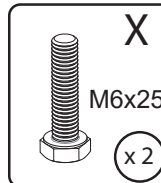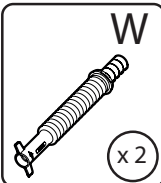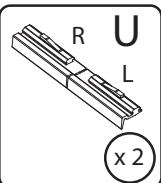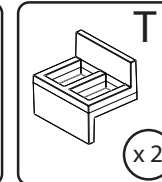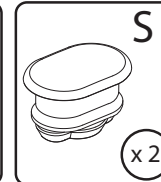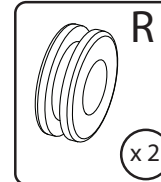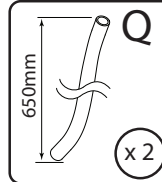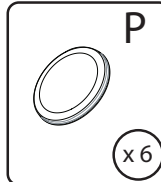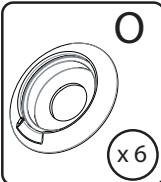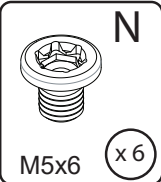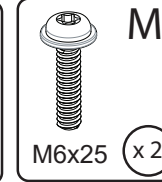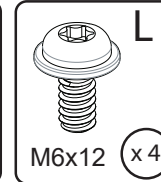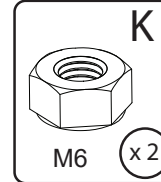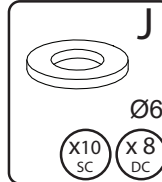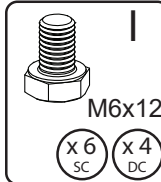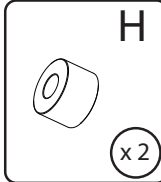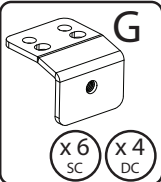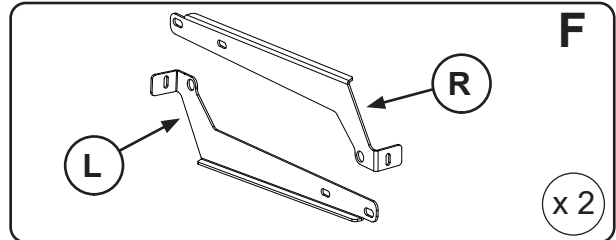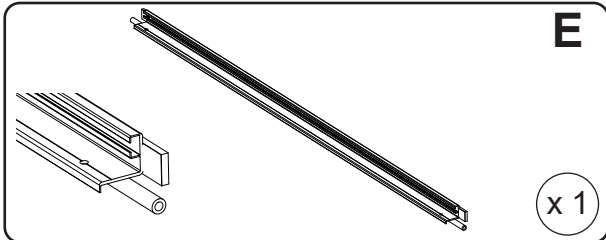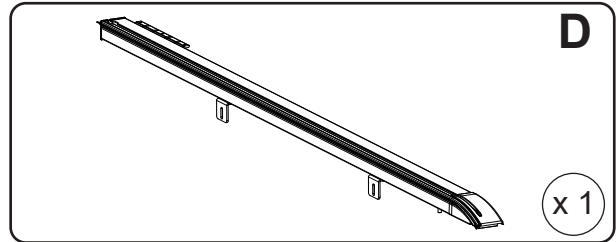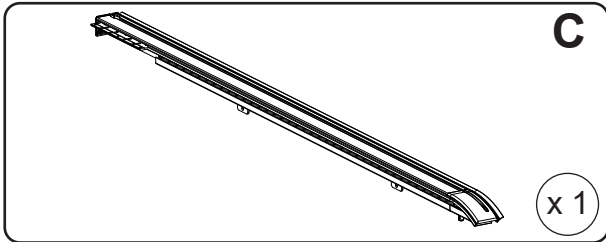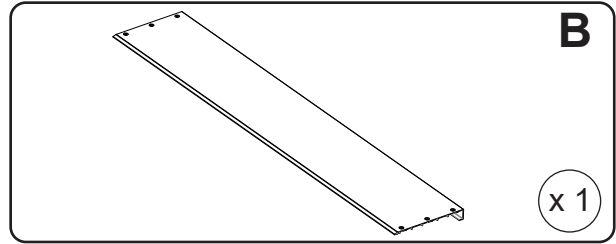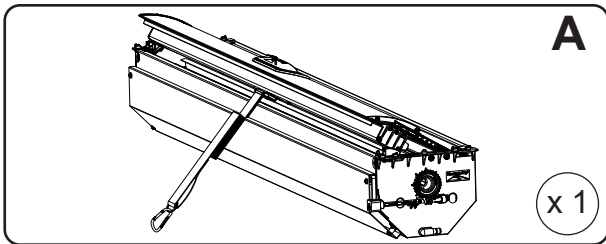

# Ford Wildtrak


## Mountain Top Roll

### Installation Instructions

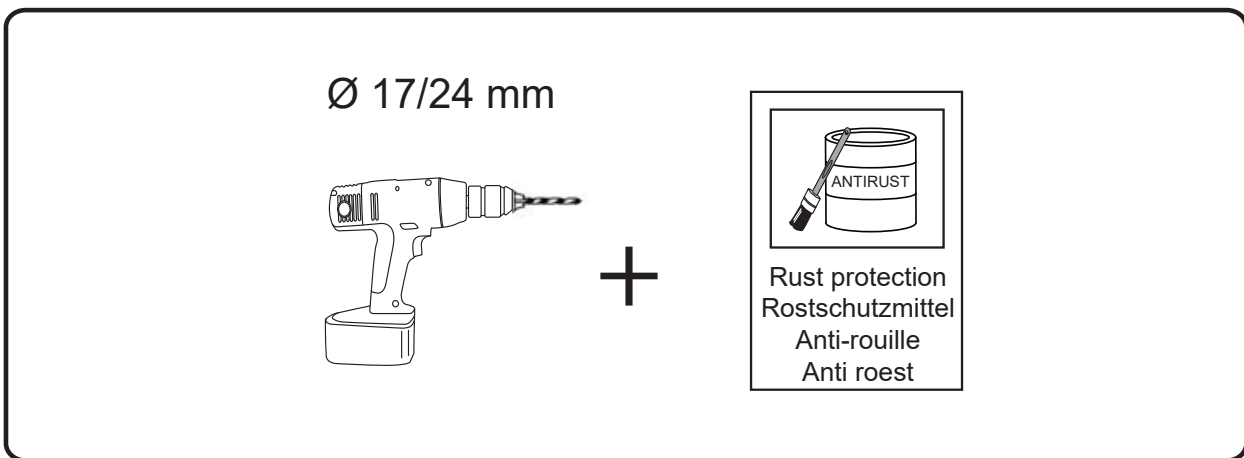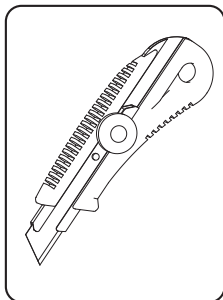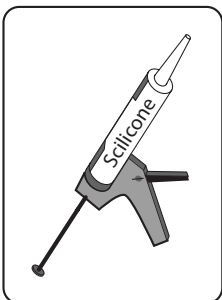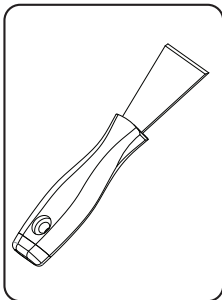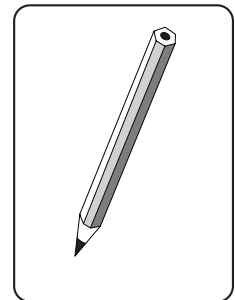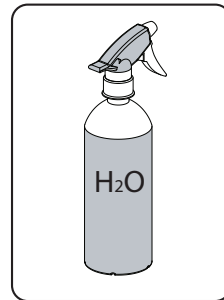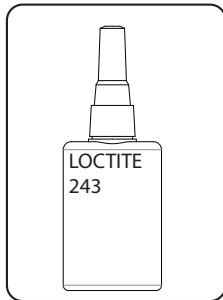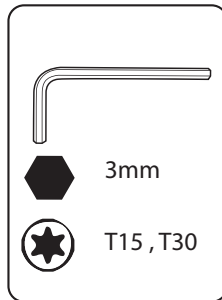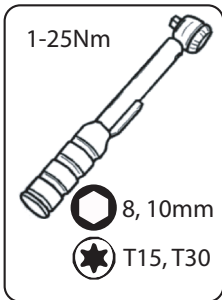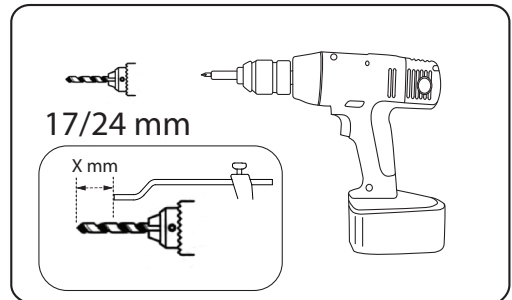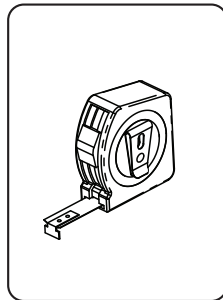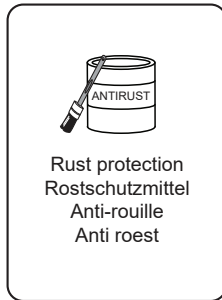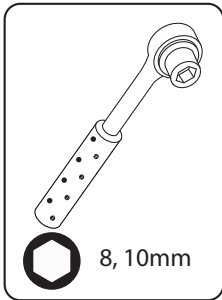

# Ford Wildtrak



Mountain Top Roll  
Installation Instructions

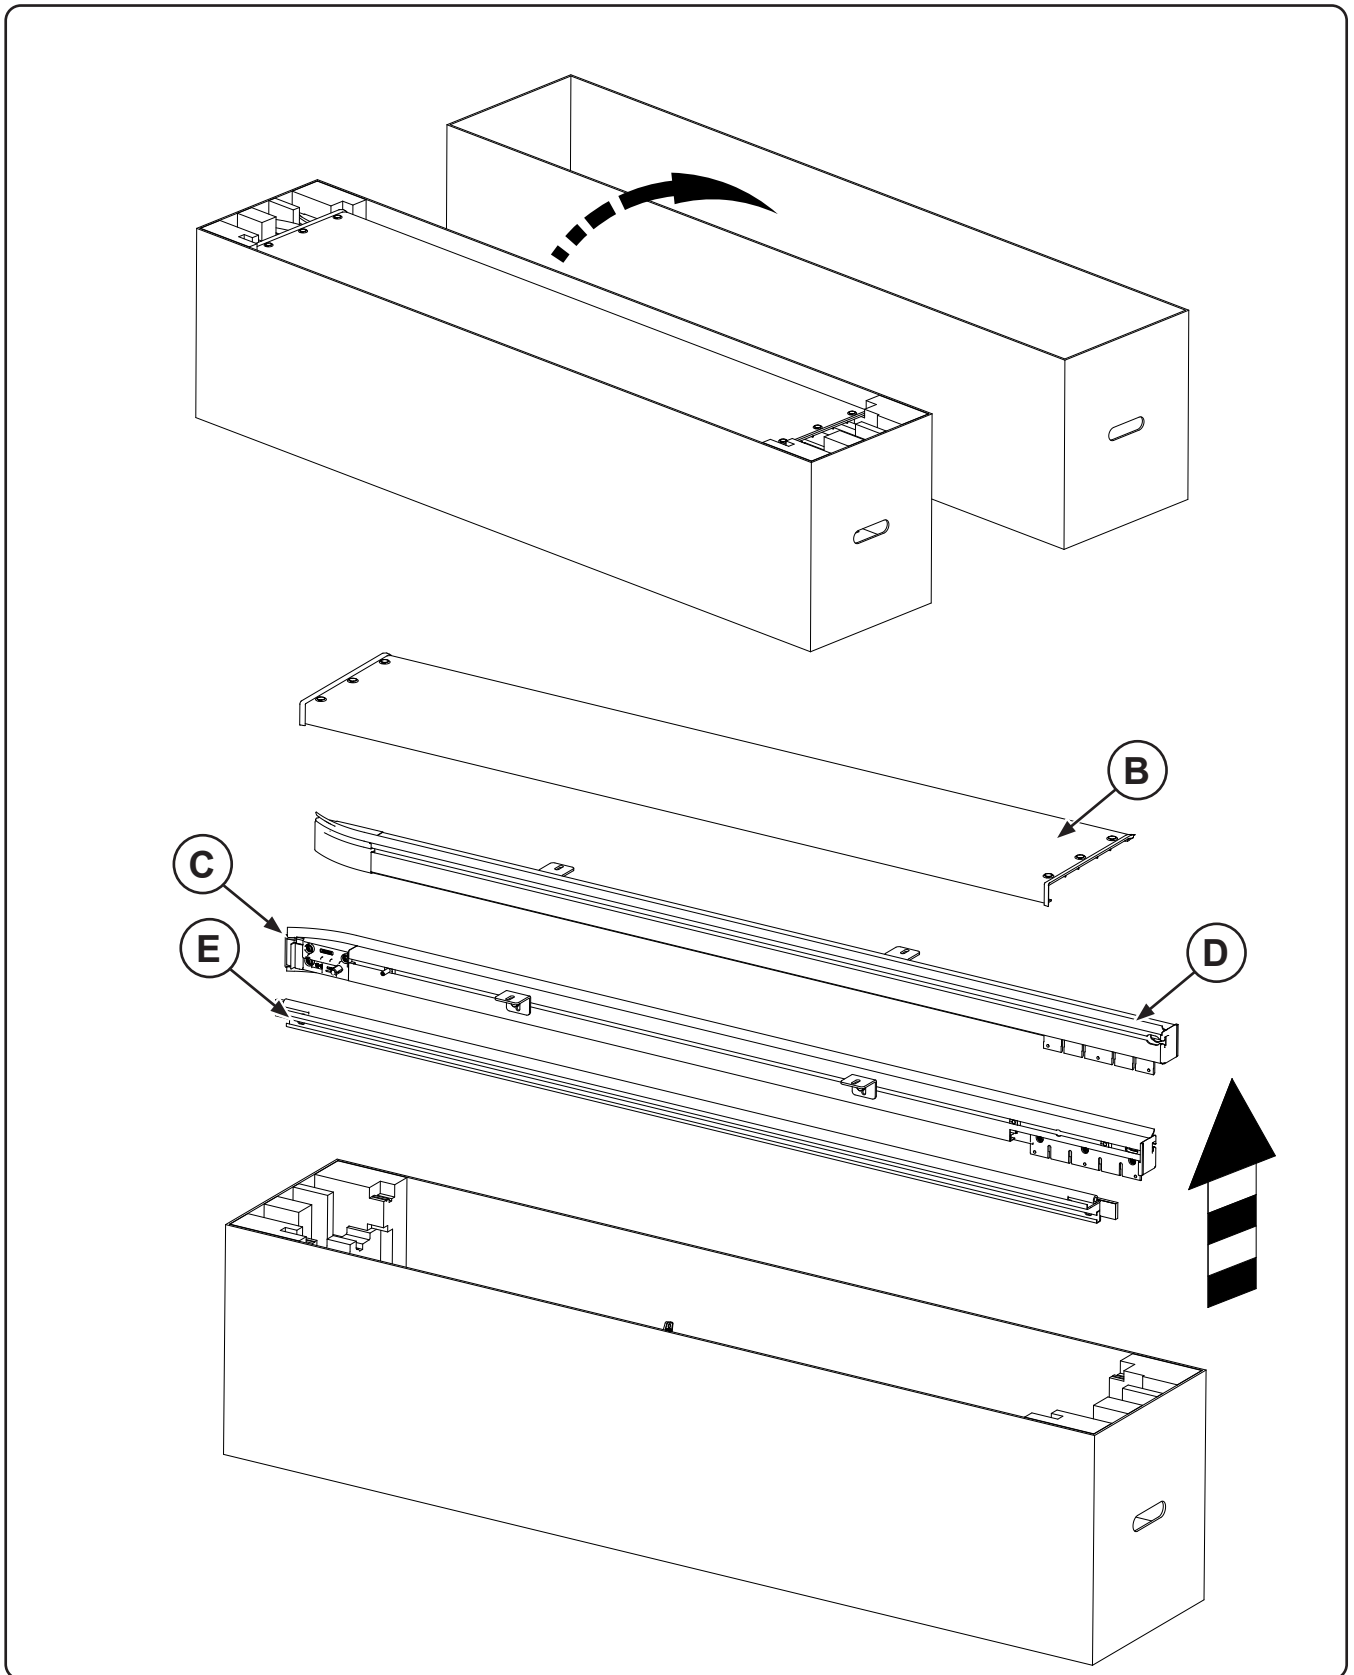

# Ford Wildtrak

## Mountain Top Roll

### Installation Instructions

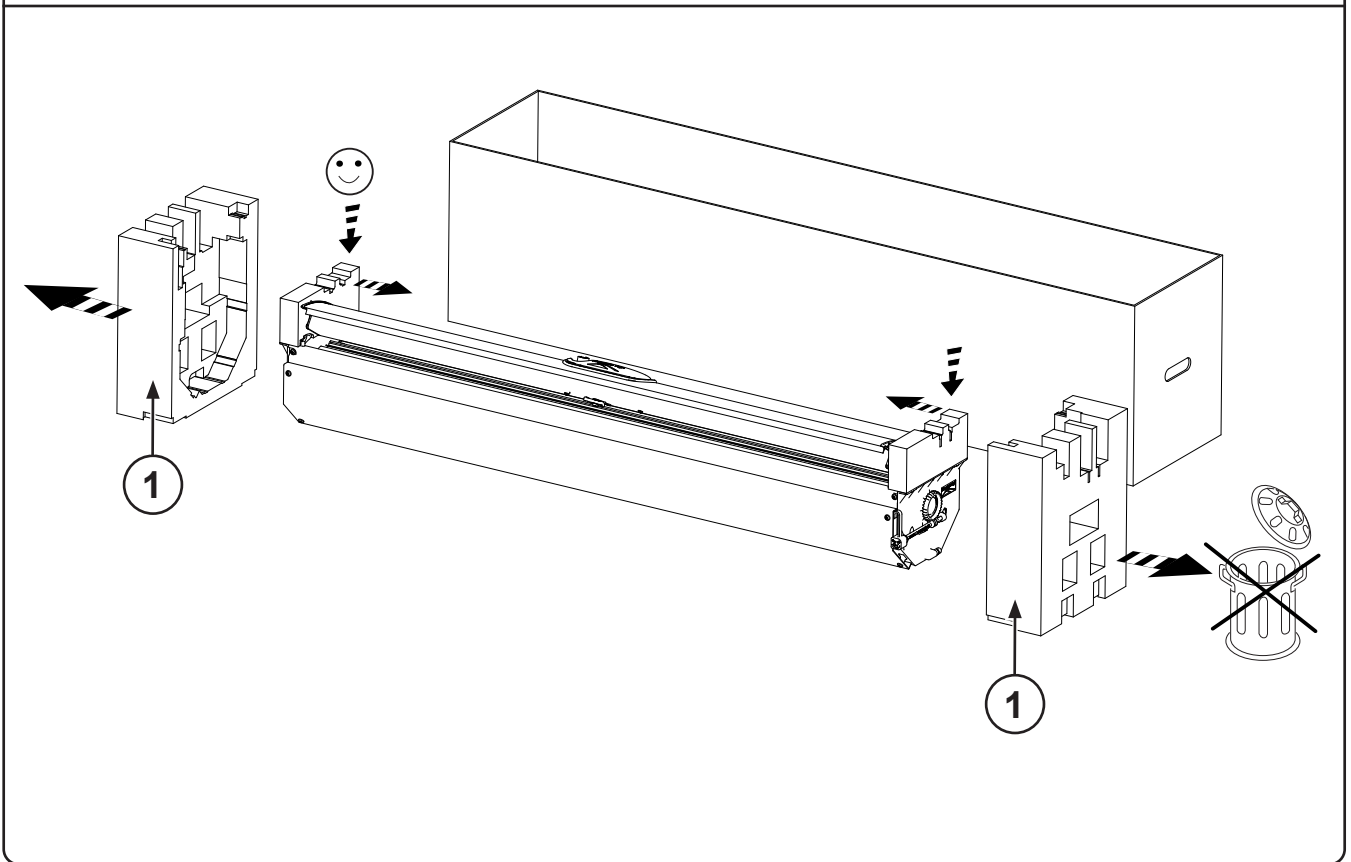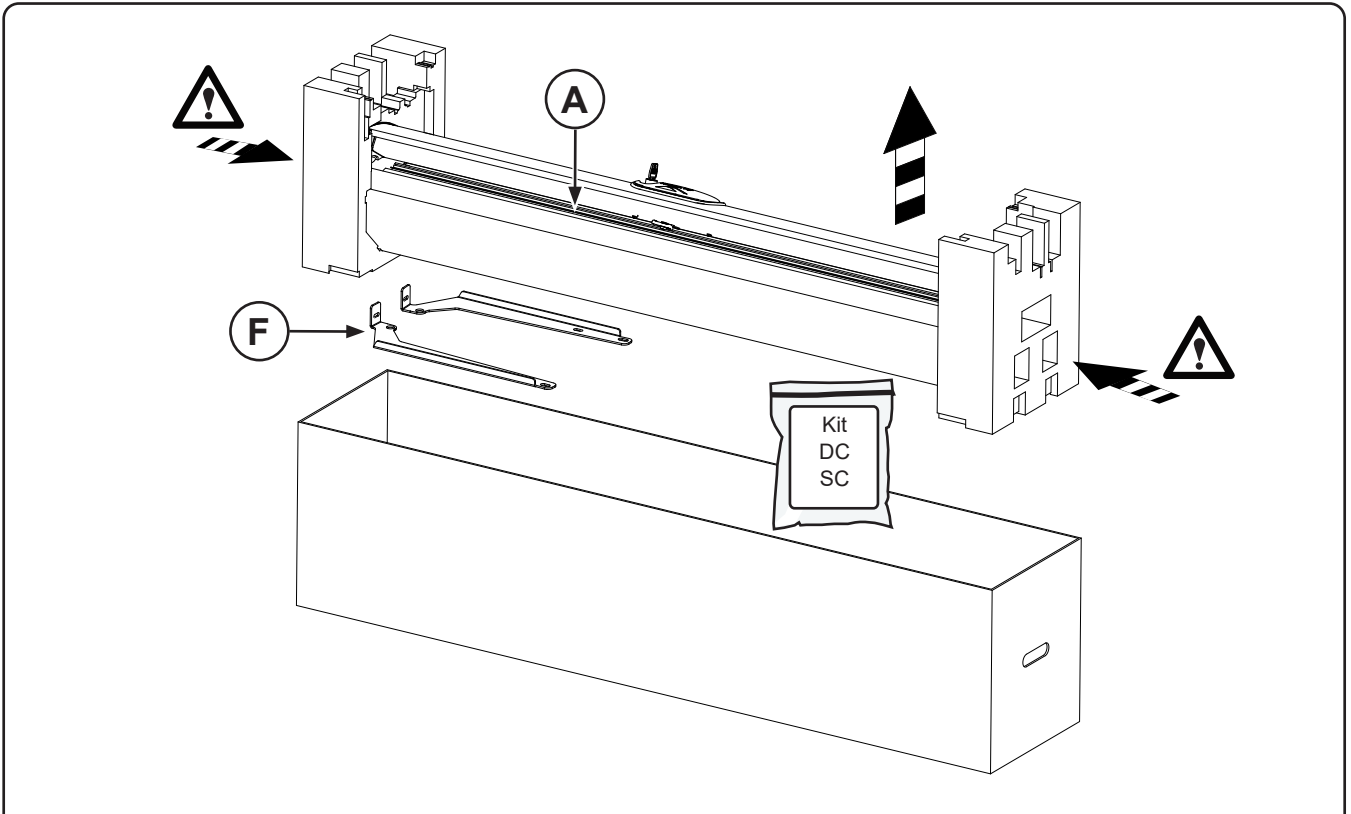


# Ford Wildtrak

## Mountain Top Roll


### Installation Instructions

L & R

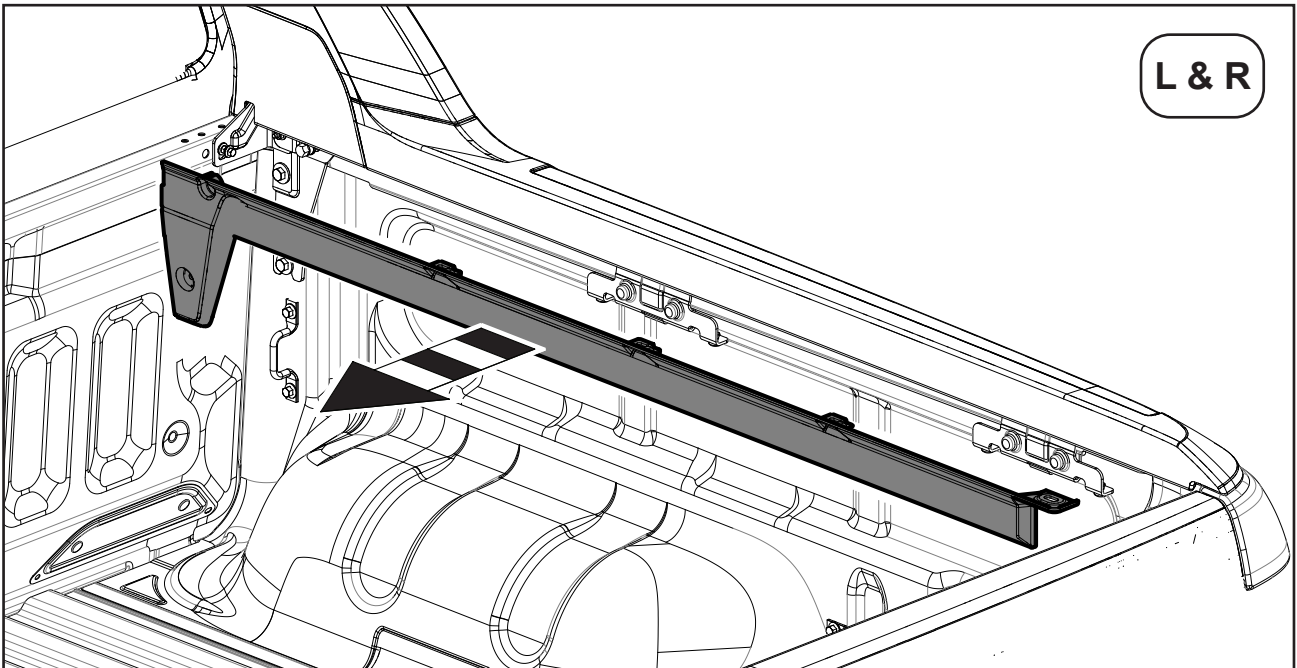


Double Cab

L & R

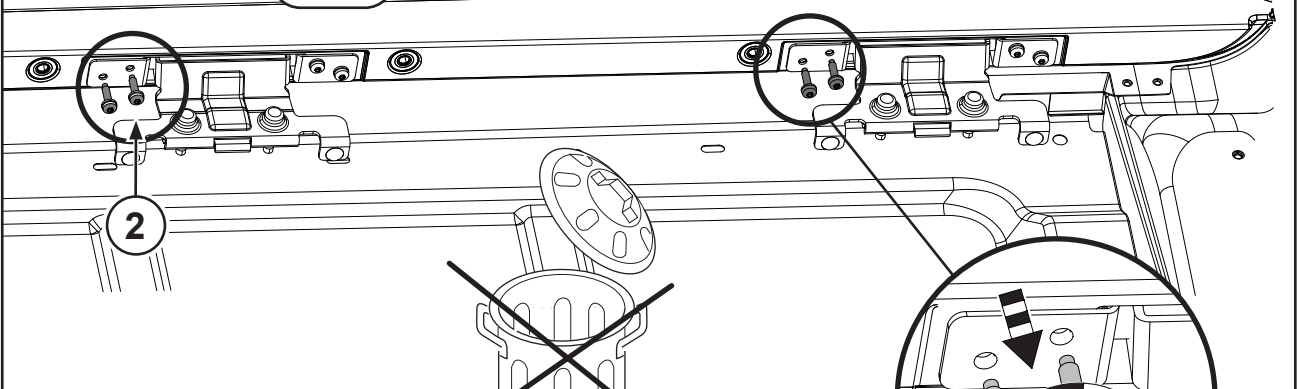

Super Cab


L & R

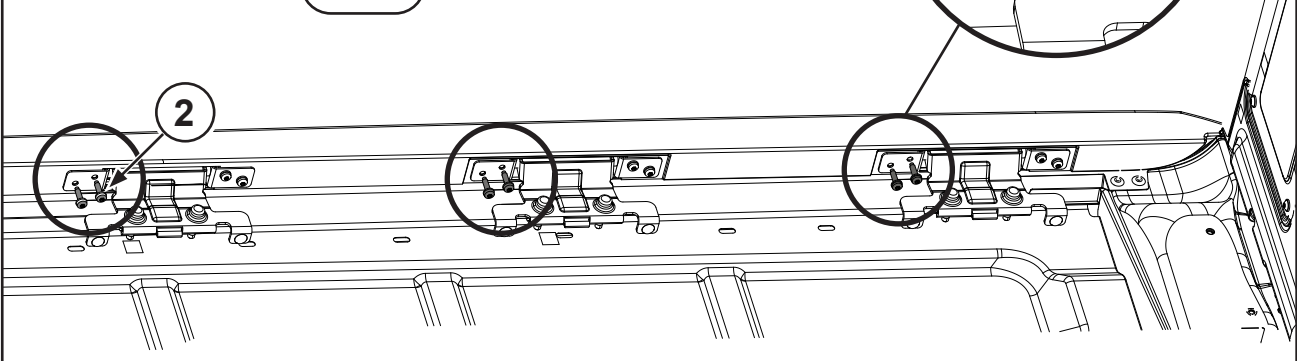

# Ford Wildtrak

## Mountain Top Roll



### Installation Instructions

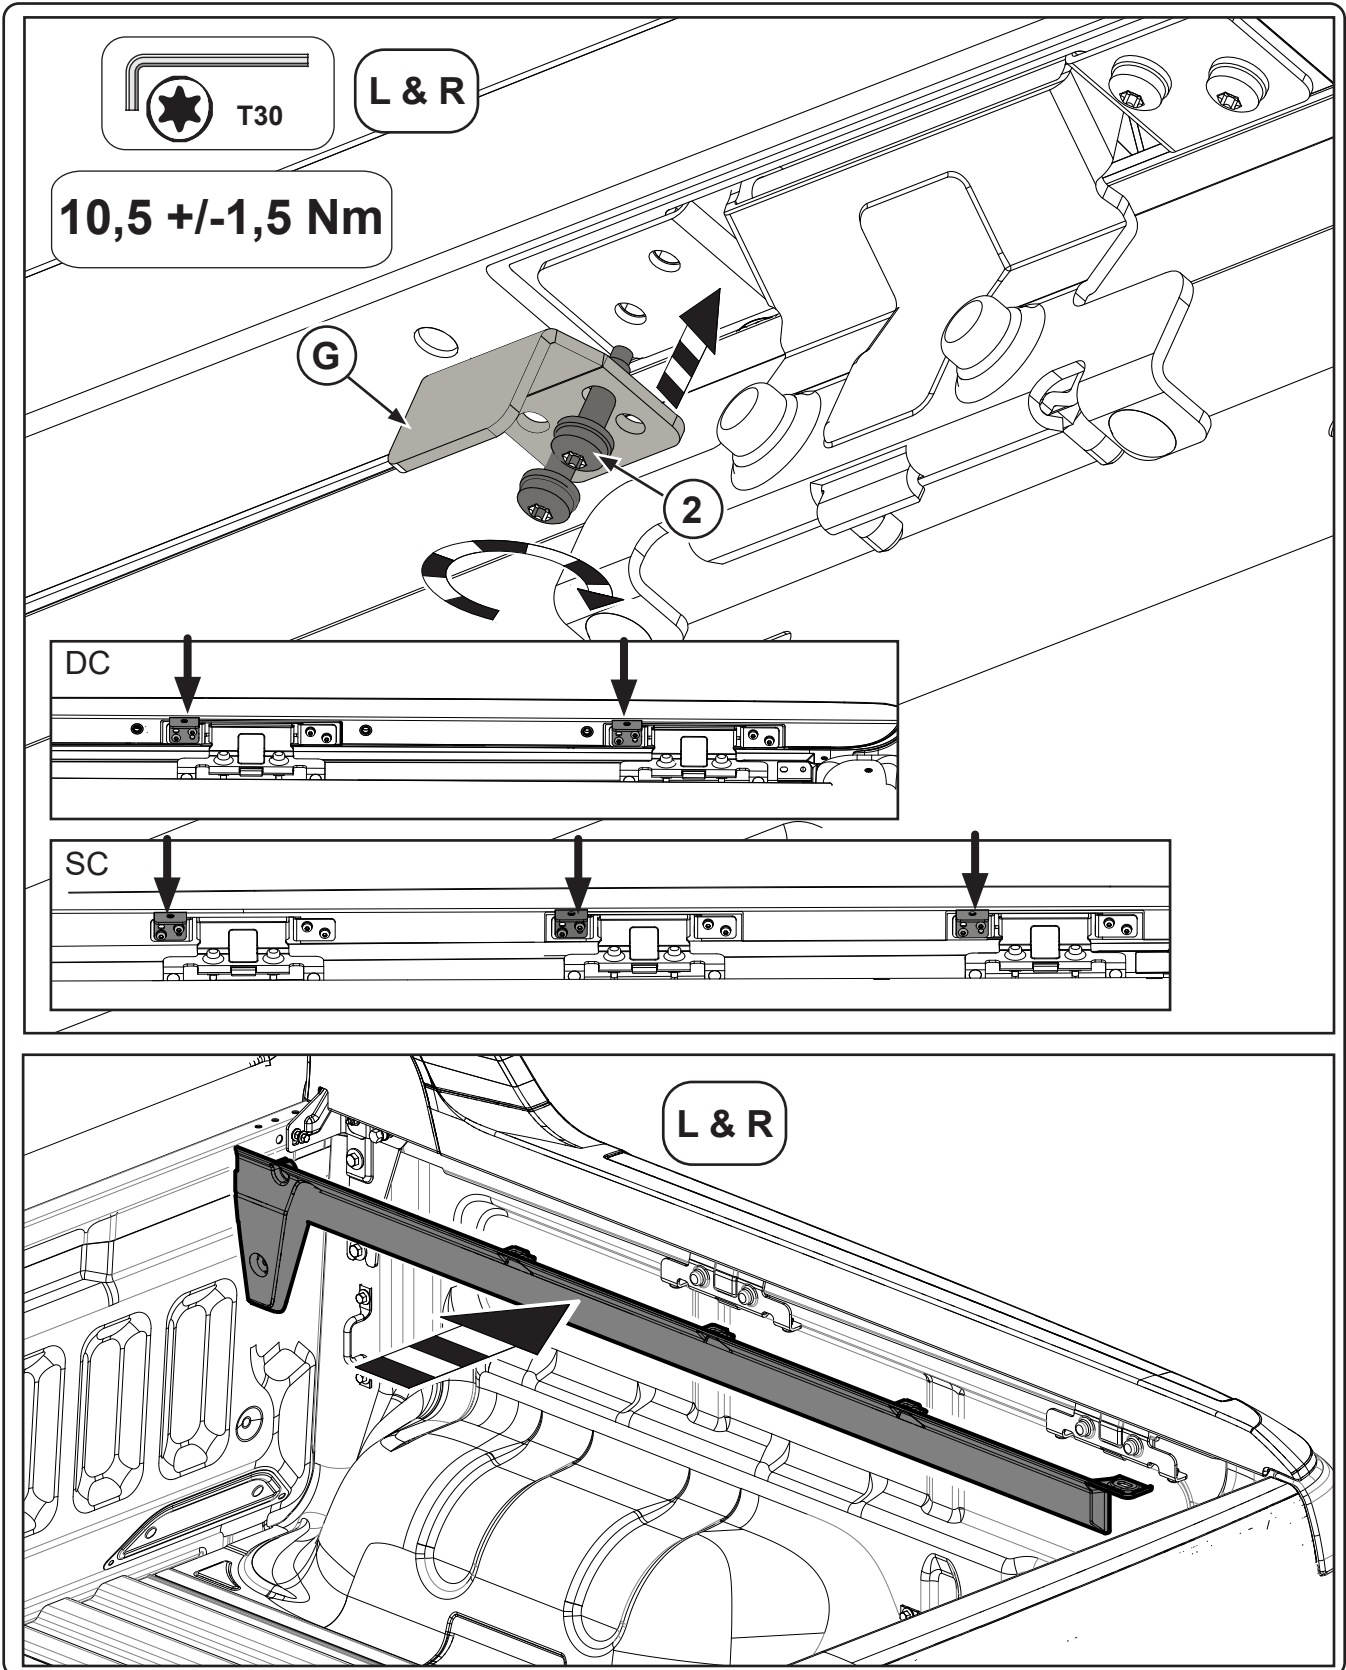

# Ford Wildtrak

## Mountain Top Roll

### Installation Instructions



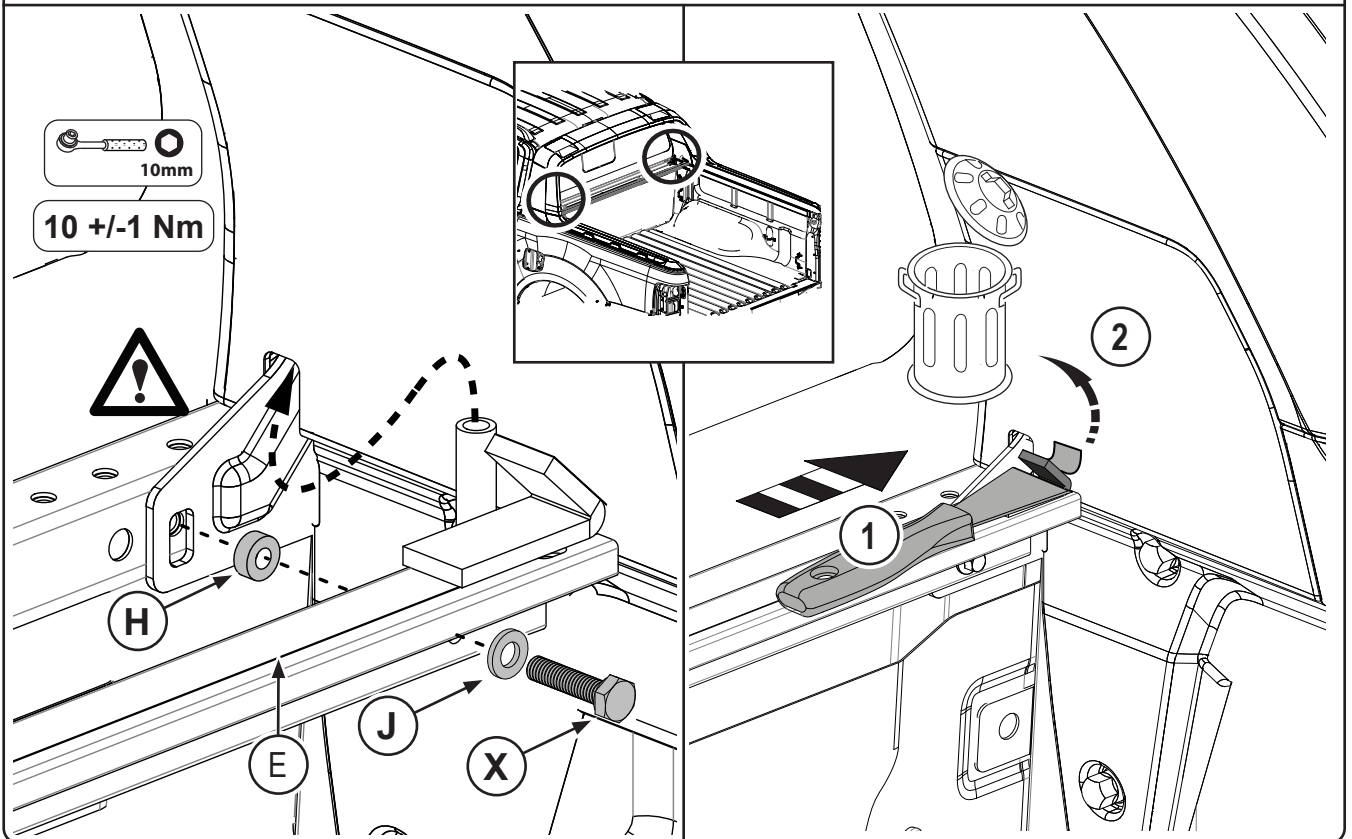
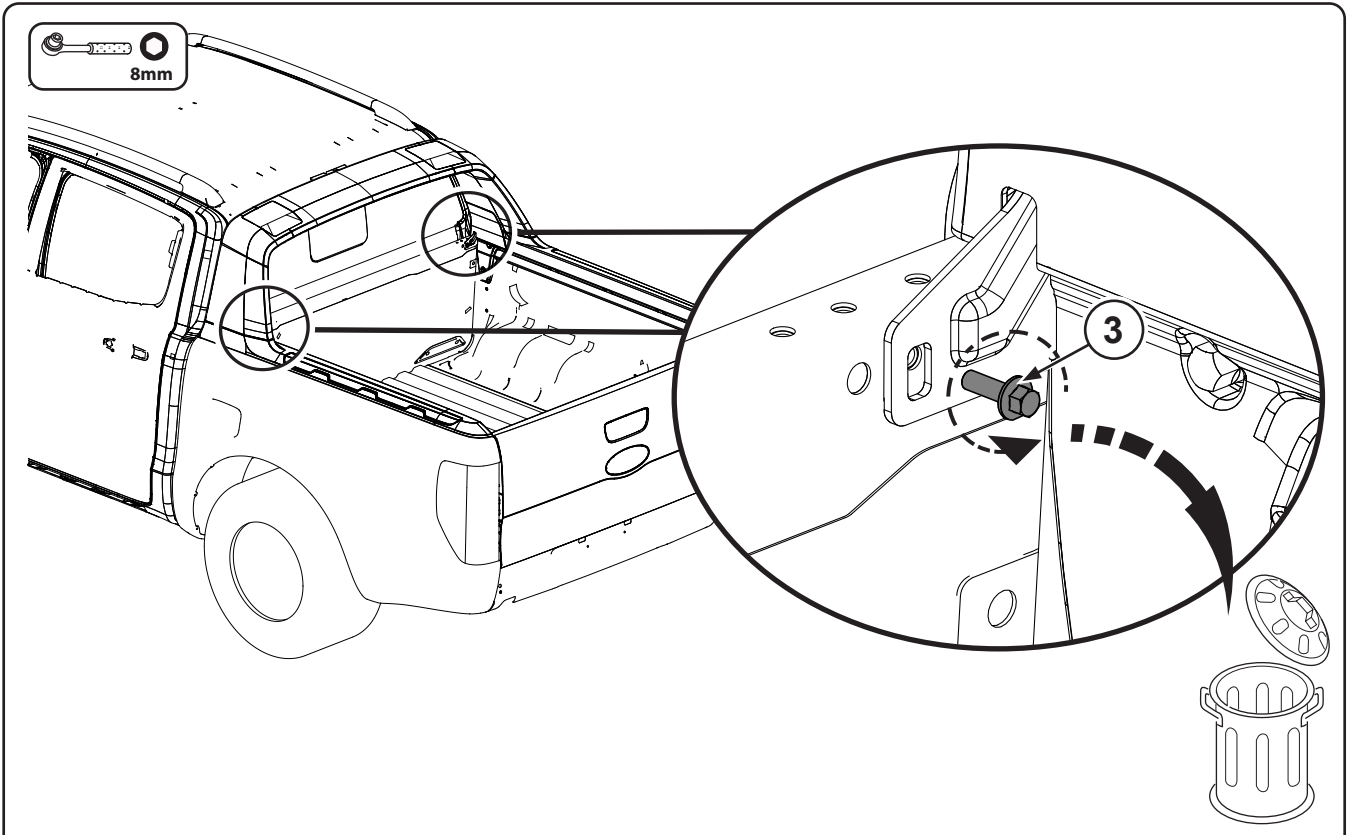




# Ford Wildtrak

## Mountain Top Roll



### Installation Instructions

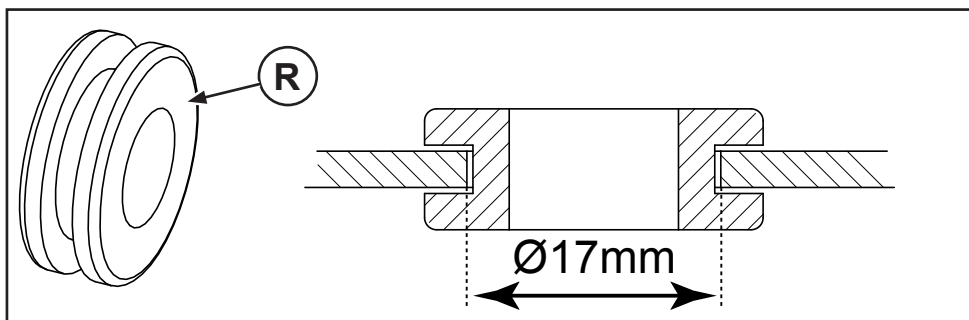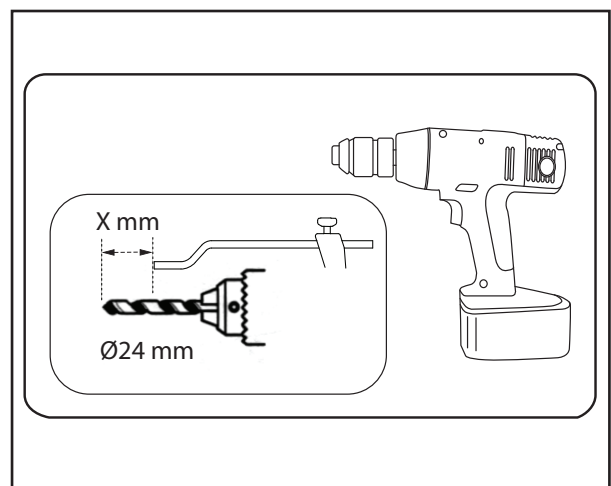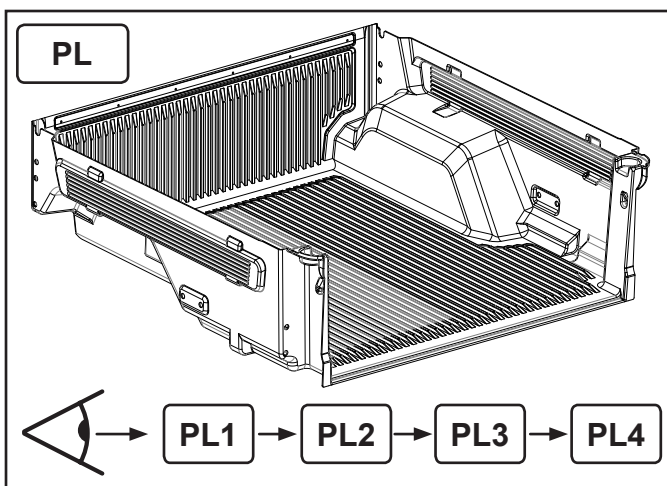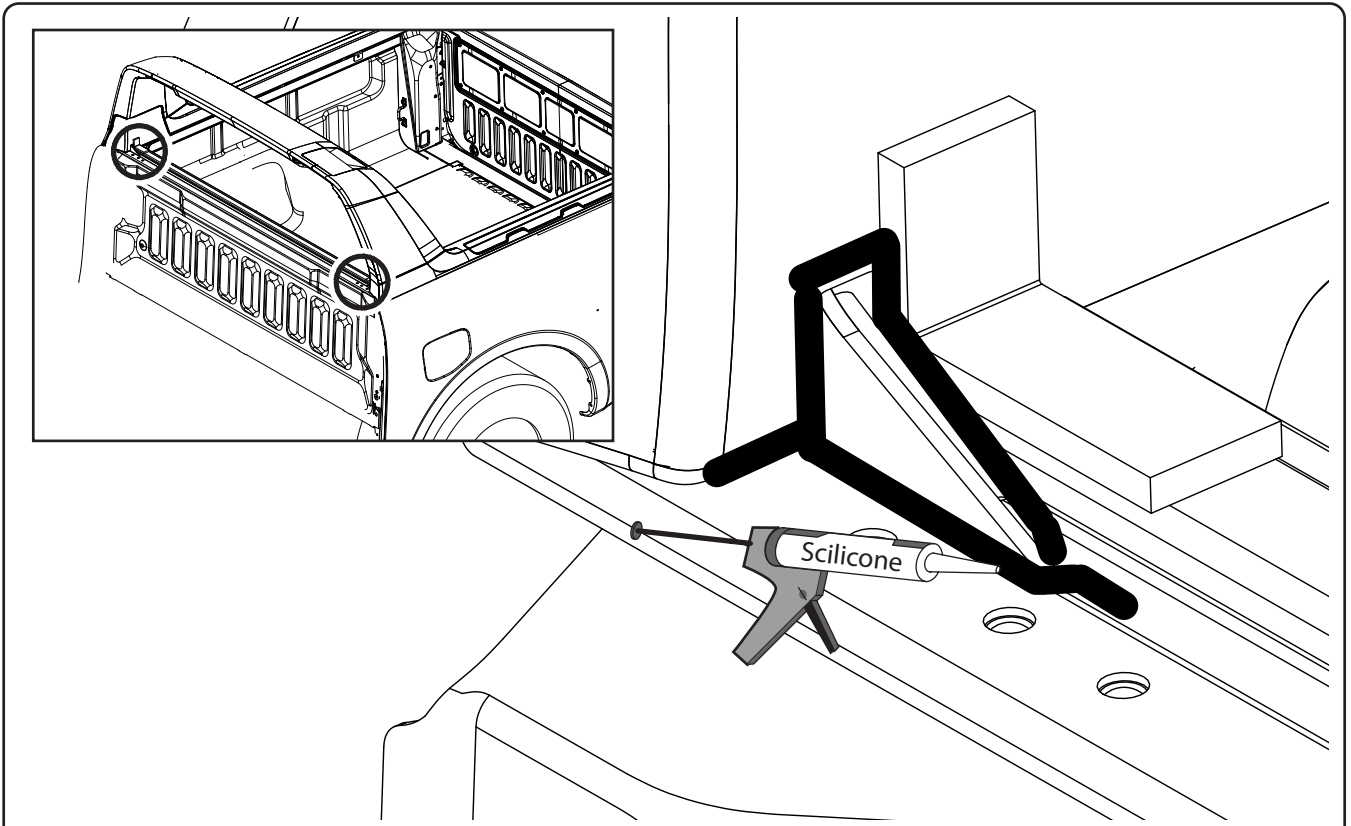

# Ford Wildtrak

## Mountain Top Roll



### Installation Instructions

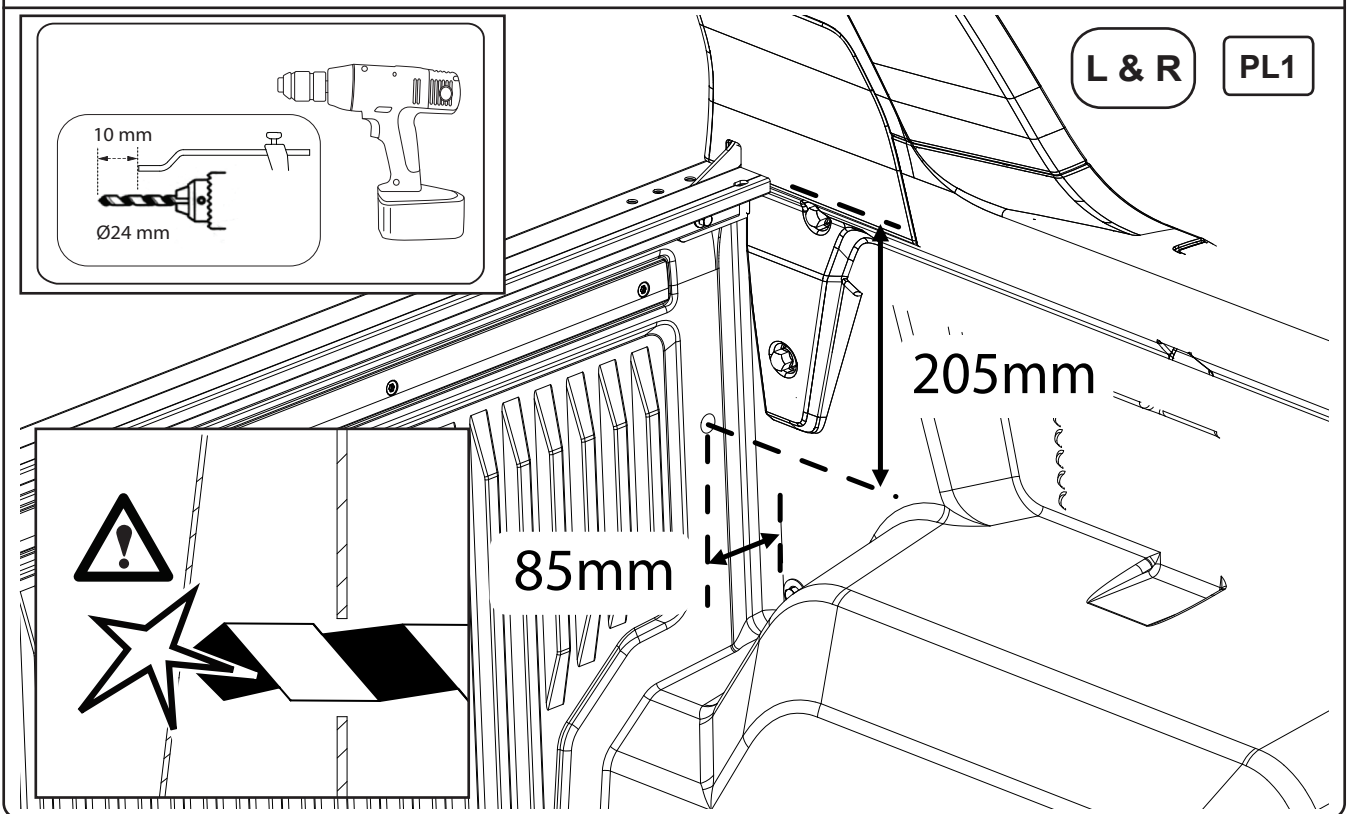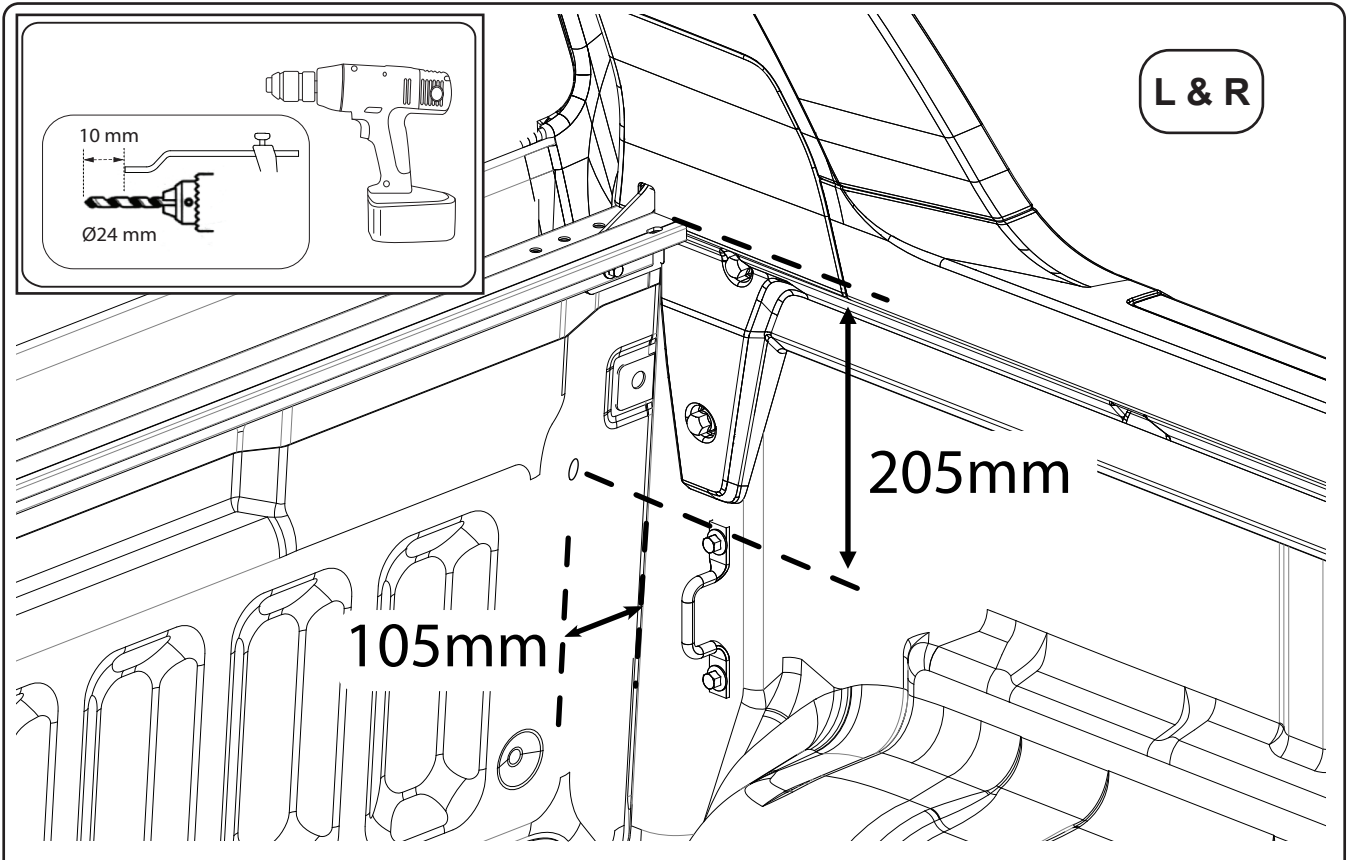

# Ford Wildtrak

## Mountain Top Roll



### Installation Instructions

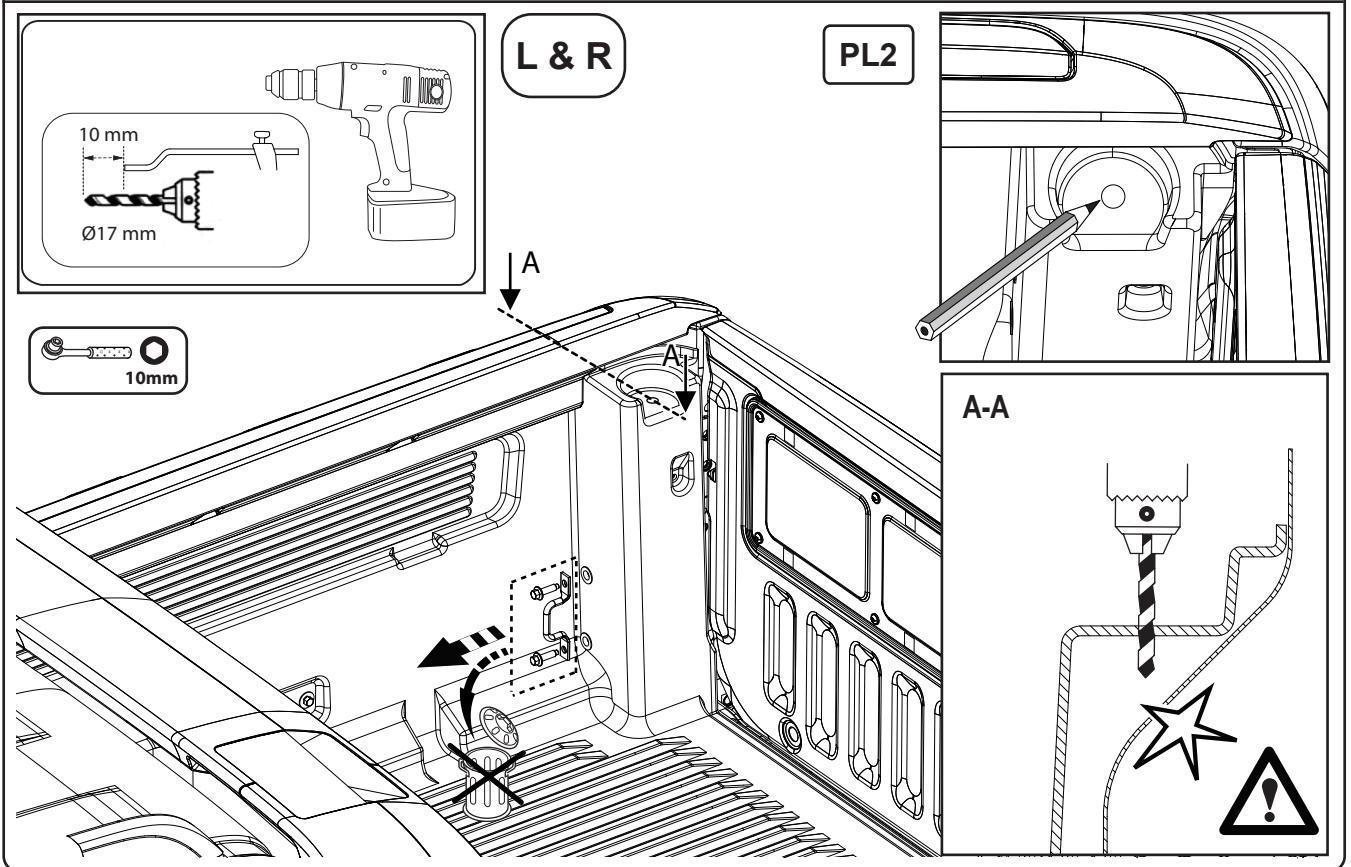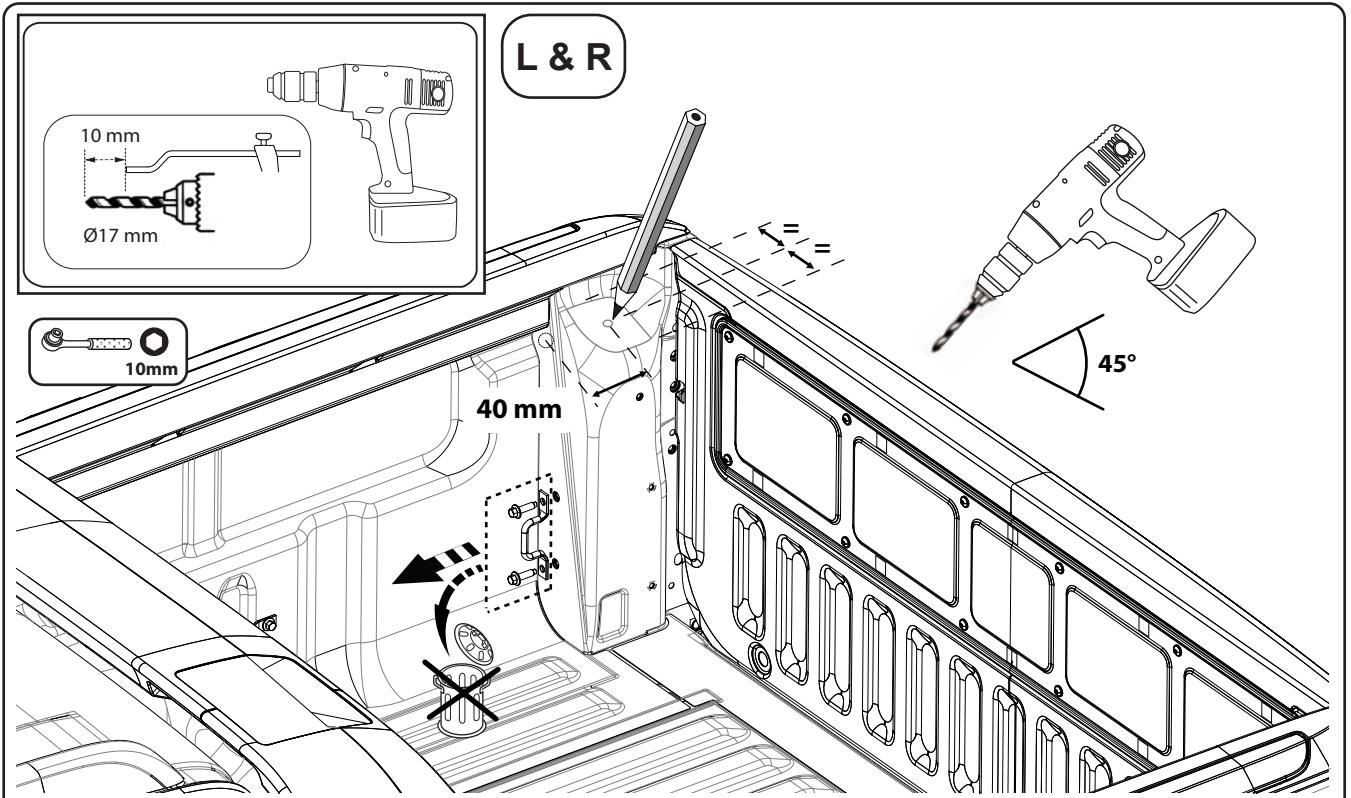

# Ford Wildtrak

## Mountain Top Roll

### Installation Instructions

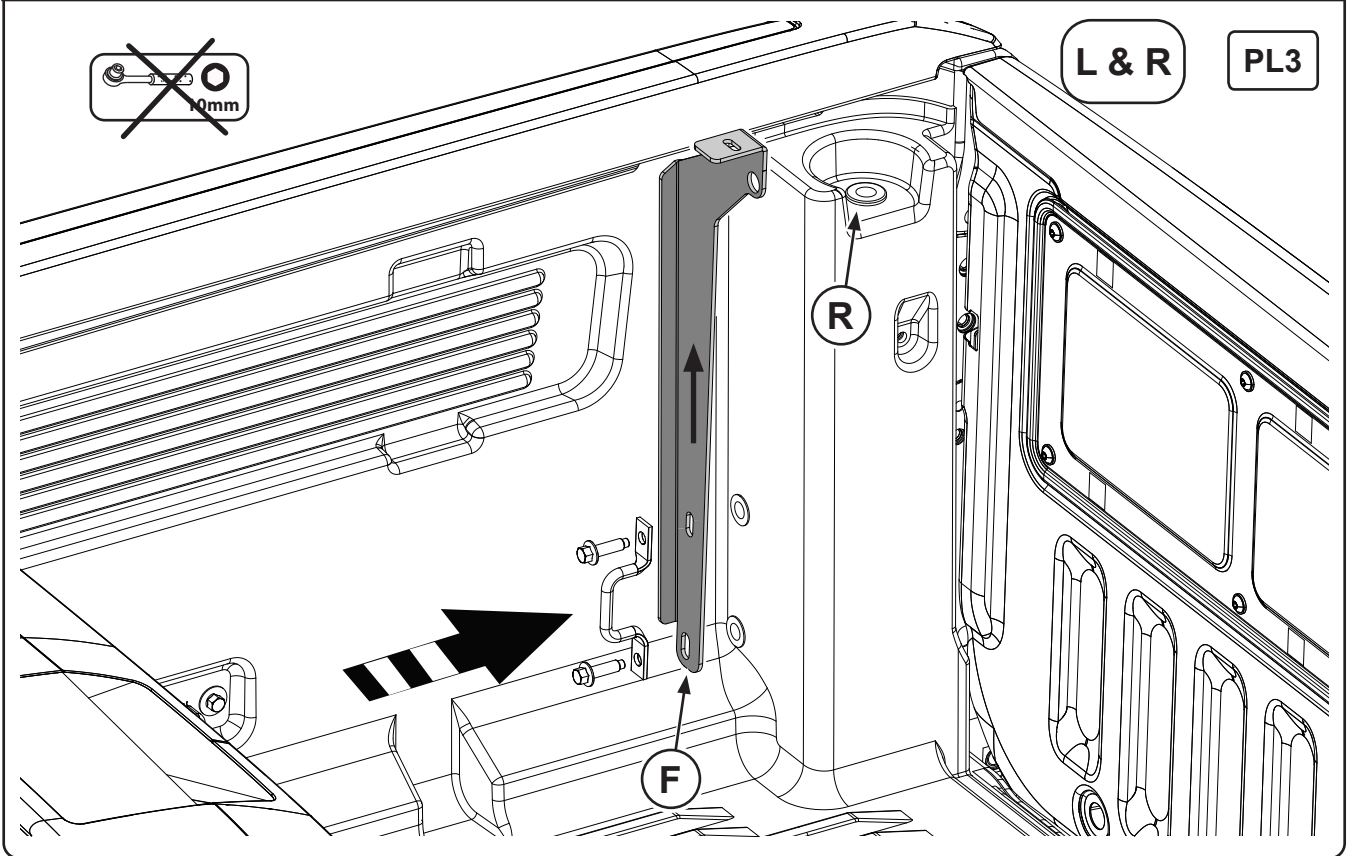
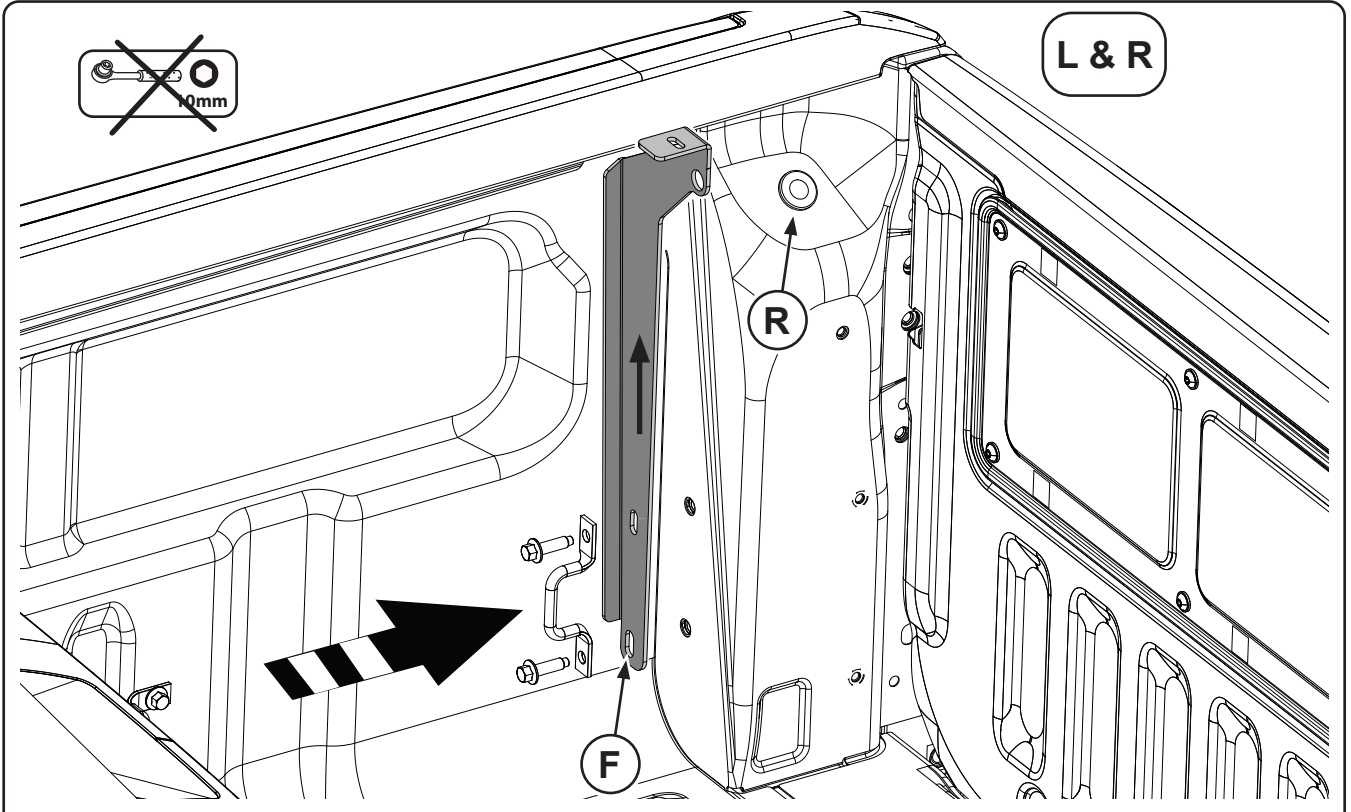


MTI-number 886 017	Issue 03	Date 10/03/2020	MTR FO90 H03	MTR FO90 H08	MTR FO91 H08	Page 12/26
Pedersholmparken 10 3600 Frederikssund Denmark			ph: +45 4810 2950	Fax +45 4810 2960	www.mountaintop.dk	

# Ford Wildtrak

## Mountain Top Roll


### Installation Instructions

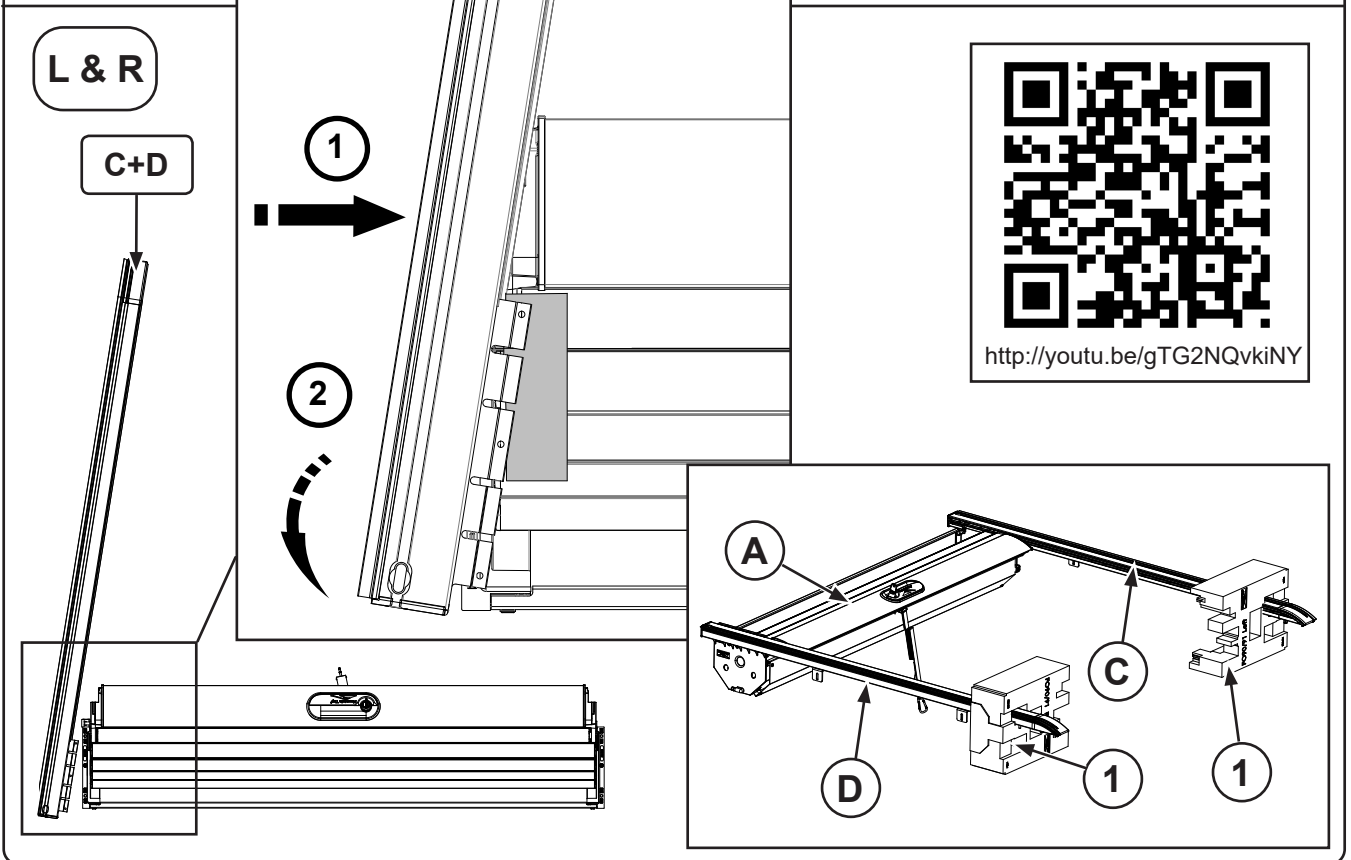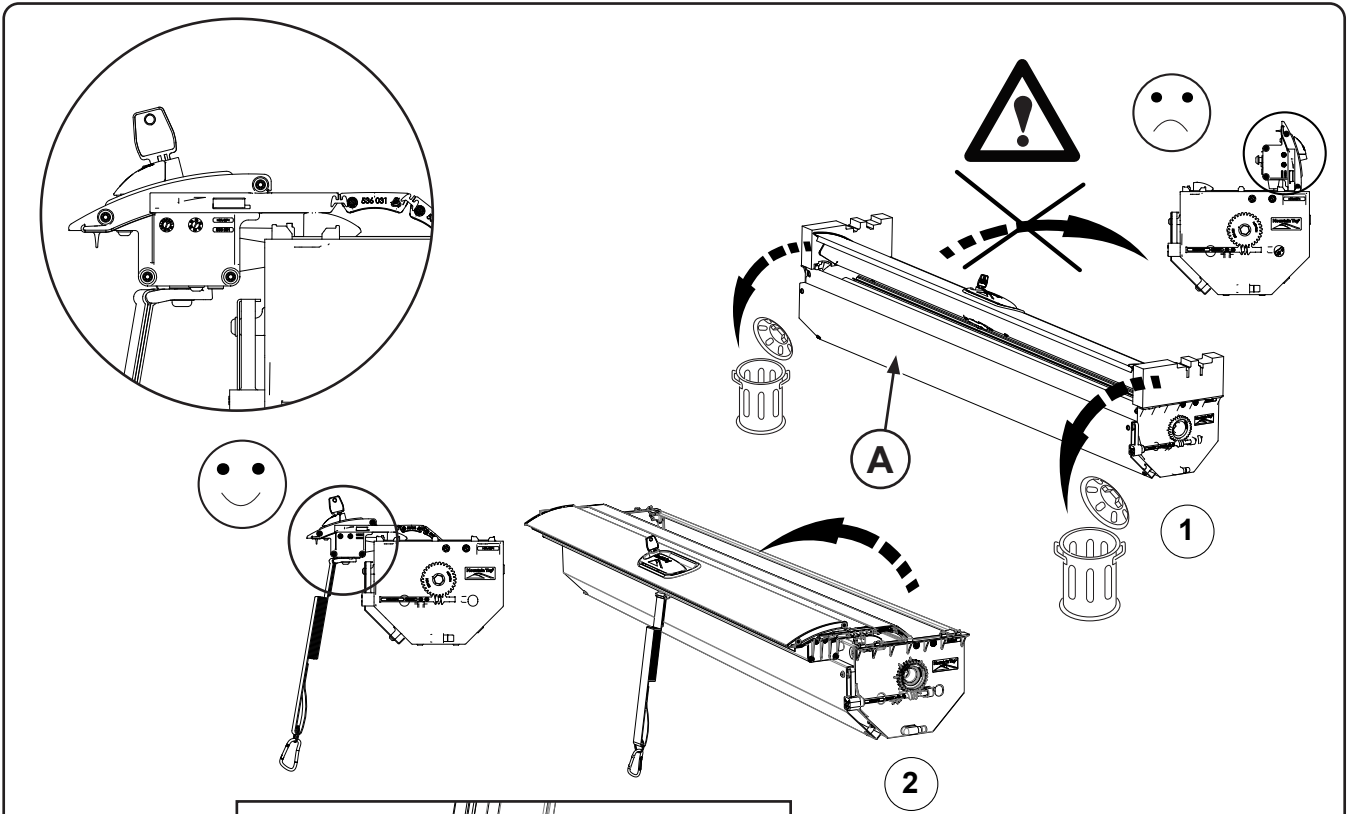

# Ford Wildtrak

## Mountain Top Roll



### Installation Instructions

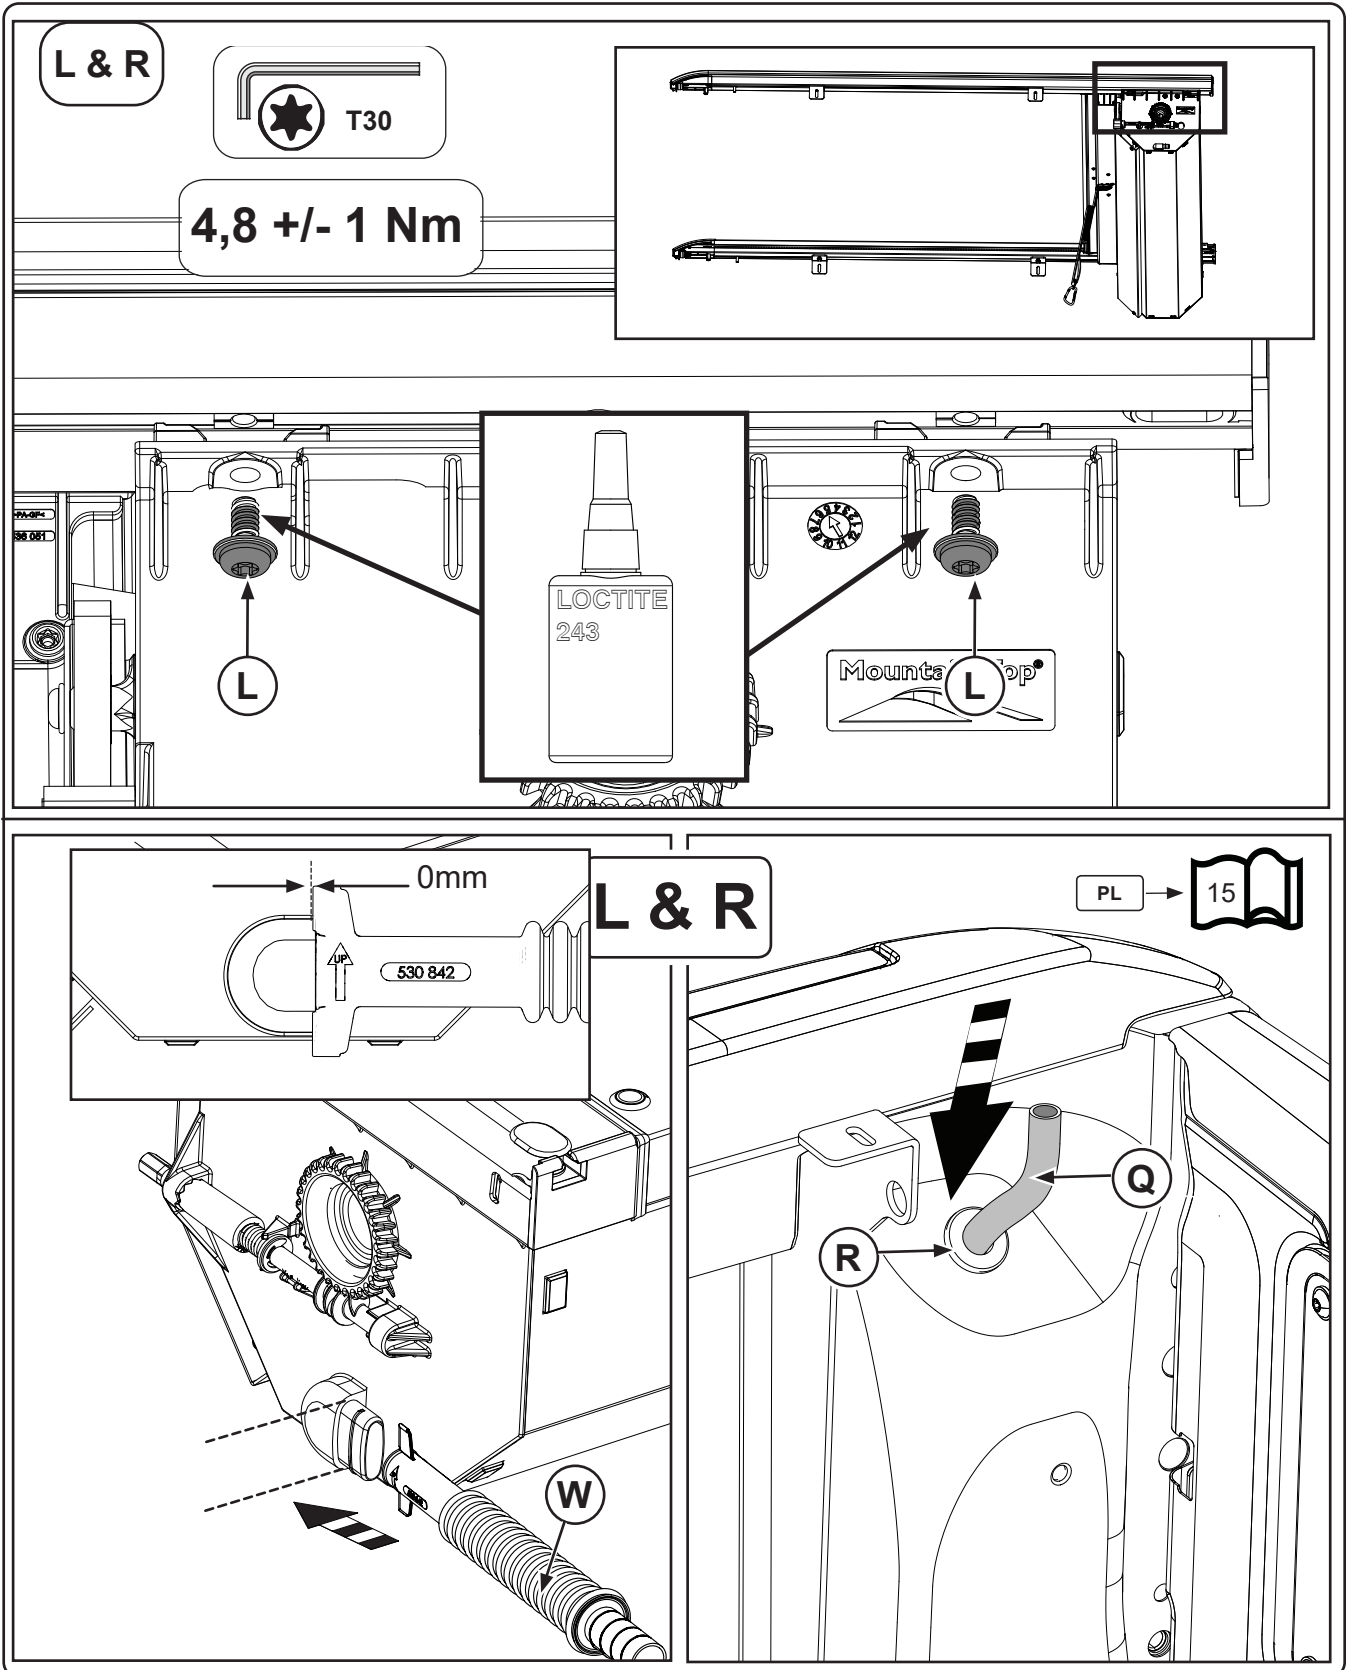

# Ford Wildtrak

## Mountain Top Roll



### Installation Instructions

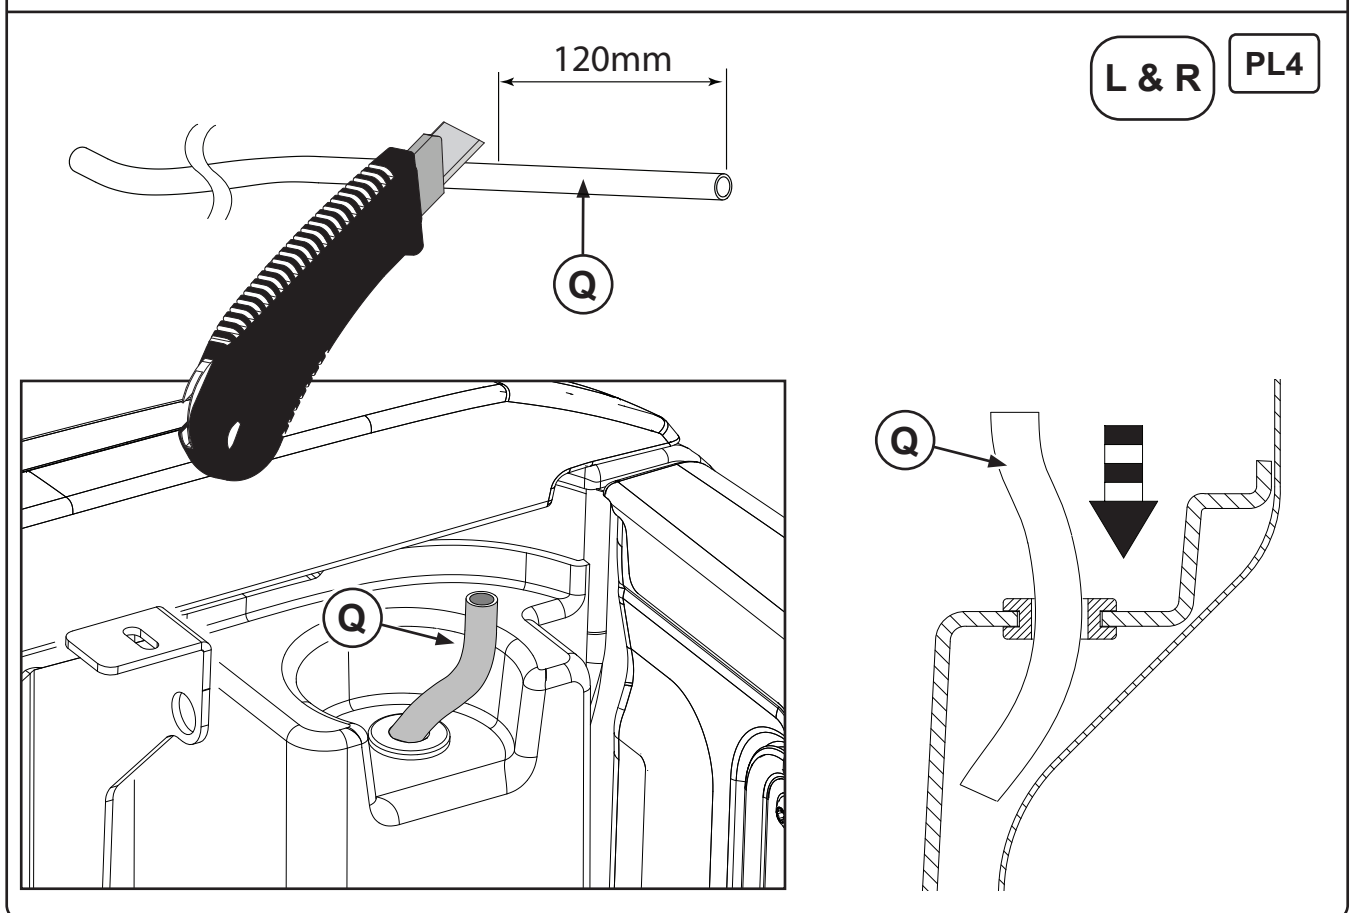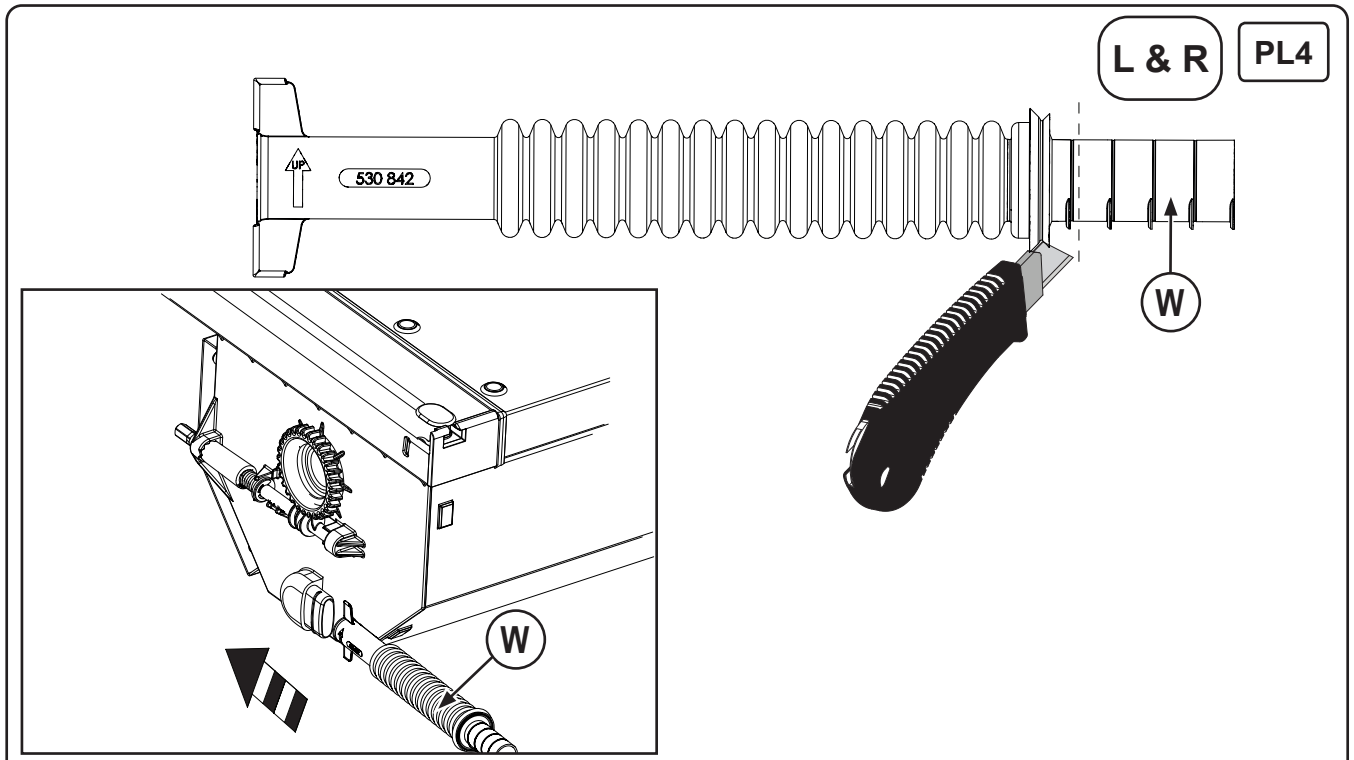

# Ford Wildtrak

## Mountain Top Roll

### Installation Instructions

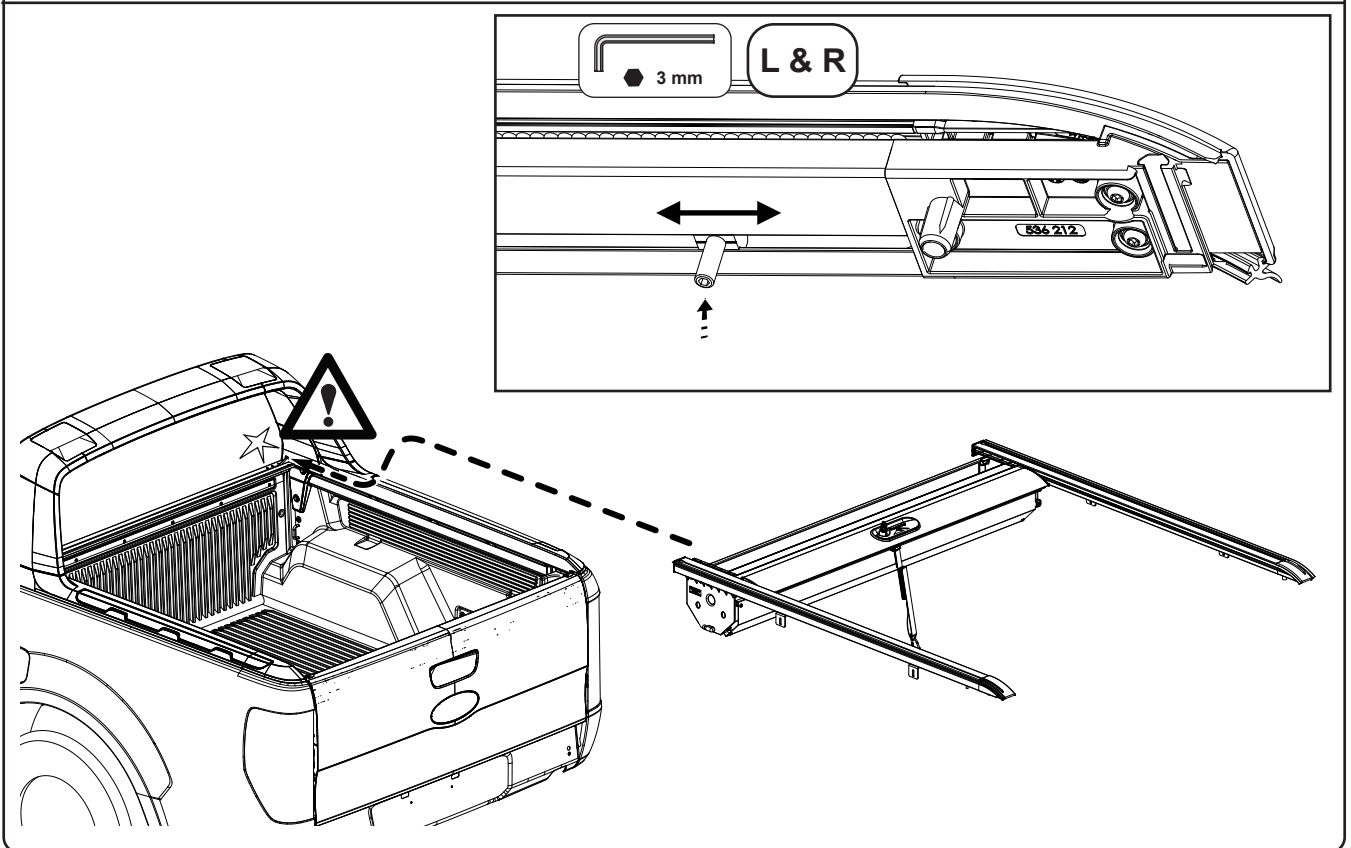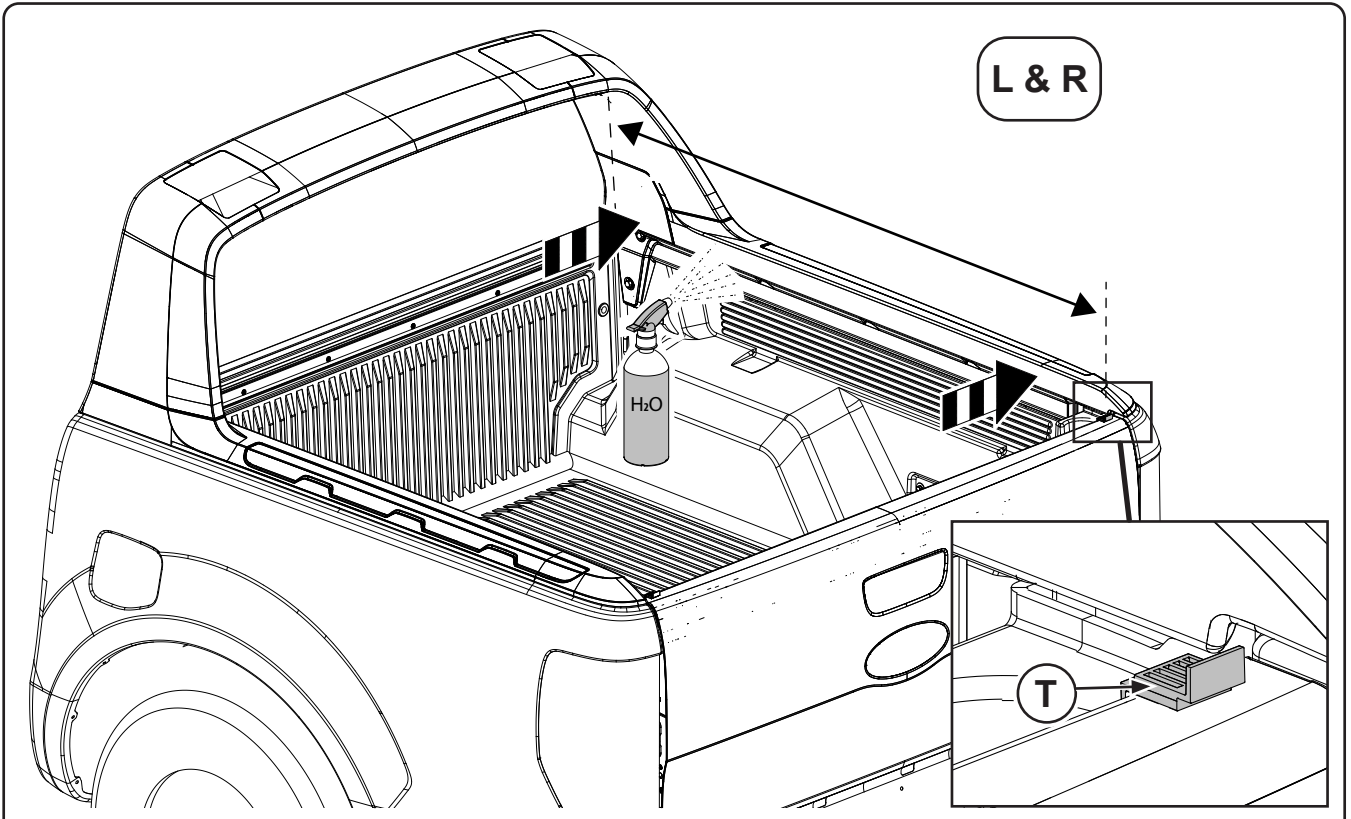




# Ford Wildtrak

## Mountain Top Roll


### Installation Instructions

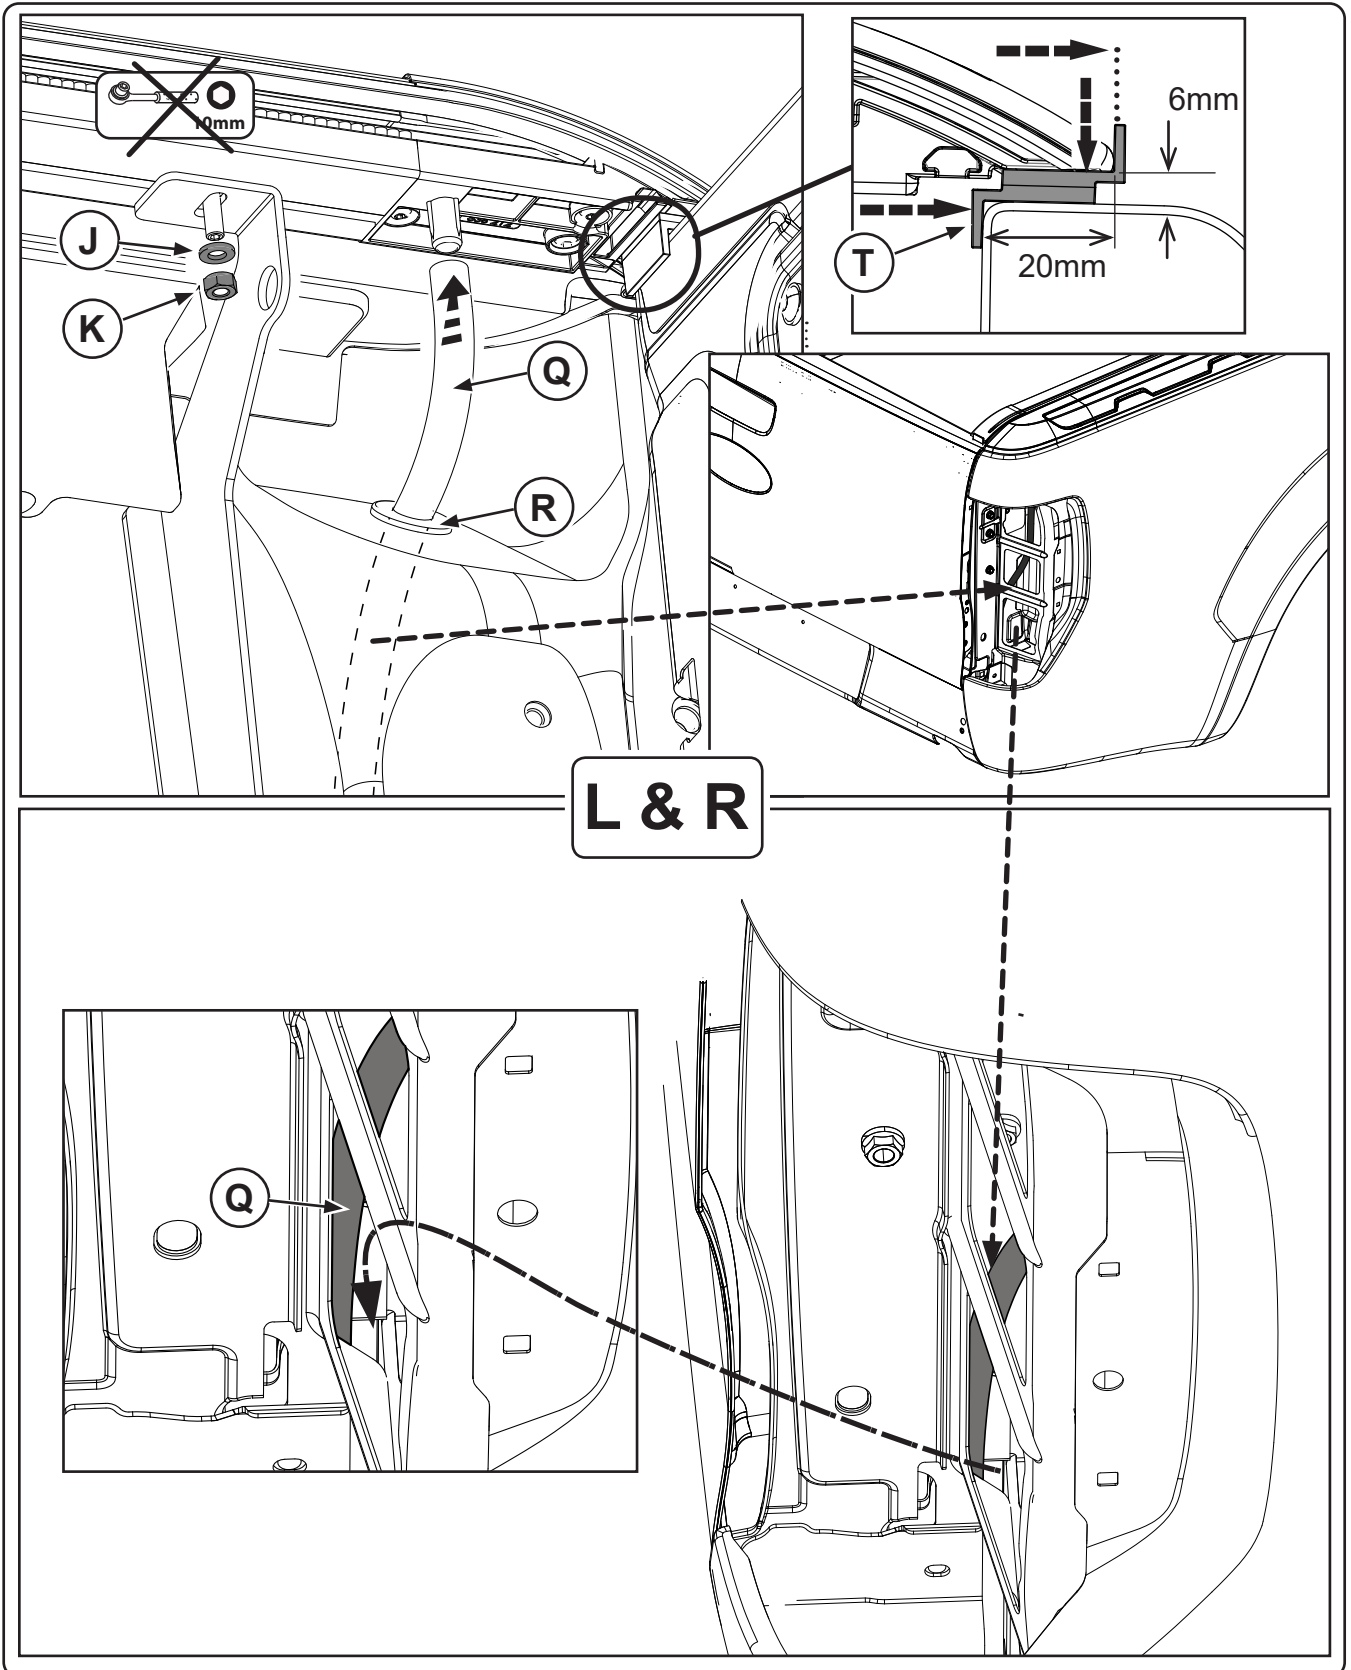

# Ford Wildtrak

## Mountain Top Roll

### Installation Instructions

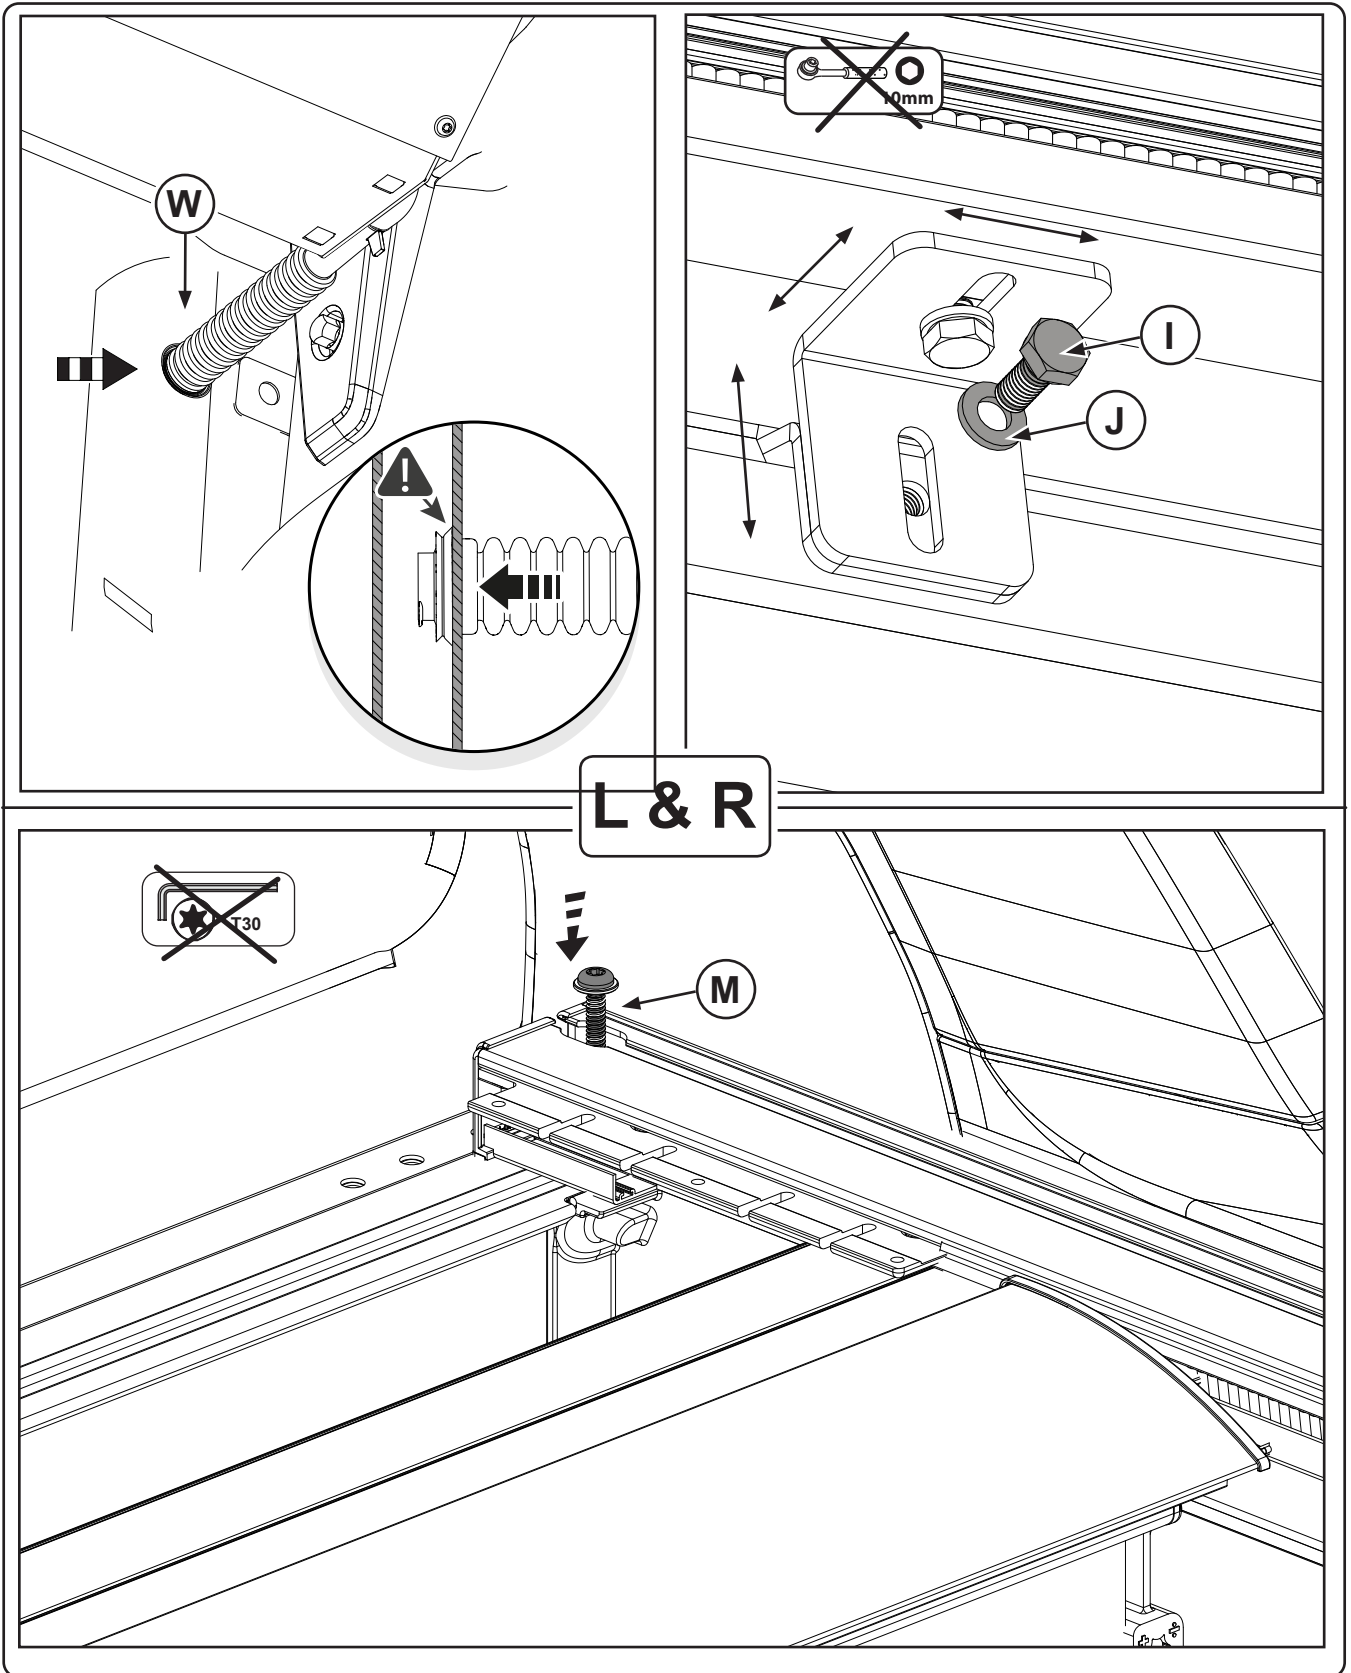


MTI-number 886 017	Issue 03	Date 10/03/2020	MTR FO90 H03	MTR FO90 H08	MTR FO91 H08	Page 18/26
Pedersholmparken 10 3600 Frederikssund Denmark			ph: +45 4810 2950	Fax +45 4810 2960	www.mountaintop.dk	

# Ford Wildtrak

## Mountain Top Roll


### Installation Instructions

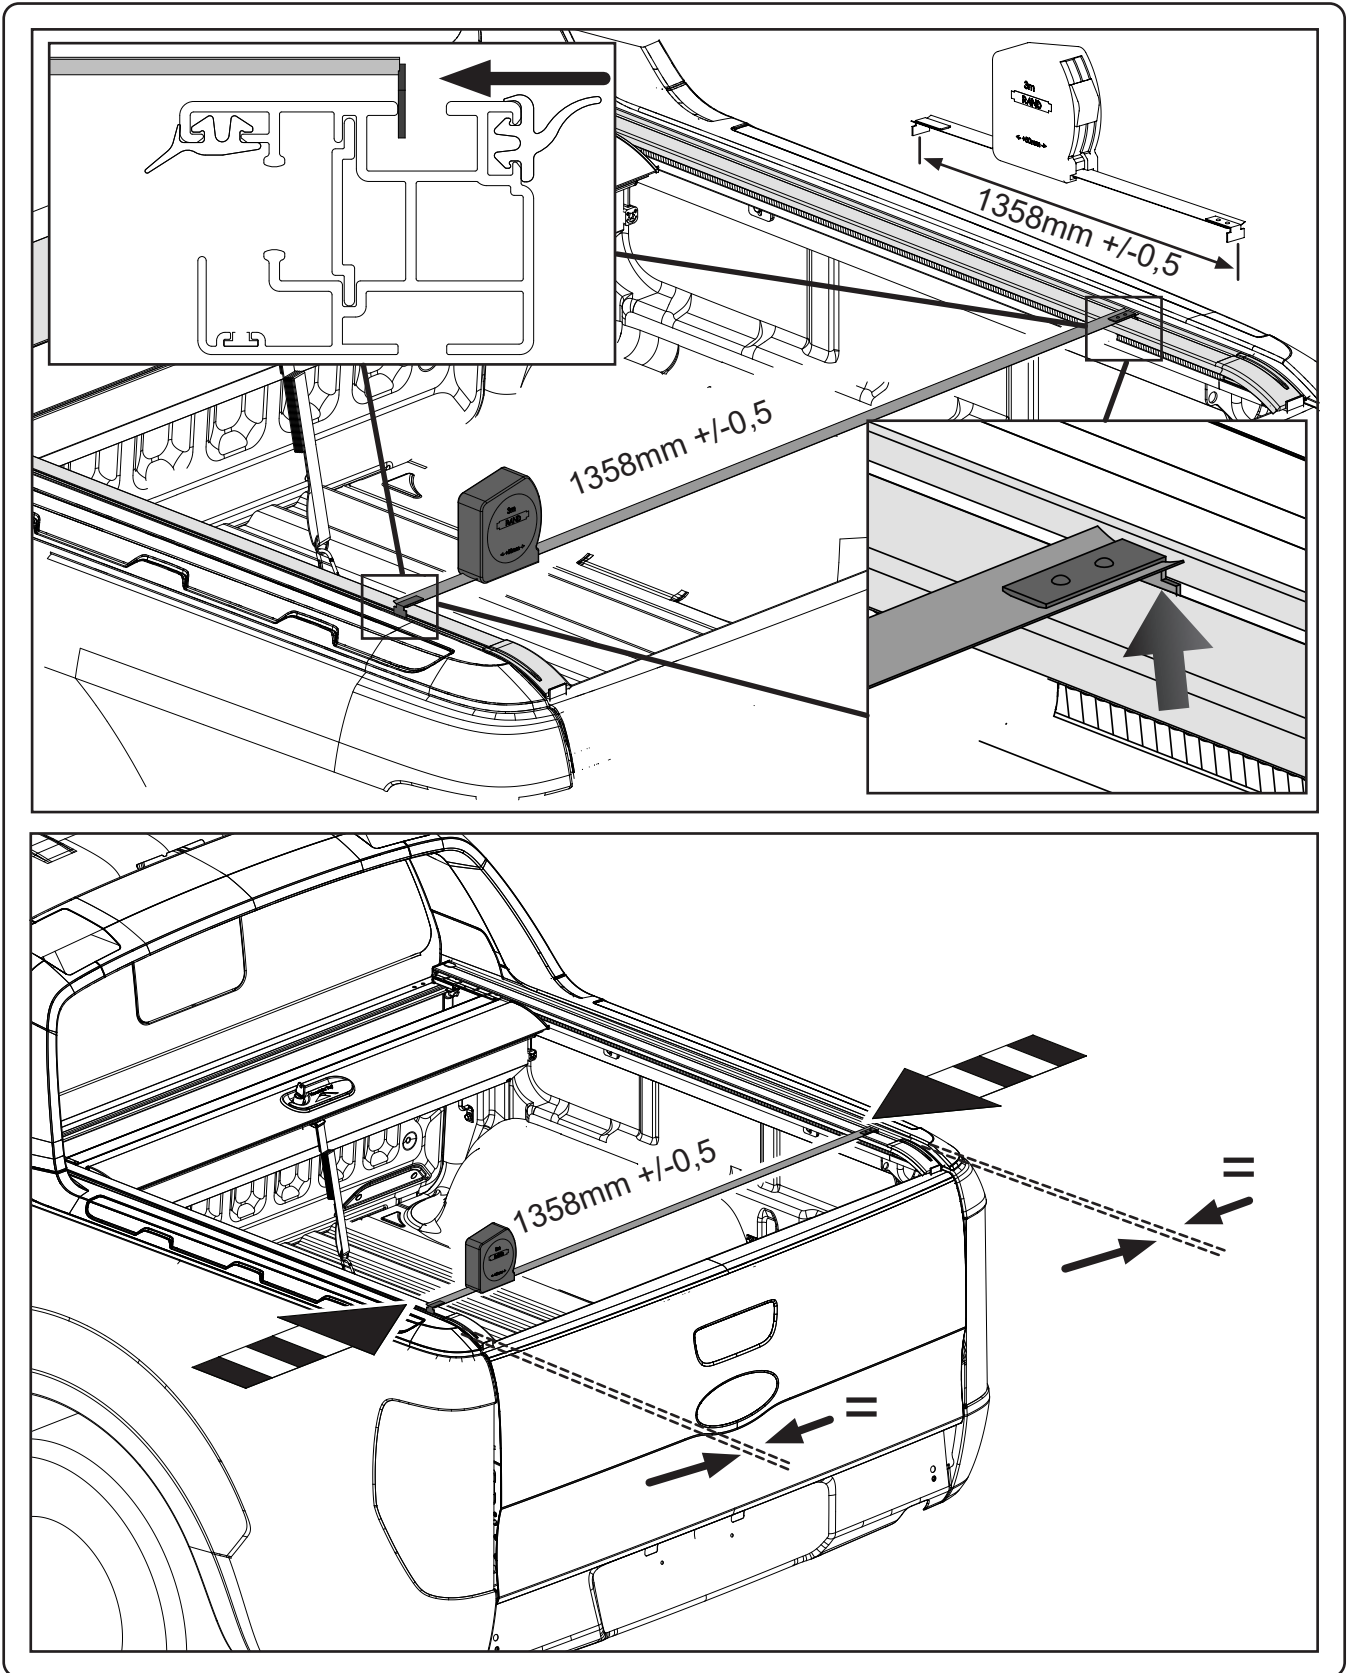

# Ford Wildtrak

## Mountain Top Roll



### Installation Instructions

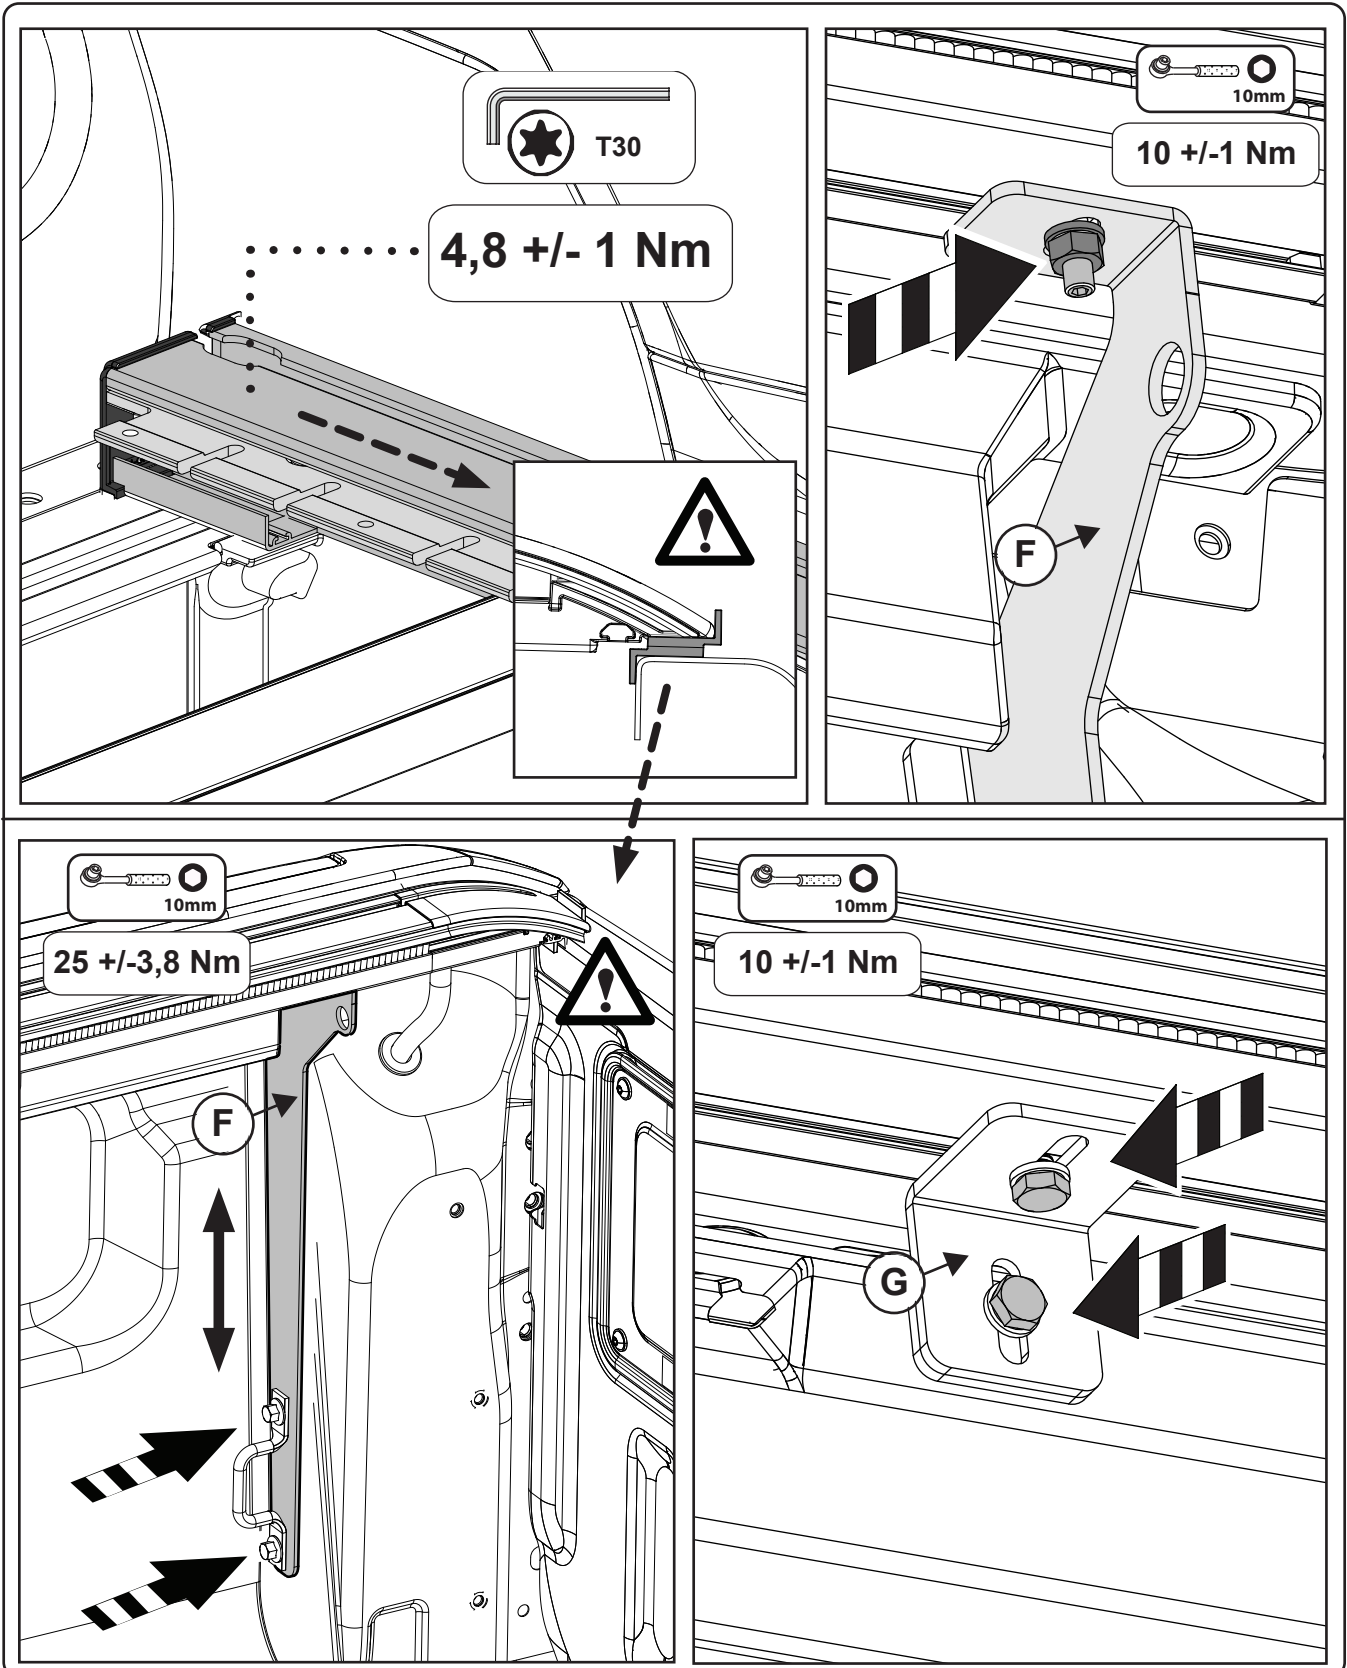

# Ford Wildtrak

## Mountain Top Roll



### Installation Instructions

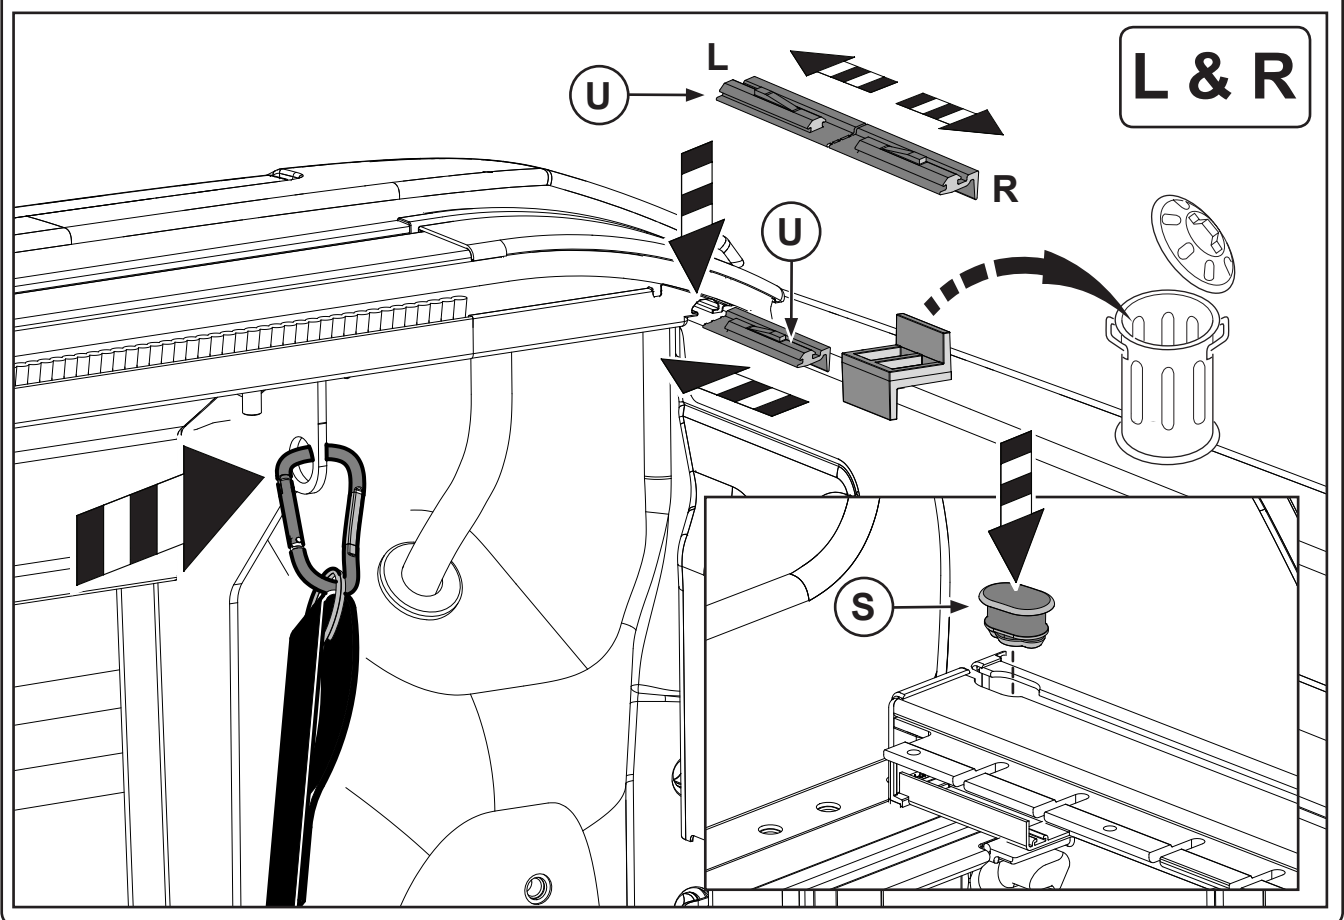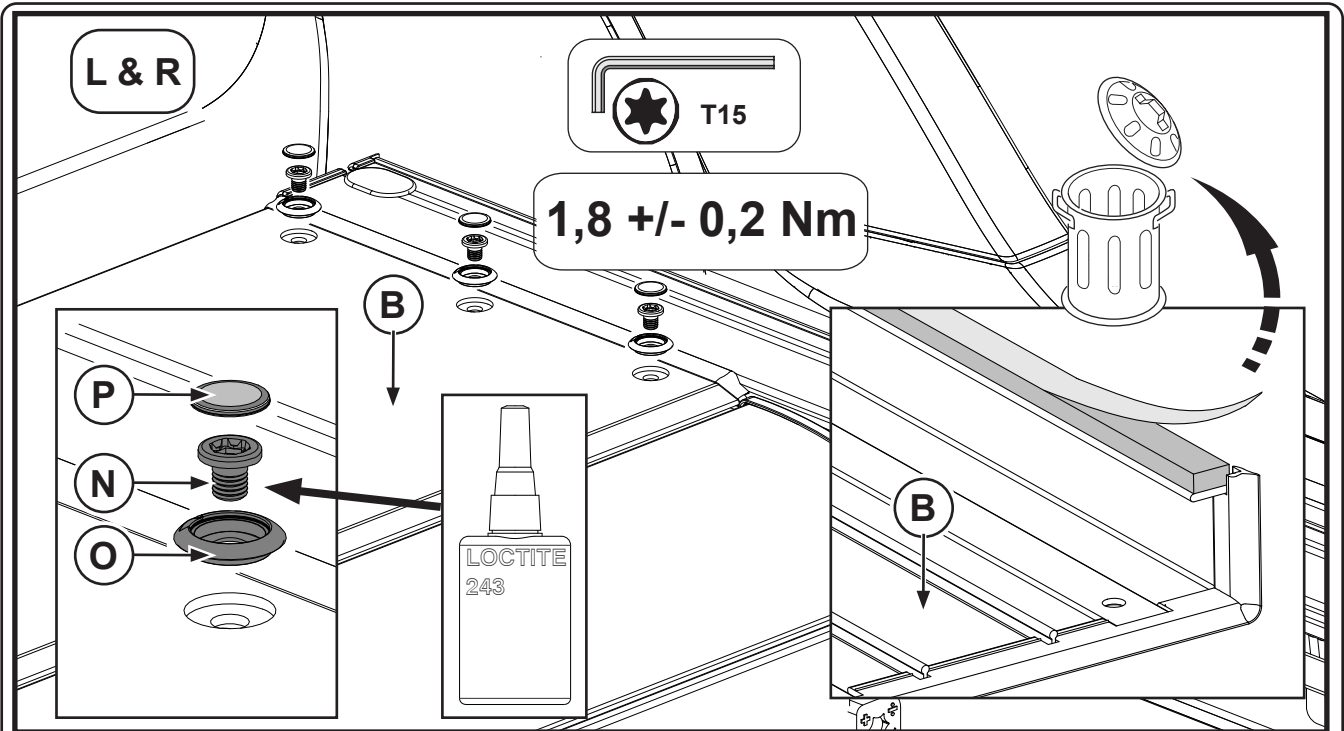

# Ford Wildtrak

## Mountain Top Roll


### Installation Instructions

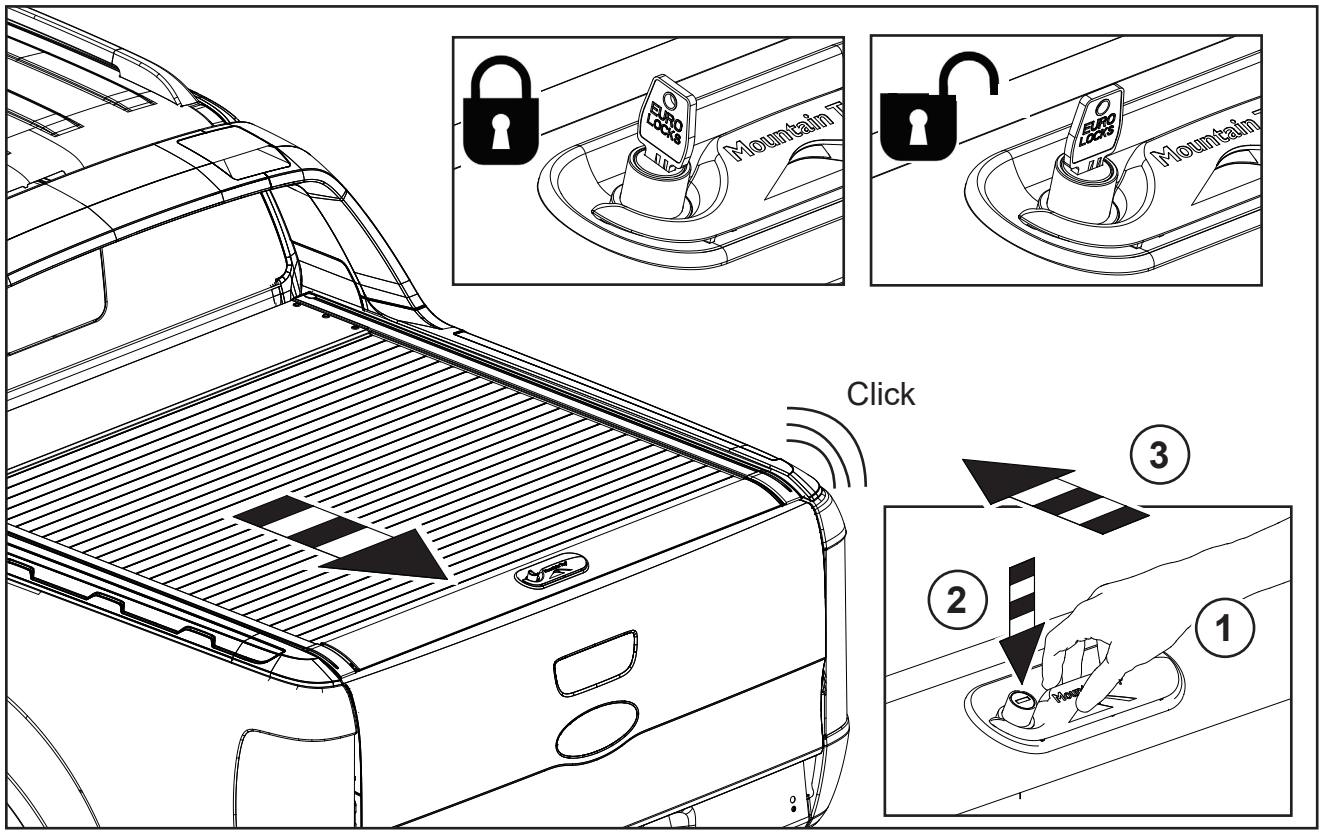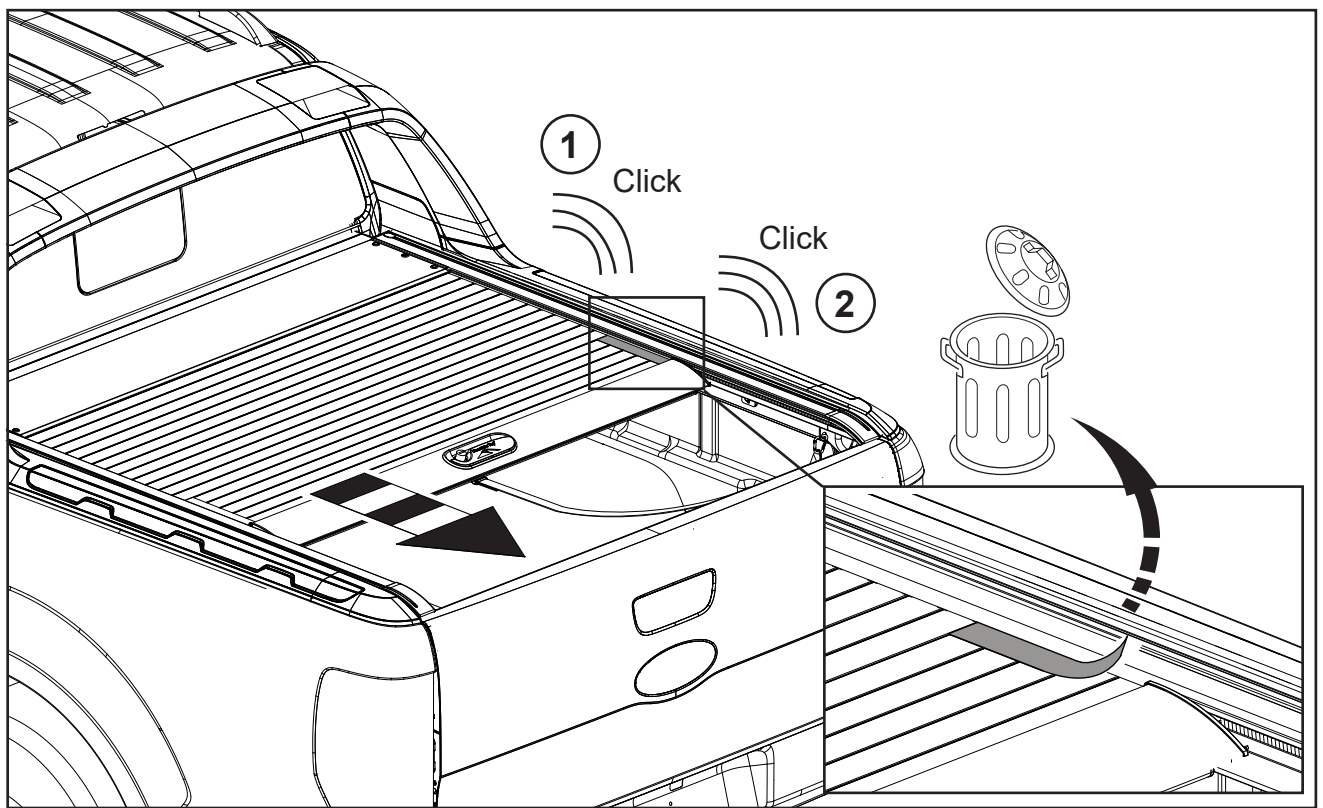

# Ford Wildtrak

## Mountain Top Roll




### Installation Instructions

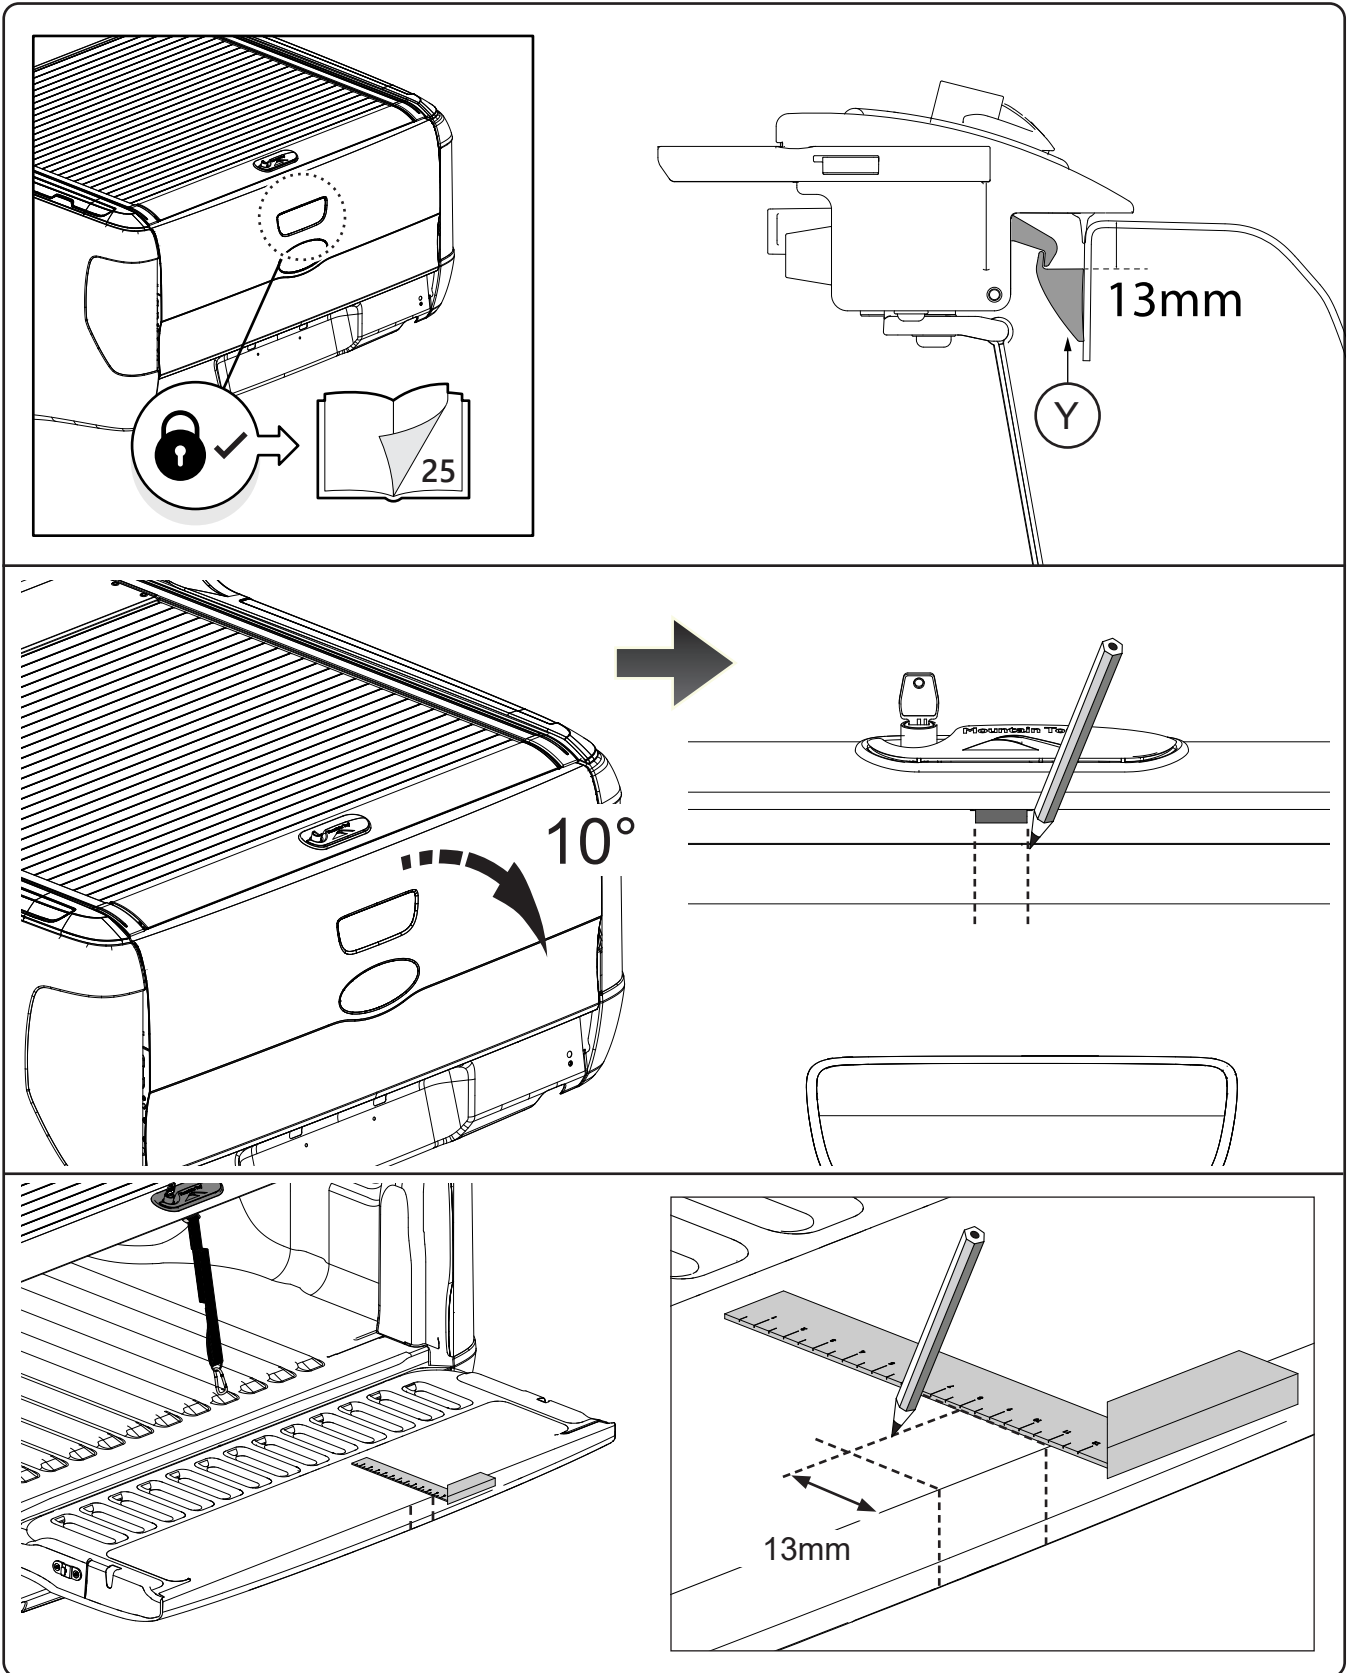

# Ford Wildtrak

## Mountain Top Roll

### Installation Instructions


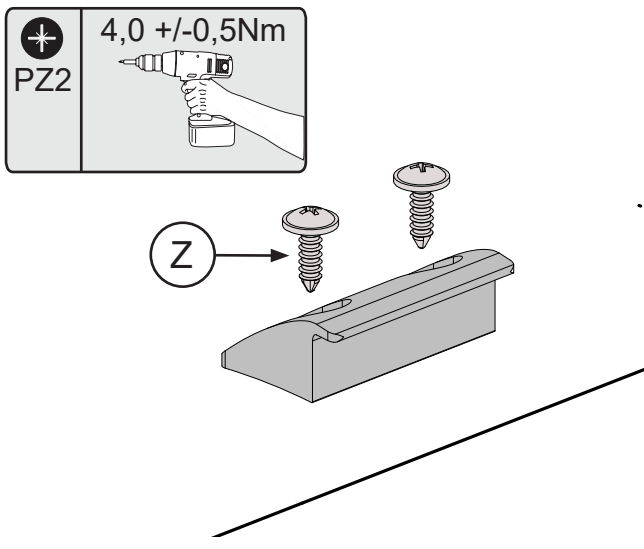
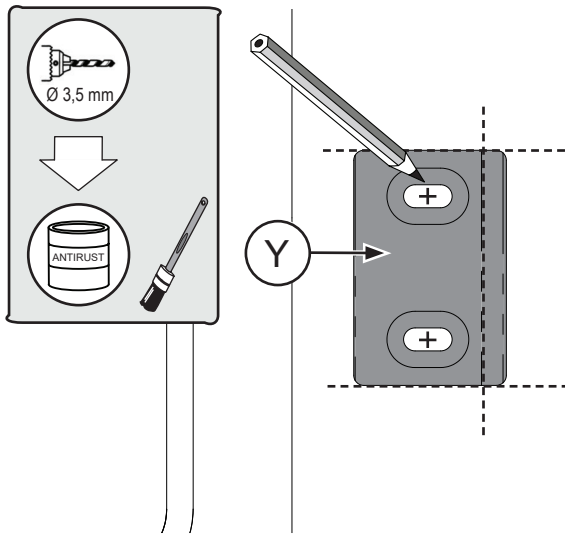
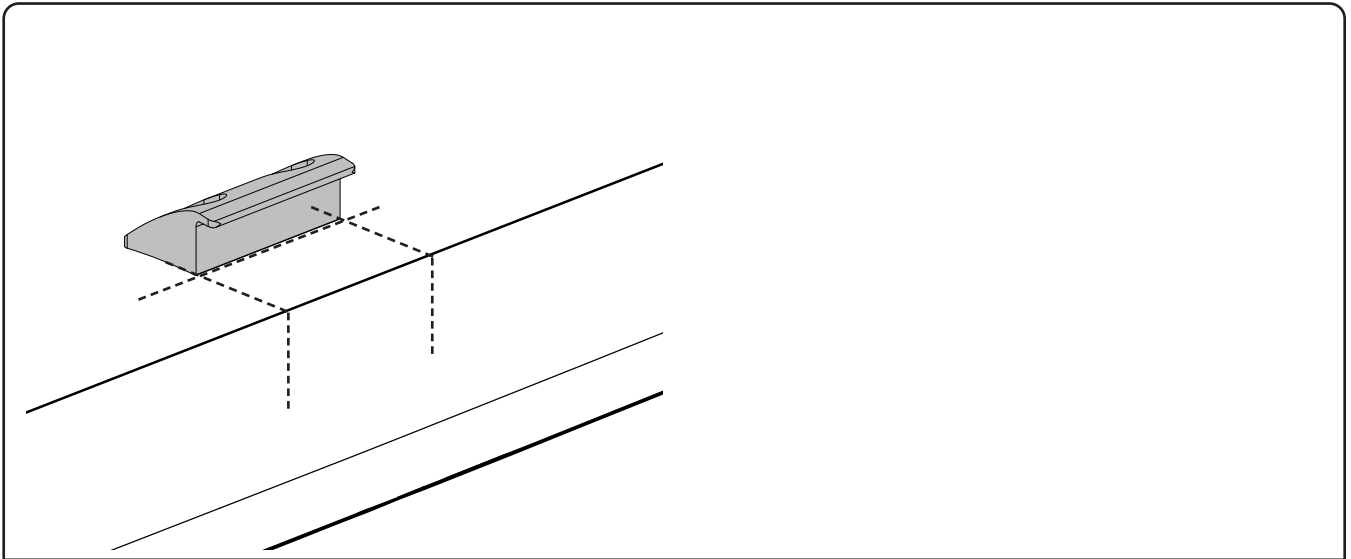




# Ford Wildtrak

## Mountain Top Roll

### Installation Instructions

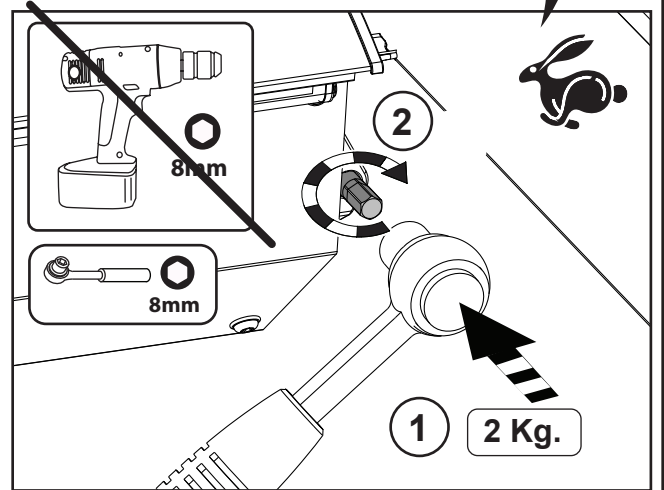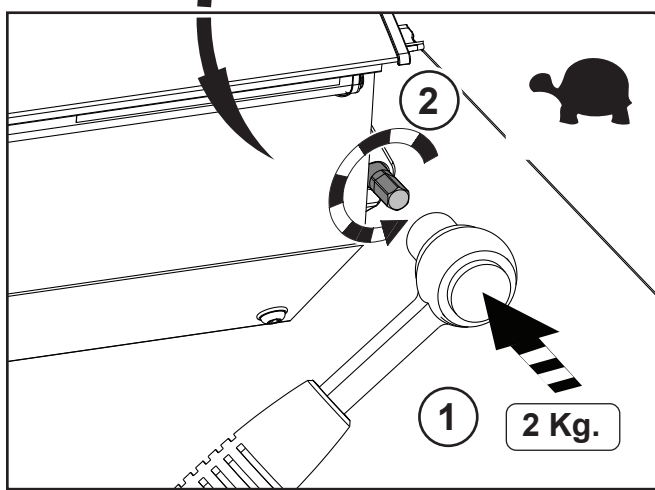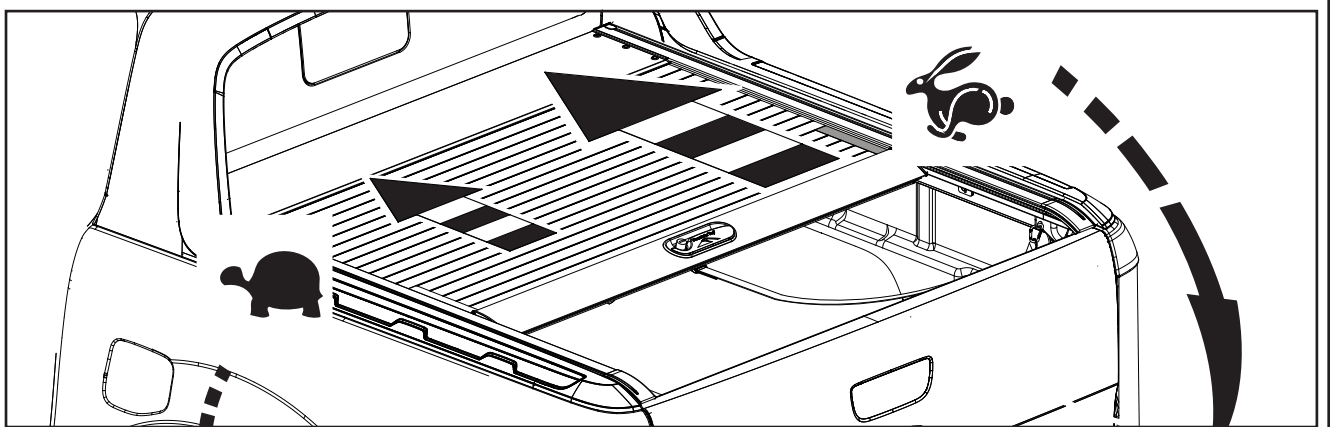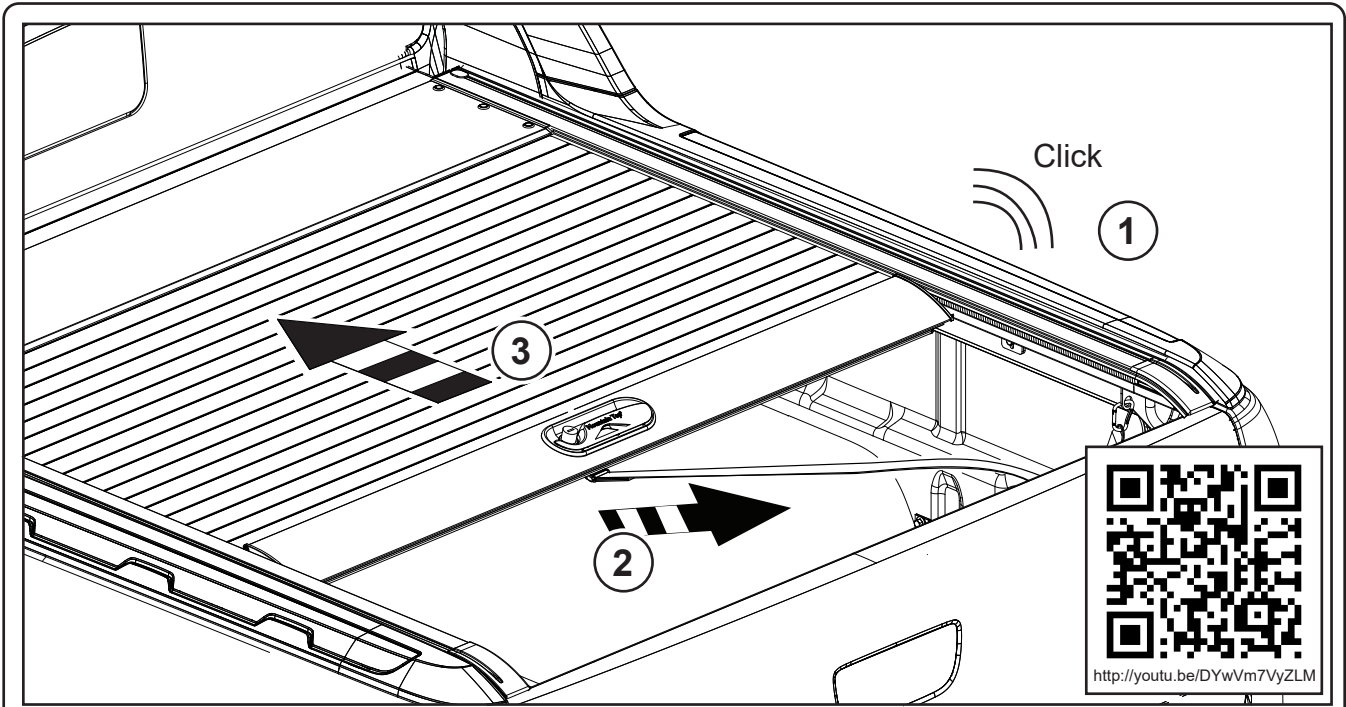

**Ford Wildtrak**  
Mountain Top Roll  
Installation Instructions

