

Mountain Top® Roll



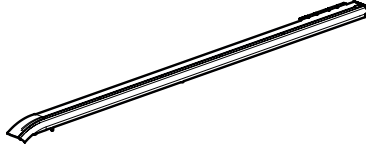
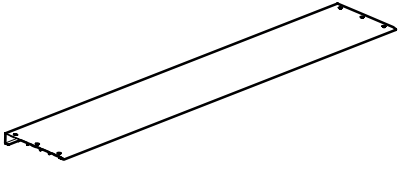
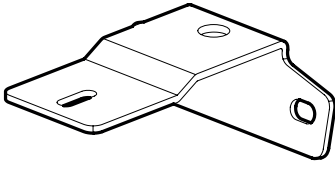
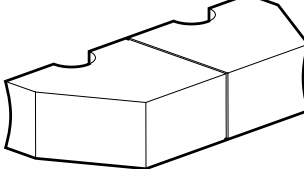
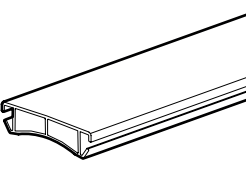
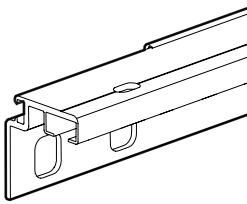
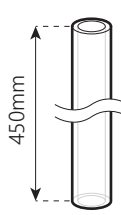
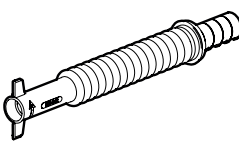
Installation manual



DOWNLOAD PDF








Parts
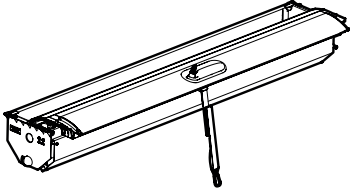
<p>A</p>  <p>x 1</p>	<p>B</p>  <p>x 1</p>	<p>C</p>  <p>x 1</p>	
<p>D</p>  <p>x 1</p>	<p>E</p>  <p>x 2</p>	<p>F</p>  <p>x 1</p>	
<p>G</p>  <p>x 1</p>	<p>H</p>  <p>x 1</p>	<p>I</p>  <p>450mm</p> <p>x 2</p>	<p>J</p>  <p>x 2</p>













Kit
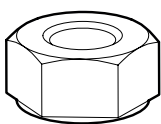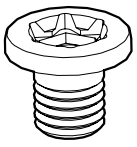
<p>K</p>  <p>x 2</p>	<p>L</p>  <p>x 2</p>	<p>M</p>  <p>x 4</p>	<p>N</p>  <p>x 2</p>	<p>O</p>  <p>x 6</p>
--	--	--	--	--






Kit

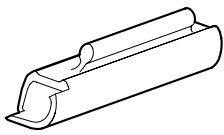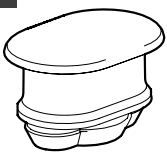
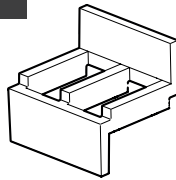
<p>P</p>  <p>x 2</p>	<p>Q</p>  <p>x 1</p>	<p>R</p>  <p>x 1</p>	<p>S</p>  <p>x 2</p>	<p>T</p>  <p>x 2</p>
--	--	--	--	--

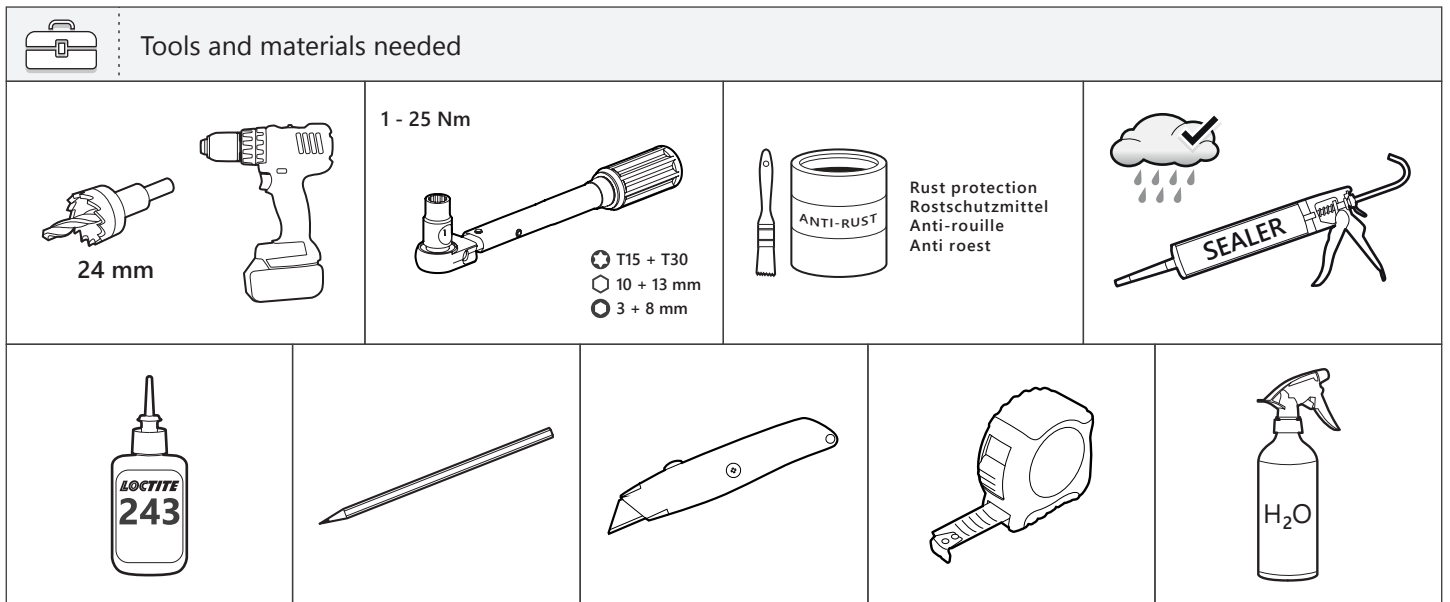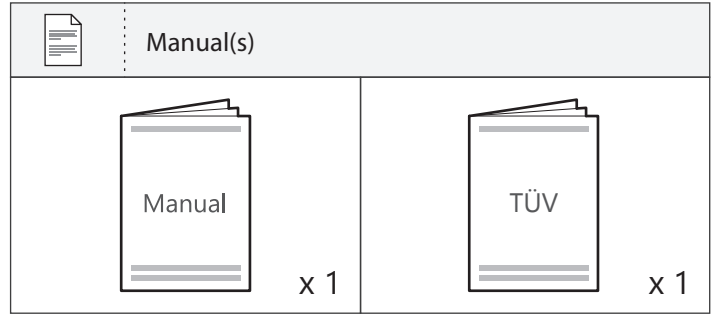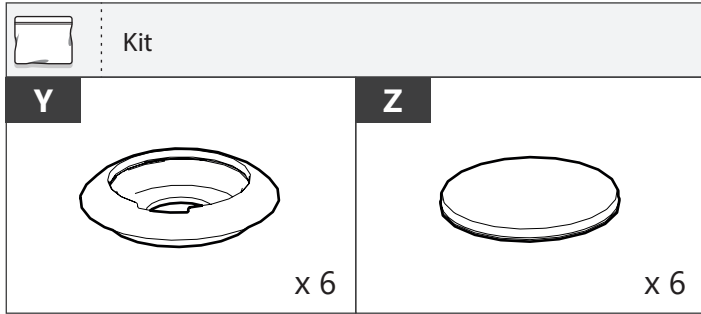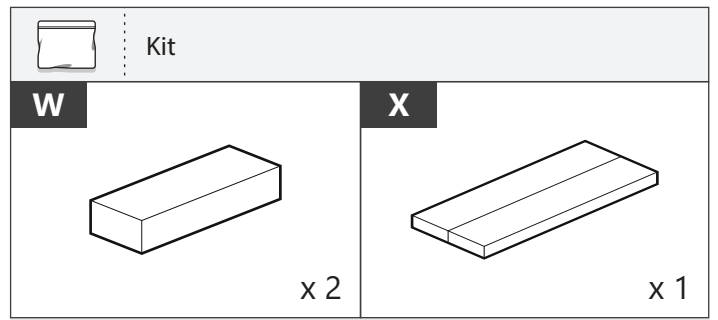
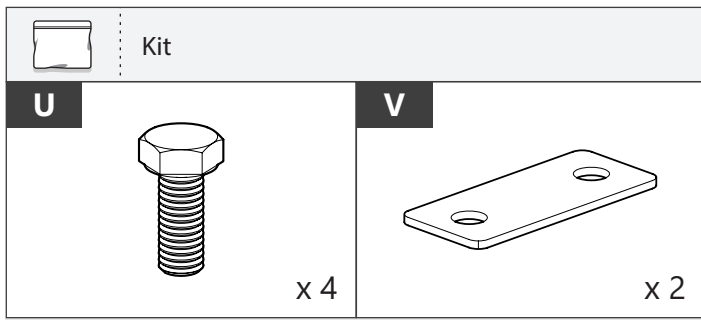





1



Applying rust protection

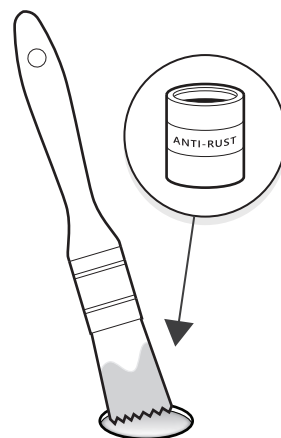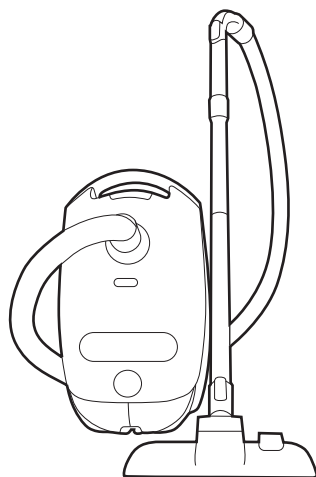
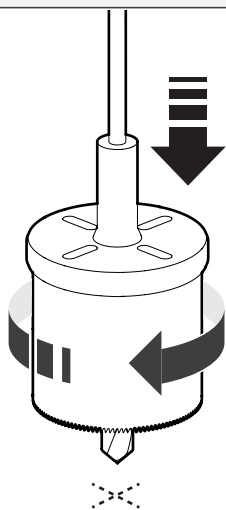


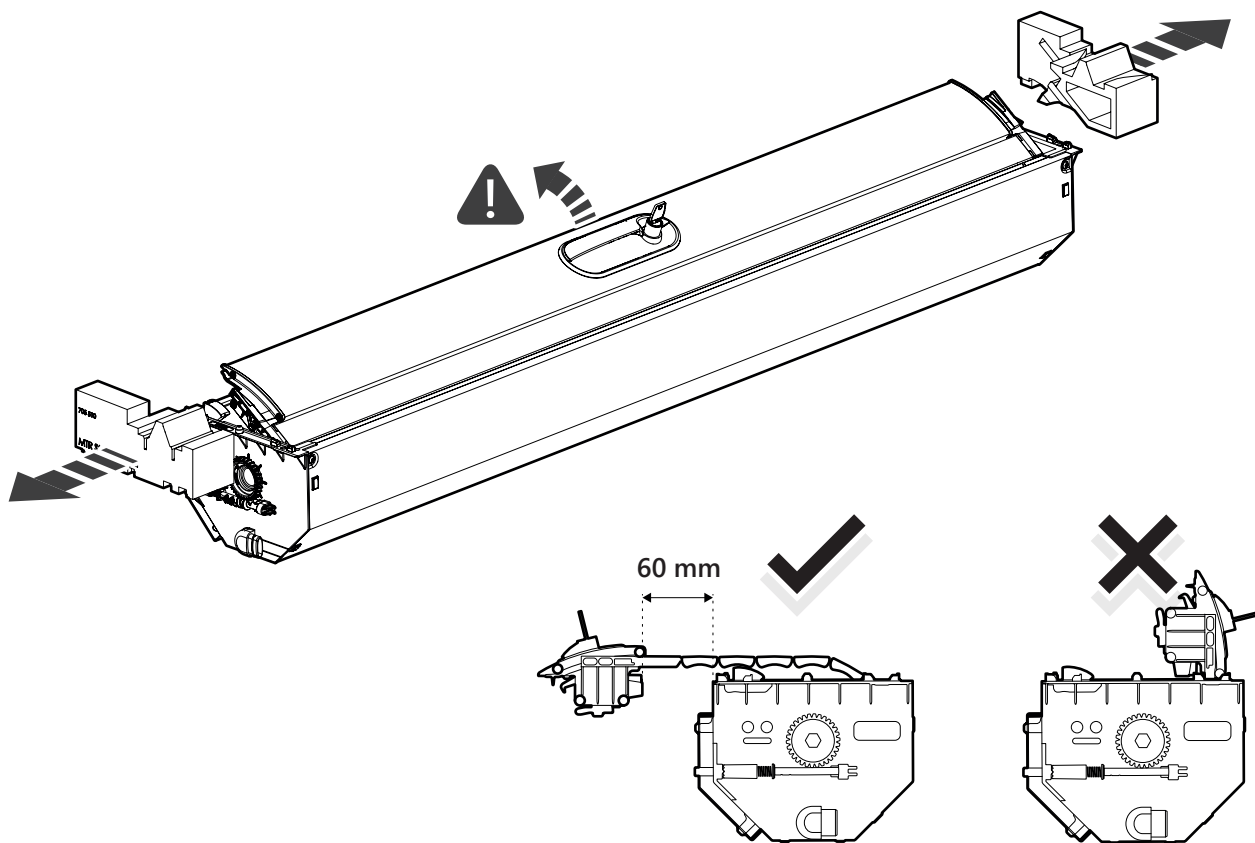
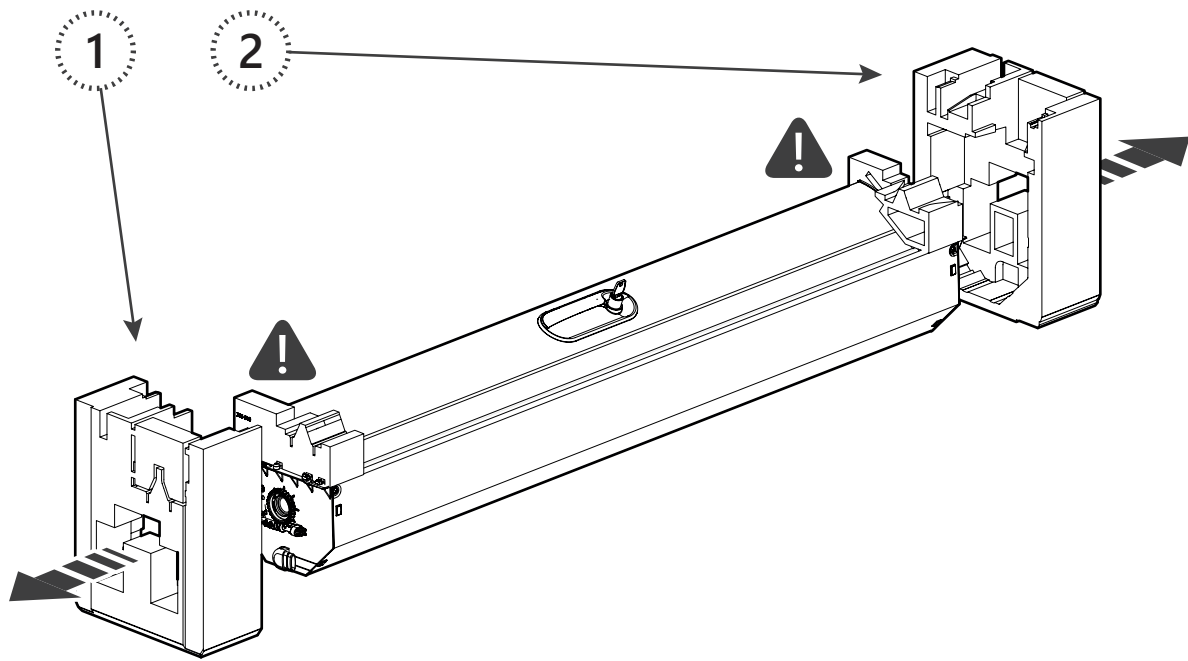


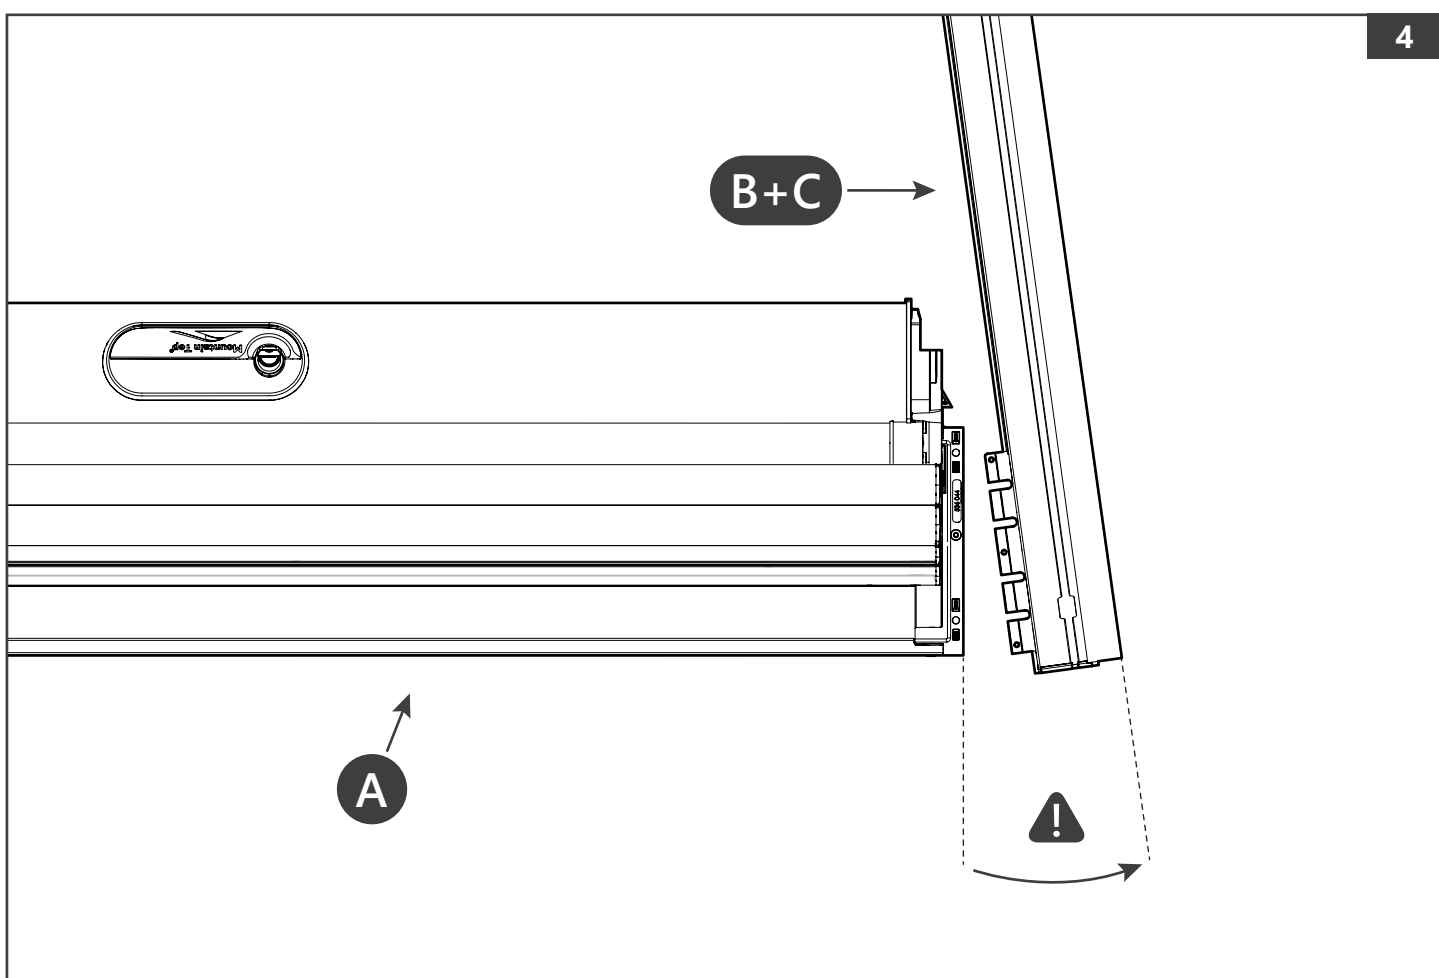
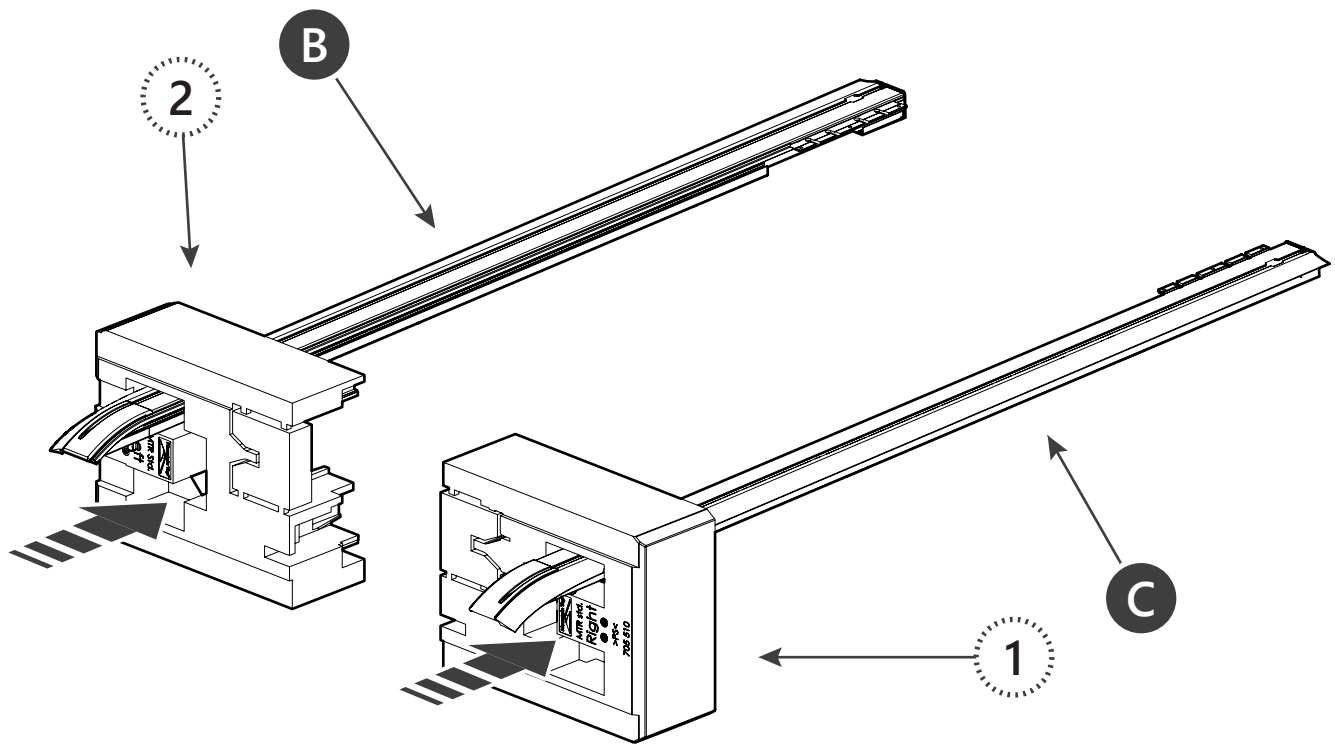


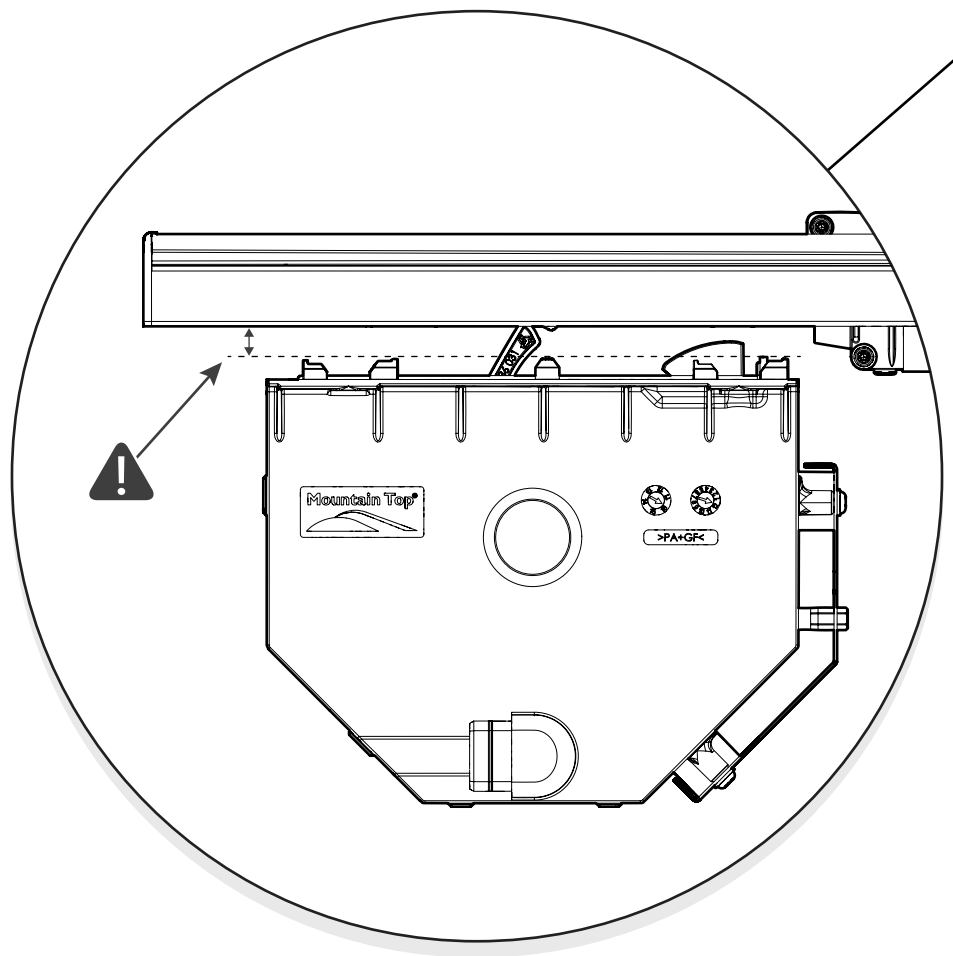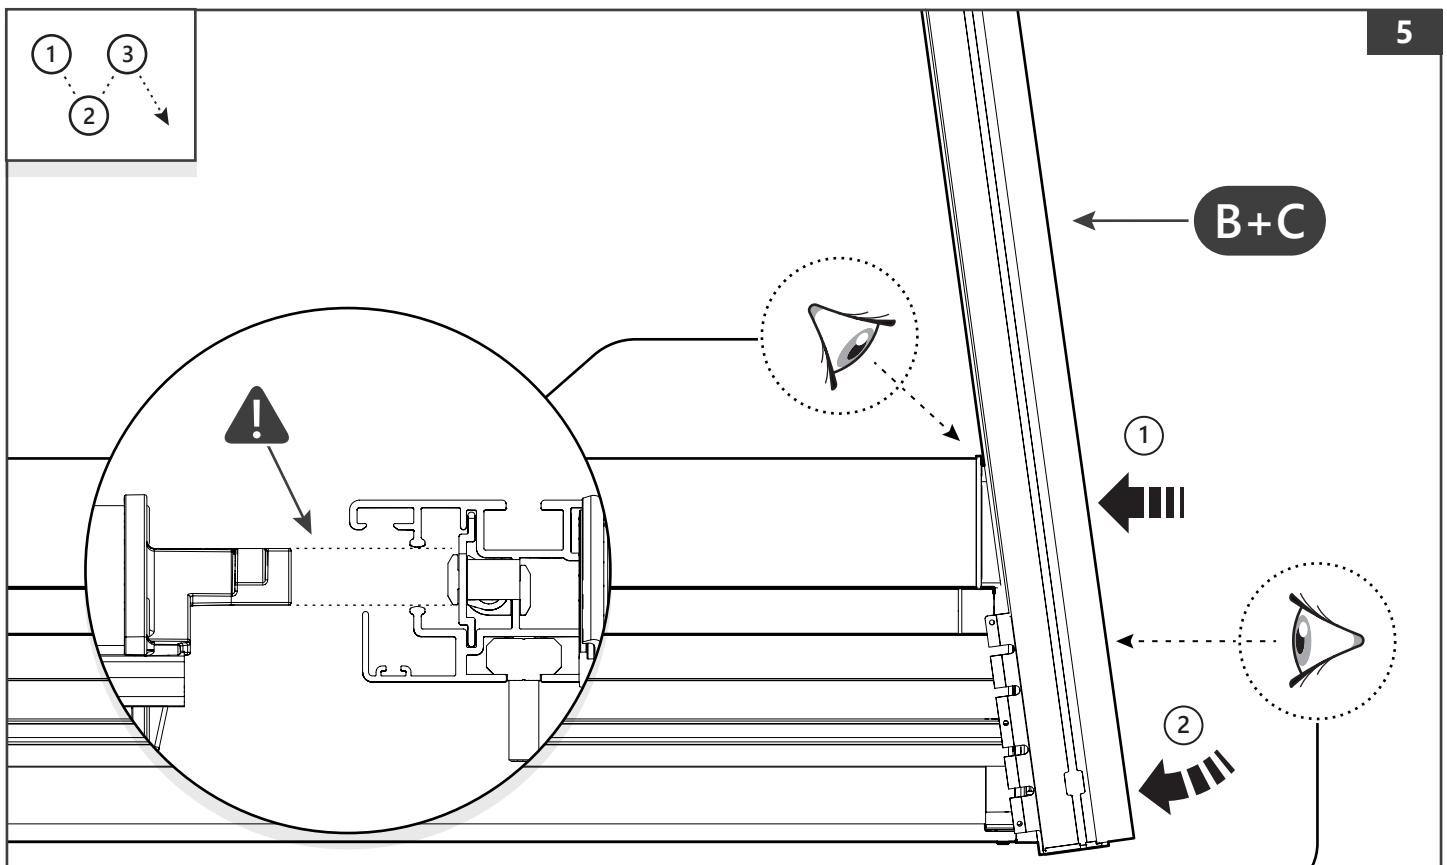
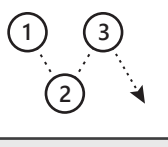


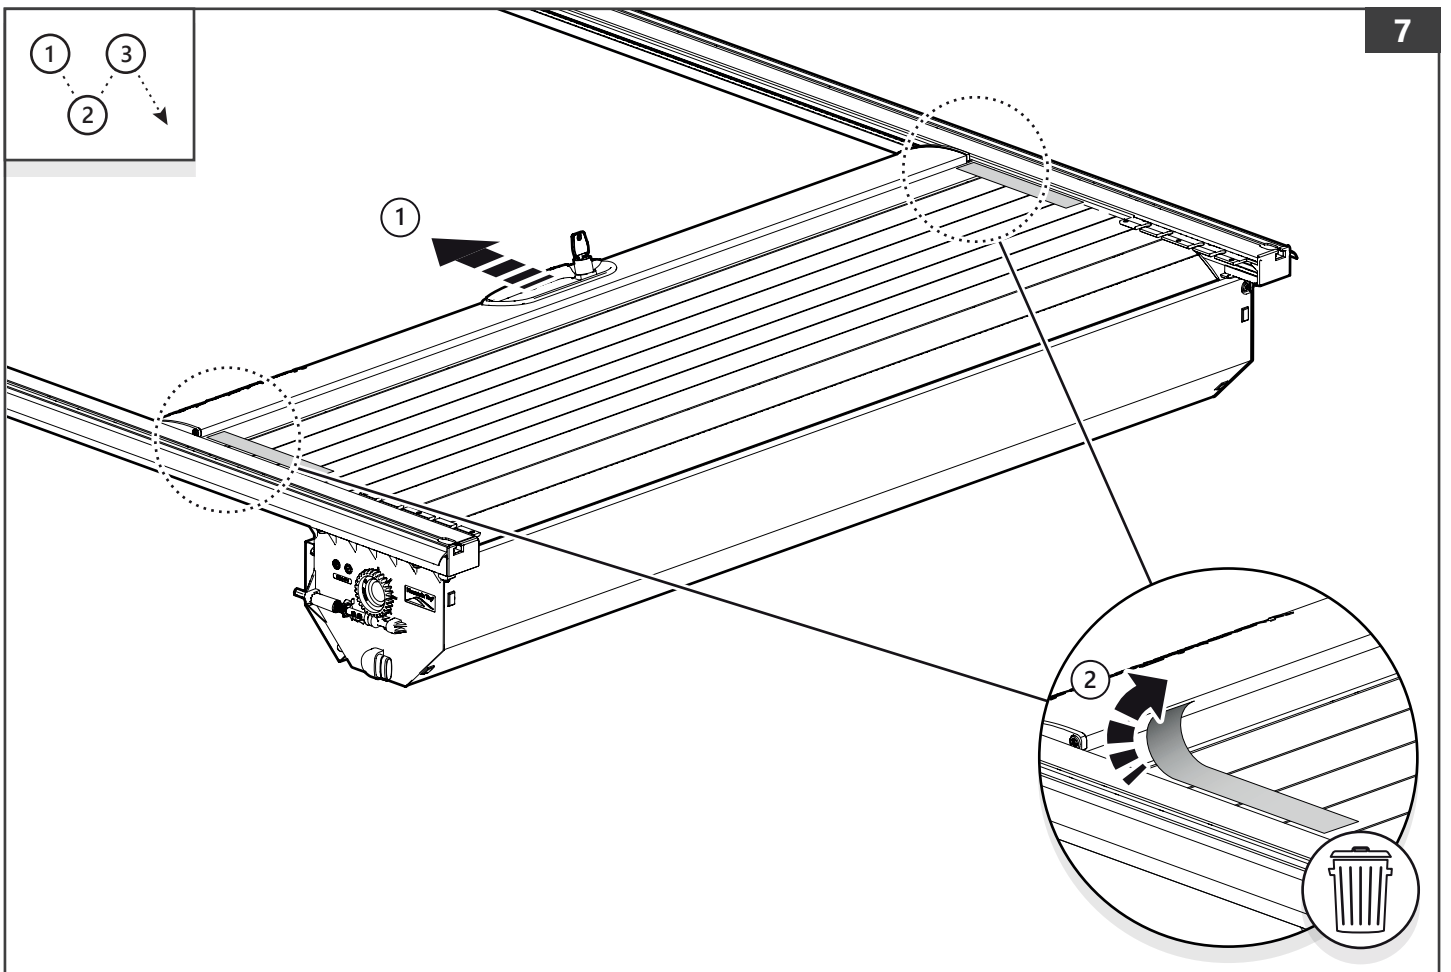
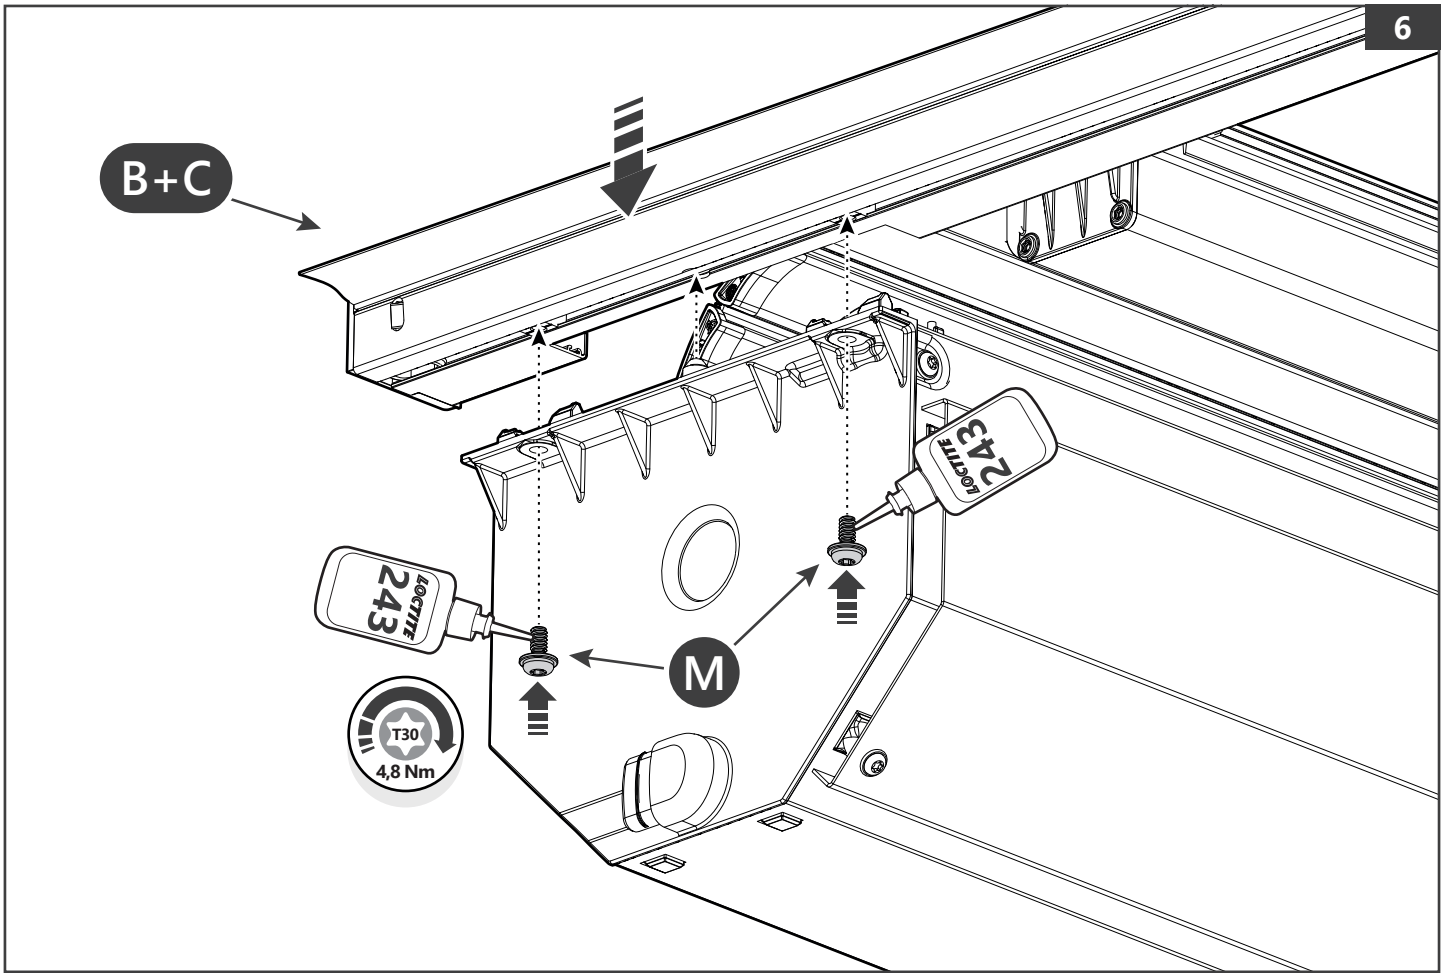


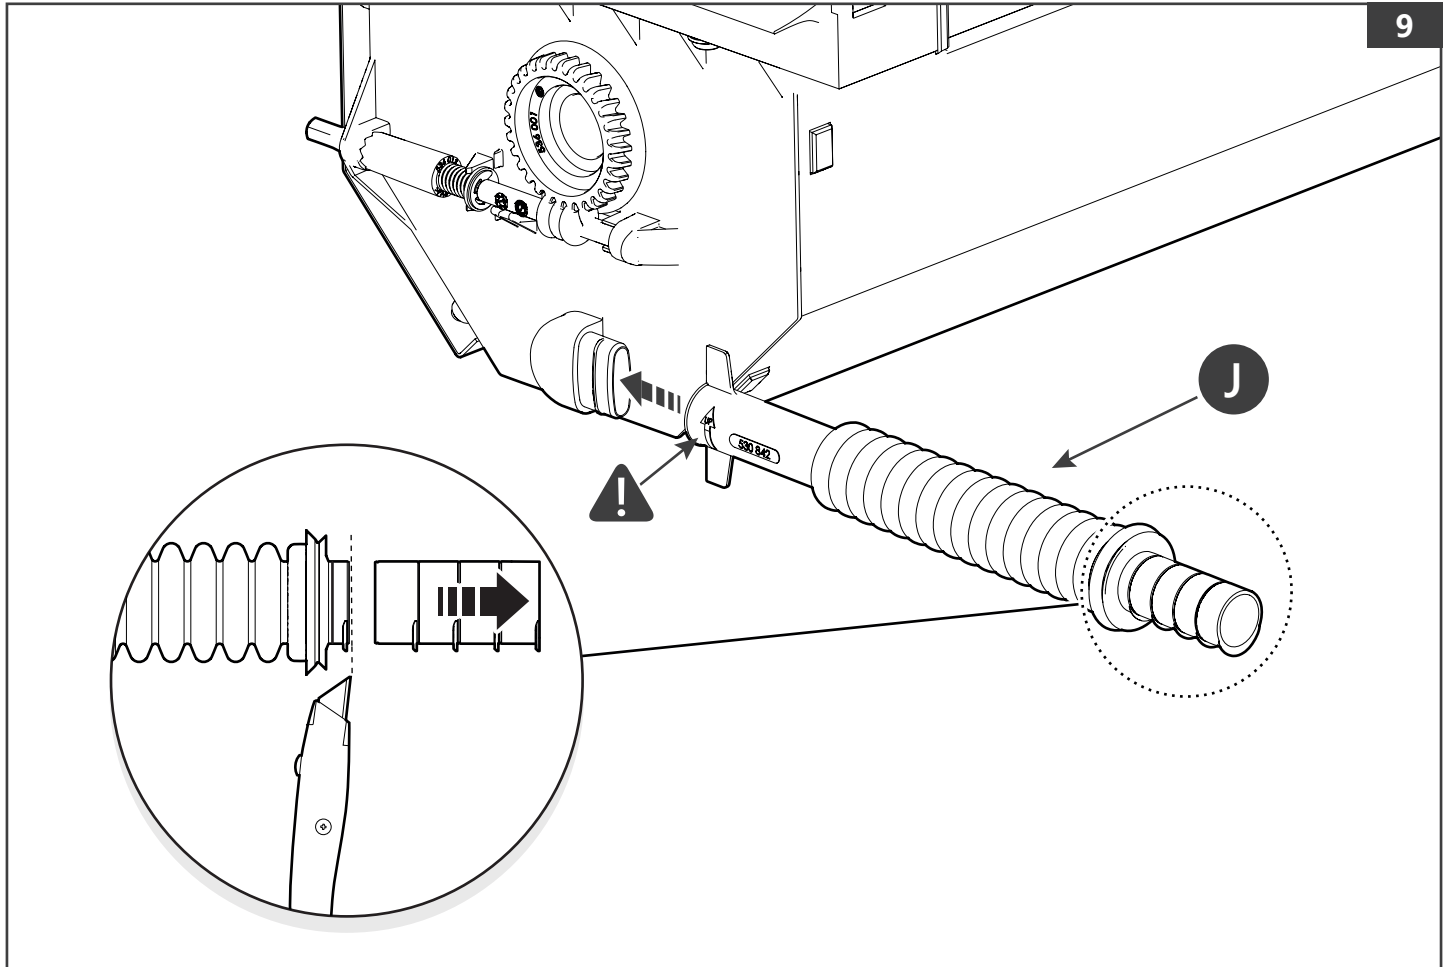
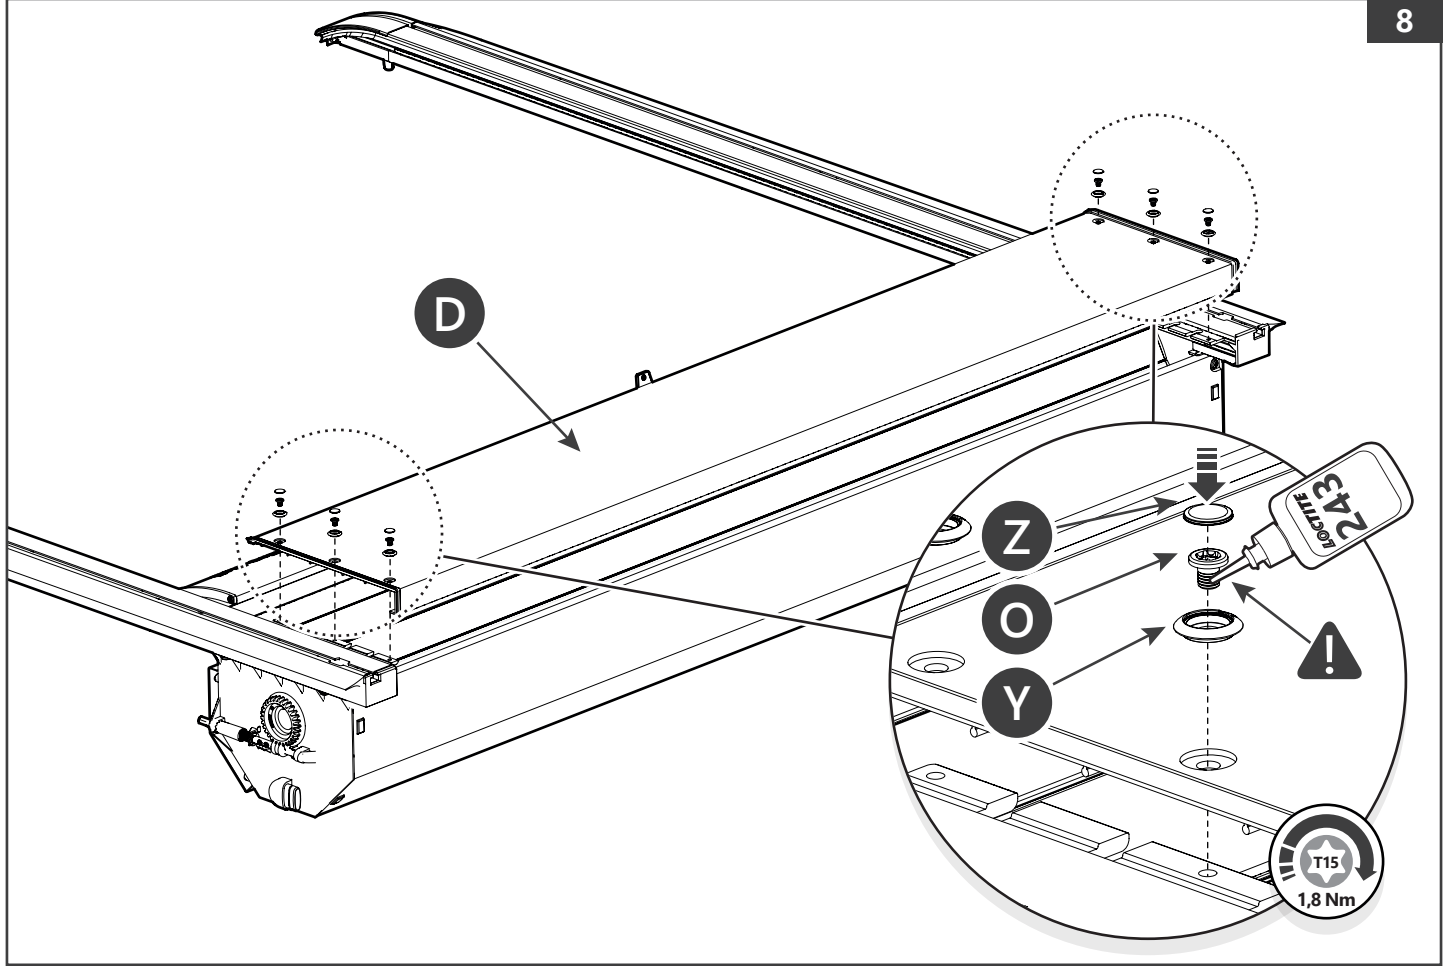


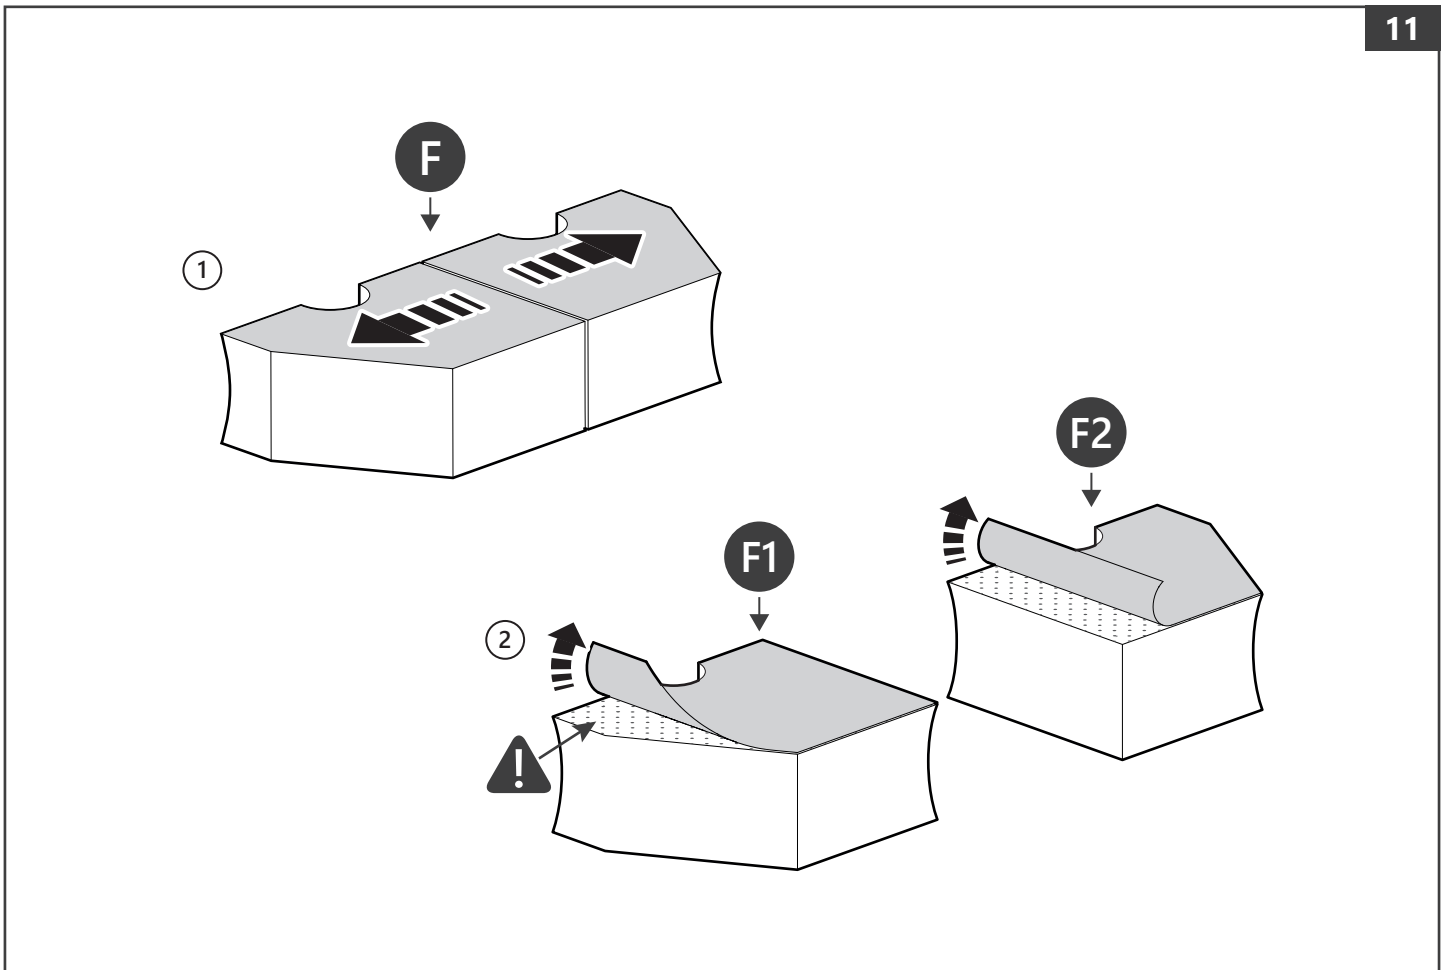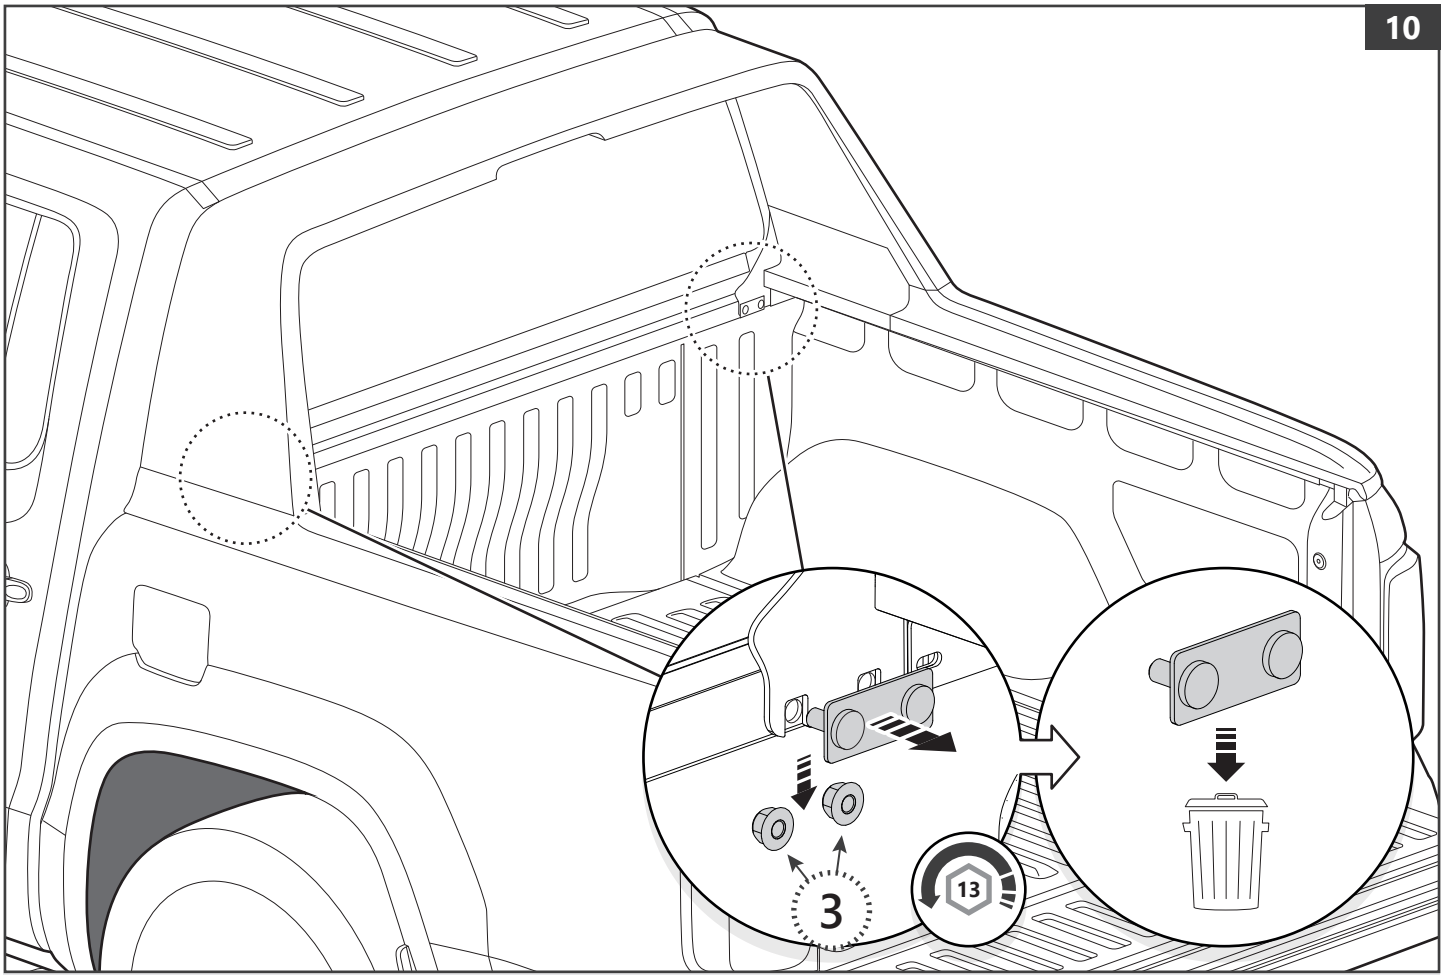


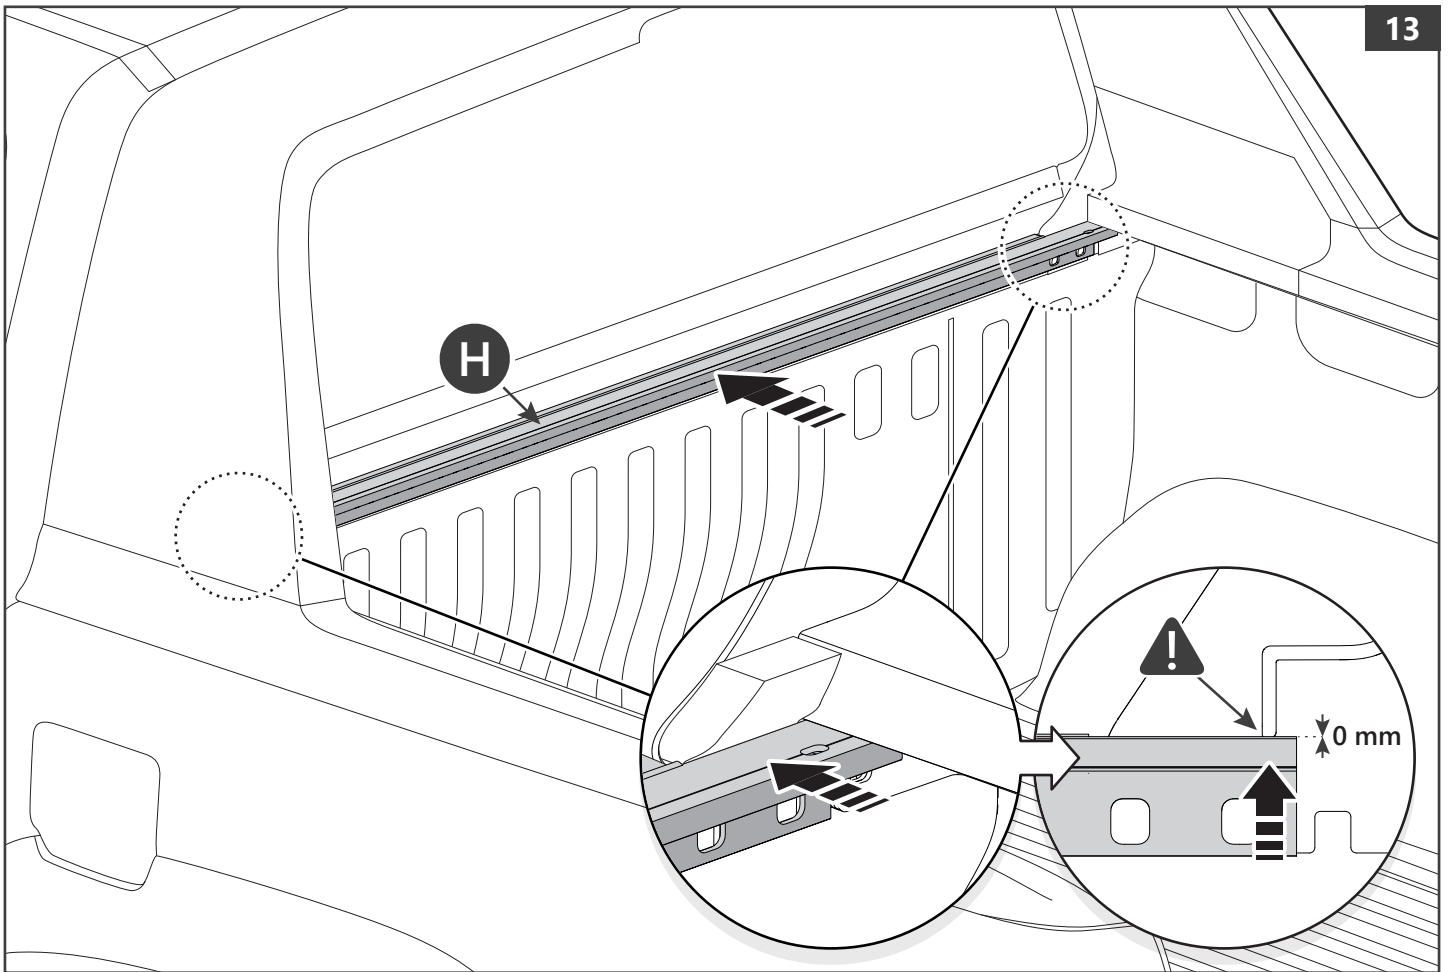
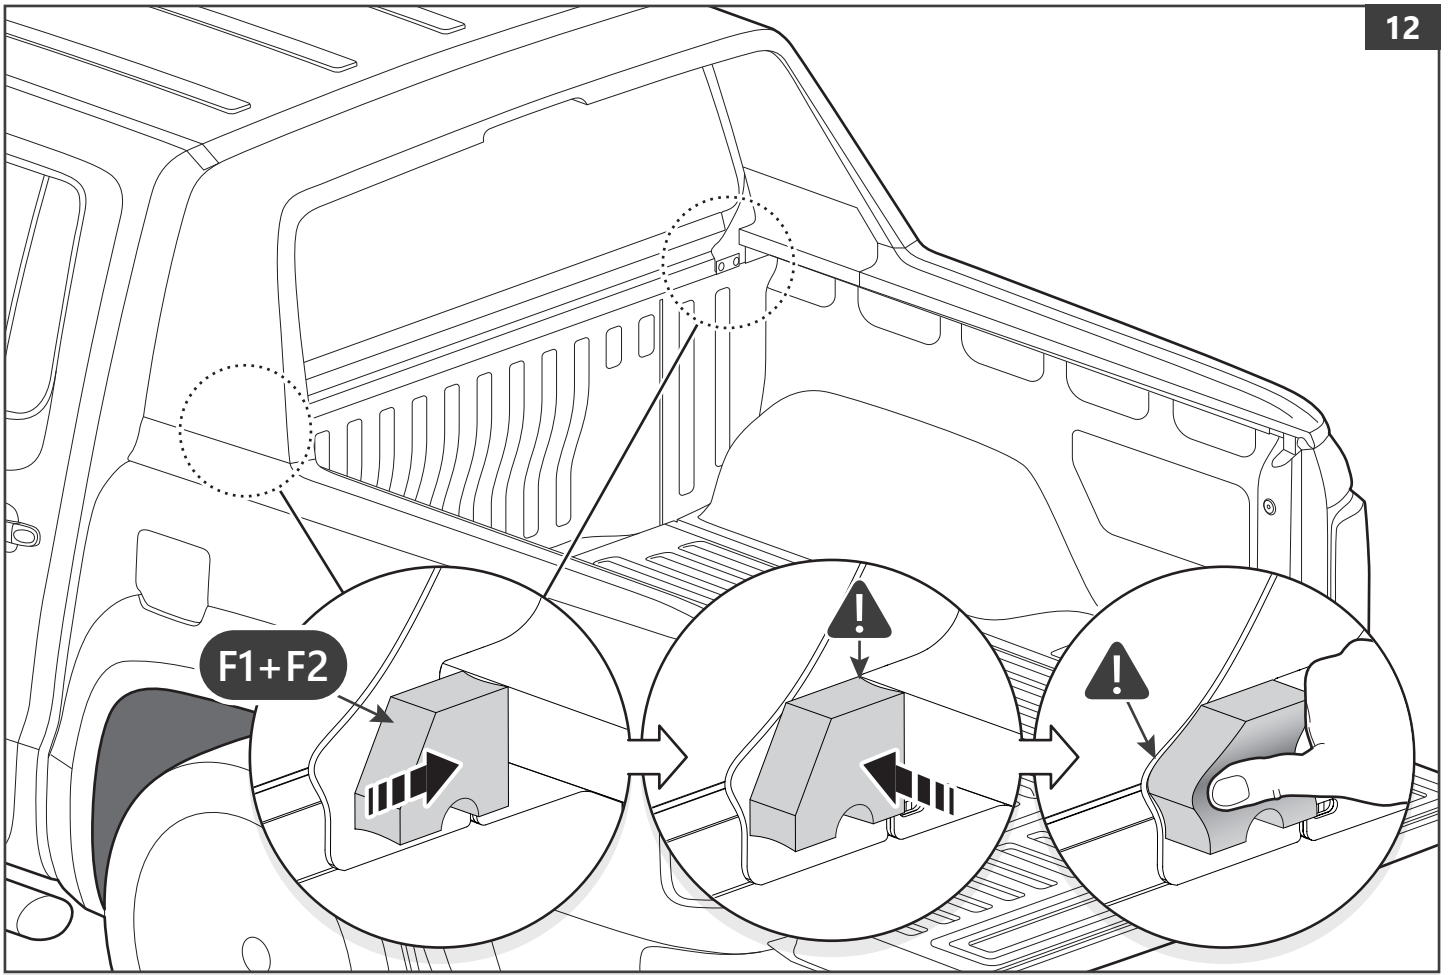


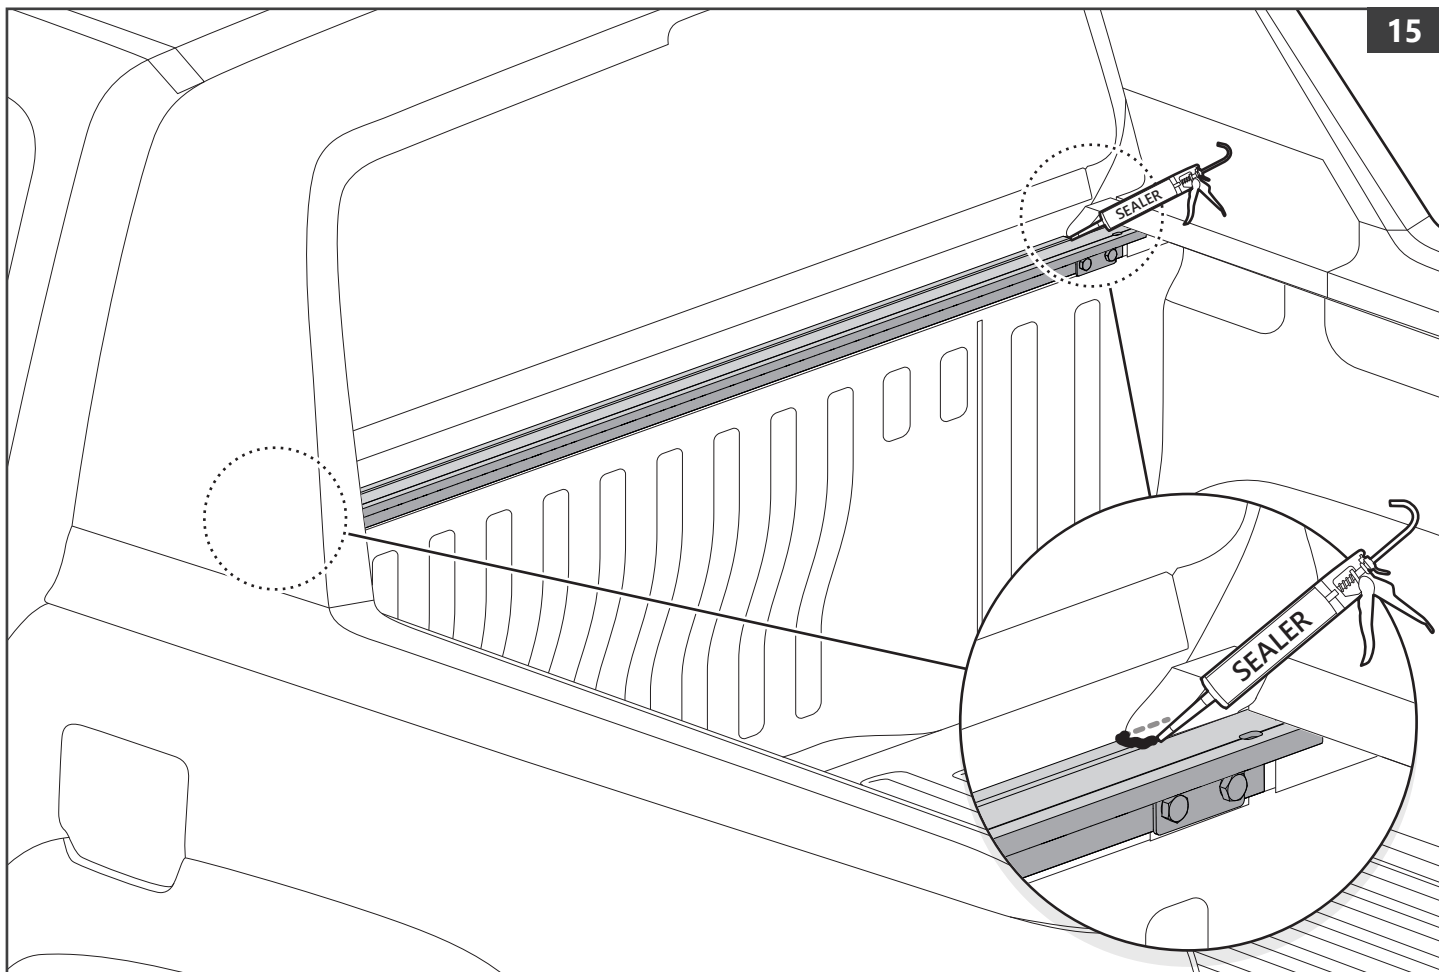
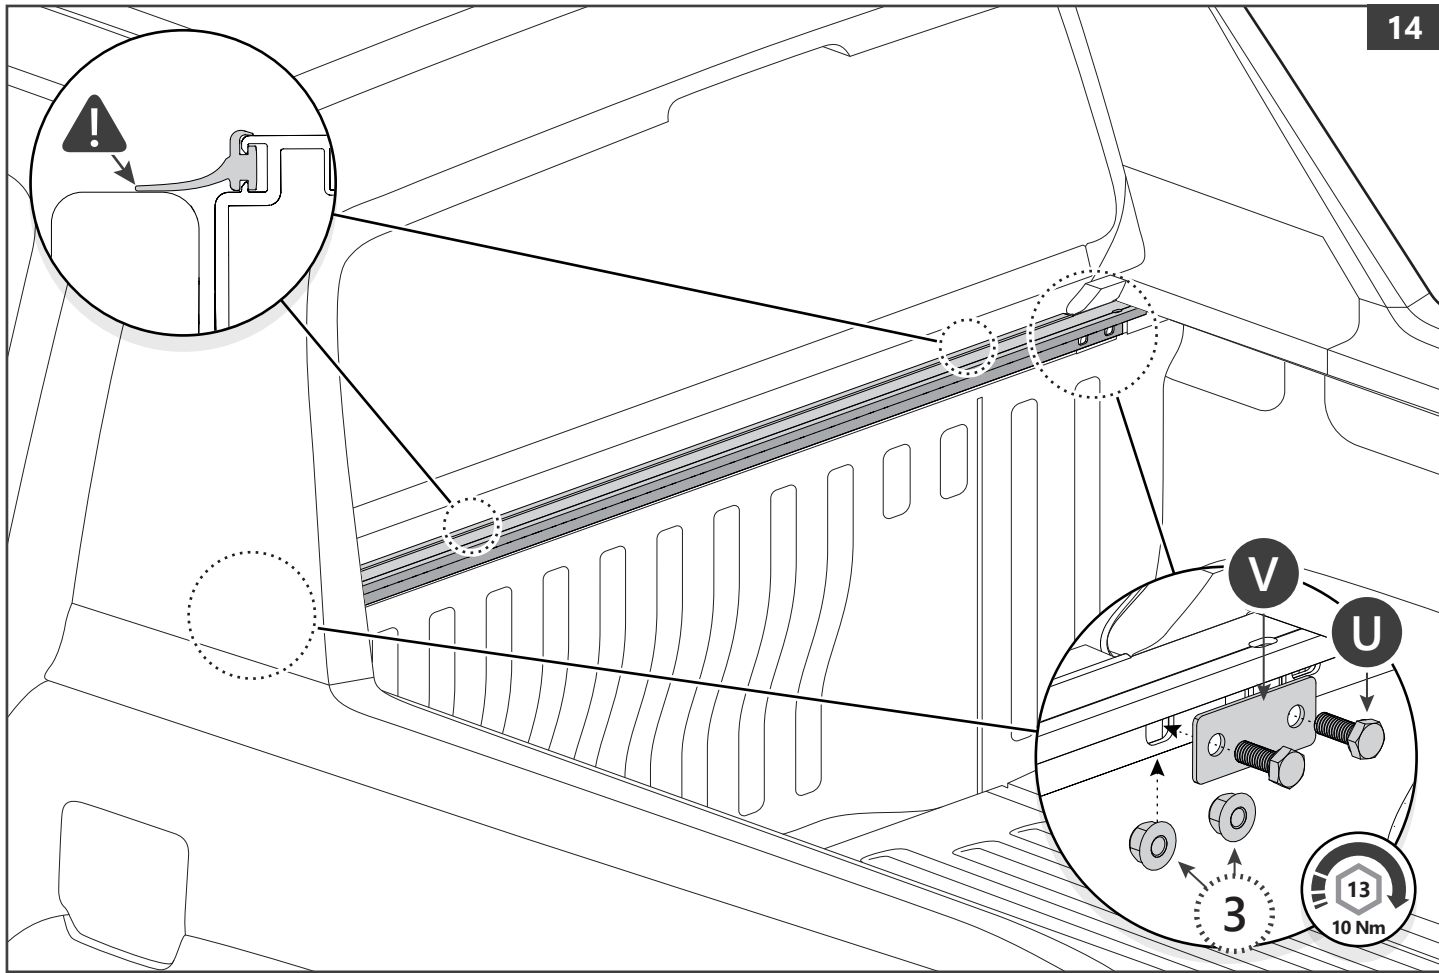


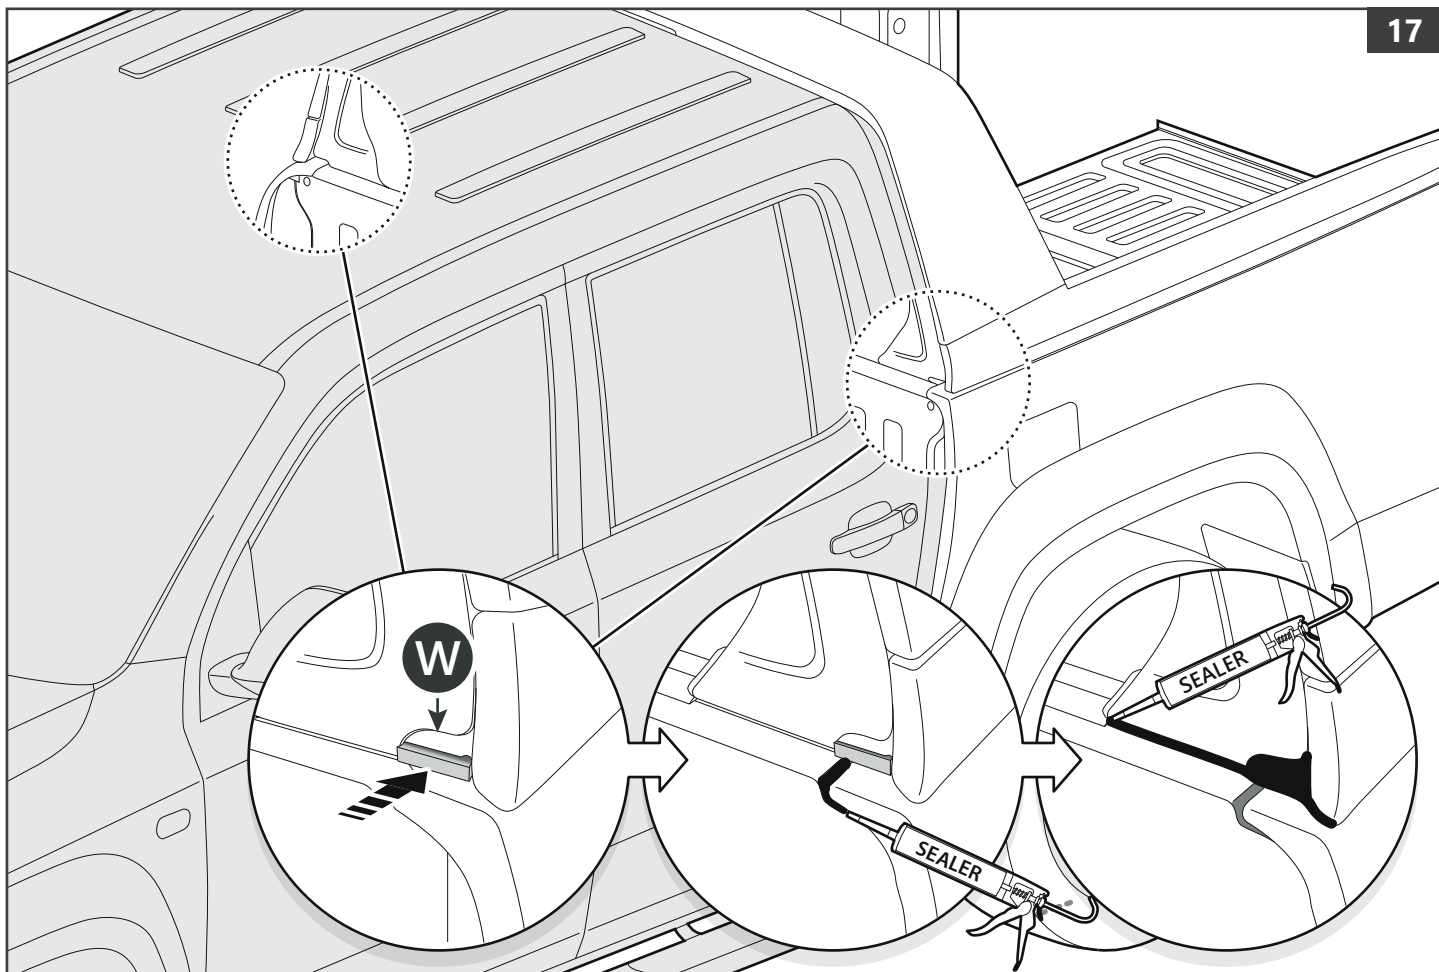
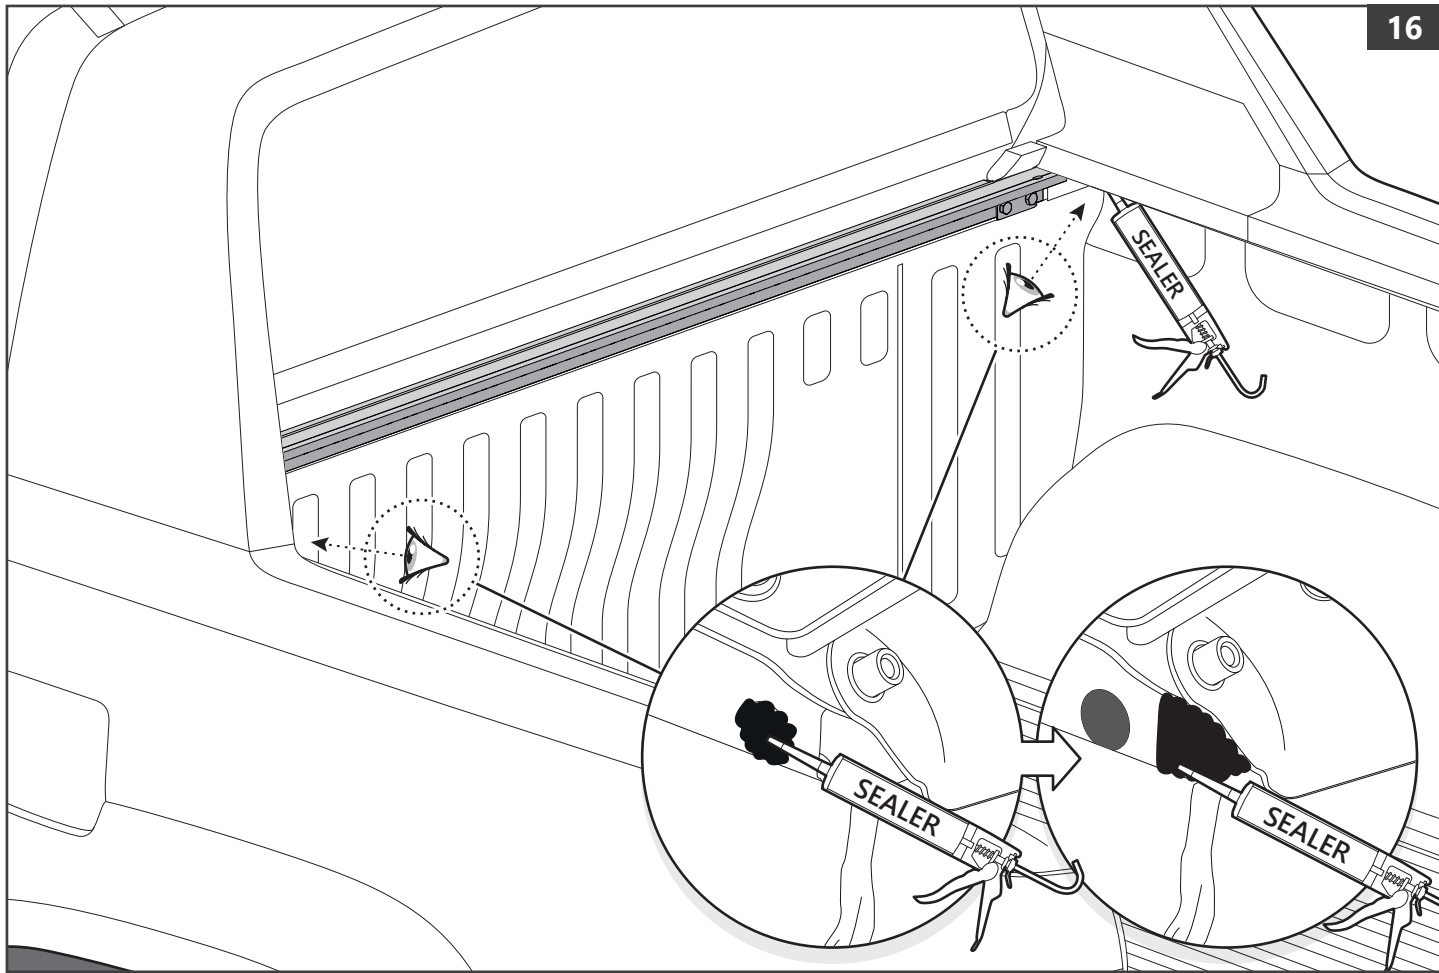


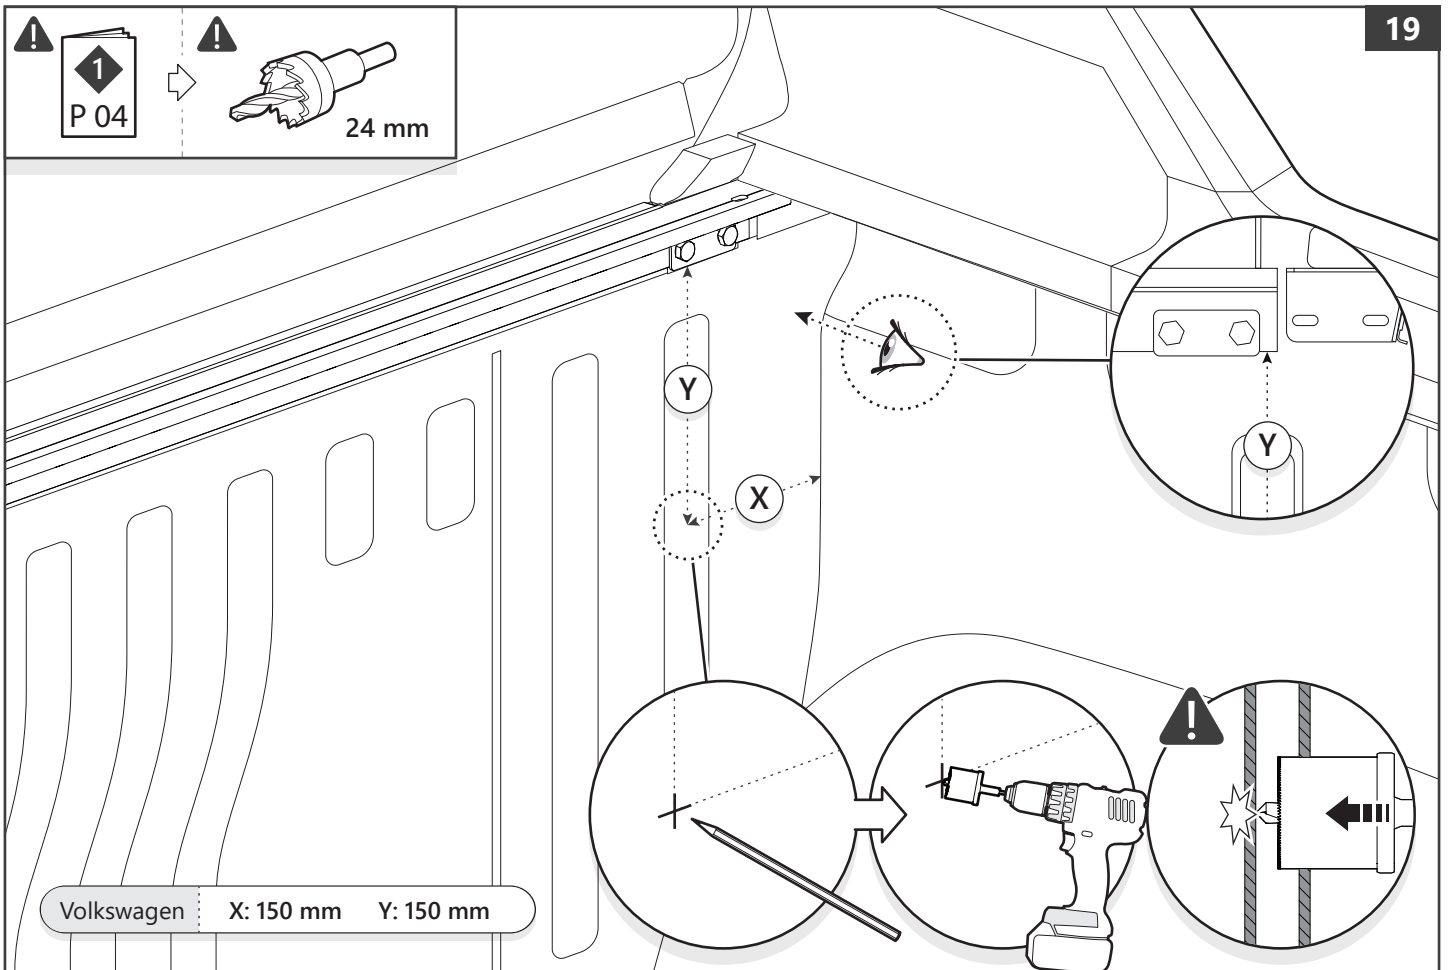
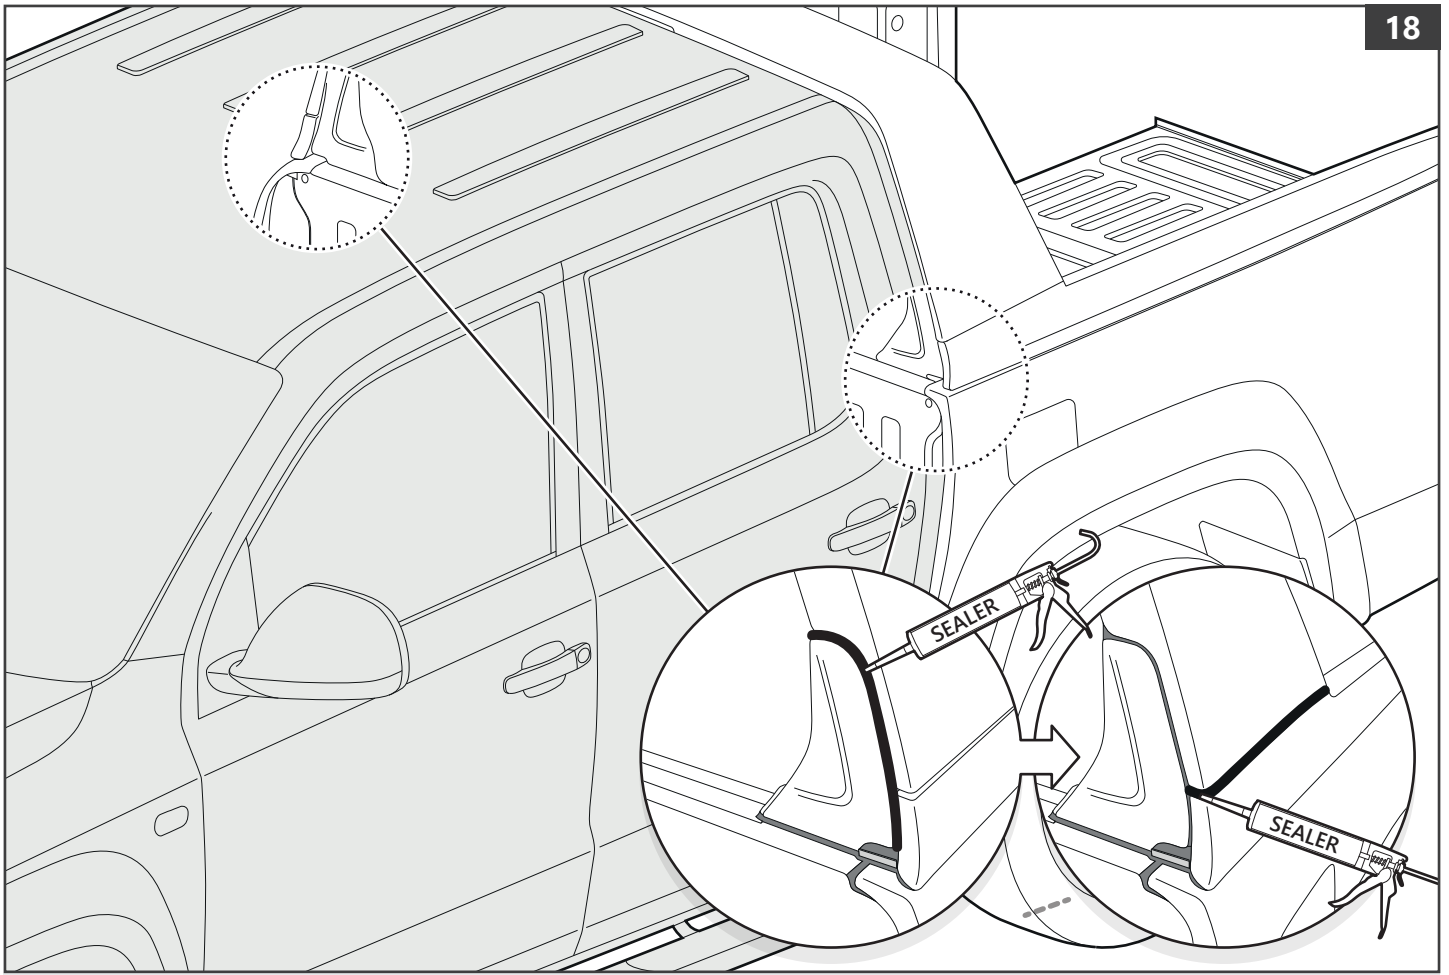




Volkswagen X: 150 mm Y: 150 mm

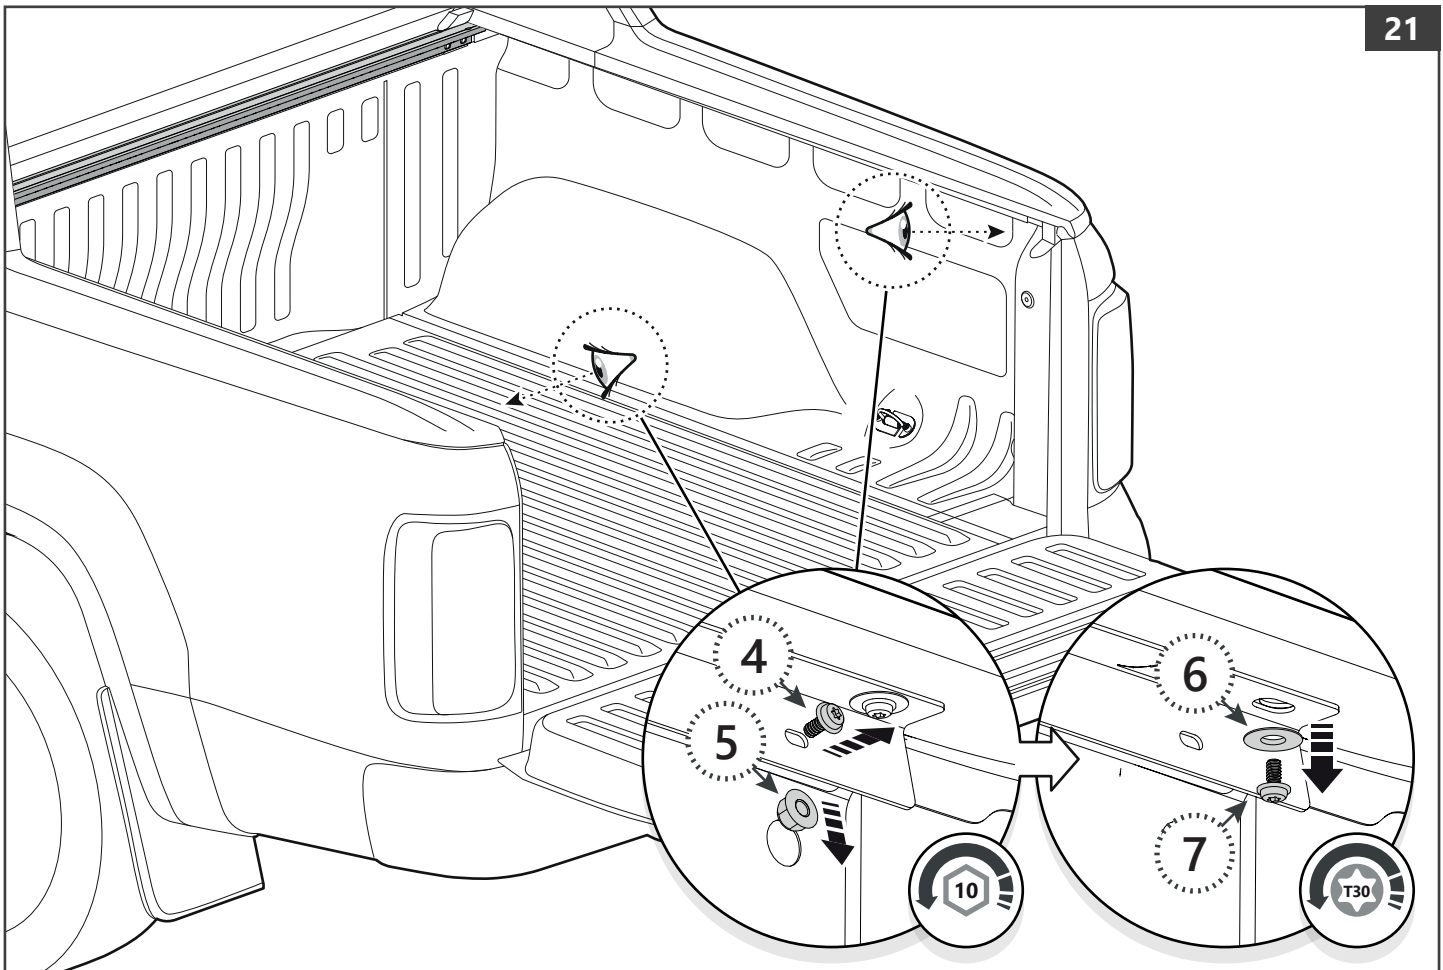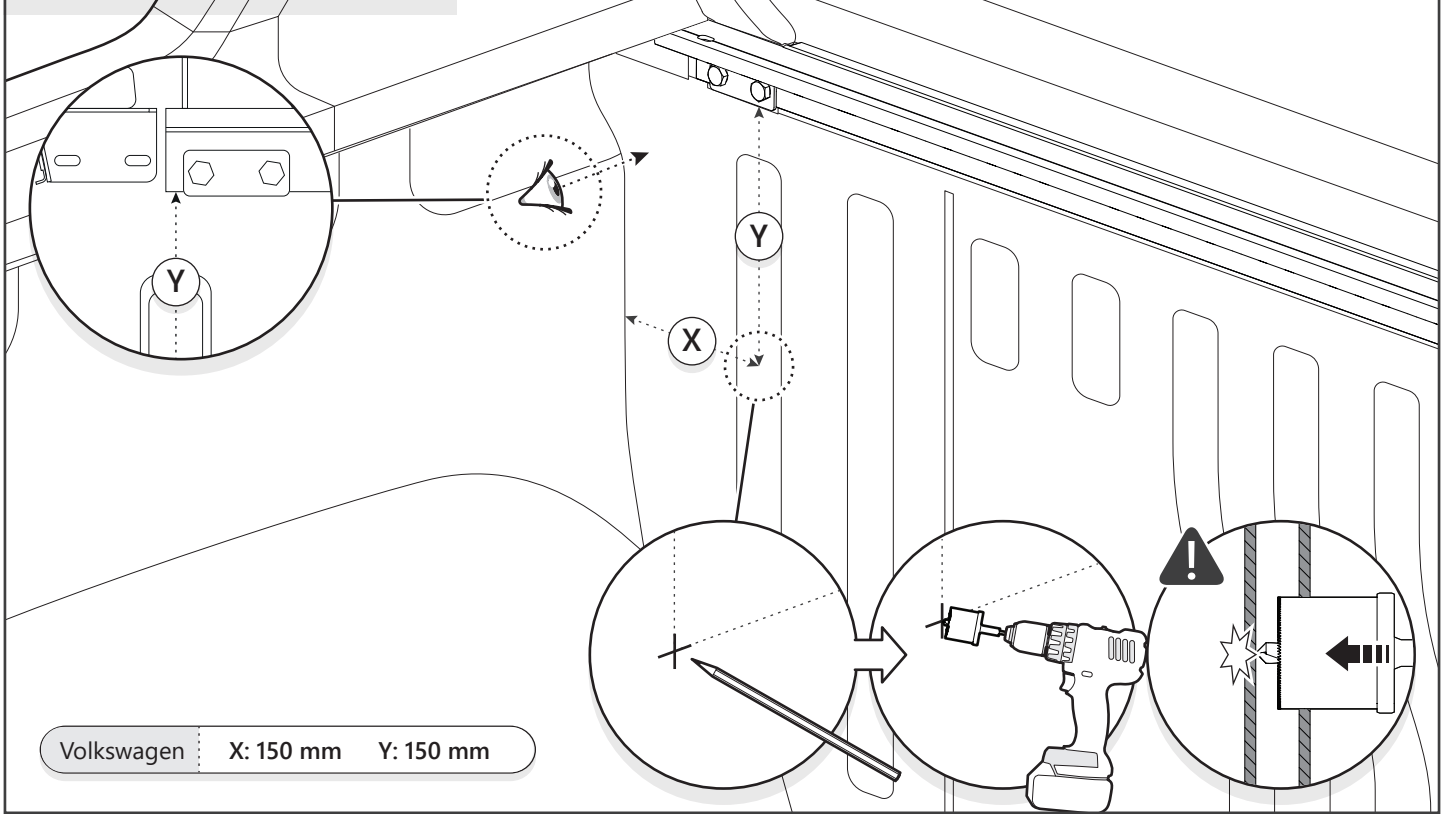
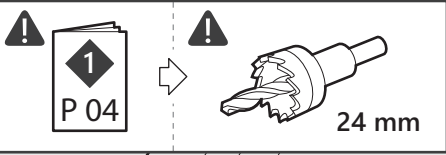


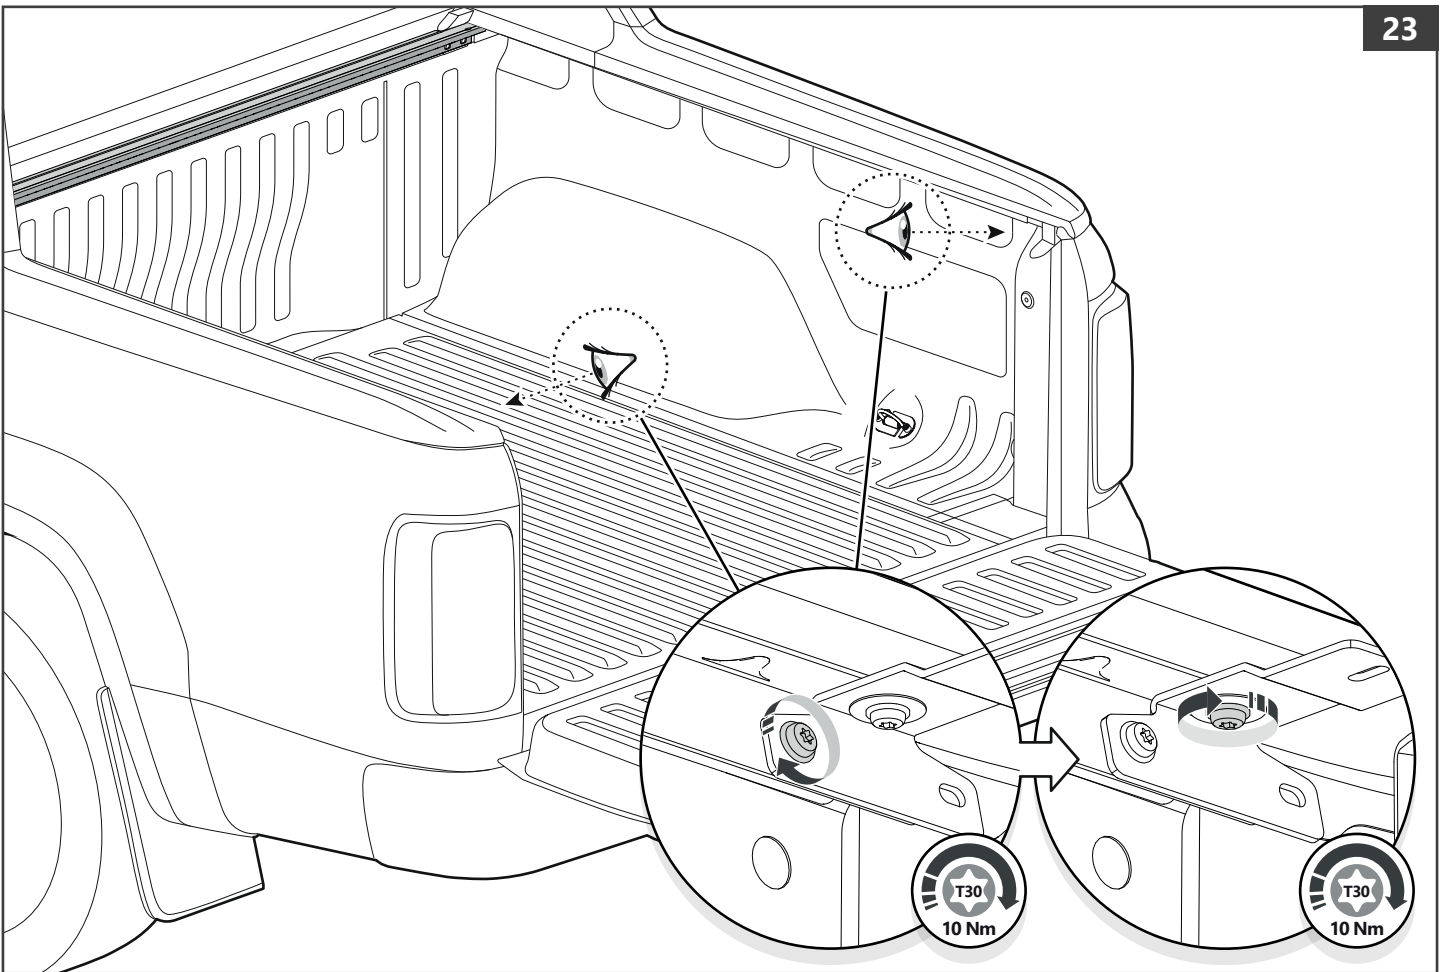
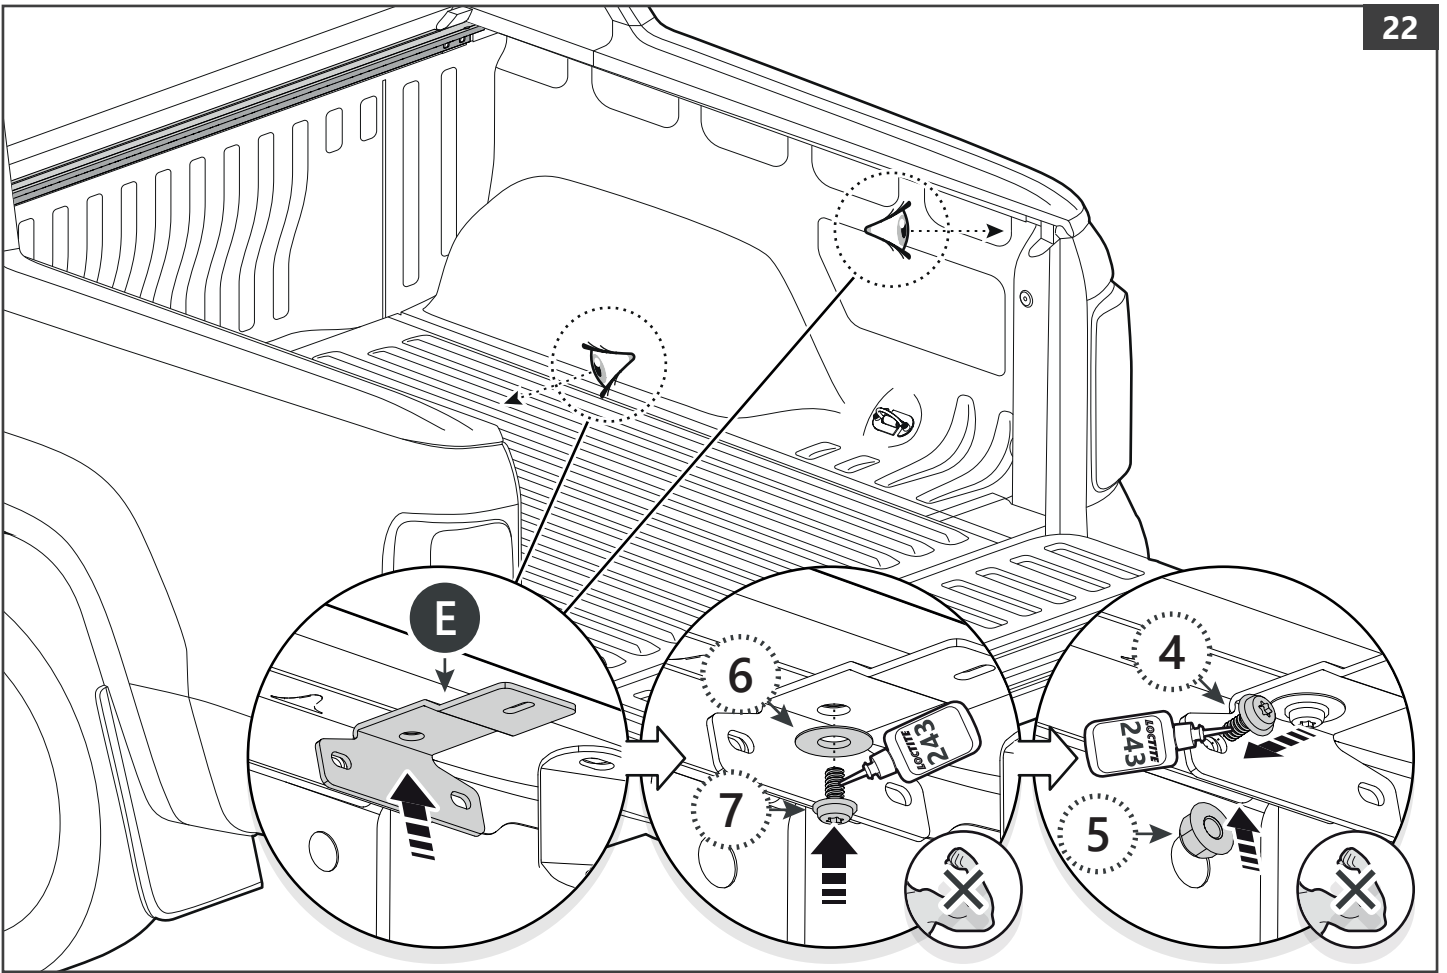


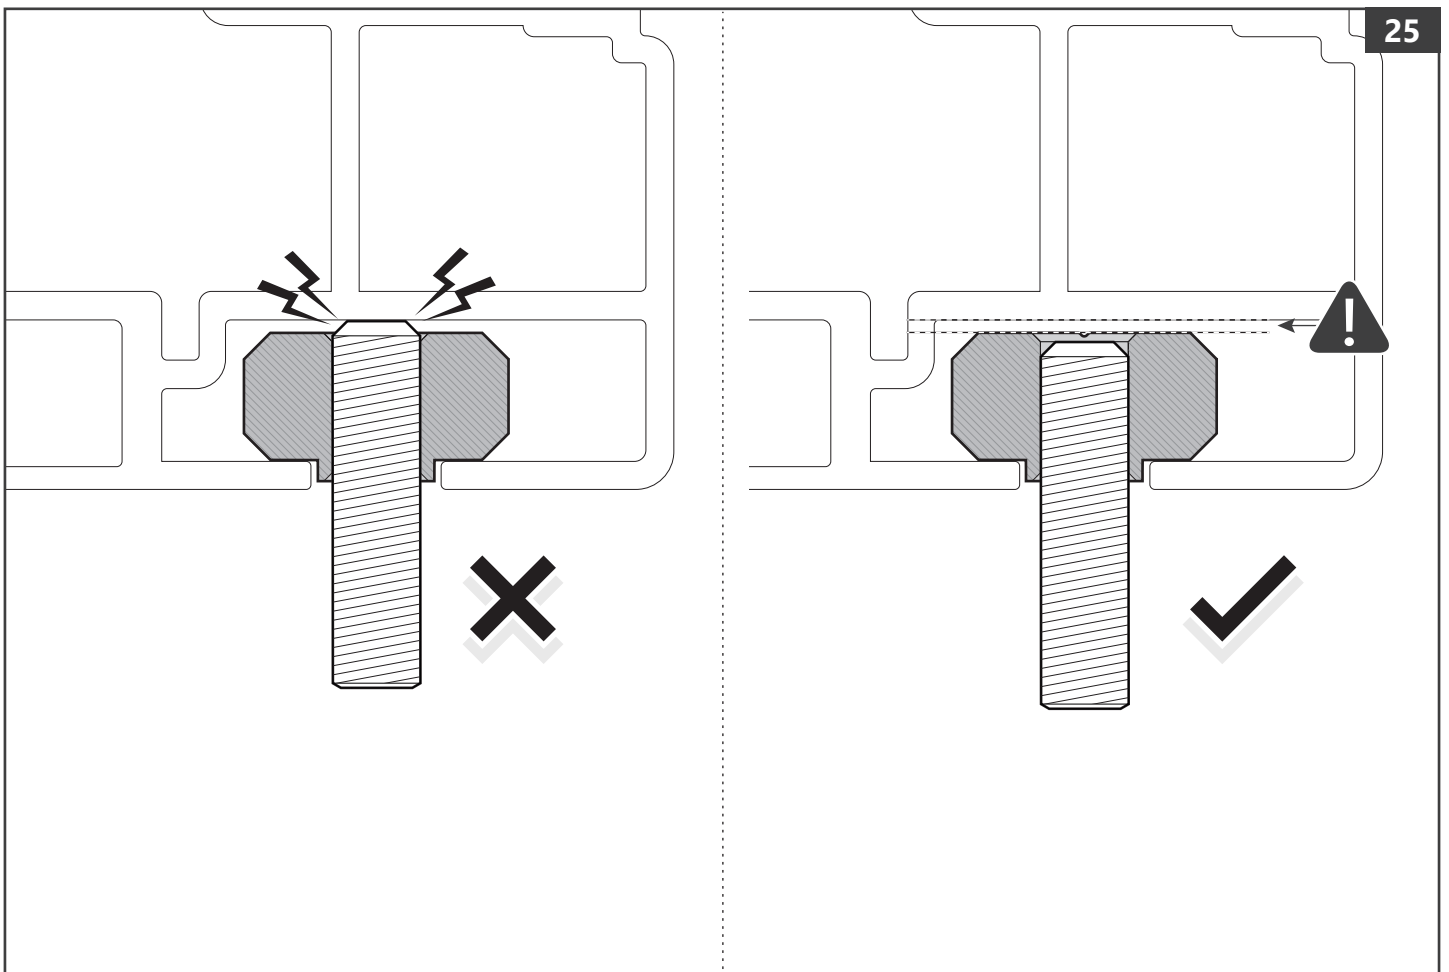
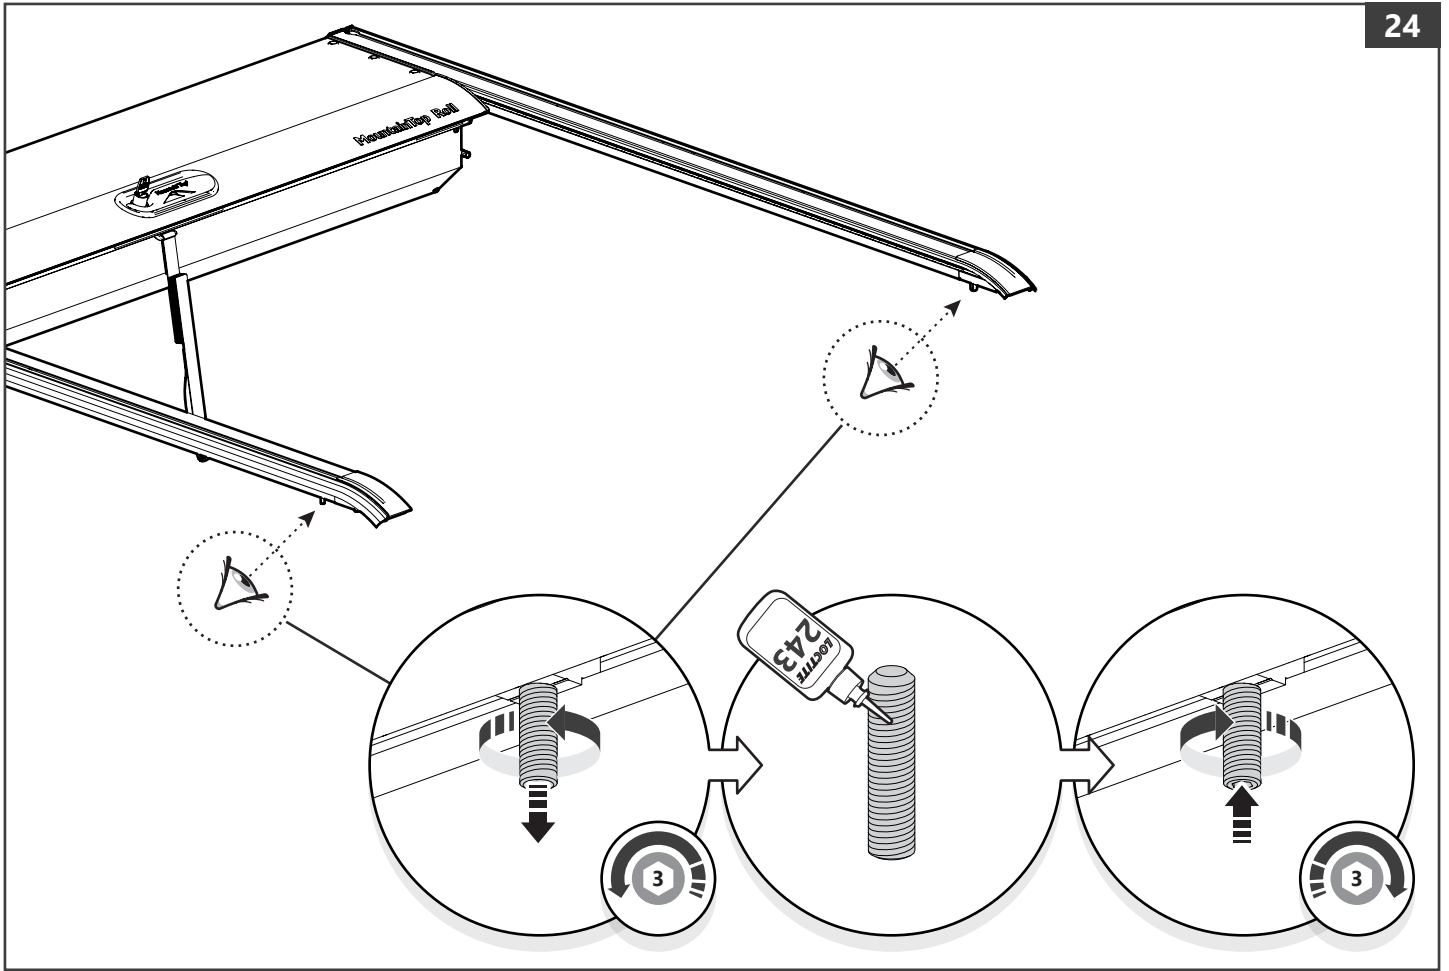


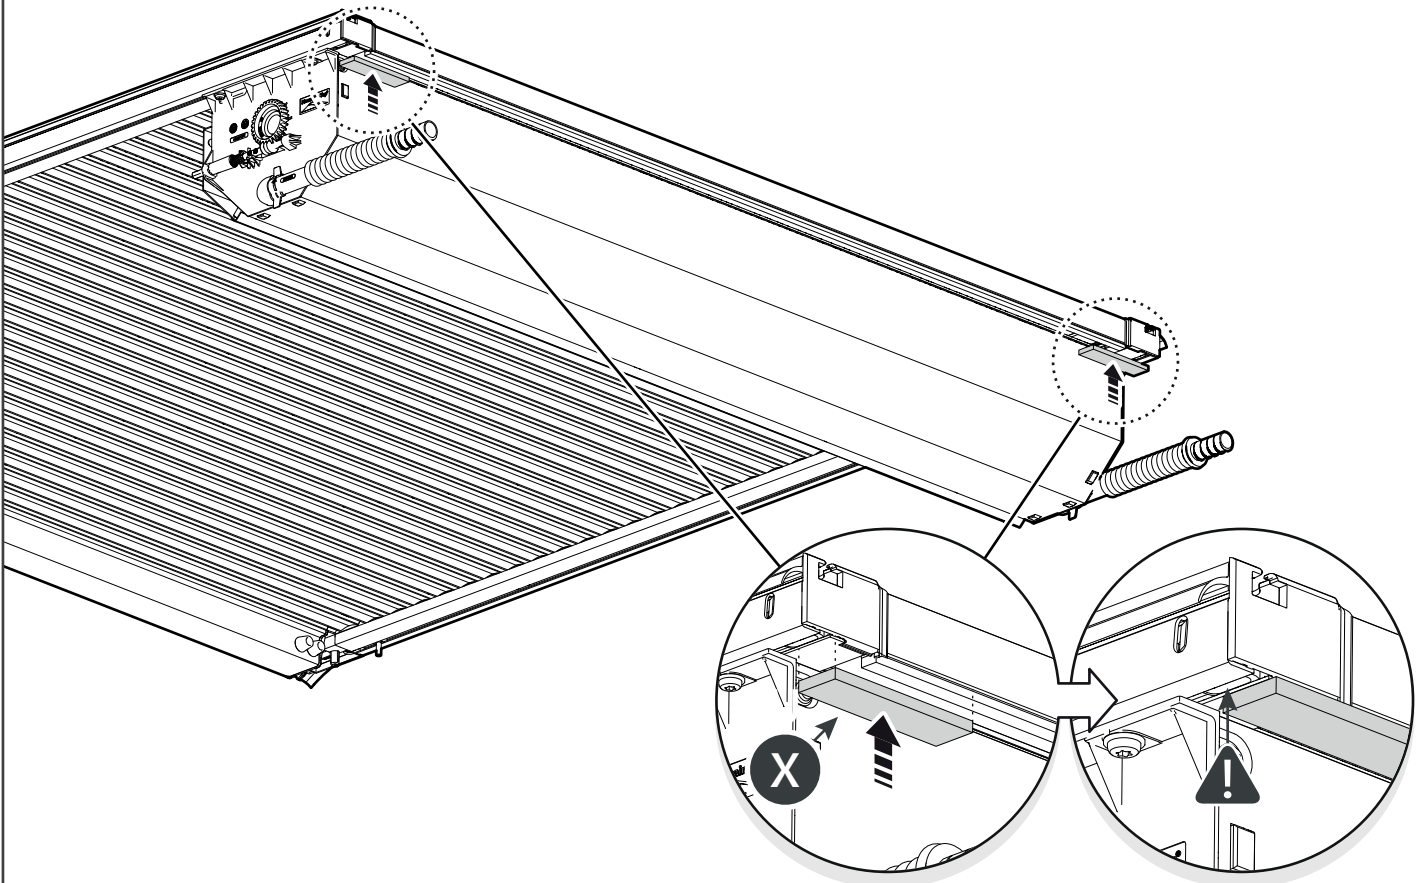
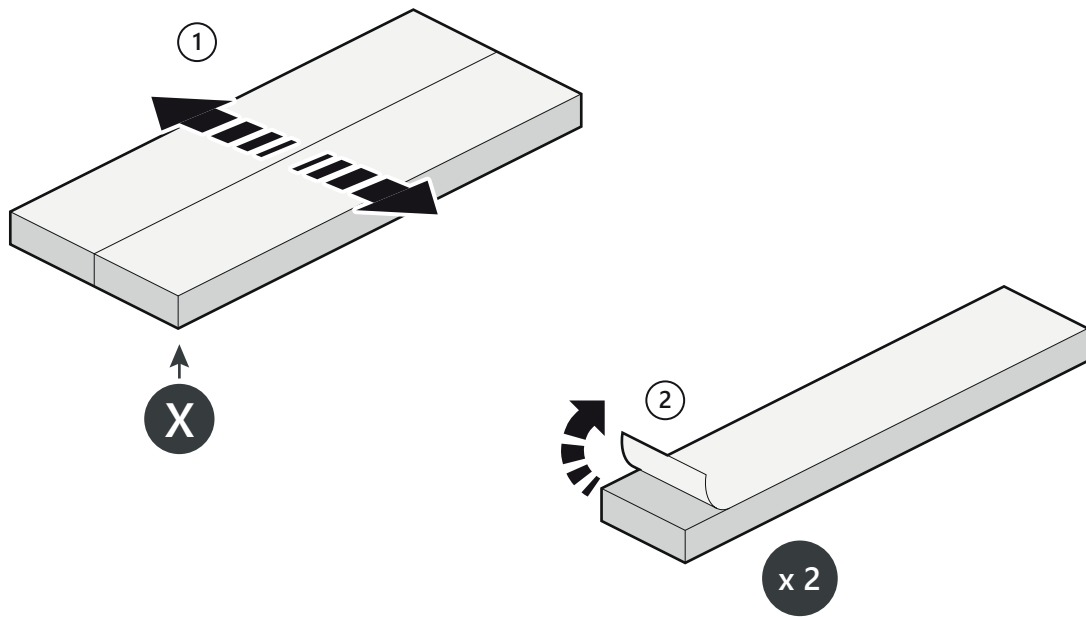


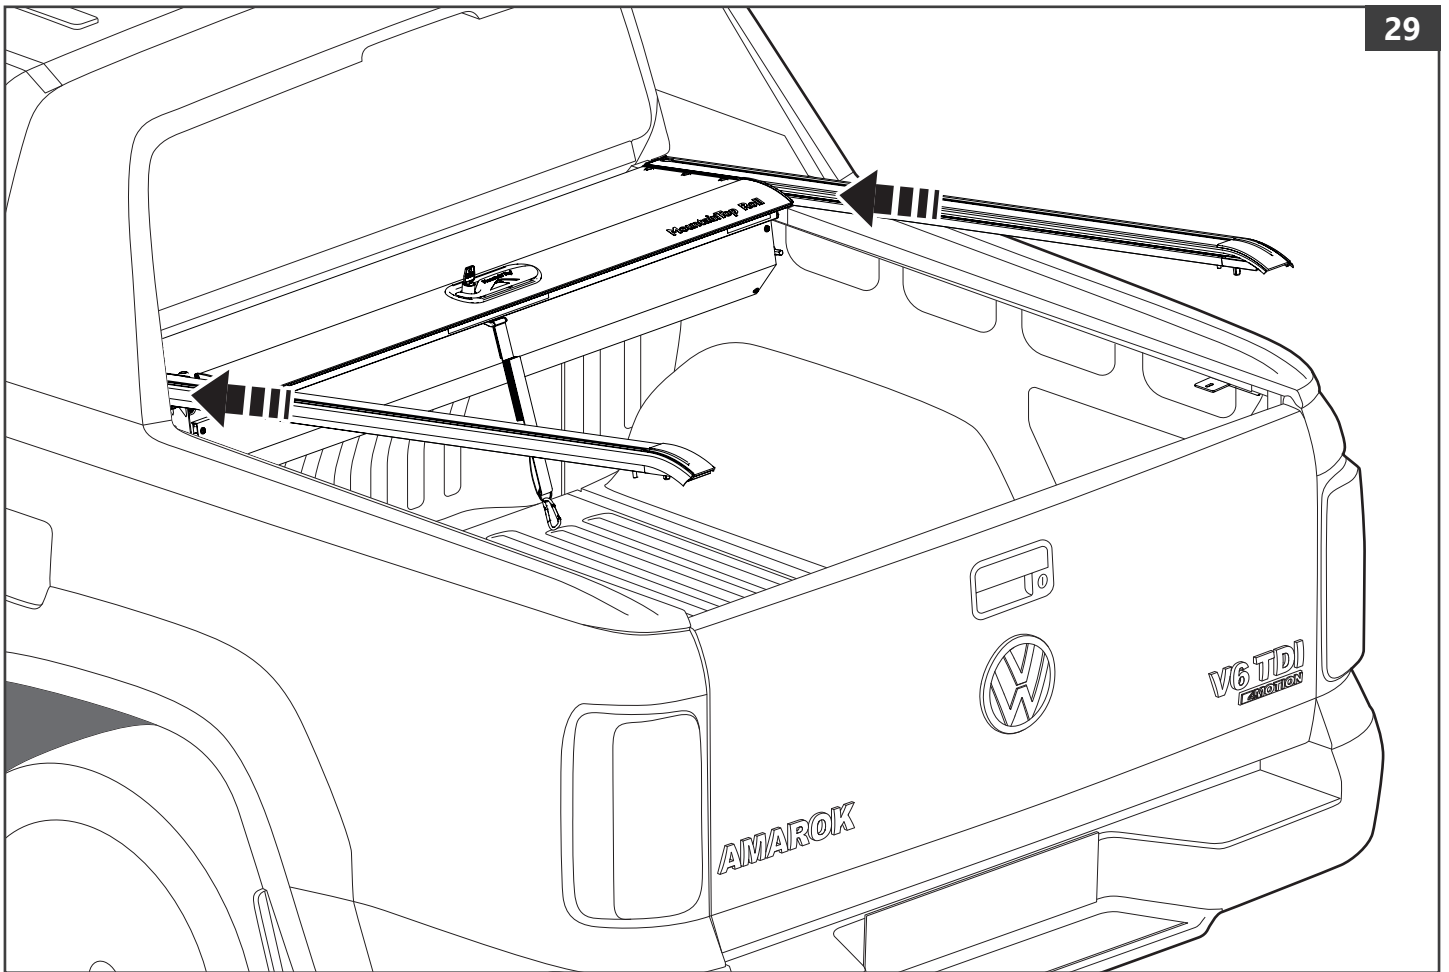
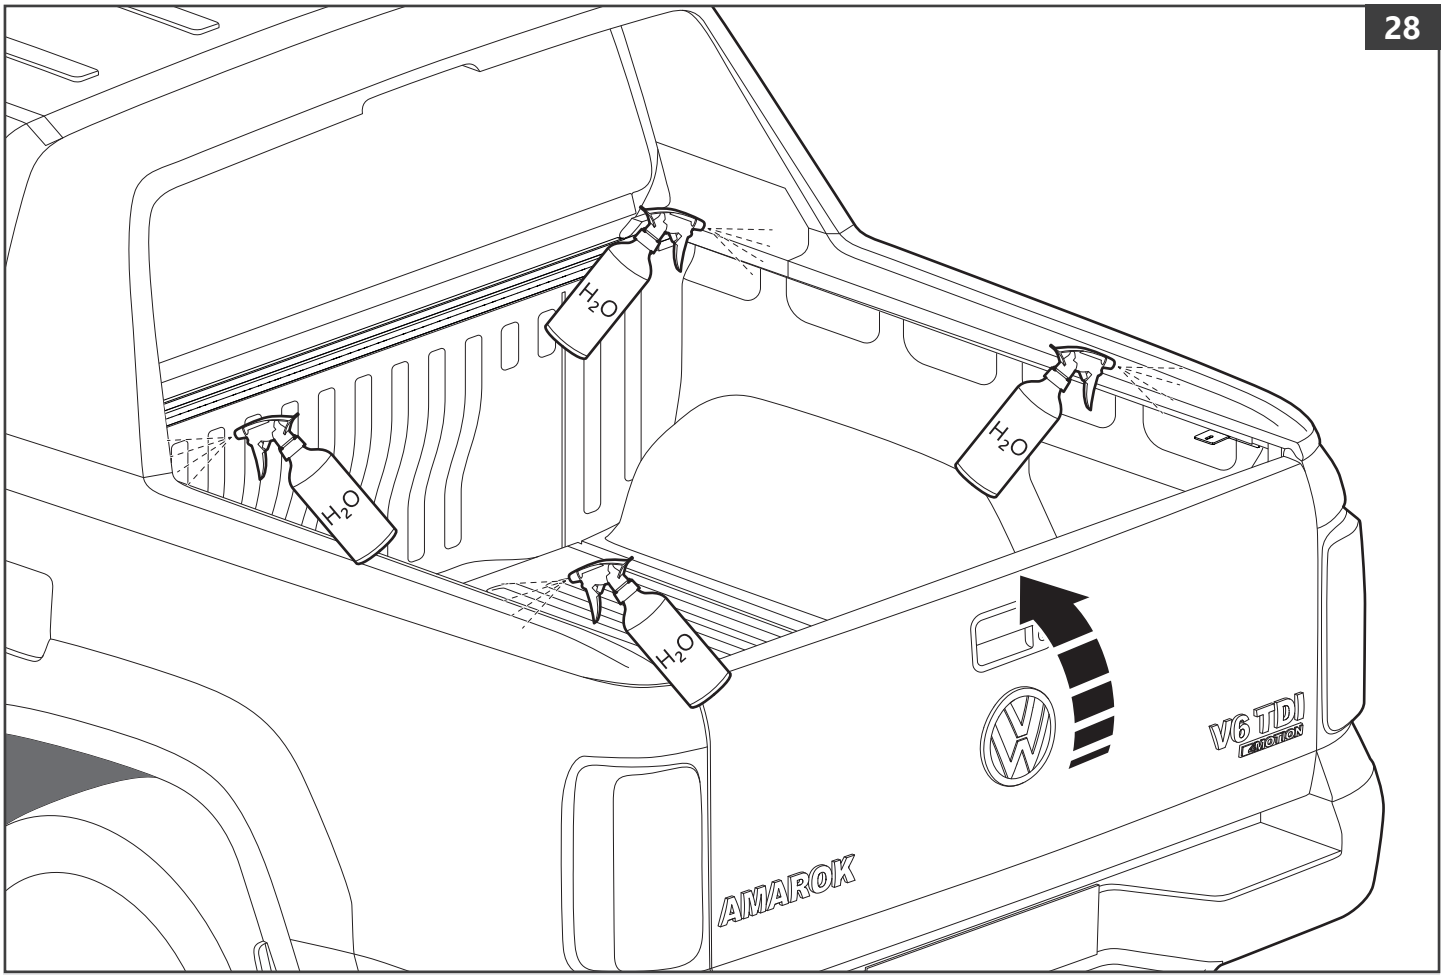


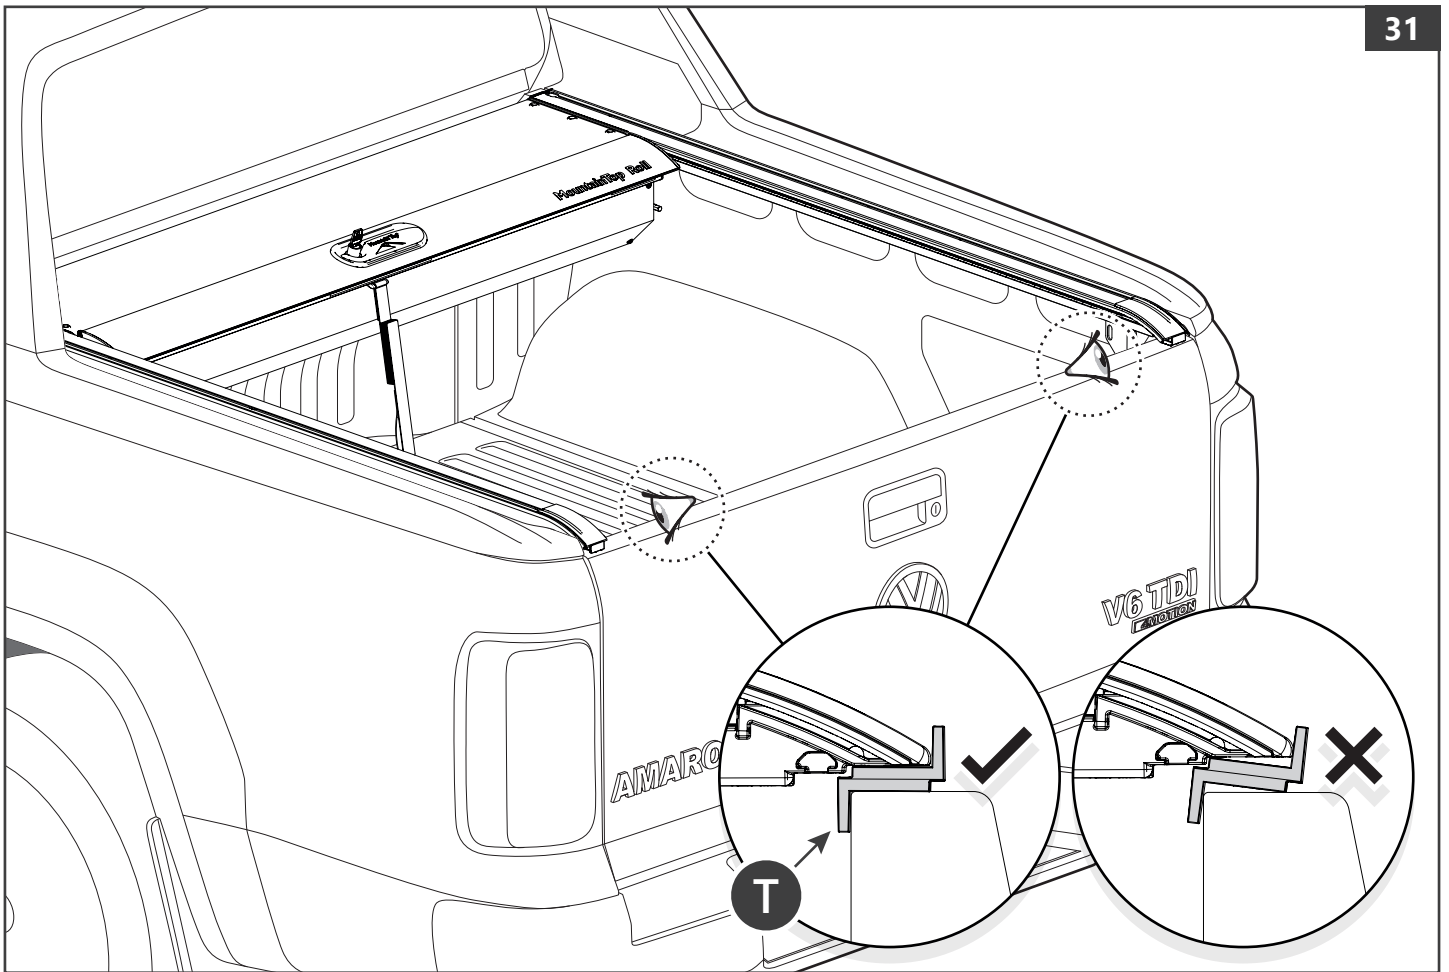
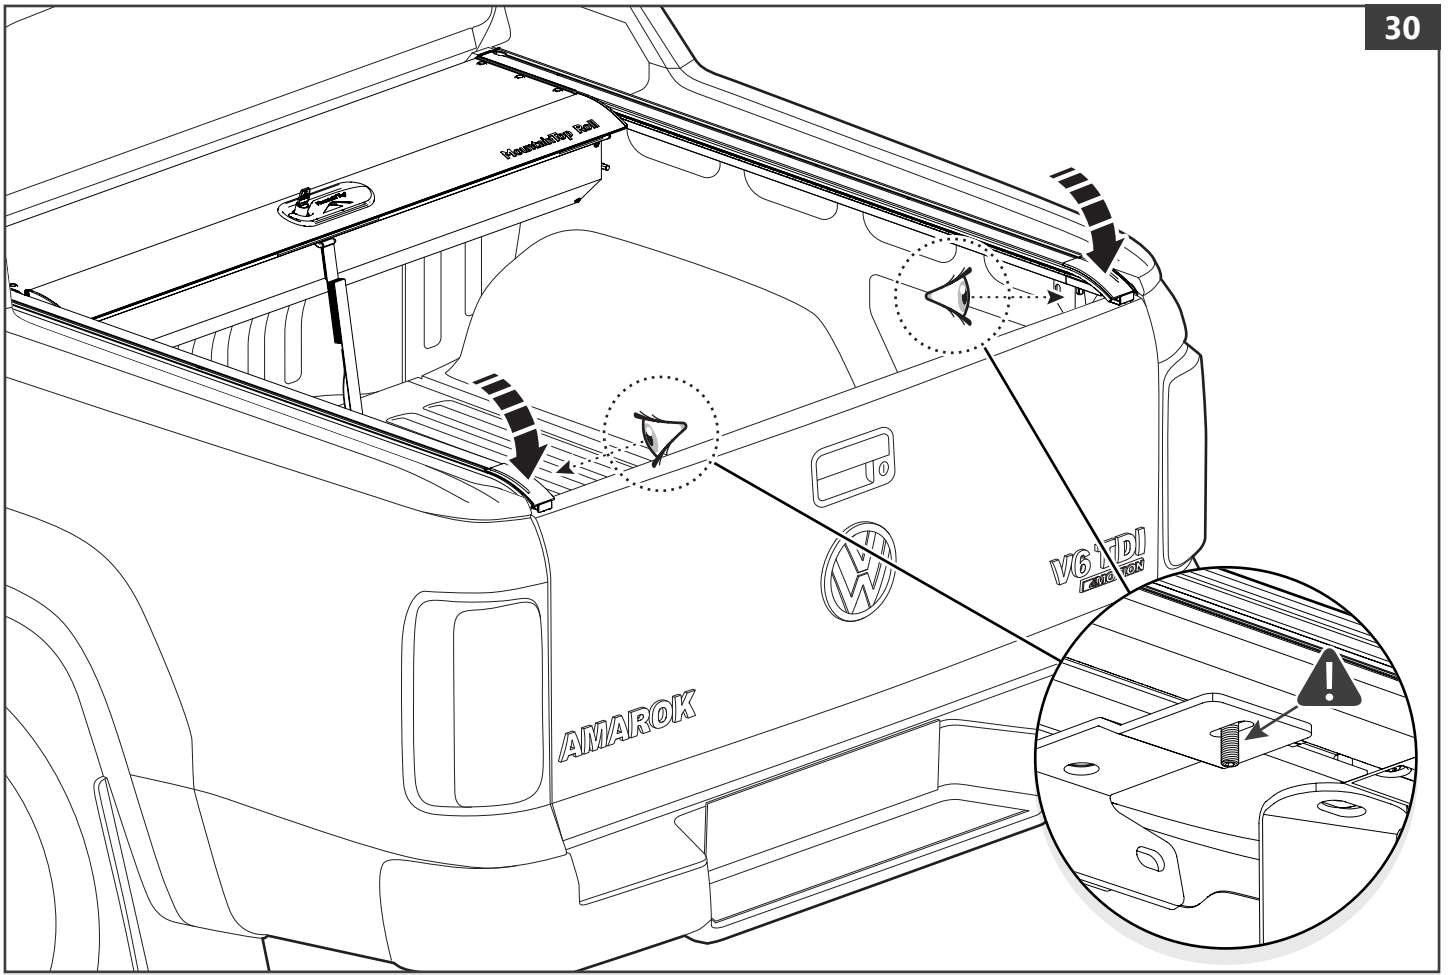


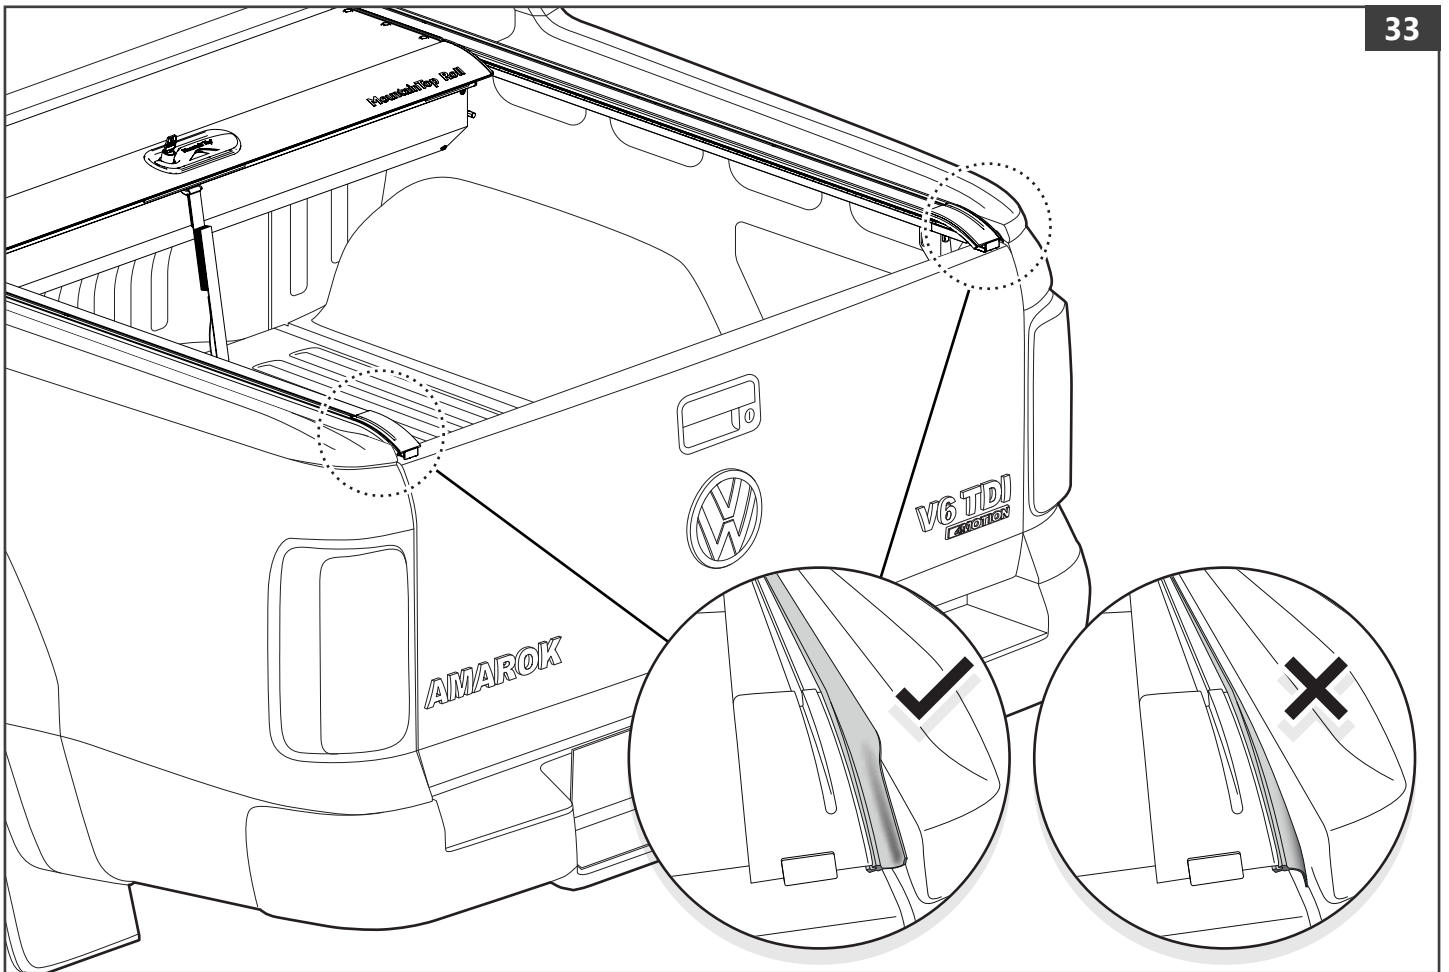
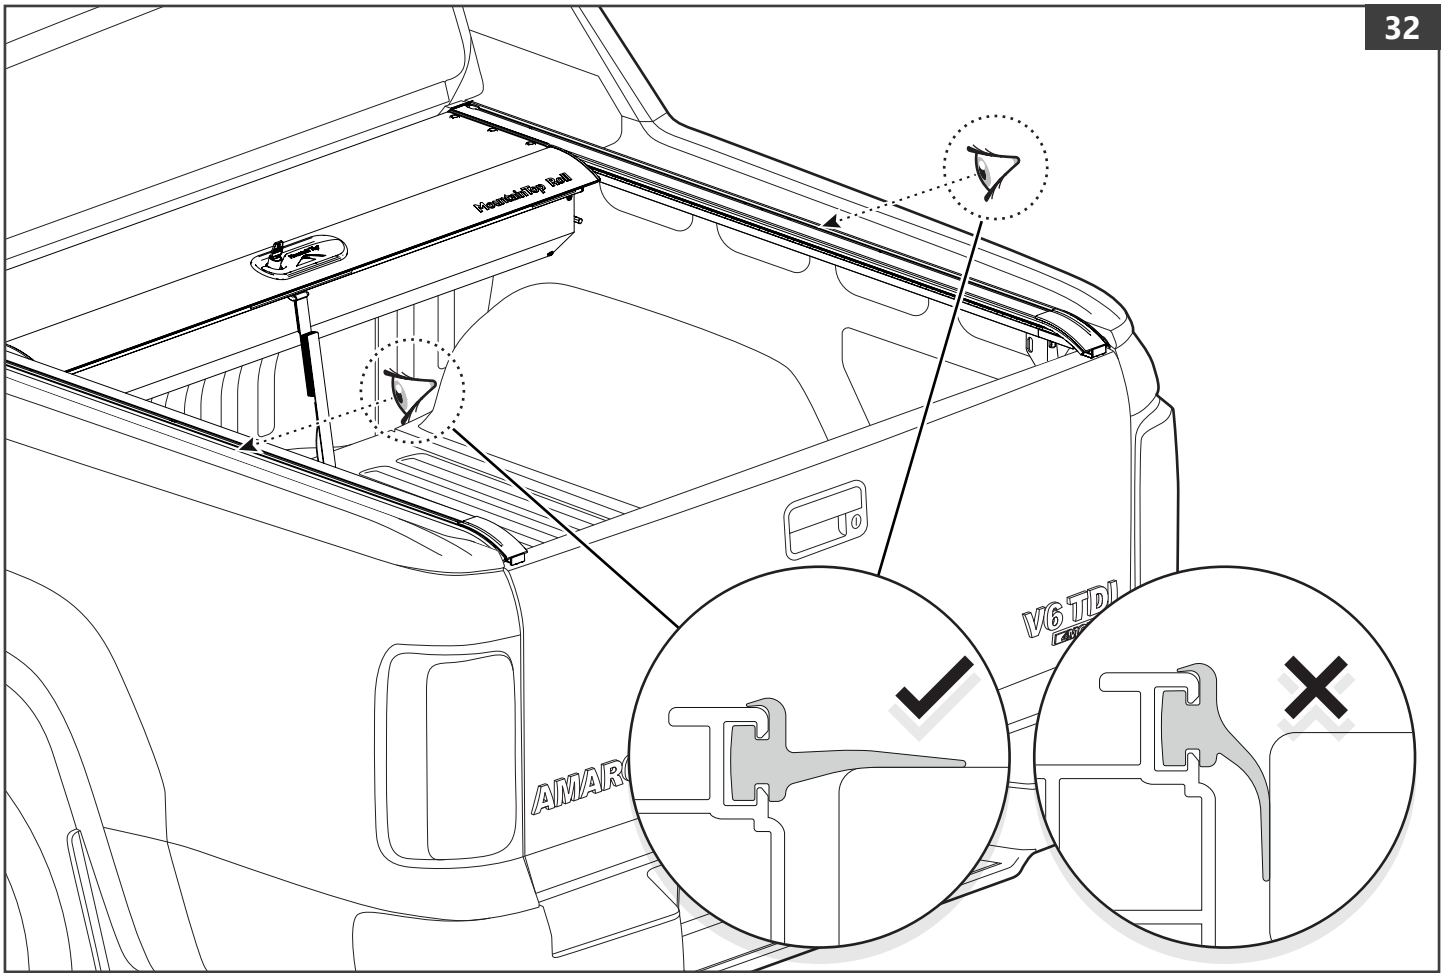


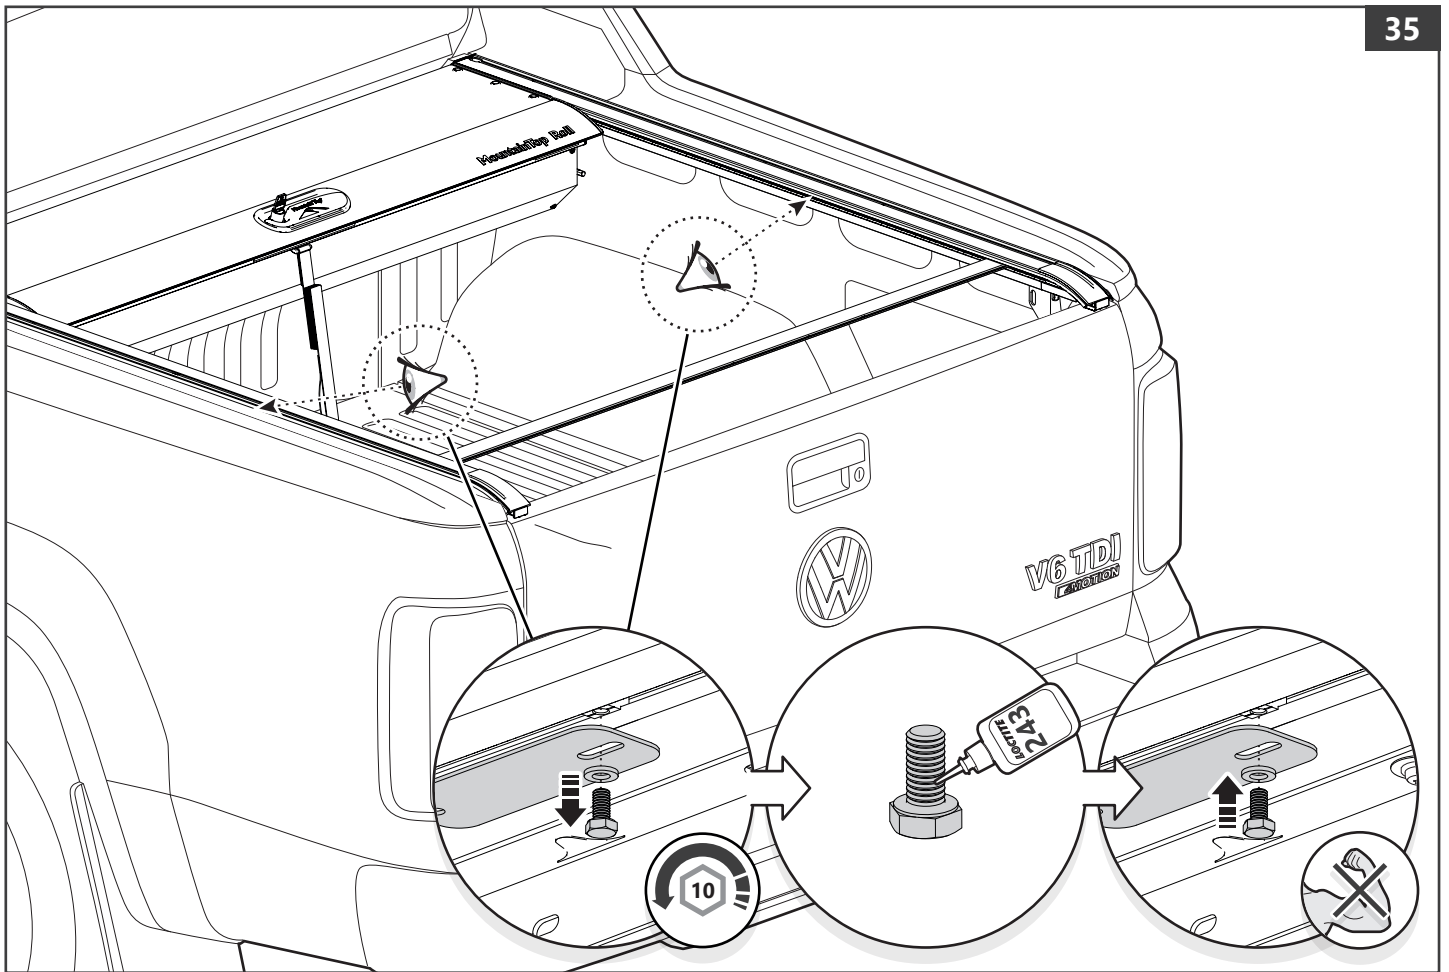
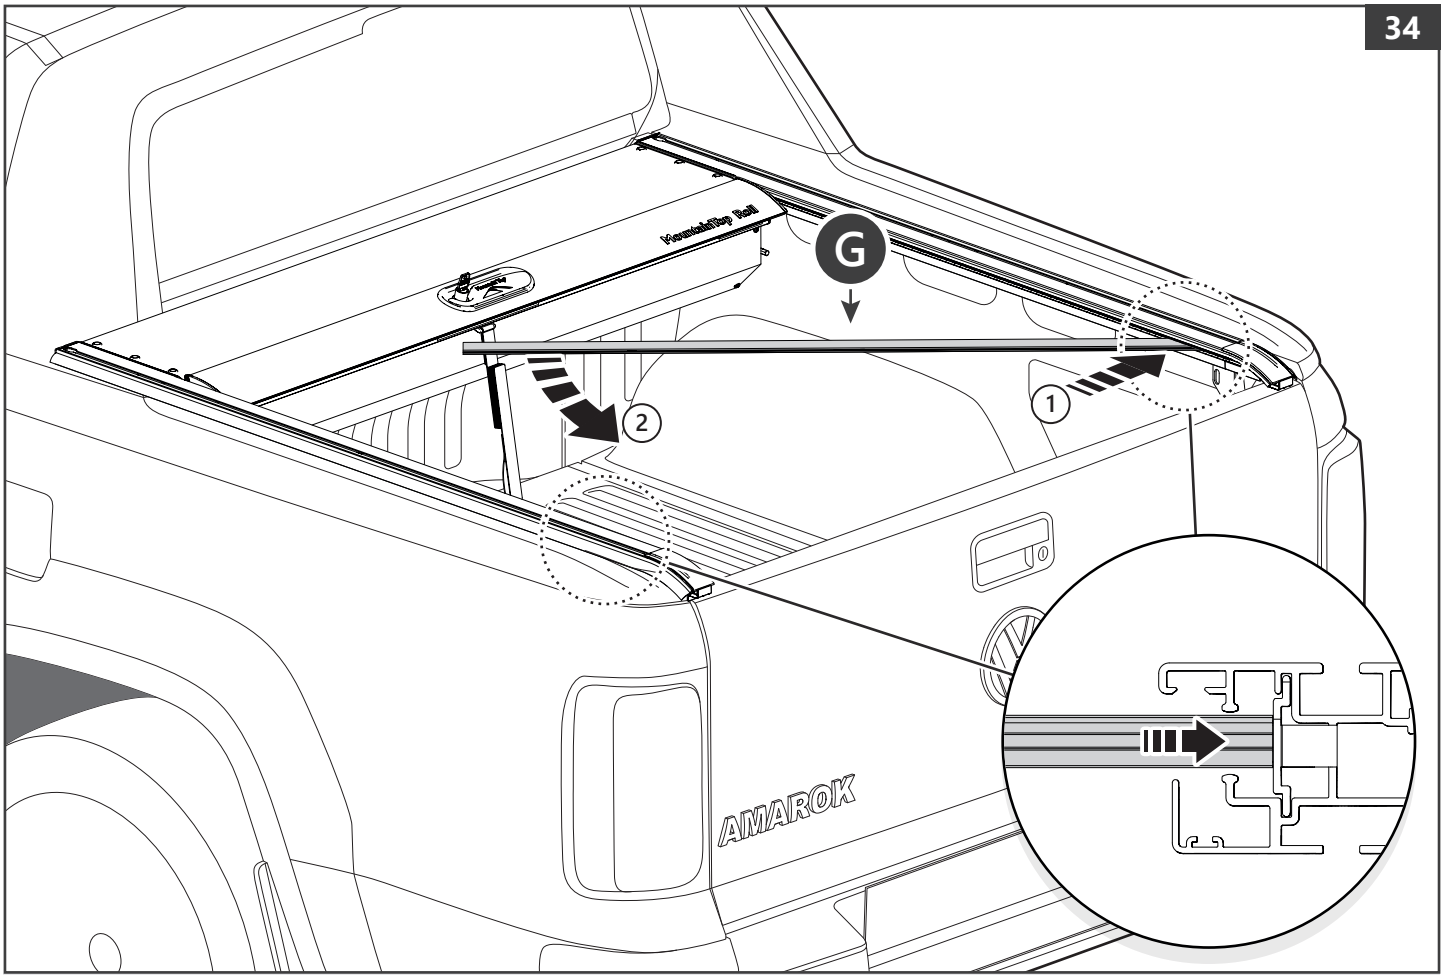


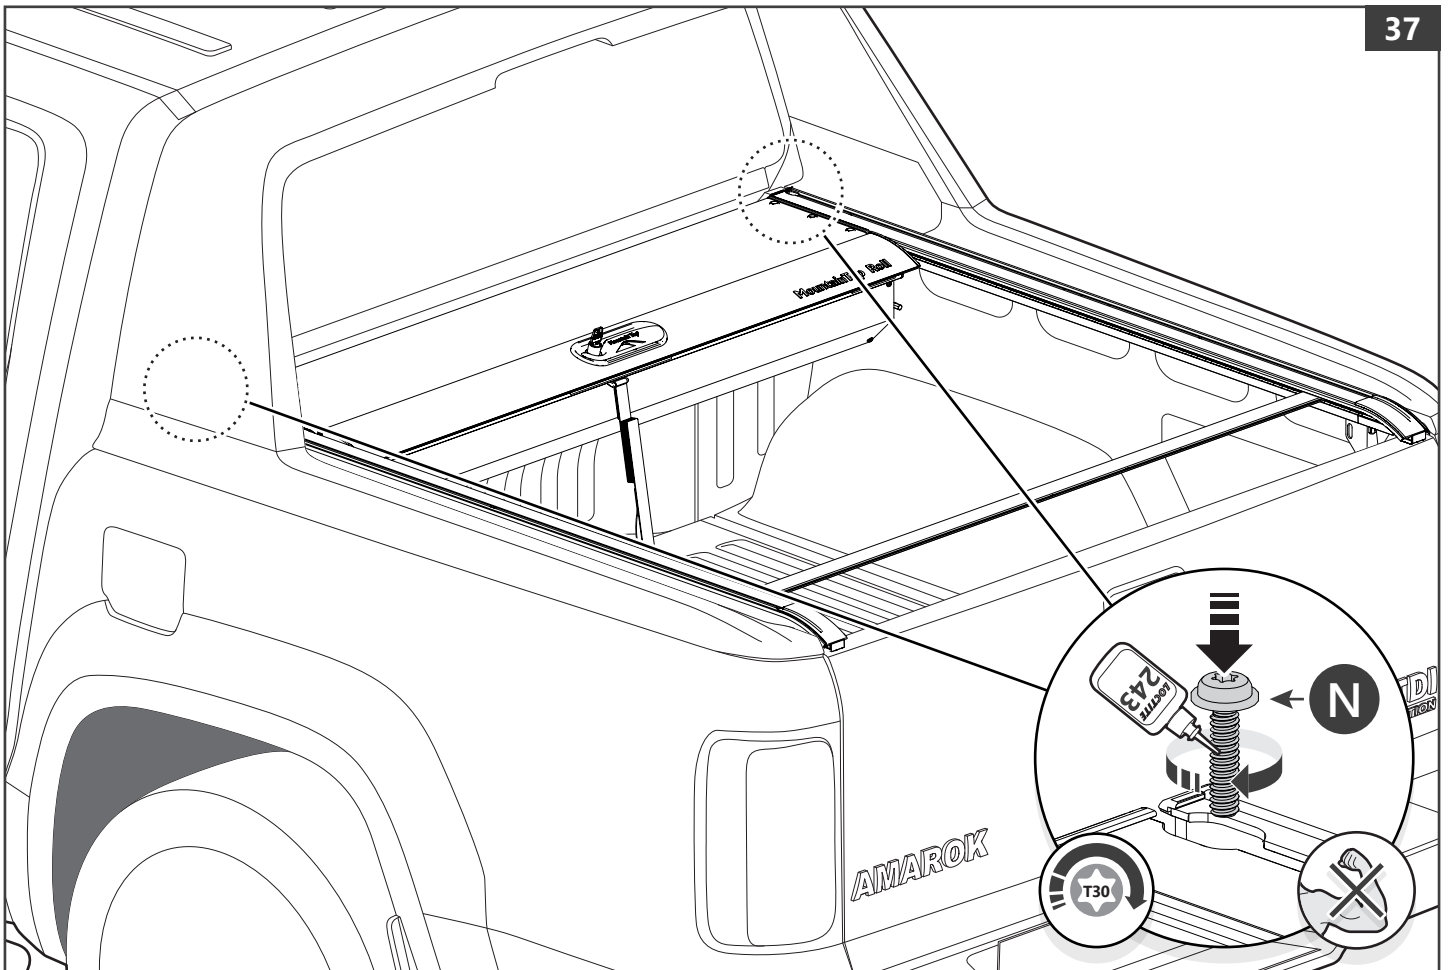
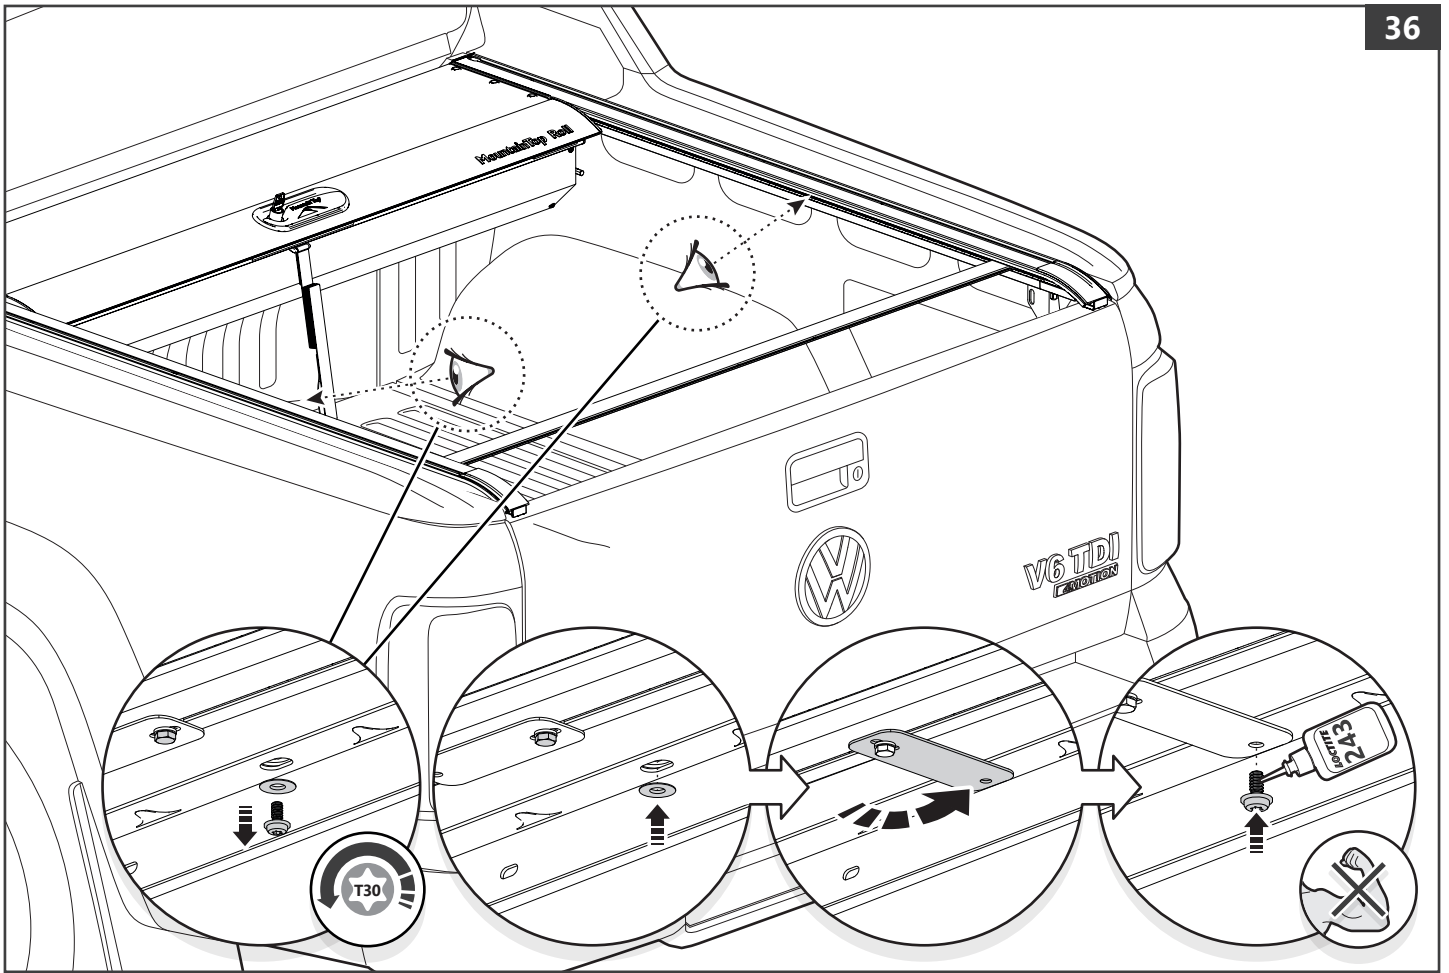


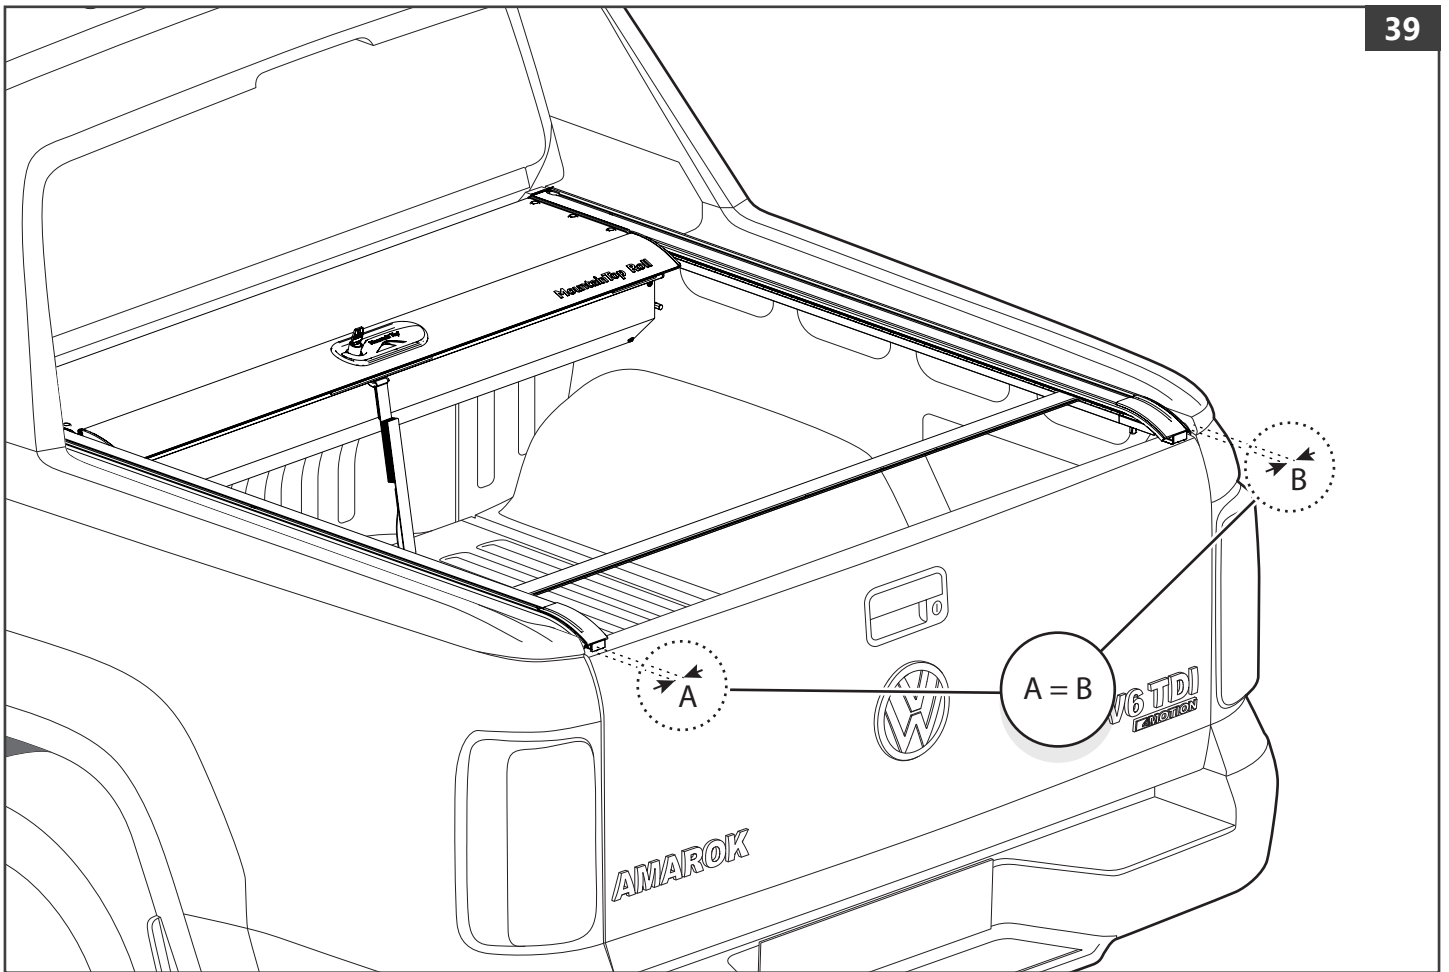
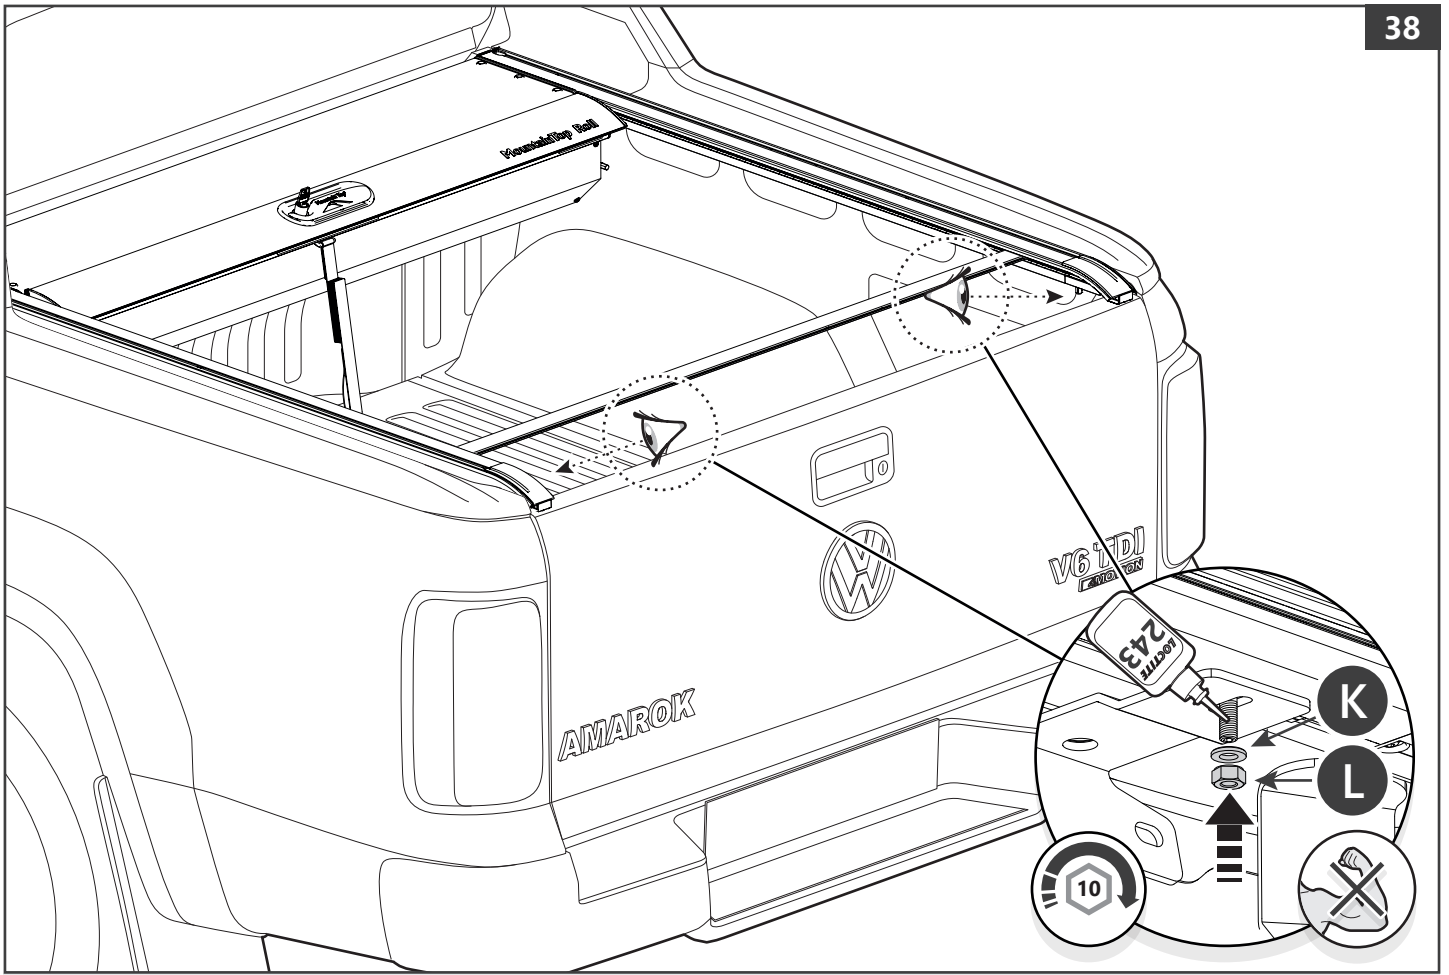


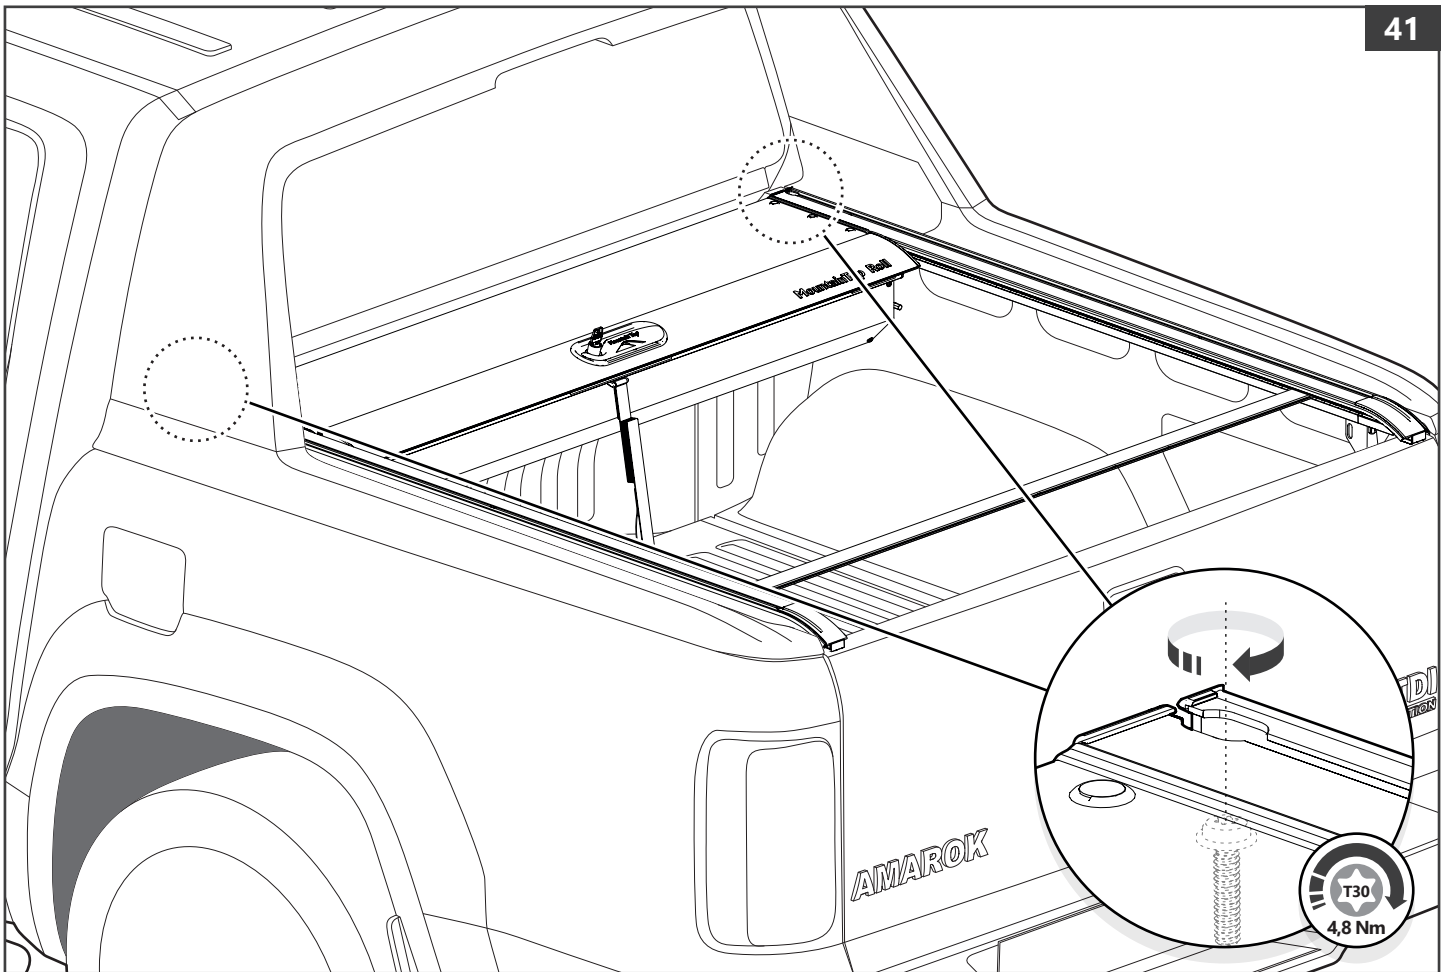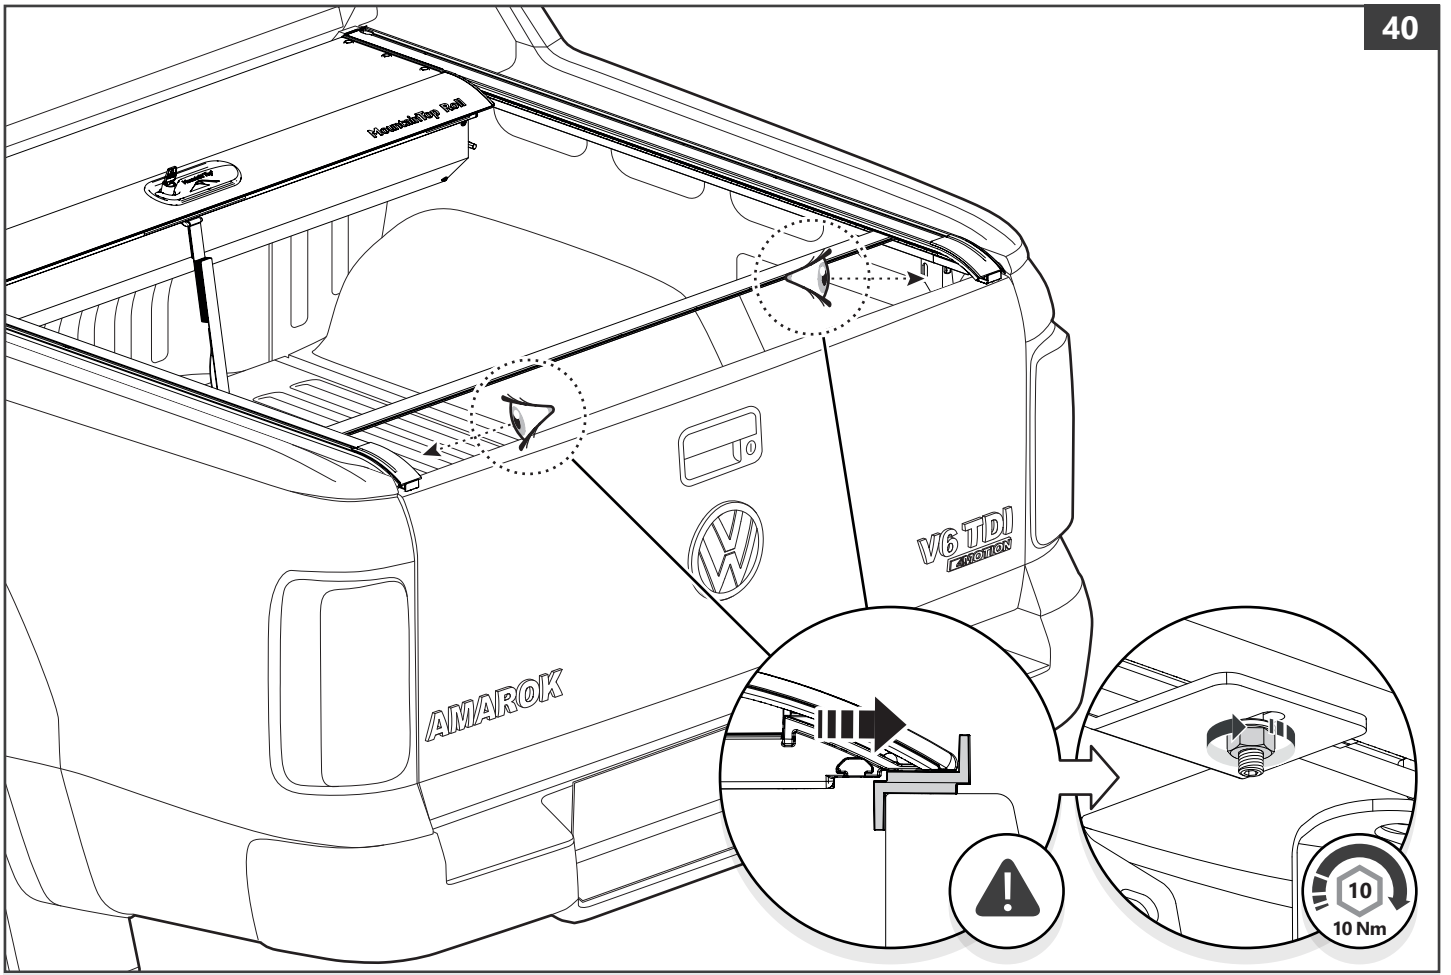


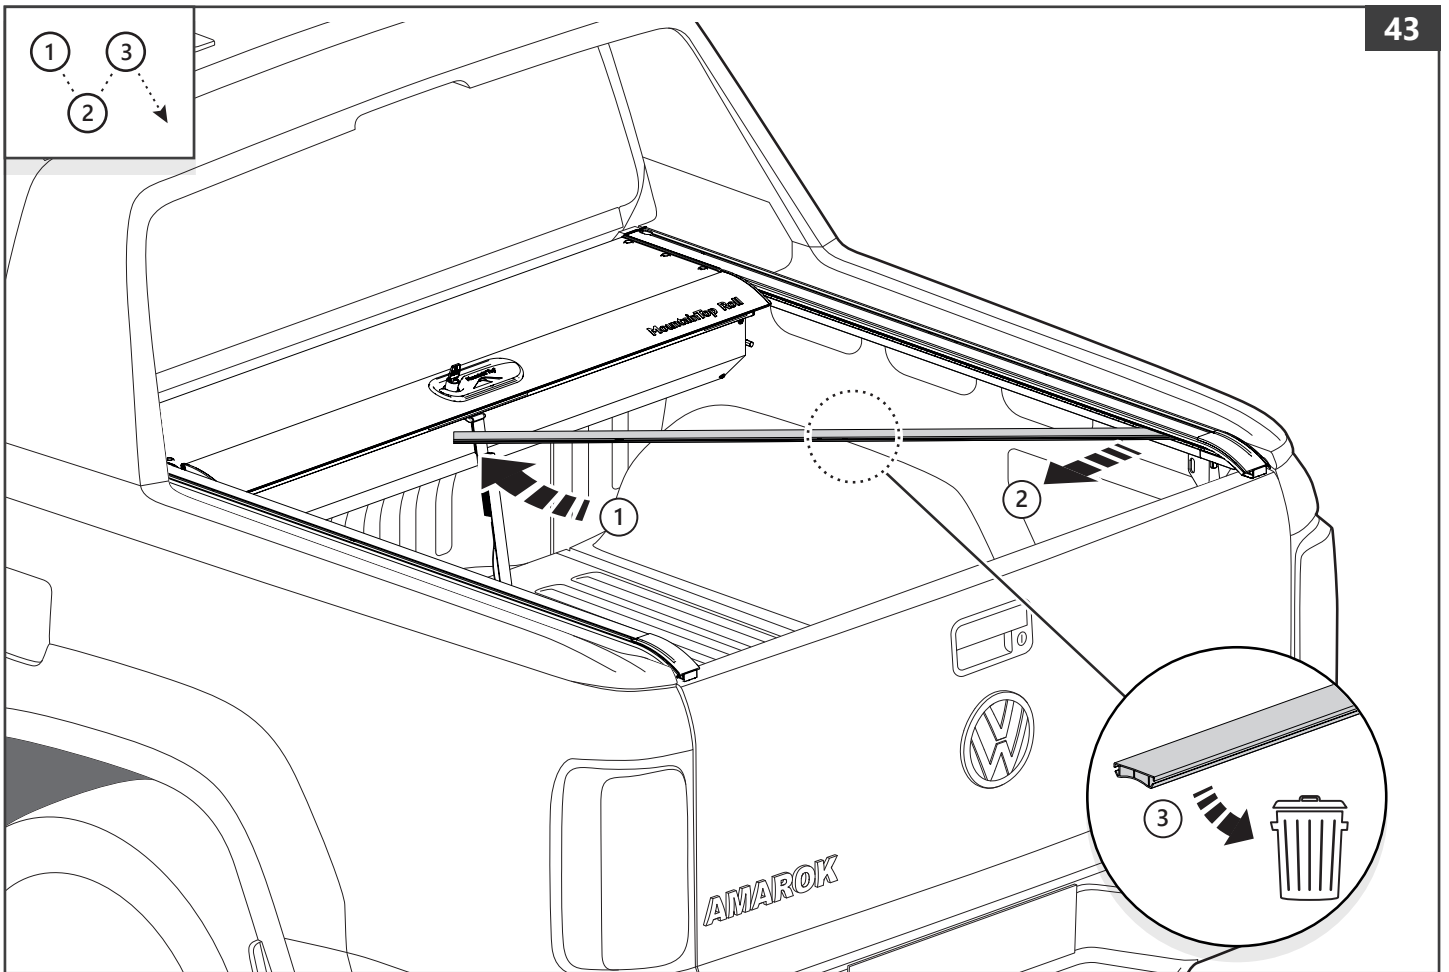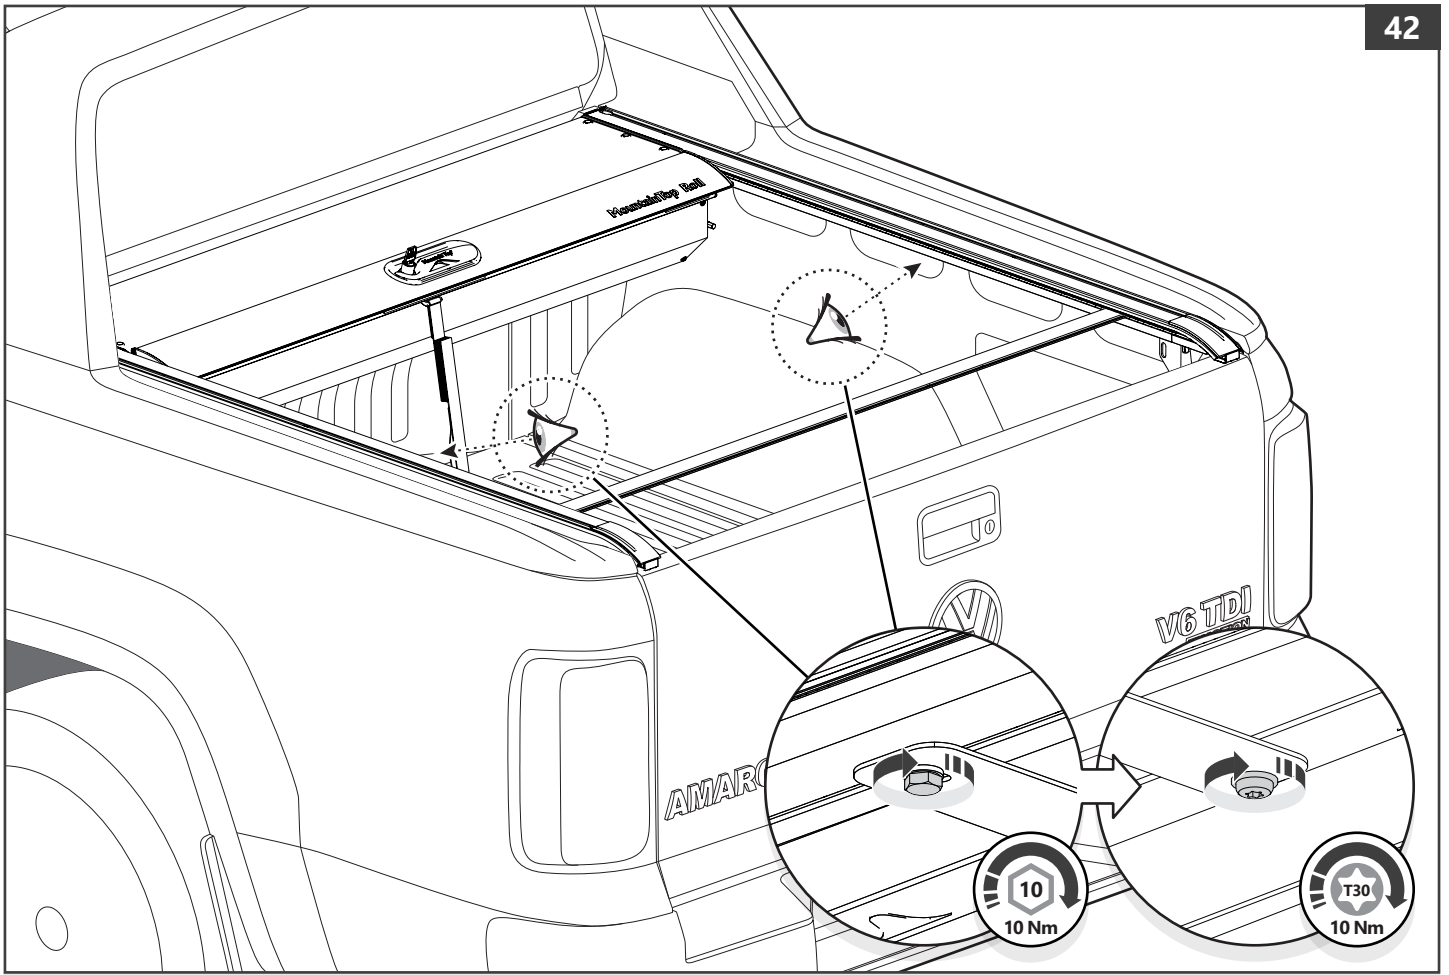

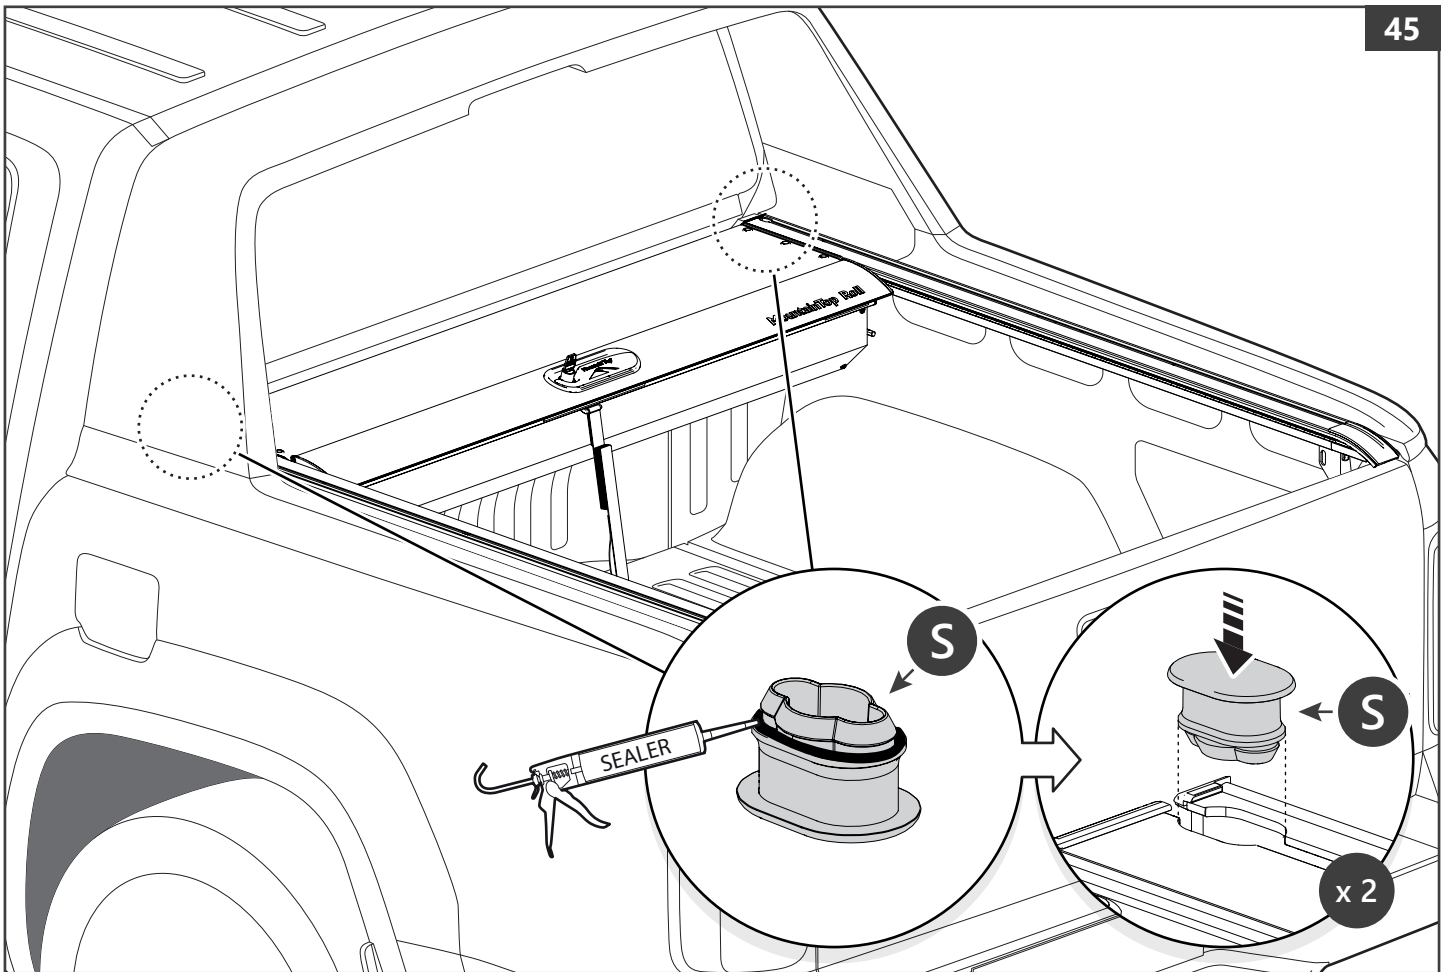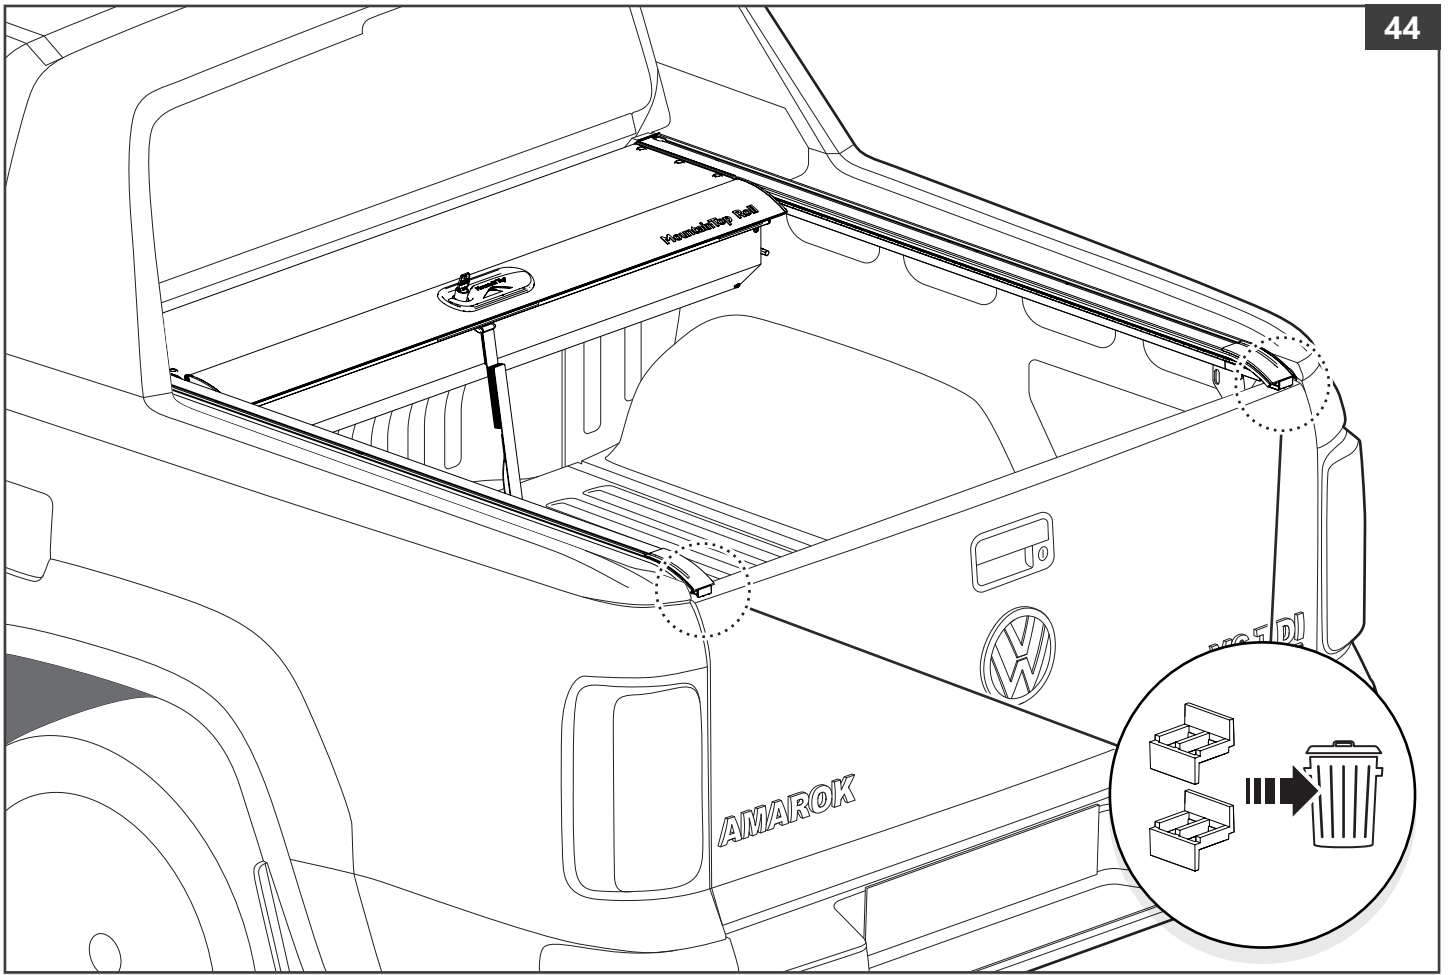


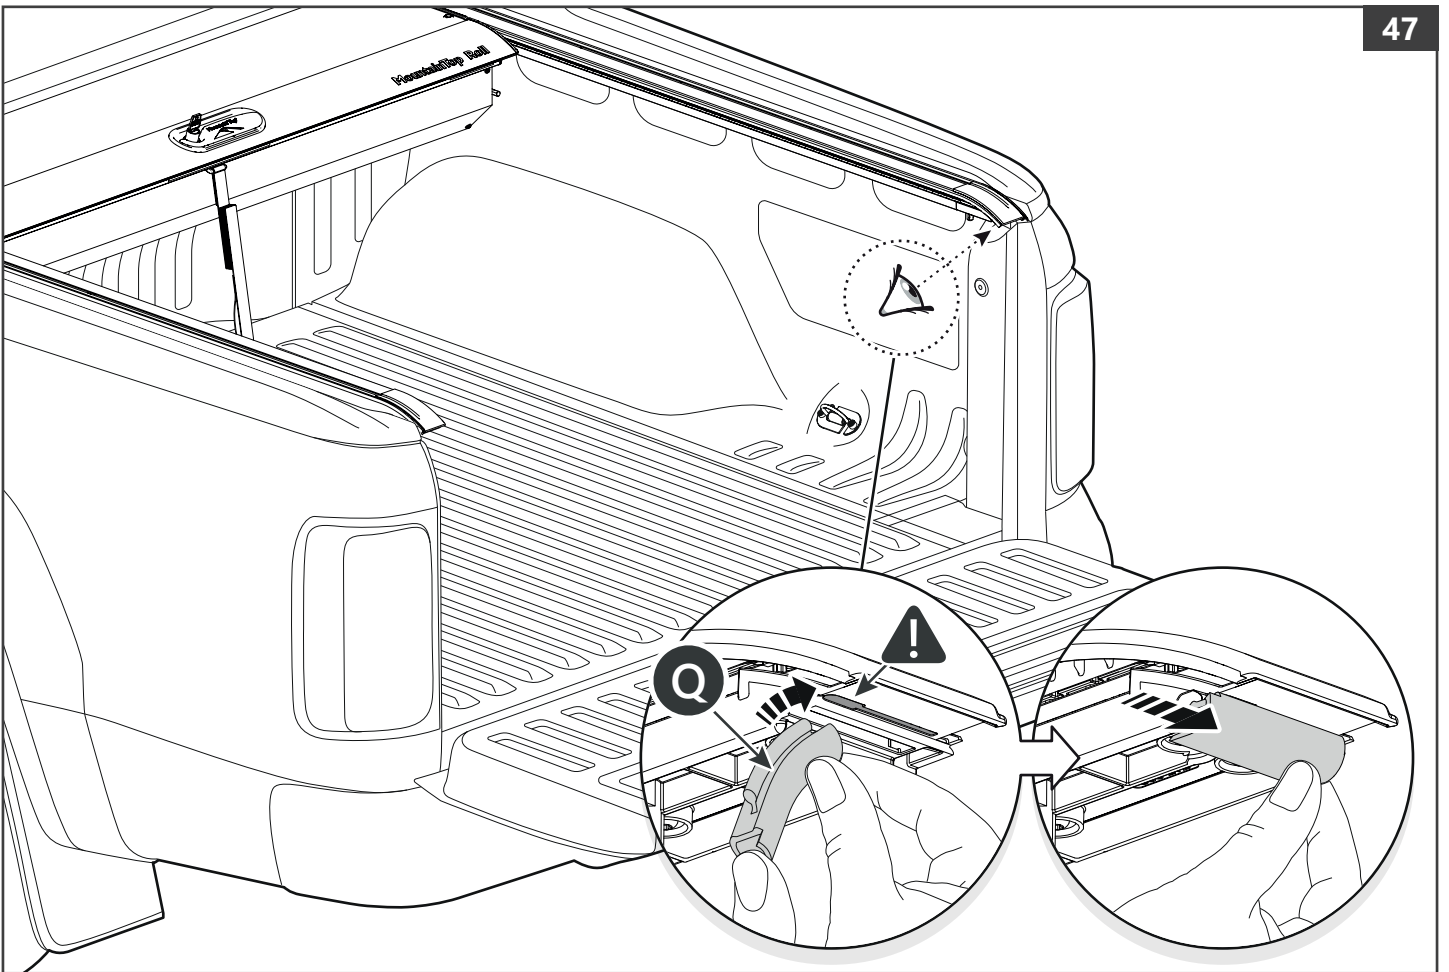
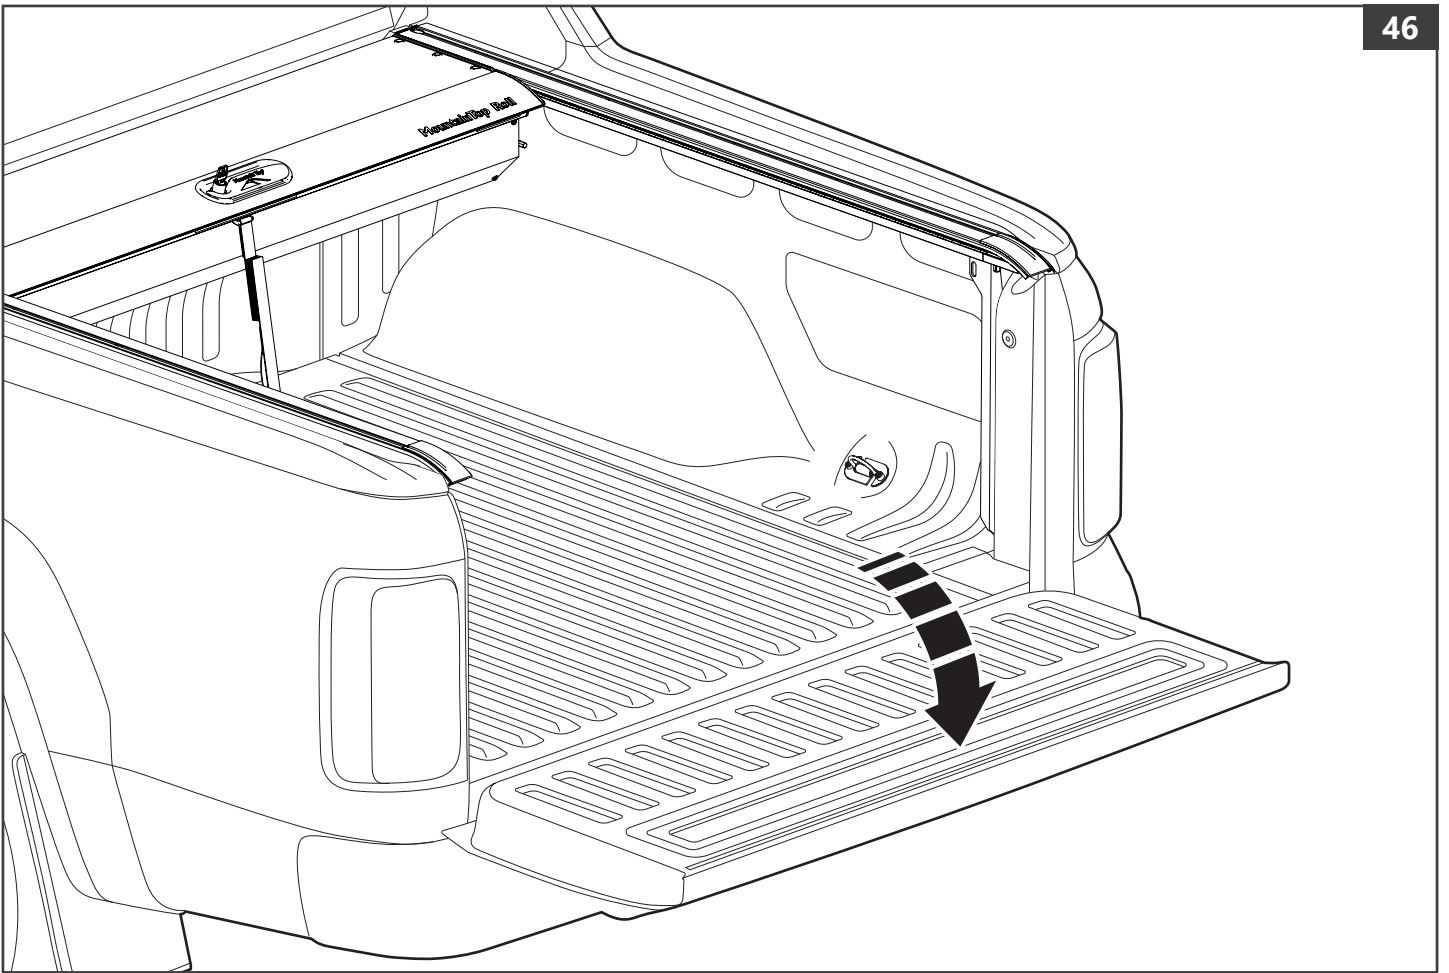


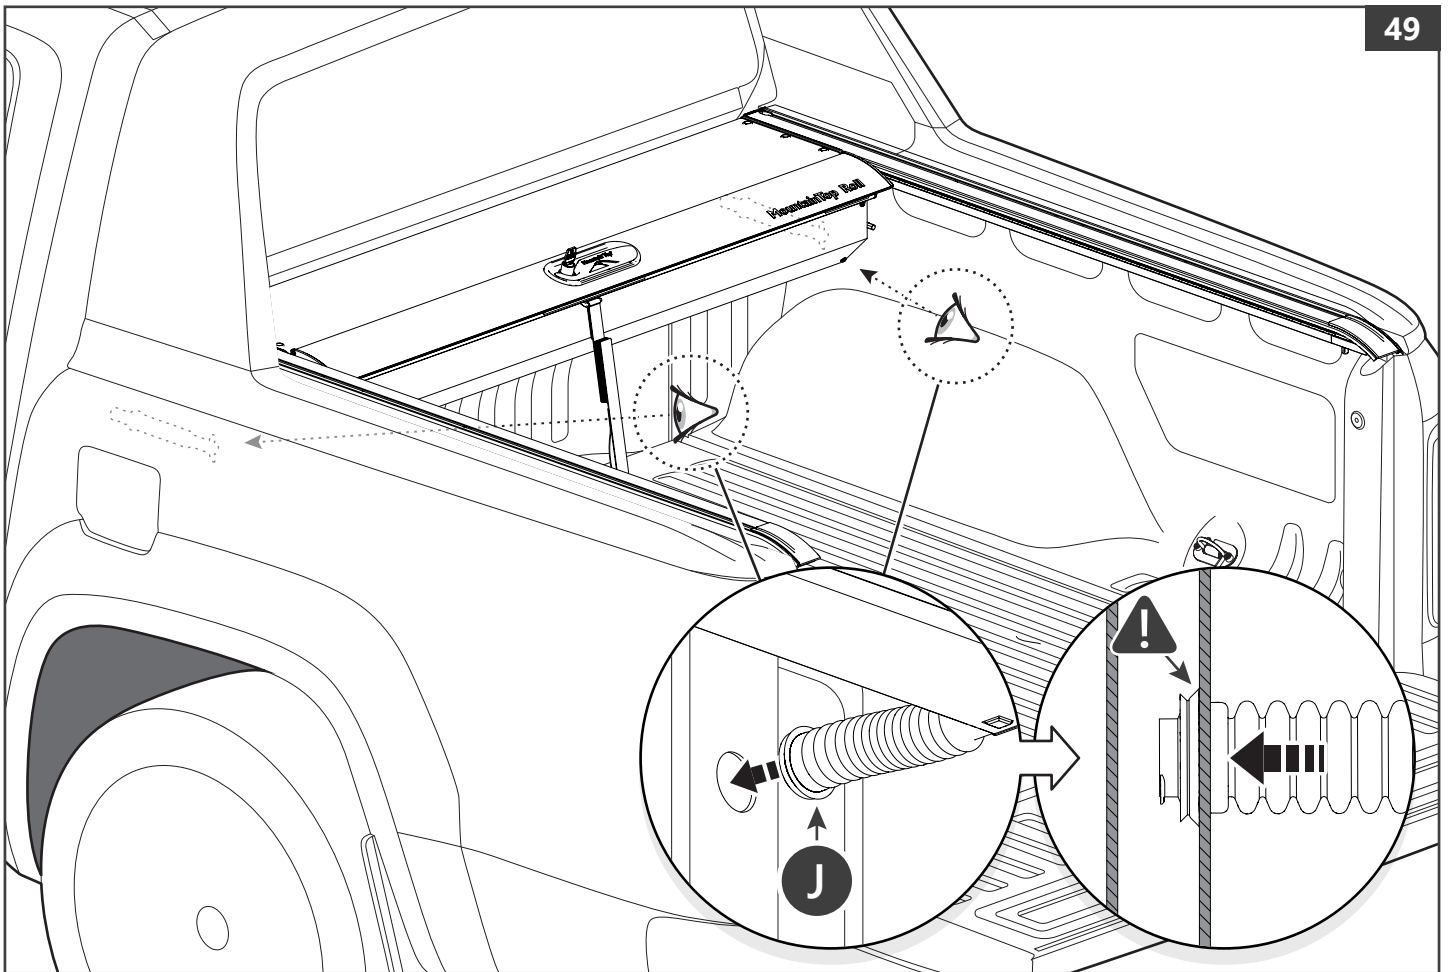
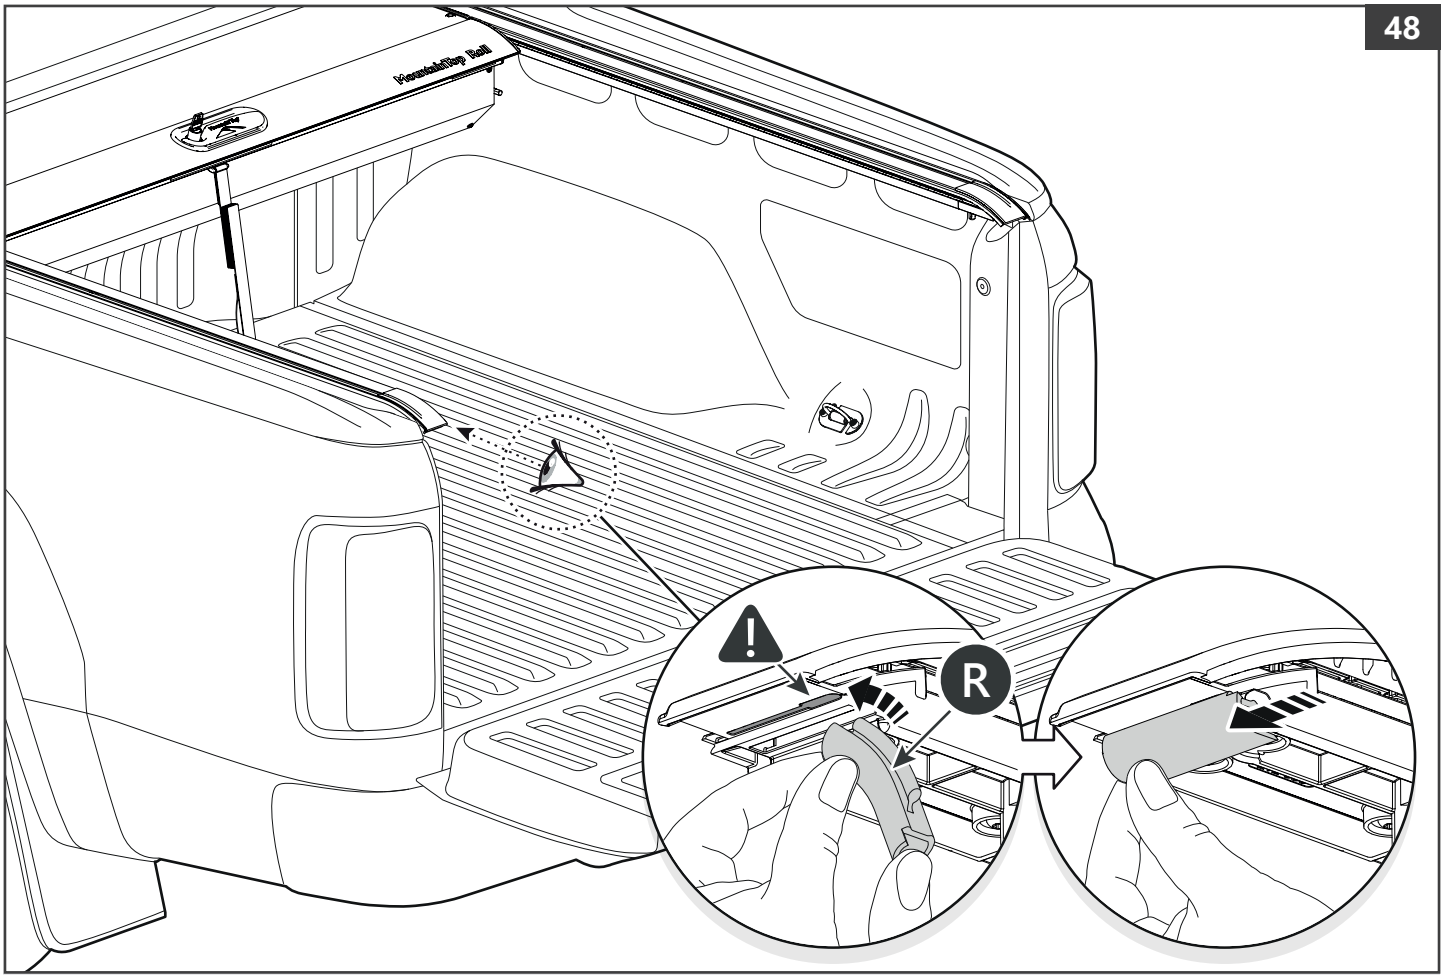



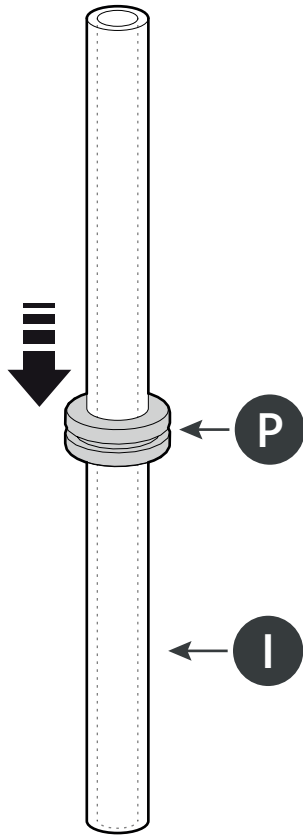



x 2

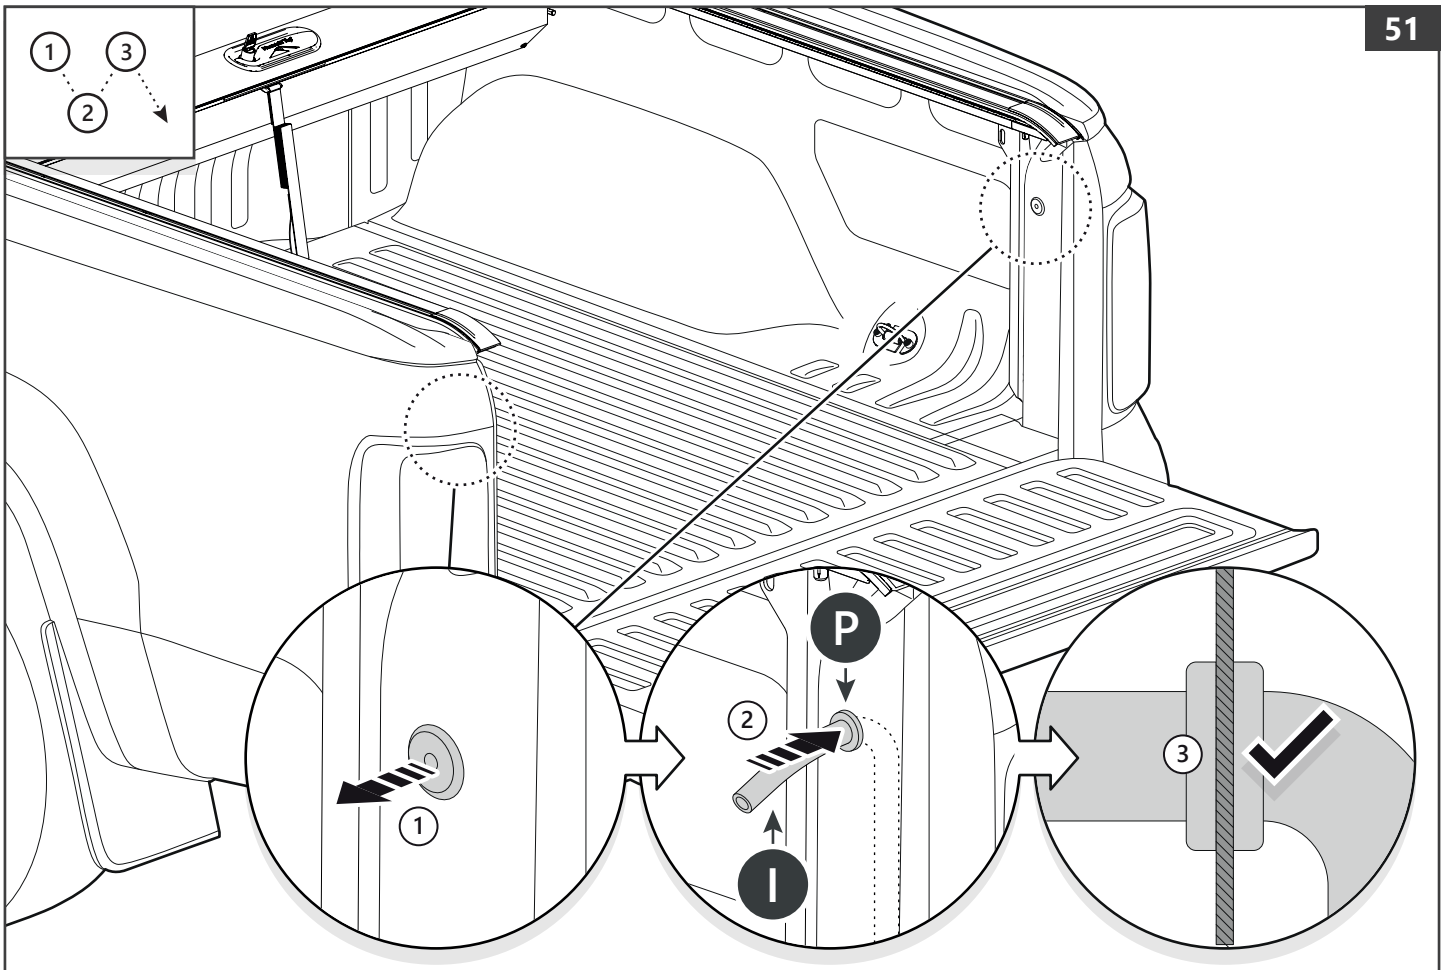

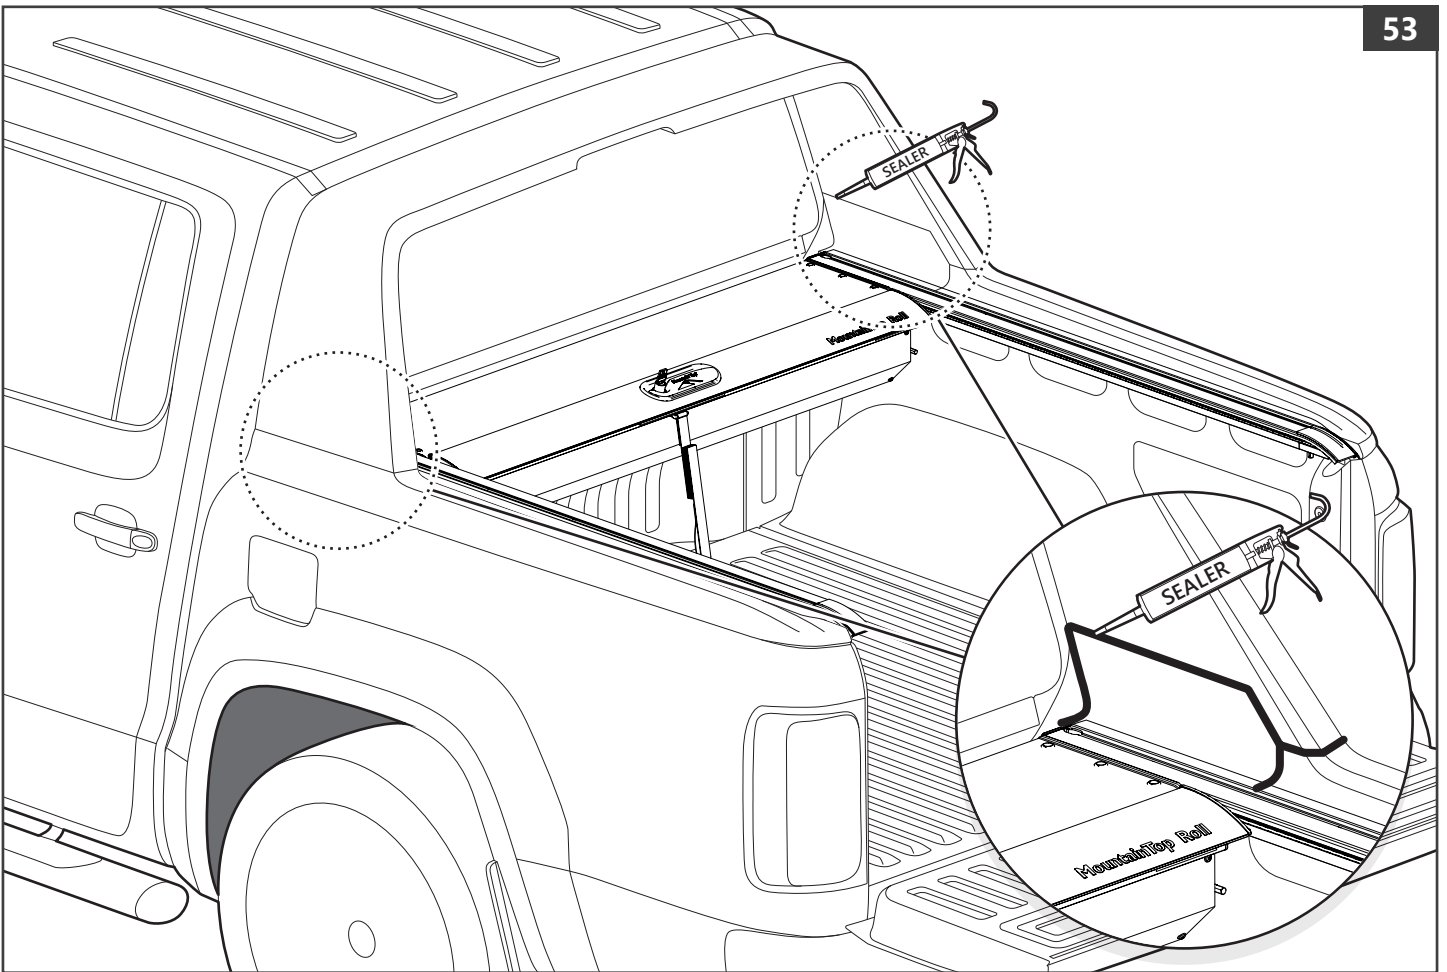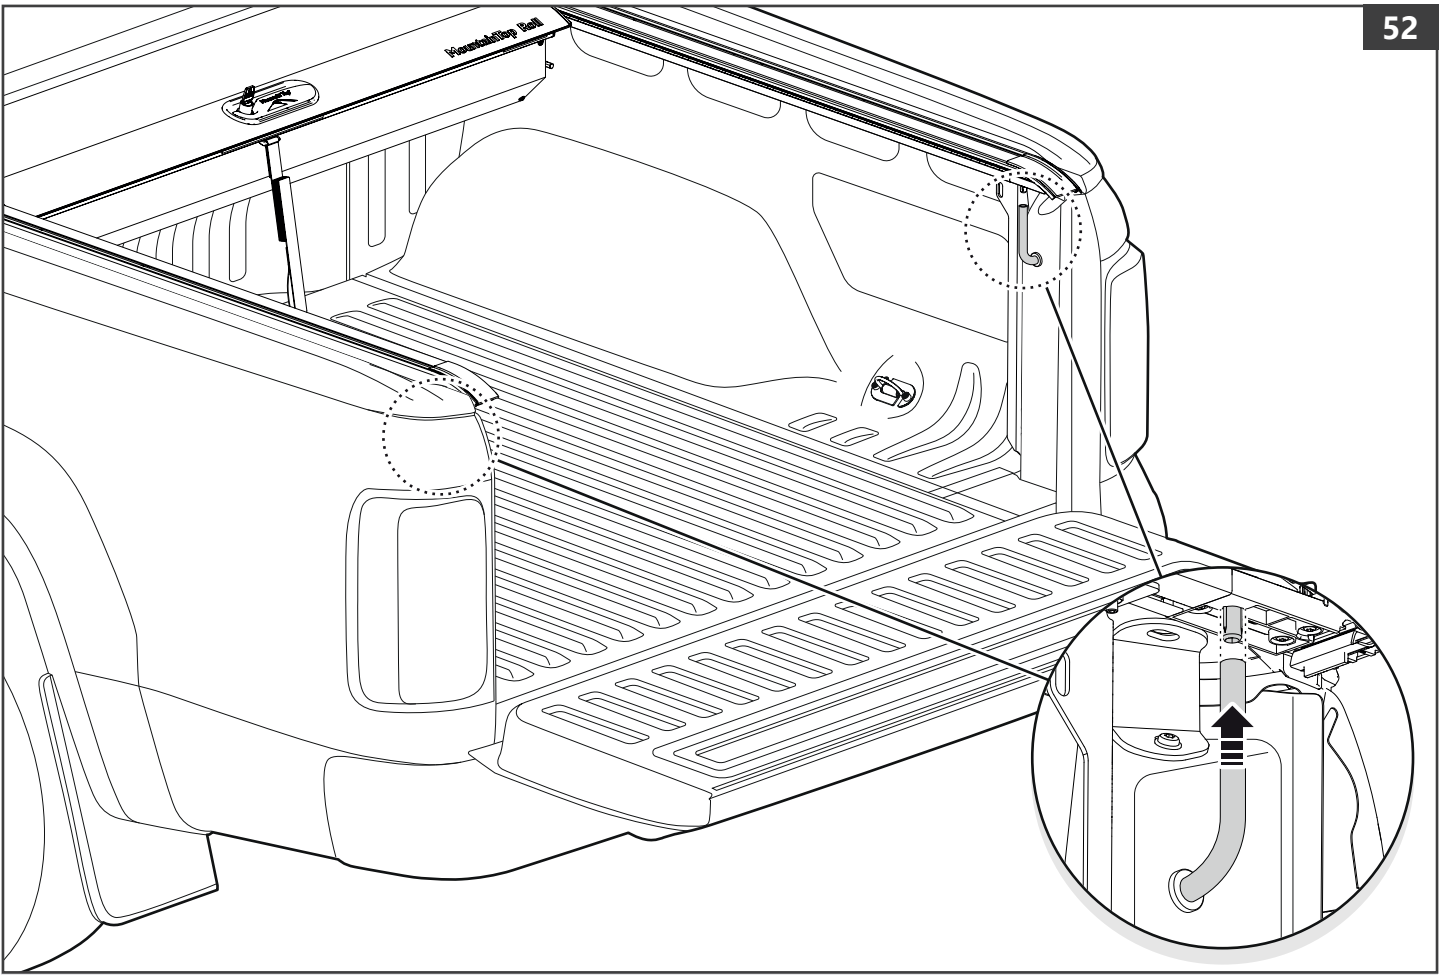

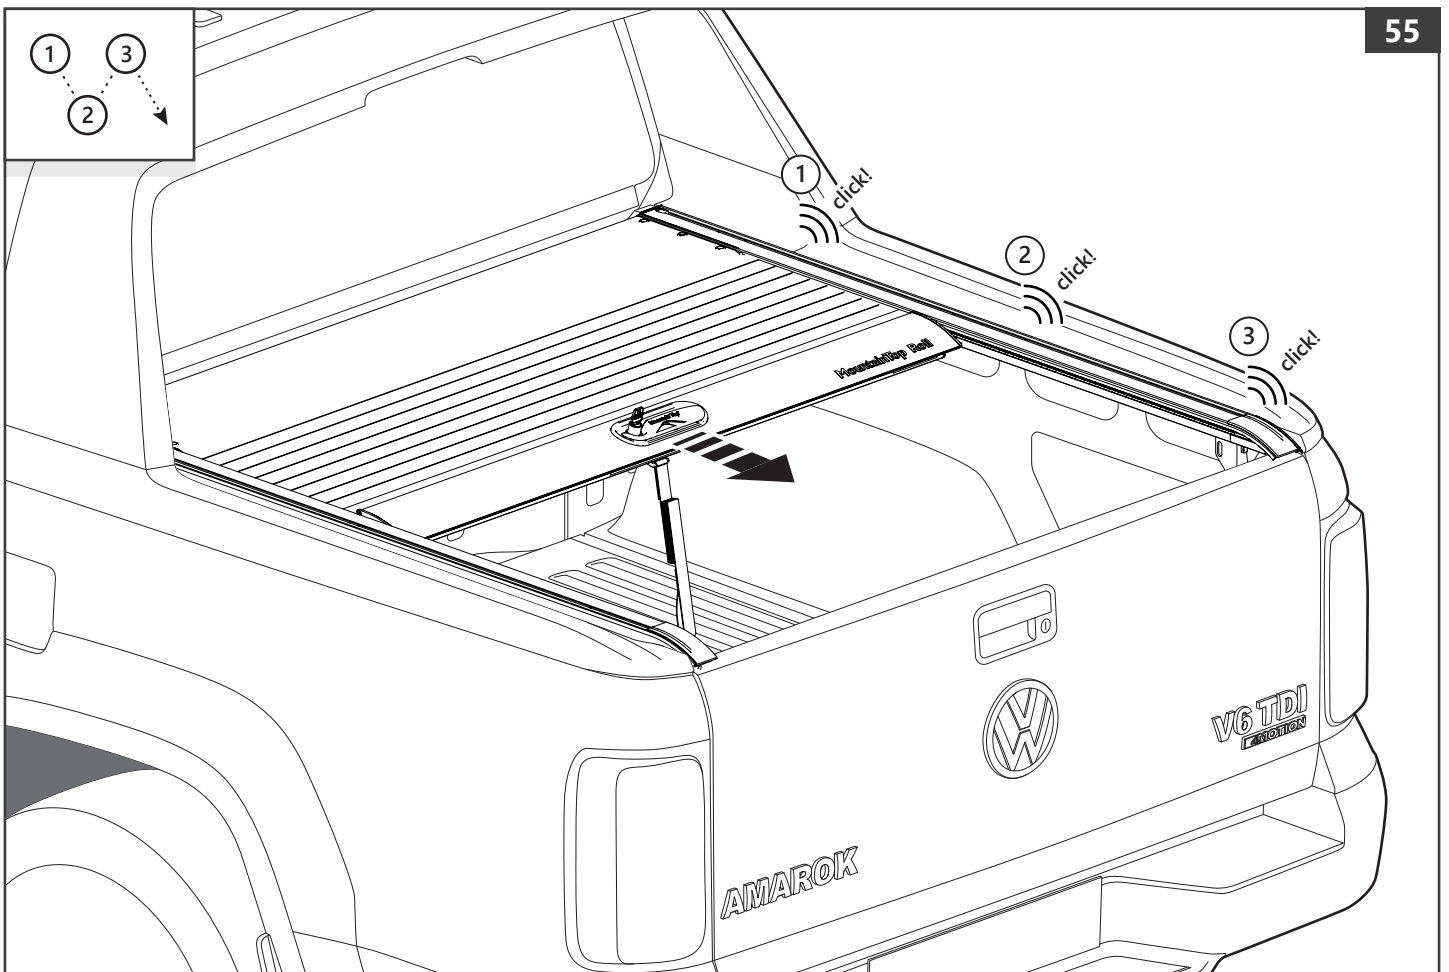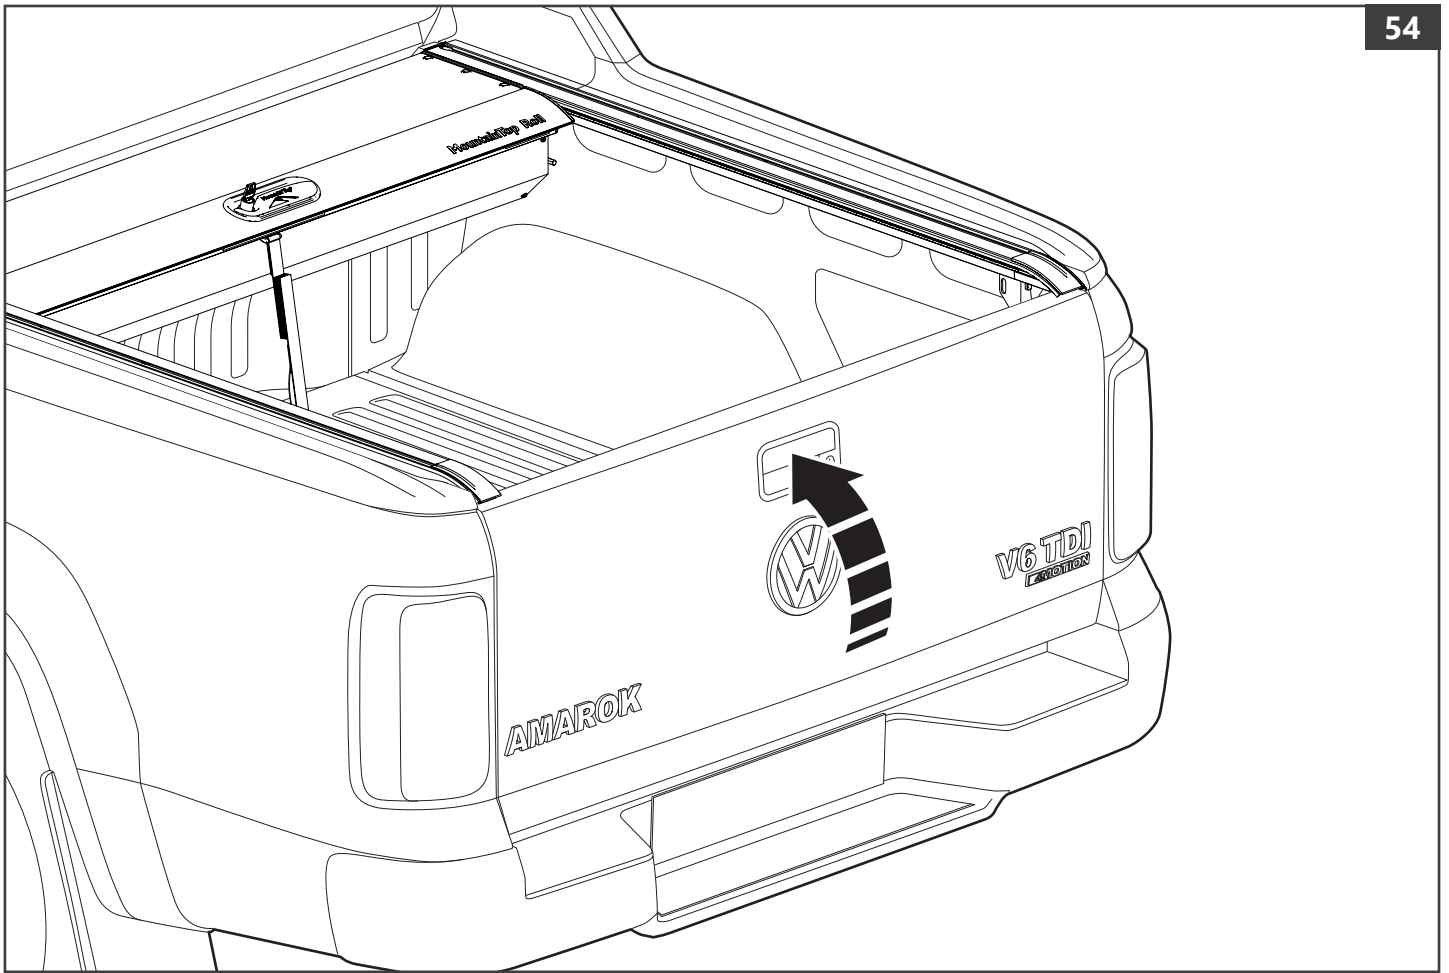

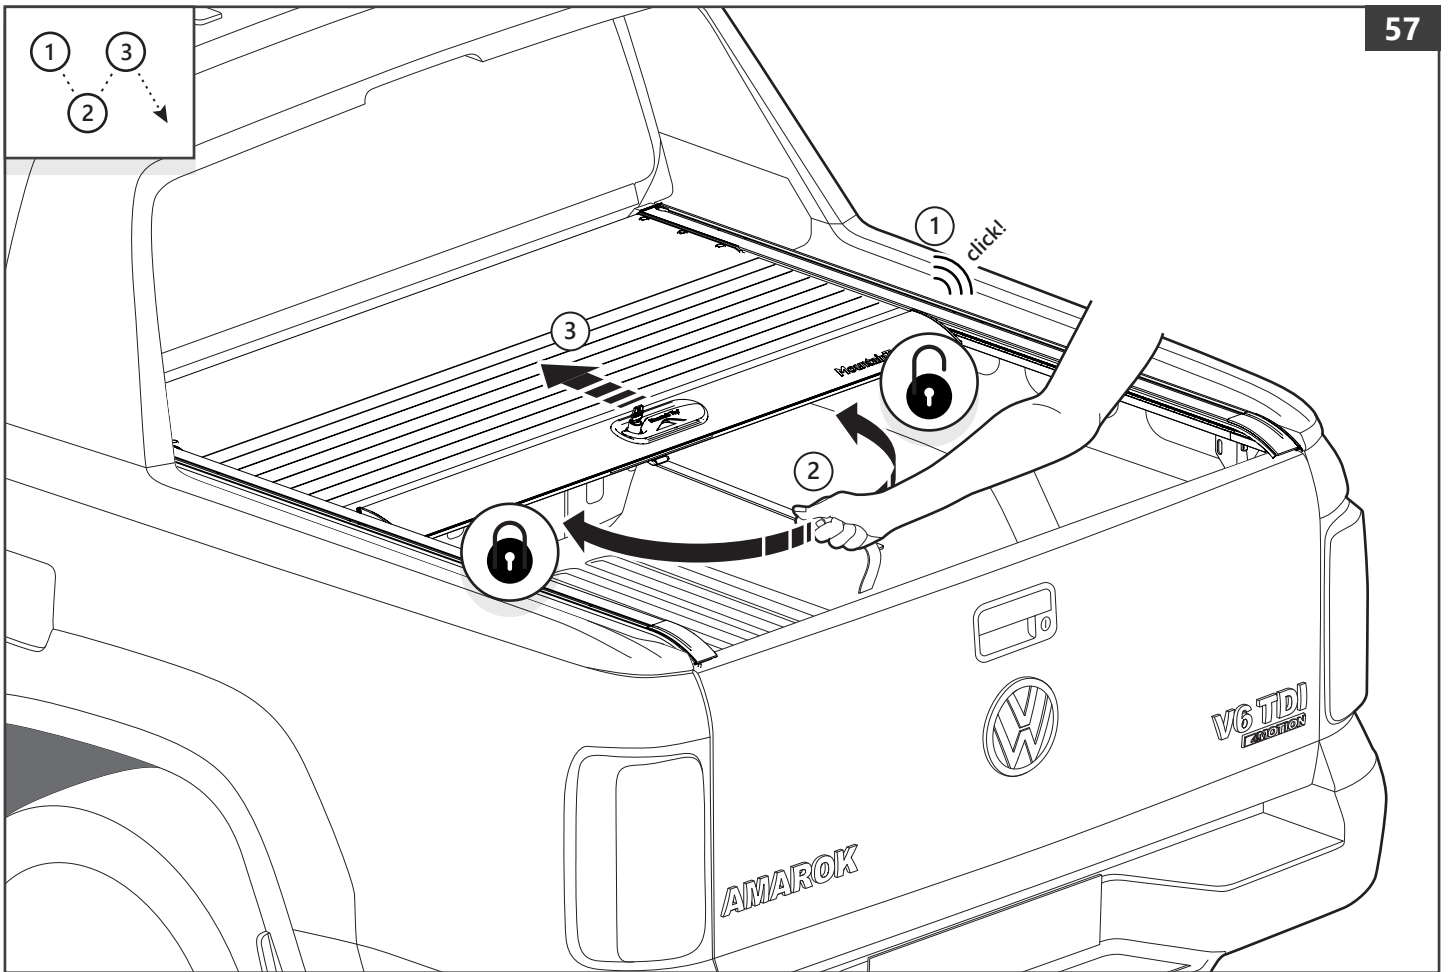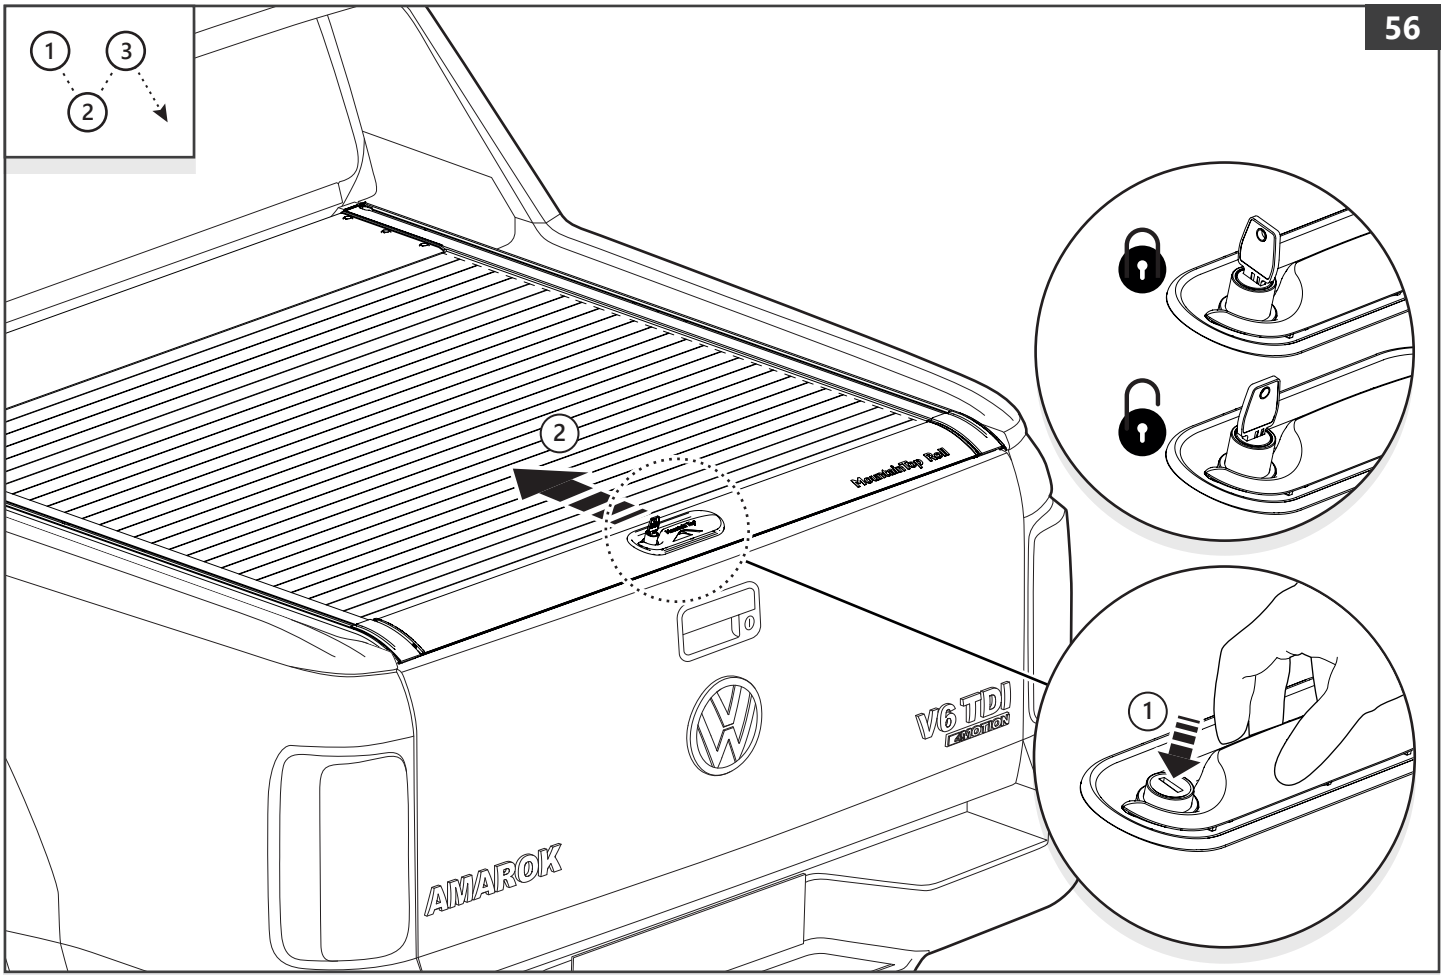

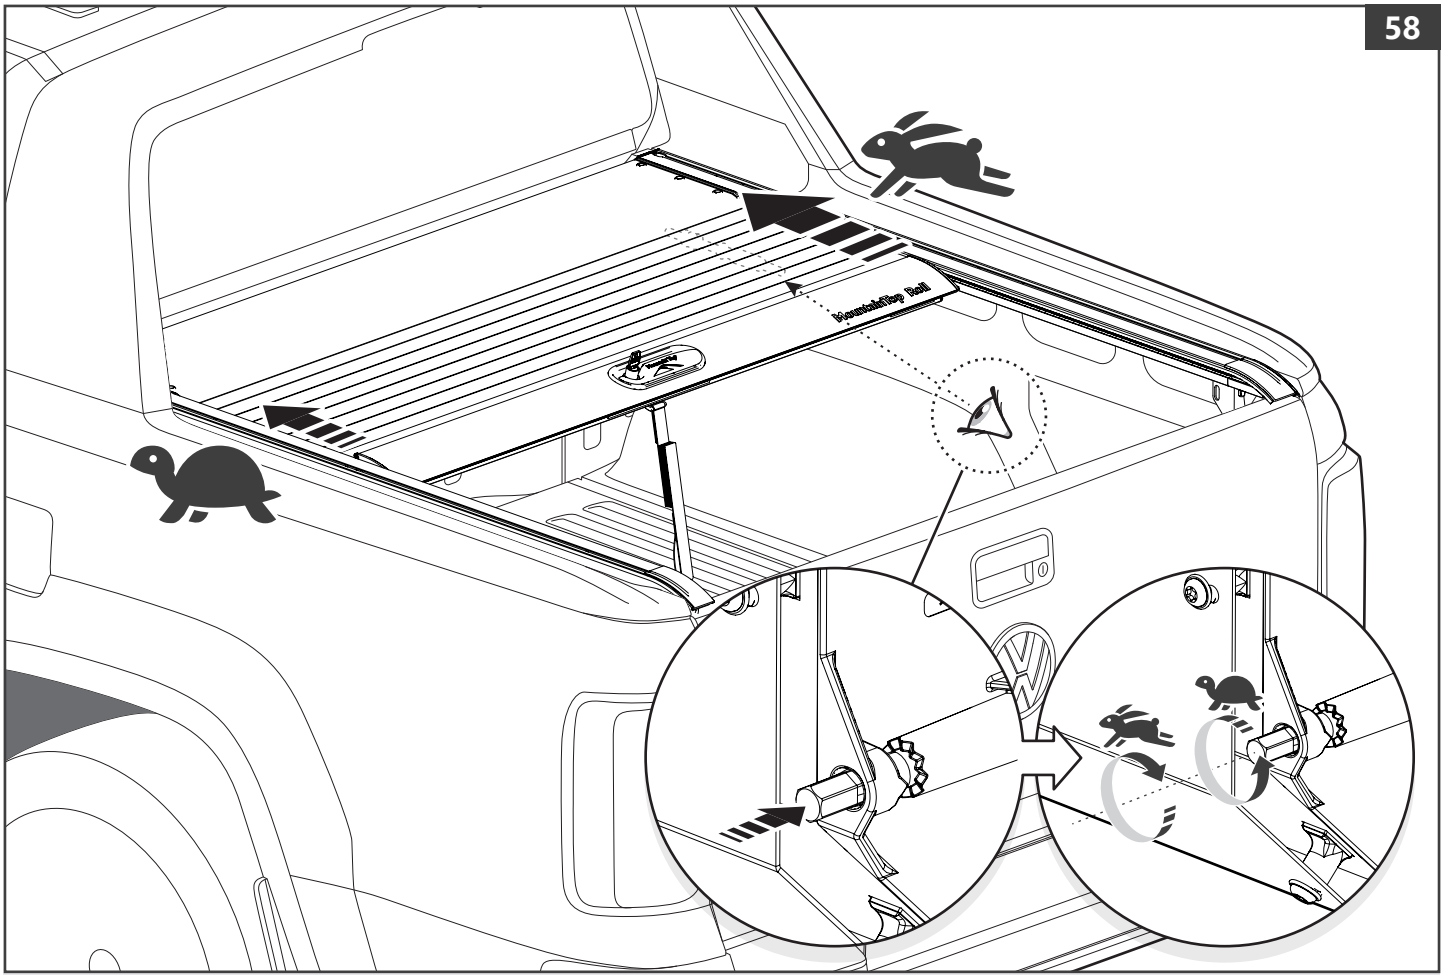



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Fax +45 4810 2960
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MTR VW80 H	Amarok / 2017 →	Double	2 hour(s)	31-36 Kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni de montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare