

# Mountain Top® Roll

Installation manual



VIDEO GUIDE




DOWNLOAD PDF




Parts

**A**

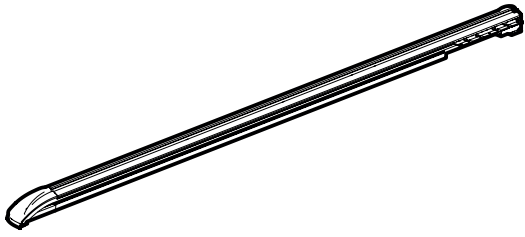


x 1

**B**

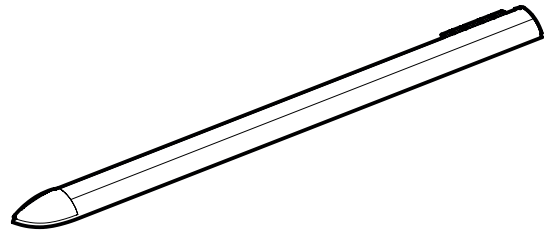


x 1

**C**

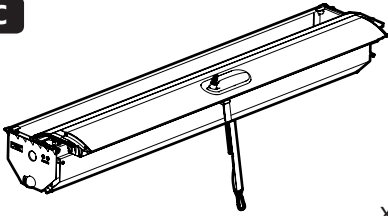


x 1

**D**

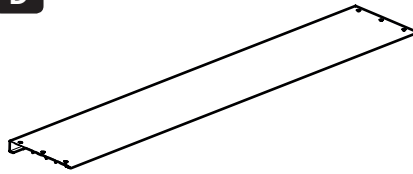


x 1

**E**

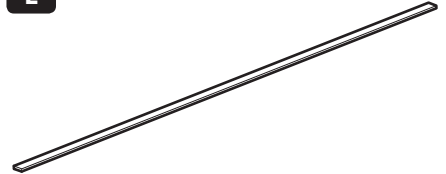


x 1

**F**




x 6

**G**

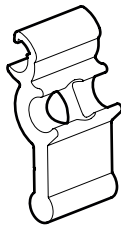


x 6

**H**

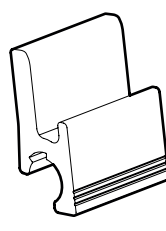


x 6

**H2**

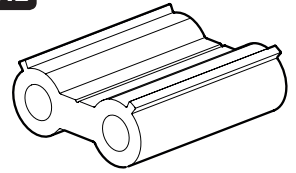


x 6

**I**

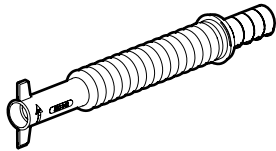


x 2

**J**

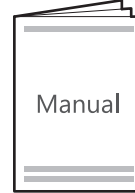

x 1

**L**




x 24

**M**




x 6

**N**




x 6

**O**

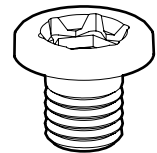

x 6

**P**

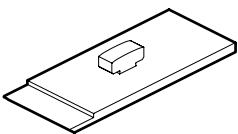


x 2

**Q**




x 2

**R**



x 1

**S**

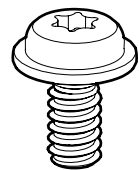


x 4



Kit

**L**




x 24

**M**




x 6

**N**




x 6

**O**

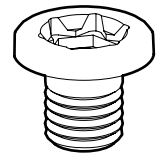

x 6

**P**

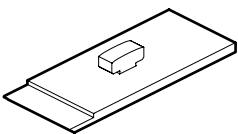


x 2

**Q**




x 2

**R**





x 1


**S**

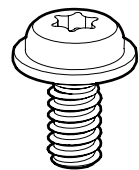


x 4

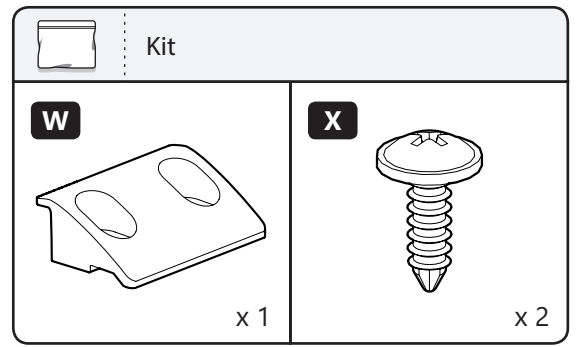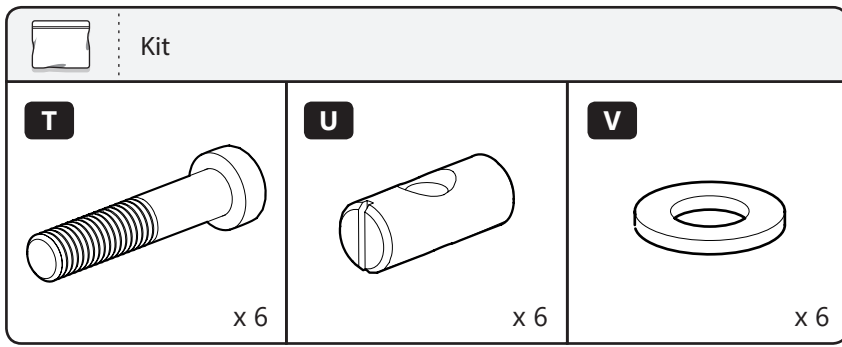


Tools and materials needed

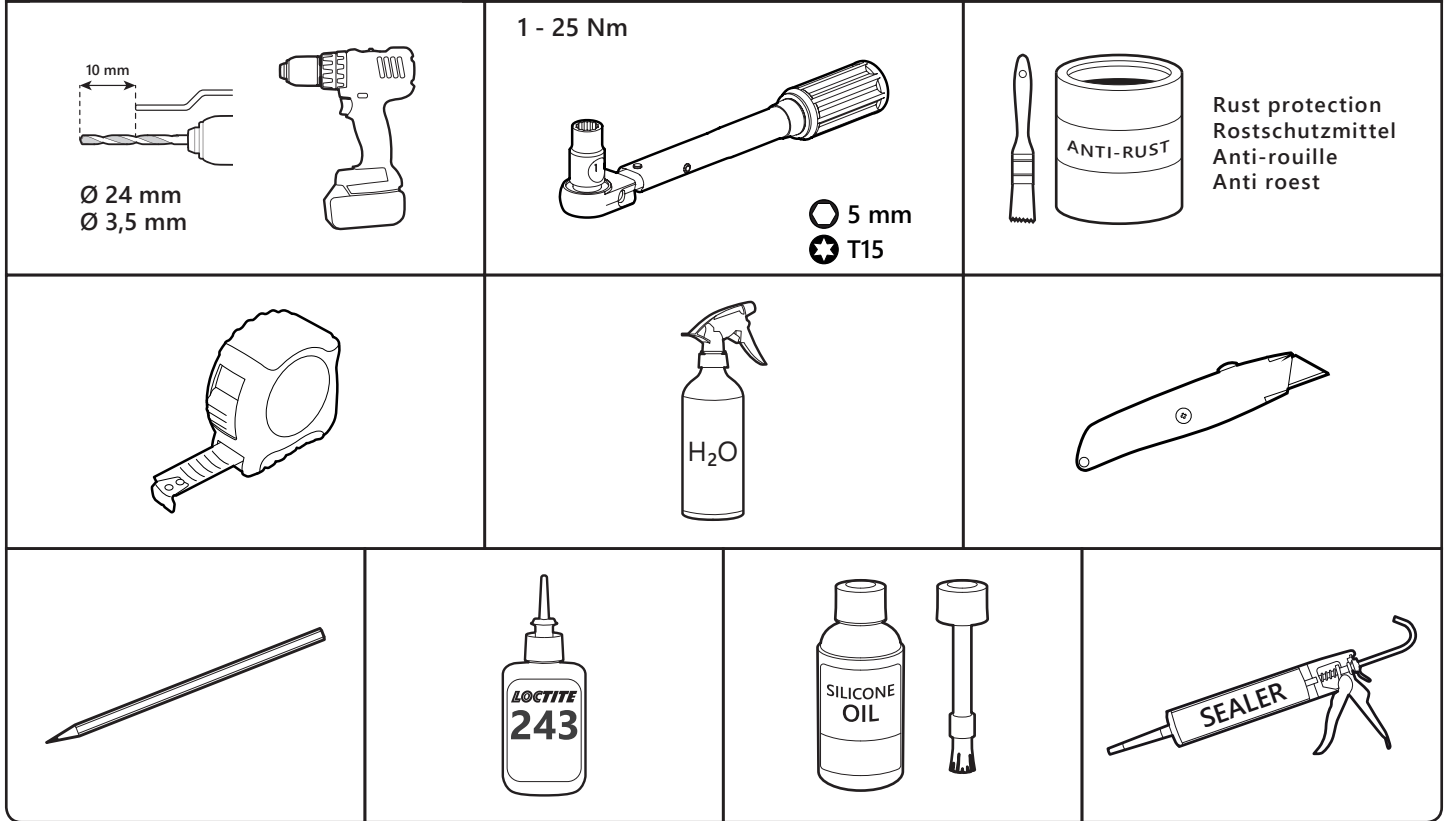


1 Applying rust protection

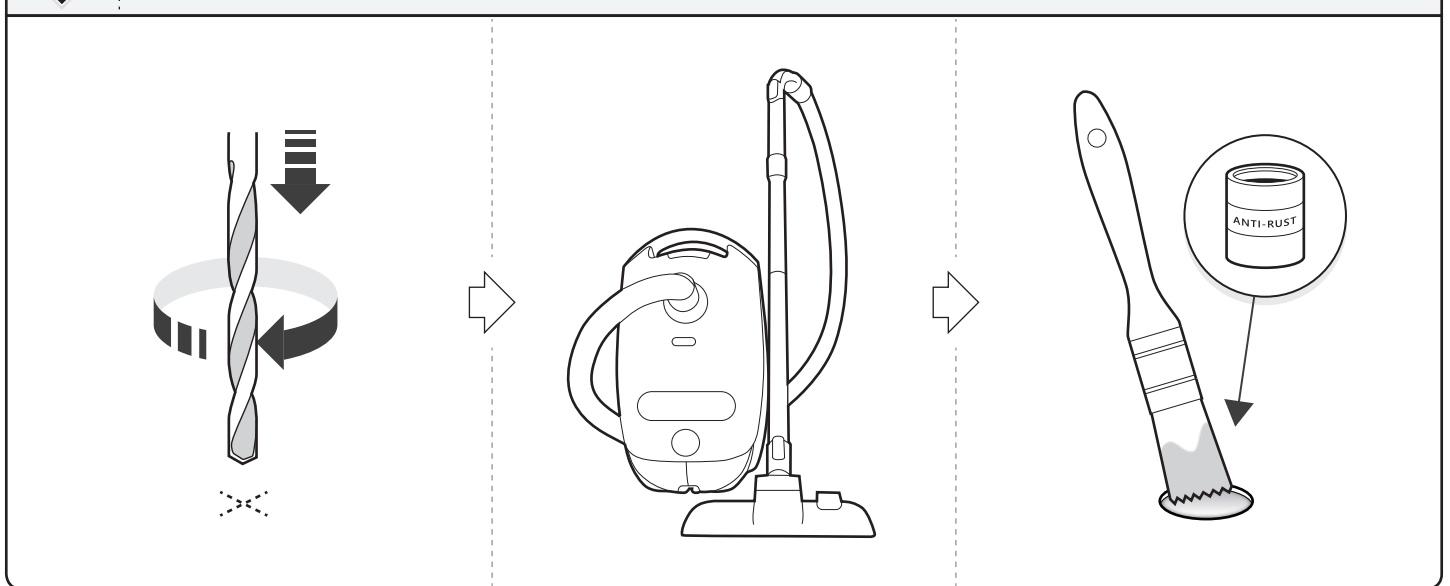



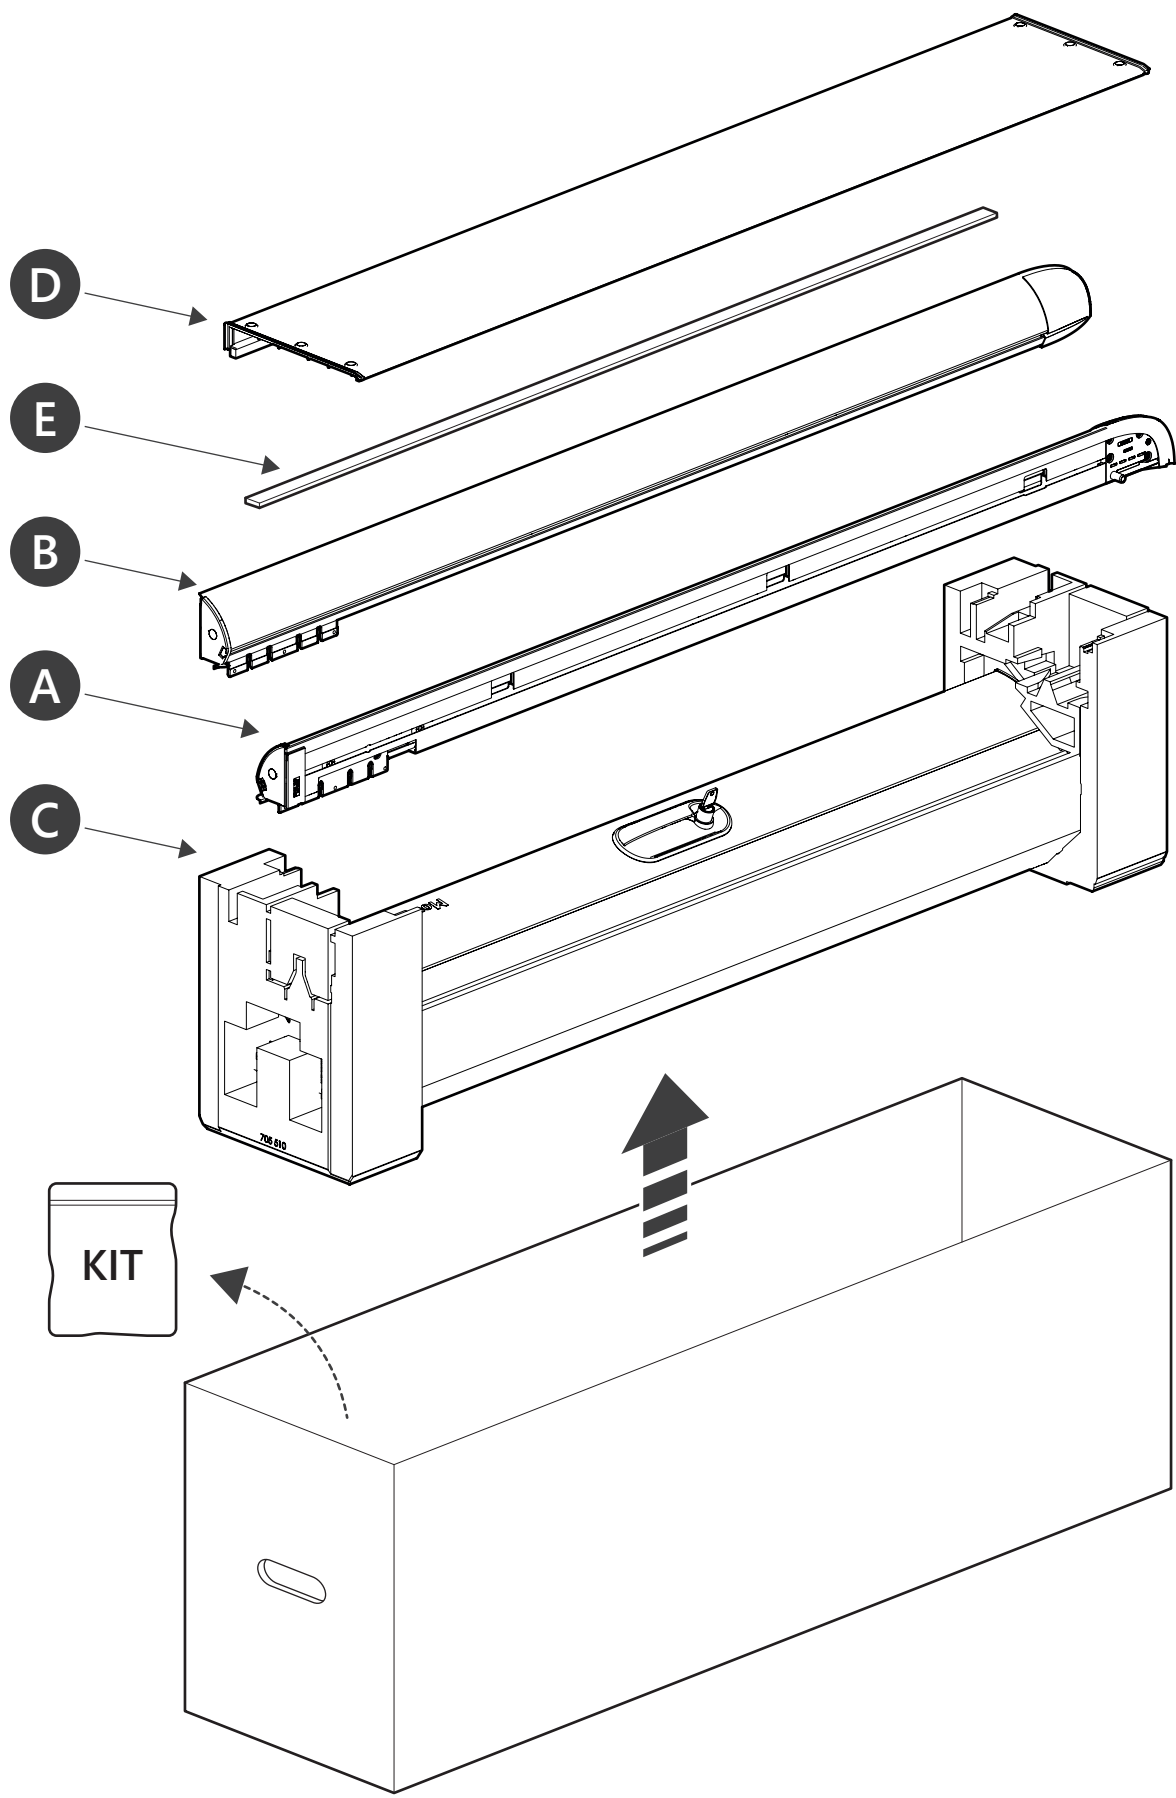





2


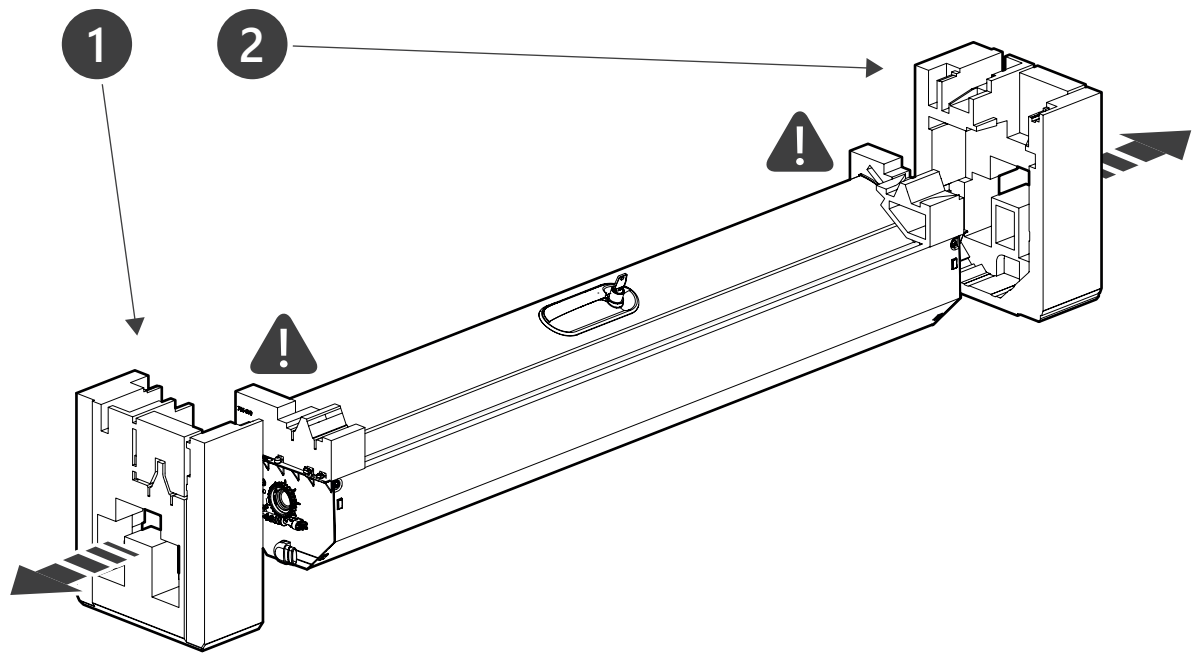


3


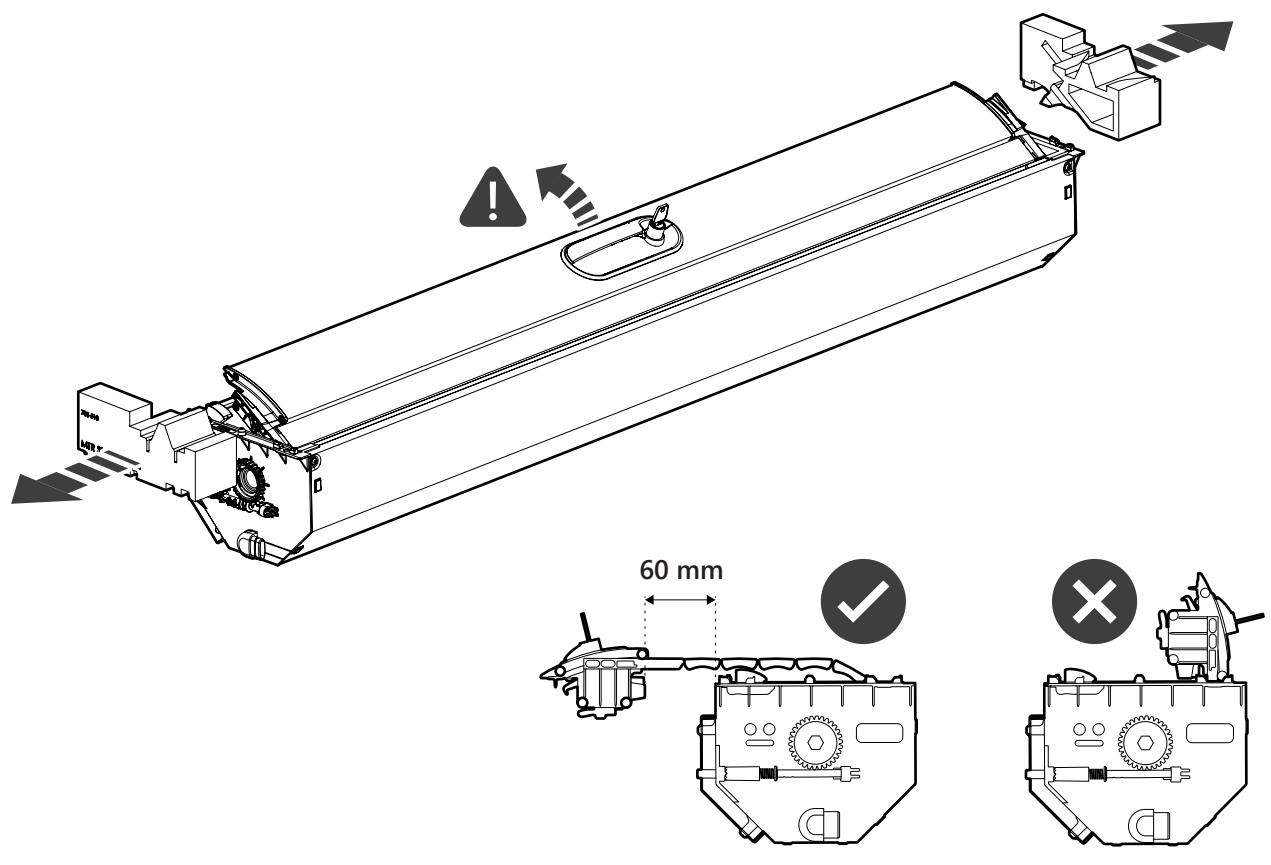


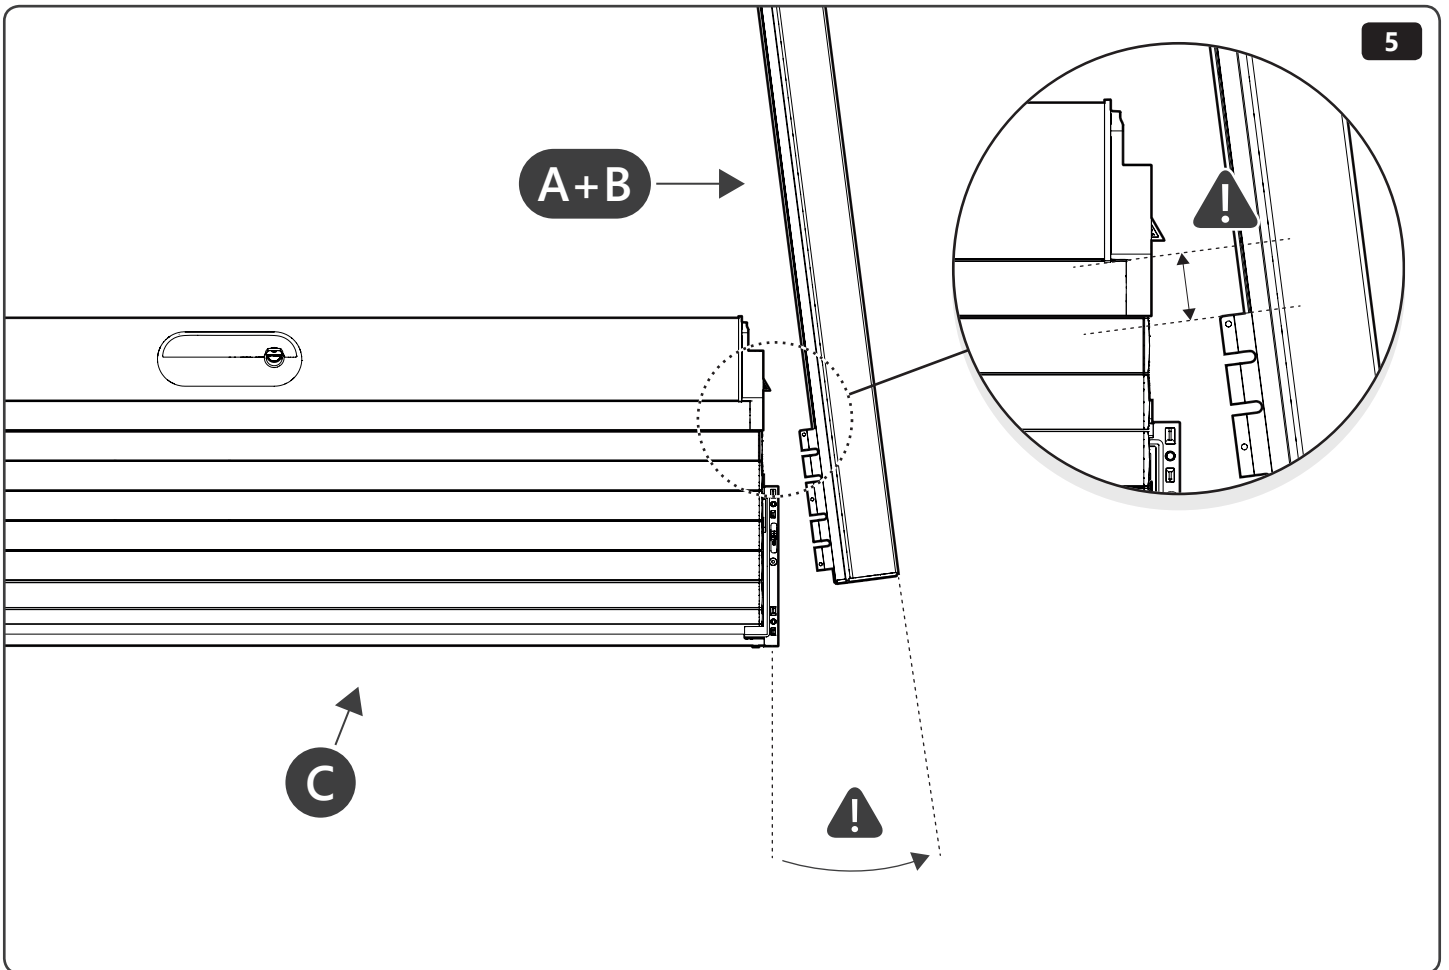
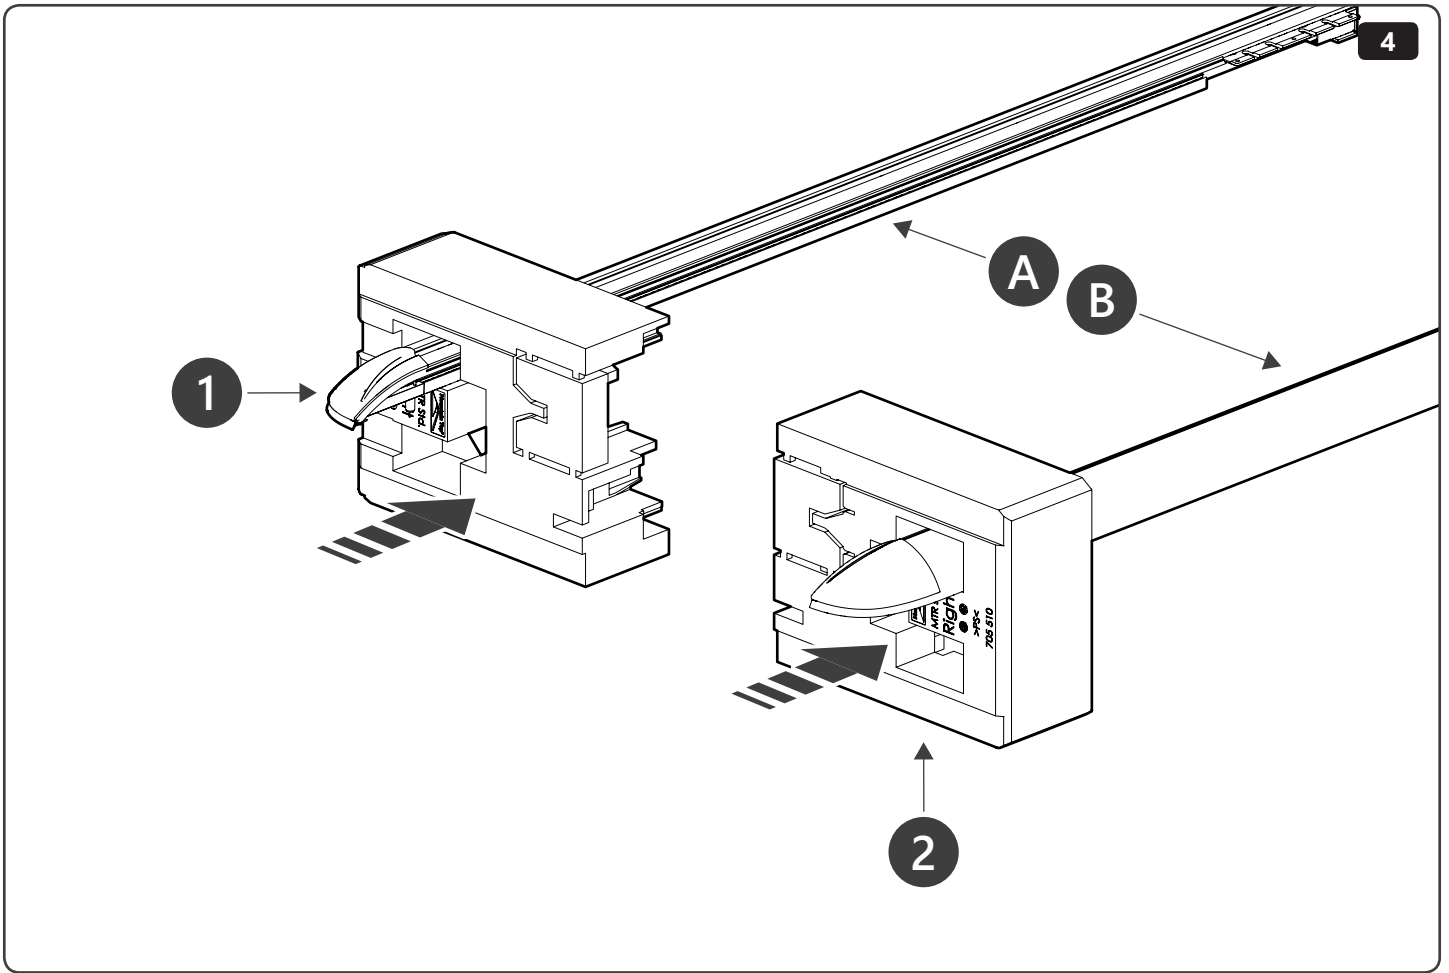


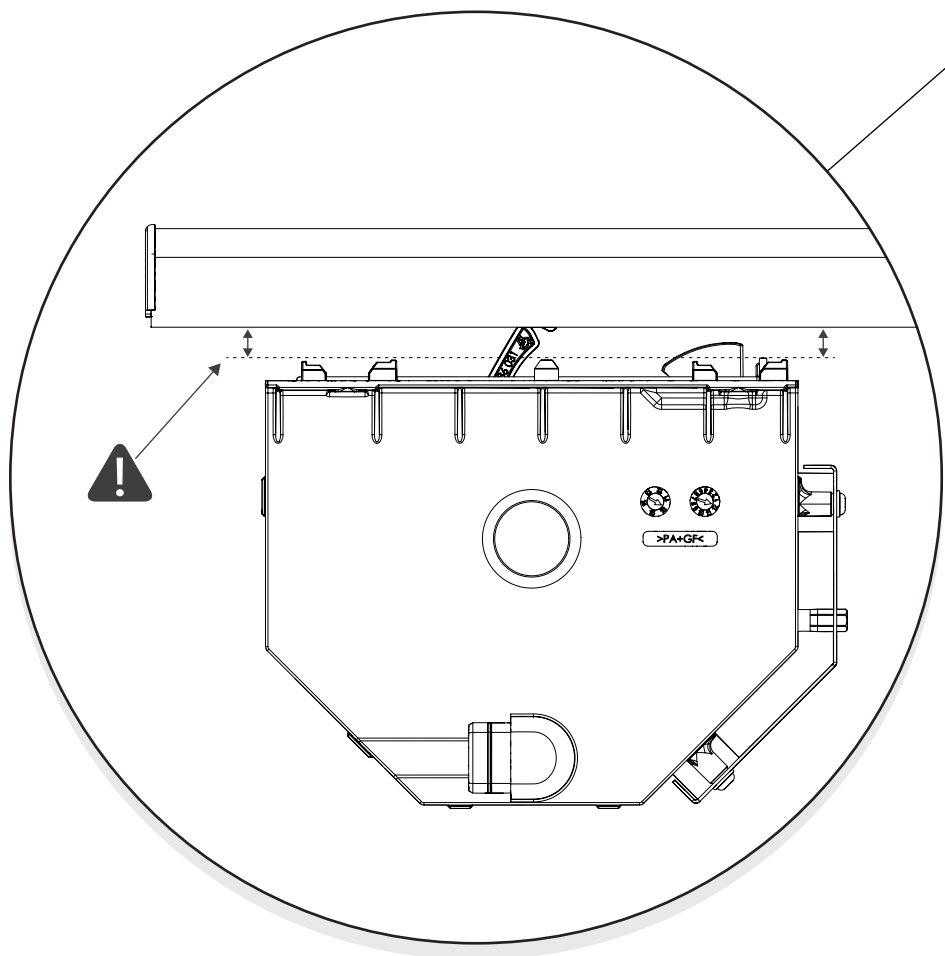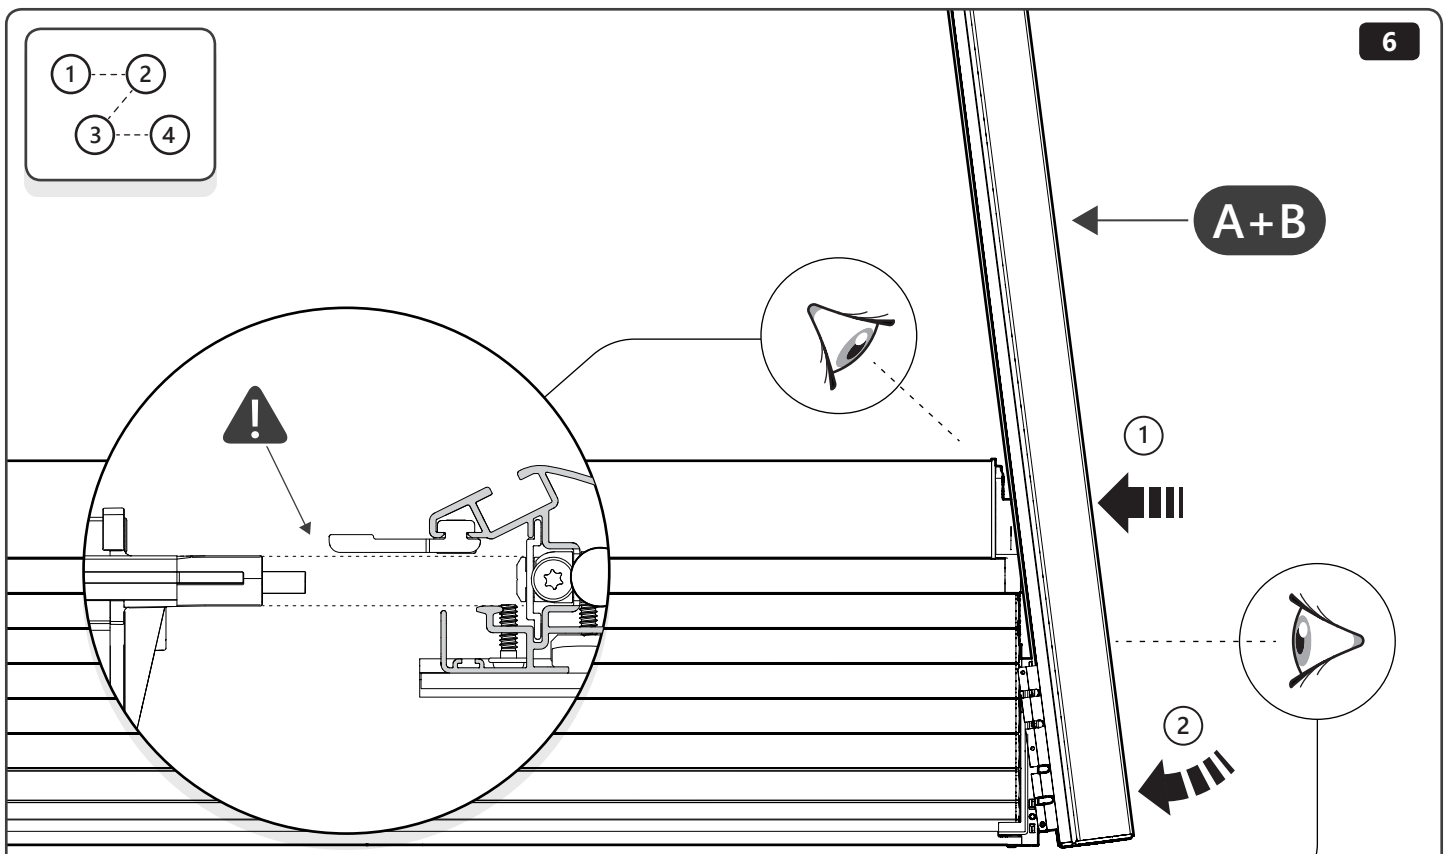
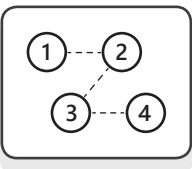


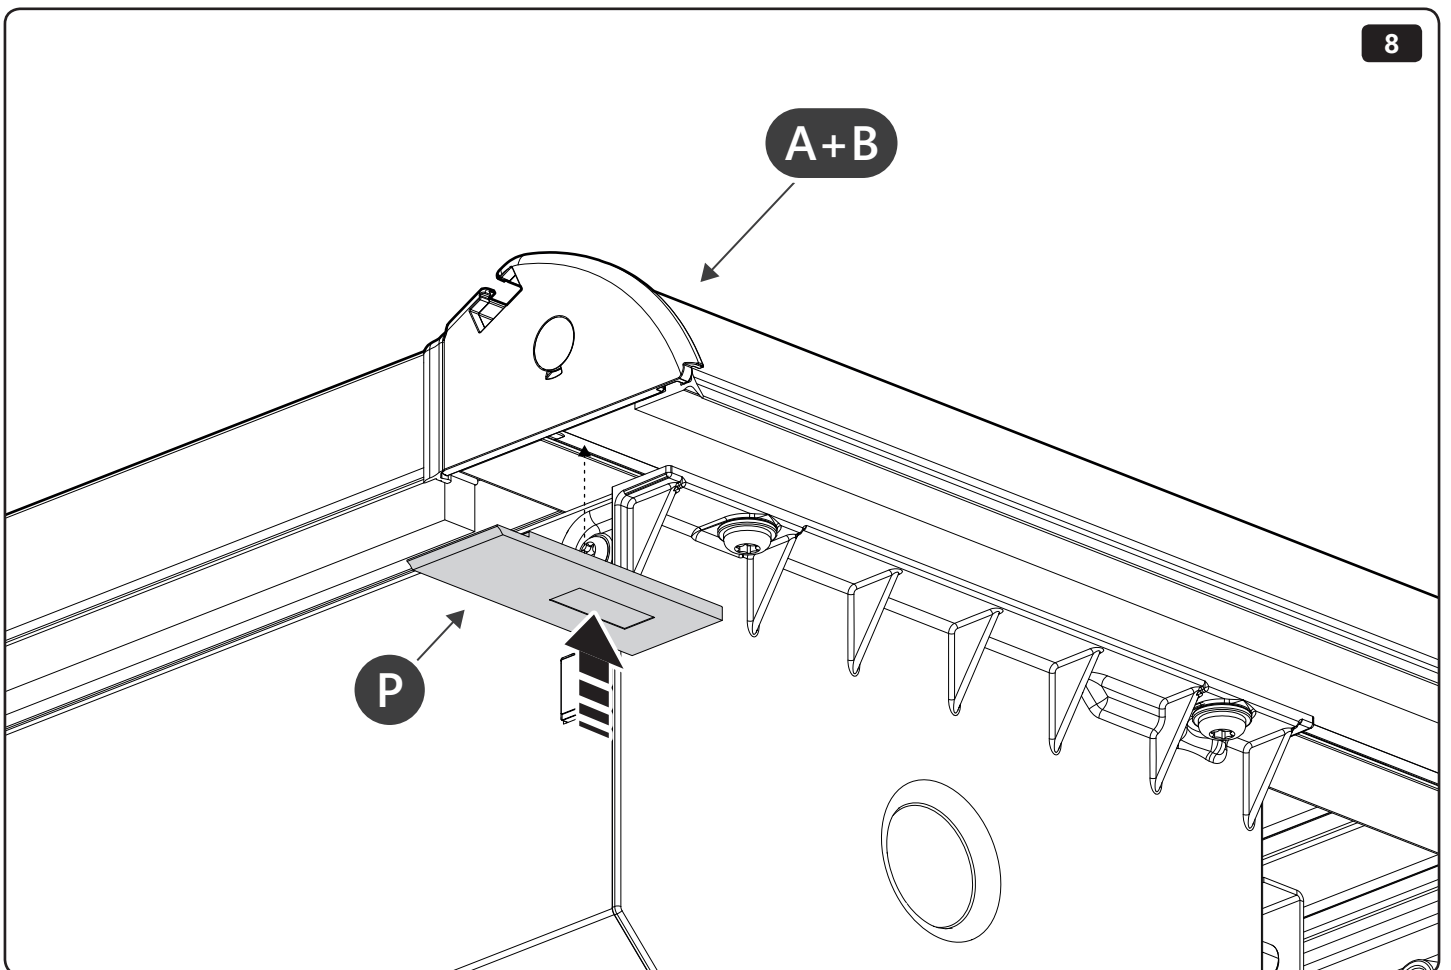
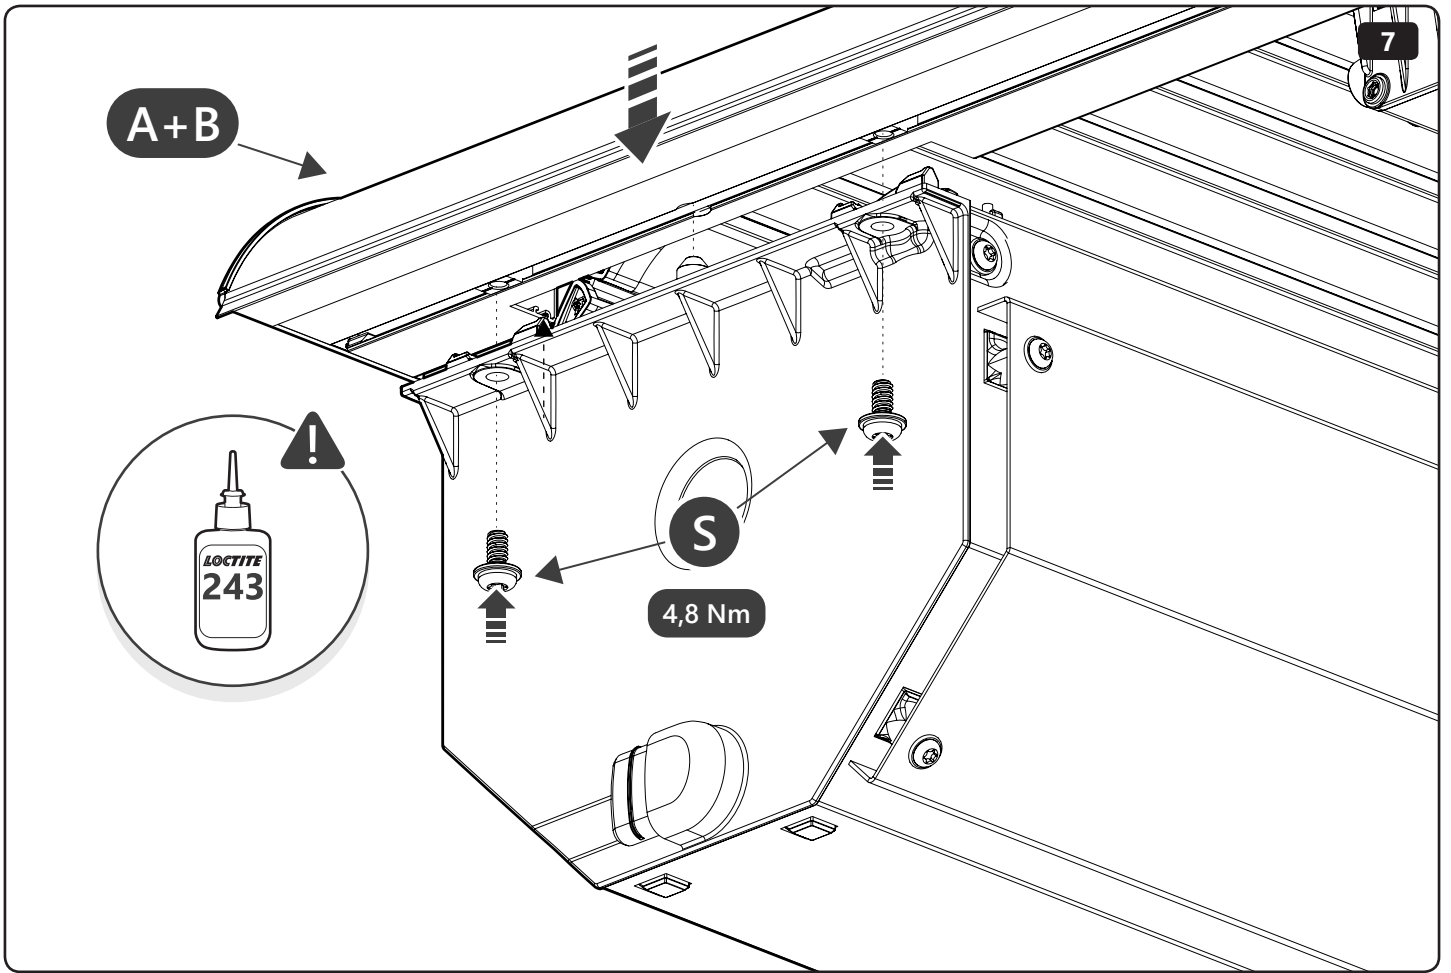






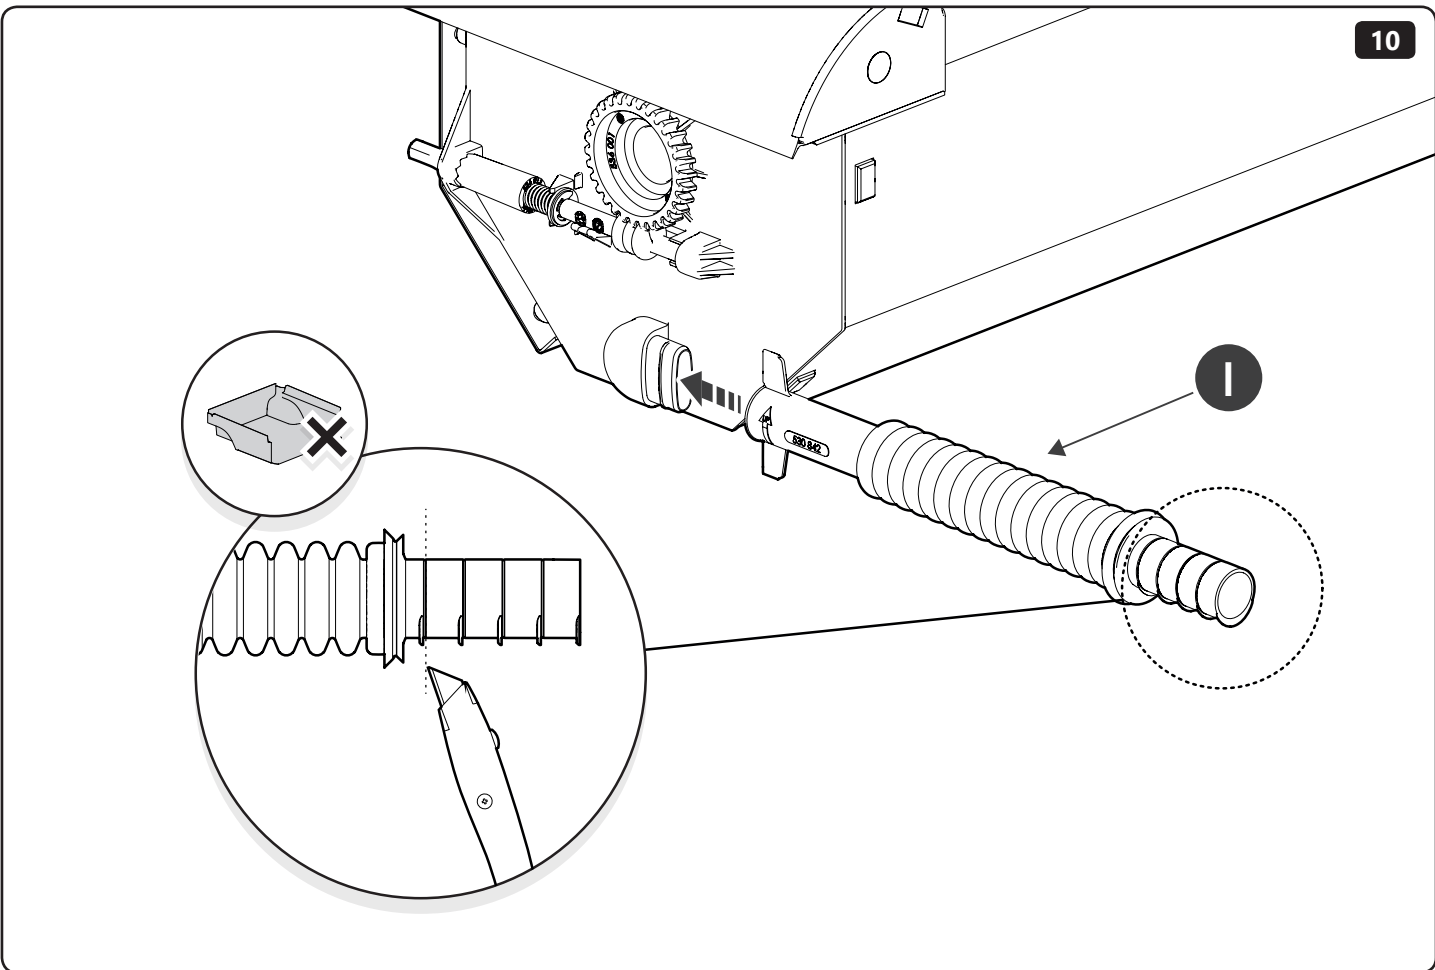
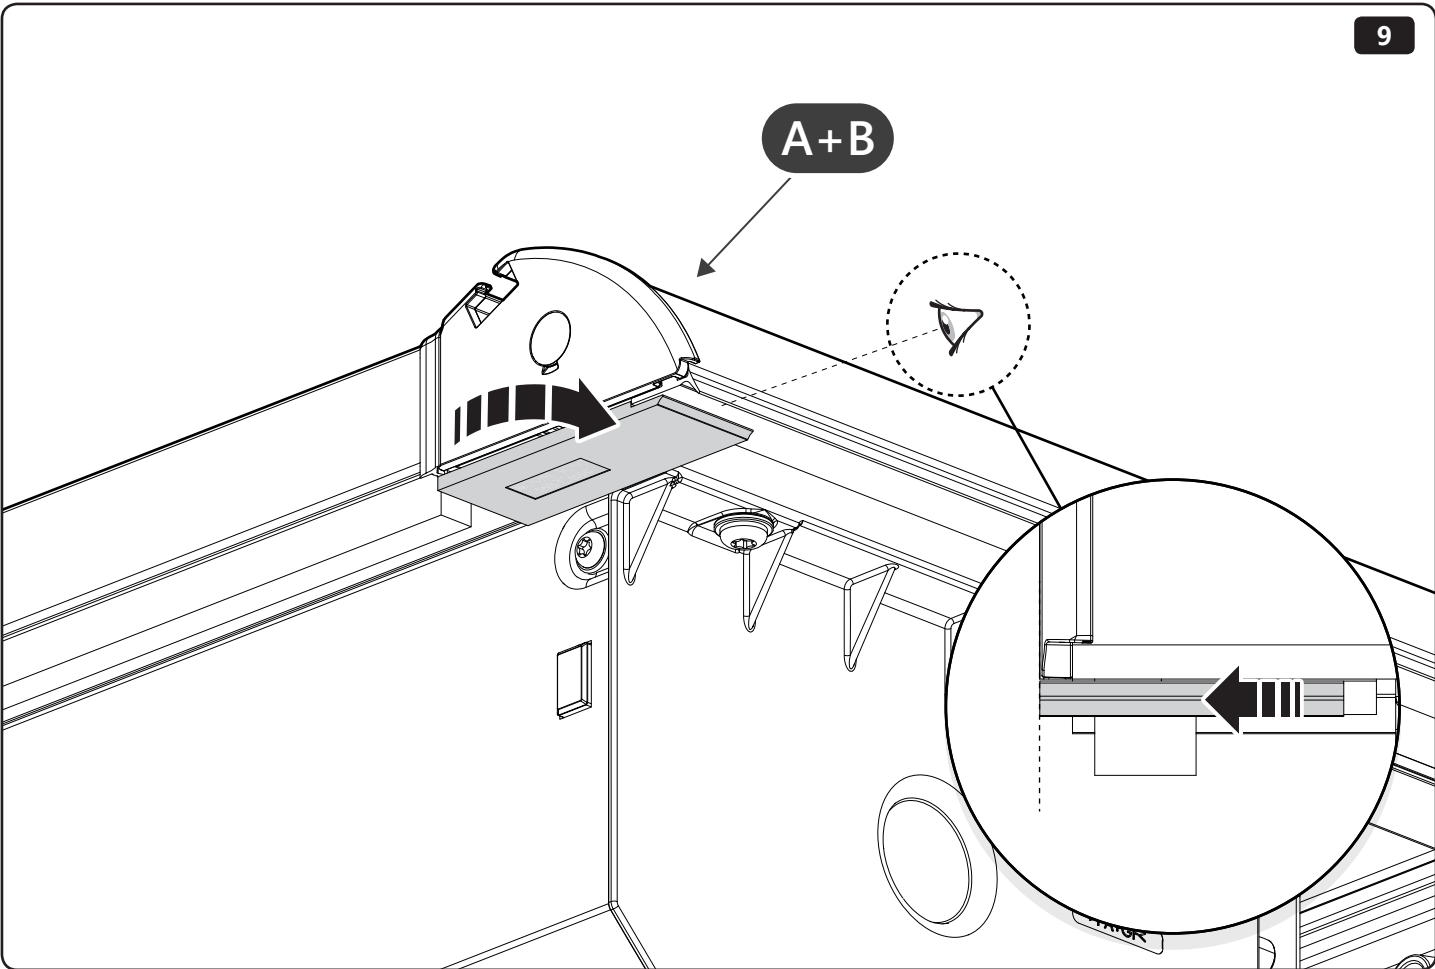


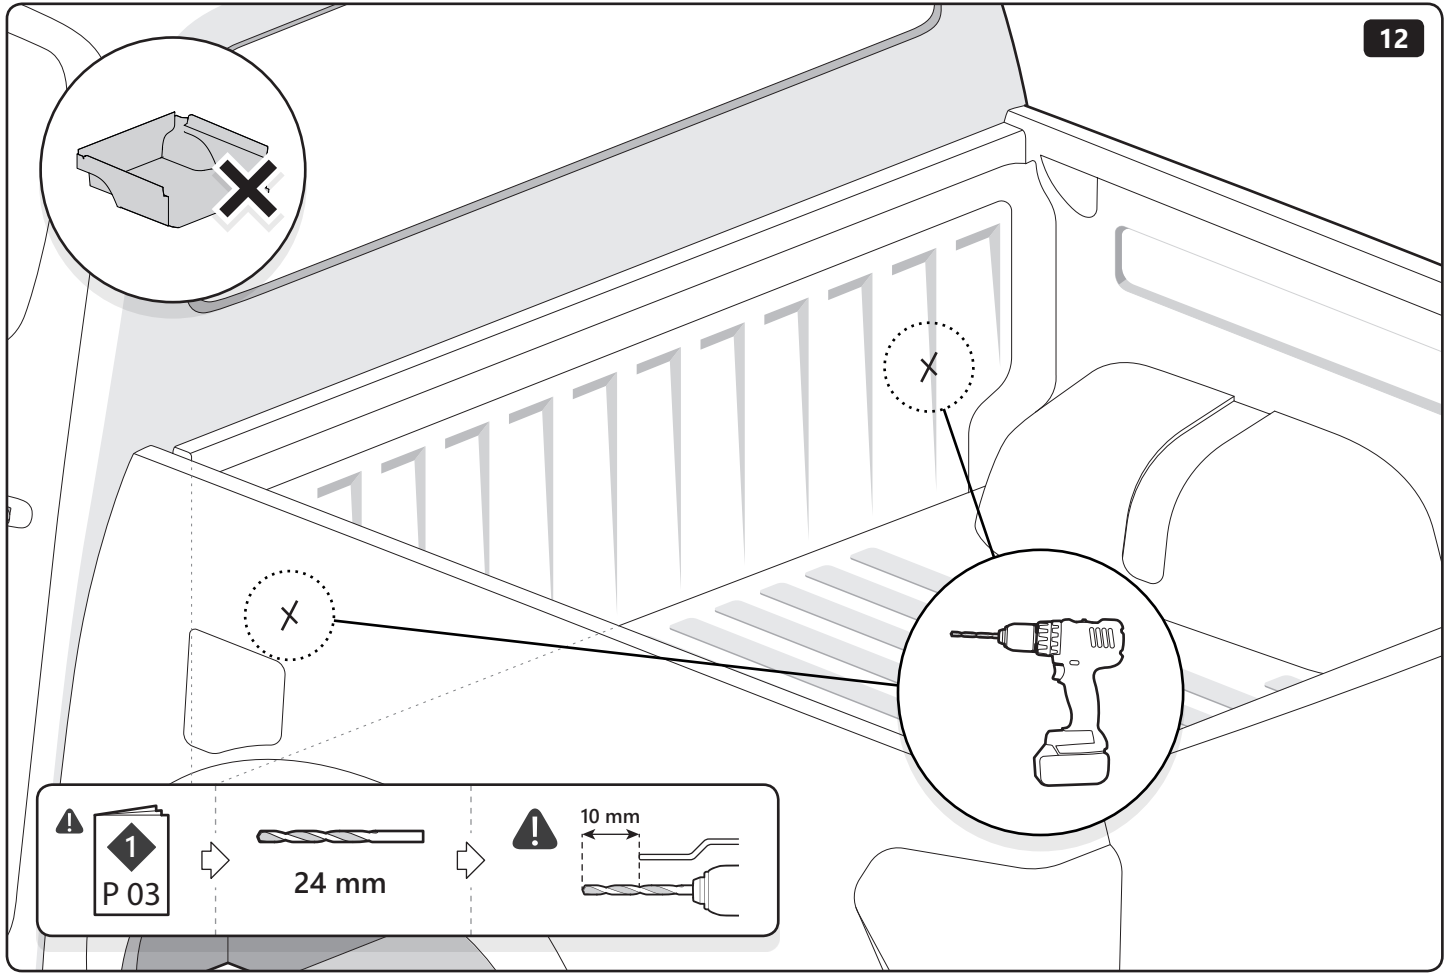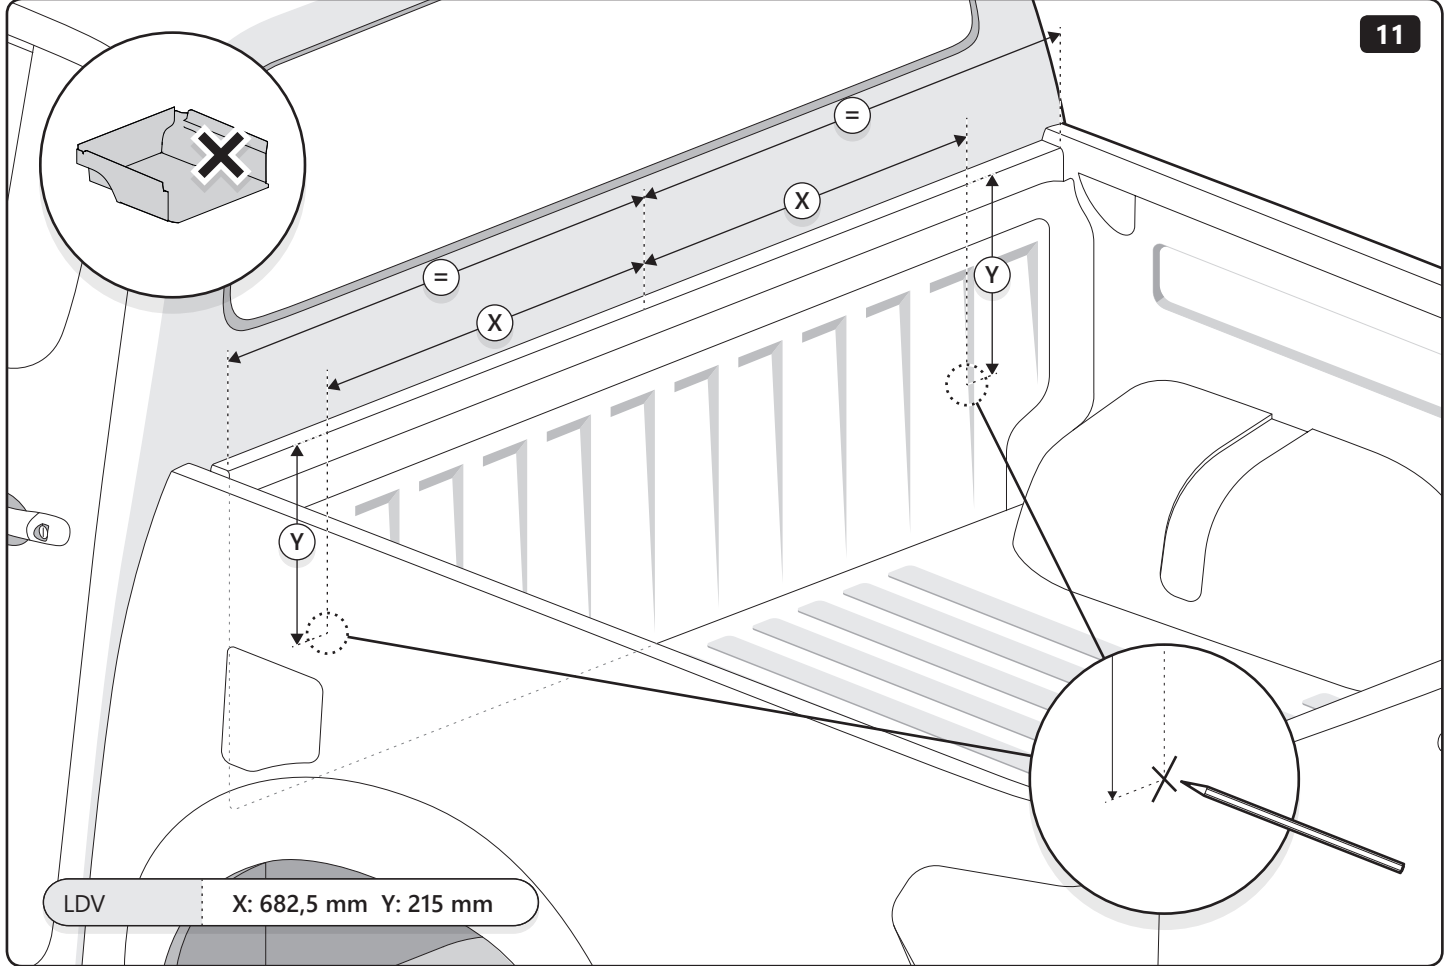

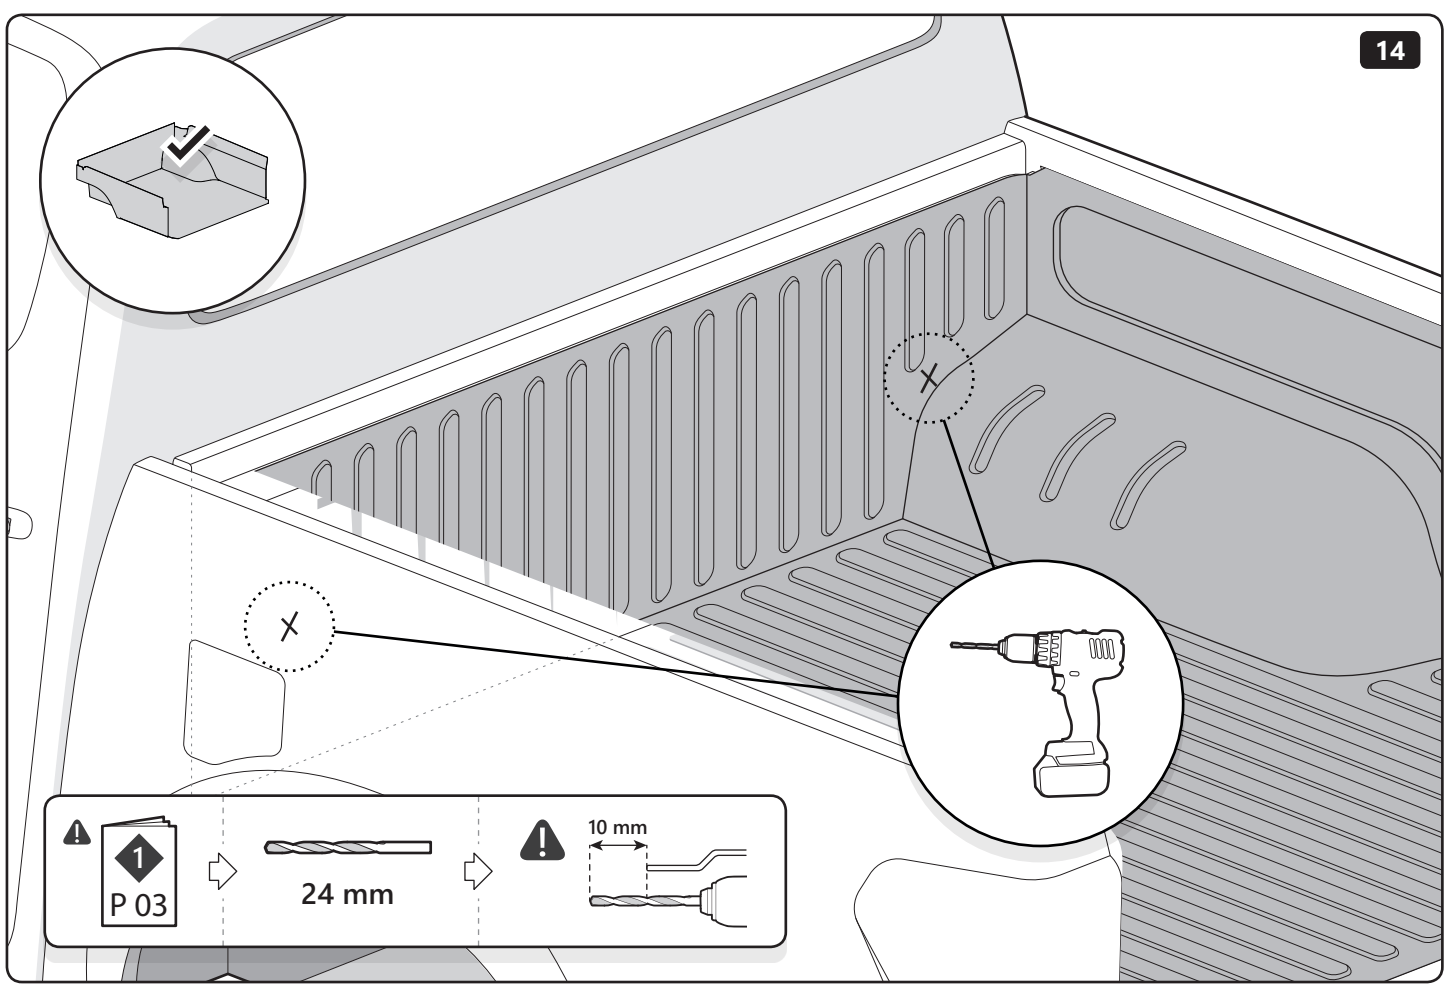
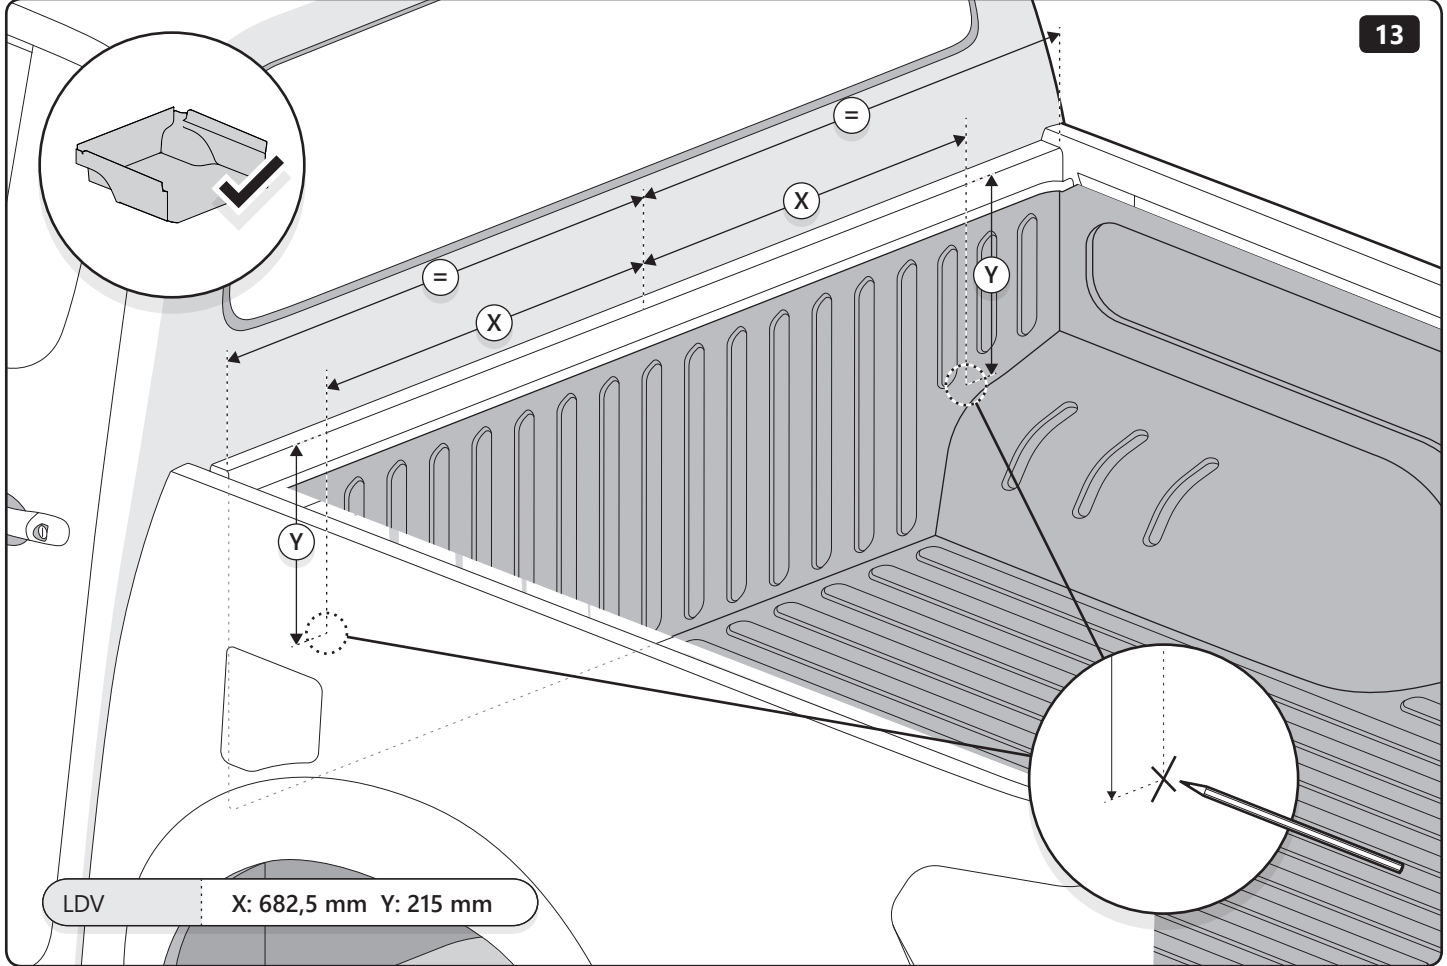


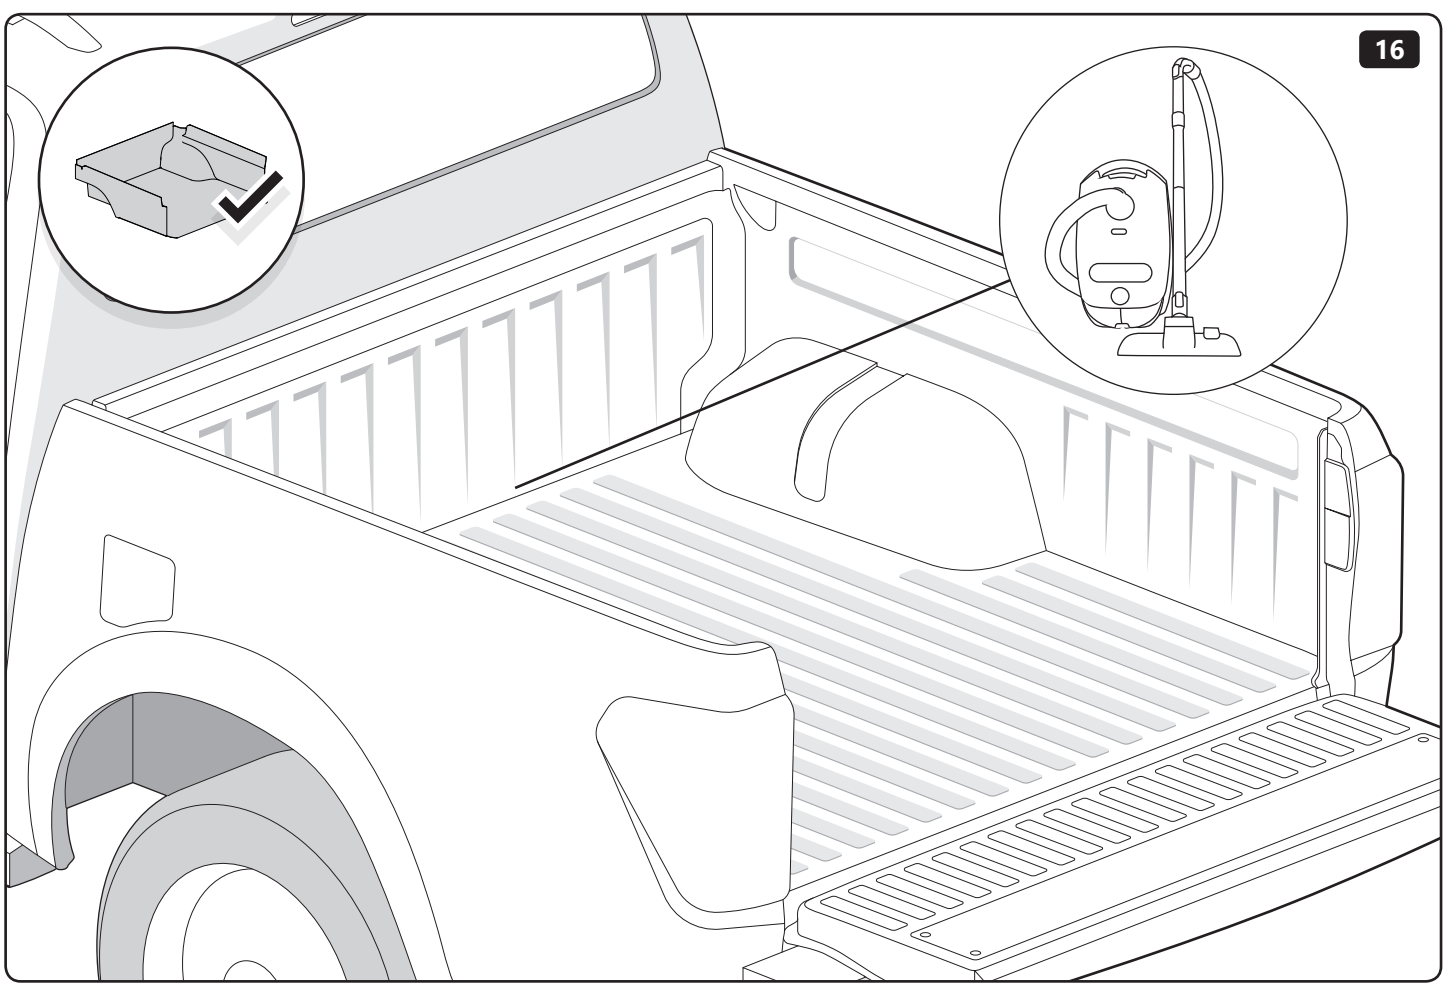
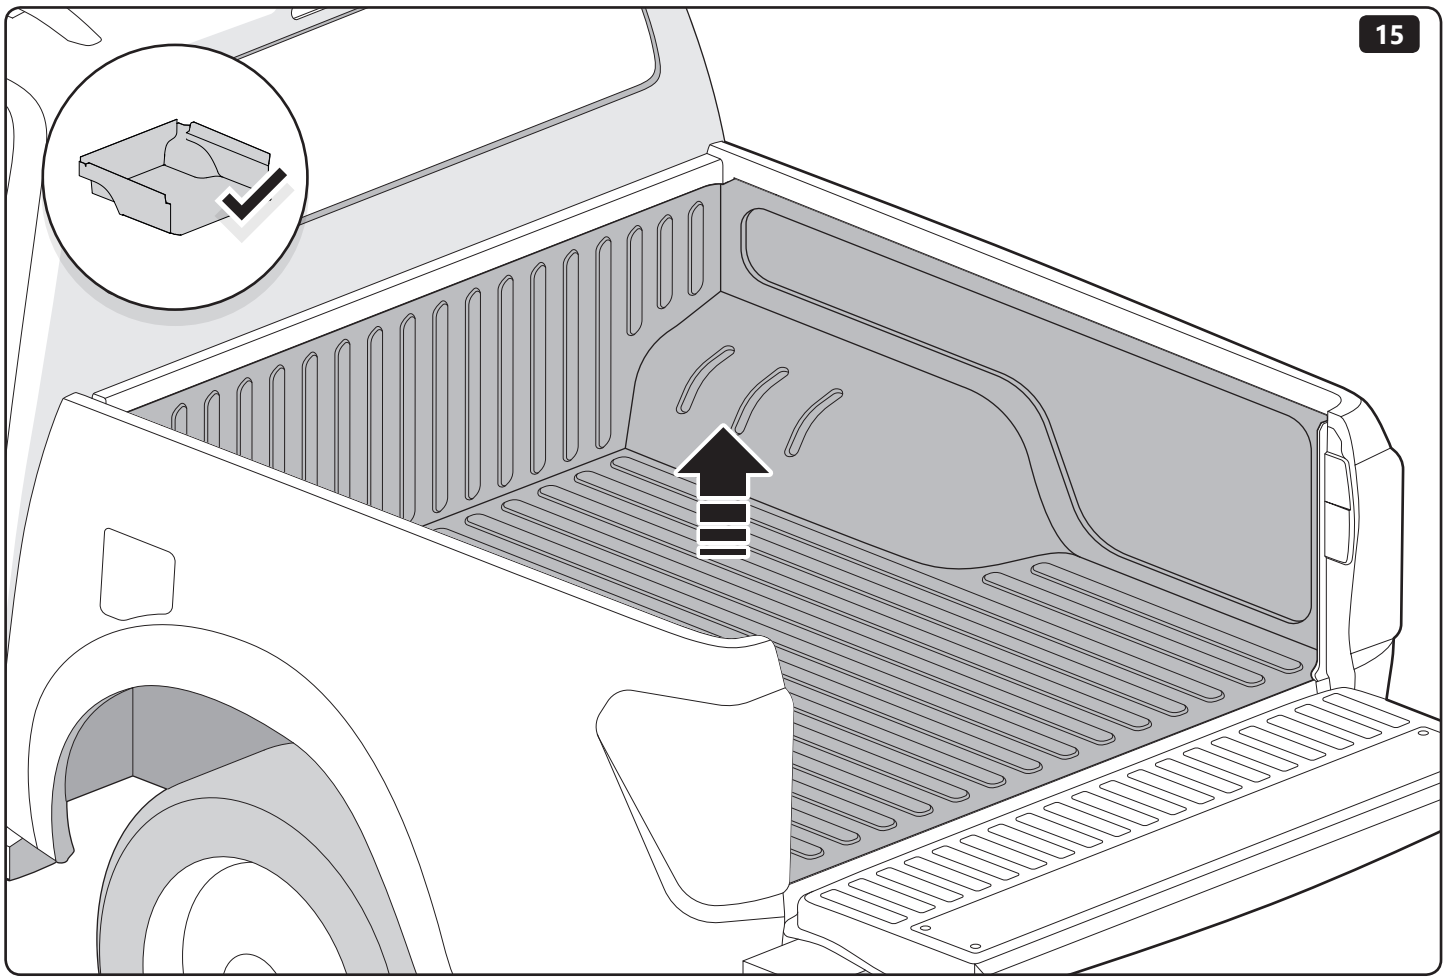


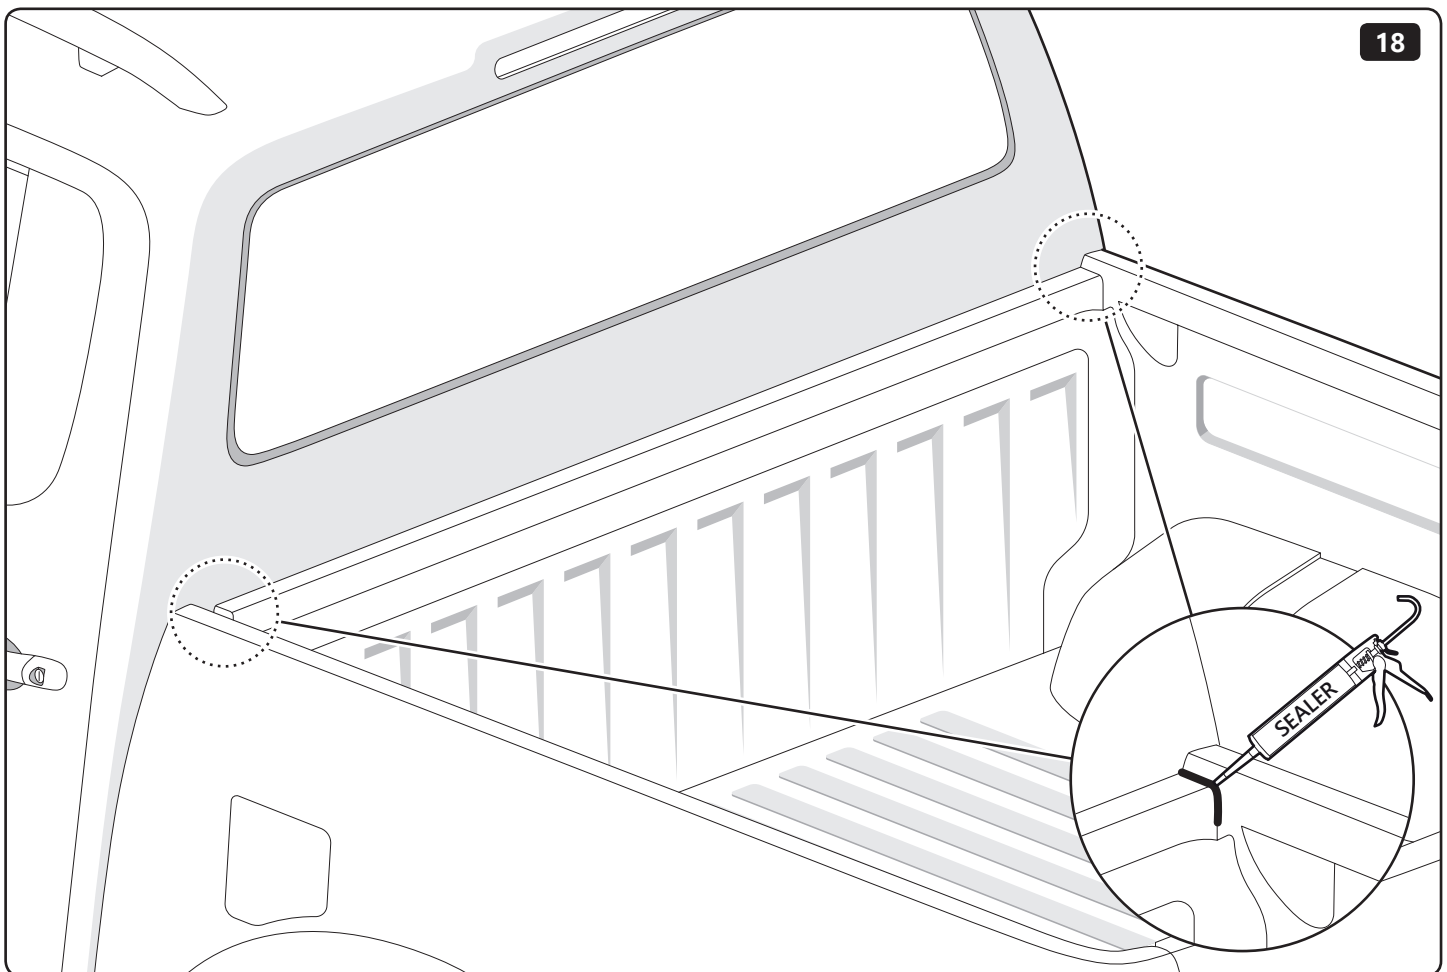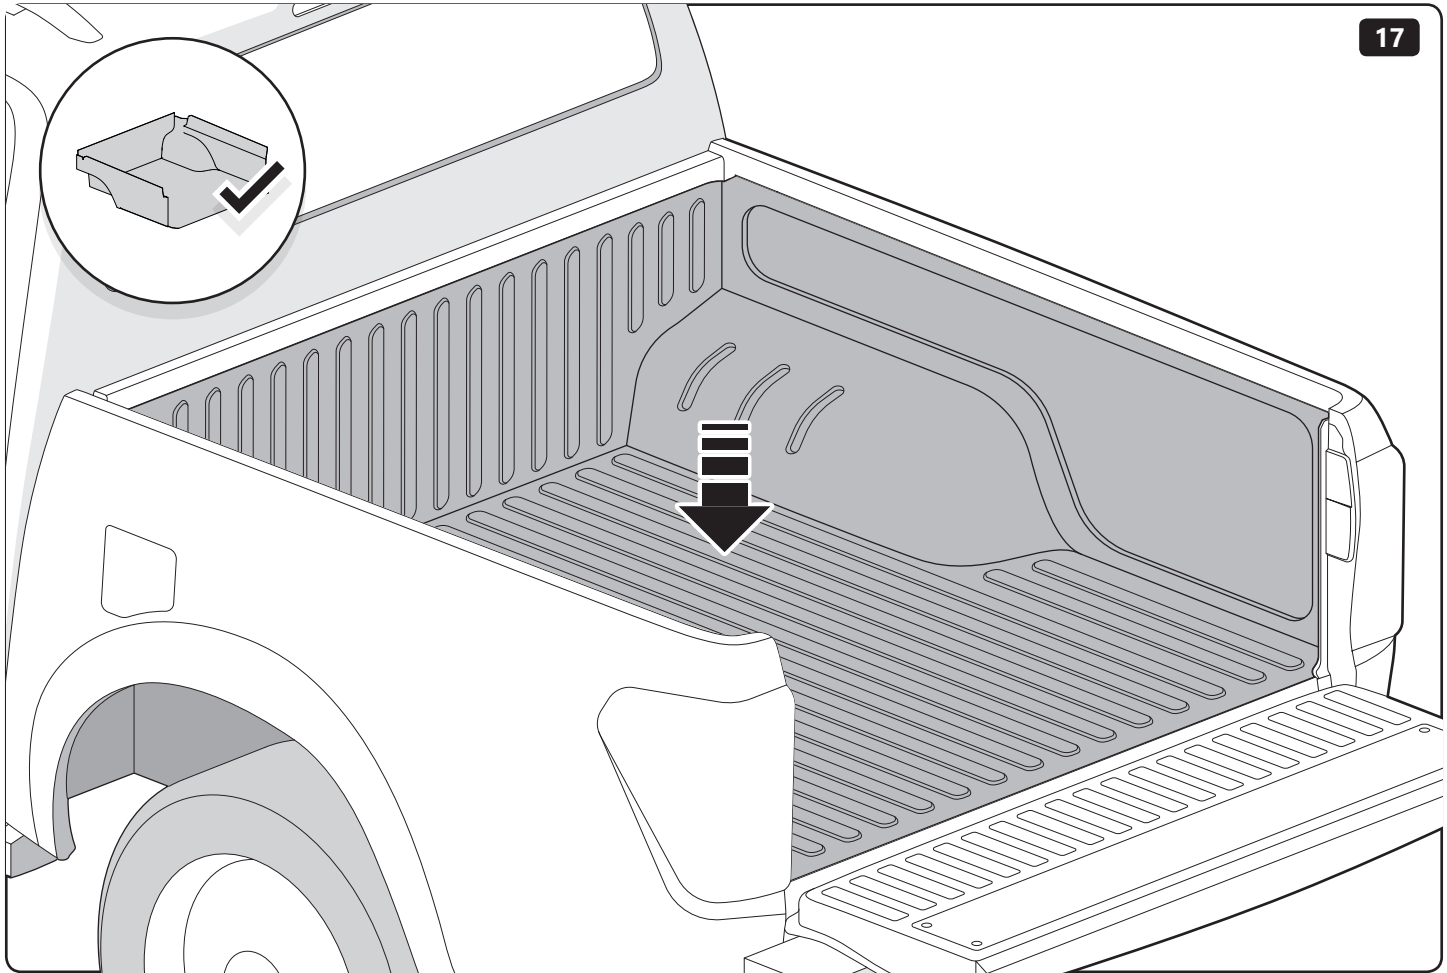

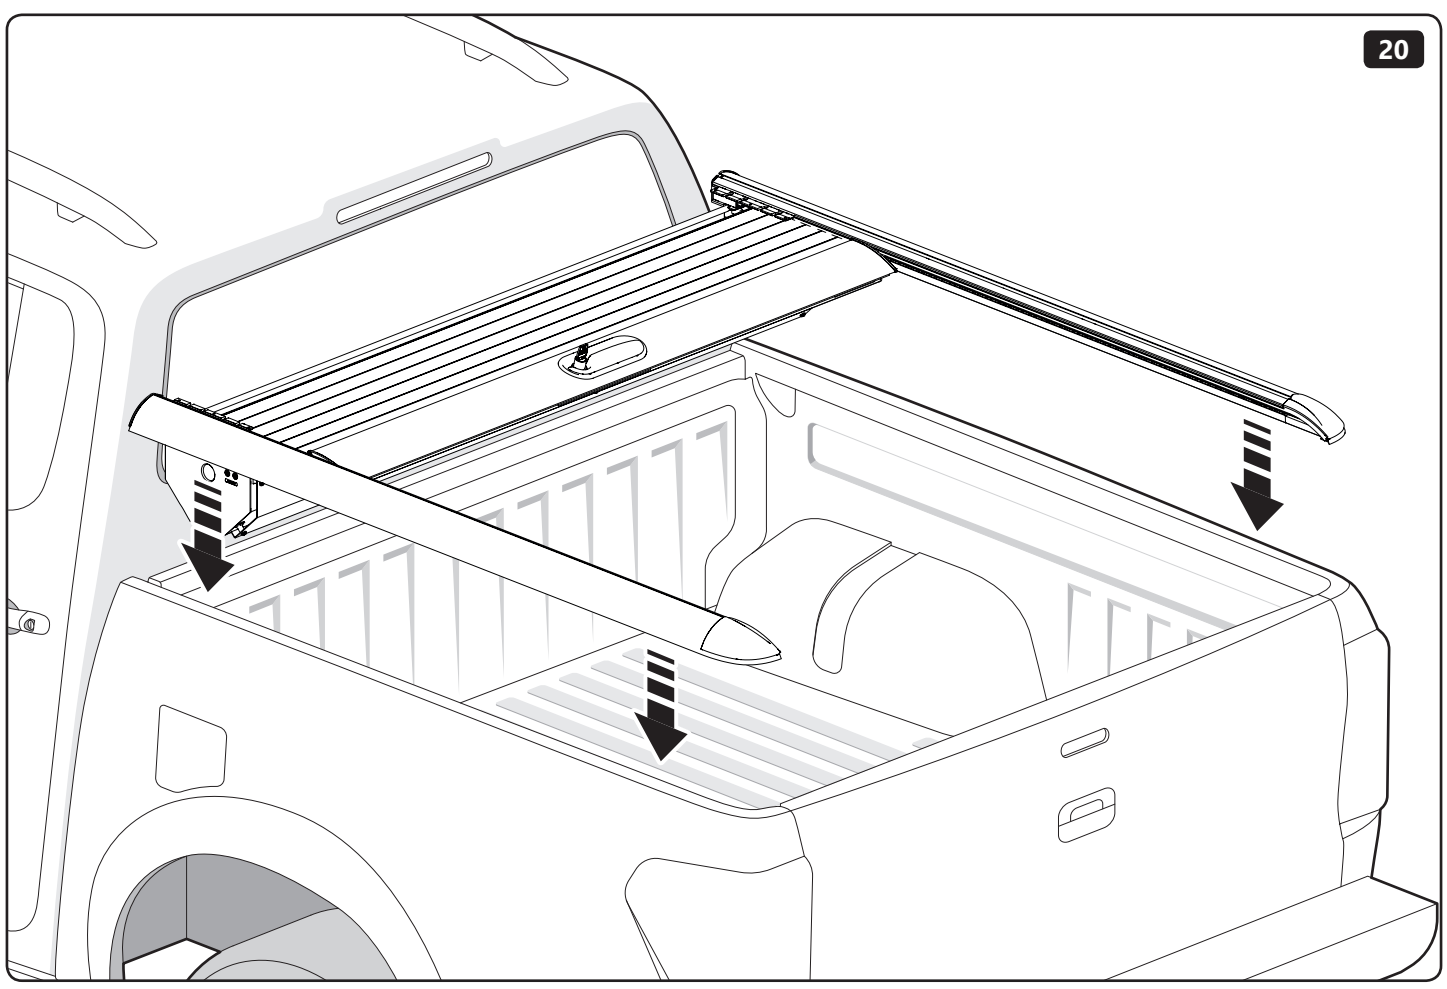
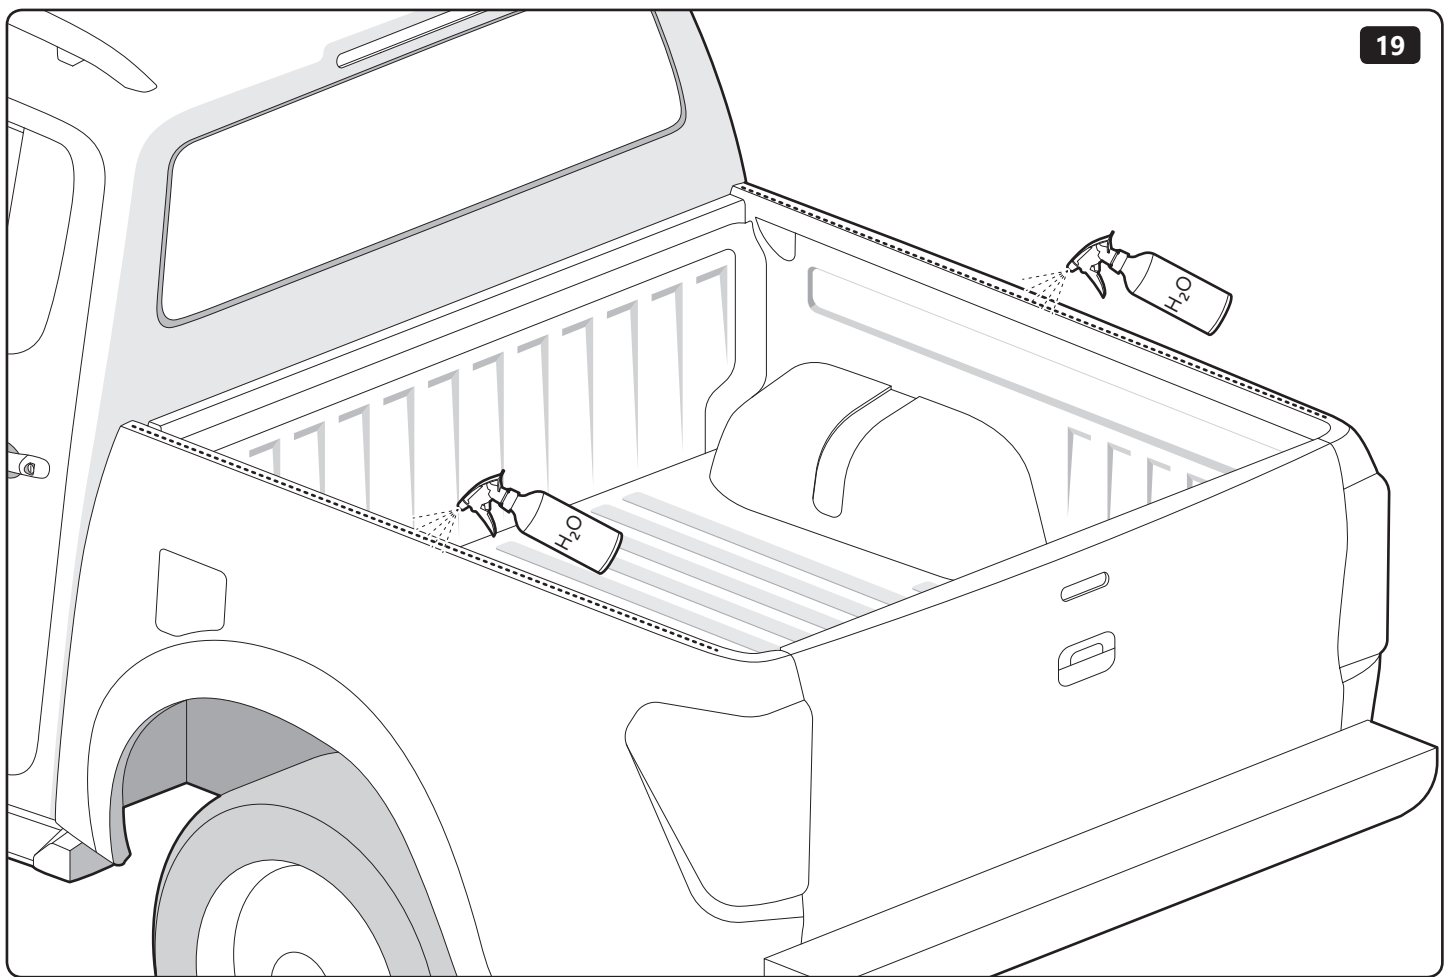






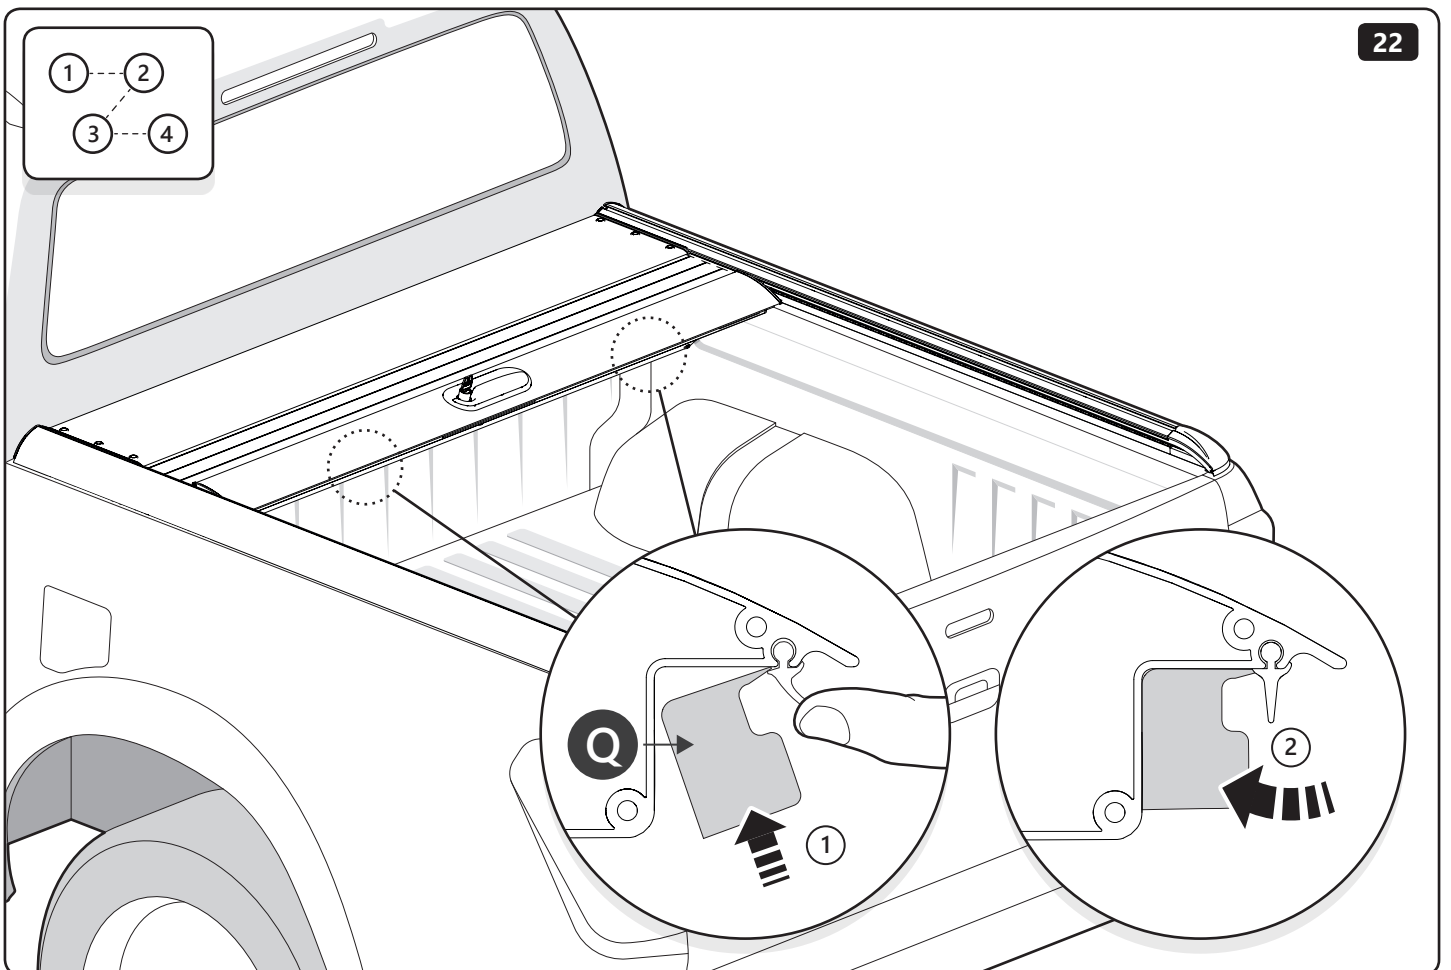
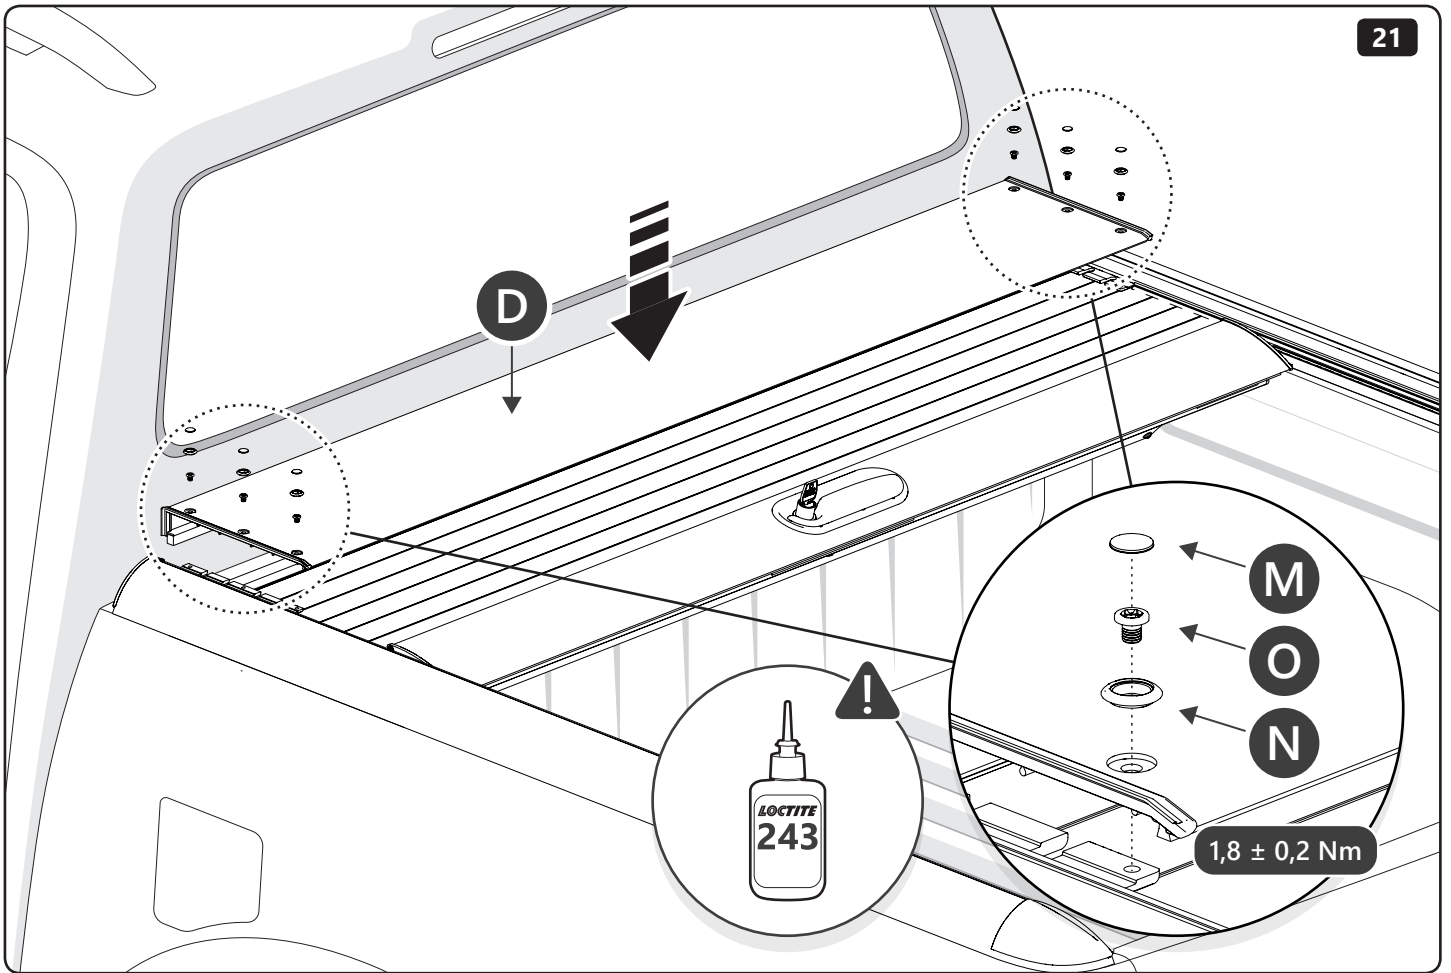


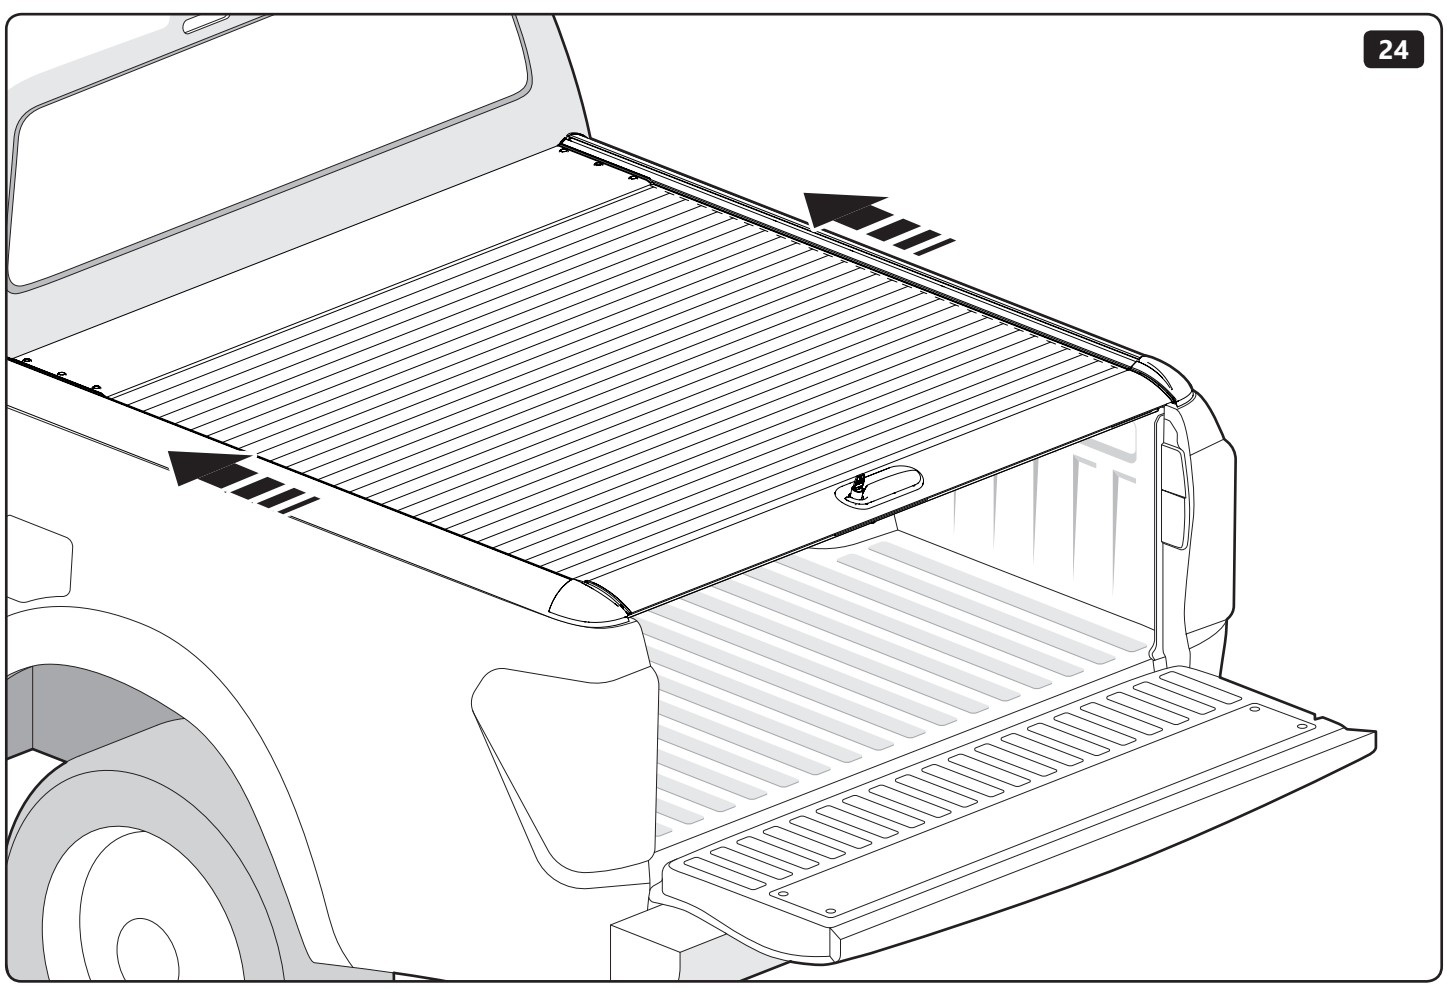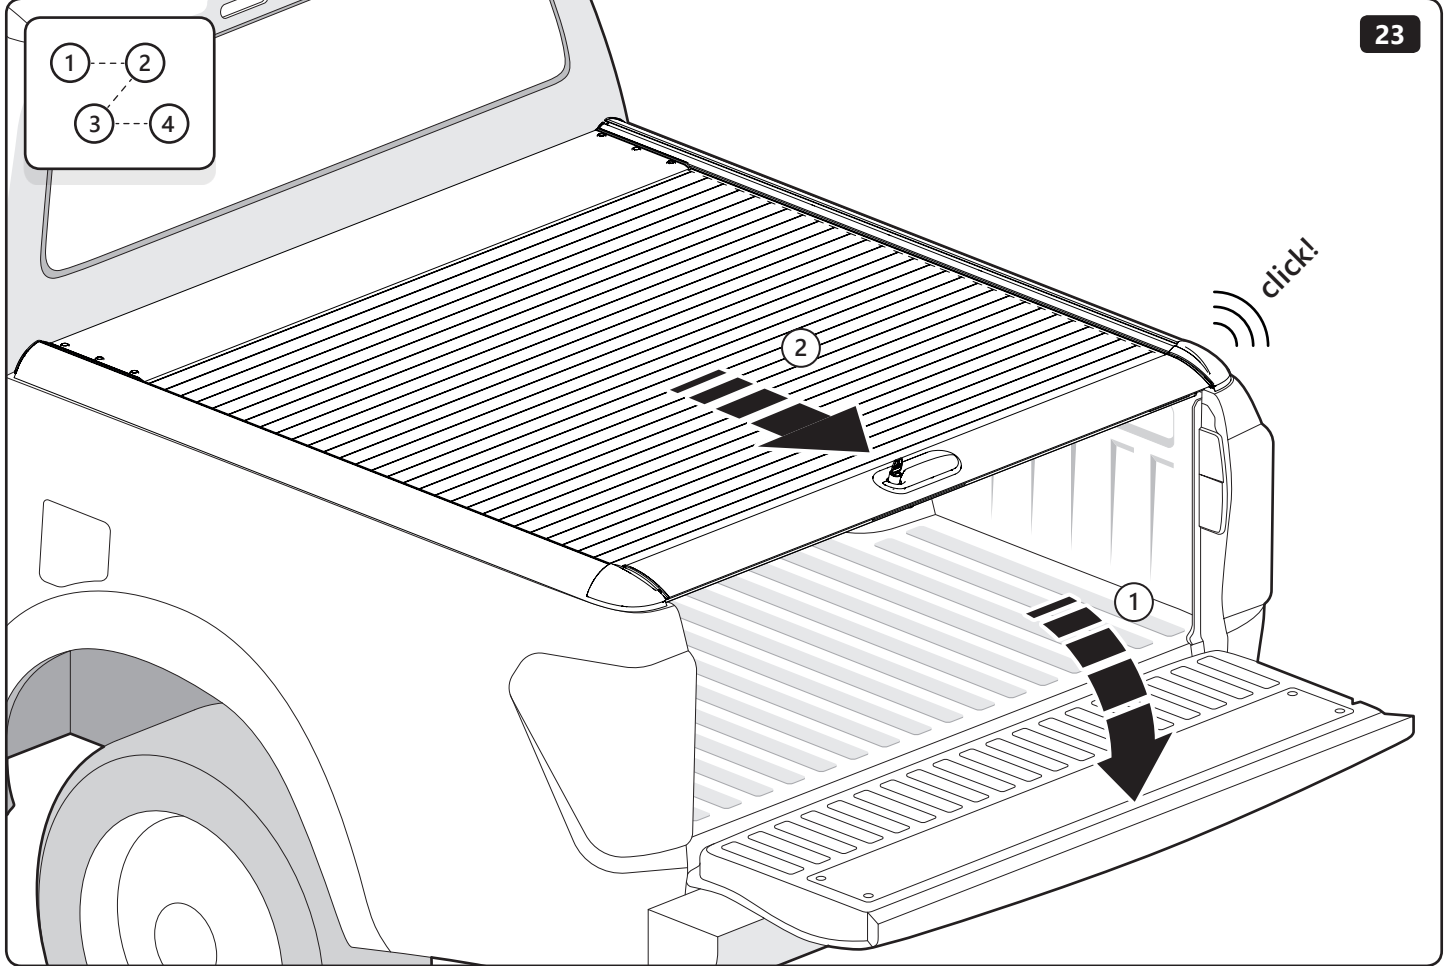




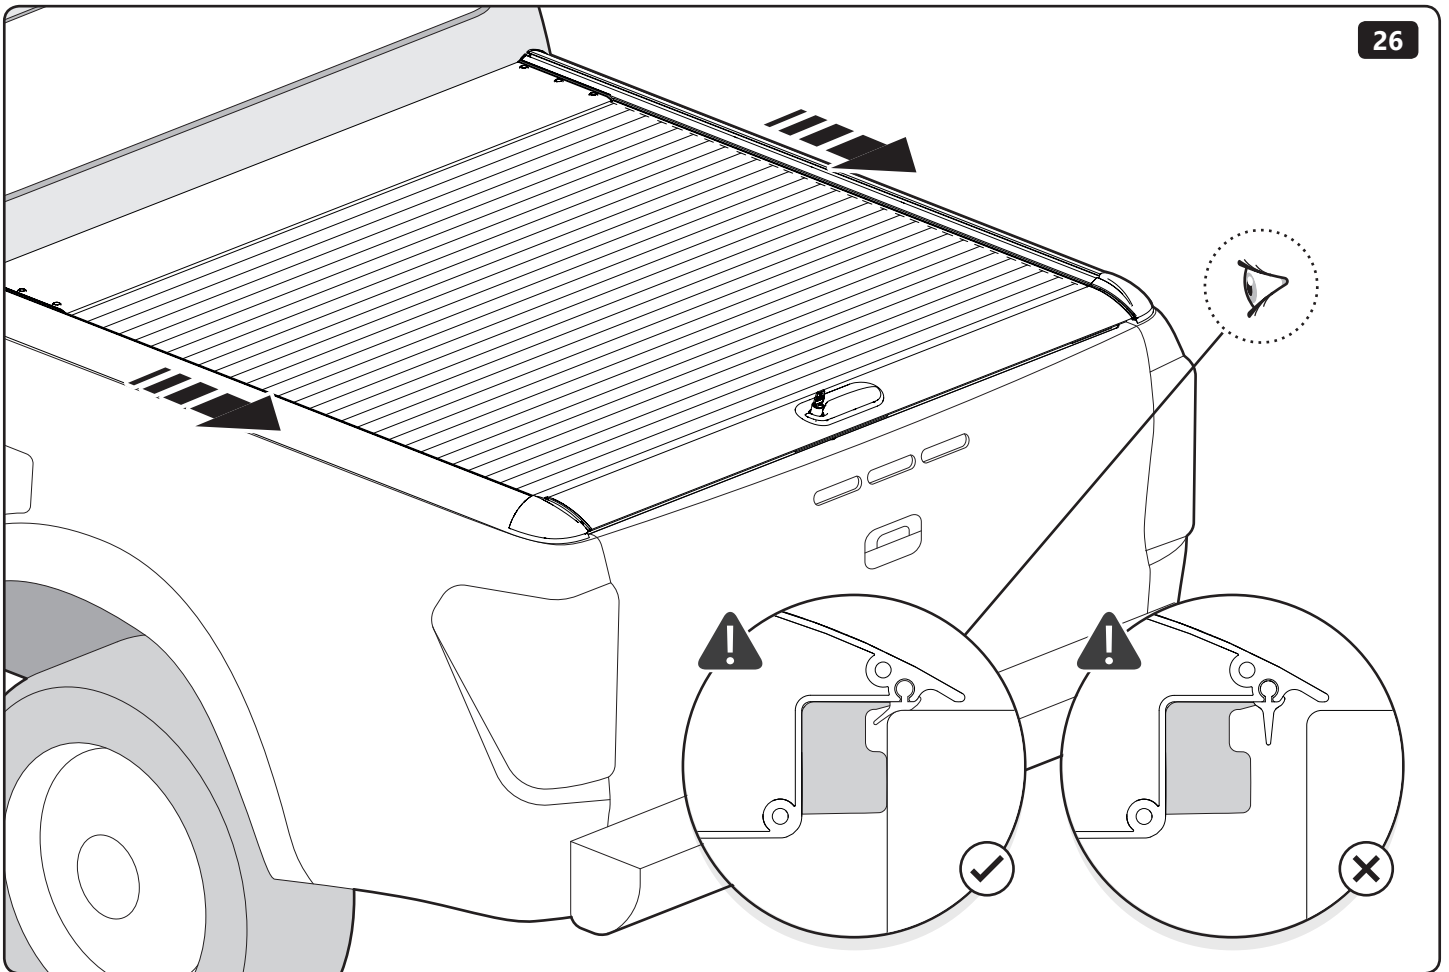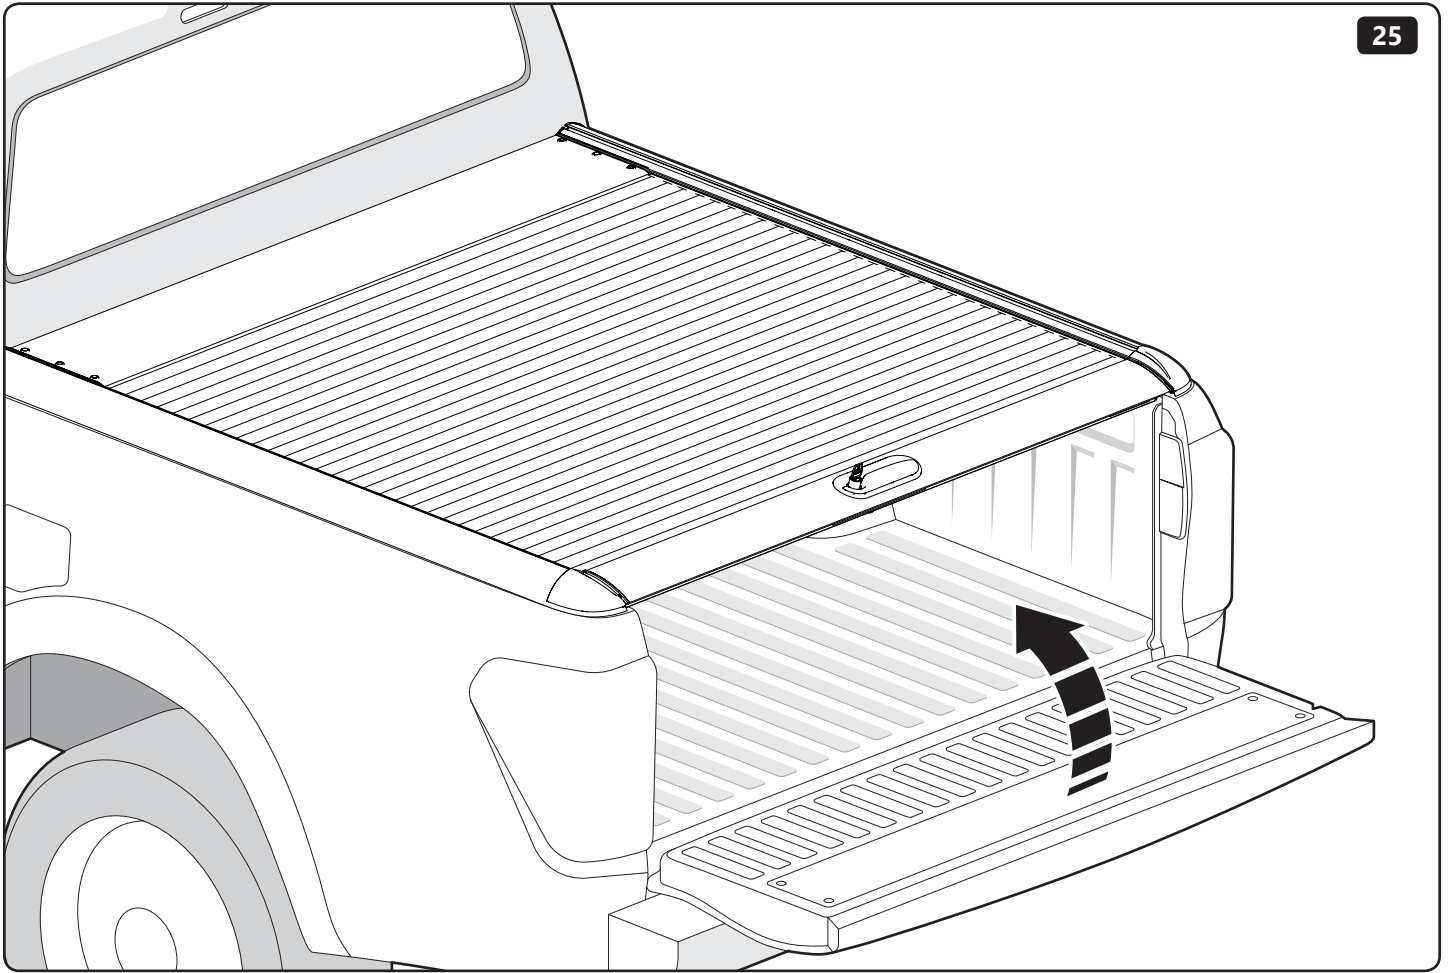


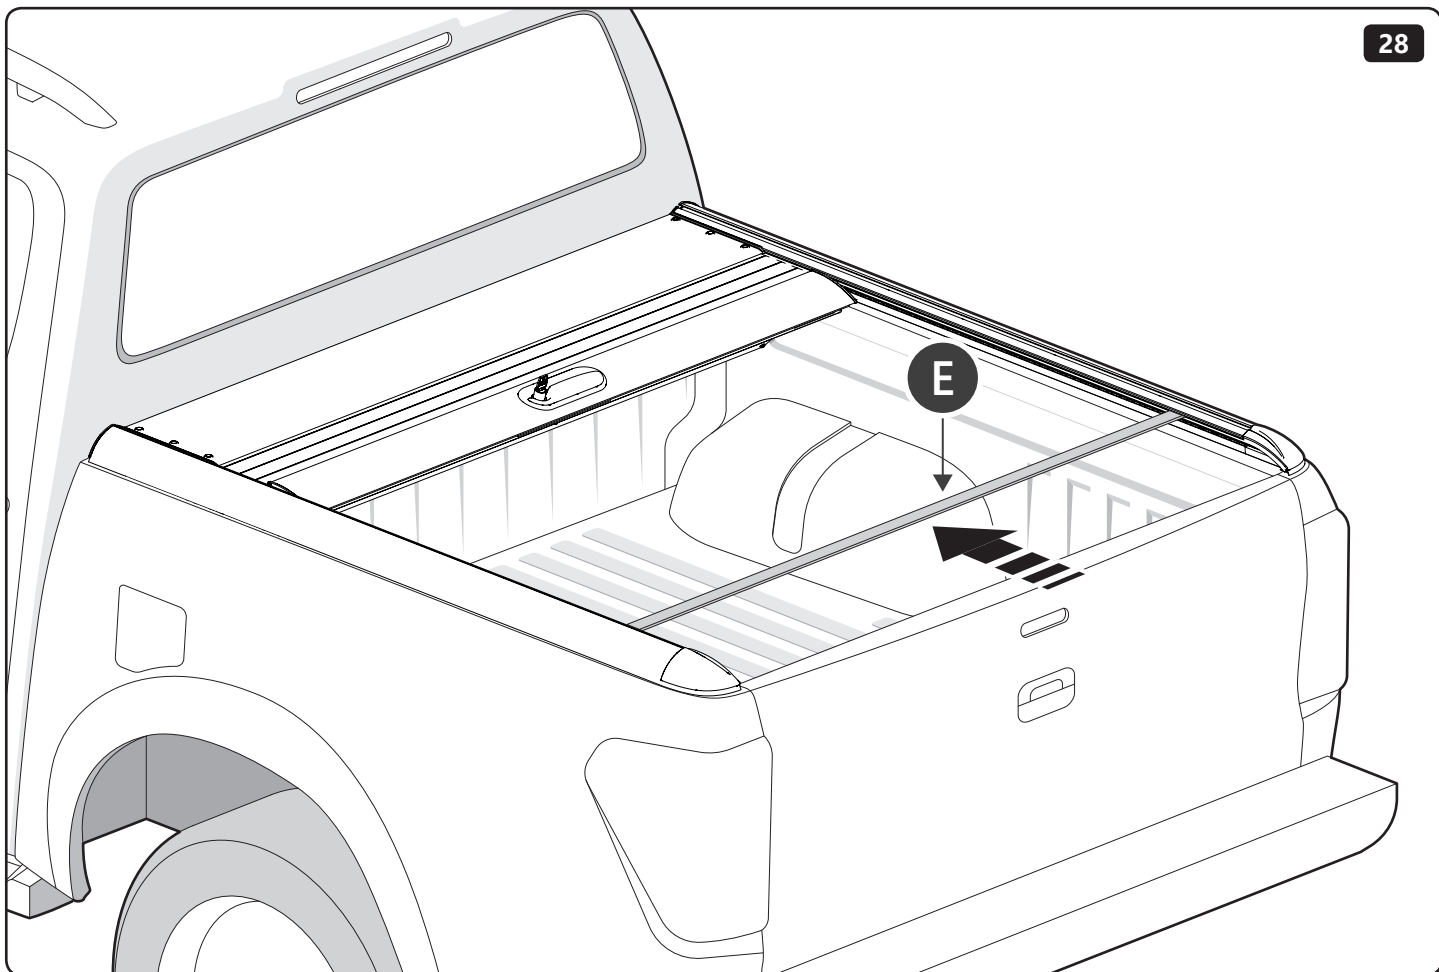
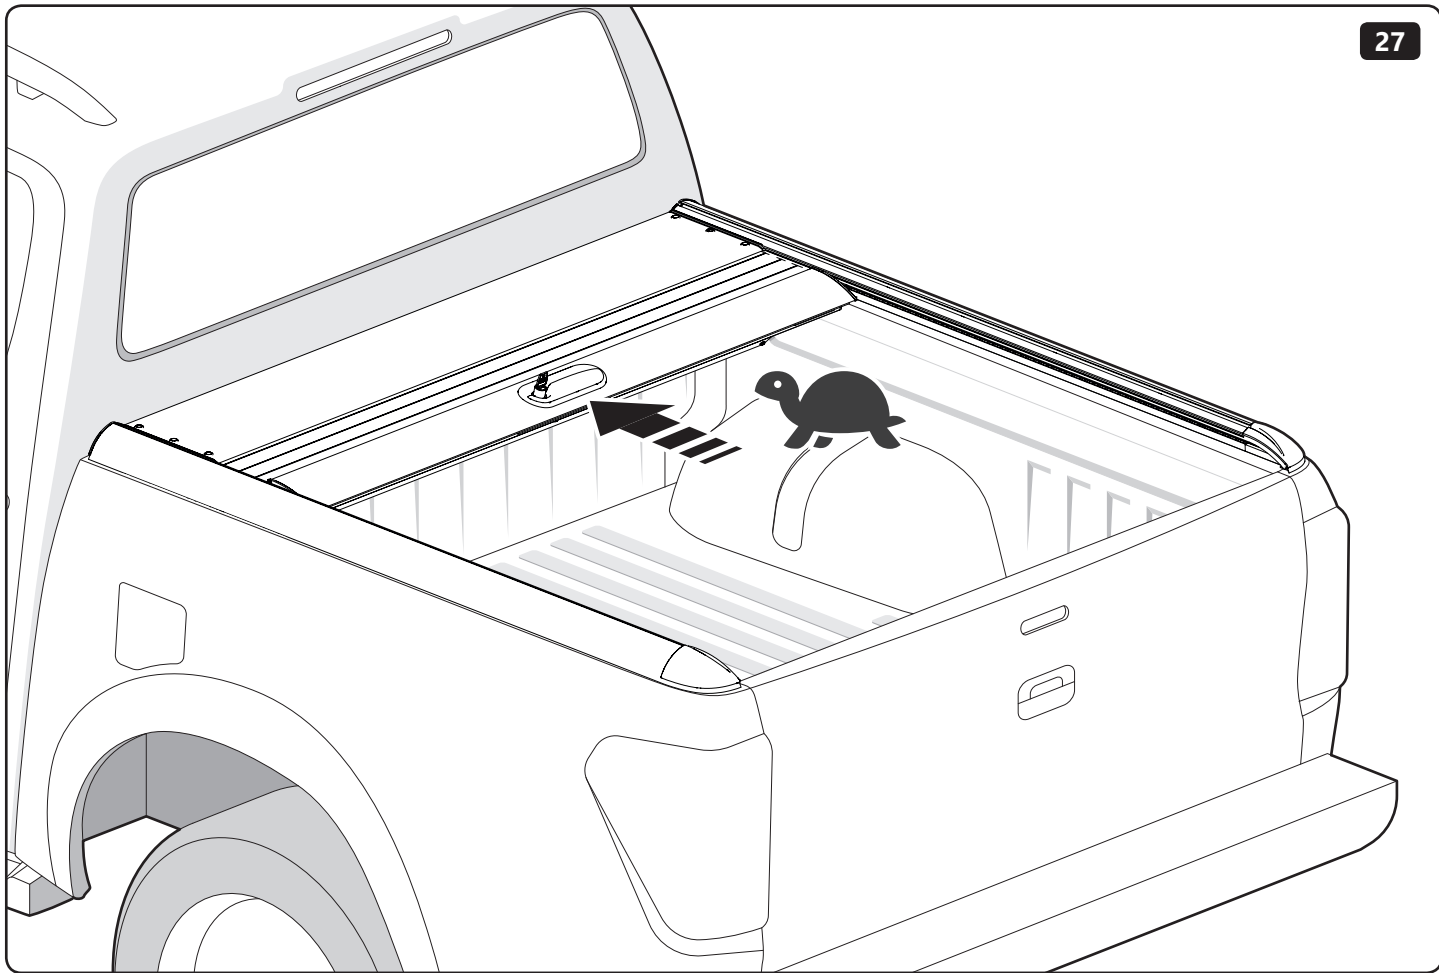


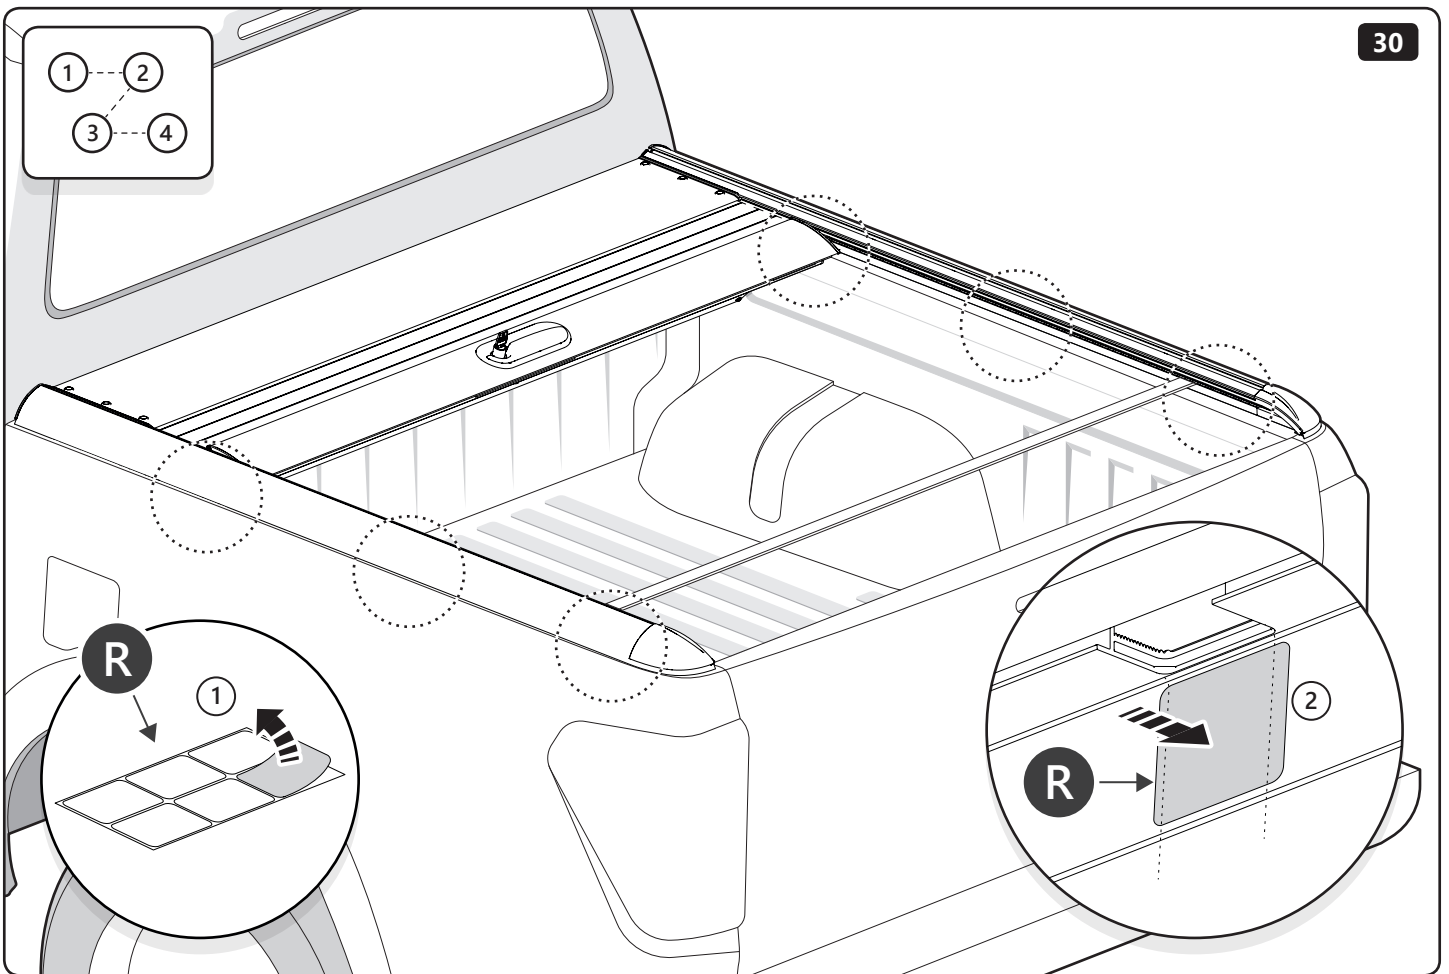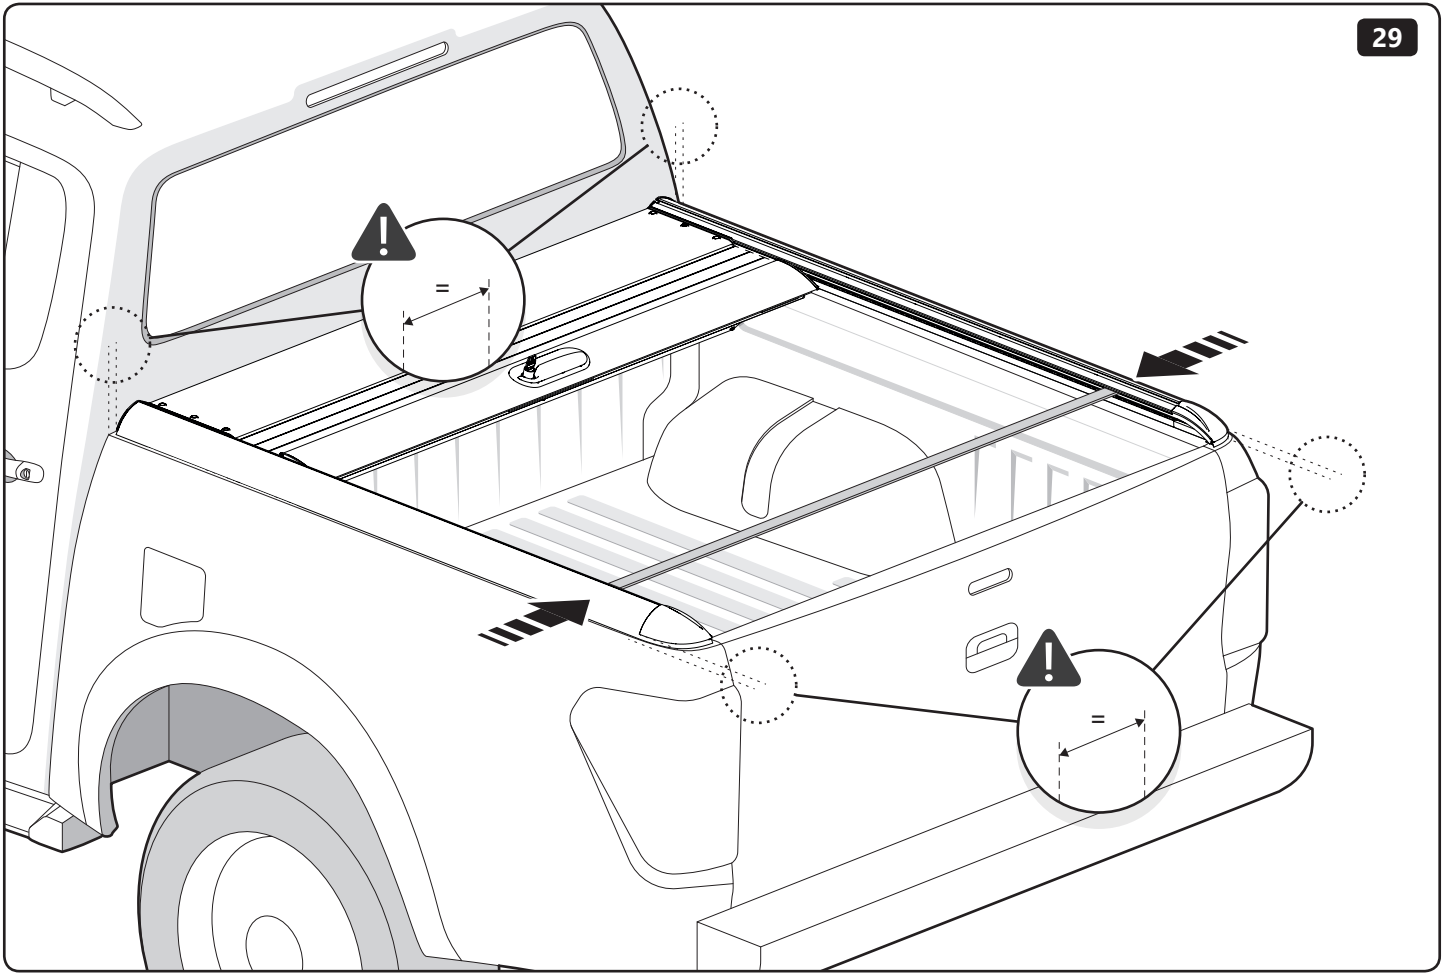


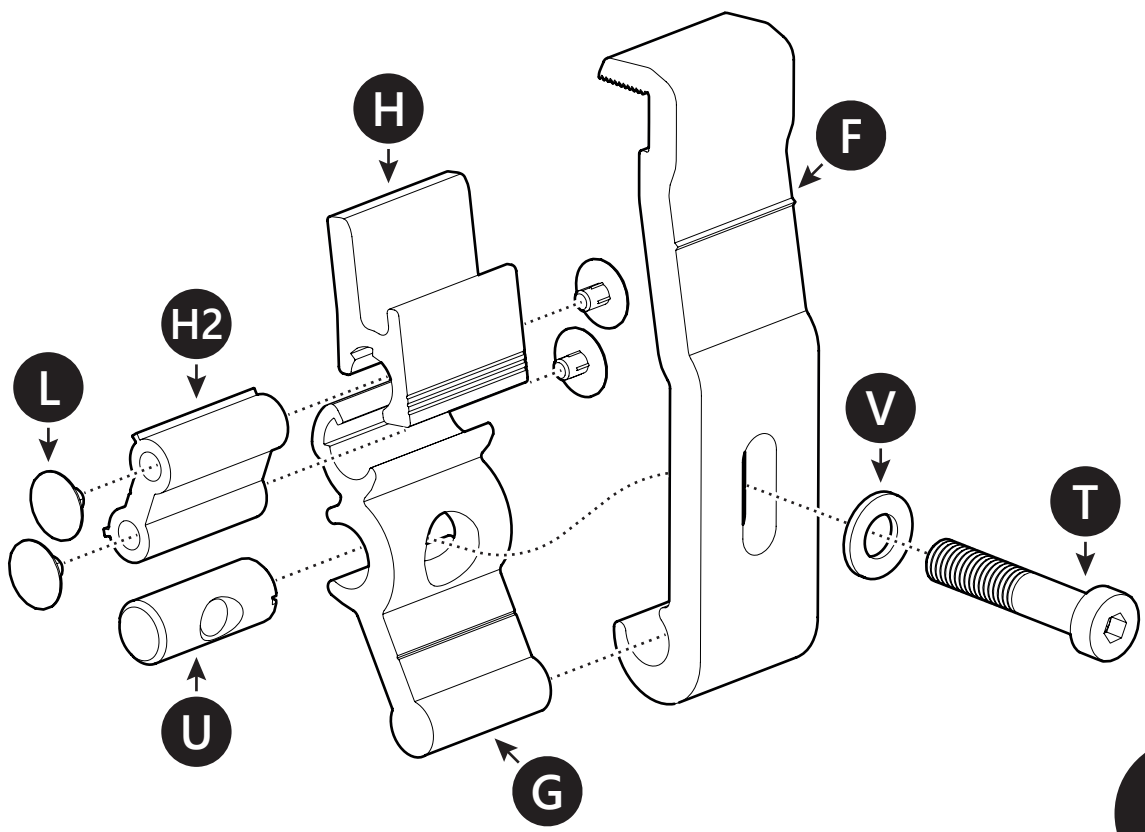


x6


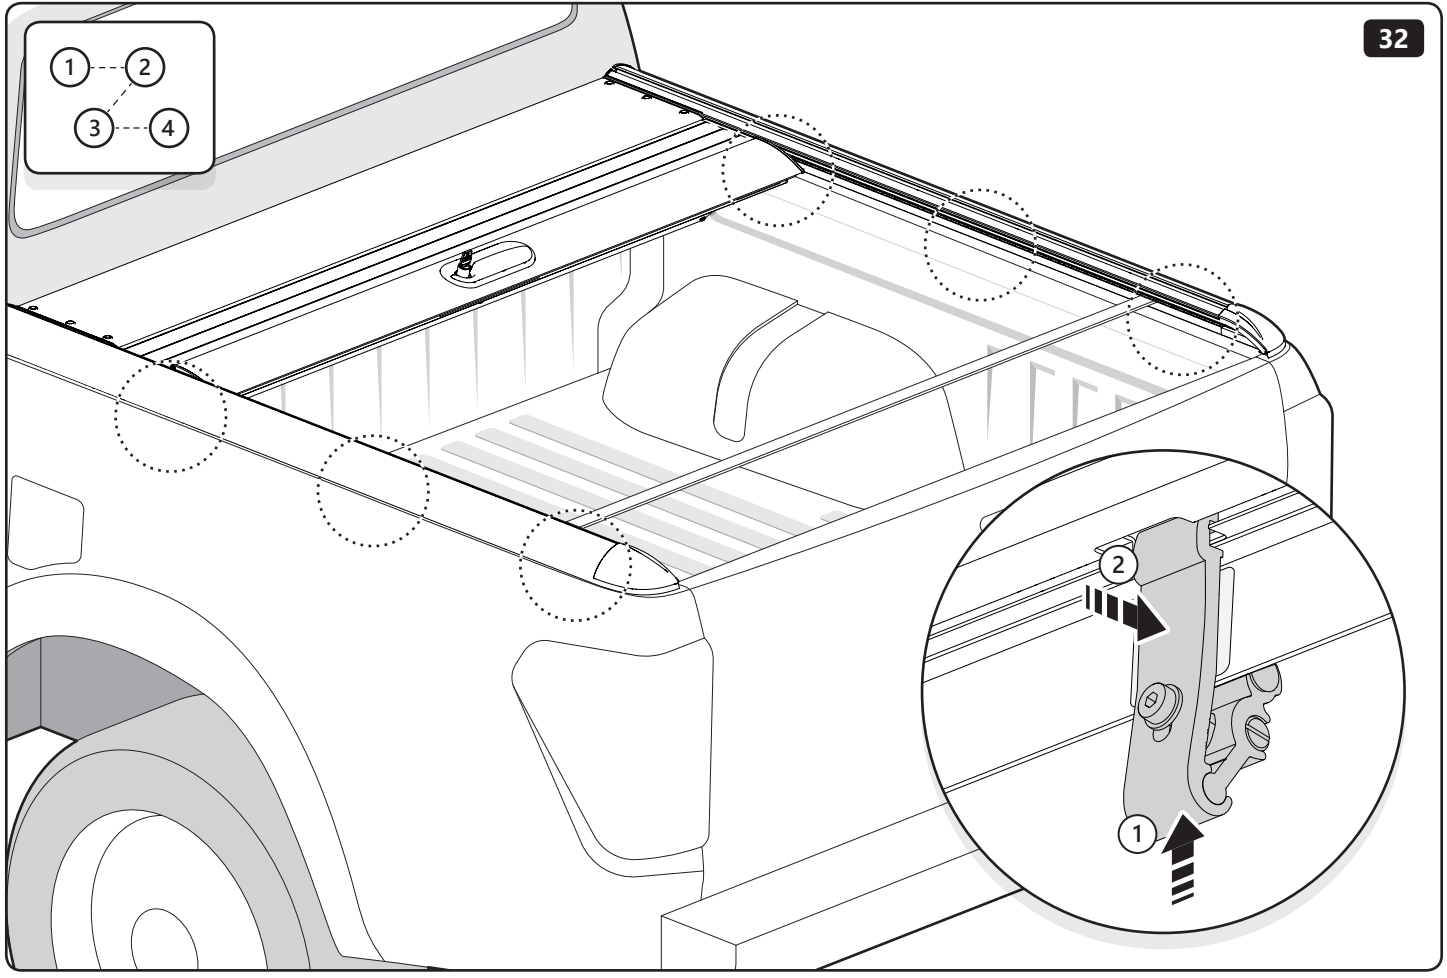


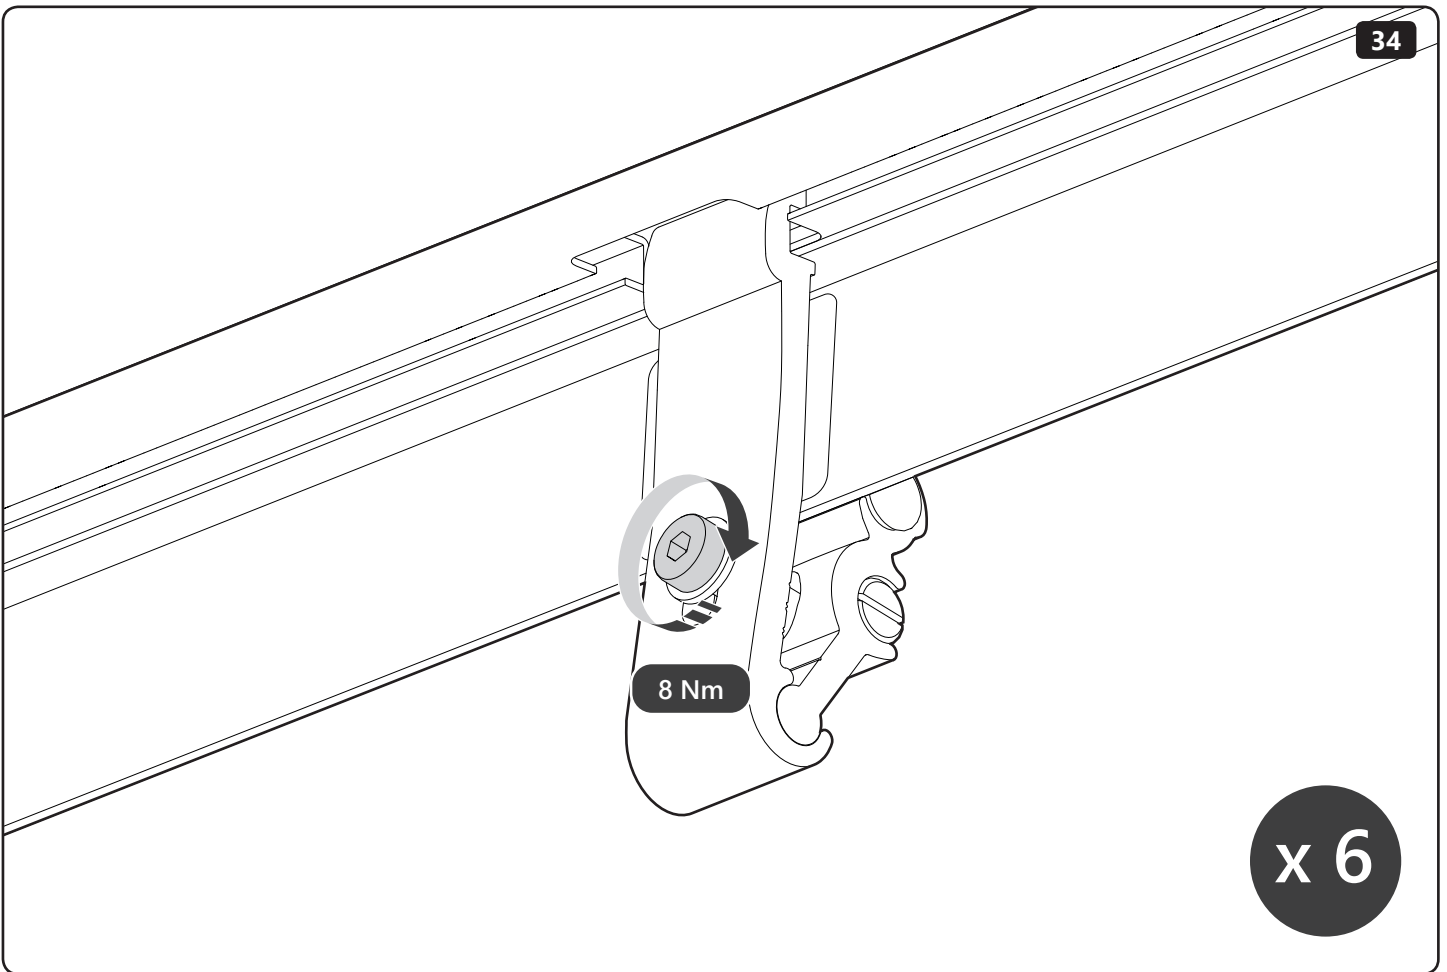
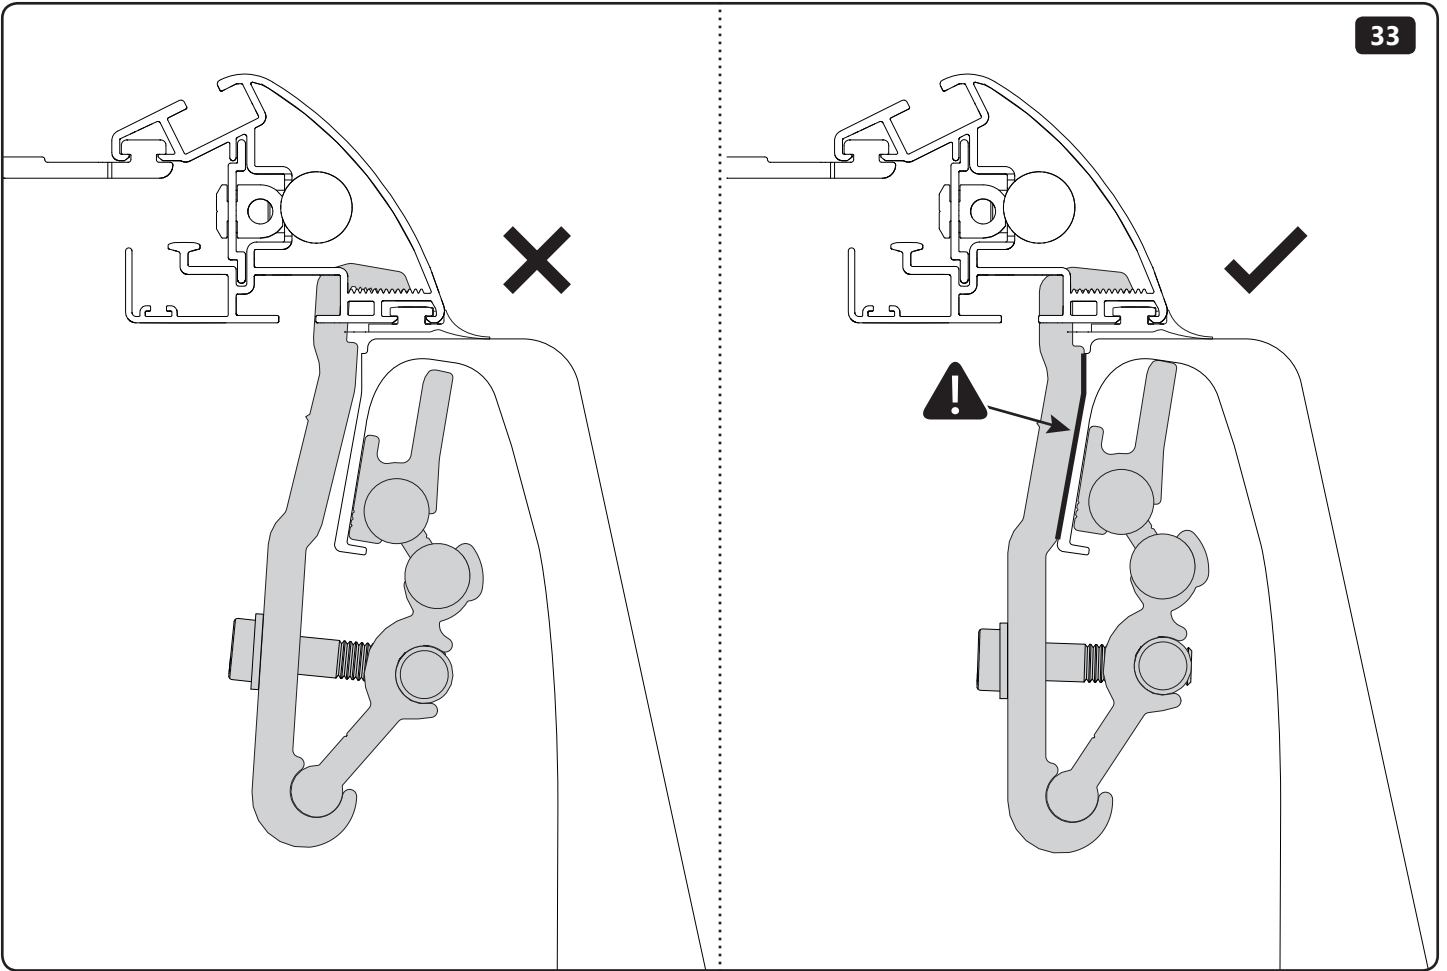


x 6

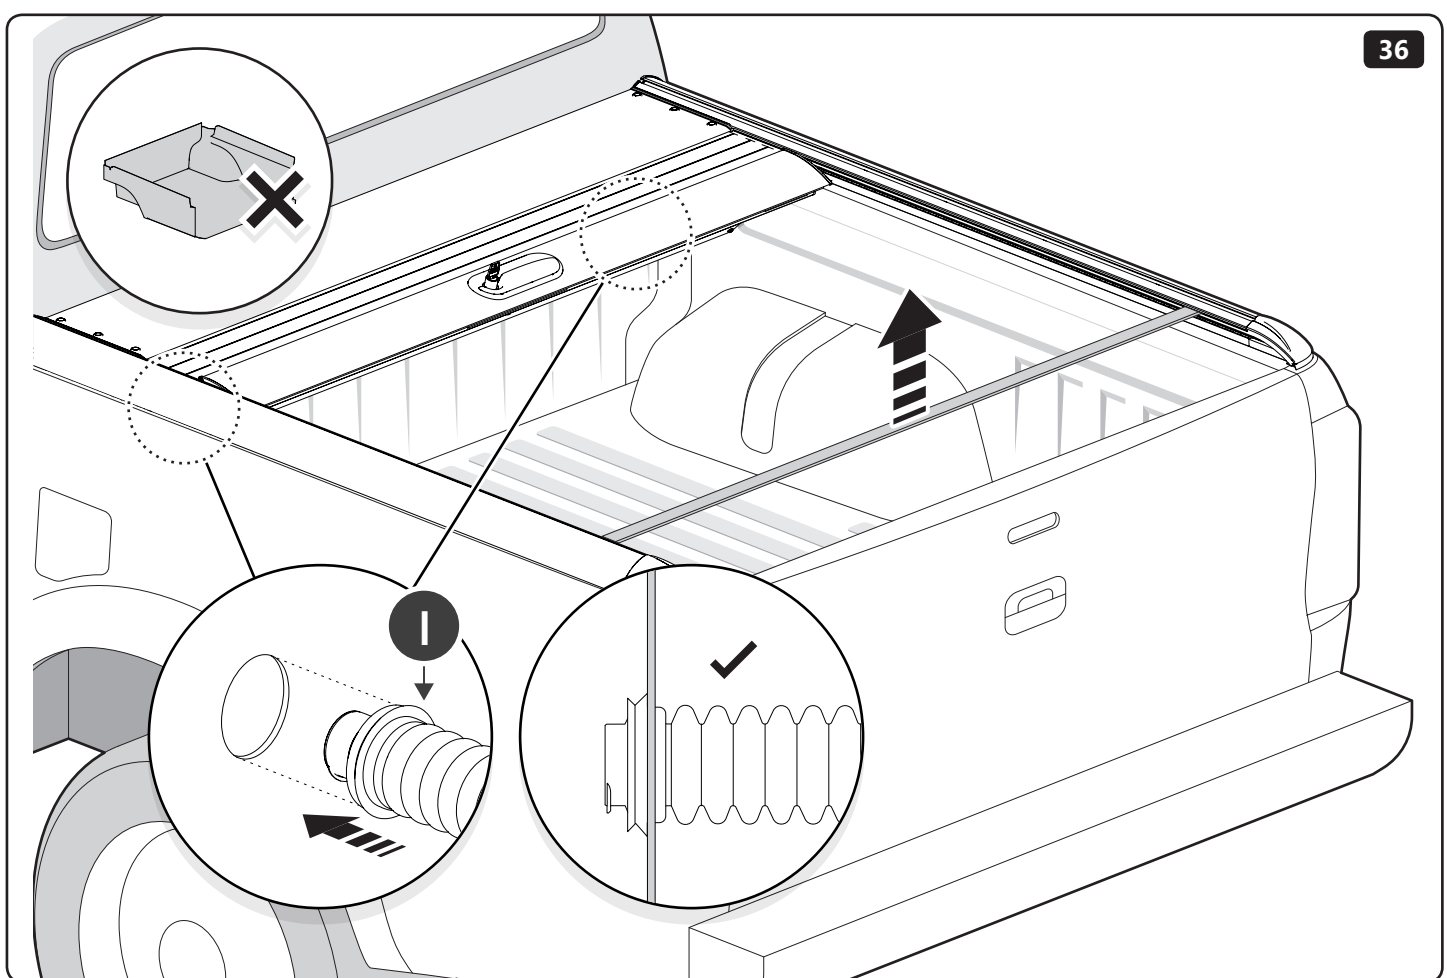
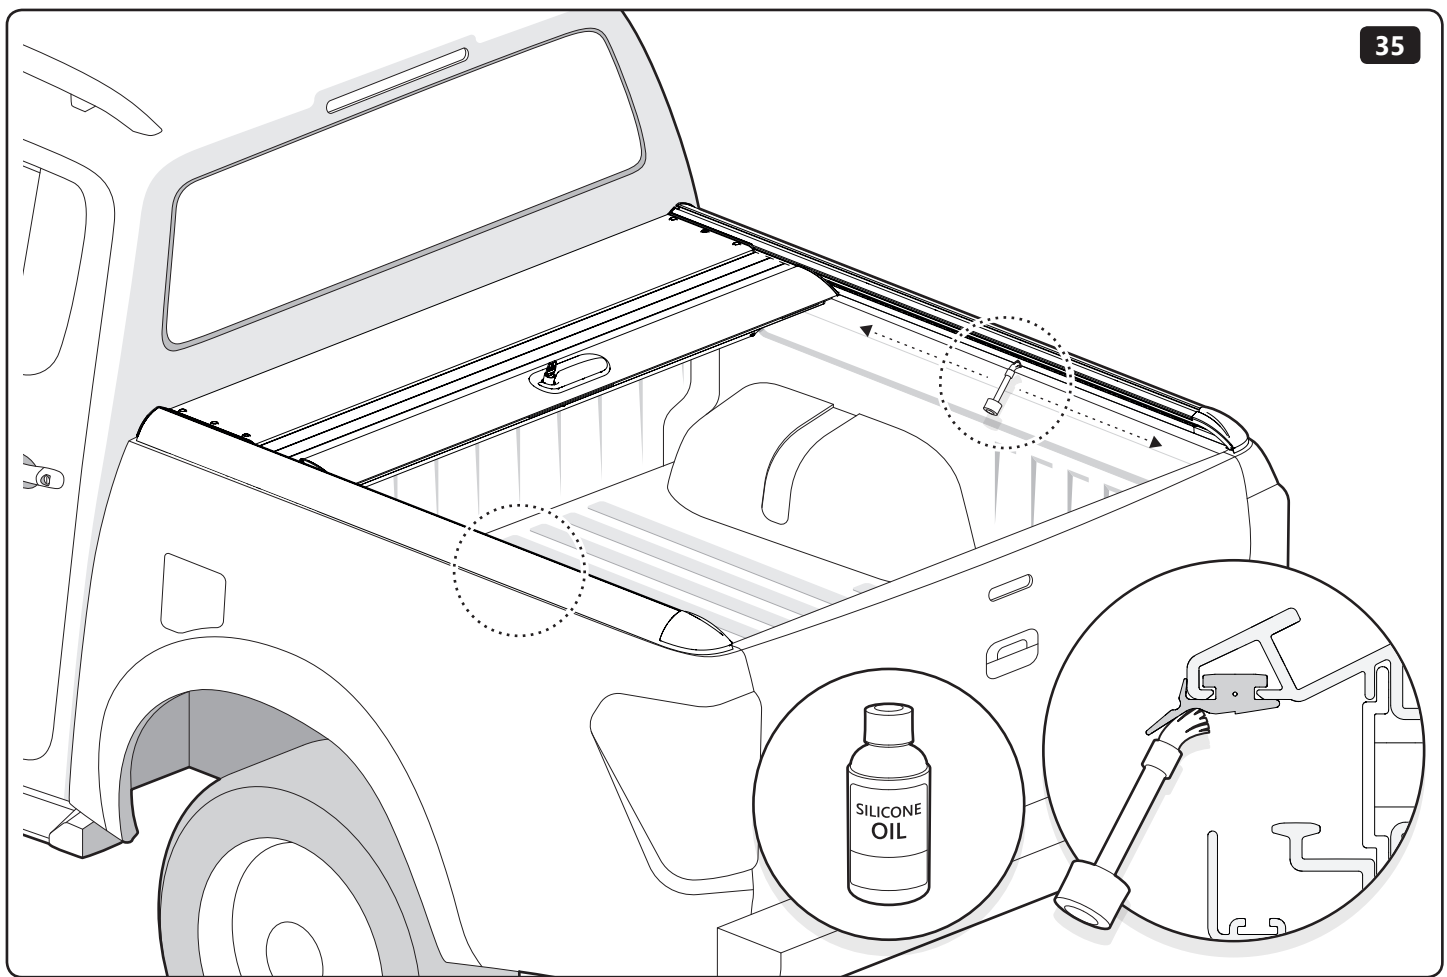






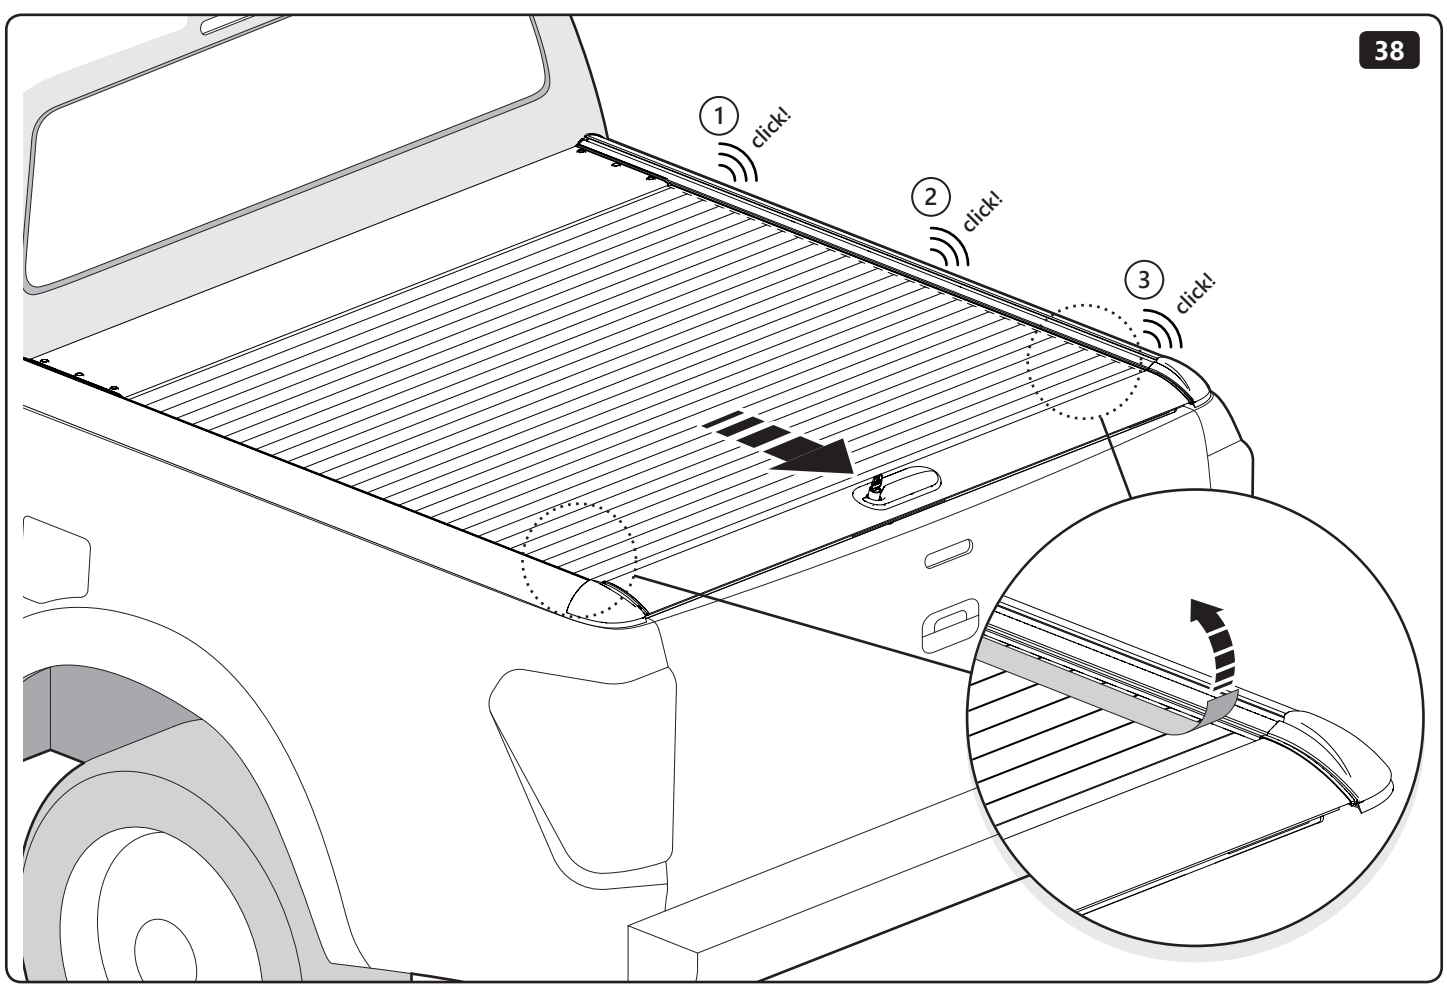
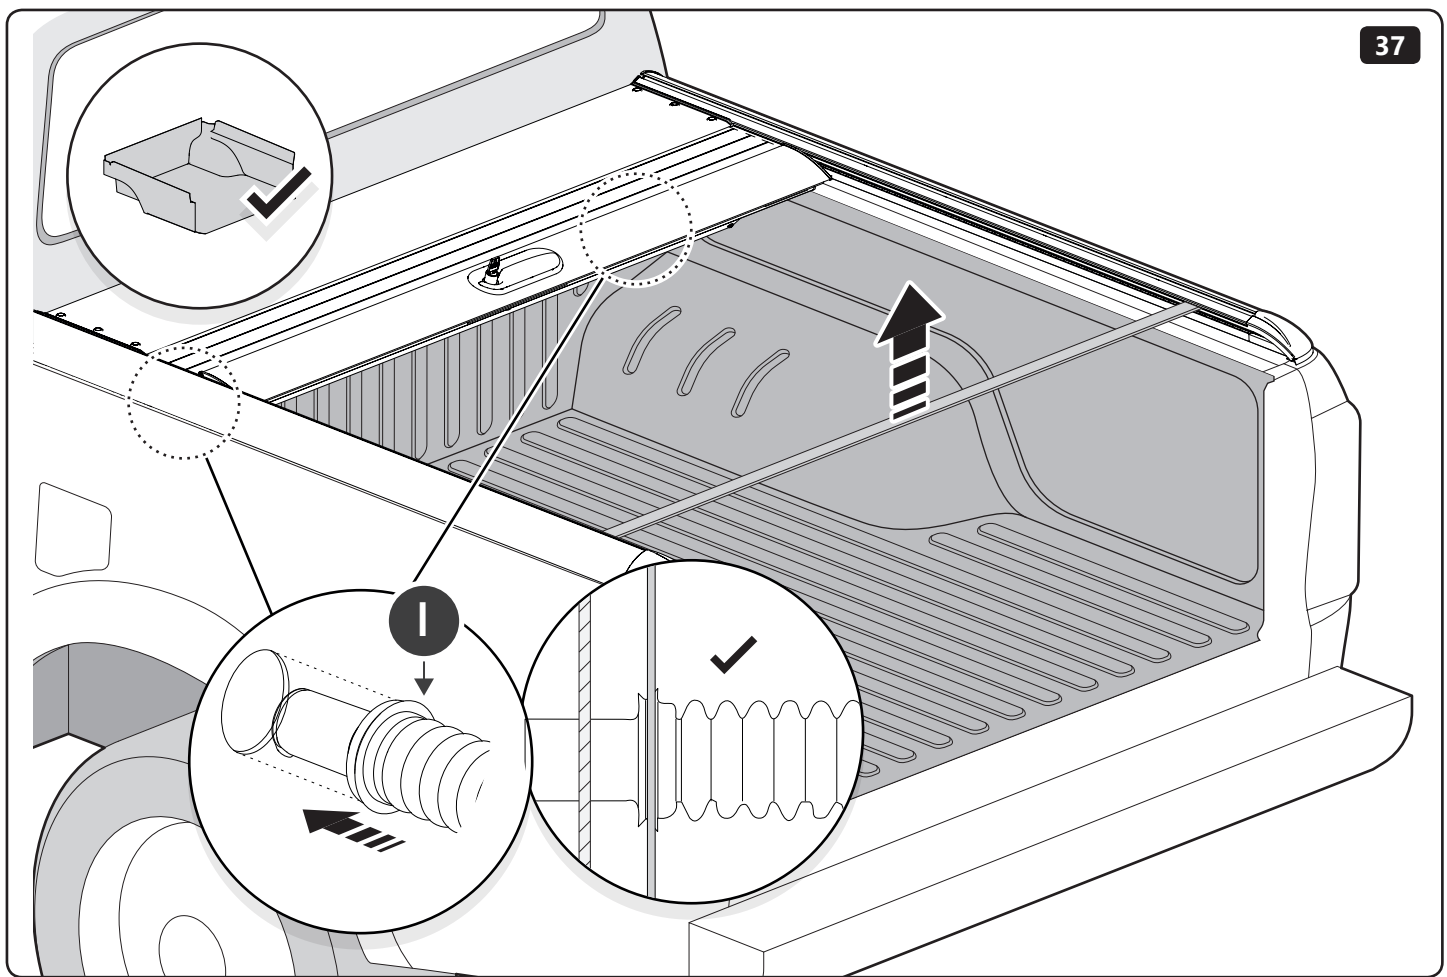


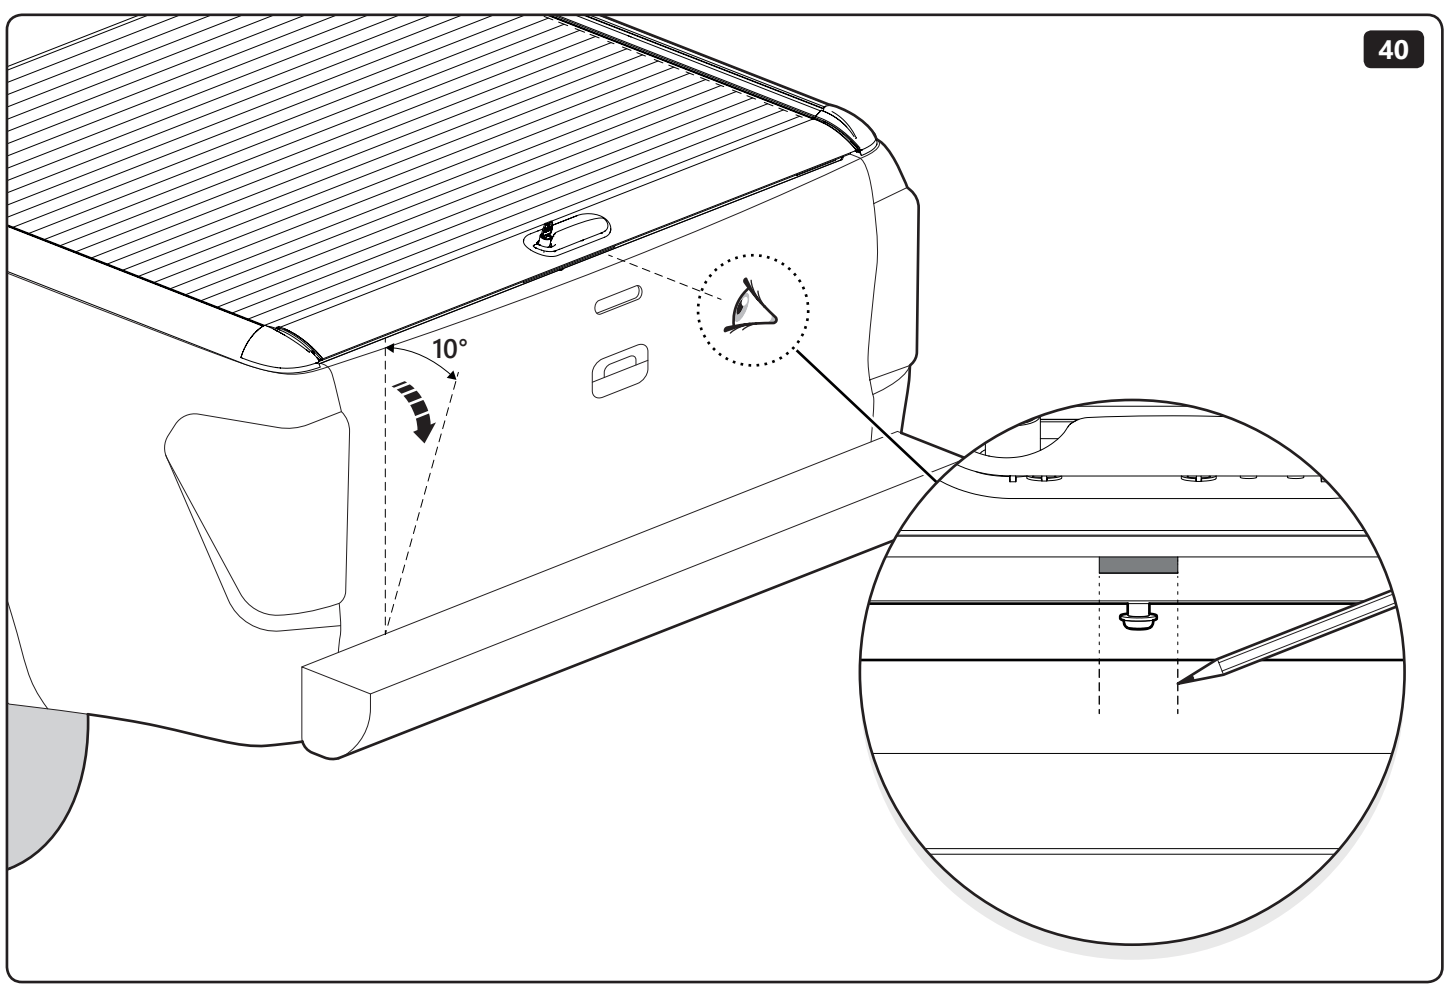
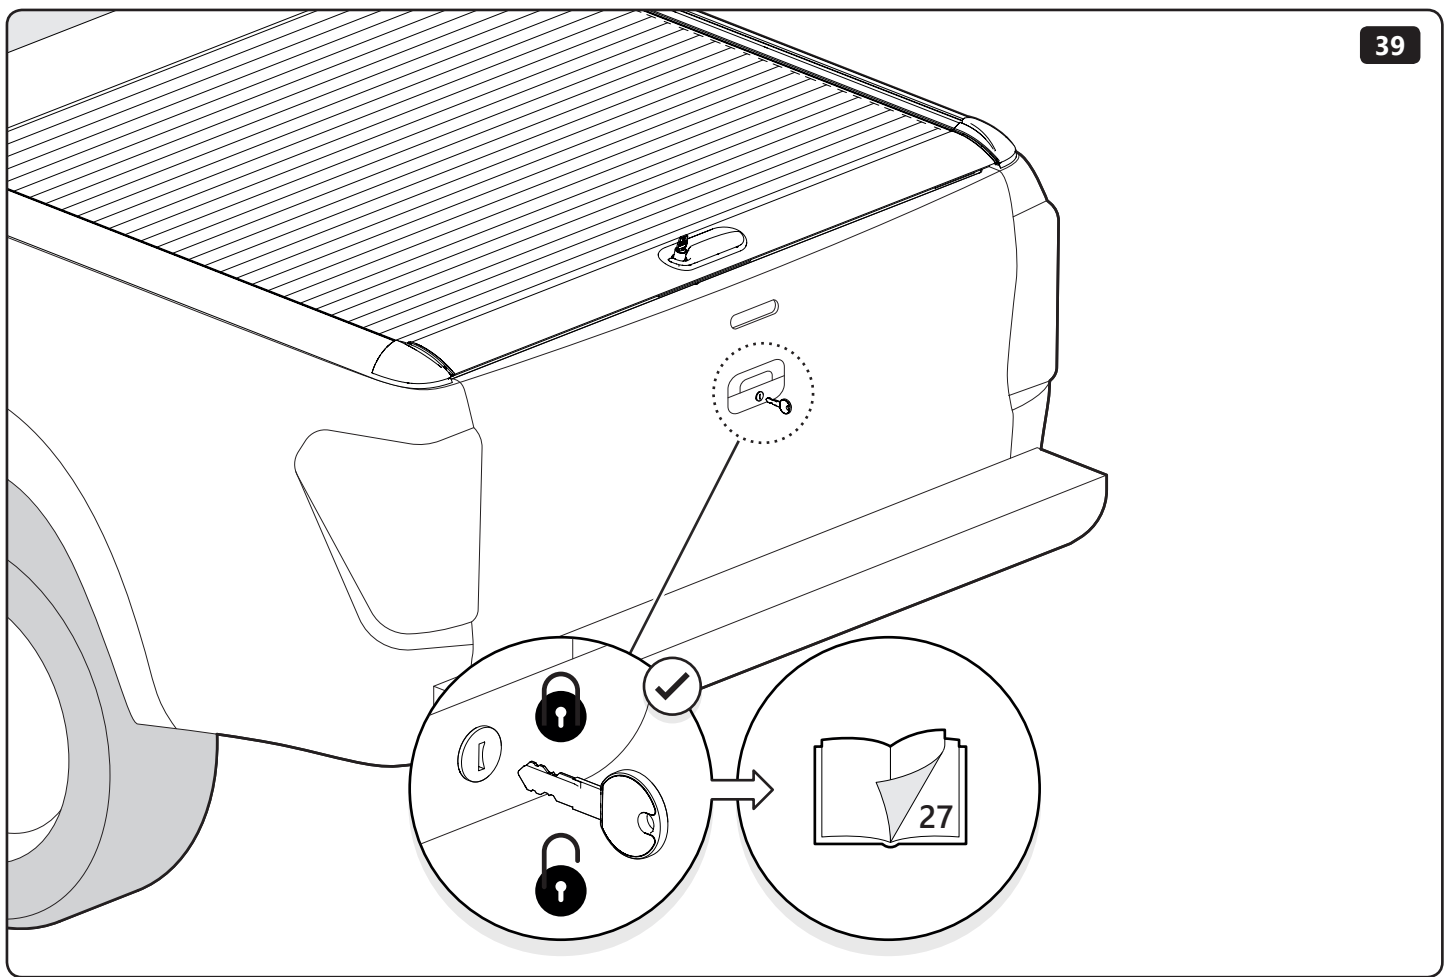






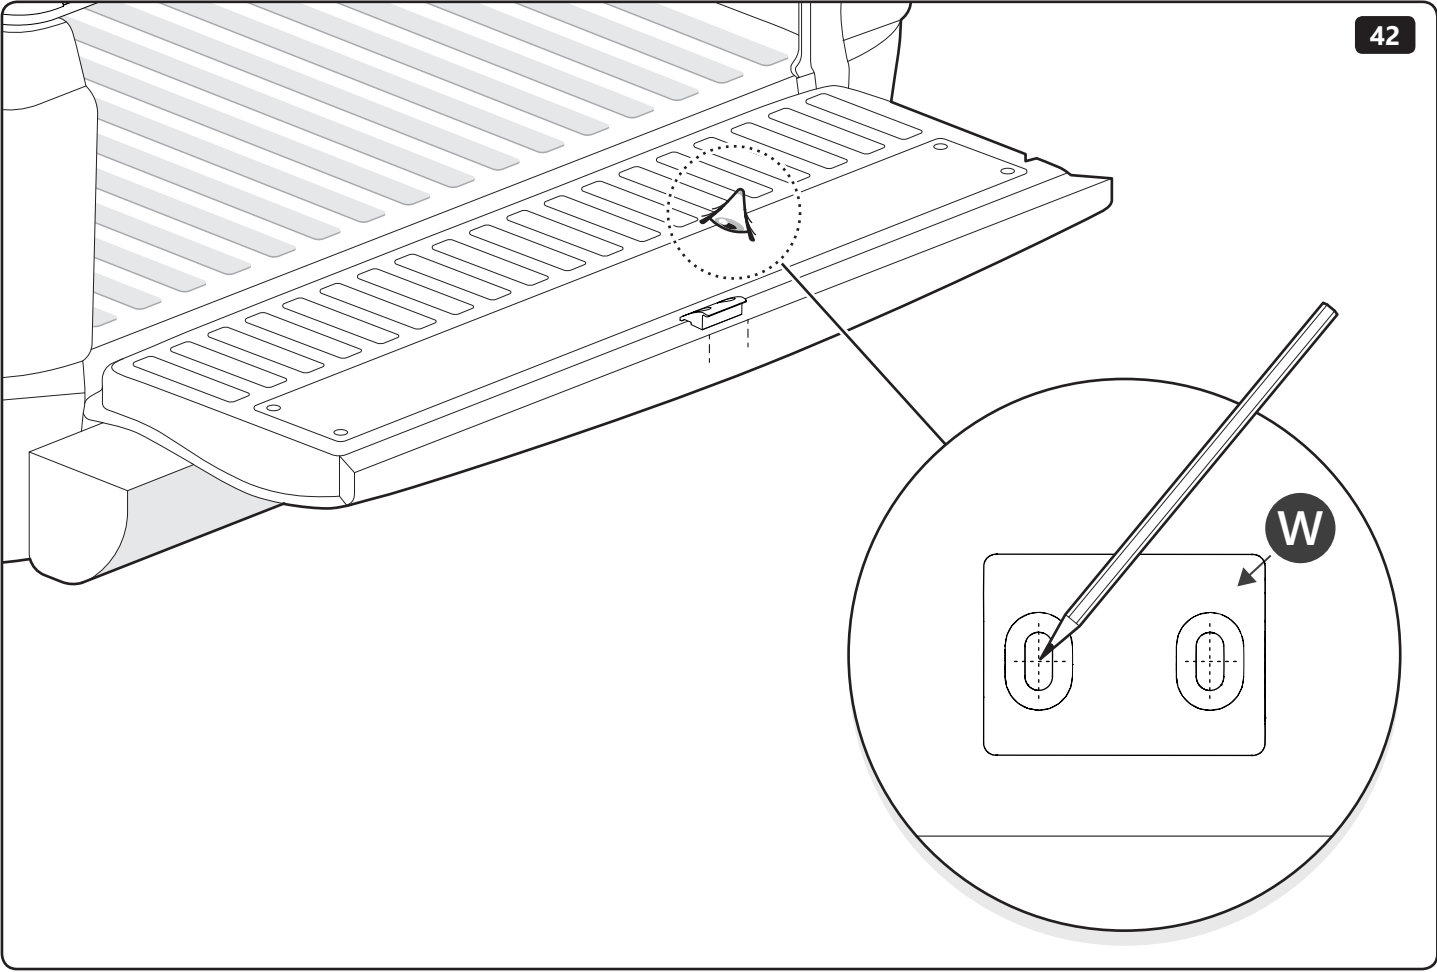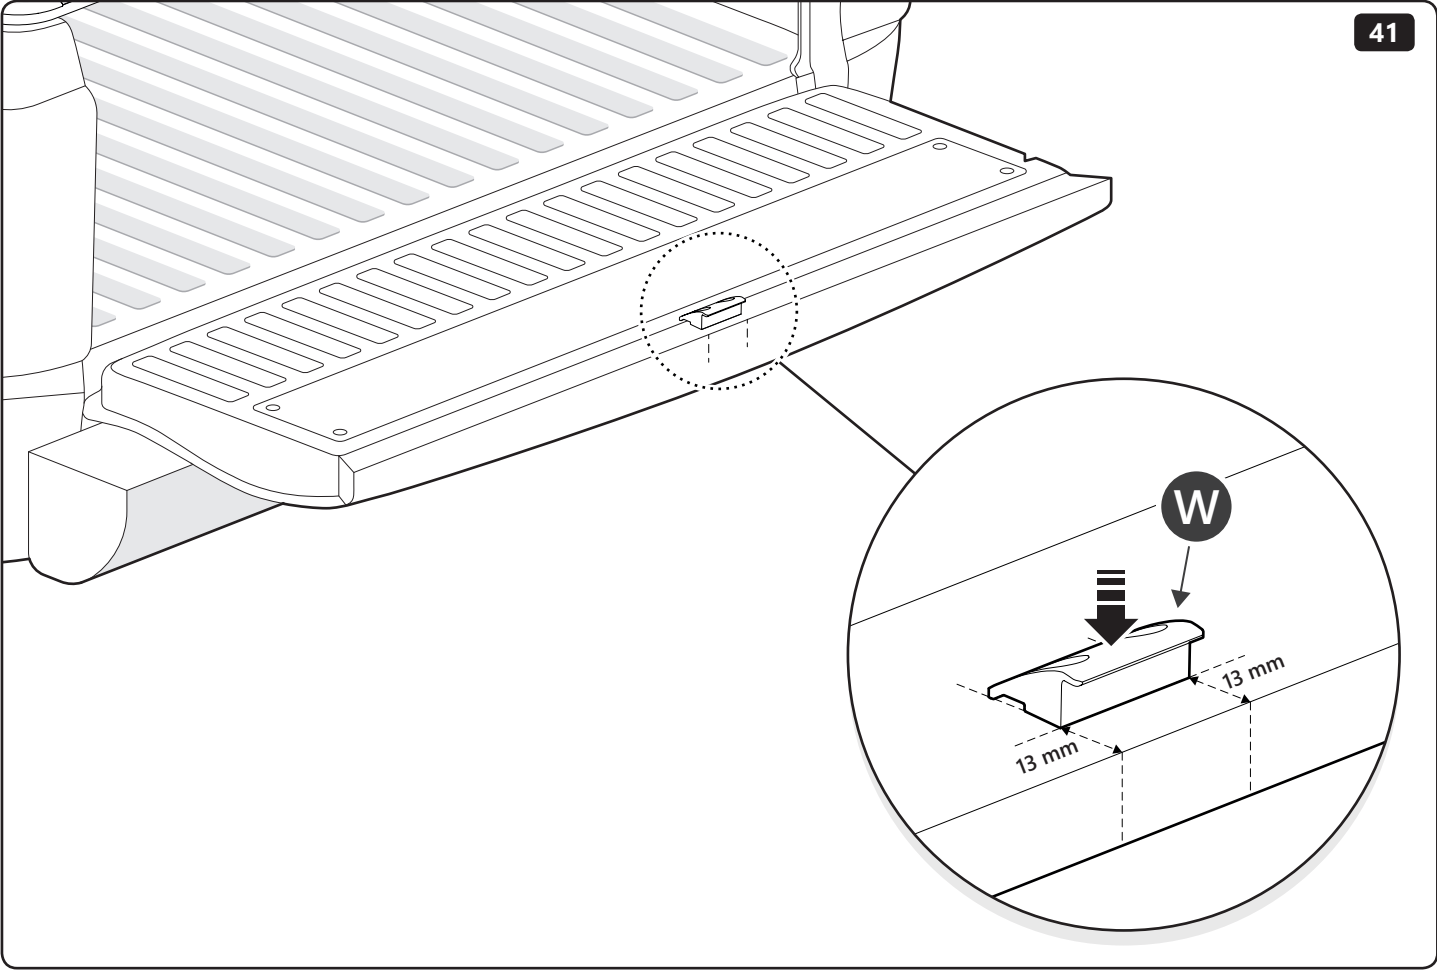

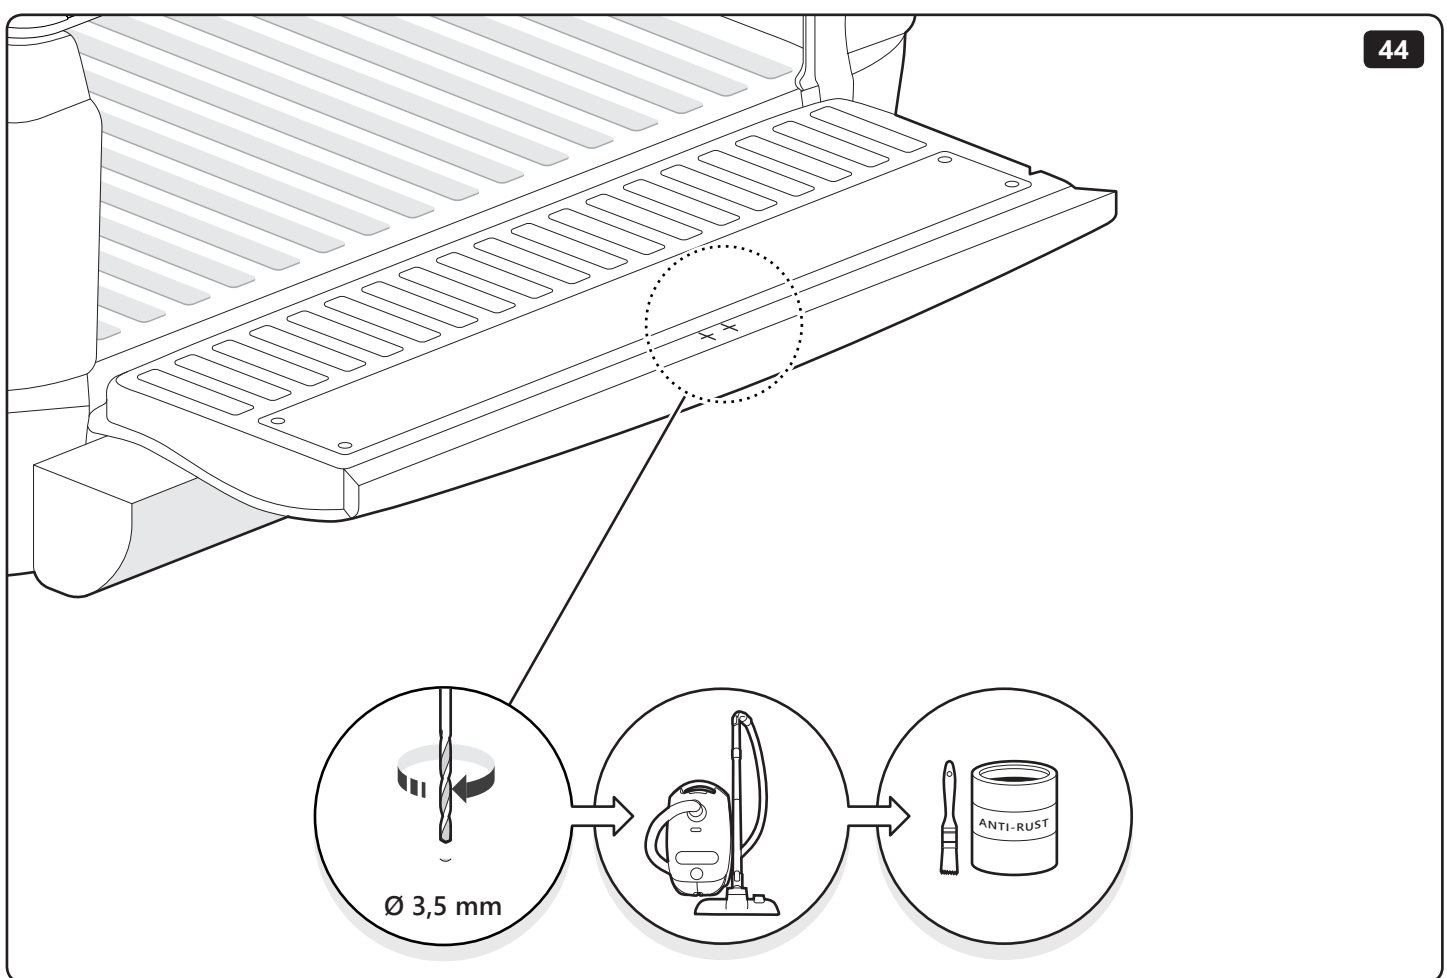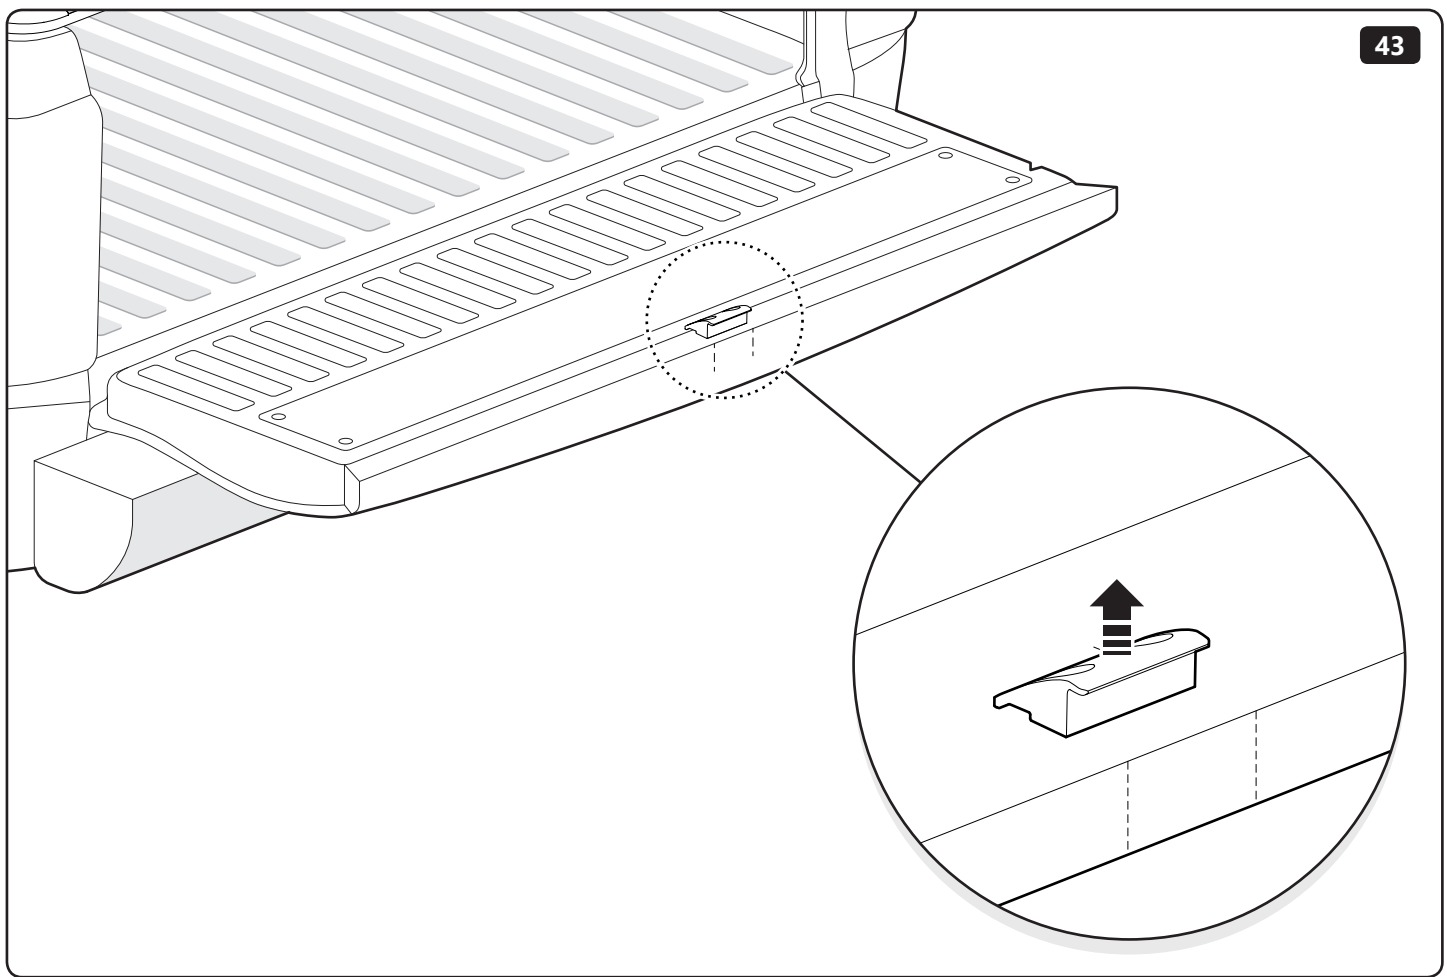

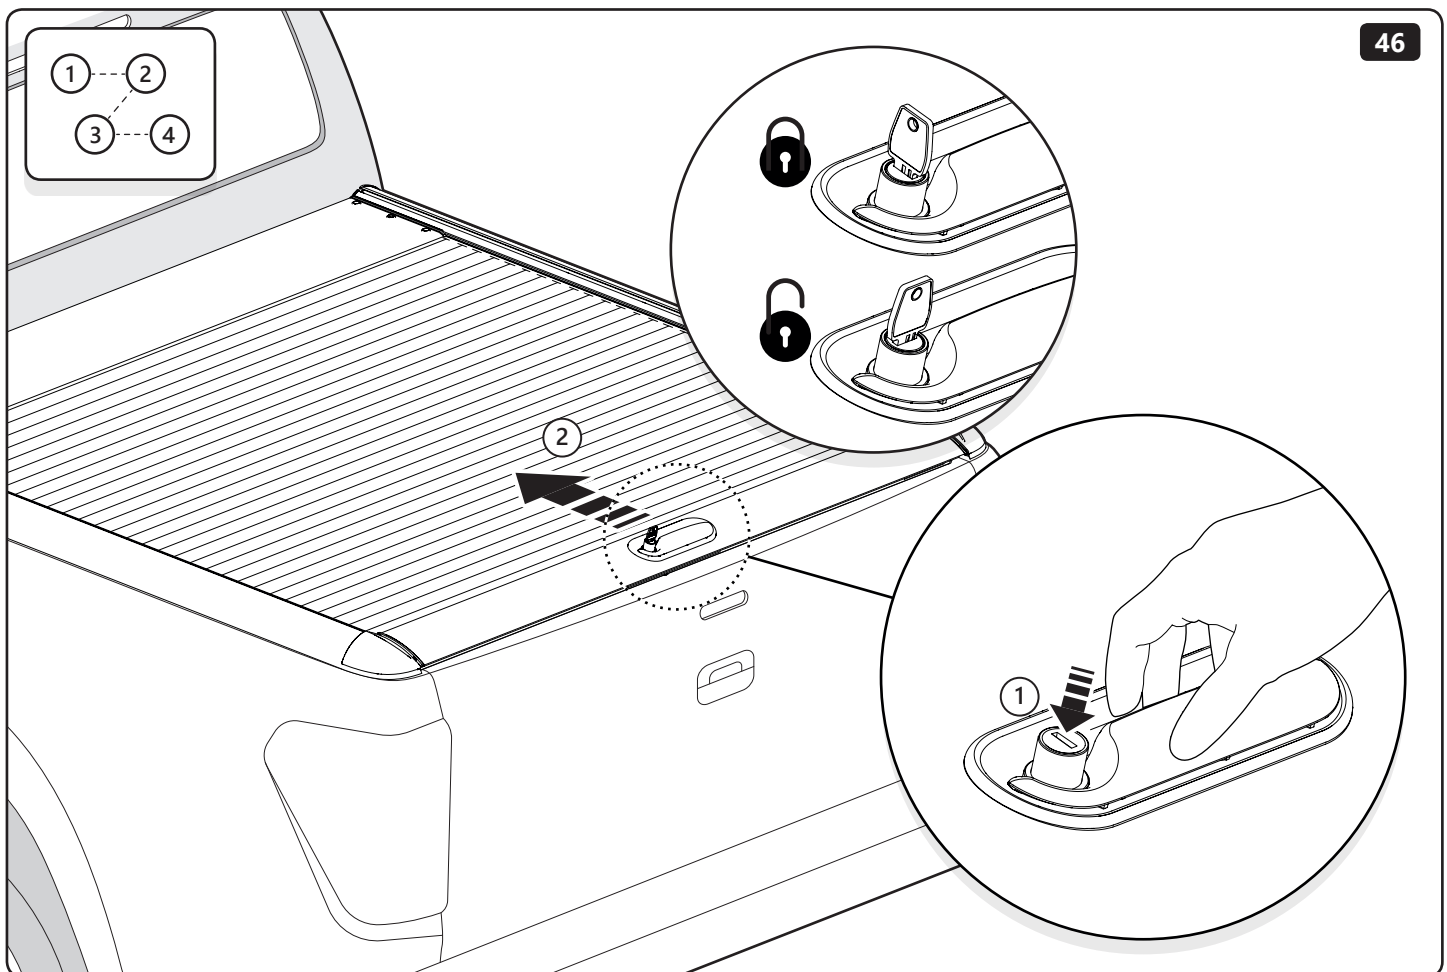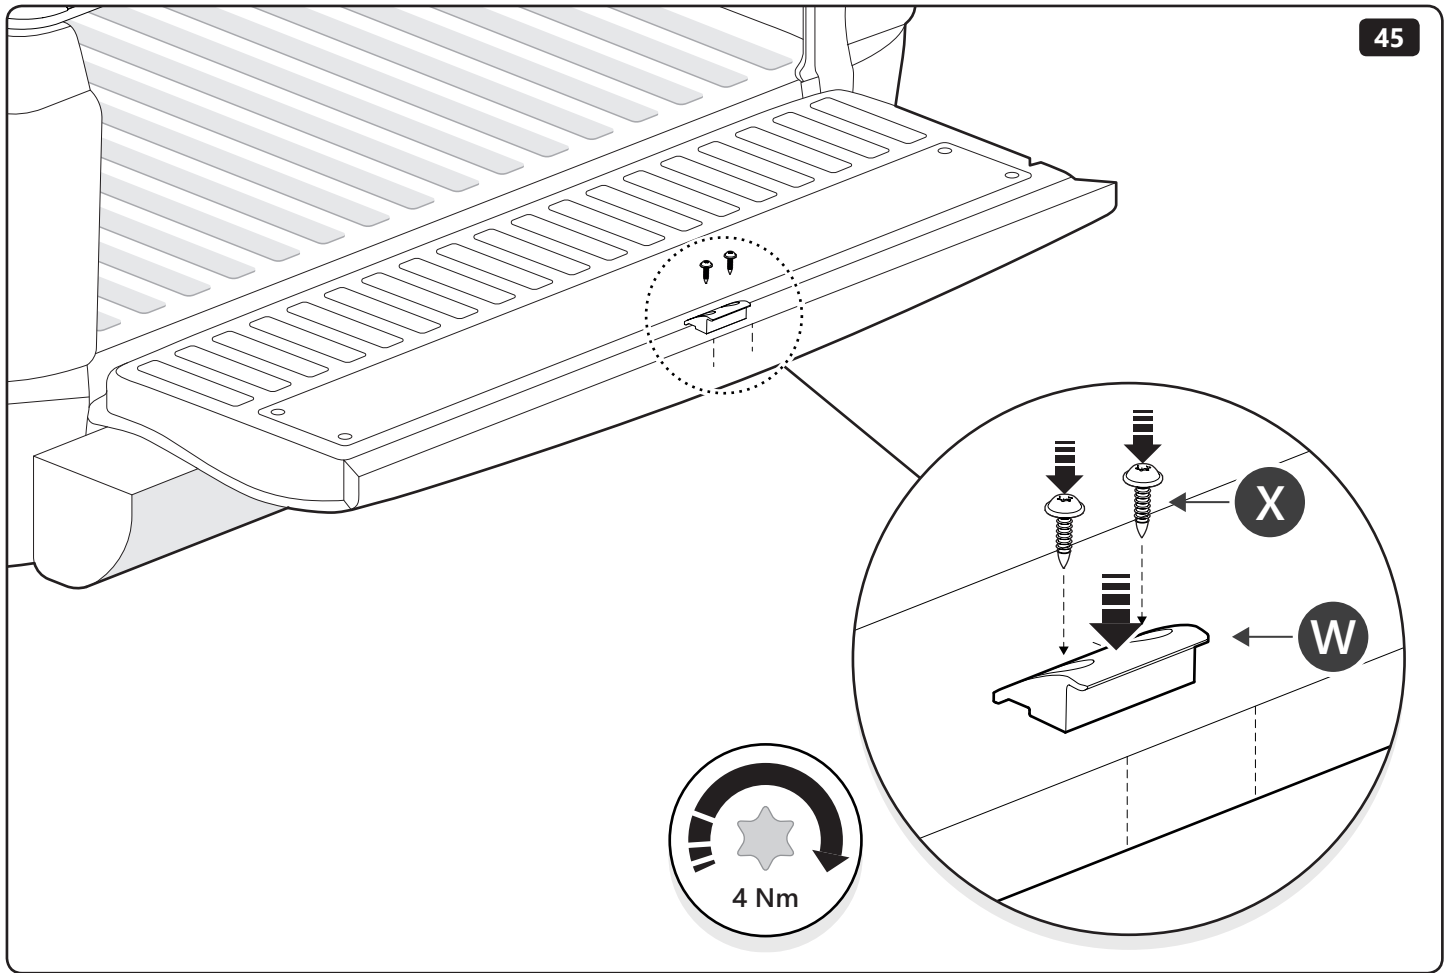

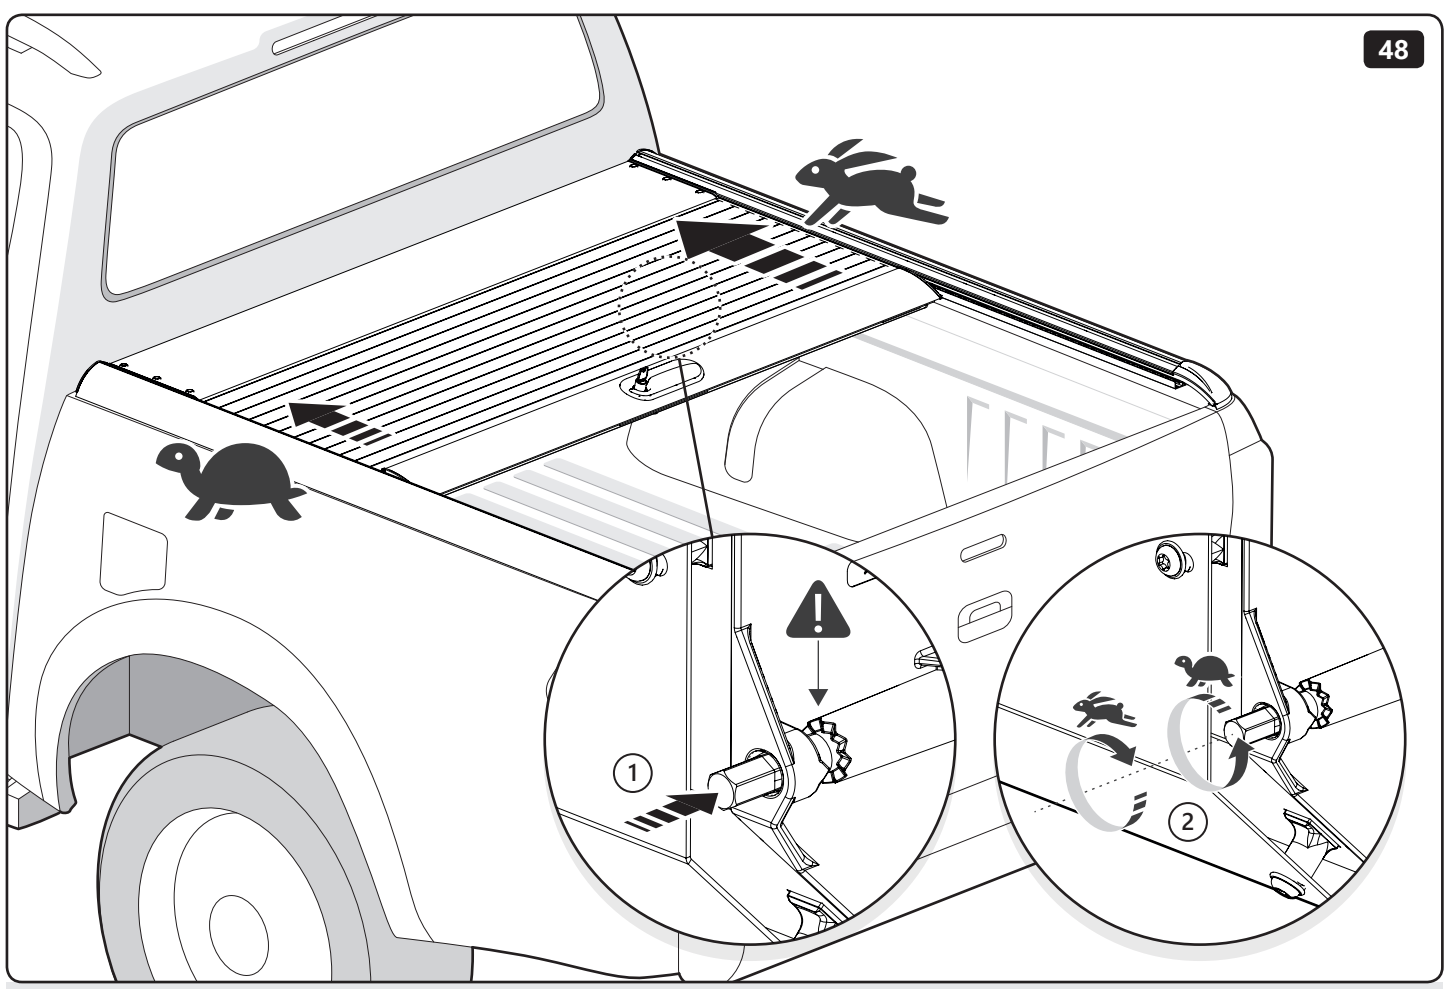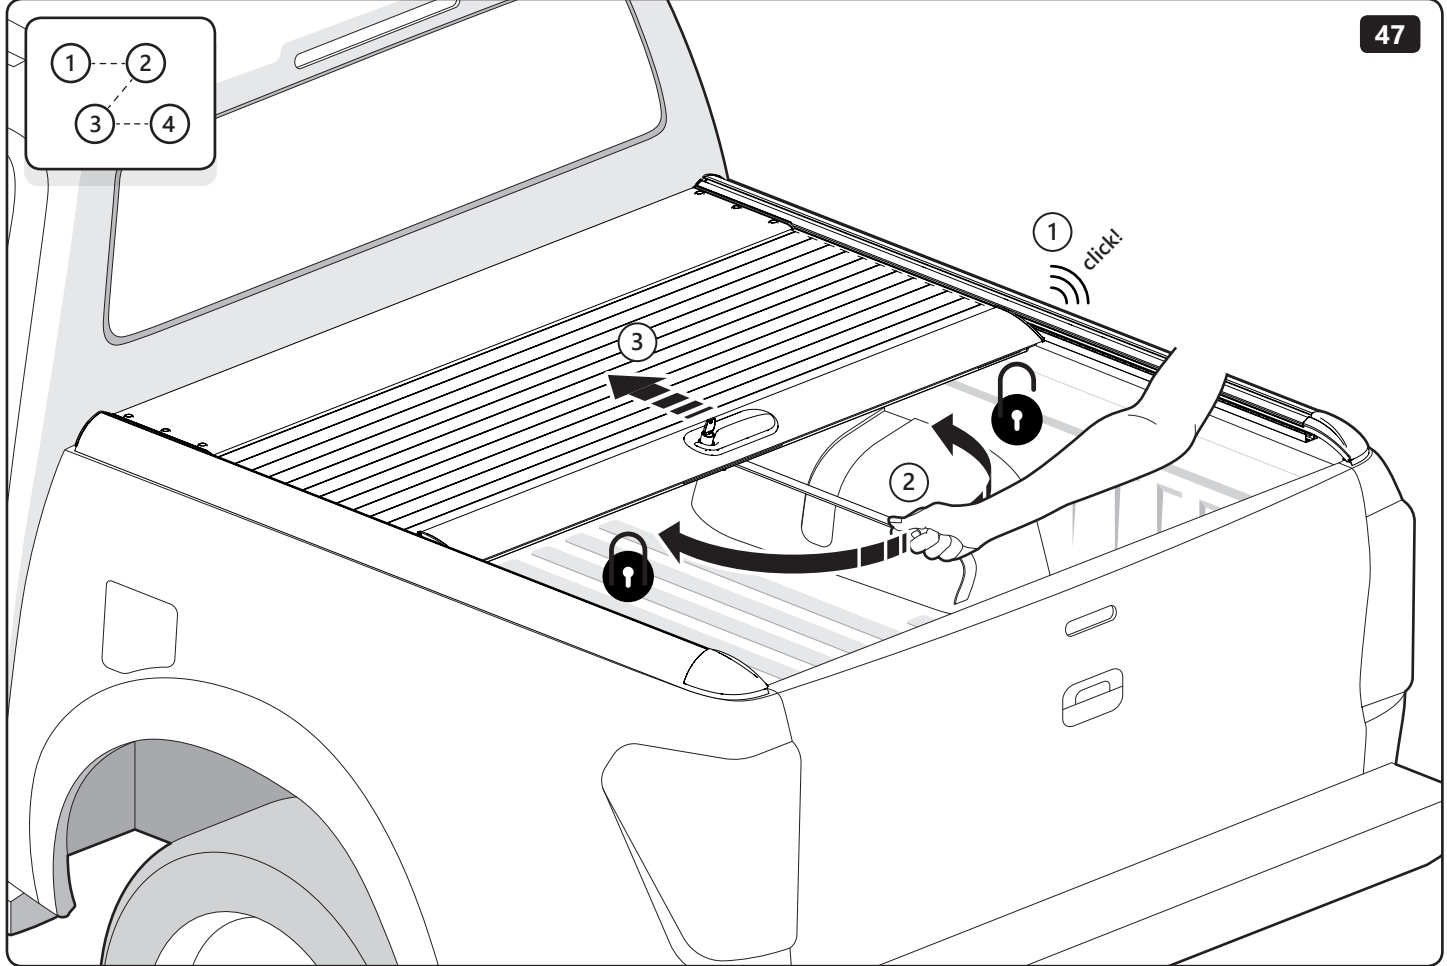

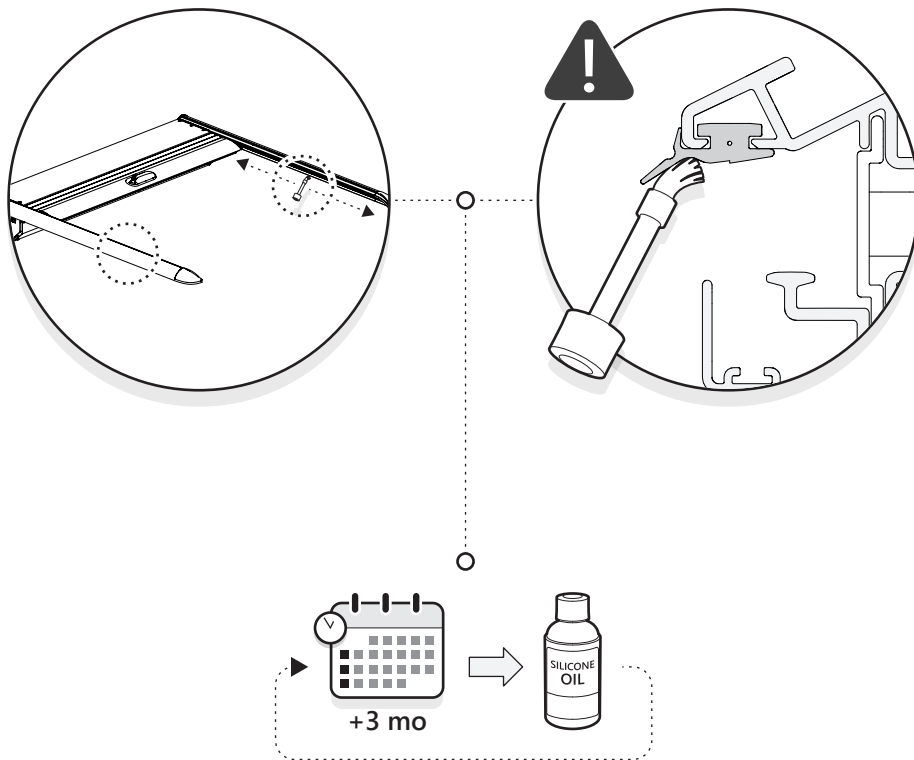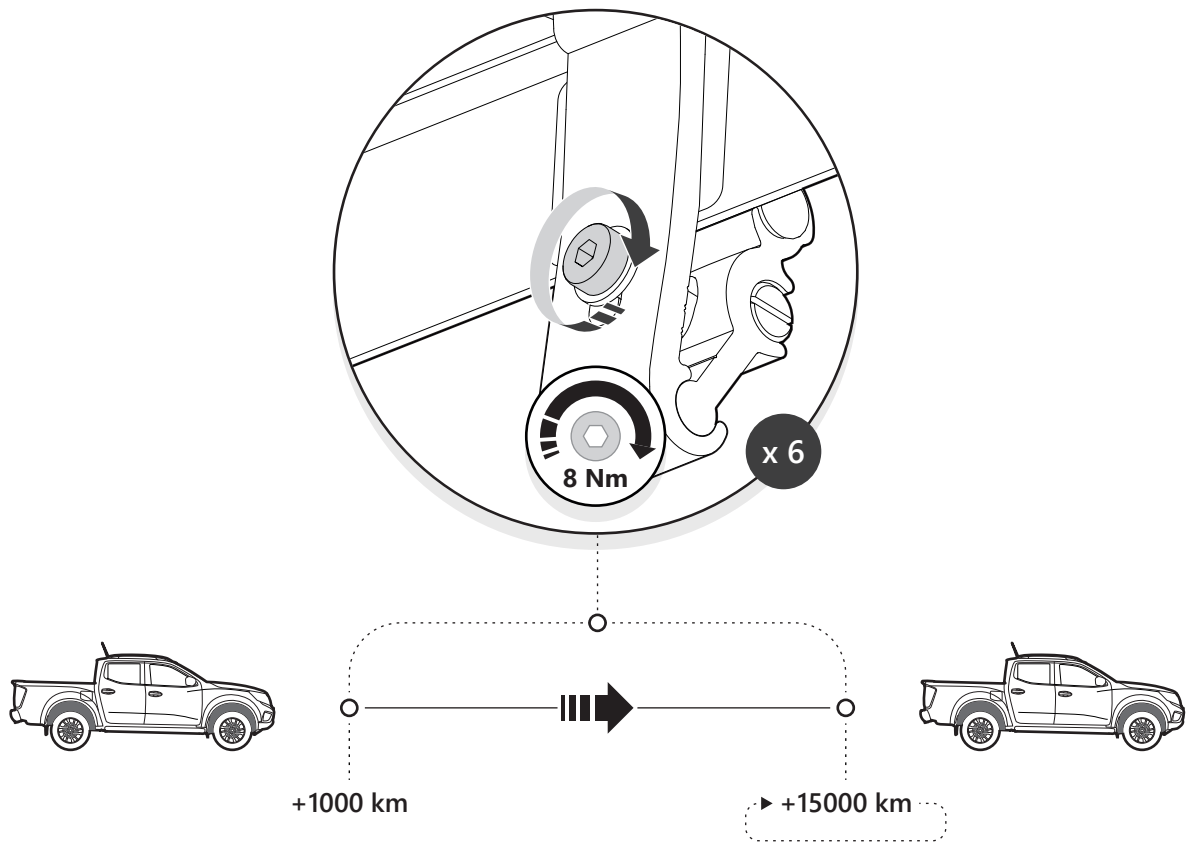



Customer Service +45 4810 2950 (08:00 - 16:00 CET)  
Fax +45 4810 2960  
Support [info@mountaintop.dk](mailto:info@mountaintop.dk)  
Website [www.mountaintop.dk](http://www.mountaintop.dk)  
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MTRA LDV90 S55	LDV / 2018 →	Double Cab	2 hour(s)	31-37 Kg
MTRA LDV90 L51	LDV / 2018 →	Double Cab	2 hour(s)	31-37 Kg

<b>GB</b> Installation manual	<b>S</b> Monteringsanvisning	<b>D</b> Einbauanleitung
<b>SF</b> Asennusohje	<b>E</b> Instrucciones de montaje	<b>CZ</b> Návod k instalaci
<b>F</b> Notice de montage	<b>H</b> Szerelési utasítás	<b>I</b> Istruzioni de montaggio
<b>PL</b> Instrukcja montażu	<b>P</b> Instruções de instalação	<b>GR</b> Οδηγίες Εγκατάστασης
<b>NL</b> Installatie-instructies	<b>RUS</b> Инструкция по установке	<b>DK</b> Monteringsvejledning
<b>TR</b> Montaj Talimatı	<b>N</b> Monteringsveiledning	<b>RO</b> Instructiuni de instalare