


# Mountain Top<sup>®</sup> Tub Lighting Kit

Installation manual




Parts

**A**

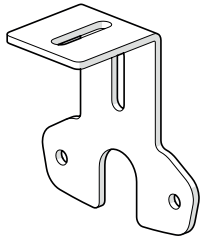

x2

**B**

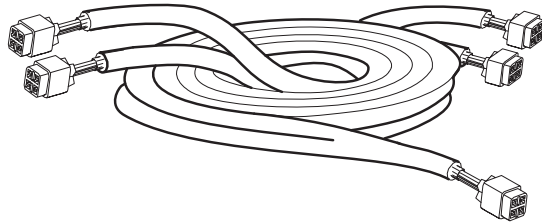


x1




Parts

**C**



x10

**D**

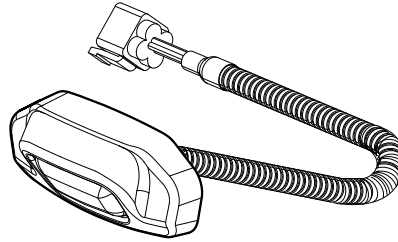


x2



Kit A STANDARD


**E**

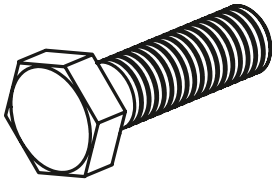

M6 x 12


x2

**F**

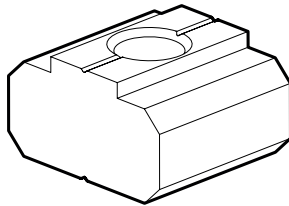

x2

**G**




x2



Kit C STANDARD and NON STANDARD


**H**



M5 x12mm

x4

**I**

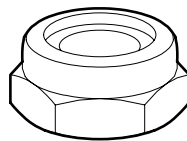

M5 NyLOCK

x4

**J**




x8



Kit Loom Extension (Cab power source)

K

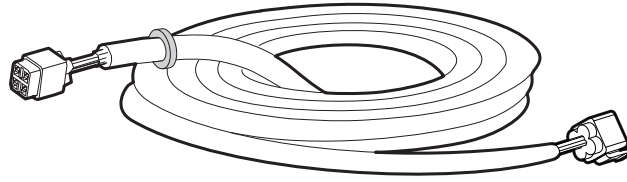


x 1





Tools and materials needed



1 - 25 Nm

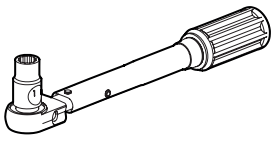


○ 6mm ○ 10mm

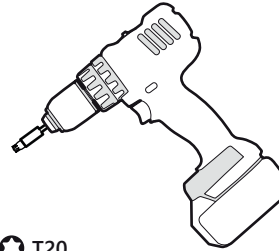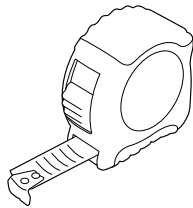



★ T20

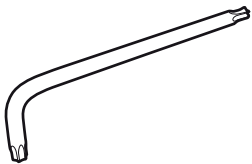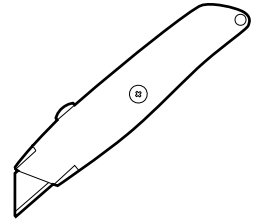

★ T20

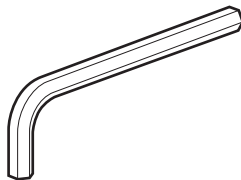


○ 5mm

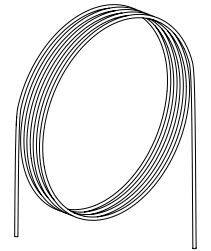
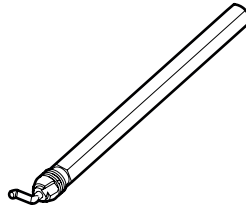





1

Applying rust protection


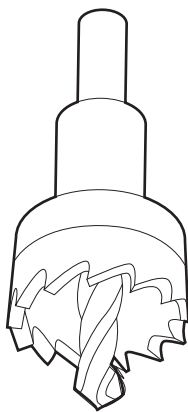


∅18mm

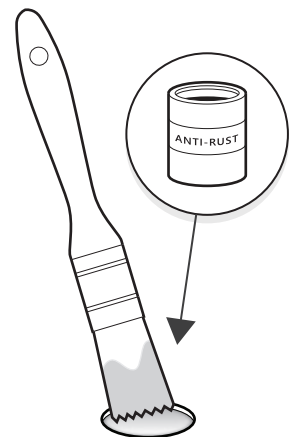
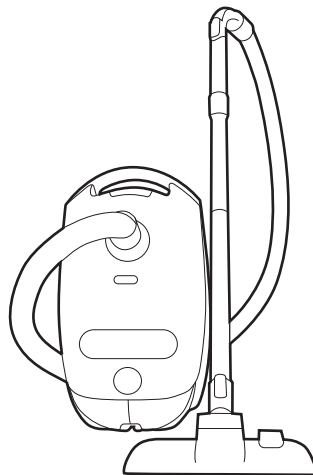


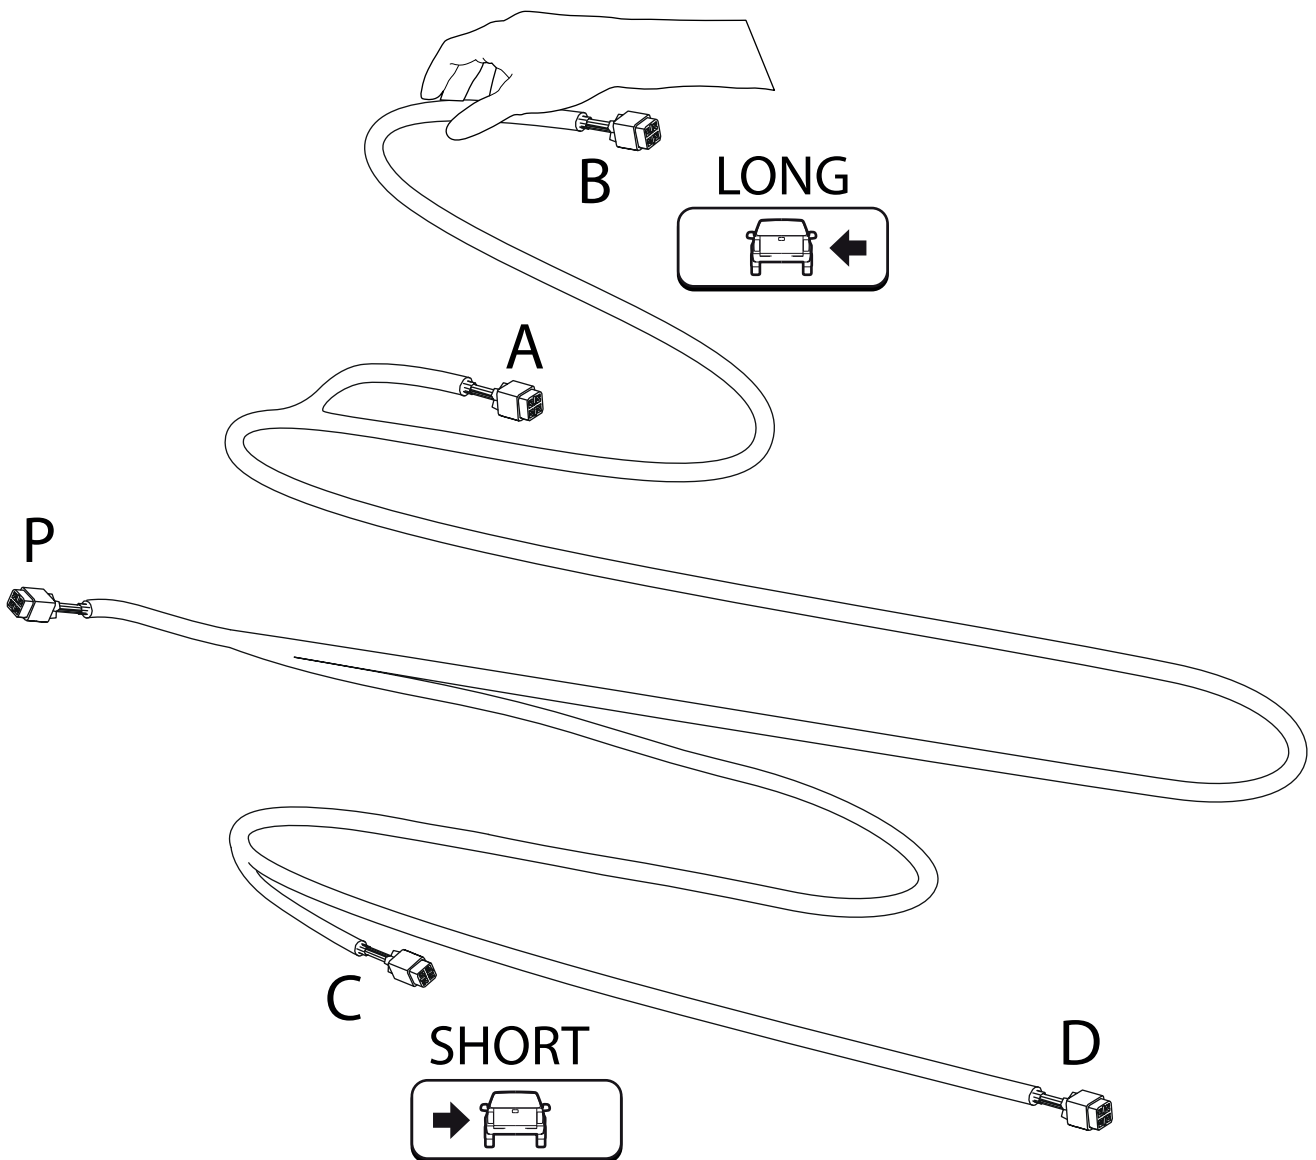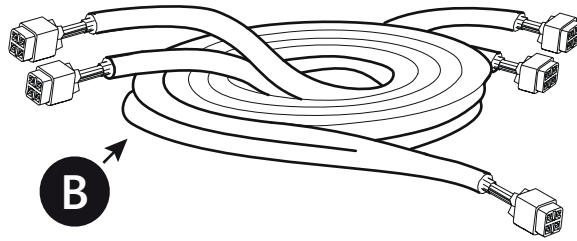


CAB POWER SOURCE

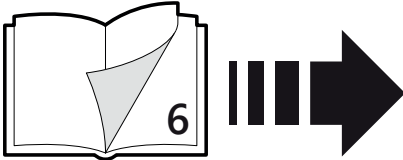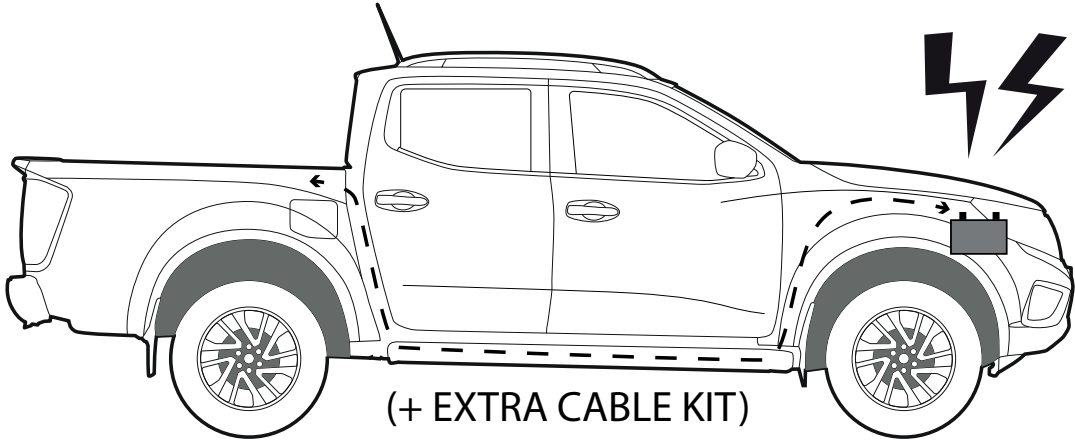


TUB POWER SOURCE

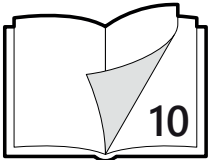
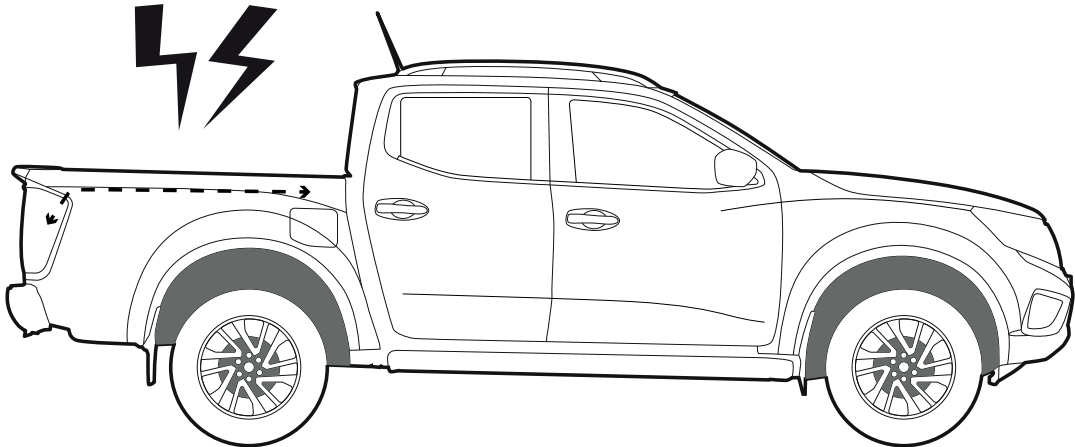




1

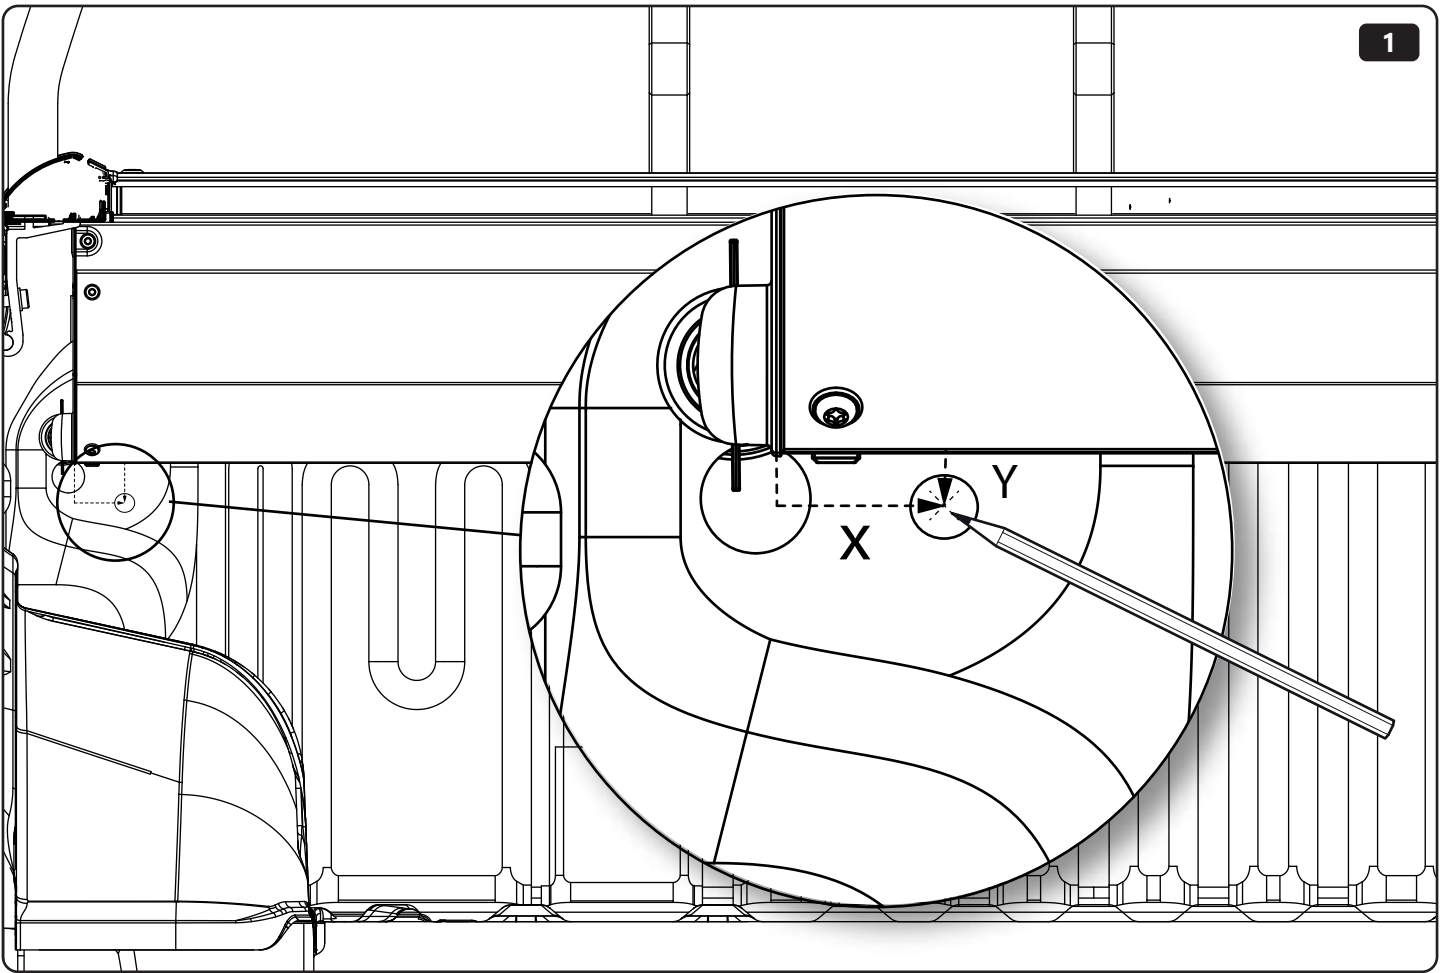



2




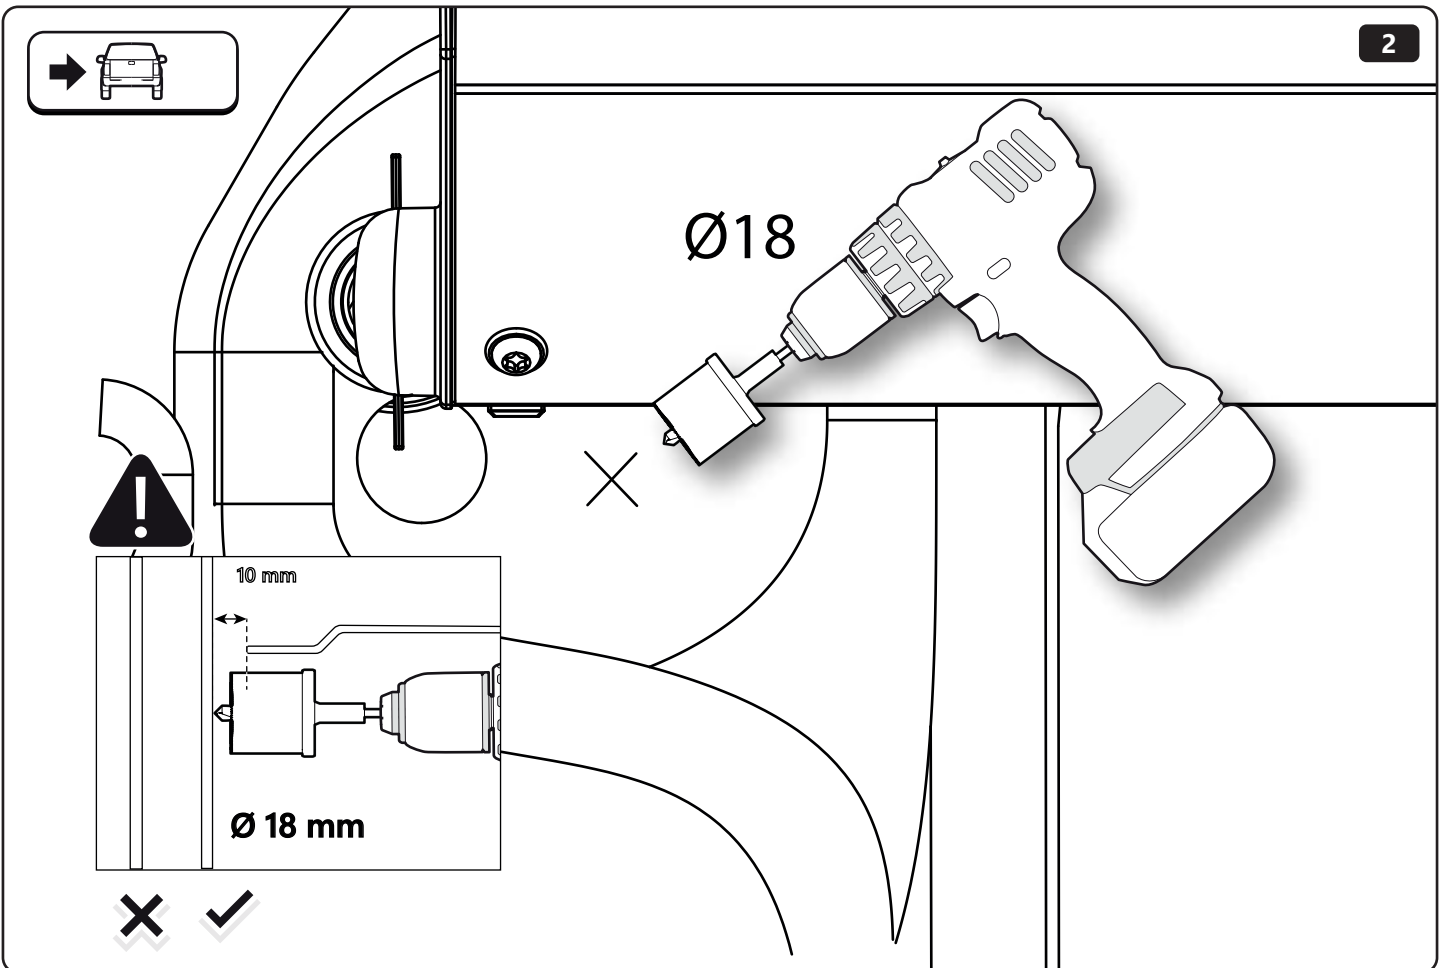


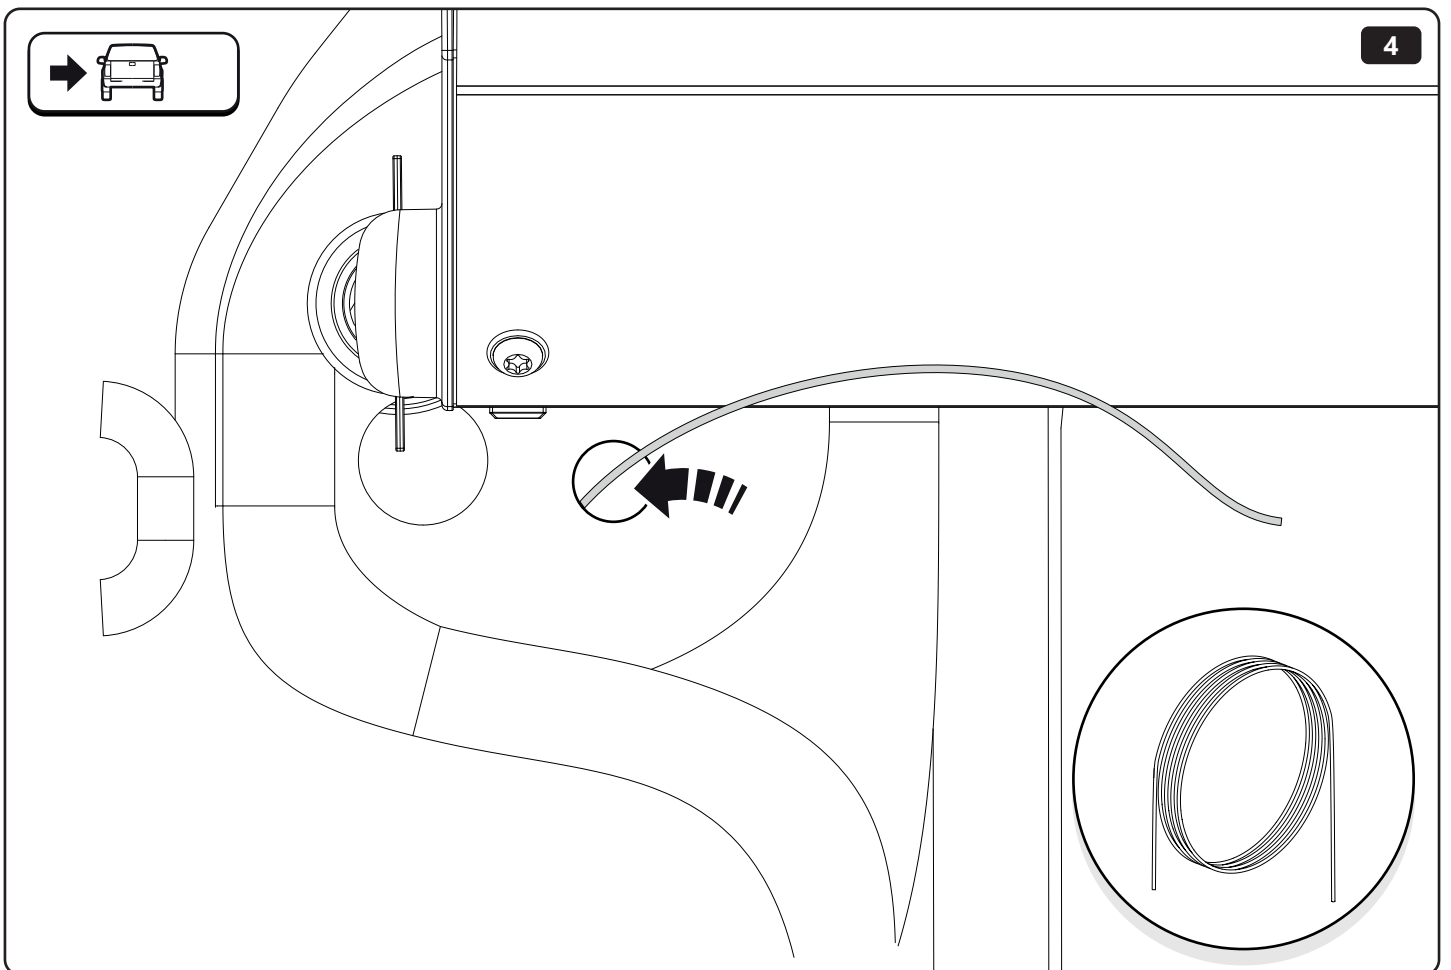
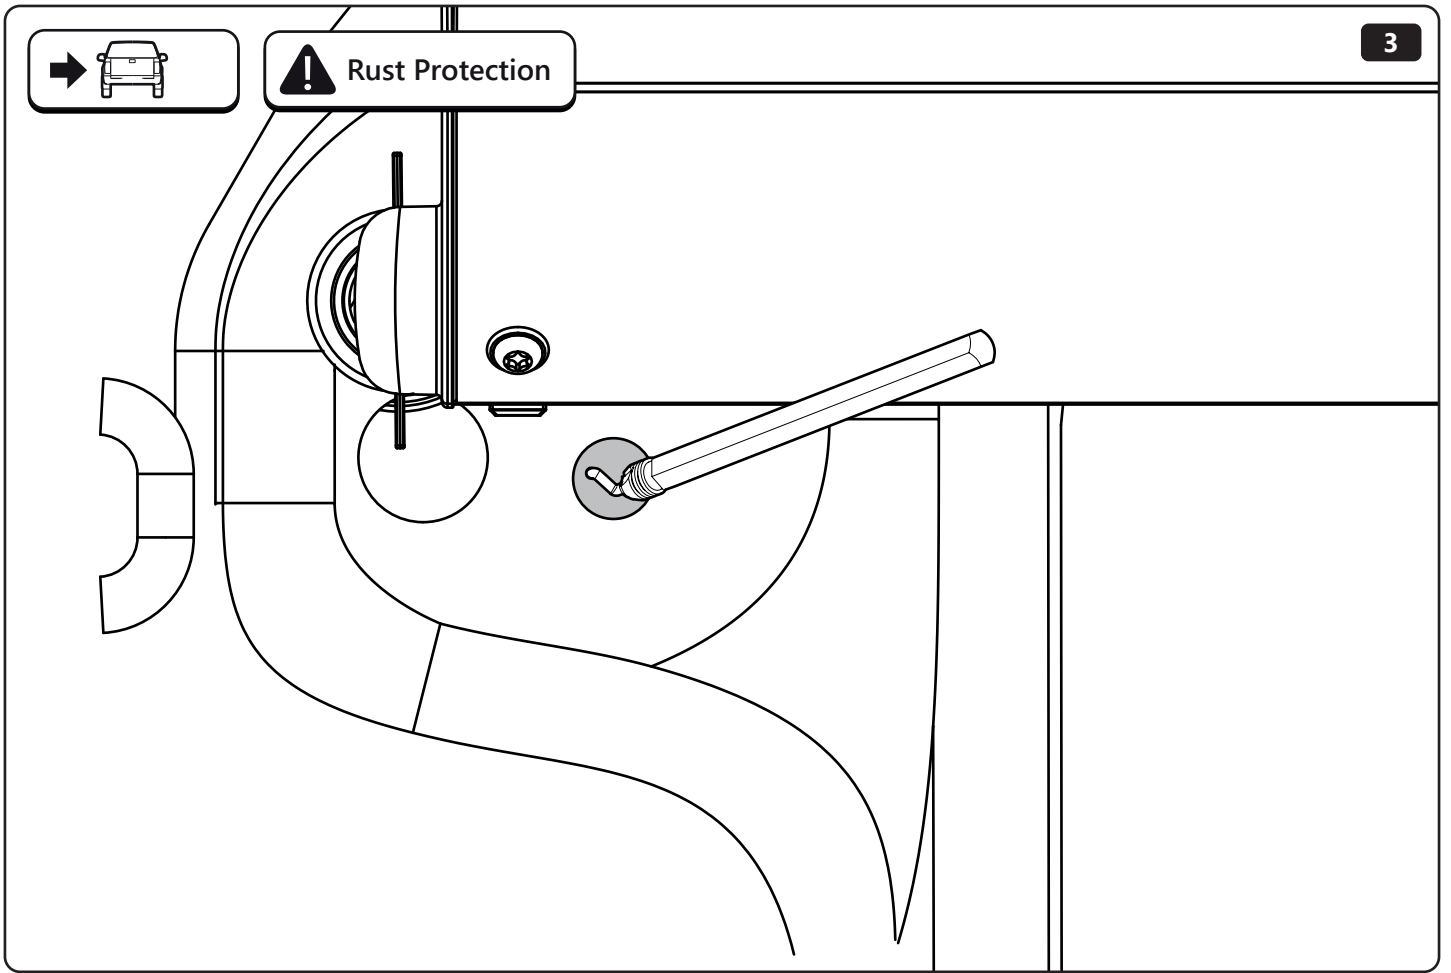


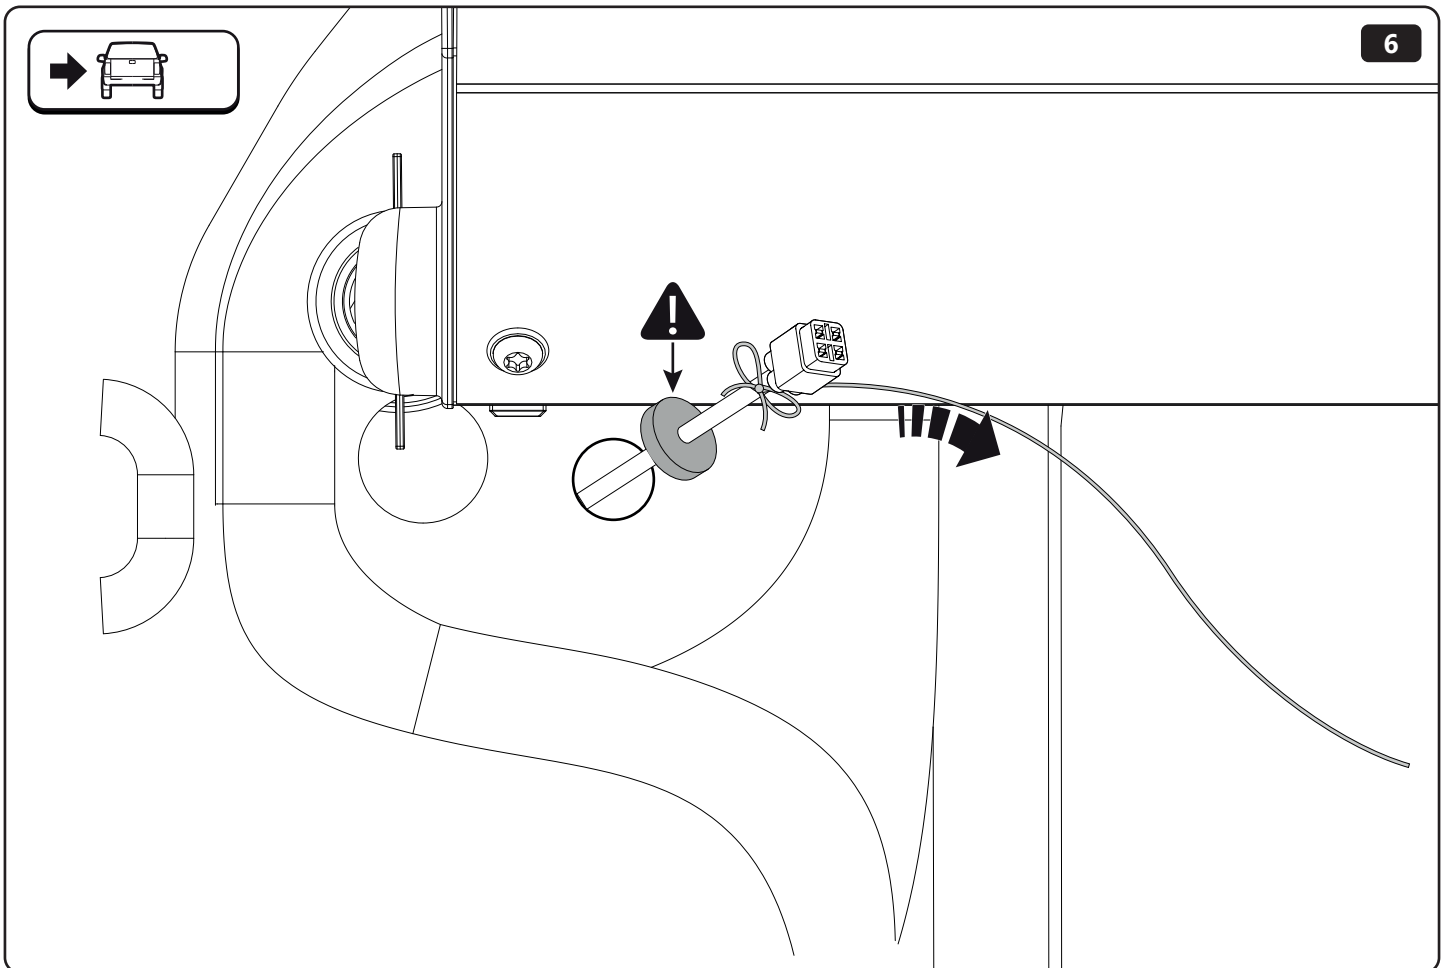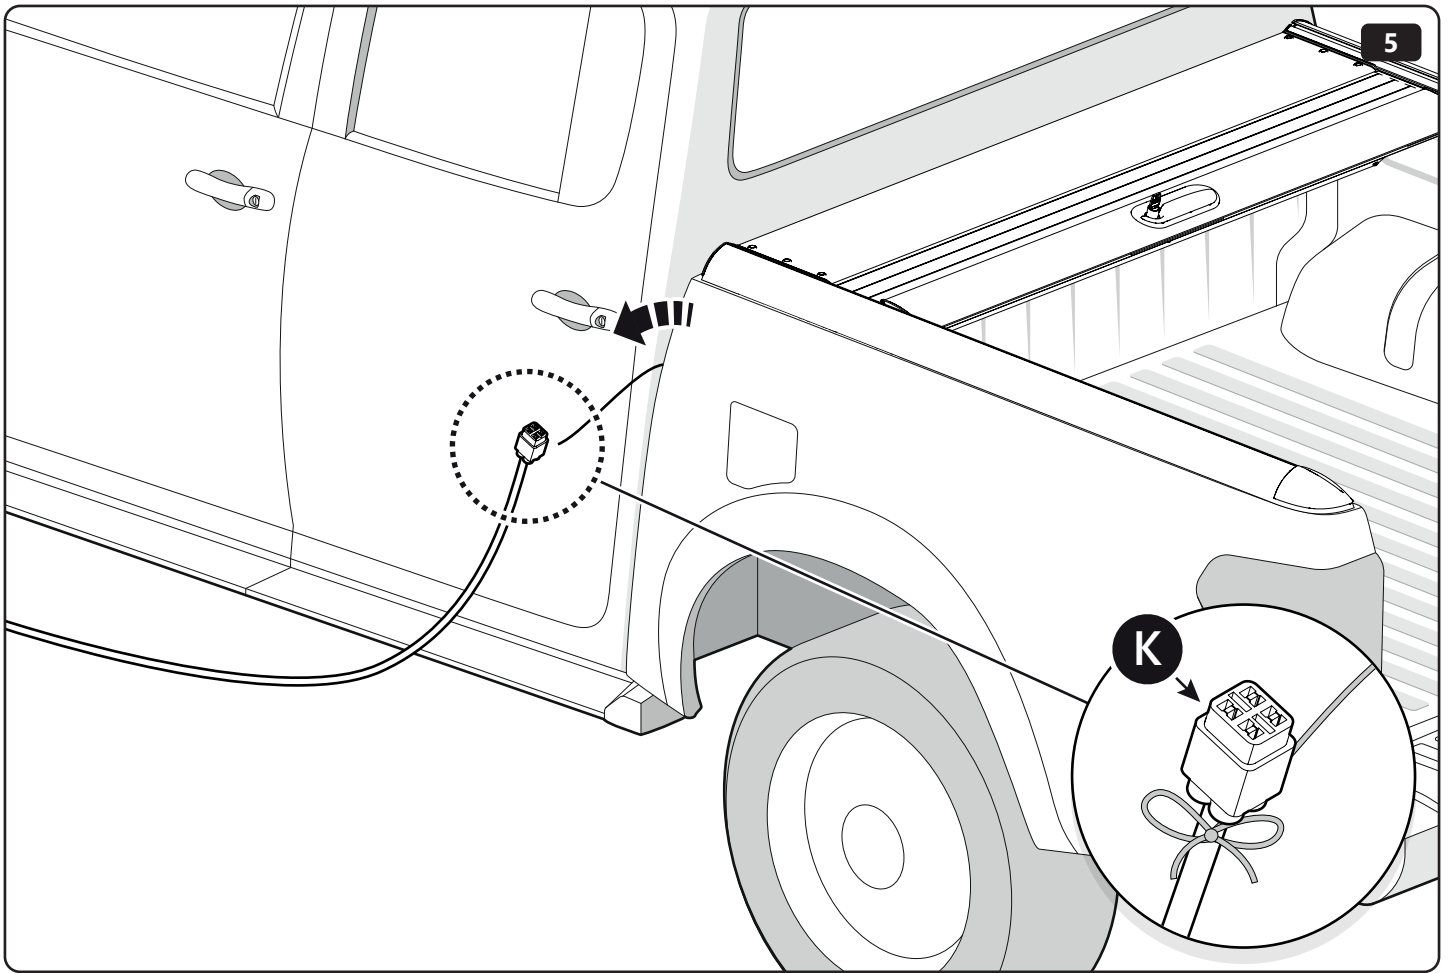




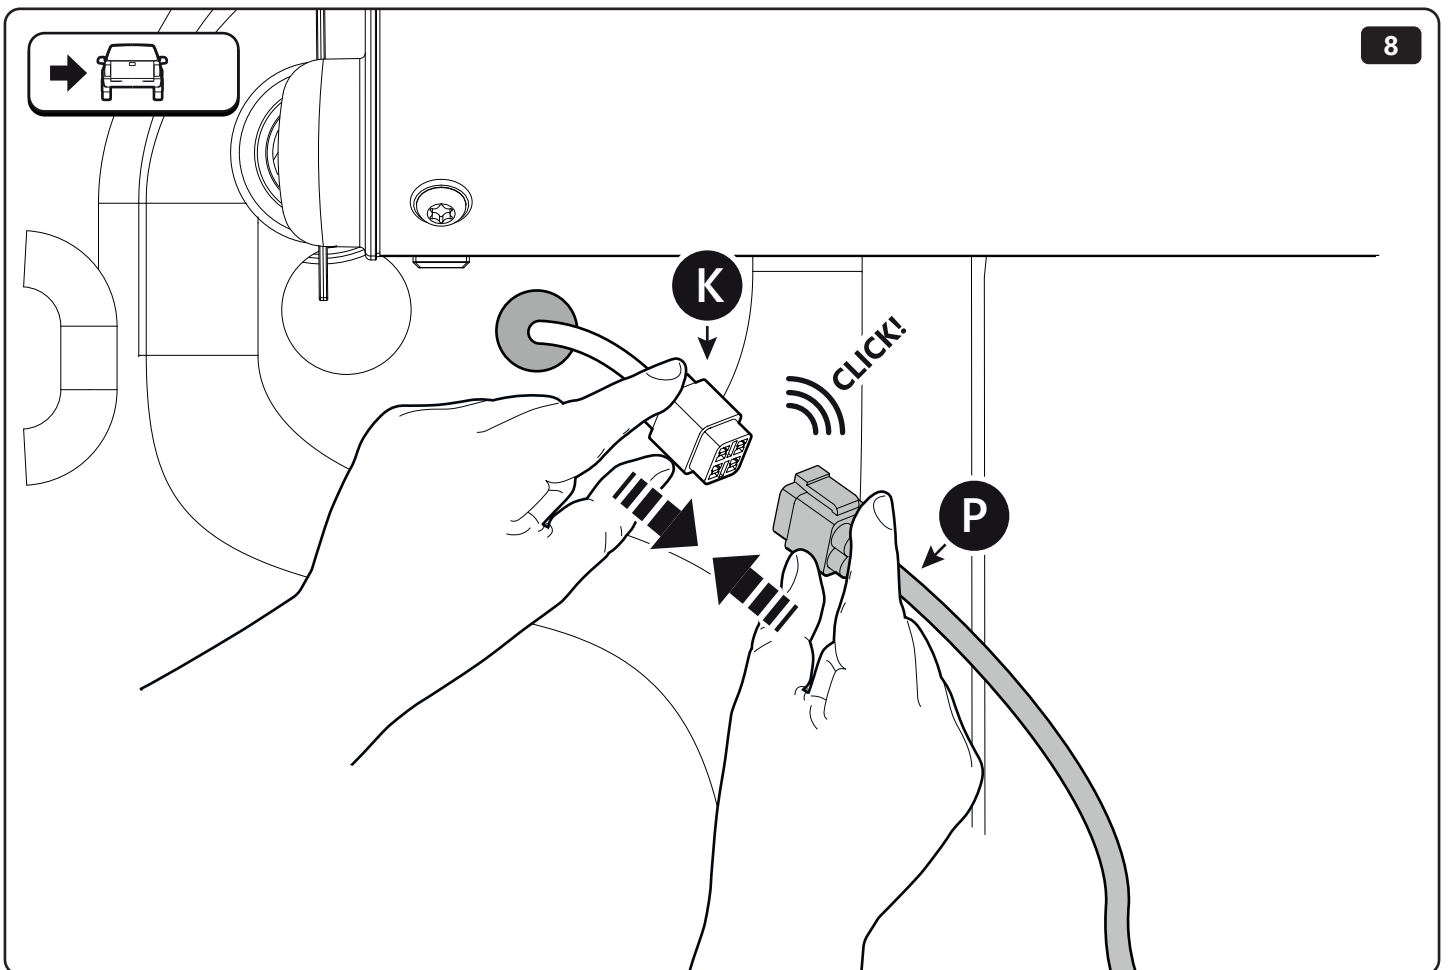
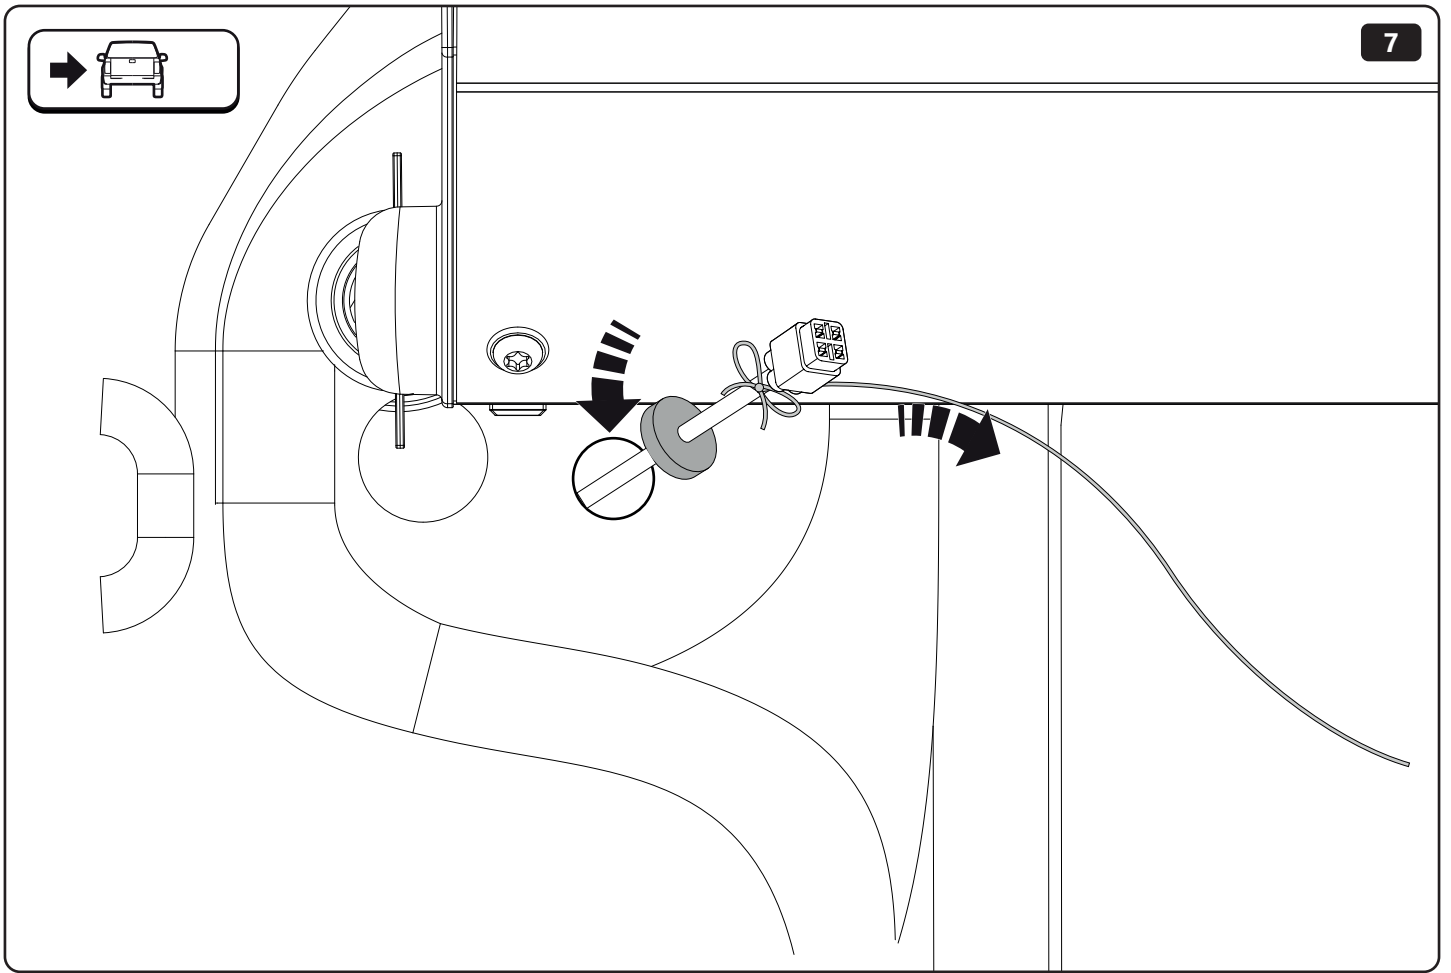


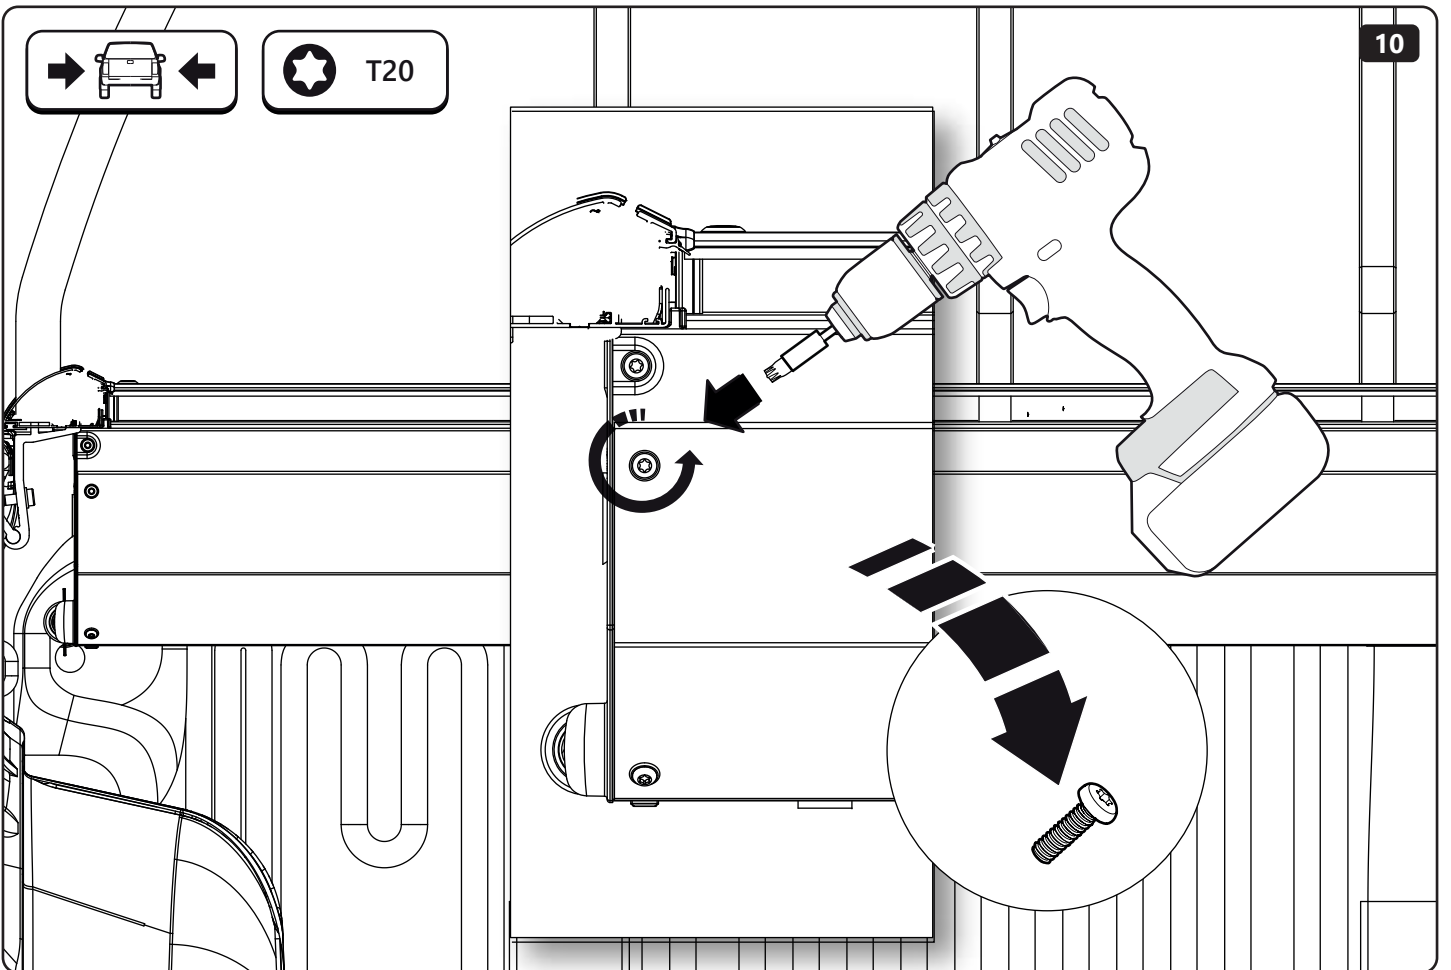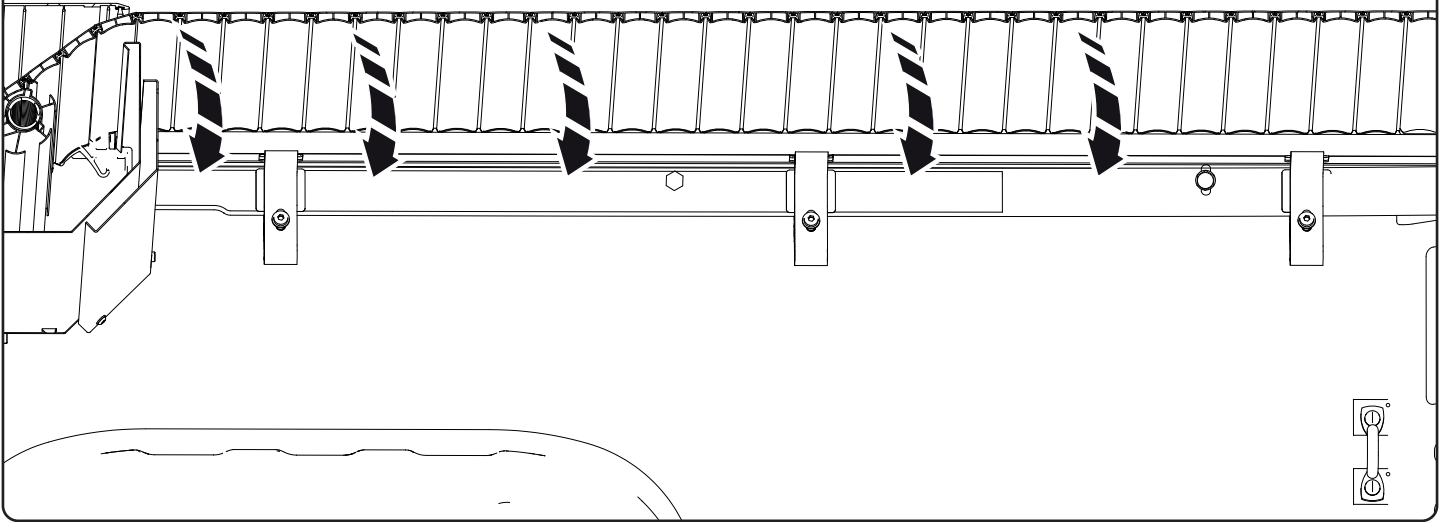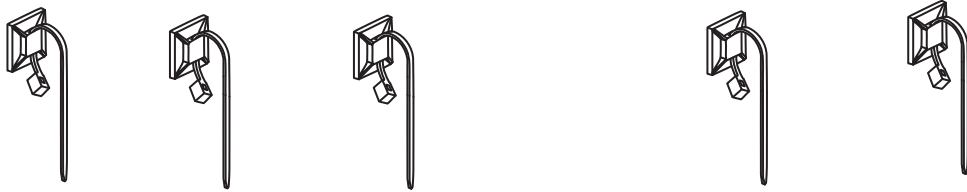

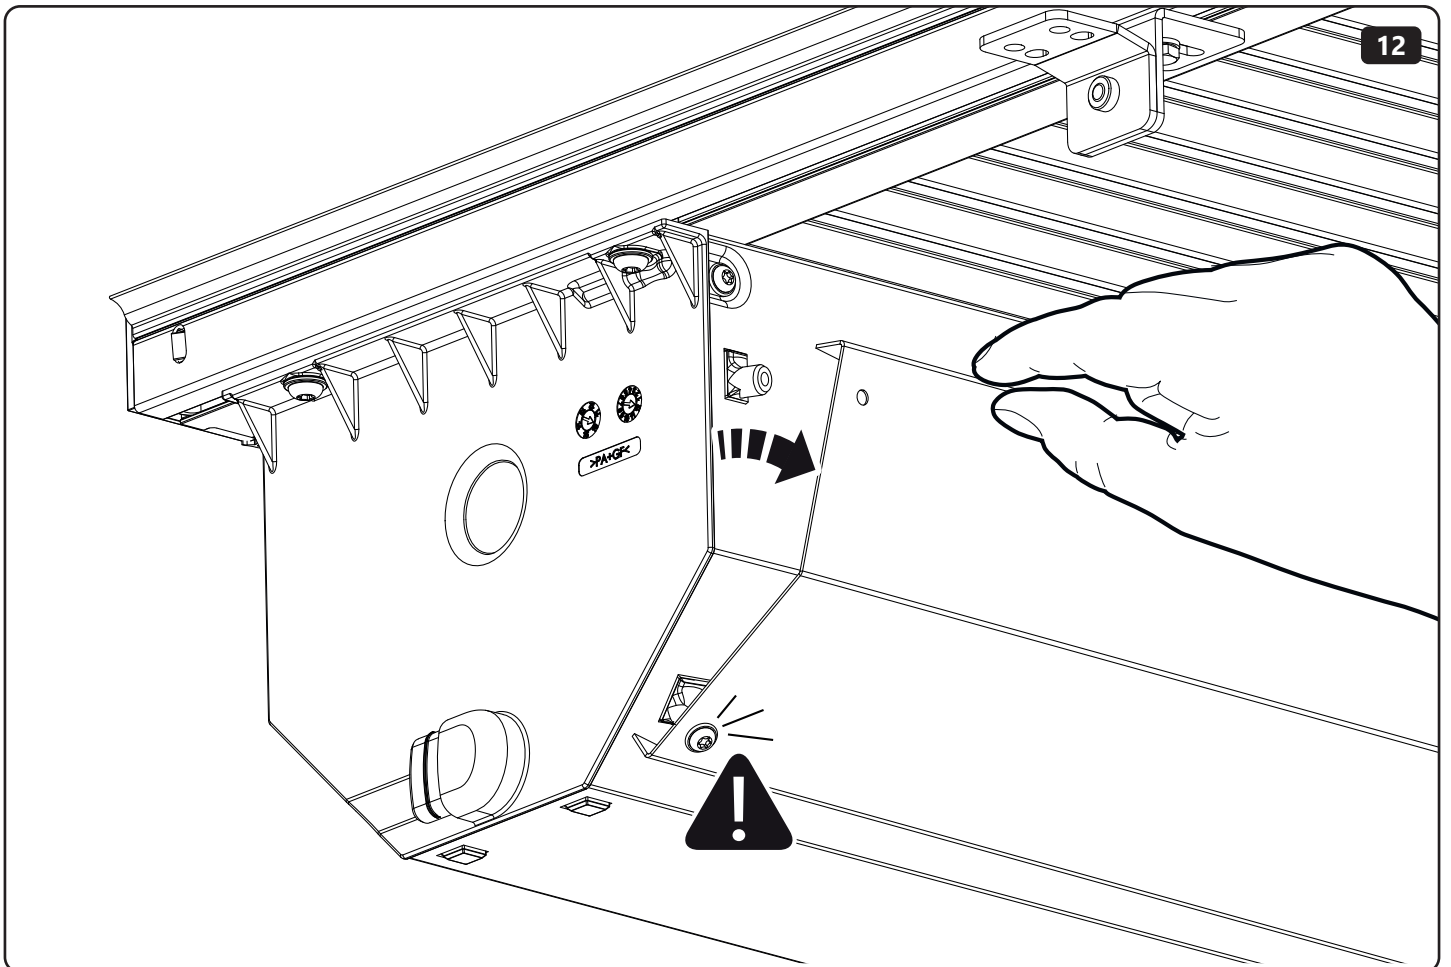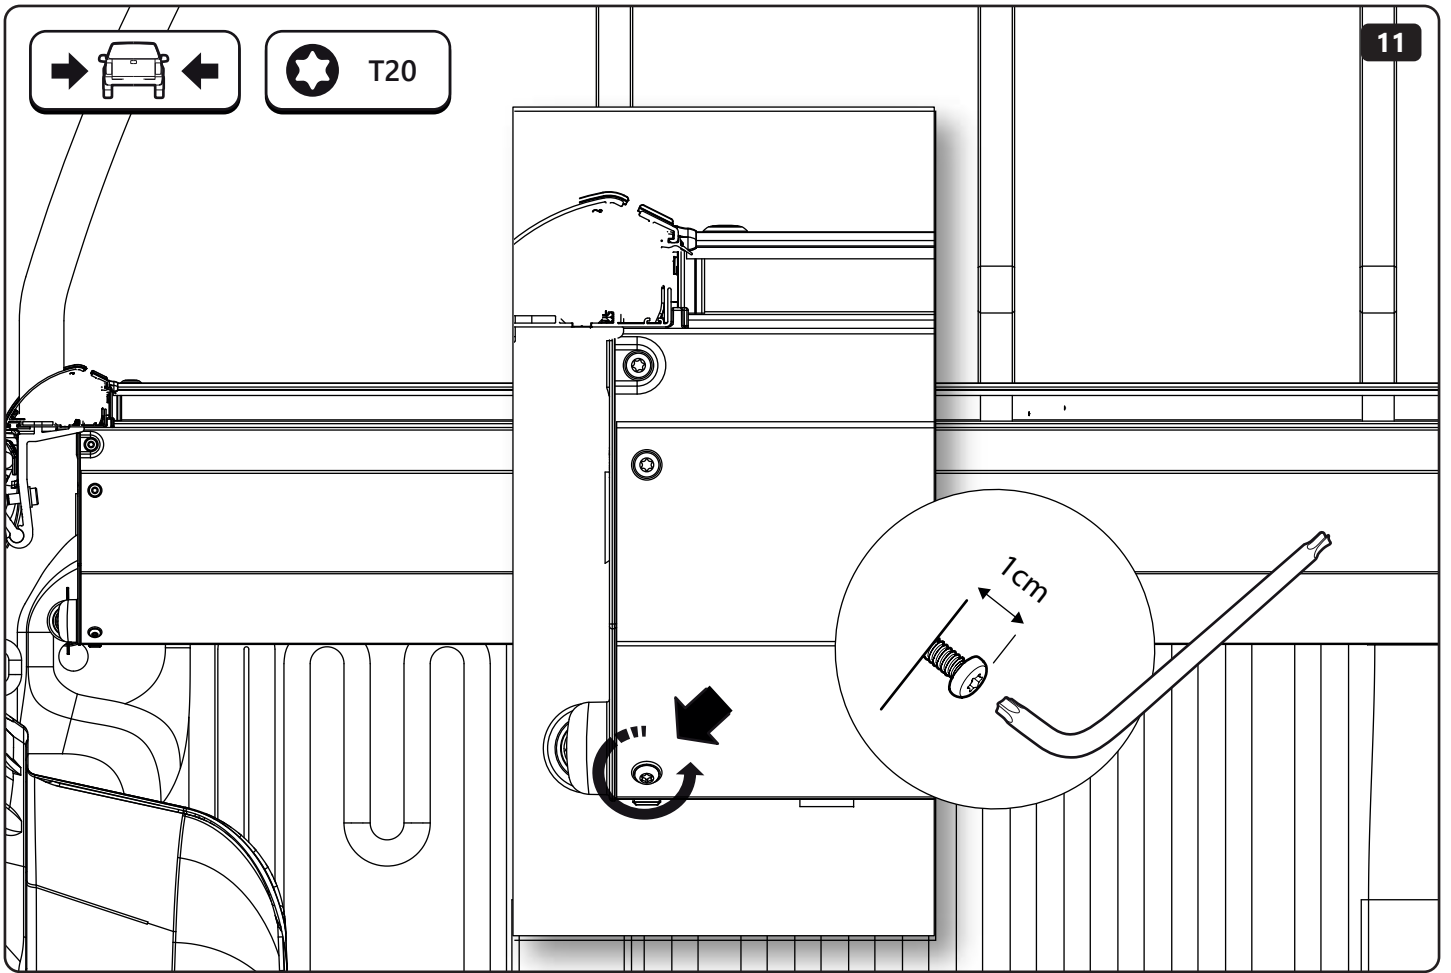


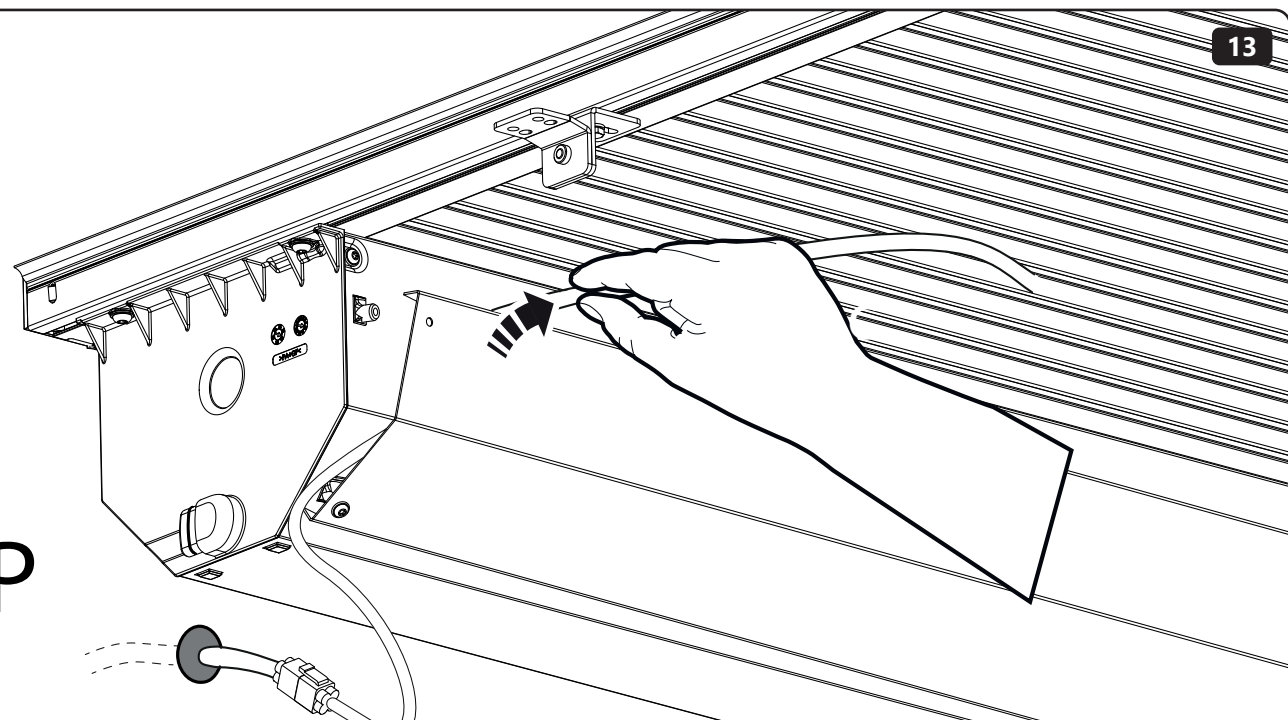


P

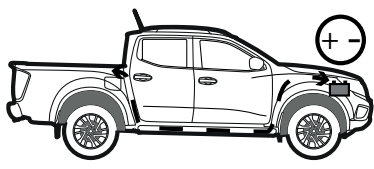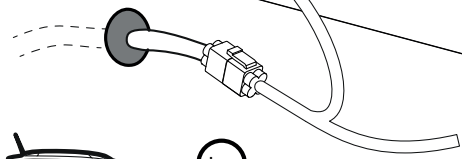



CAB POWER SOURCE


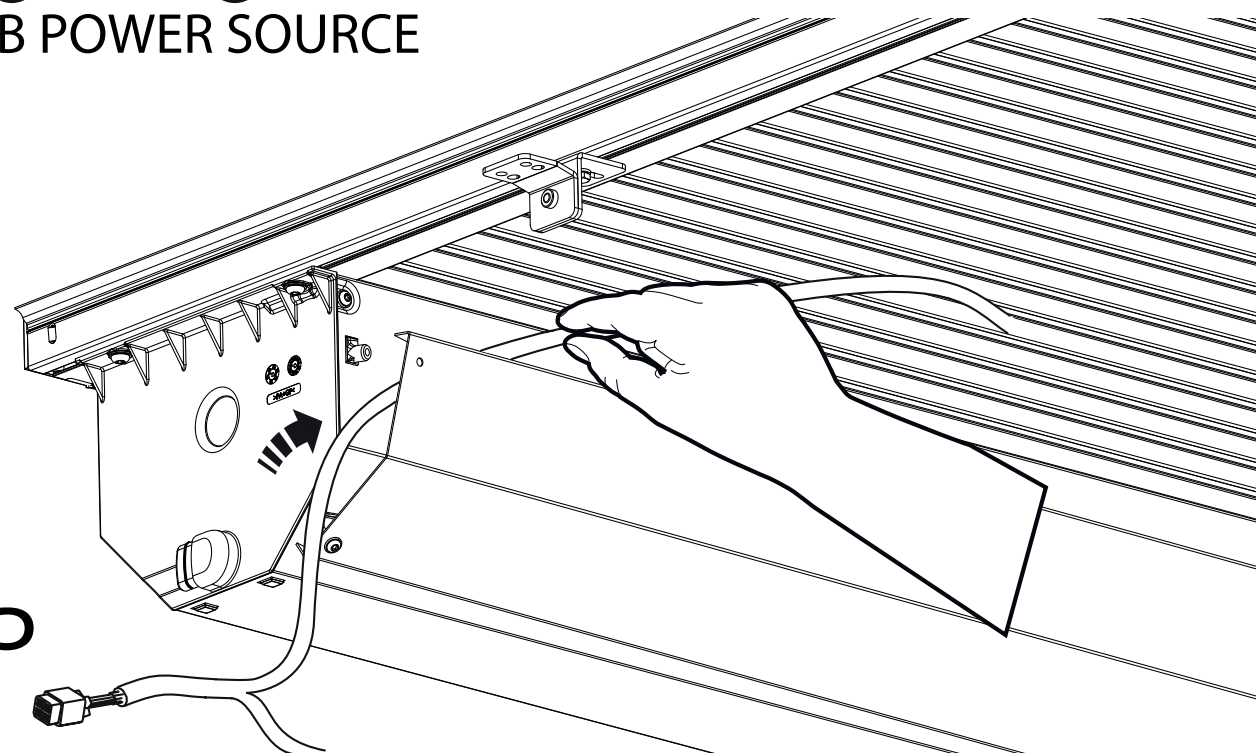


P

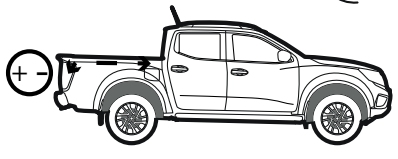



TUB POWER SOURCE

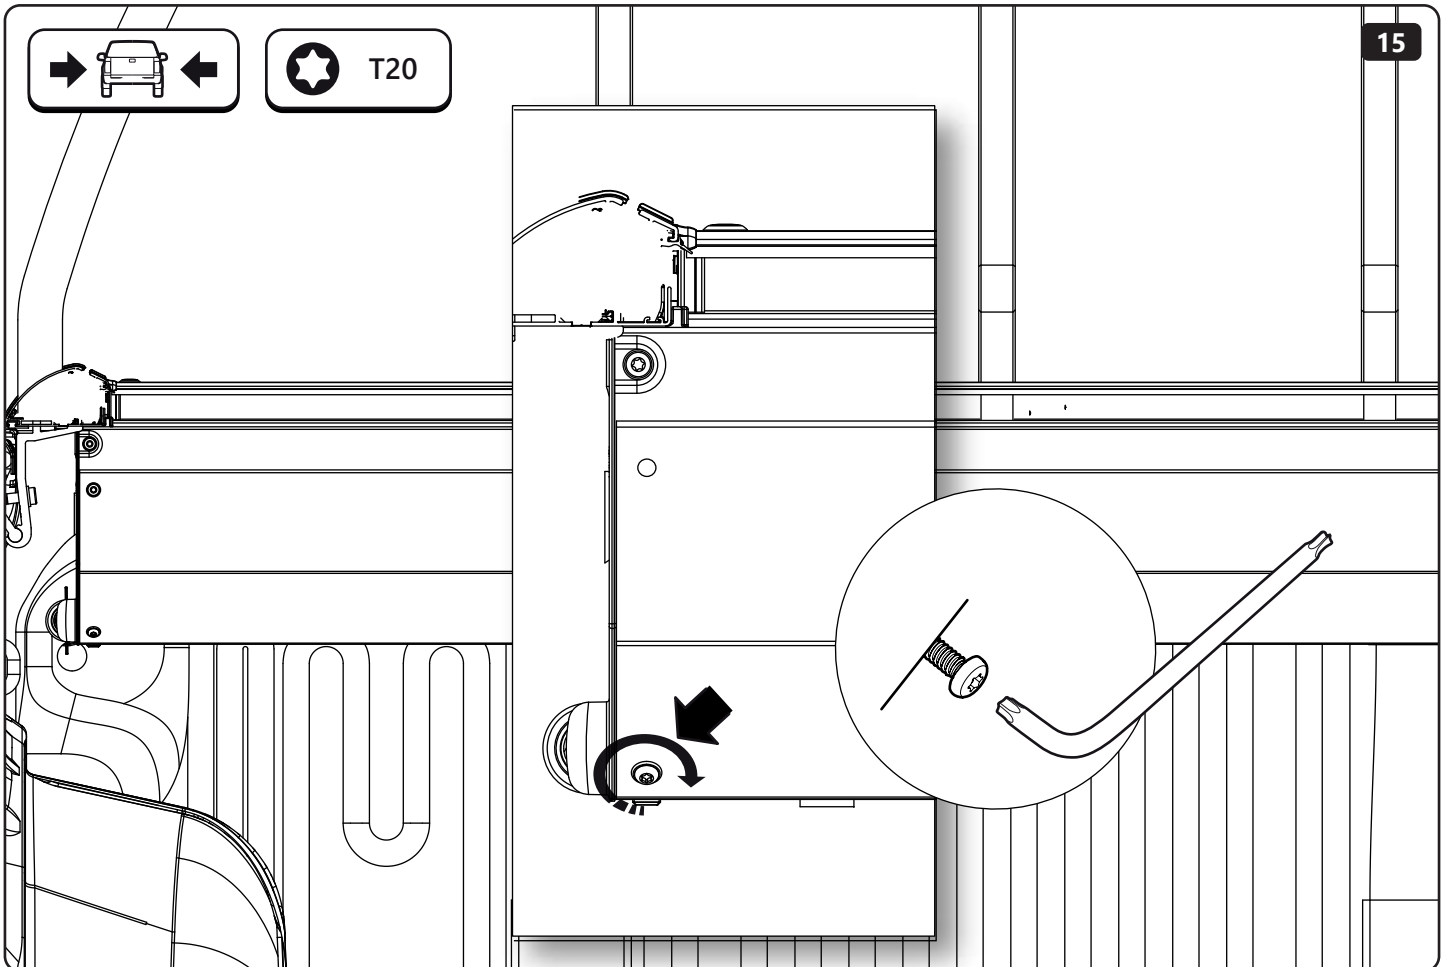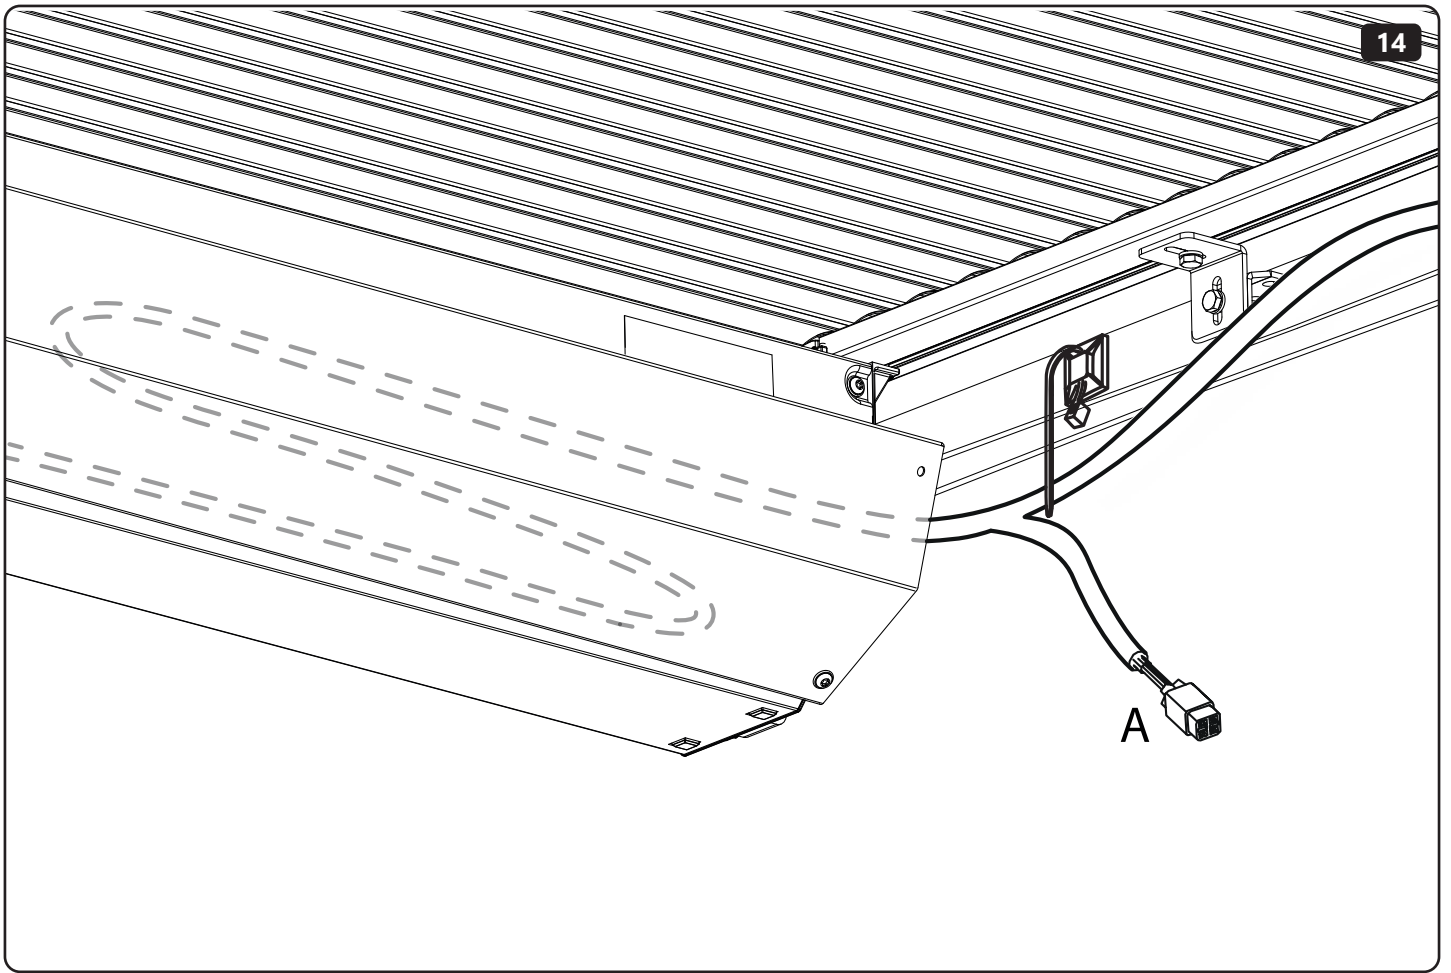

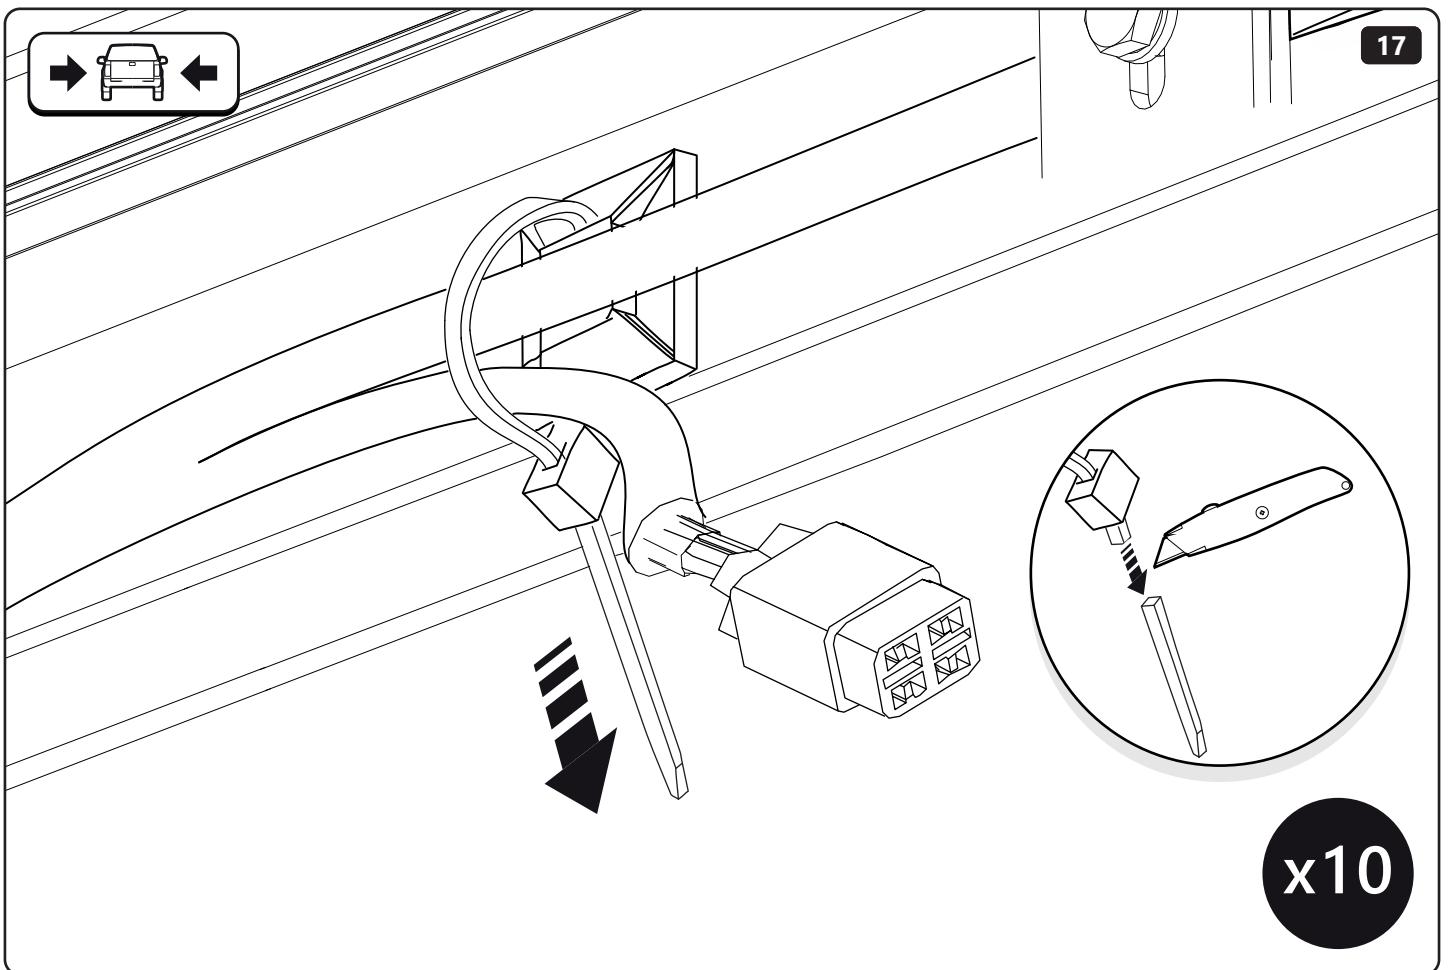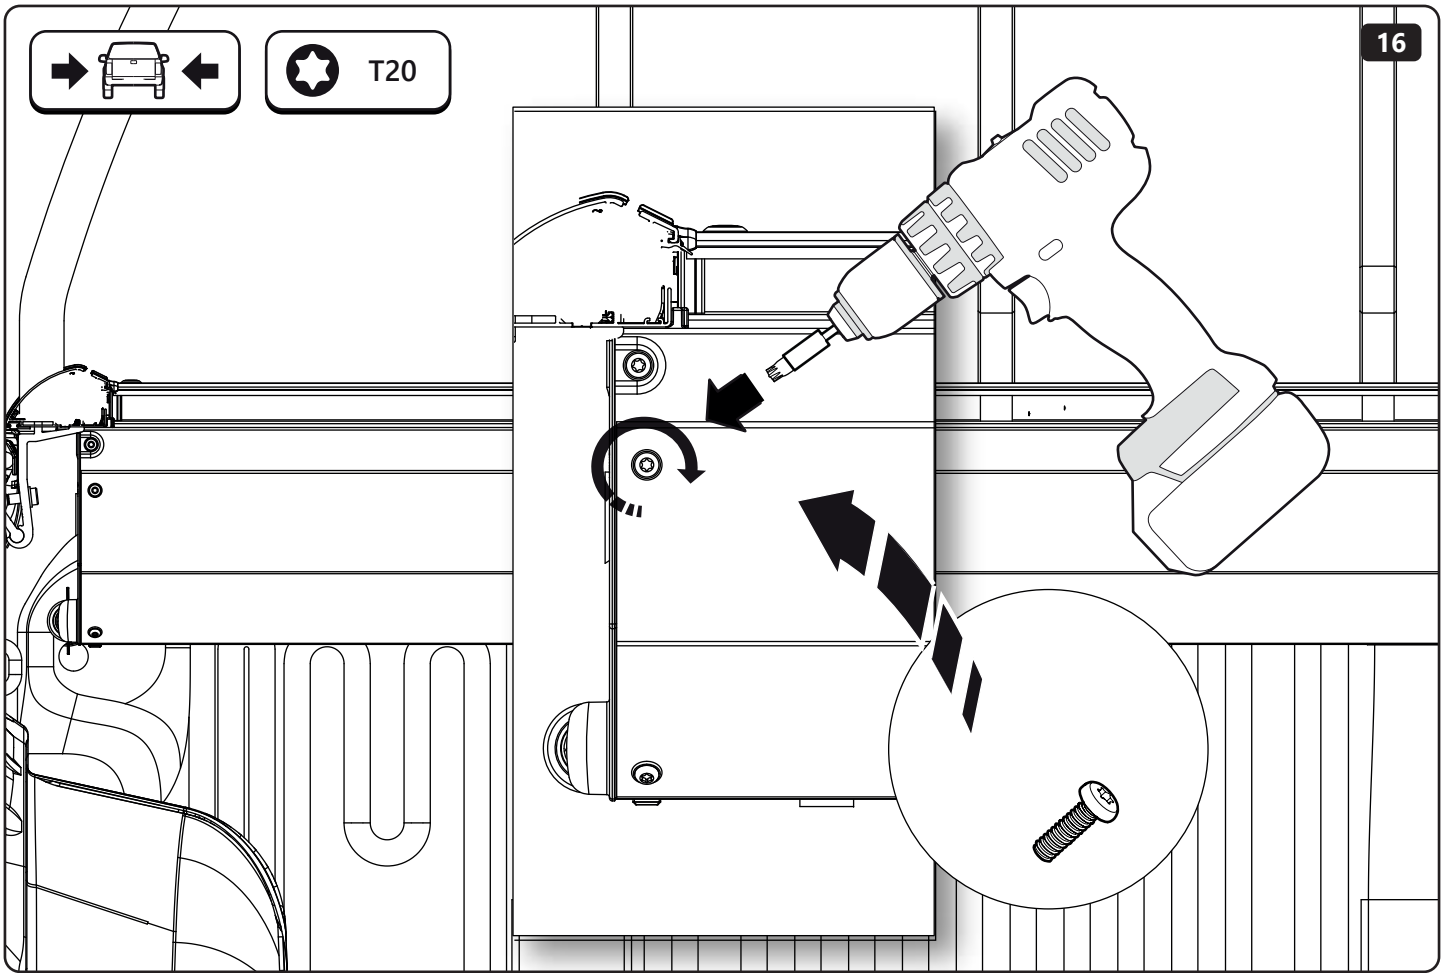





CAB POWER SOURCE

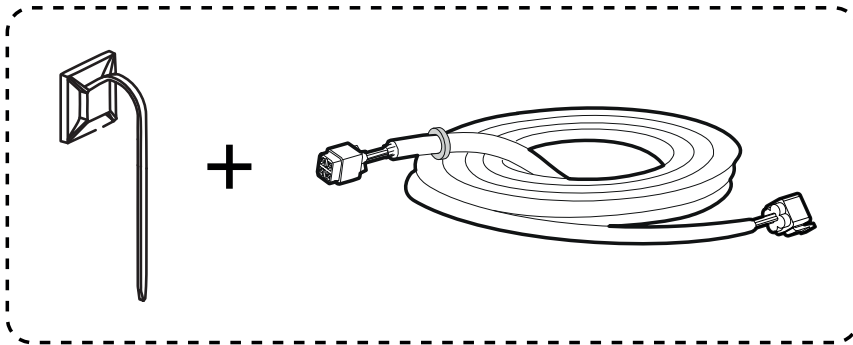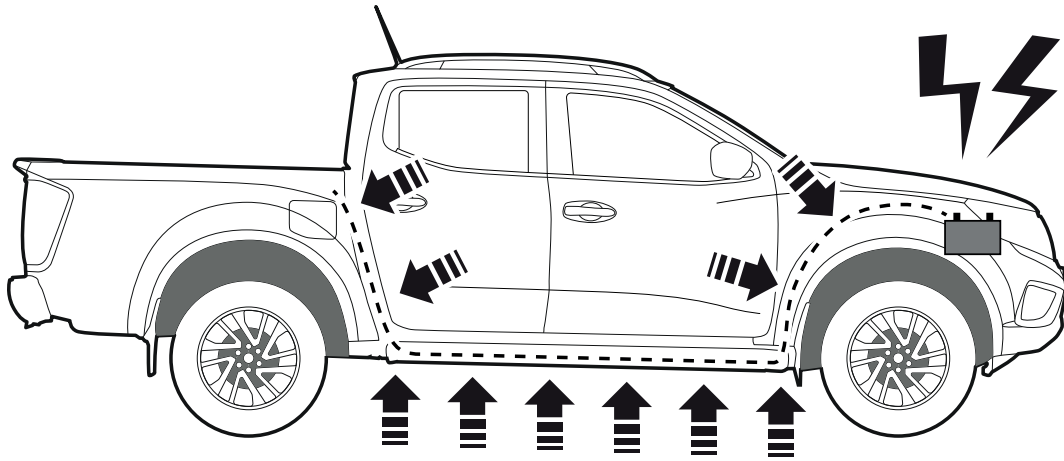




6mm

T20

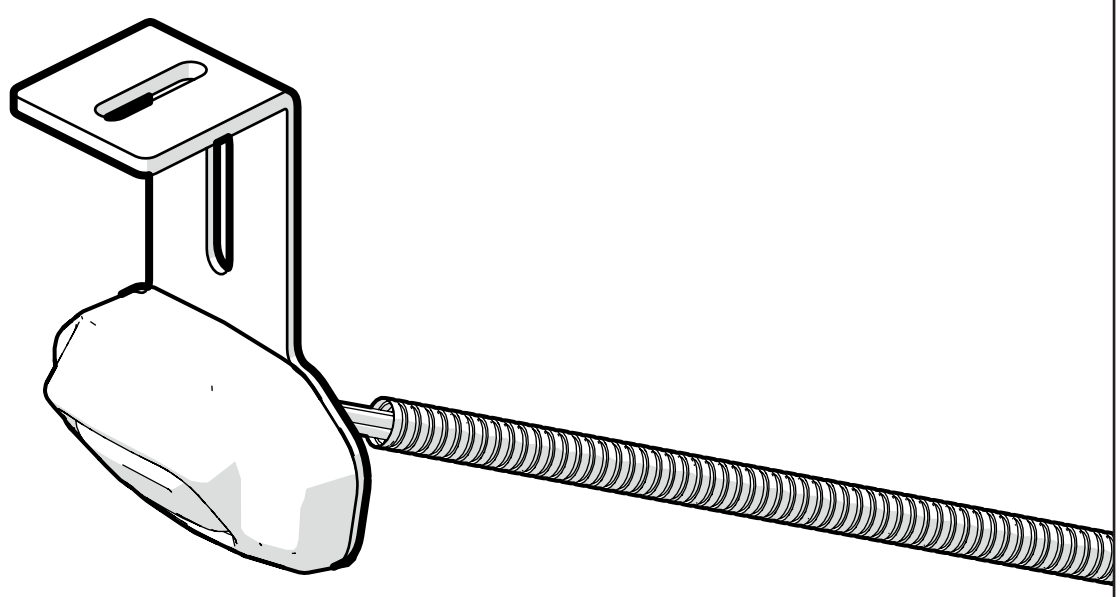
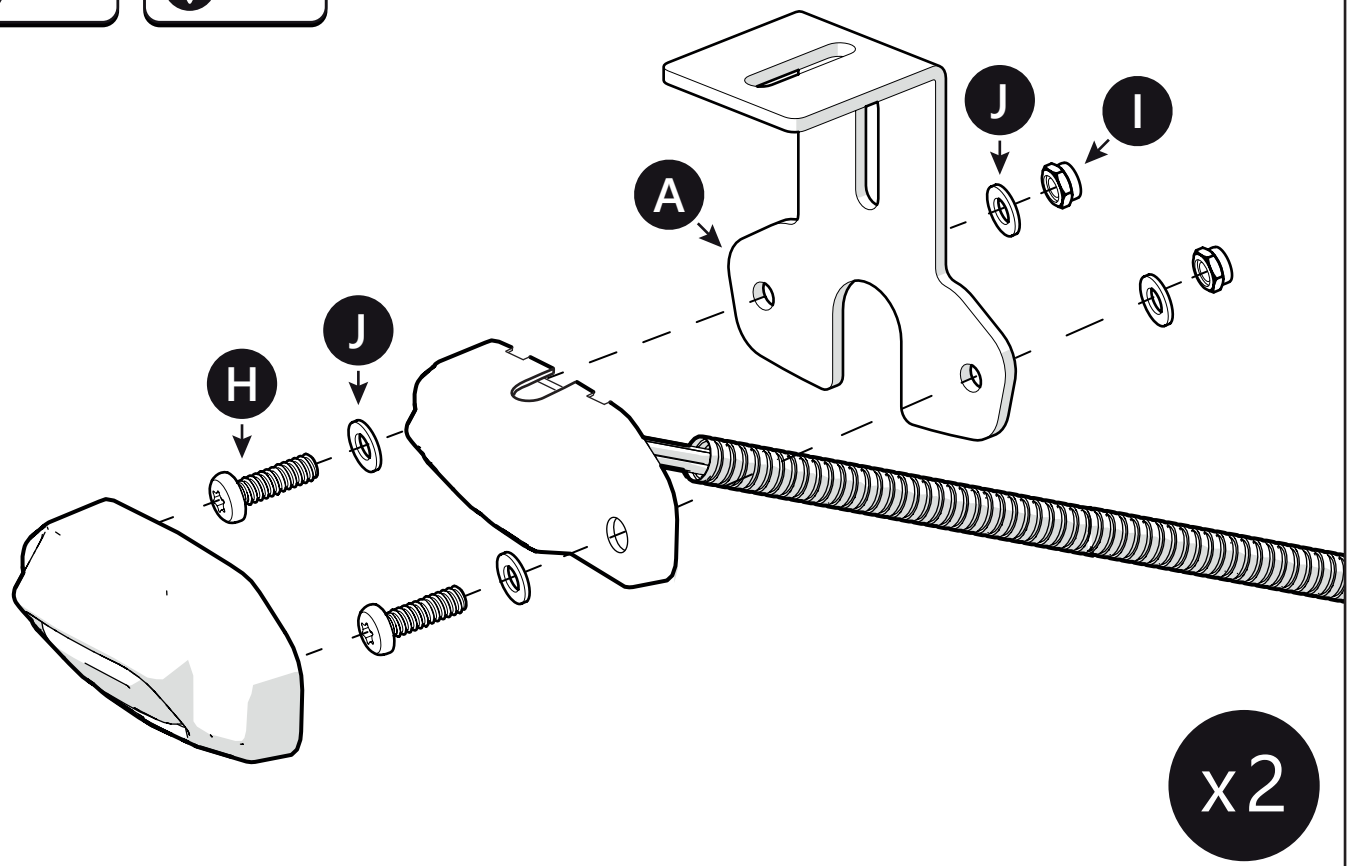









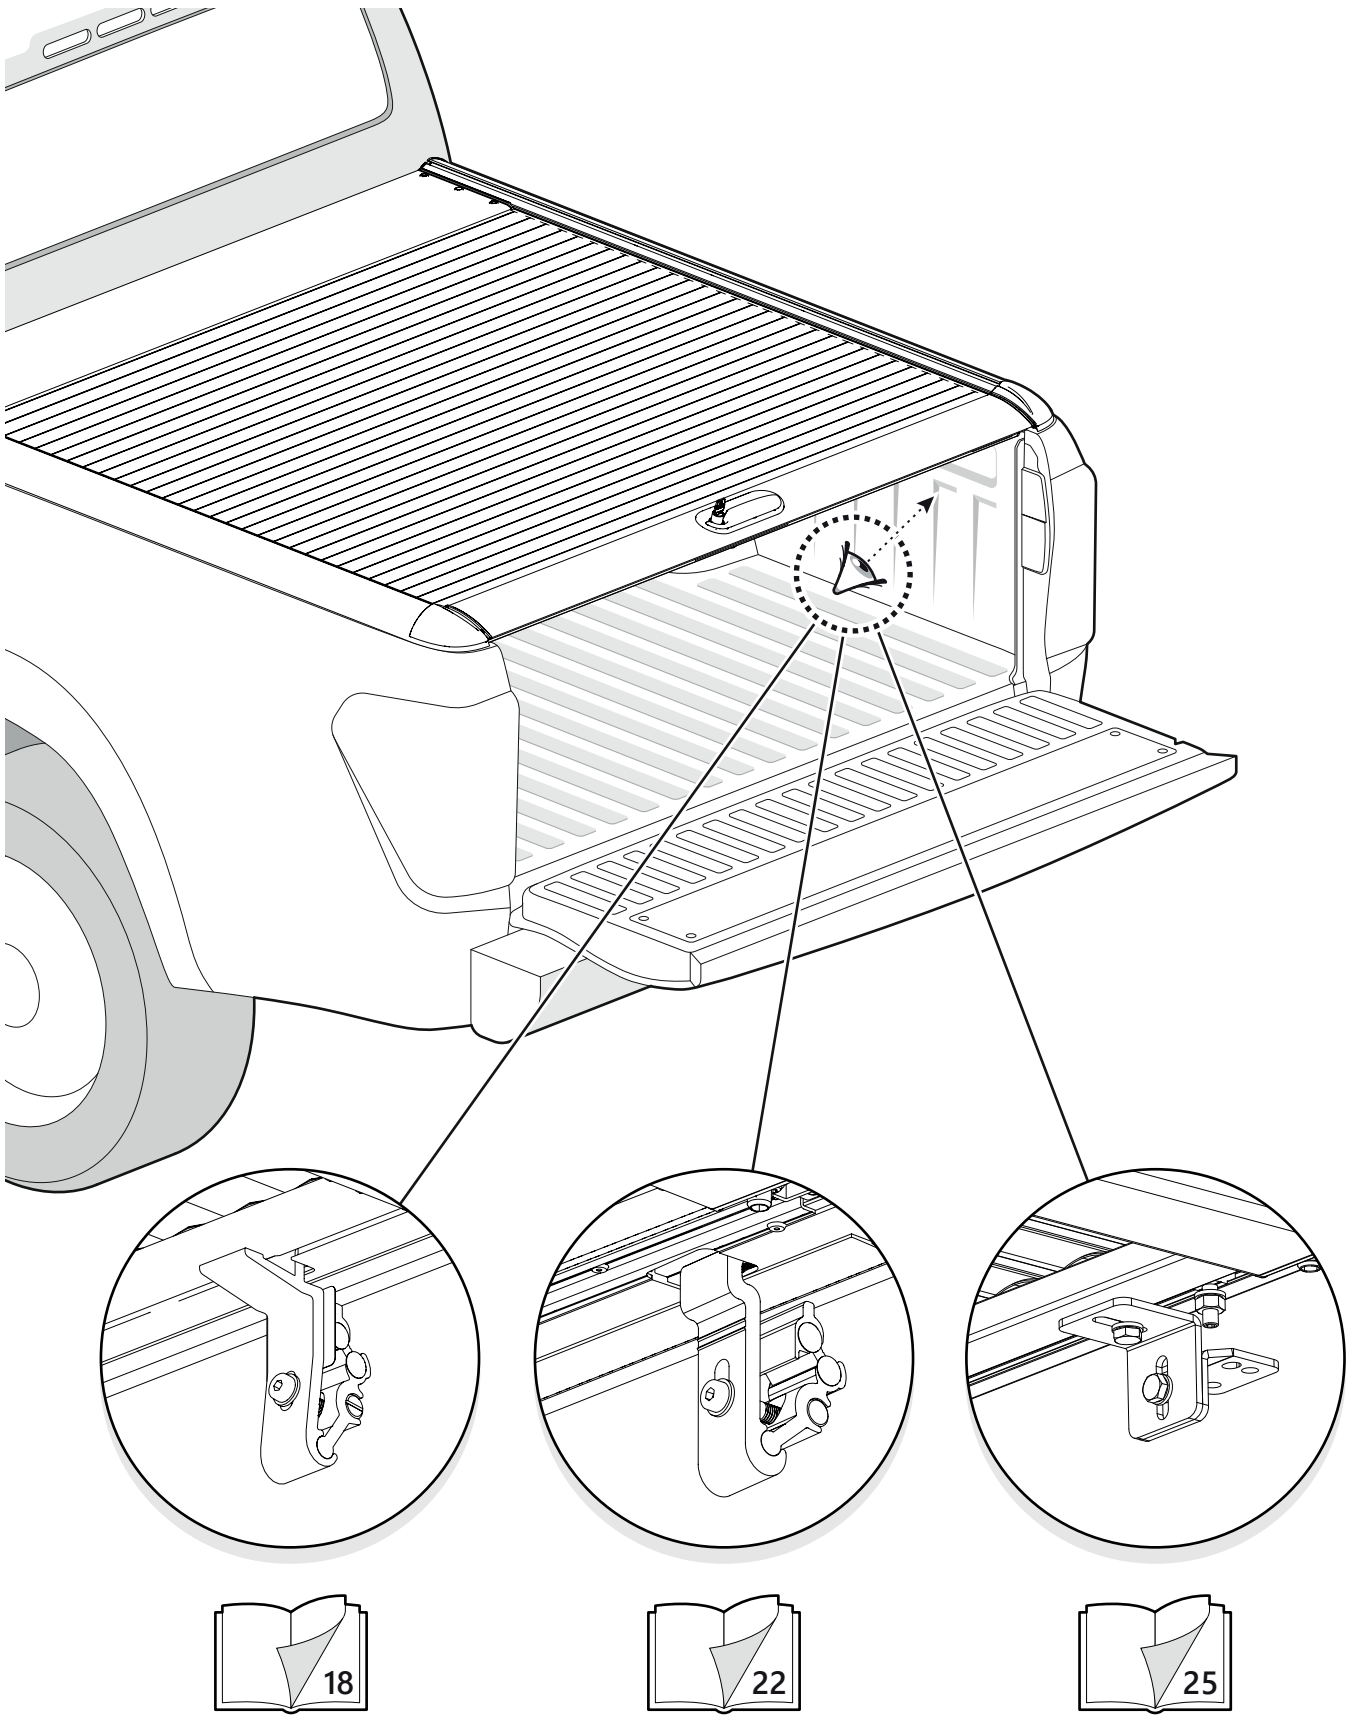


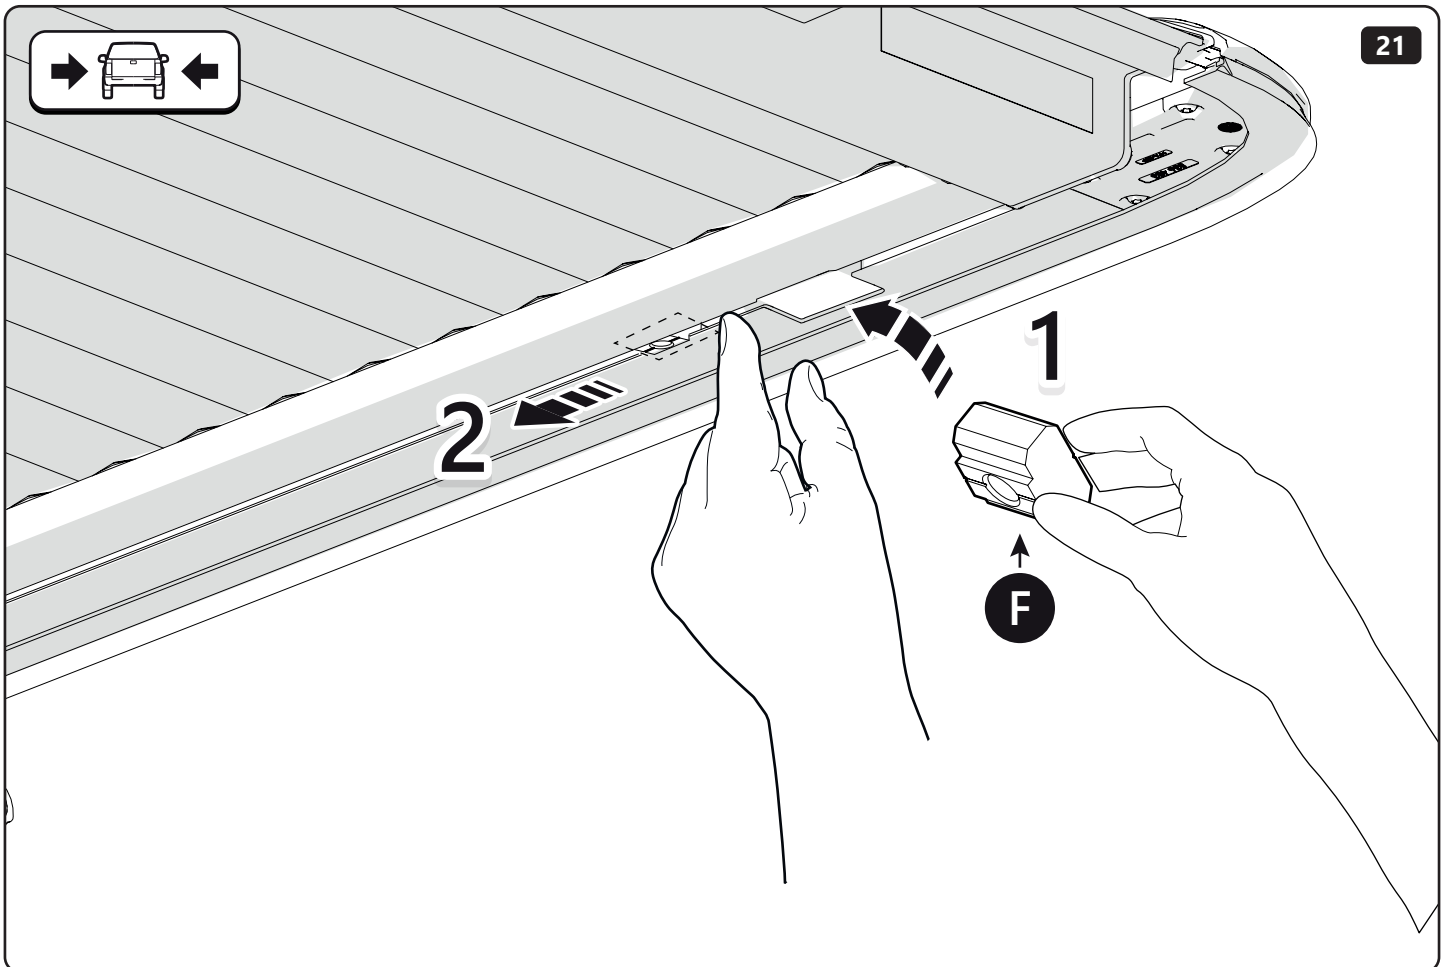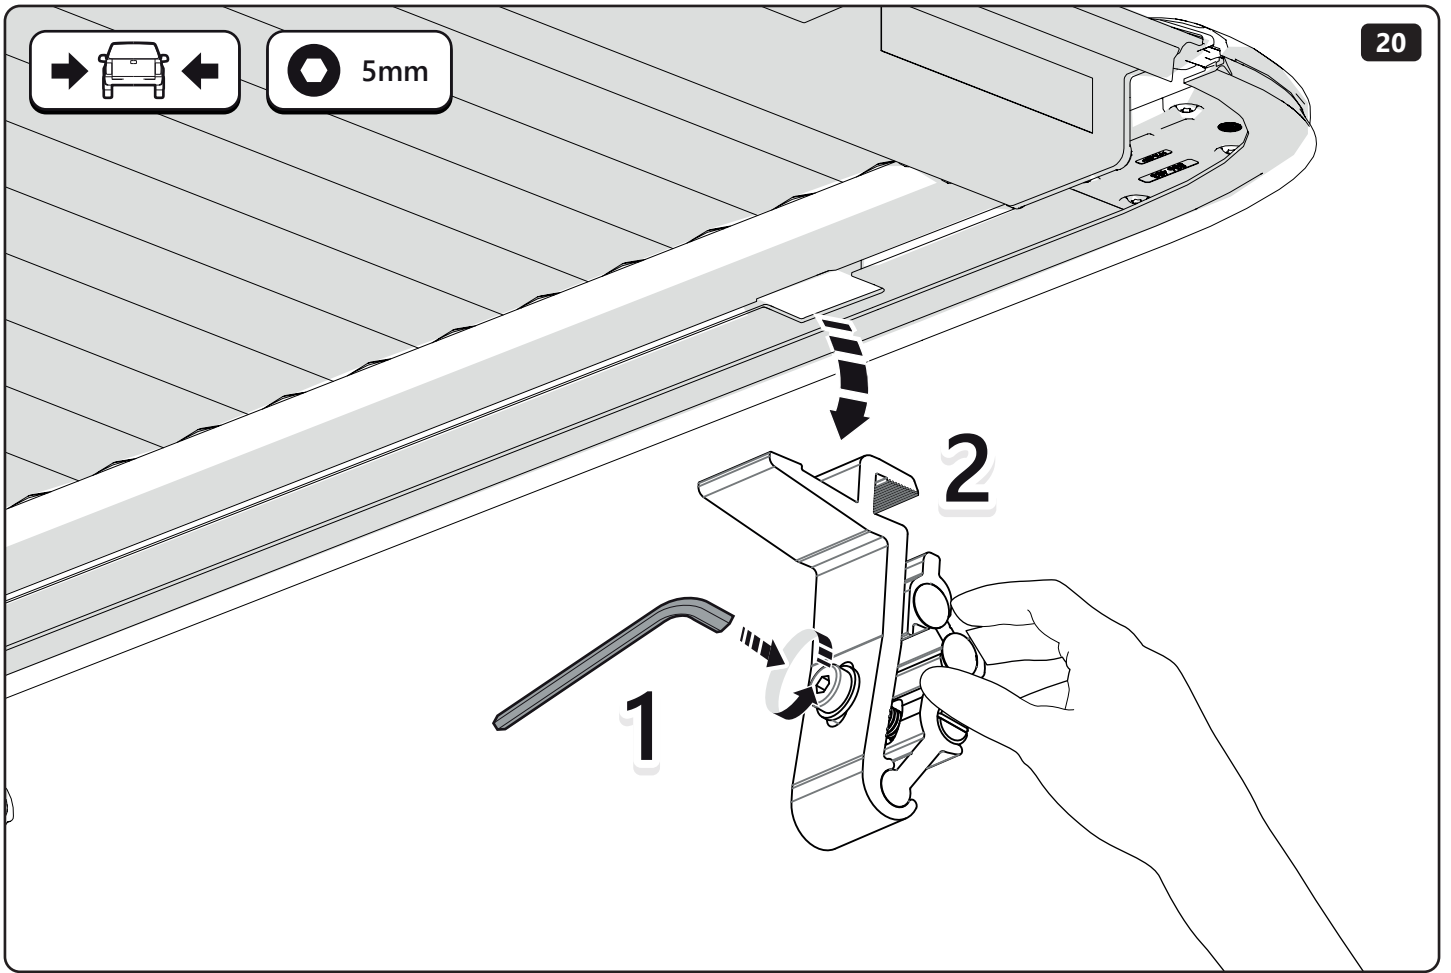





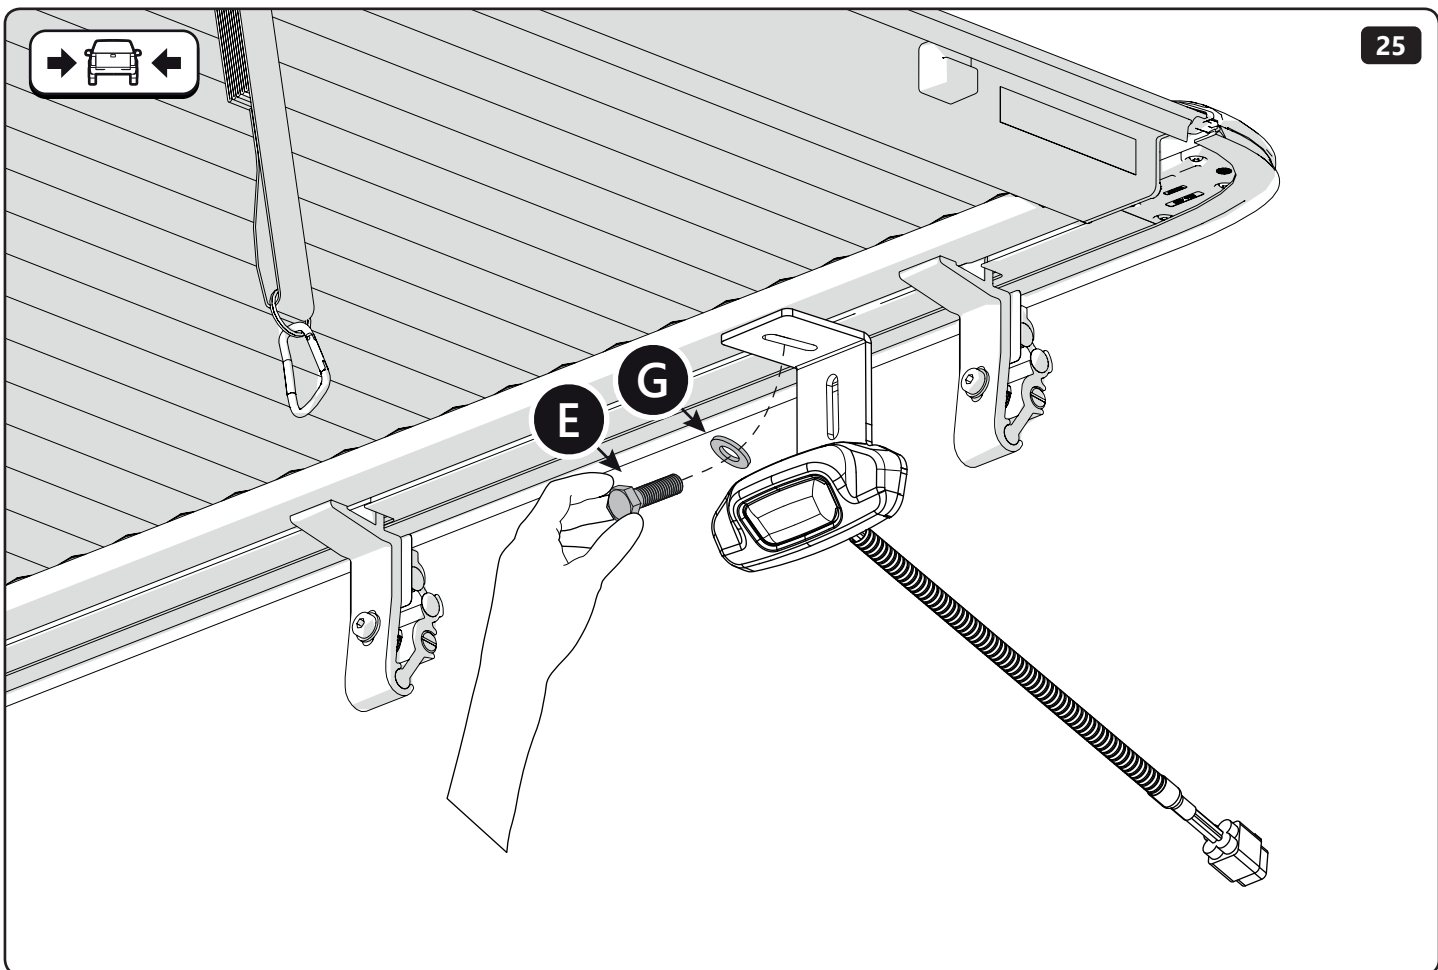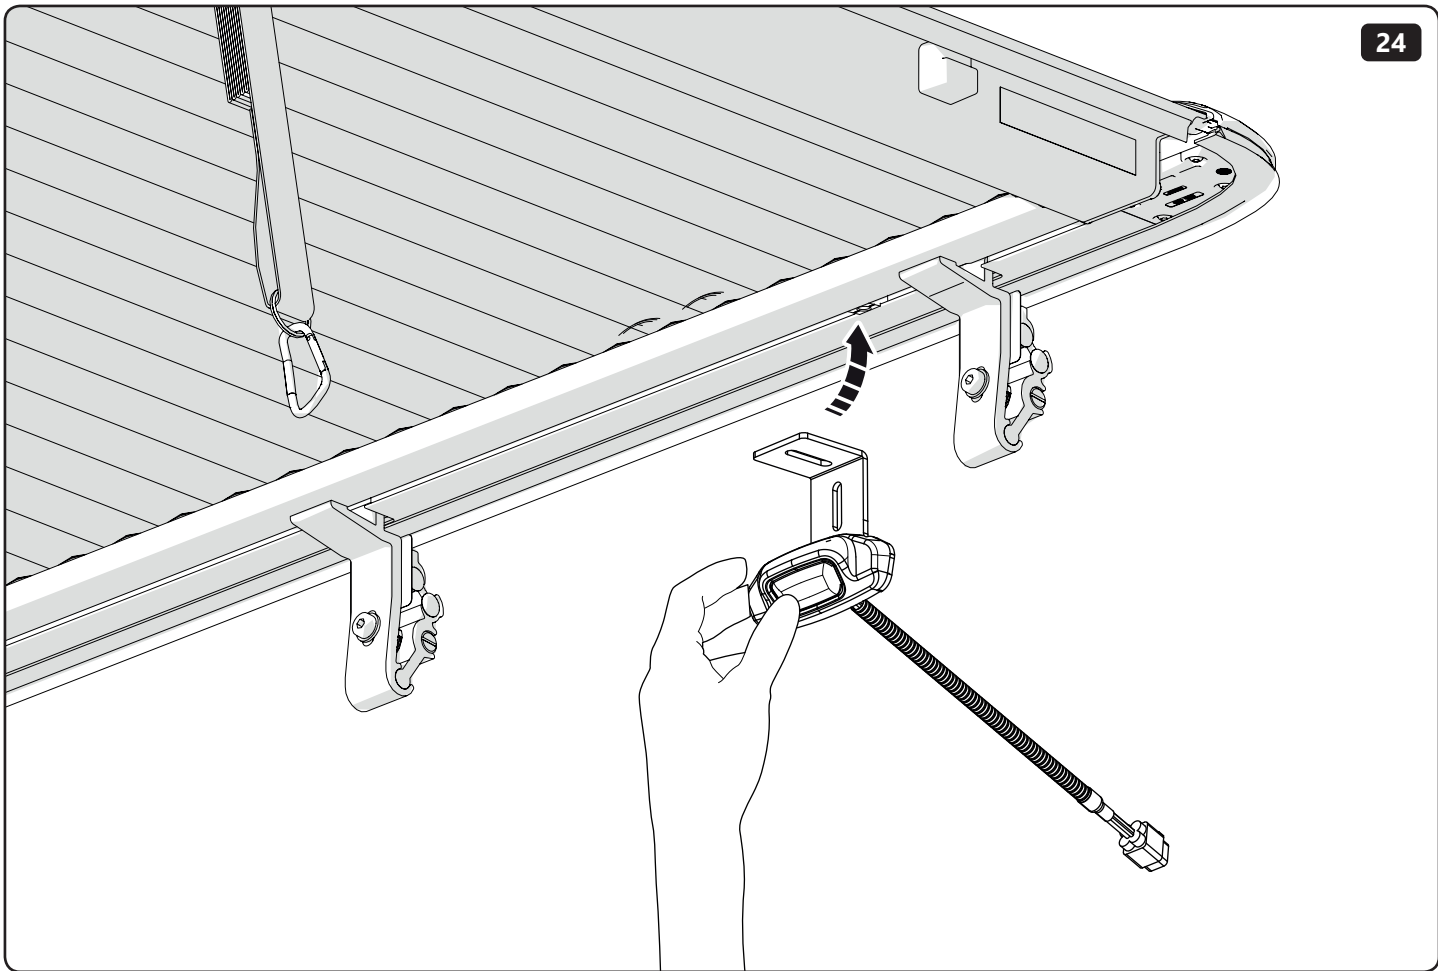


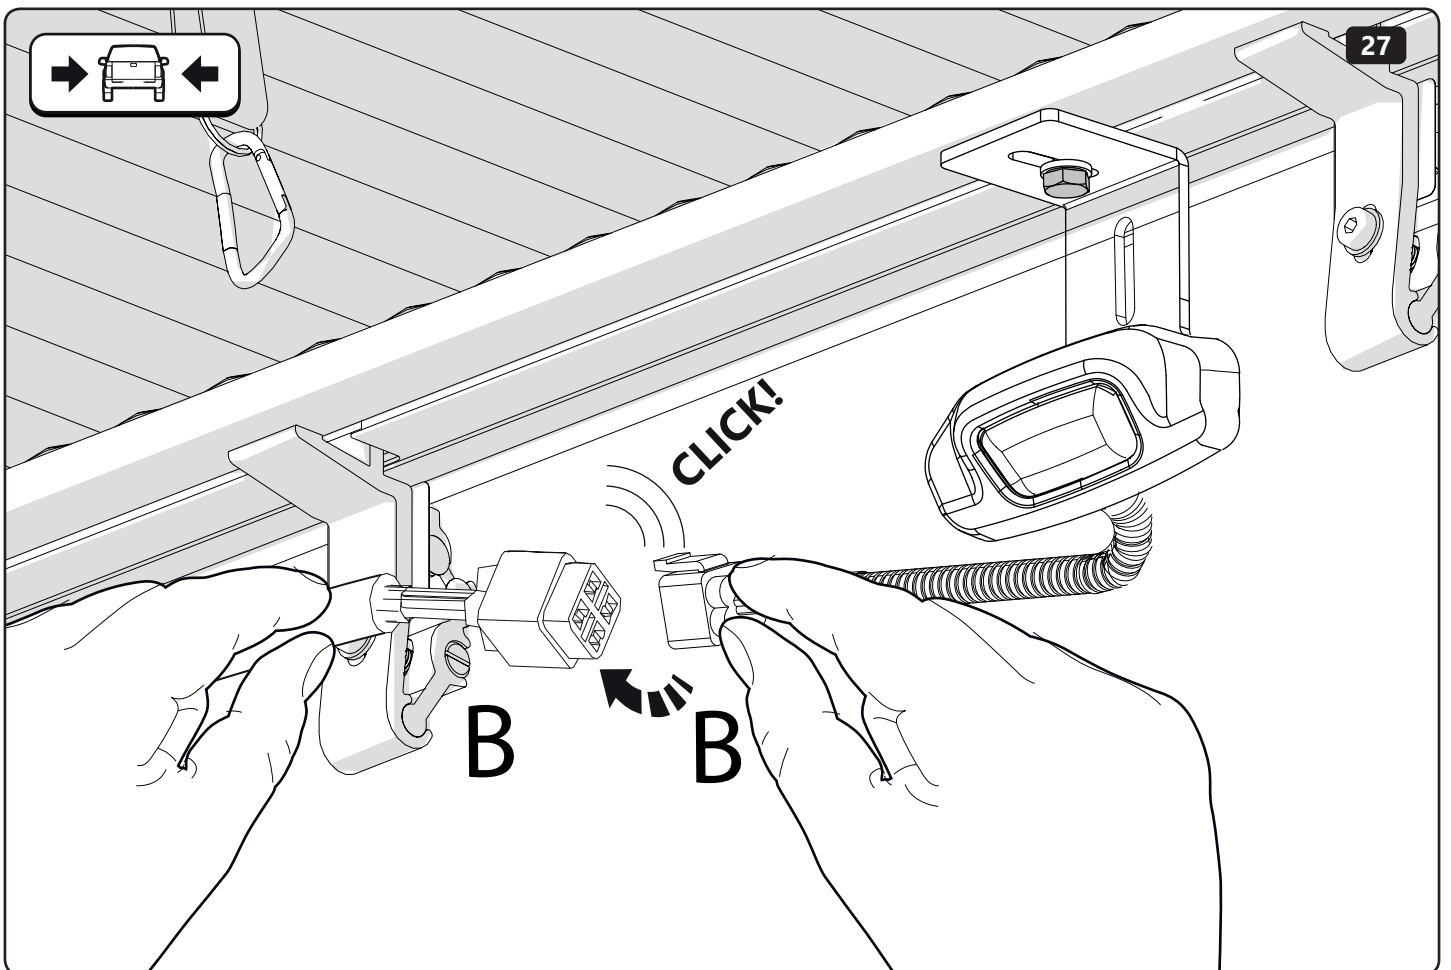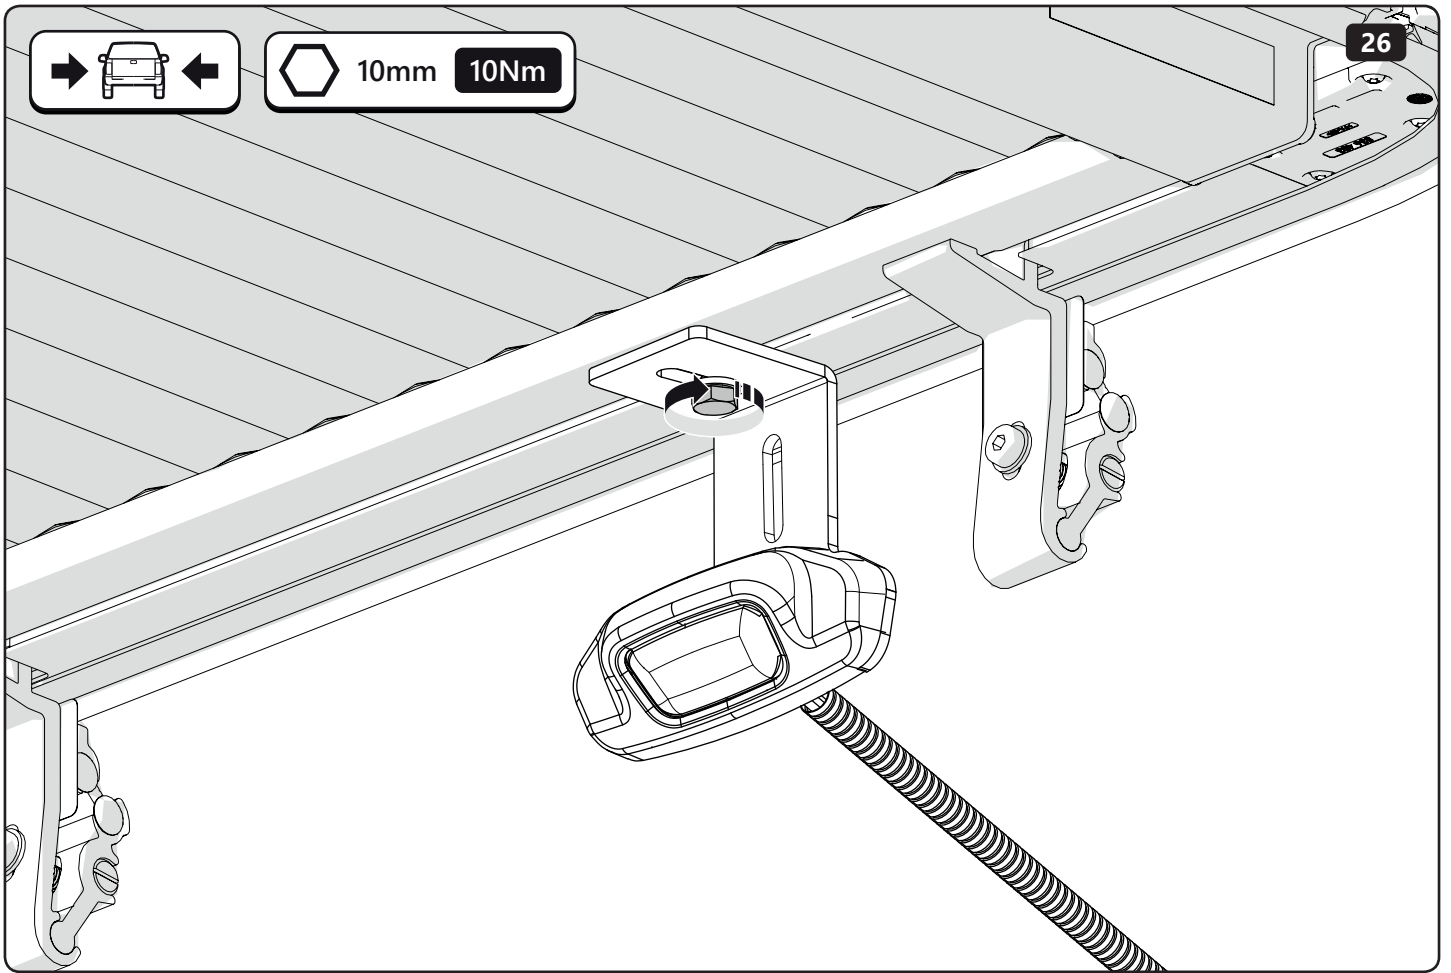

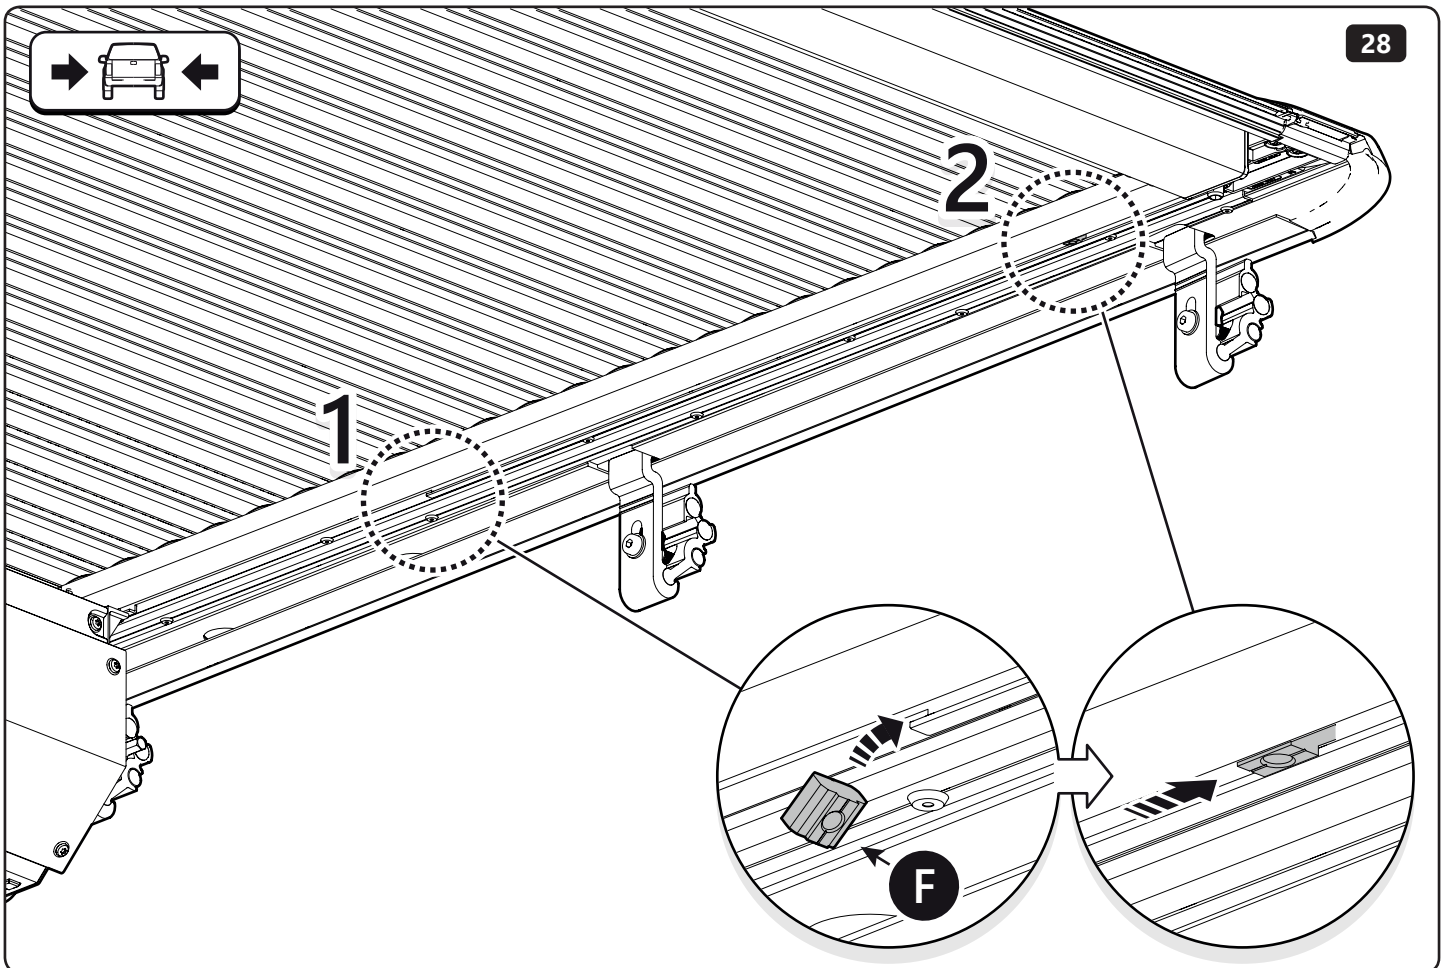
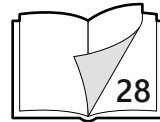
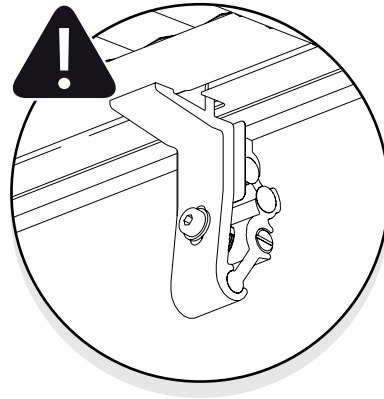
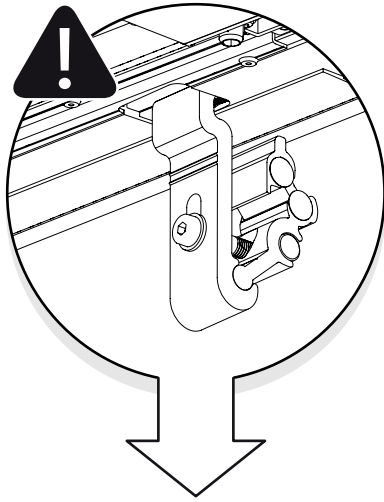







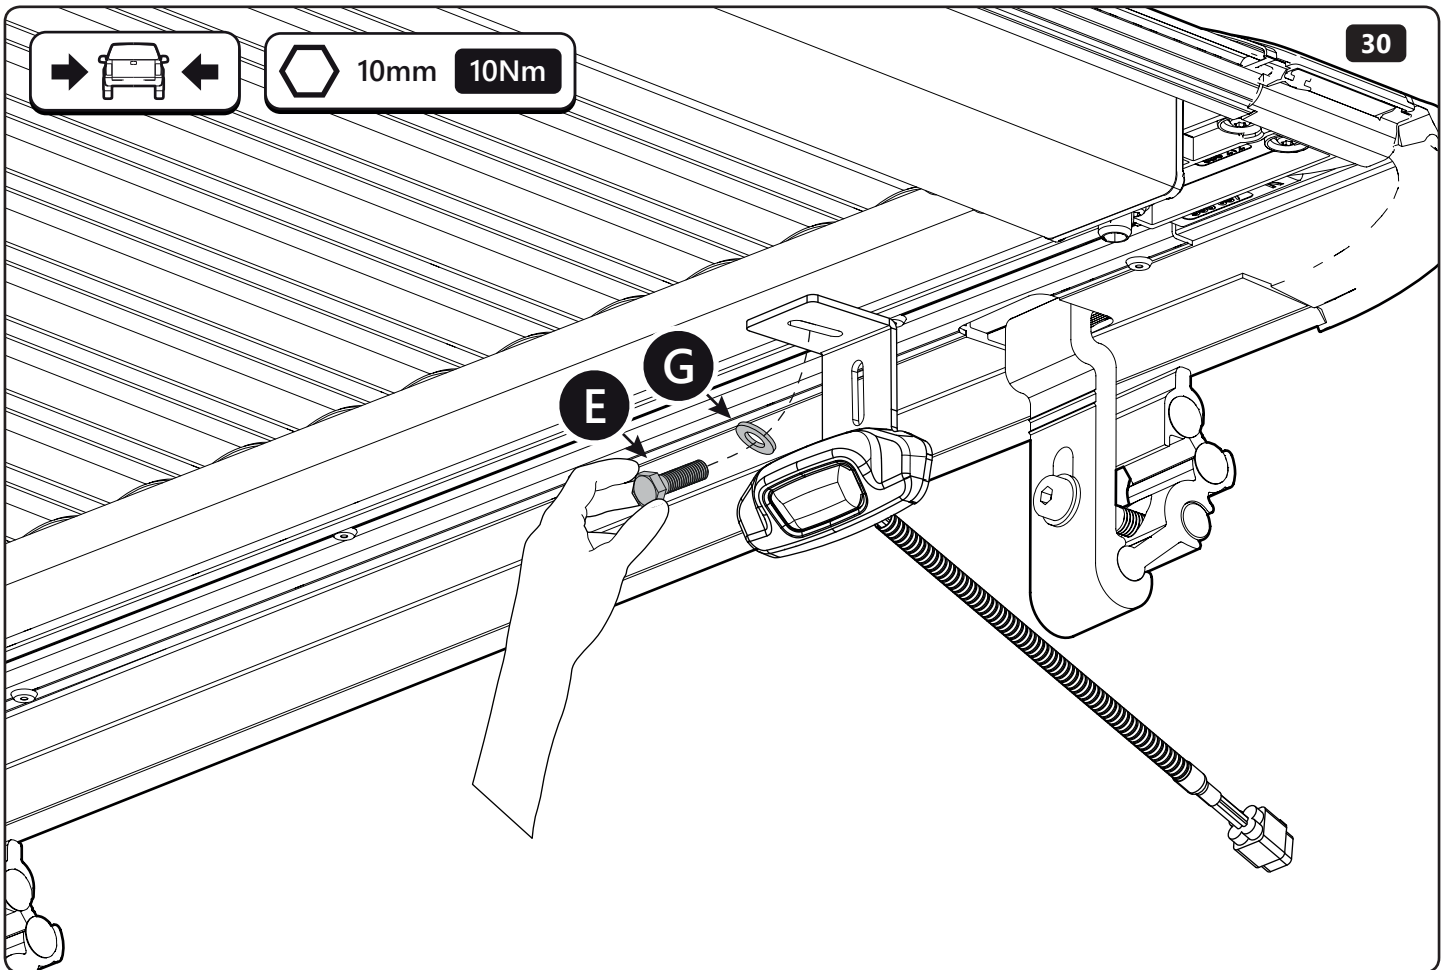
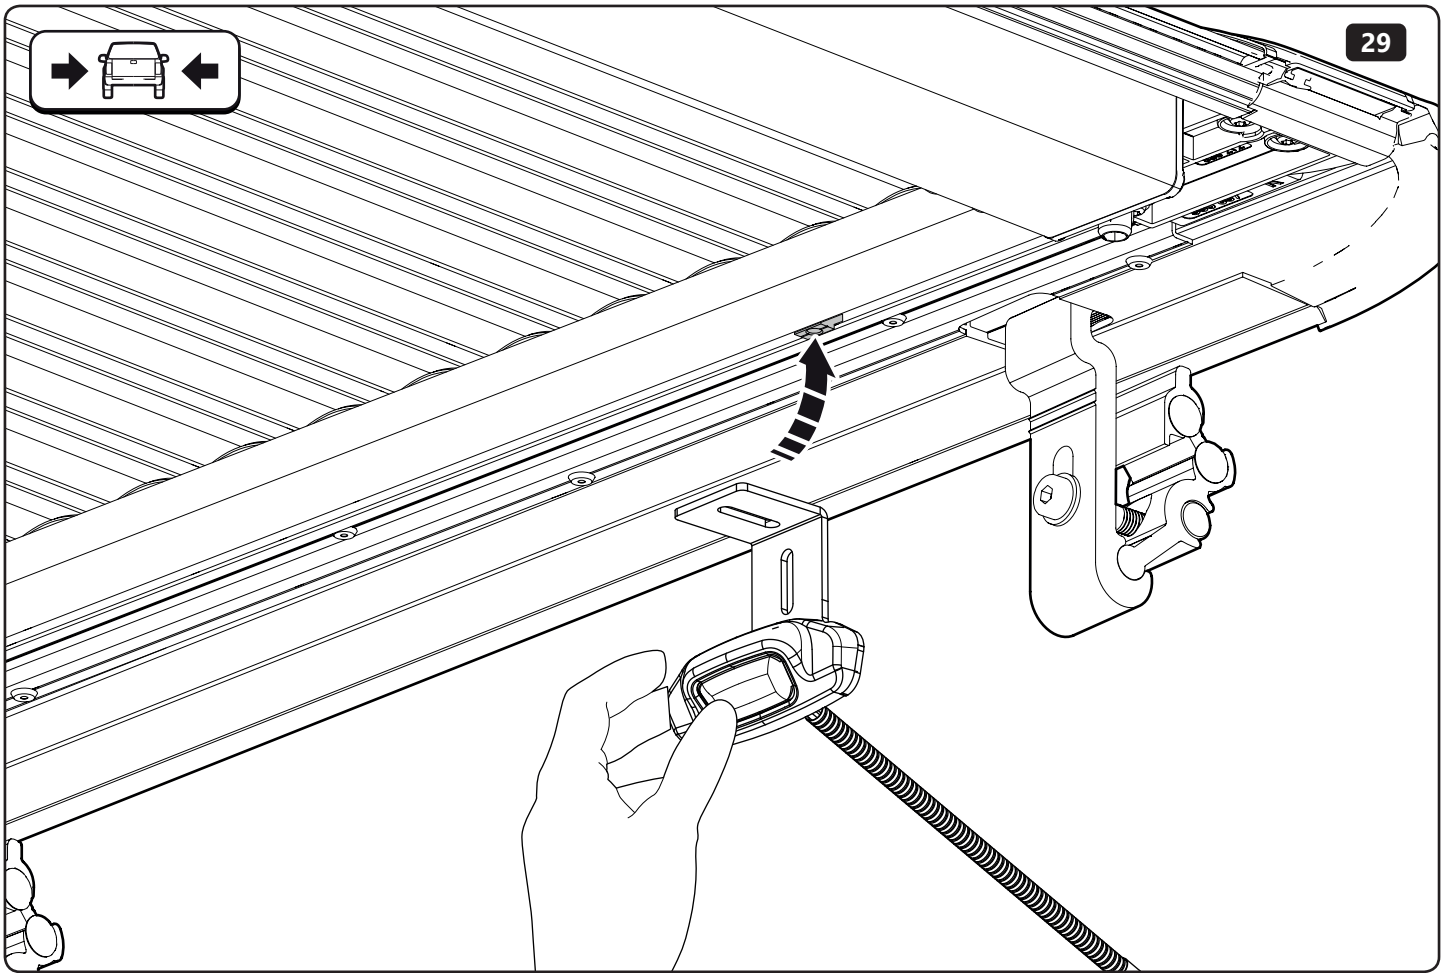




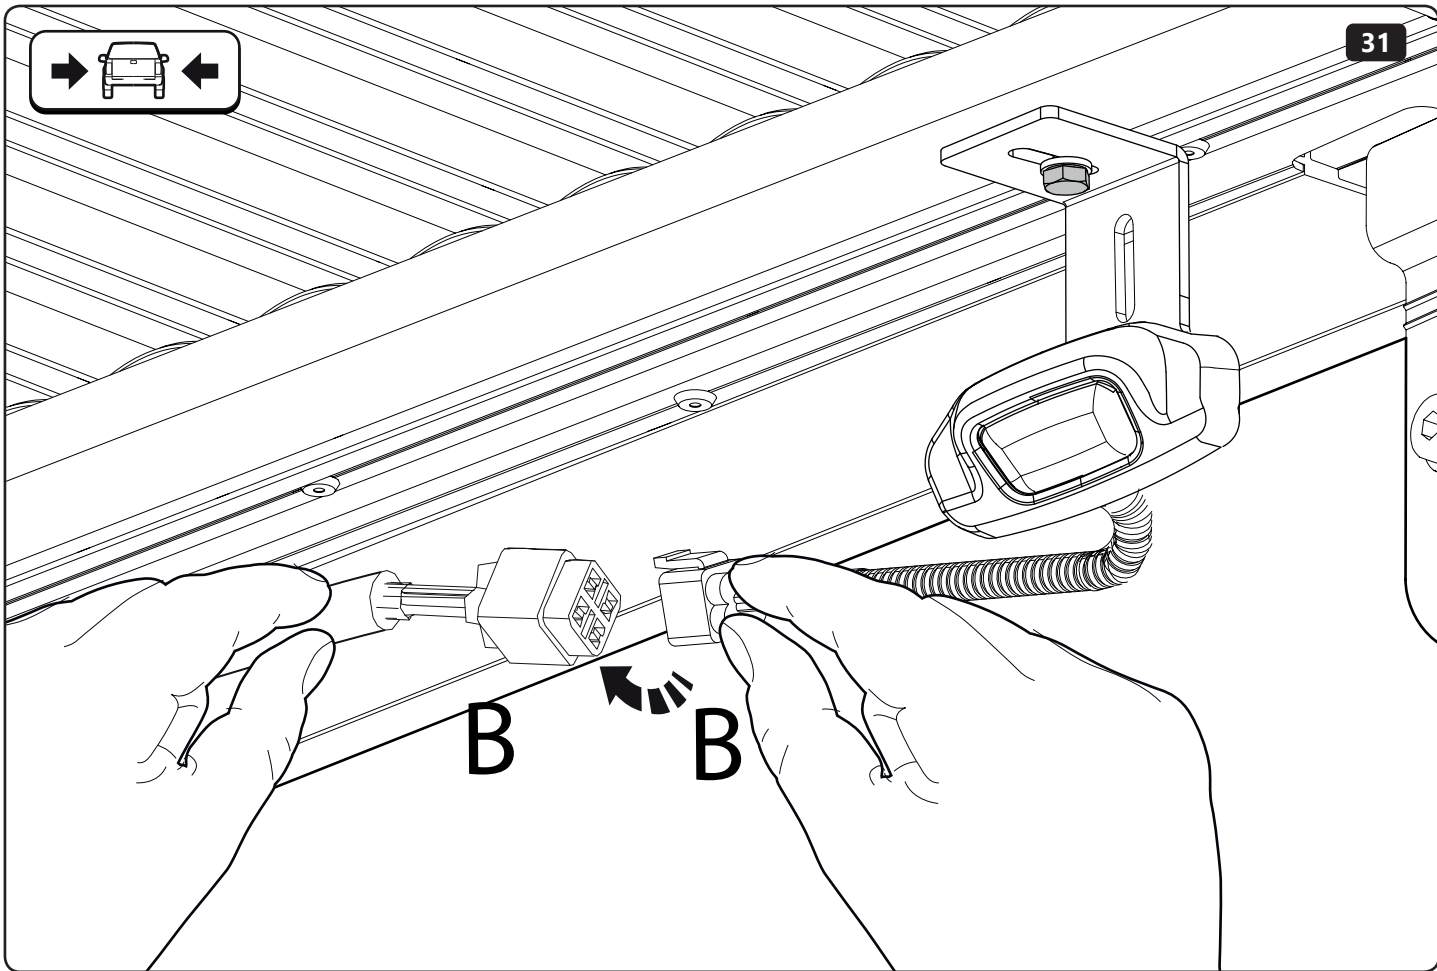




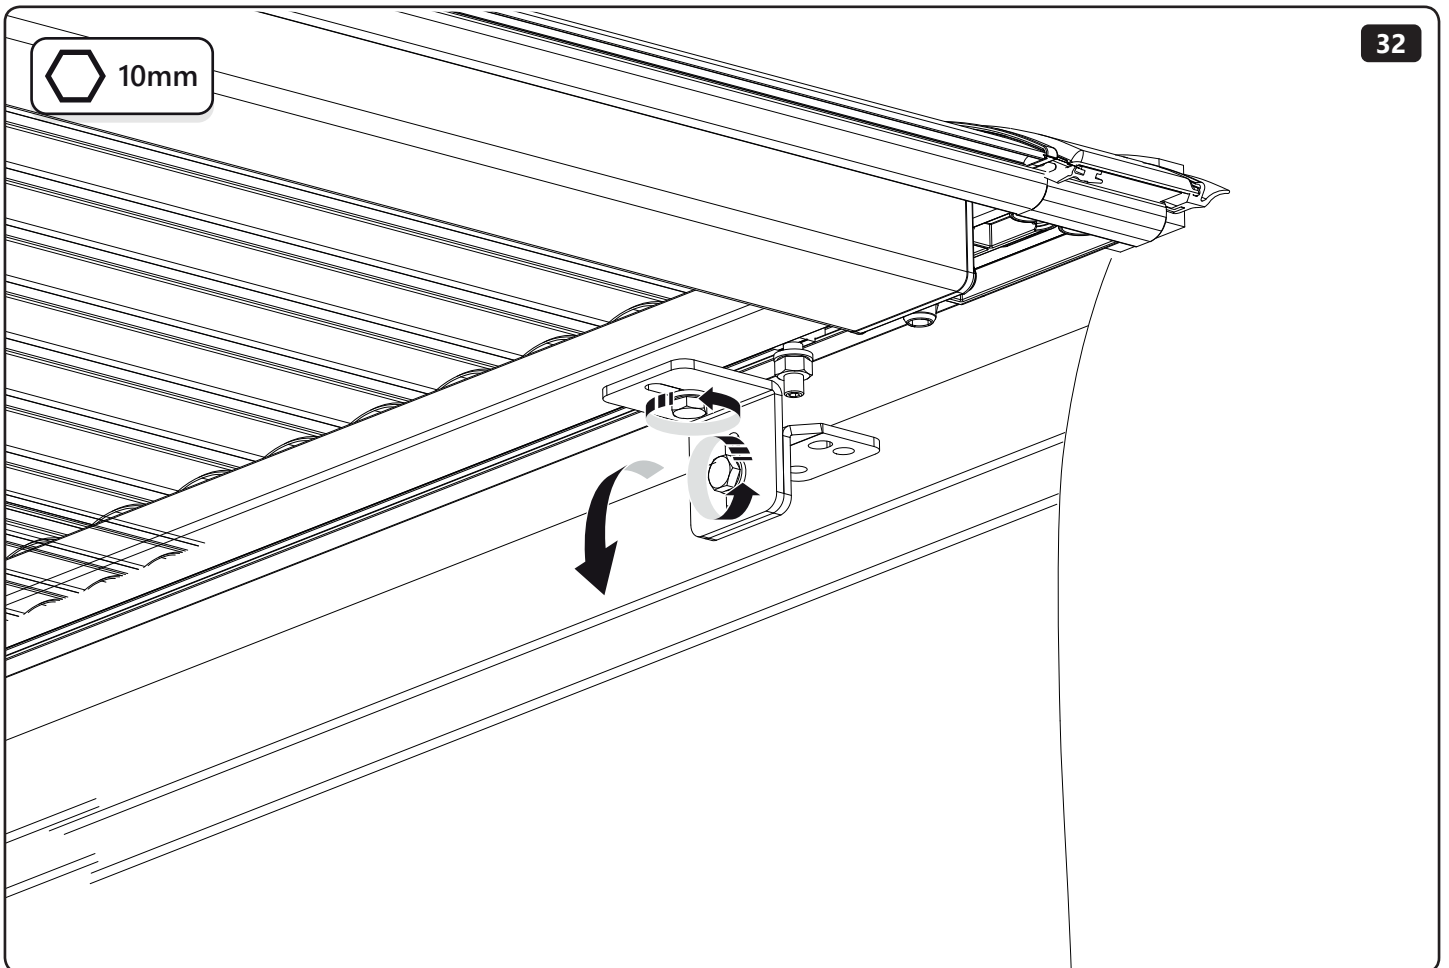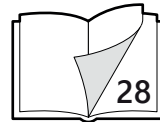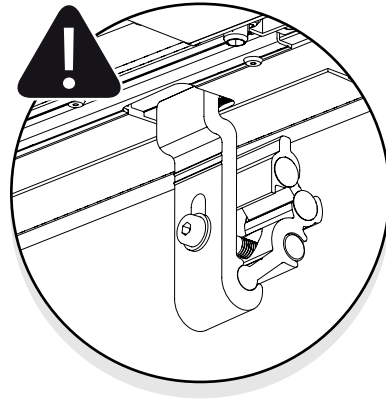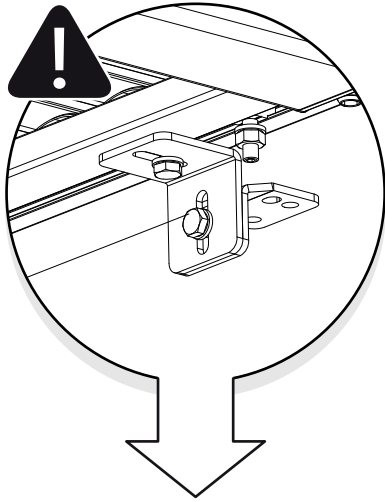

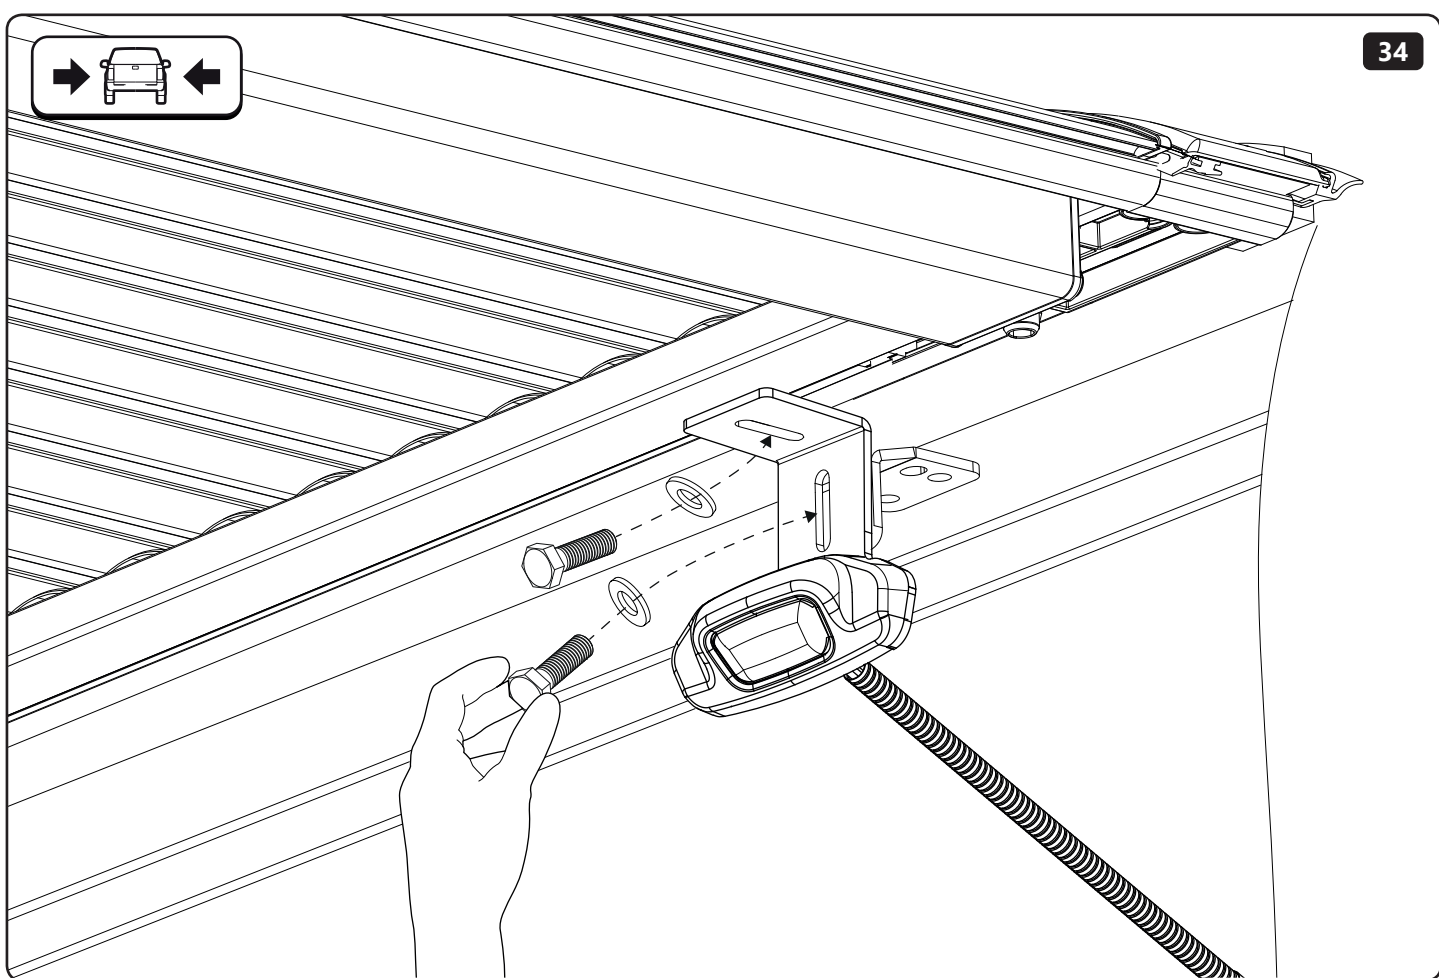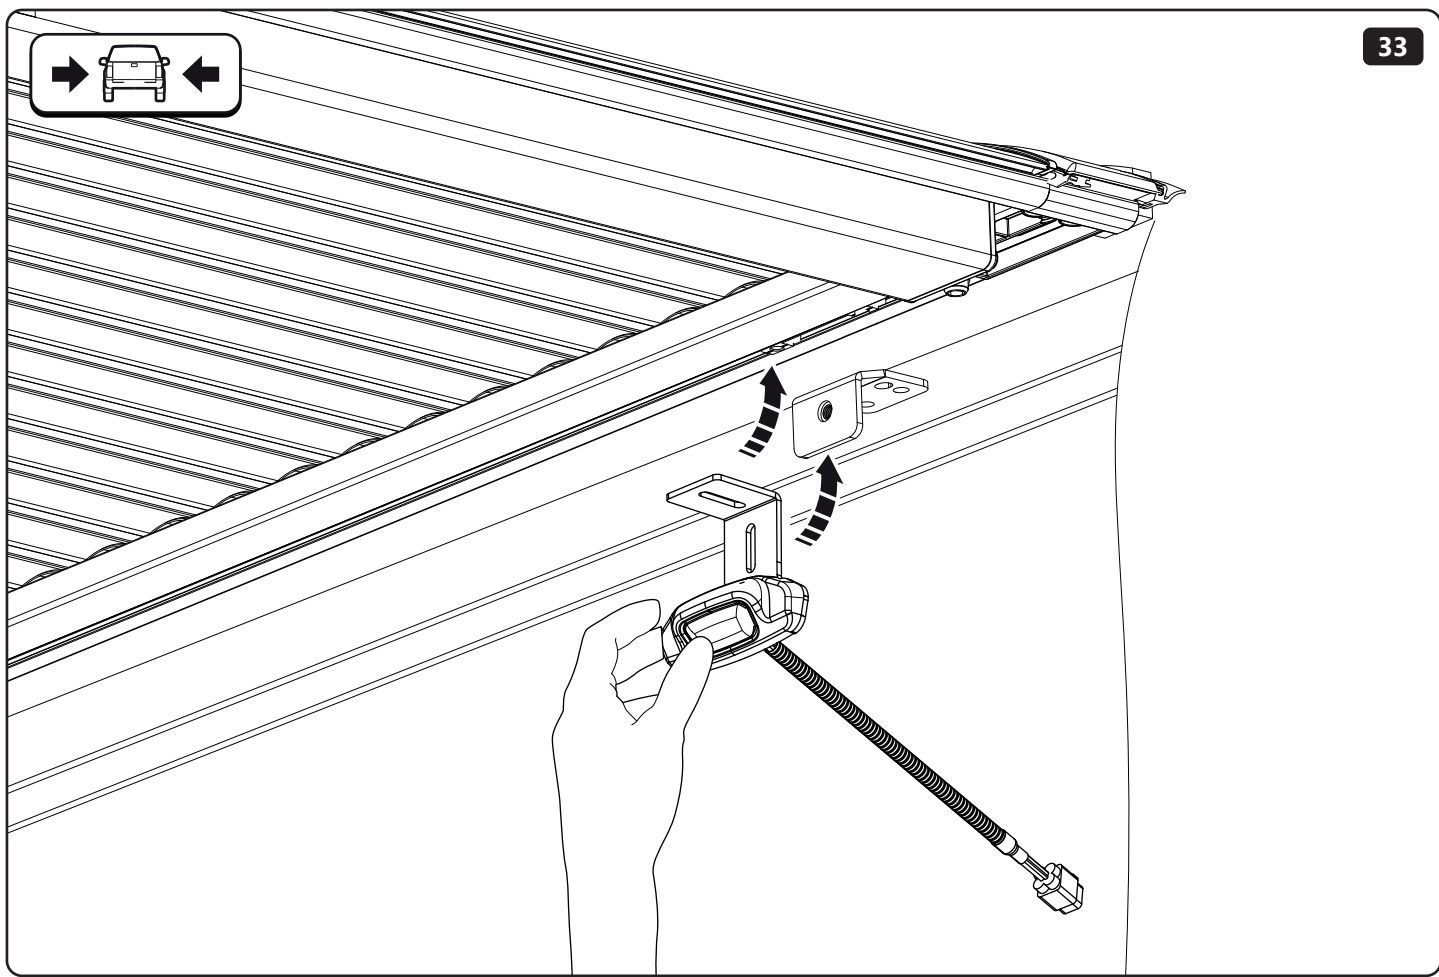

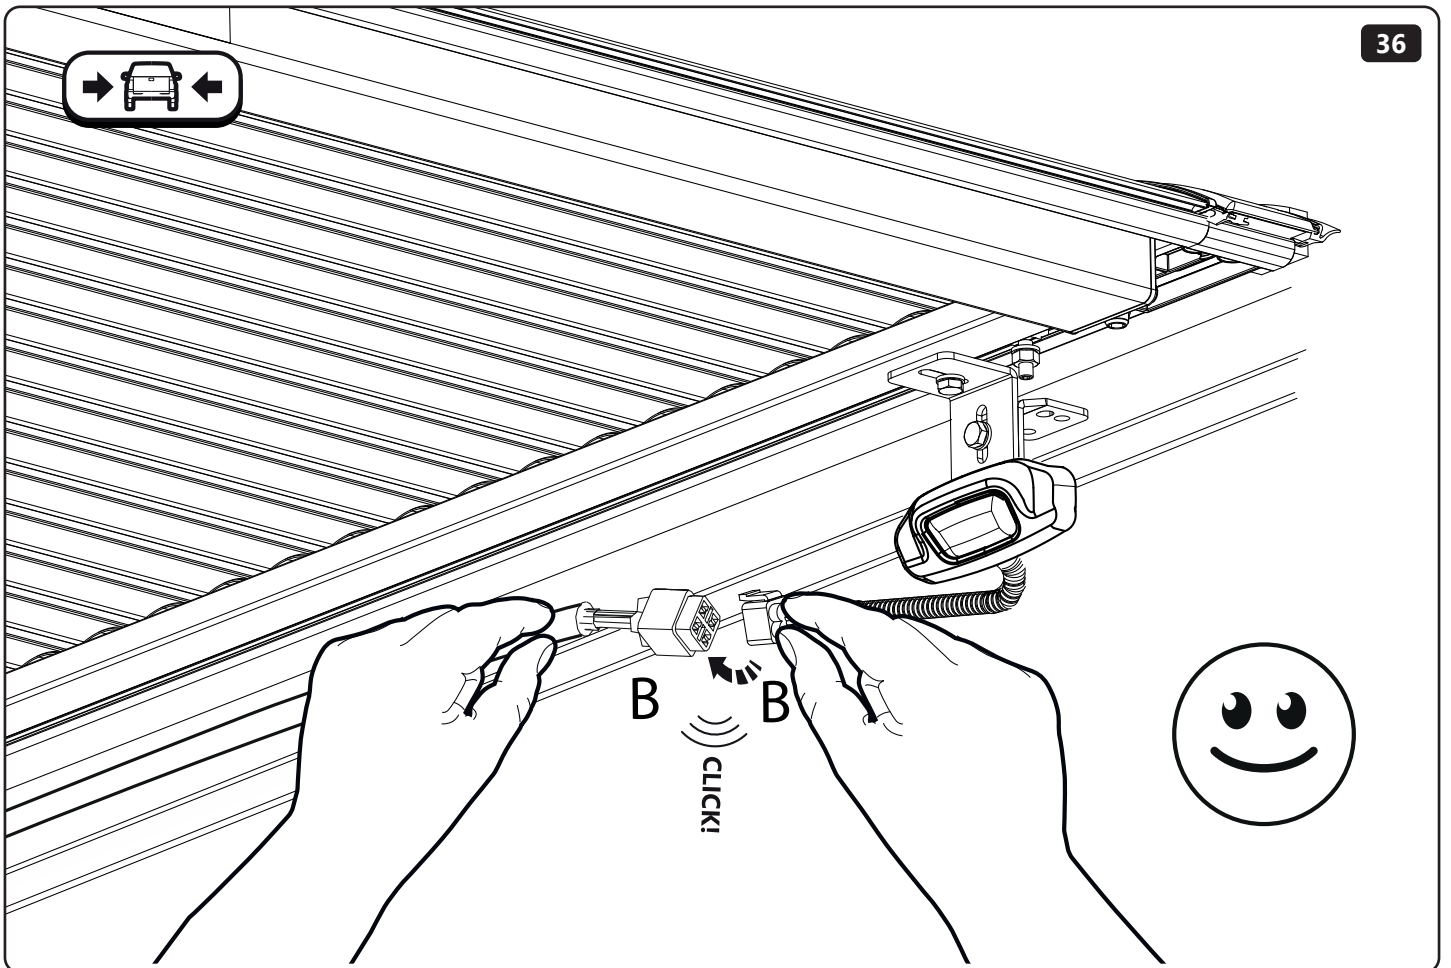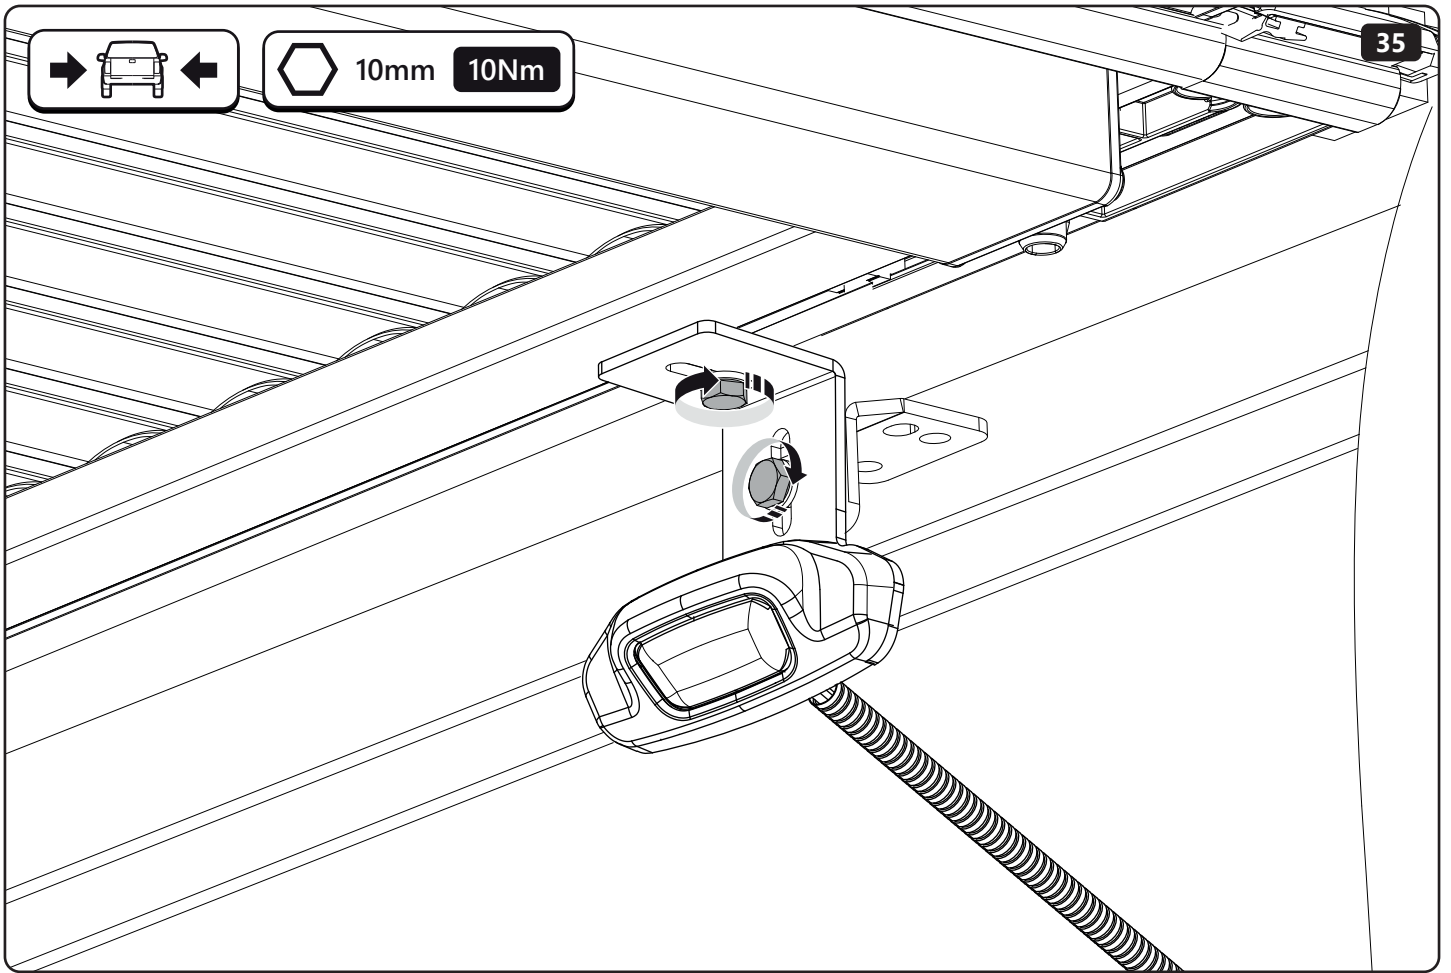

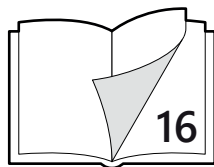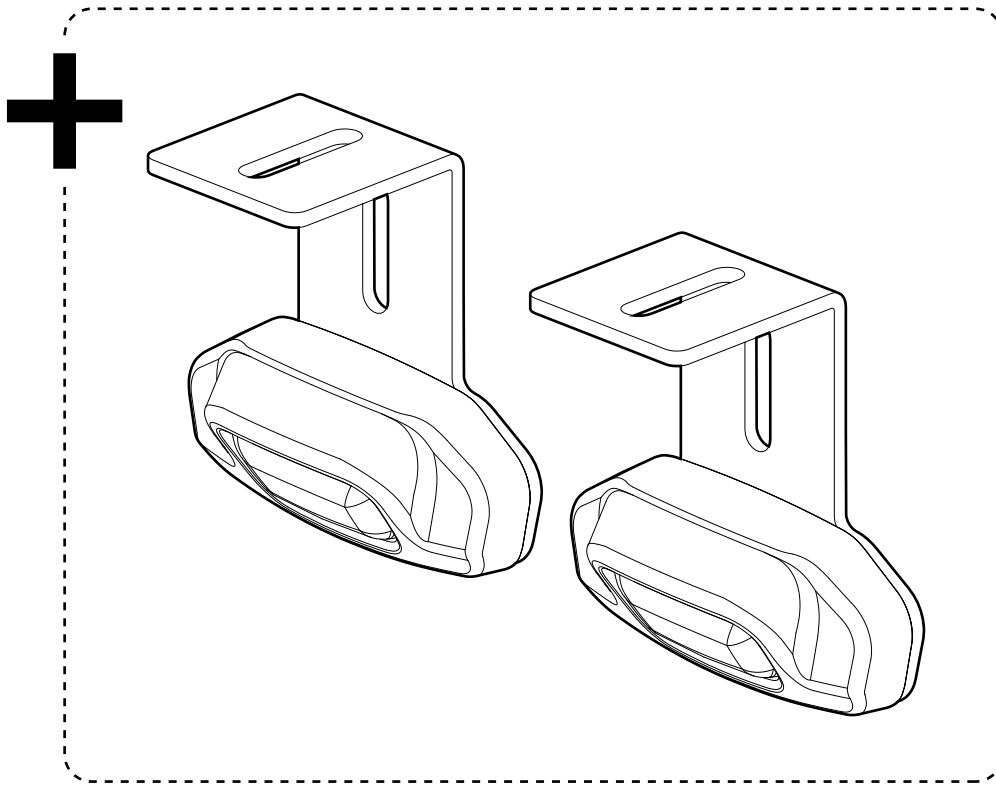









Customer Service	03 9791 9303 (08:00 - 16:00 CET)
Support	<a href="mailto:info@mountaintop.com.au">info@mountaintop.com.au</a>
Website	<a href="http://www.mountaintop.com.au">www.mountaintop.com.au</a>
Address	Dandenong South, Victoria 3175, Australia

**INSTALLATION TIME**

60 minutes

**WEIGHT**

1 Kg

**GB** Installation manual**SF** Asennusohje**F** Notice de montage**PL** Instrukcja montażu**NL** Installatie-instructies**TR** Montaj Talimatı**S** Monteringsanvisning**E** Instrucciones de montaje**H** Szerelési utasítás**P** Instruções de instalação**RUS** Инструкция по установке**N** Monteringsvejledning**D** Einbauanleitung**CZ** Návod k instalaci**I** Istruzioni de montaggio**GR** Οδηγίες Εγκατάστασης**DK** Monteringsvejledning**RO** Instructiuni de instalare